

Wrought Iron Spring Rocker Dining Chair
Item #W22170
Assembly Instructions

****TO AVOID POTENTIAL SCRATCHING TO PARTS BY ROUGH GROUND SURFACE, COVER GROUND WITH SOFT SMOOTH PROTECTIVE MATERIAL ON WHICH TO PLACE PARTS DURING ASSEMBLY. ****

Step 1: Remove protective wrapping and lay all parts on floor. Identify all parts packed in carton against the parts list.

Step 2: The threaded ends of the Base's (B) two coiled springs need to be inserted through the double loop openings on the bottom sides of the Seat Bucket (A) as shown in Diagram 1. To make this easier to do, lay Seat Bucket (A) upside down on surface first. Then take Base (B) and maneuver it to insert the threaded ends of the coiled spring through the loops on seat.

Step 3: Secure attachment with Hex Nut (C) , Spring Washer (D), and Washer (E) to end of threaded spring as shown in Diagram 2. Use Hex Wrench (G) to tighten the nuts.

Step 4: Make sure all bolts are aligned properly and securely tightened. Then place Nut Covers(F) over Hex Nuts.

NOTE: IT IS USER'S RESPONSIBILITY TO MAKE SURE ALL PARTS ARE ASSEMBLED AND TIGHTENED PROPERLY AND SECURELY.

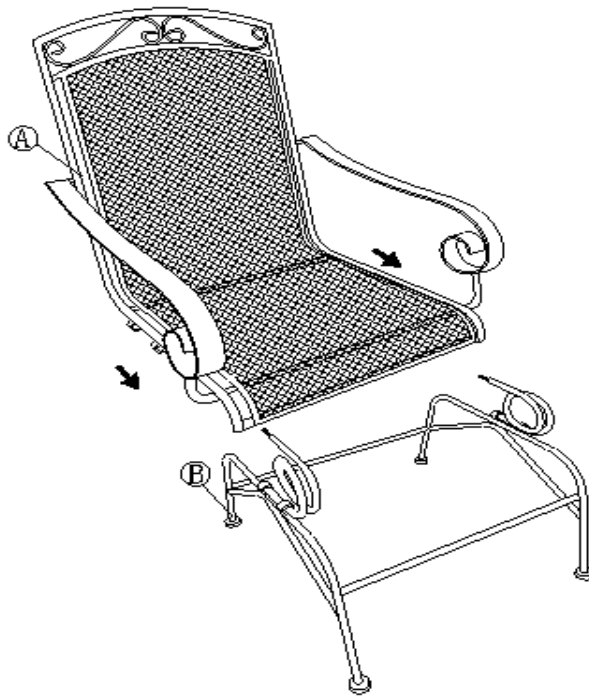


Diagram 1

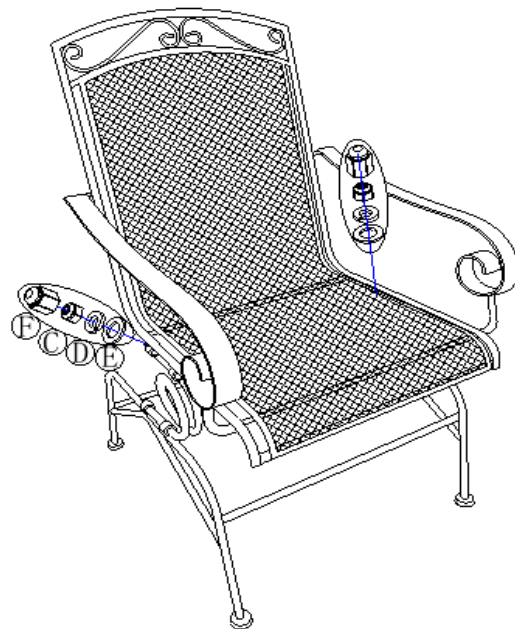

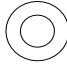
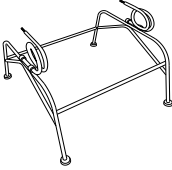
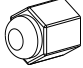





Diagram 2

PARTS LIST
(Total Qty for 2 Chairs)

Ref	Part Name	Part Image	Qty	Ref	Part Name	Part Image	Qty
A	Seat Bucket		2	E	Washer		4
B	Chair Base		2	F	Nut Cover		4
C	Nut		4	G	Hex wrench		1
D	Spring Washer		4				

WOODARD
Customer Service Hours
8:00am-5:00pm CST Monday to Friday
Phone: (800) 877-2290 Fax: (800) 733-4257
E-mail: retail3@woodard-furniture.com