



ASSEMBLY INSTRUCTION

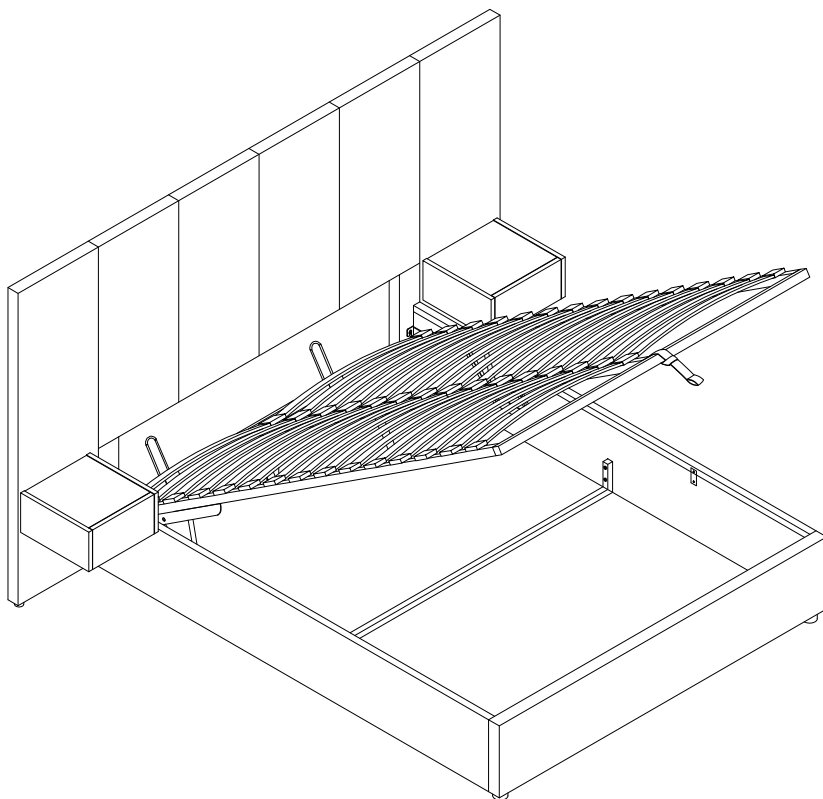


IMPORTANT NOTE

1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

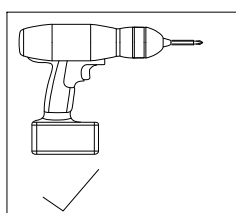


PART LIST

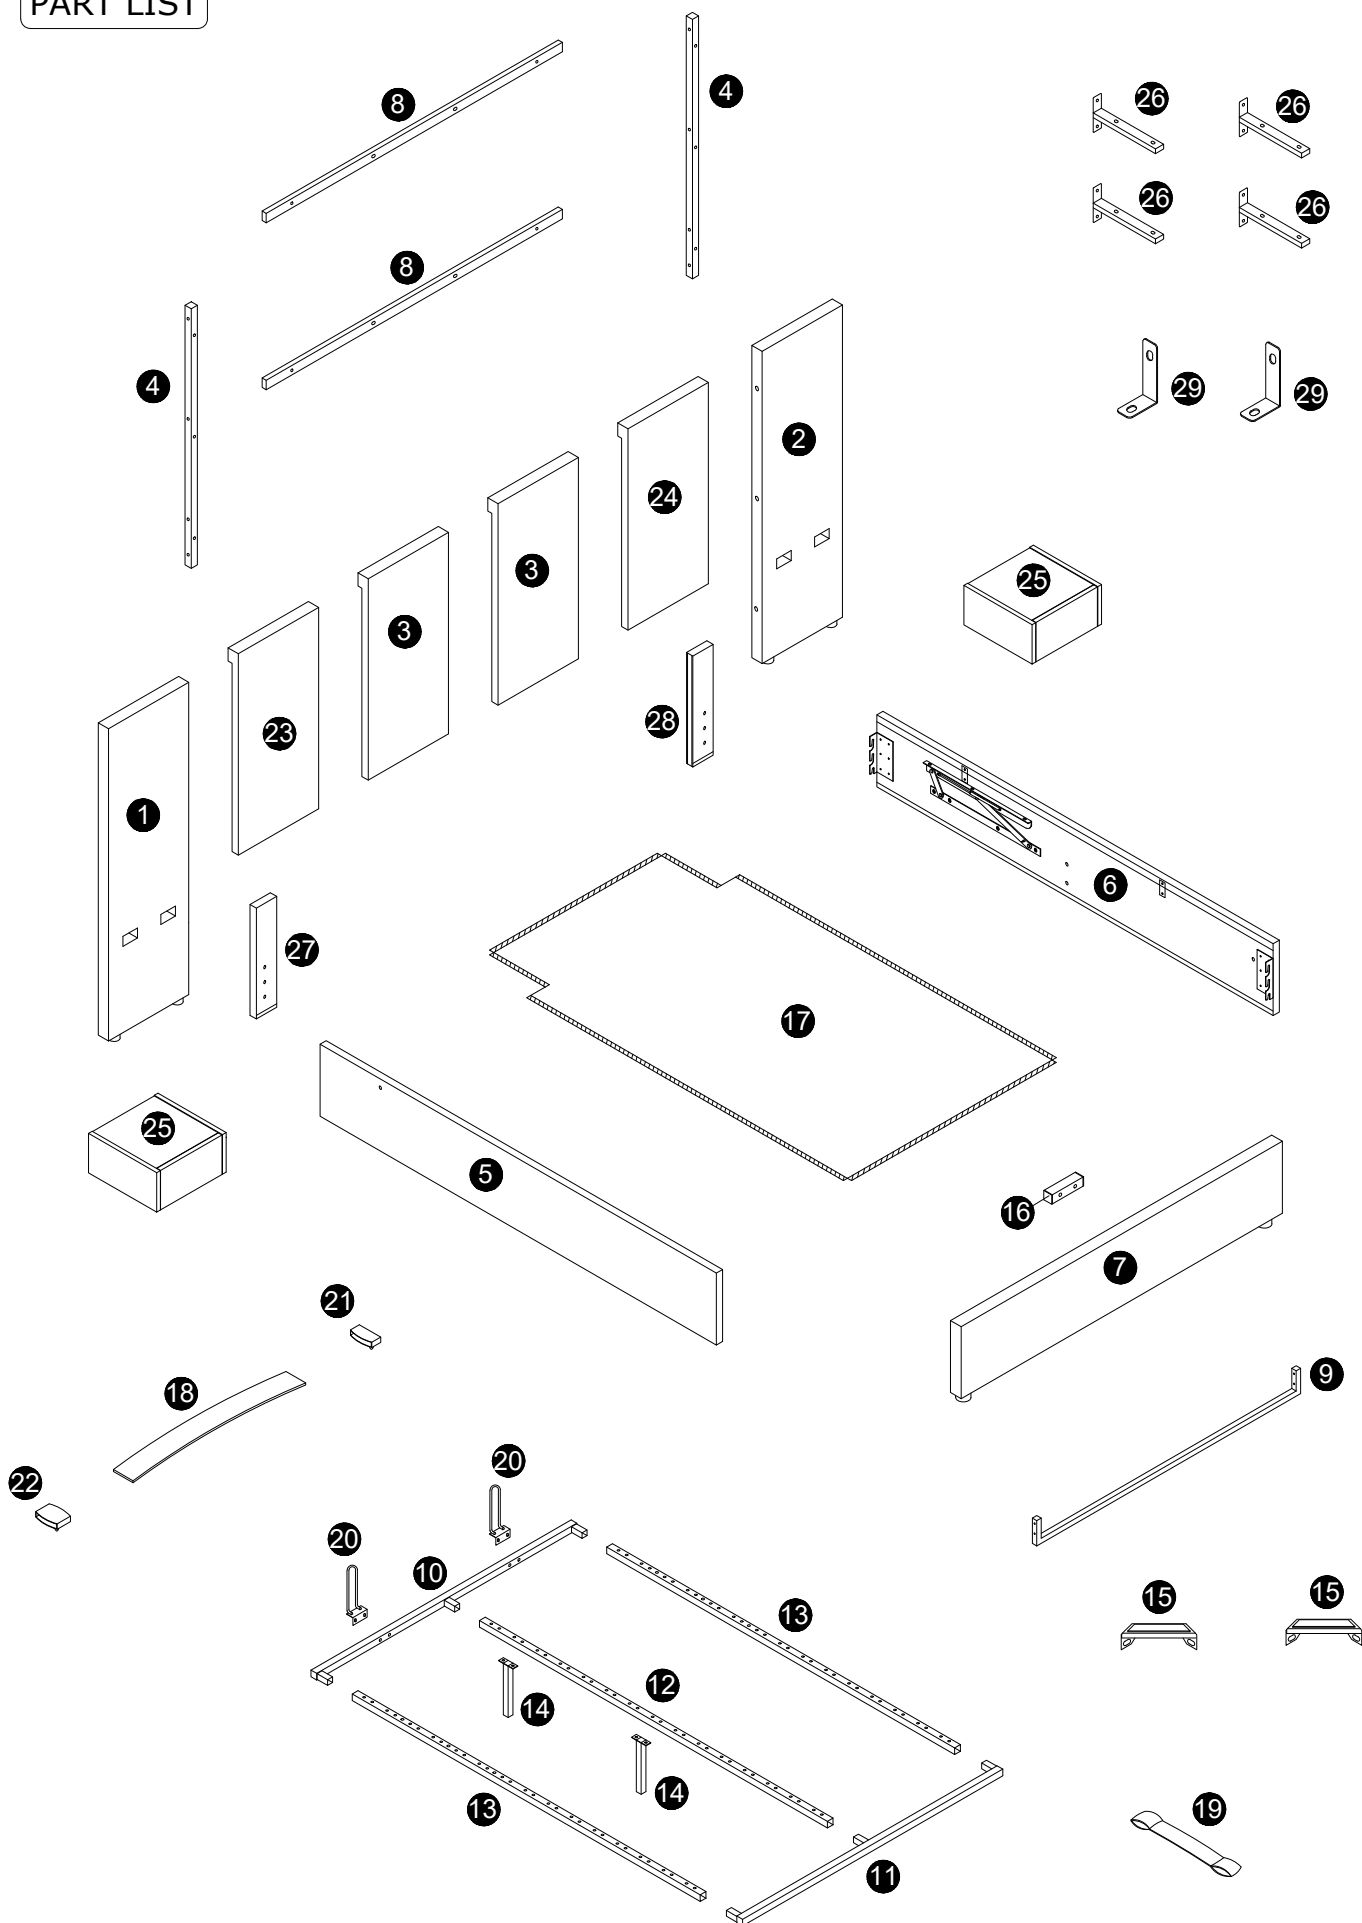


PART LIST


1 x 1pc



2 x 1pc




3 x 2pcs




4 x 2pcs




5 x 1pc

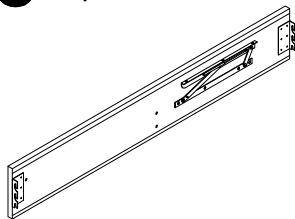


6 x 1pc

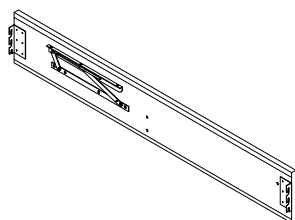


7 x 1pc

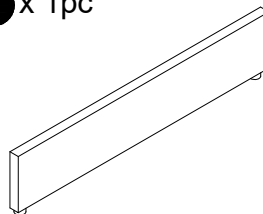


8 x 2pcs

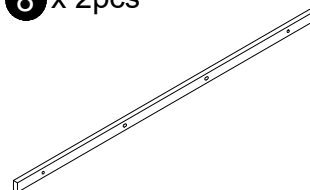


9 x 1pc

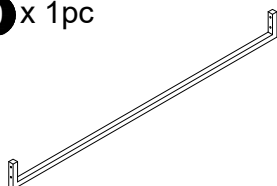


10 x 1pc

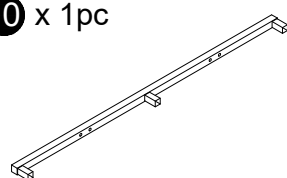


11 x 1pc

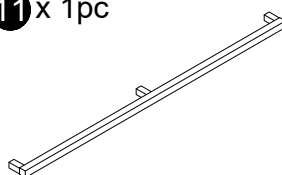


12 x 1pc

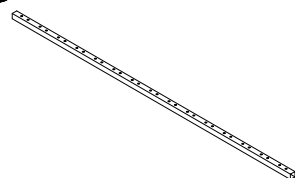

13 x 2pcs

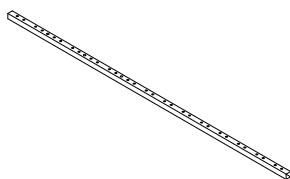


14 x 2pcs




15 x 2pcs




16 x 1pc




17 x 1pc

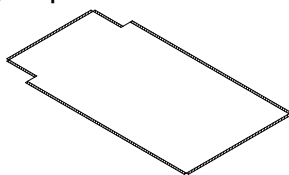


18 x 30pcs



19 x 1pc



20 x 2pcs



21 x 30pcs




22 x 15pcs




23 x 1pc




24 x 1pc




25 x 2pcs

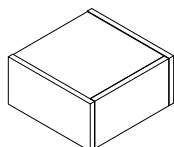

26 x 4pcs




27 x 1pc














28 x 1pc



29 x 2pcs




HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x25mm x 44pcs	 H3 M8x35mm x 8pcs	 H4 M8x45mm x 18pcs
 H5 M8 x 24pcs	 H6 M8x17mm x 78pcs	 H7 M8 x 6pcs	 H8 M14 x 1pc
 H9 M8x50mm x 16pcs	 H10 M8x22mm x 8pcs	 H11 M8x25mm x 2pcs (Black)	


1

Loosely screw parts 23, 24, and 8 together to facilitate inserting part 3 between 23 and 24. Tightening the screws too much will make it difficult to insert part 3.

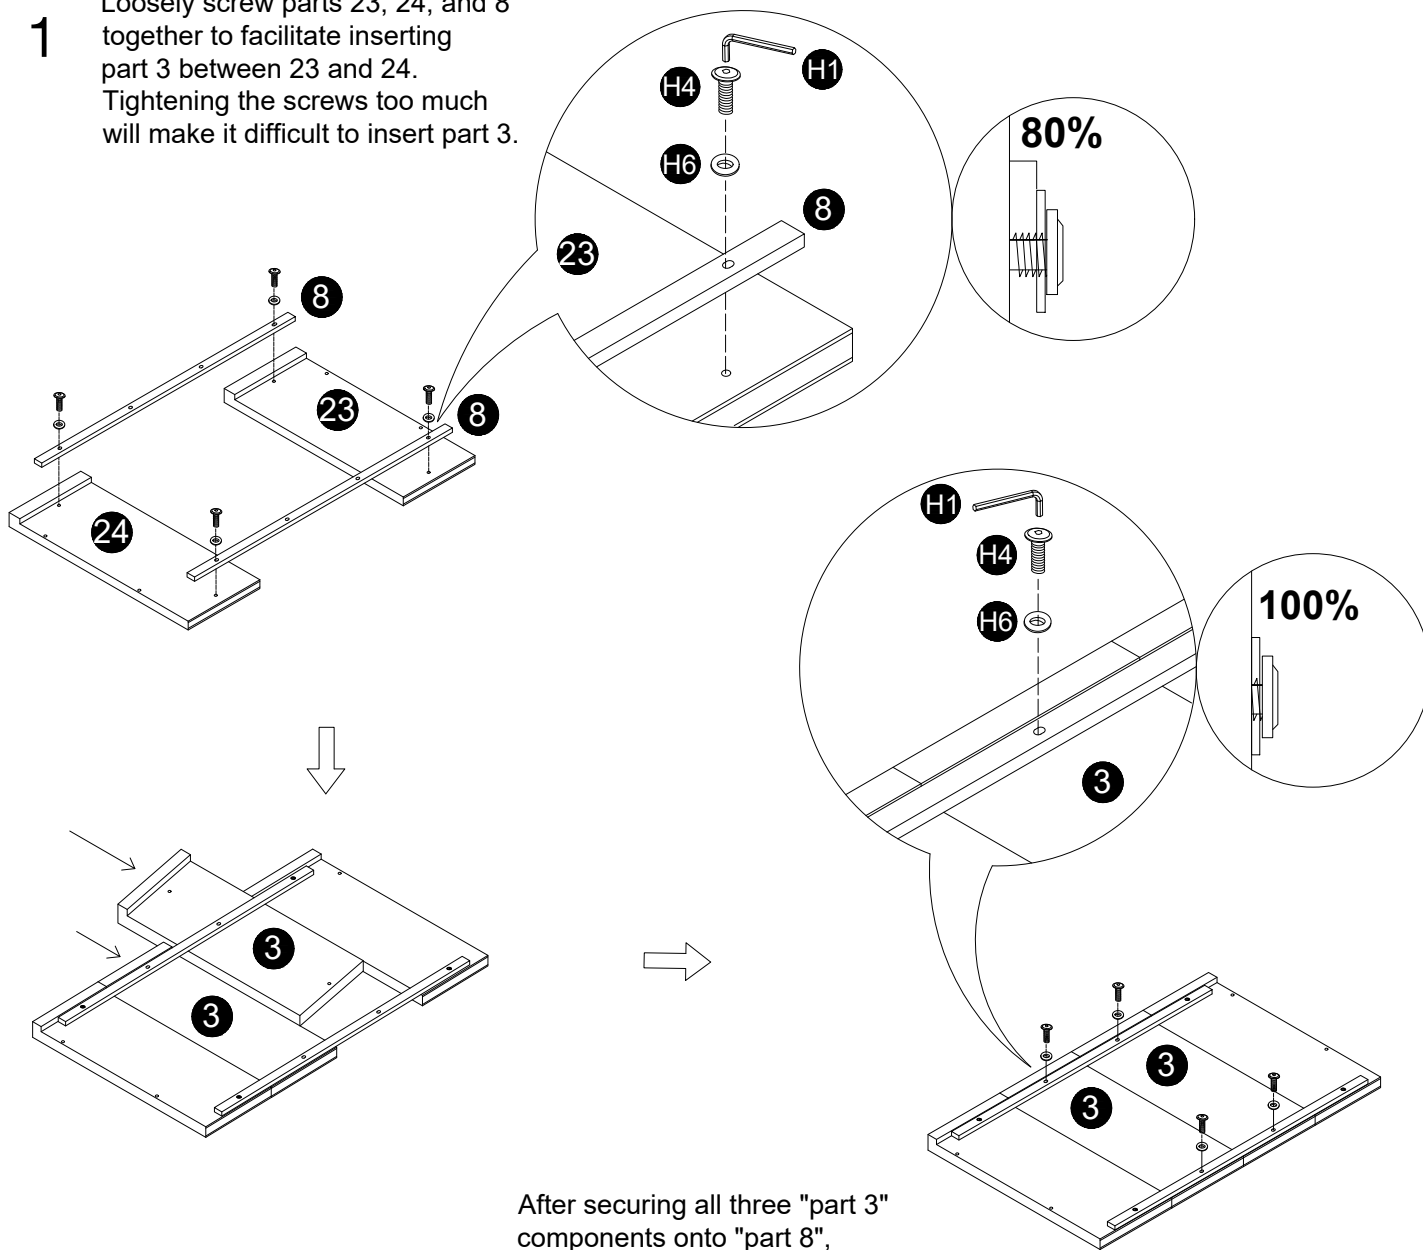


After securing all three "part 3" components onto "part 8", proceed to tighten parts 23 and 24.


2

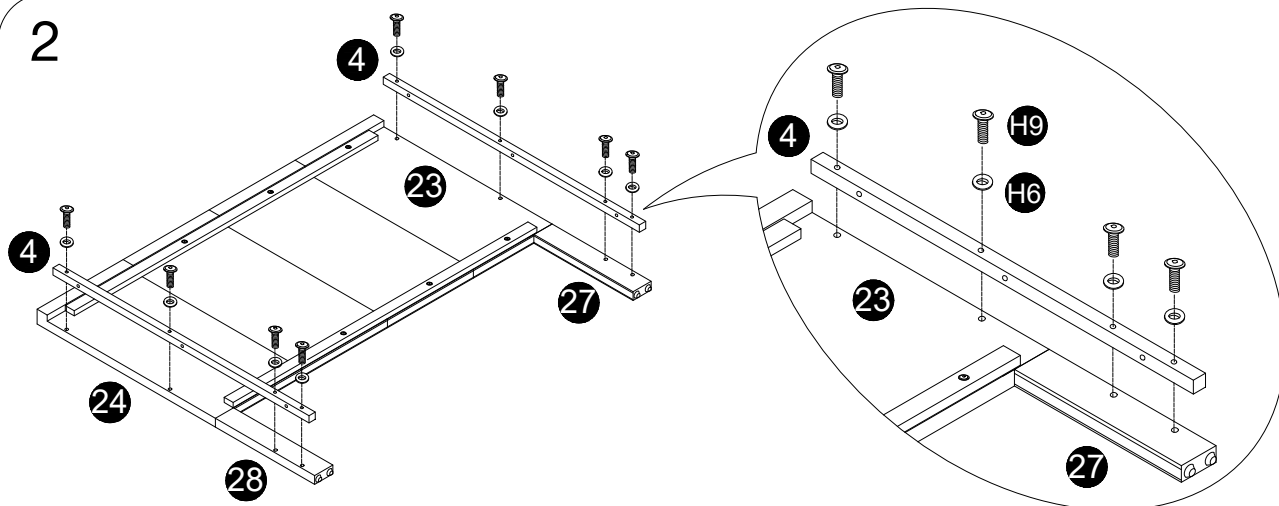


3

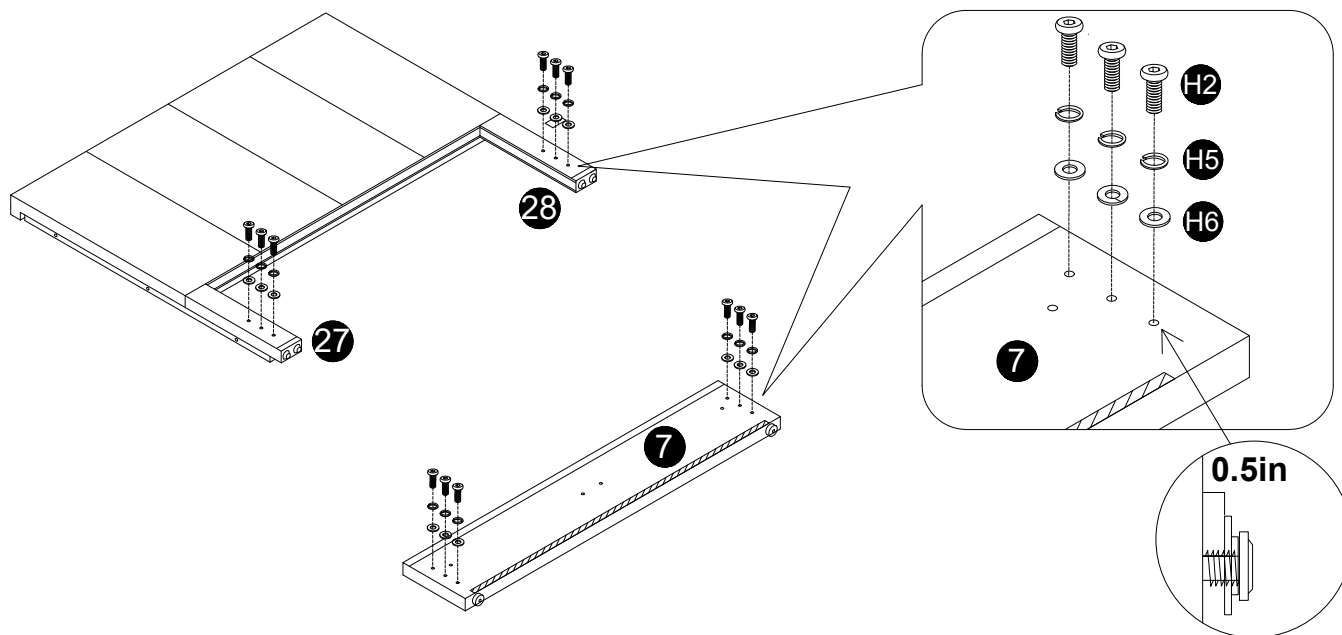

4

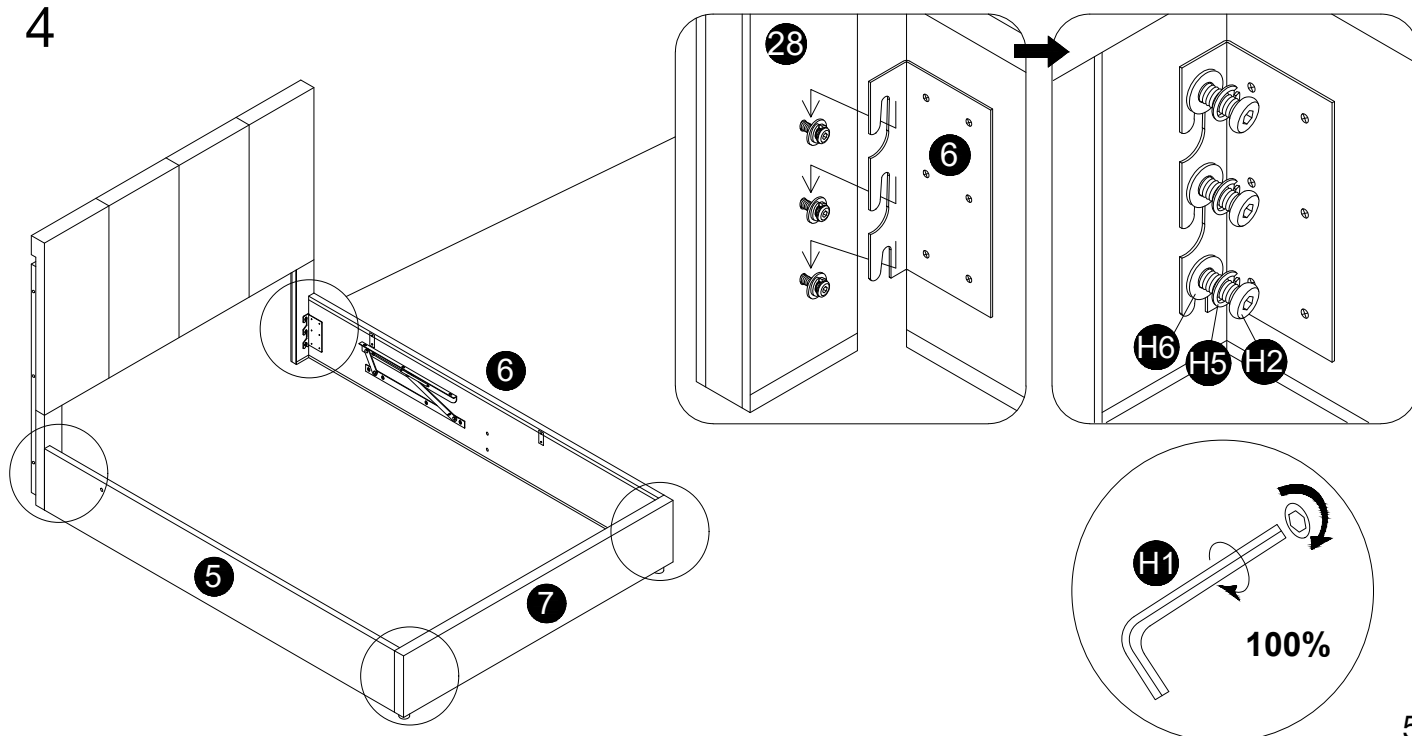


5

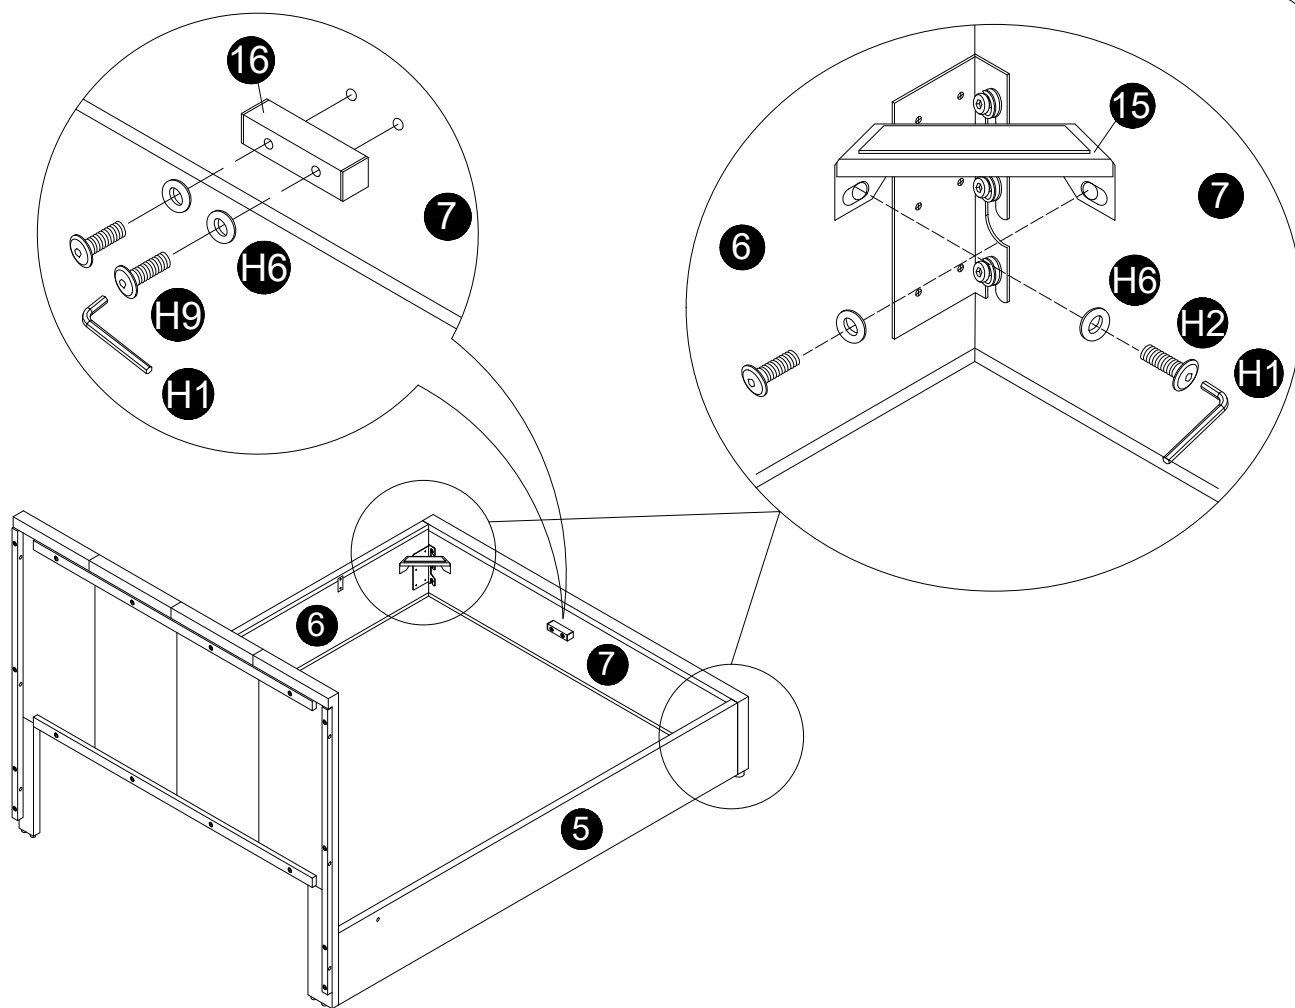


6


Open the zipper

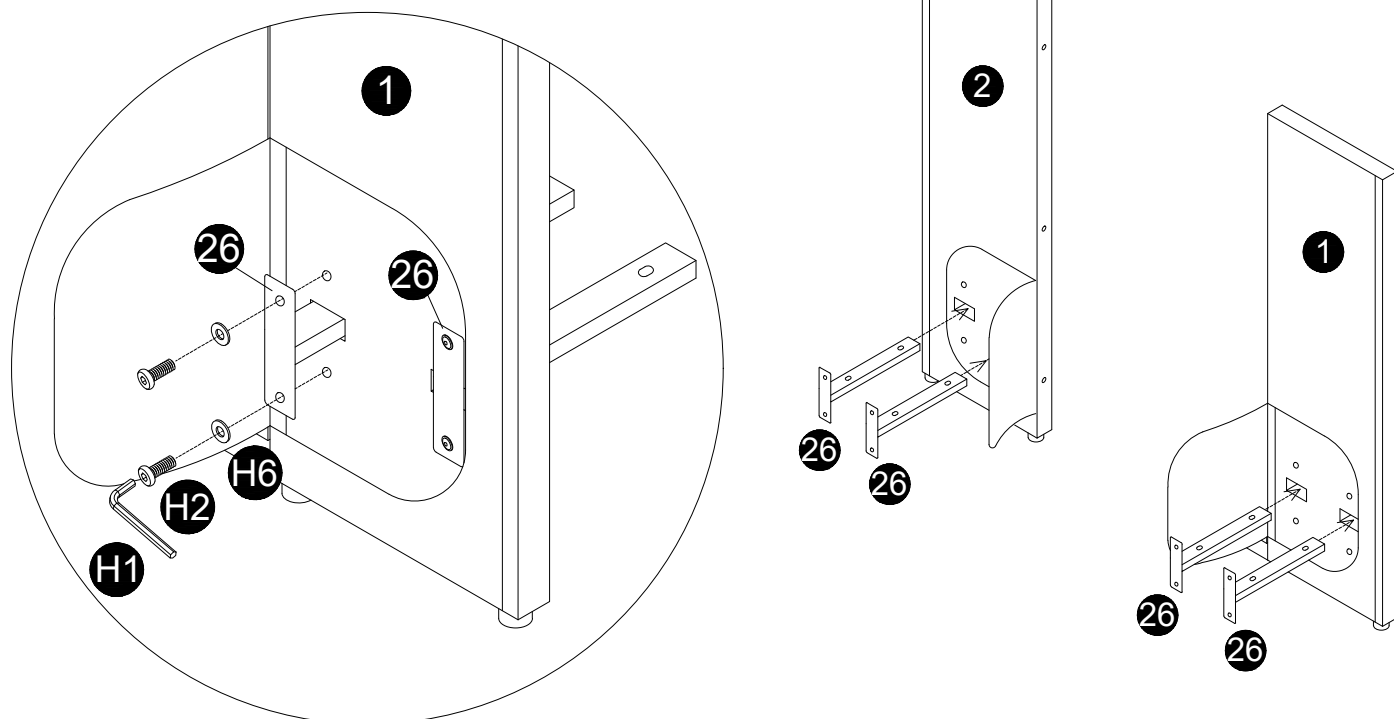


7

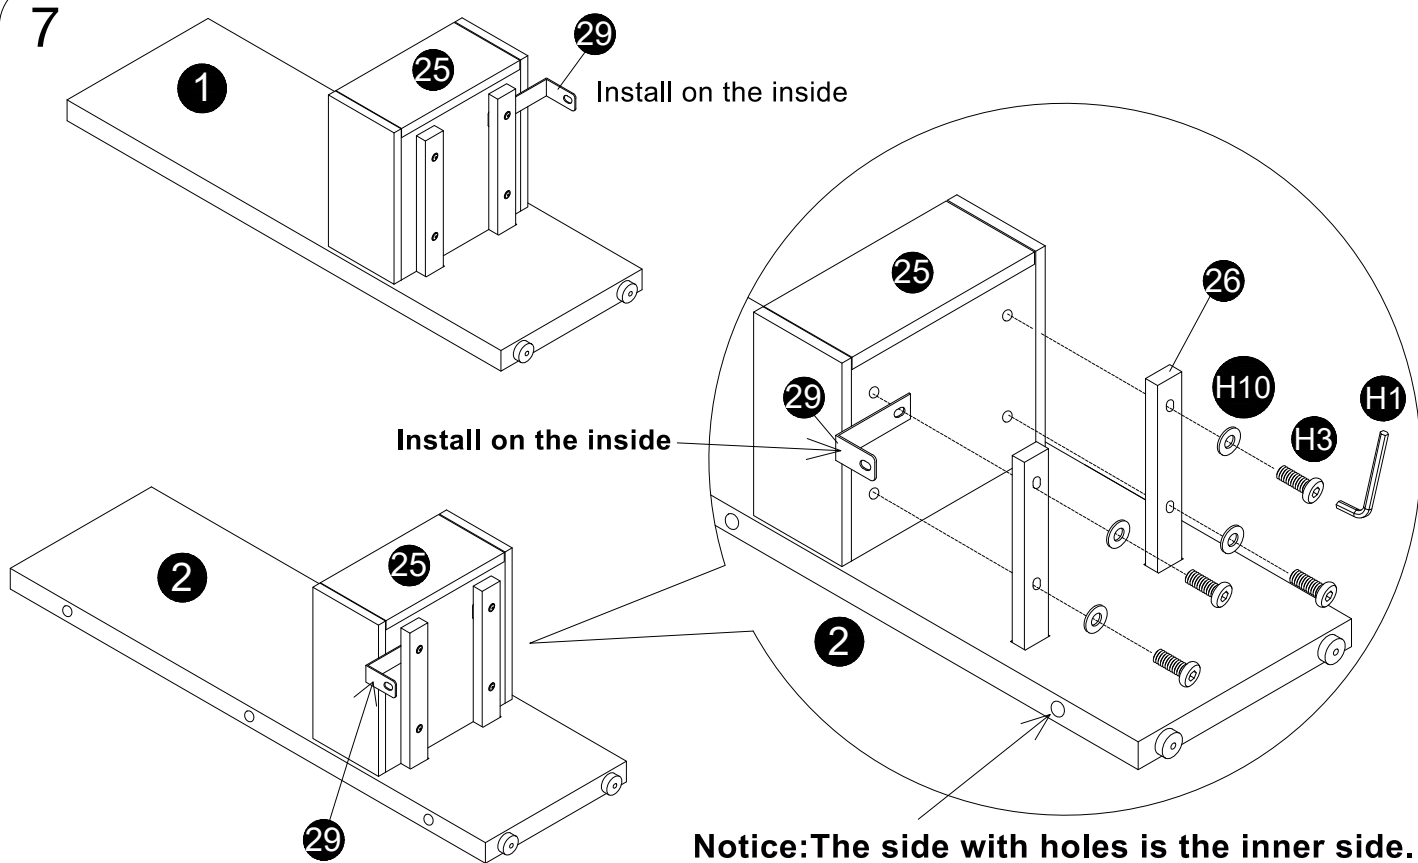


8

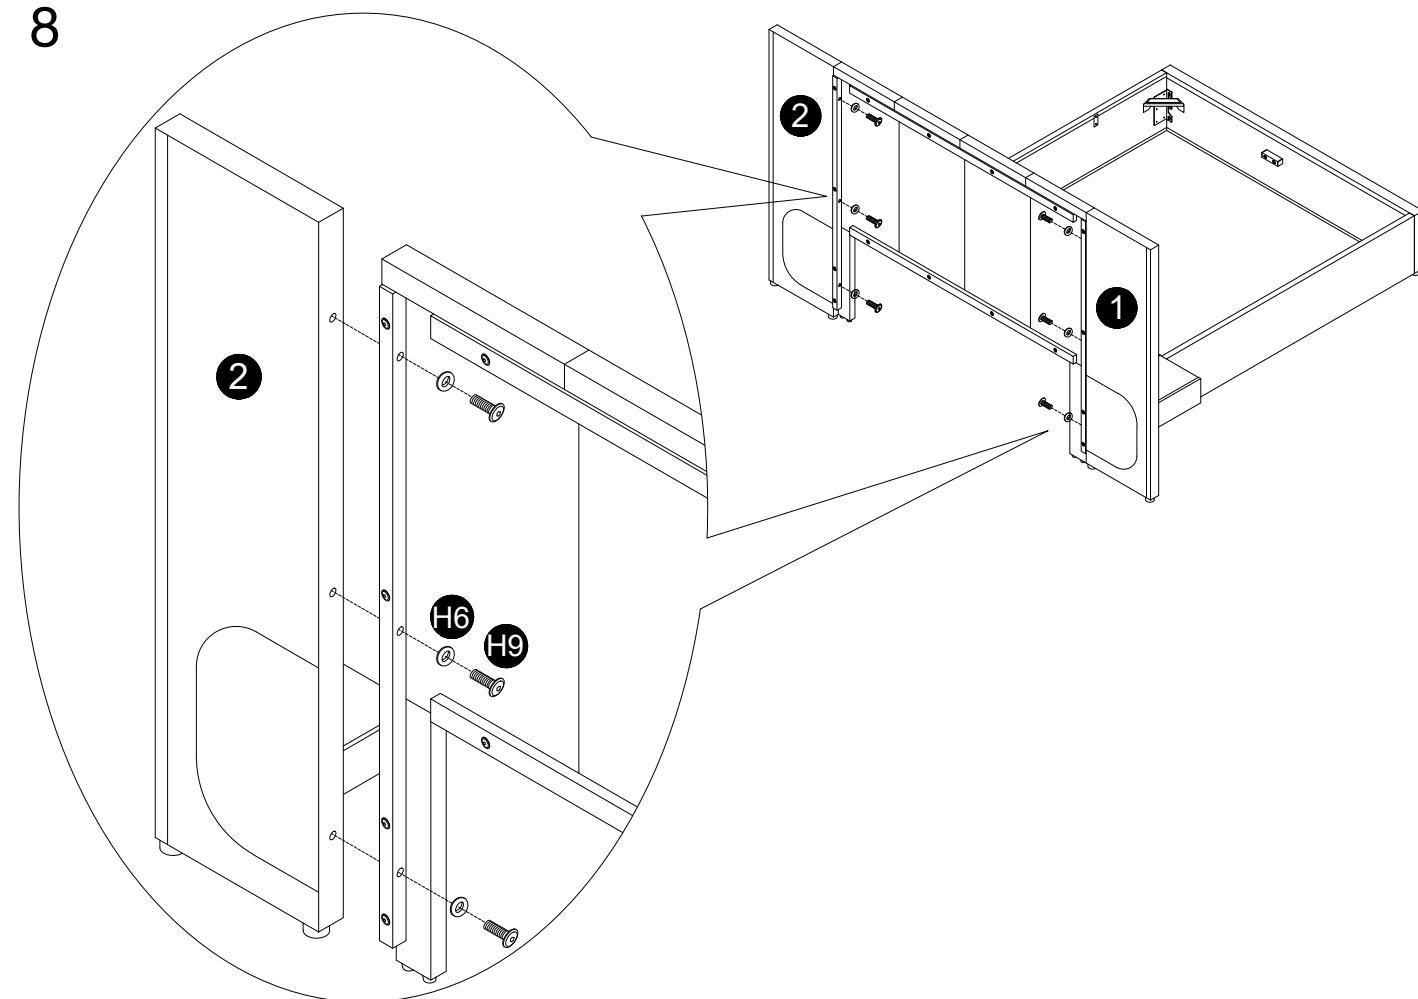


9

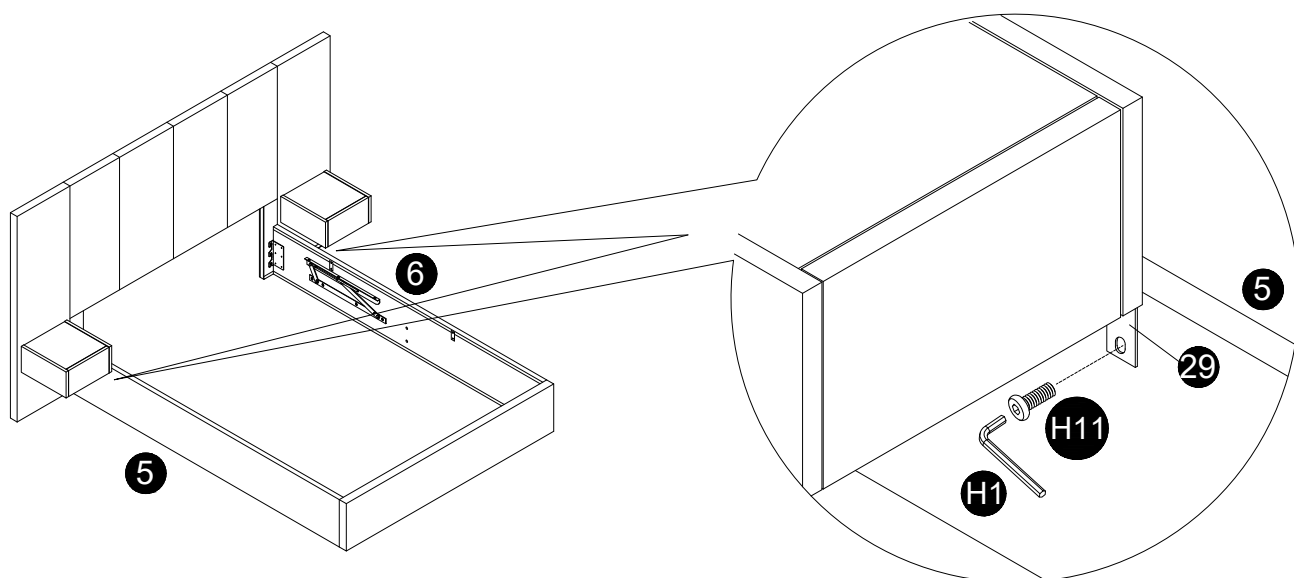


10

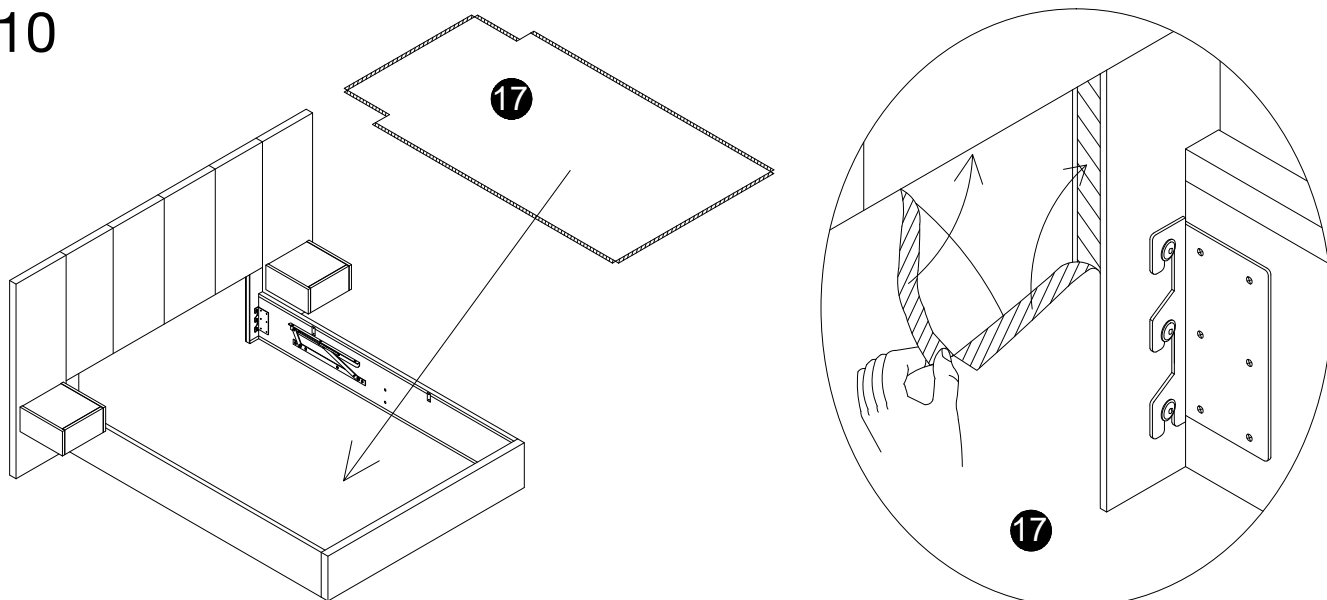


11

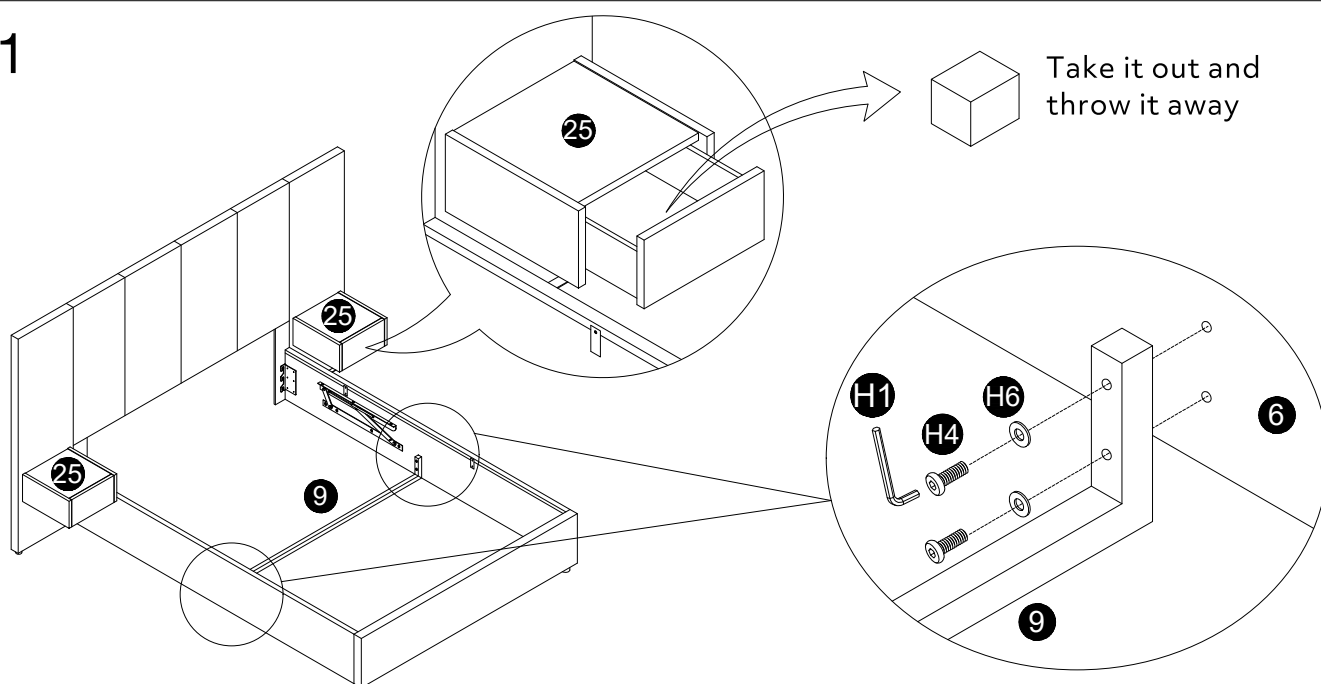

12

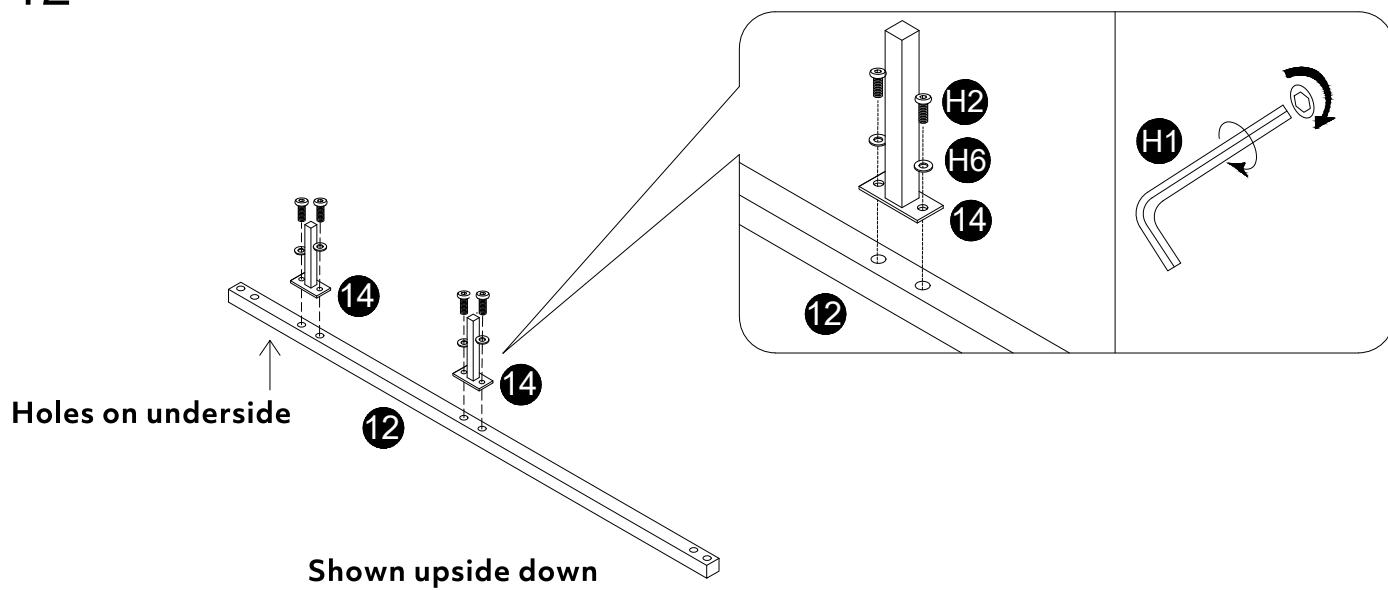


13

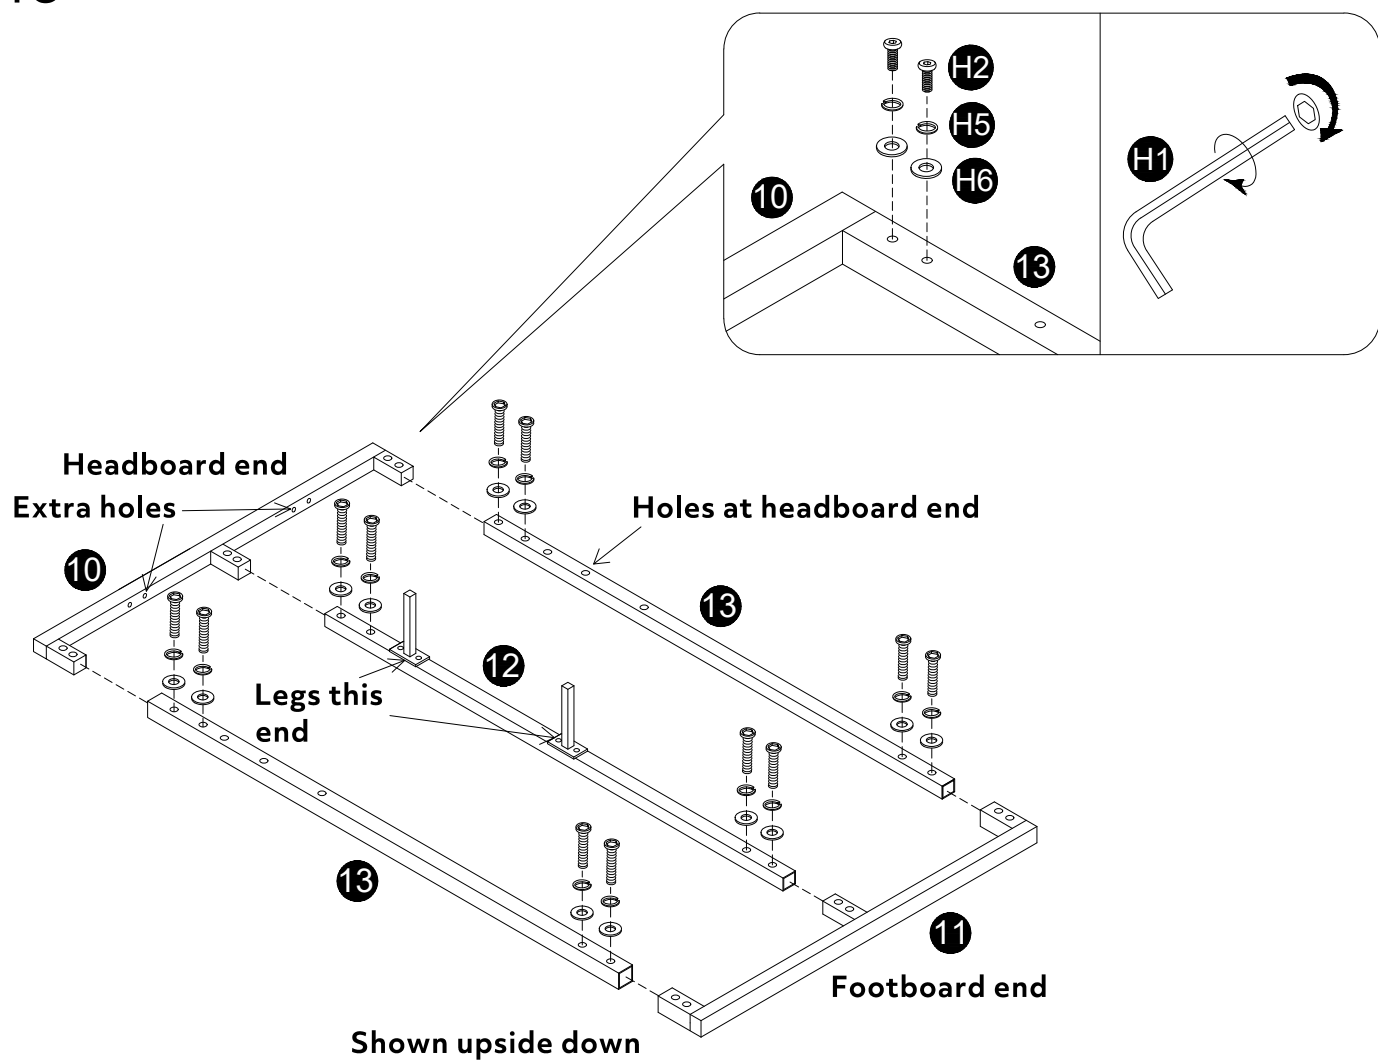


14


Headboard end

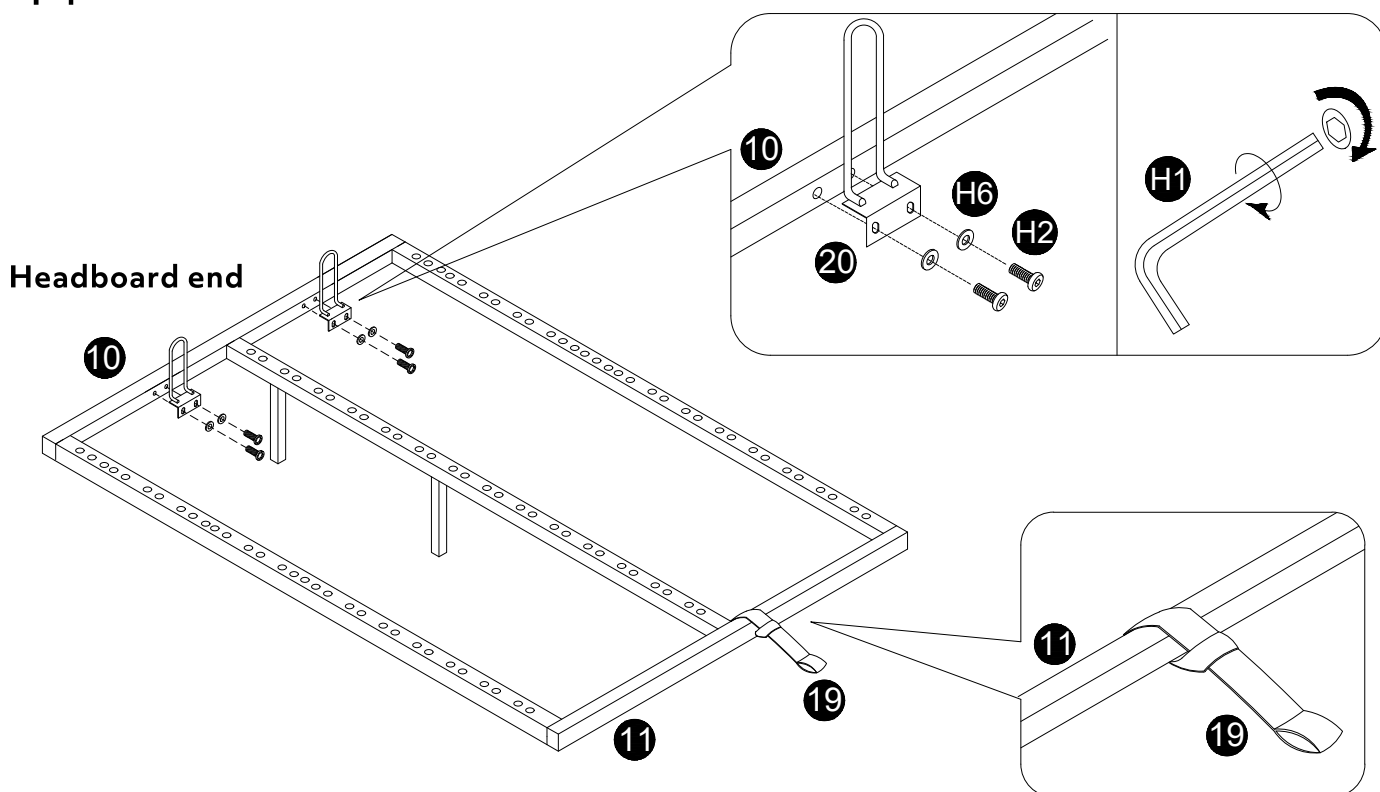


15

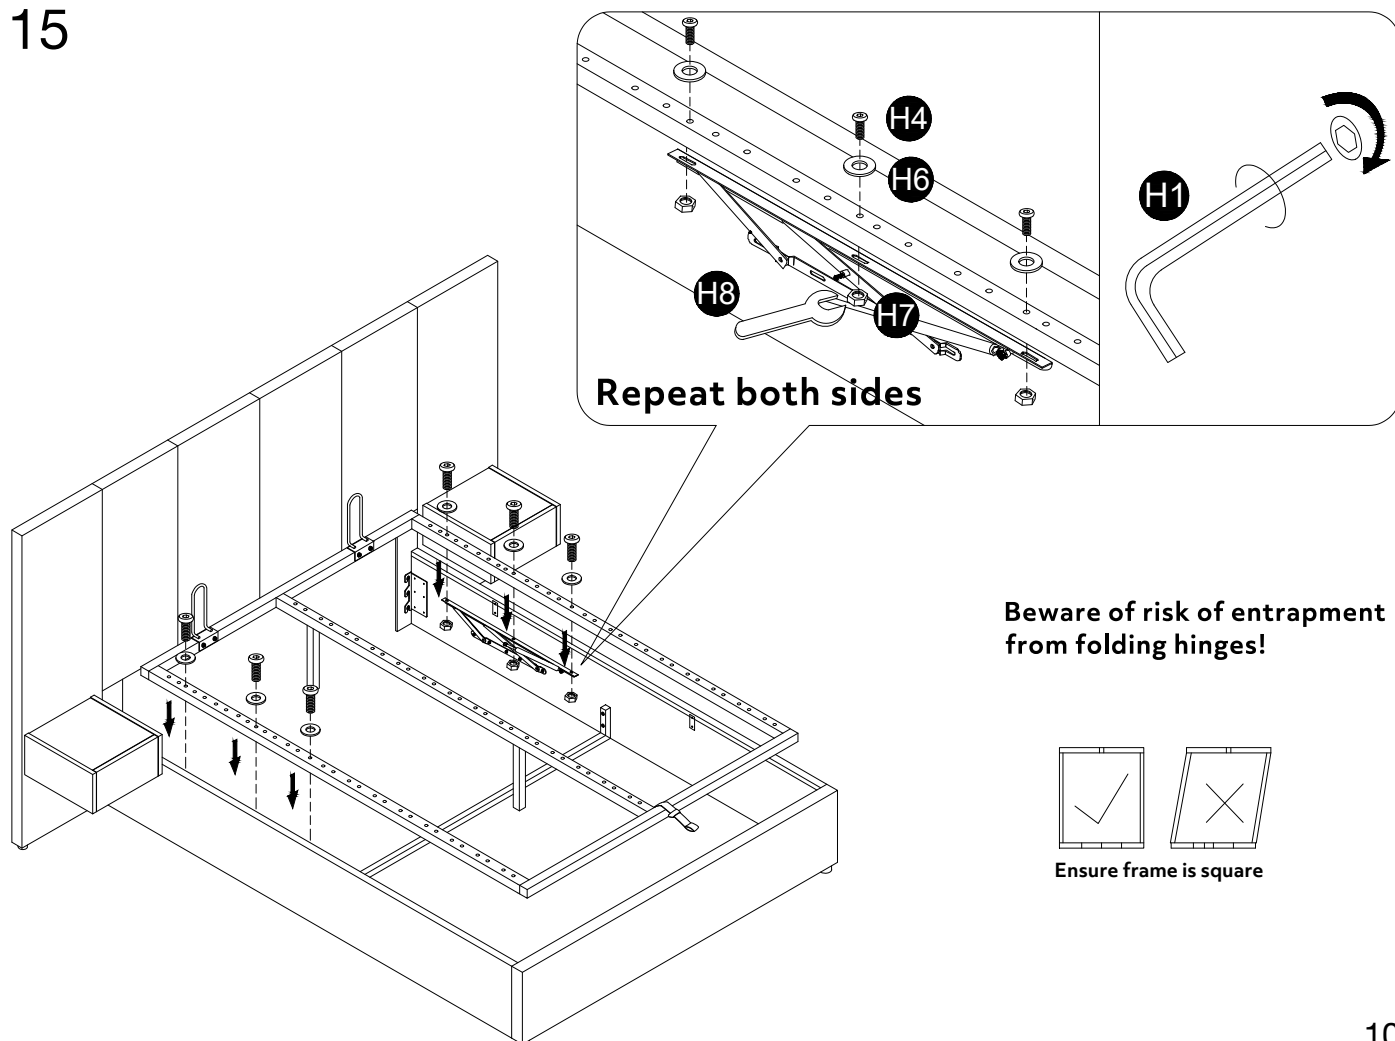


16

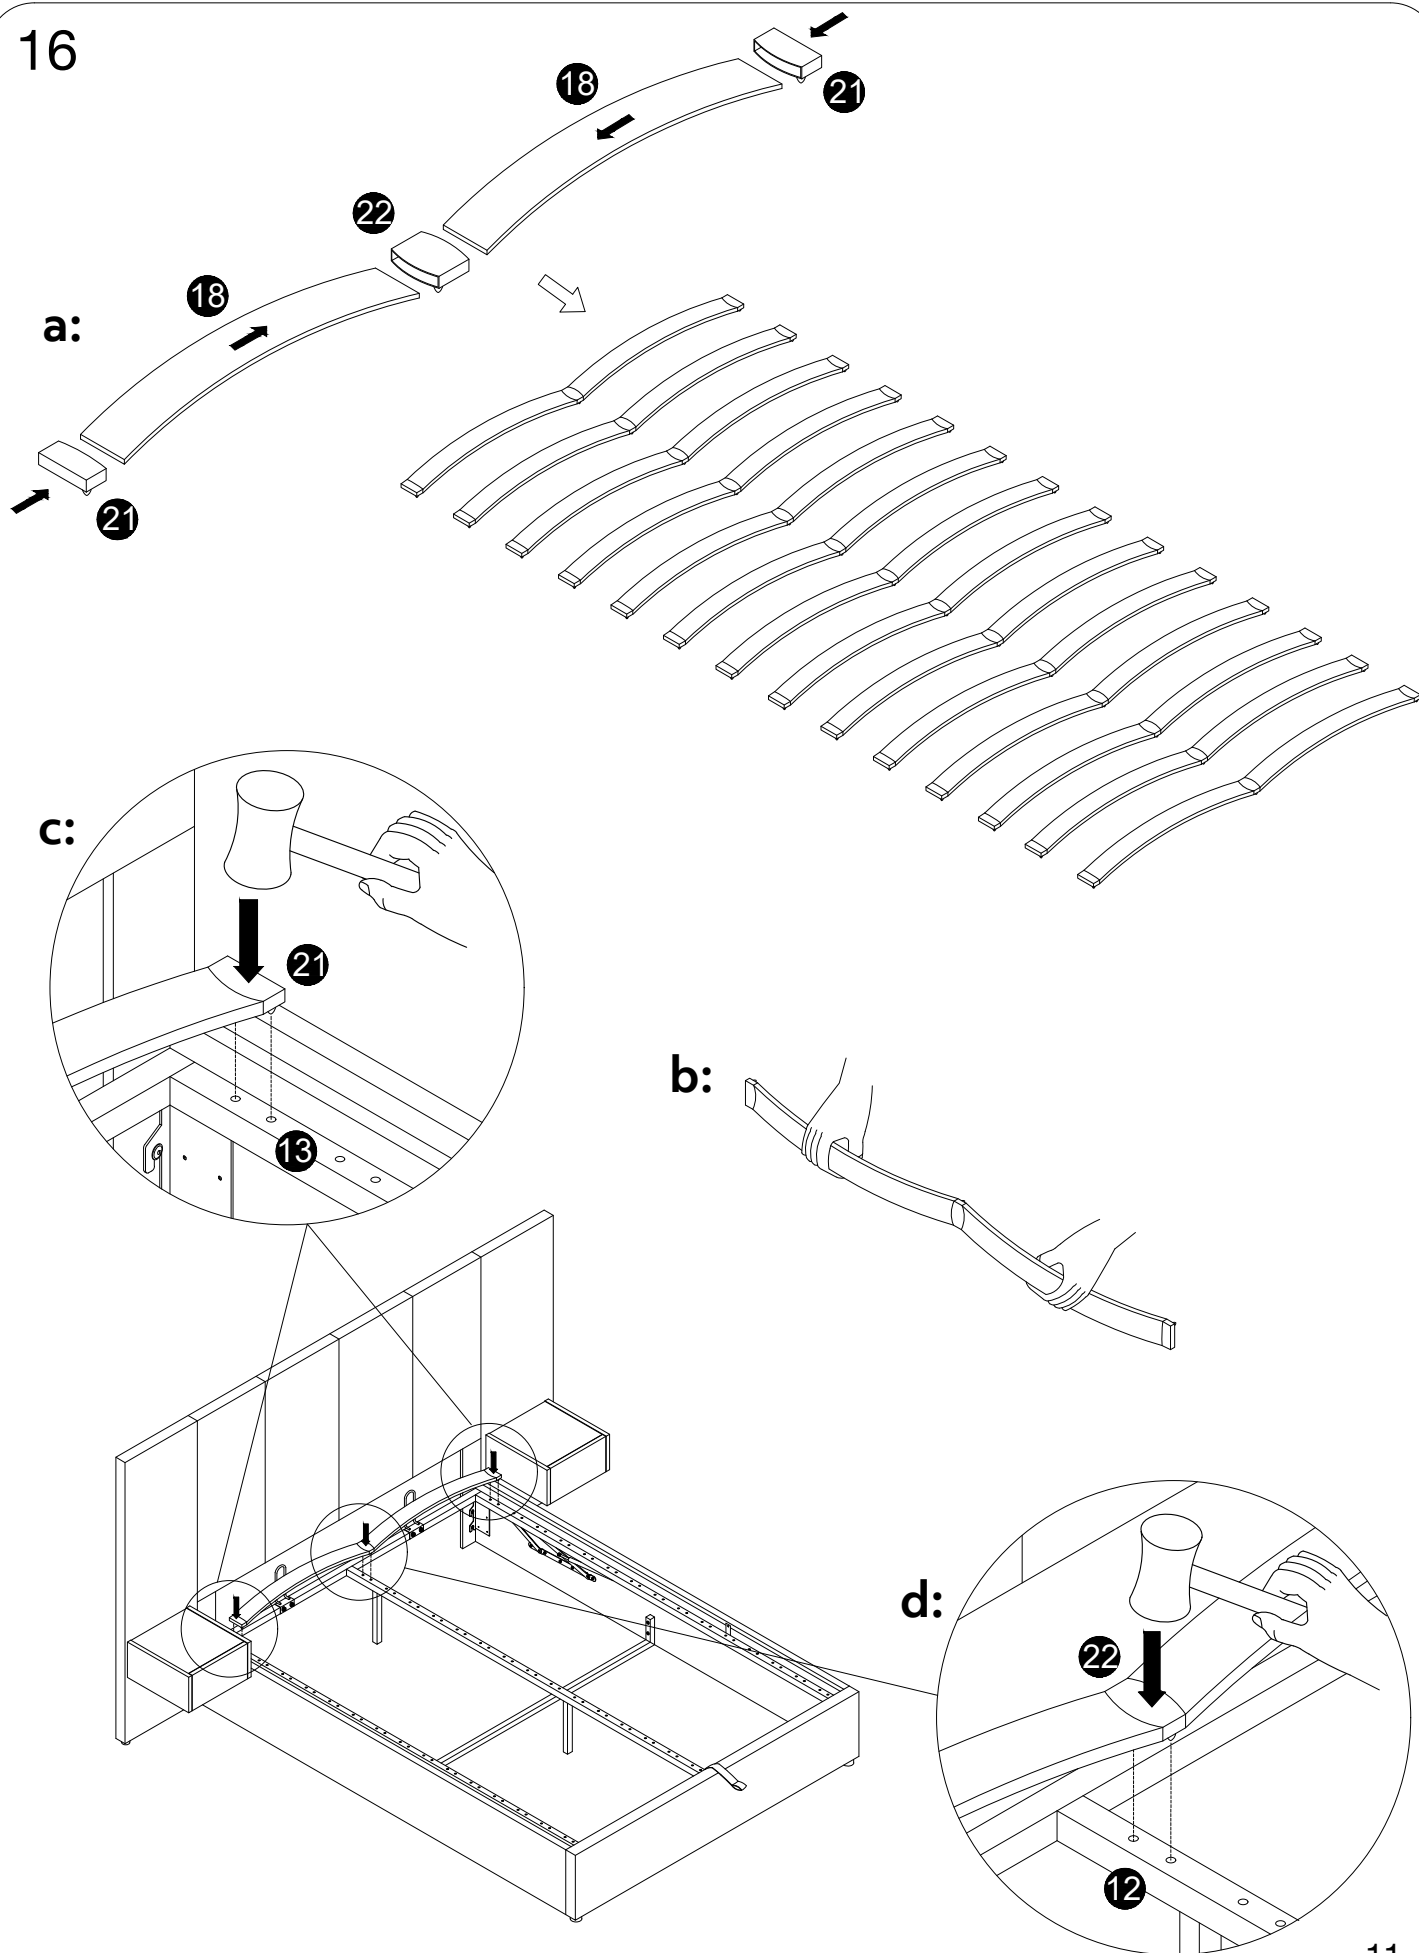

17

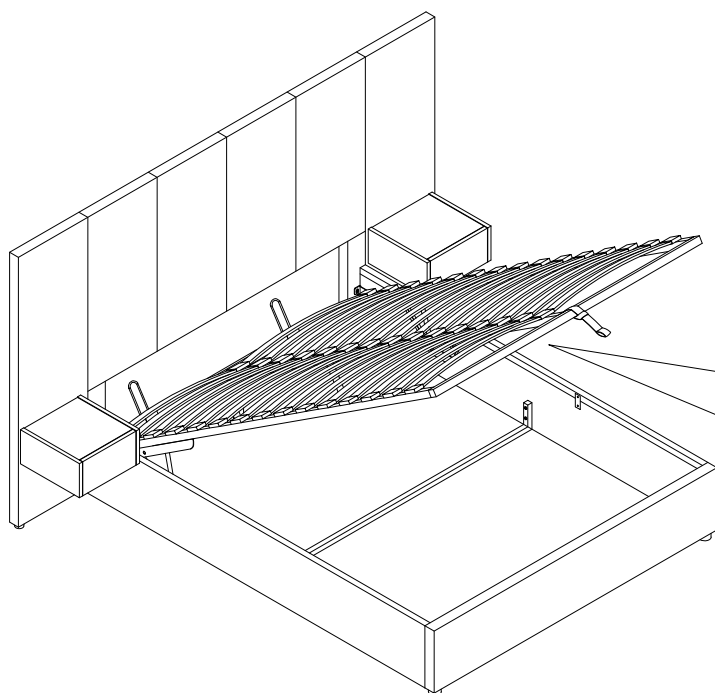


Warning: Two people required. Frame to be fully supported at all times!

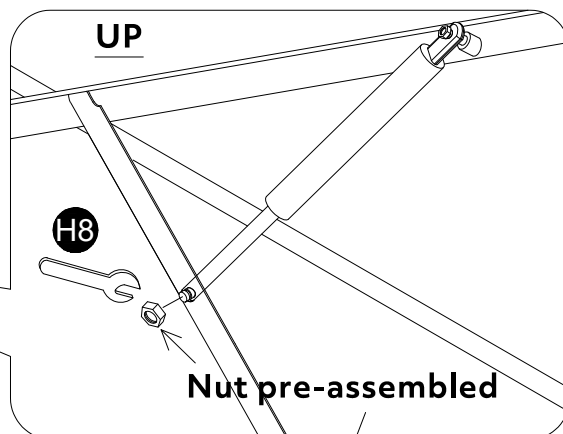


Repeat both sides

Important: Before proceeding, check and ensure all screws and fixings are fully tightened.

18

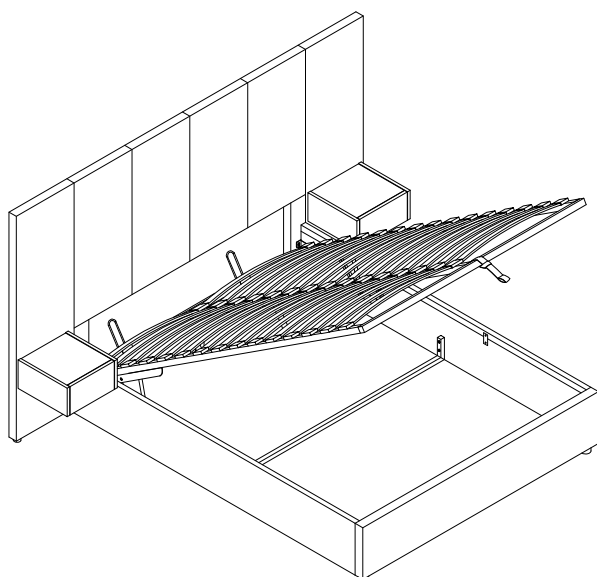

After placing the mattress on frame, push down the frame with 30lbs force.

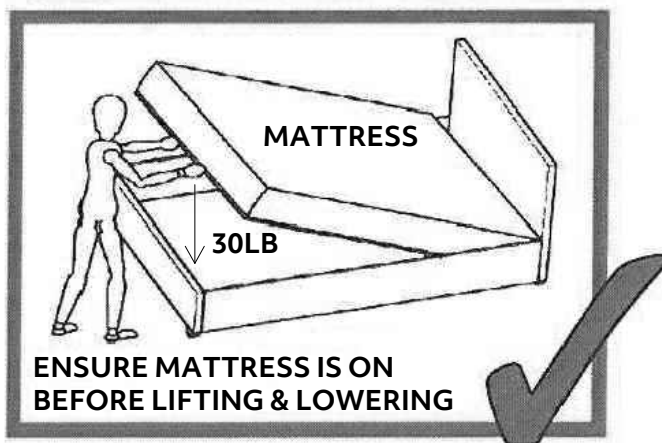

ENSURE MATTRESS IS ON BEFORE LIFTING & LOWERING

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.