
INSTALLATION INSTRUCTIONS

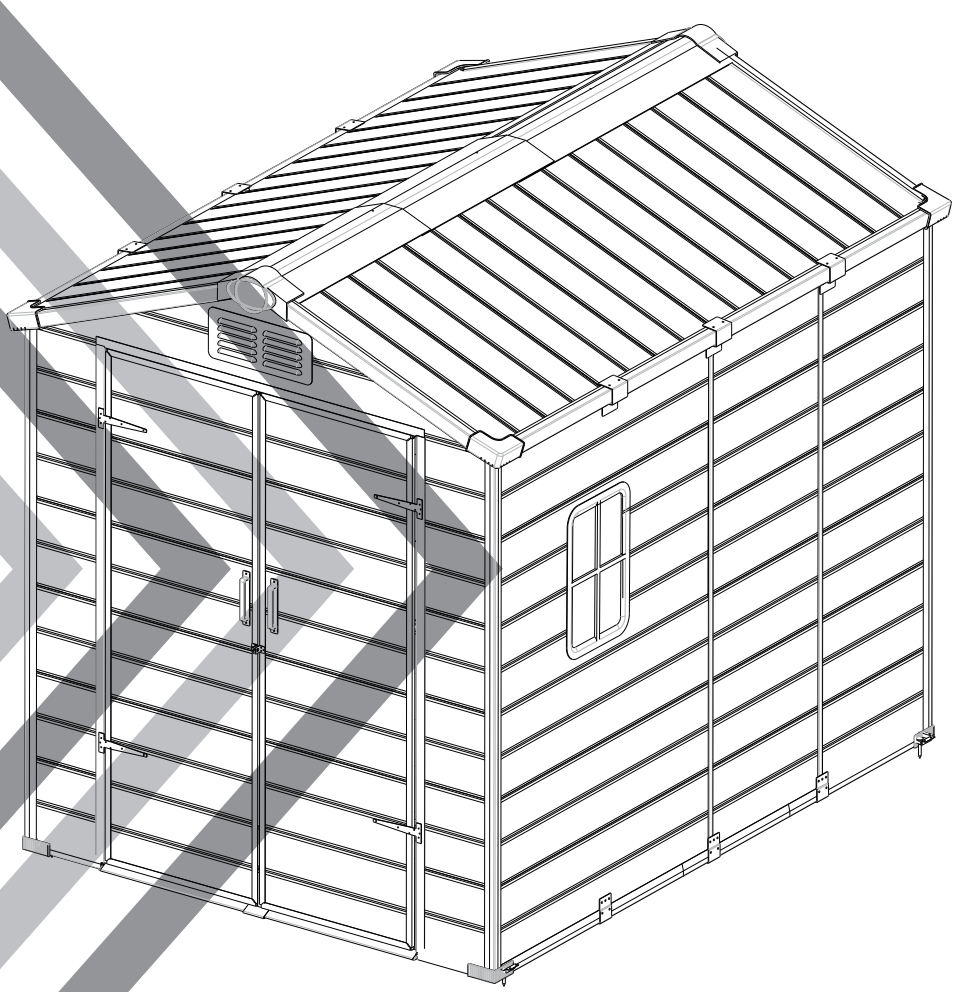

TOOL ROOM 6x8

— INSTALLATION INSTRUCTIONS —

How to Use the Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Self-Drilling Required

Due to the ductility of the resin material, there are no pre-drilled holes on the panels. You will need to drill the holes yourself during assembly as per the instructions.

Understand the Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.


Follow Step-by-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.

Tools needed for installation



Scraper×1

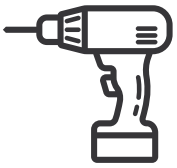


Electric Drill×1



Ladder×1



Screw Driver×1

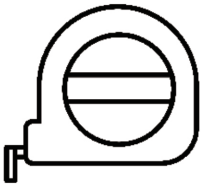

Tape Measure×1



Small wrench×1




























Glove×1









Due to the large size of the product and for Safety,we recommend 2-4 people to work together on the installation,which is expected to be completed in 2-4 hours.















Box A

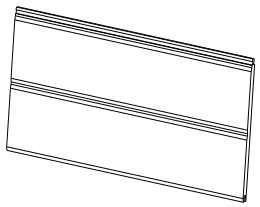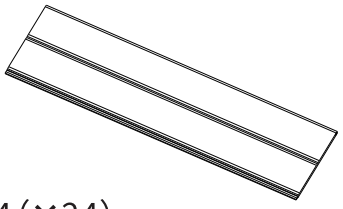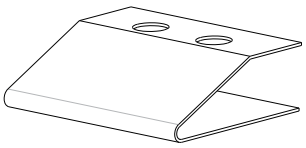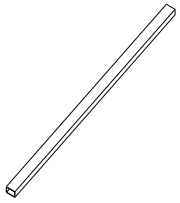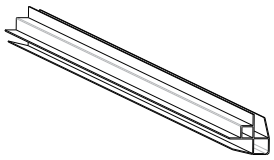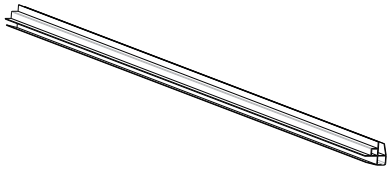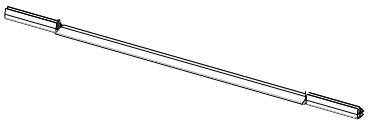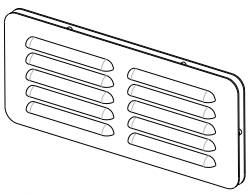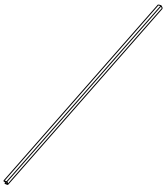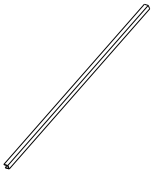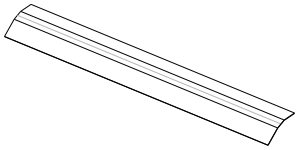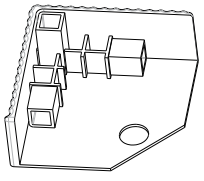 E63（×16）	 E54（×24）	 E37-F（×1）
 H17（×4）	 F2（×4）	 F65（×1）
 E37-B（×1）	 J59（×1）	 J39（×1）
 F13（×4）	 F34（×1）	 F50（×1）
 G3（×4）	 F71（×2）	 F70（×4）
 G10（×1）	 G12（×2）	 G1（×4）








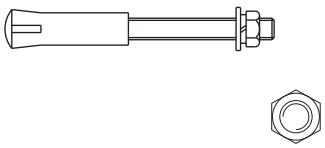

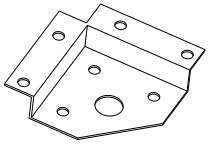
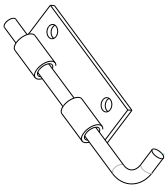
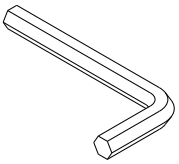
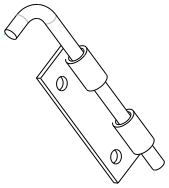
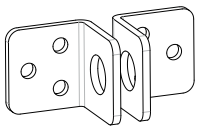
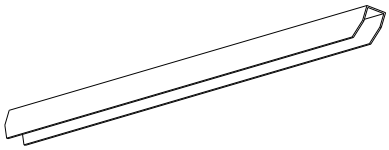
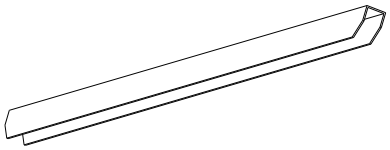
 D90（×4）	 D91（×4）	 J17（×4）
 J1（×4）	 J31（×1）	 D69（×1）
 J32（×1）	 J16（×2）	 J5（×3）
 J18（×2）	 H16-R（×1）	 H16-L（×1）

BOX B

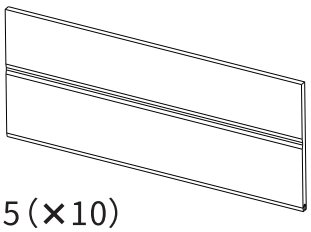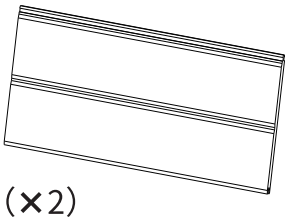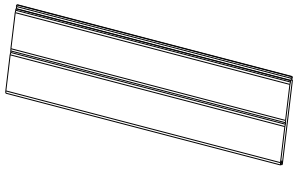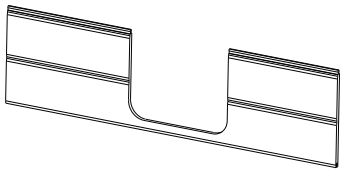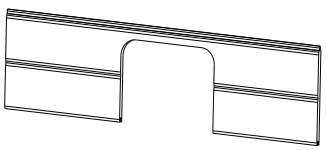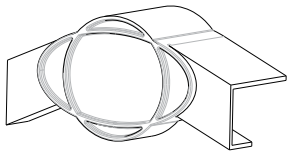
 E55（×10）	 E50（×2）	 E3（×10）
 E74（×1）	 E75（×1）	 G8（×2）

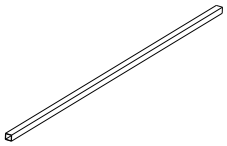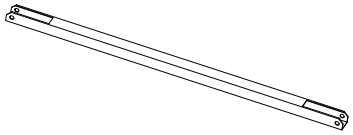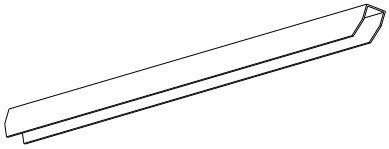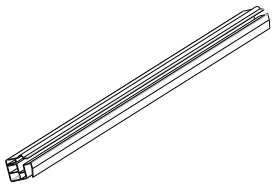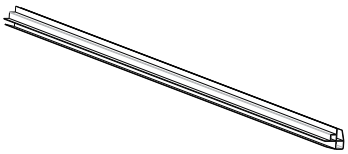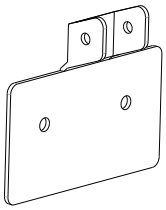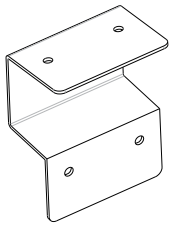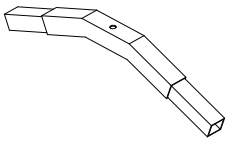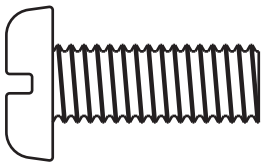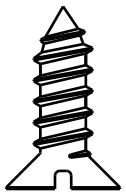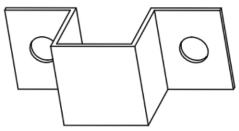 J37（×1）	 J48（×3）	 H5（×1）
 H14（×4）	 F37（×4）	 F28（×2）
 F12（×1）	 J3（×6）	 J4（×6）
 J63（×3）	 J19（×26）	 J20（×350）
 J21（×90）	 J65（×28）	 J60（×16）
 G25（×2）	 G15（×3）	G21（×5）

BOX C

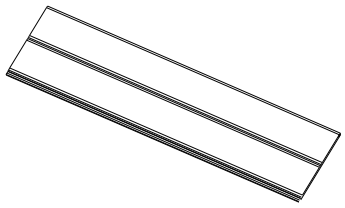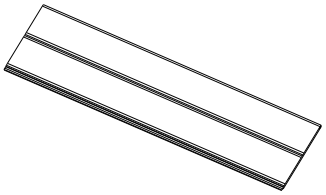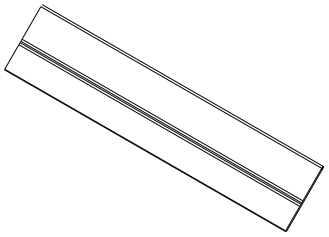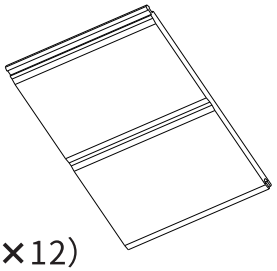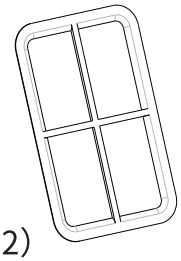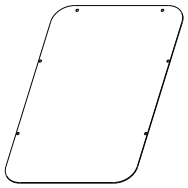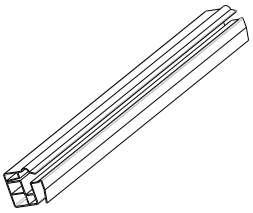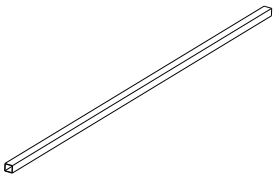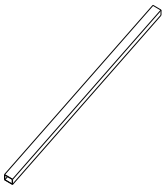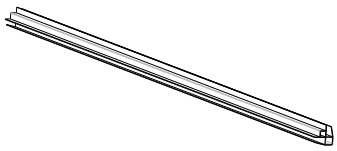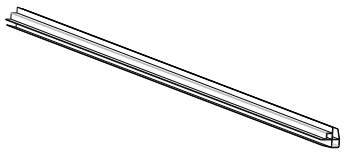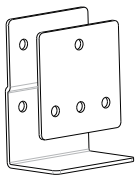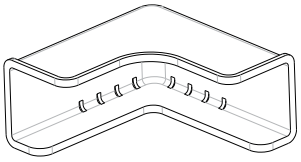
 E62（×12）	 E62-G（×14）	 E61（×2）
 E43（×12）	 G18（×2）	 G5（×1）
 F41（×4）	 J10（×6）	 J61（×1）
 J46（×1）	 F11（×1）	 F10（×1）
 F27（×2）	 F31（×2）	 J6（×8）
 G9（×4）		


1




• E61 (×1) • E62-G (×7)

Cork Hammer

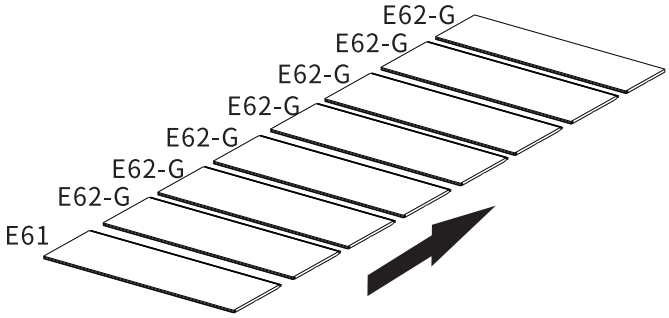

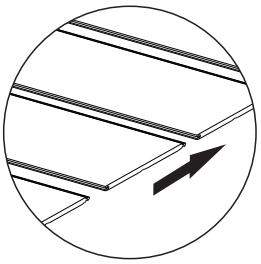



2




• F12 (×1) • F10 (×1)
• F11 (×1)

Cork Hammer

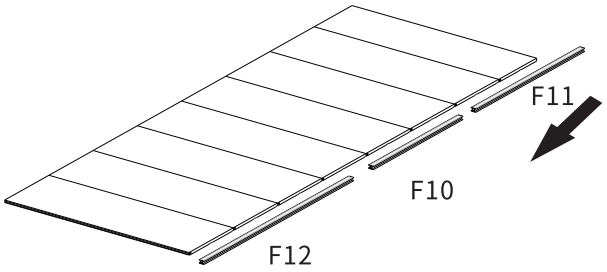

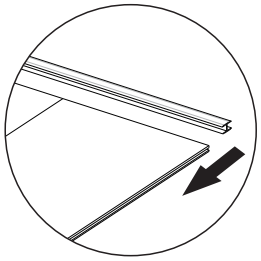



3



• E61 (×1) • E62-G (×7)

Cork Hammer Scraper

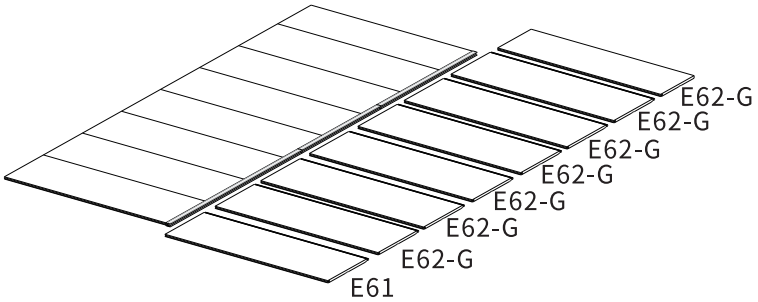

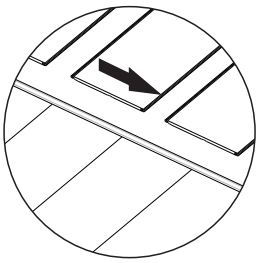



4



• G1 (×1)

Cork Hammer

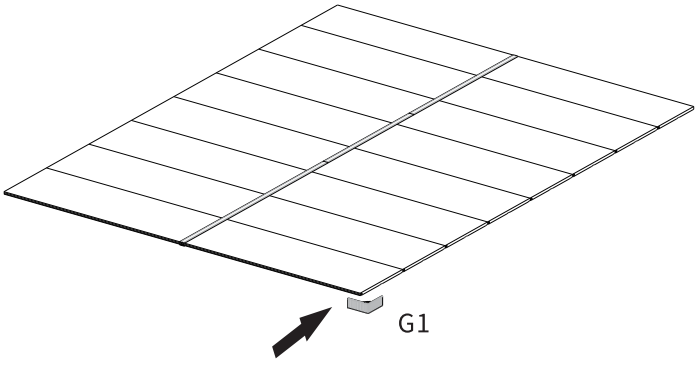

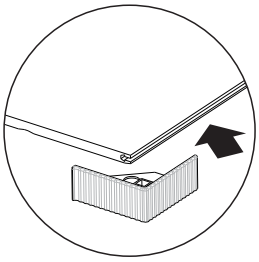



5




•F50（×1）

Cork Hammer

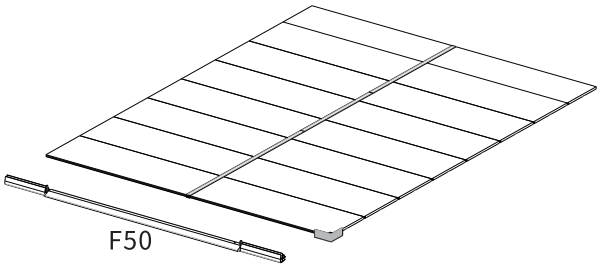

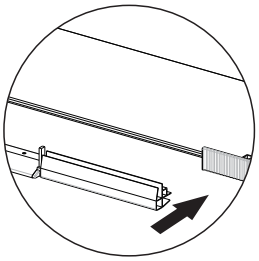



06



•G1（×1）

Cork Hammer

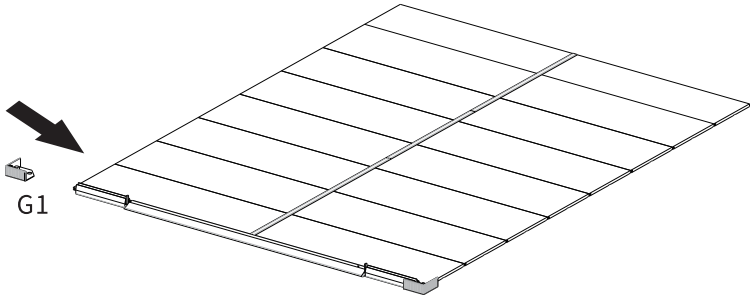

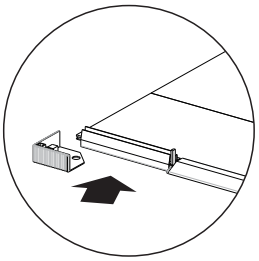


07




•F28（×1） •F31（×1）
•F27（×1）


Cork Hammer

Scraper

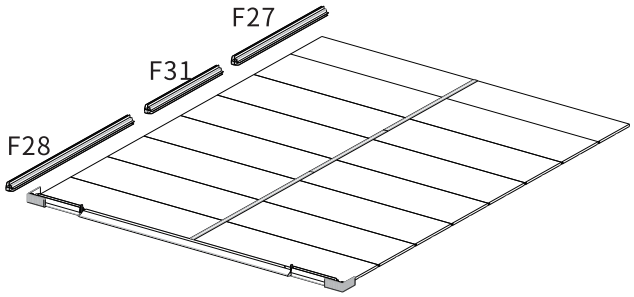

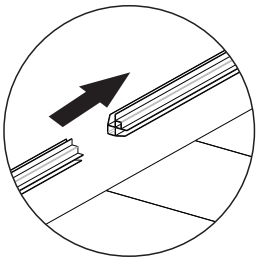



08




•G1（×1）

Cork Hammer

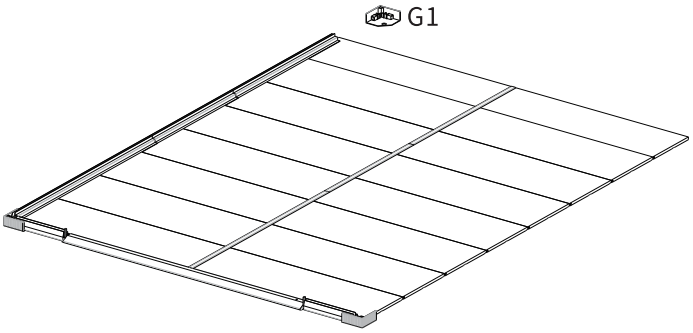

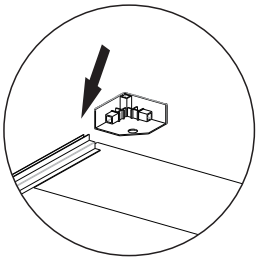



09




•F34 (×1)

Cork Hammer

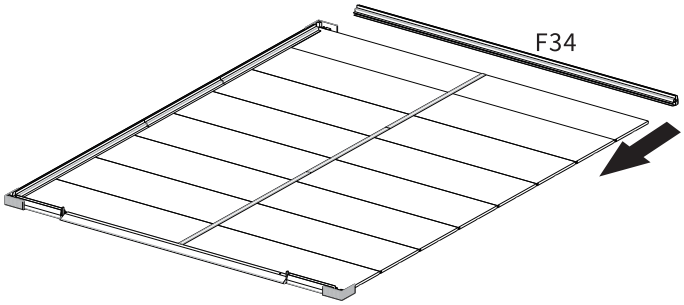

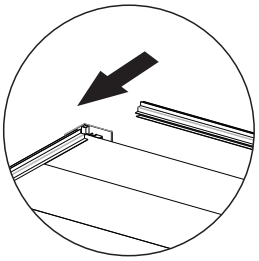


10




•F28 (×1) •F31 (×1)
•F27 (×1)

Cork Hammer

Scraper

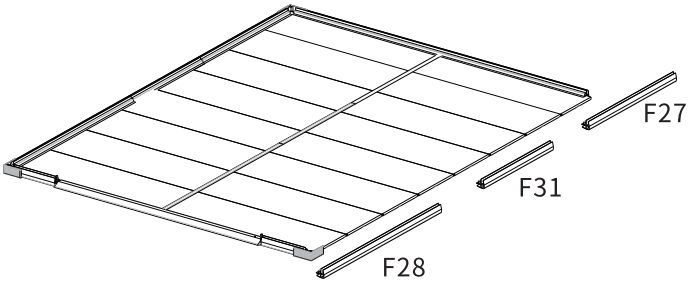

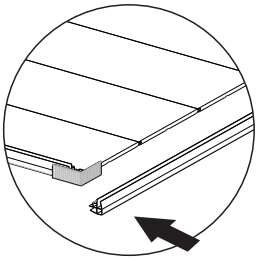


11




•G1 (×1)

Cork Hammer

Scraper

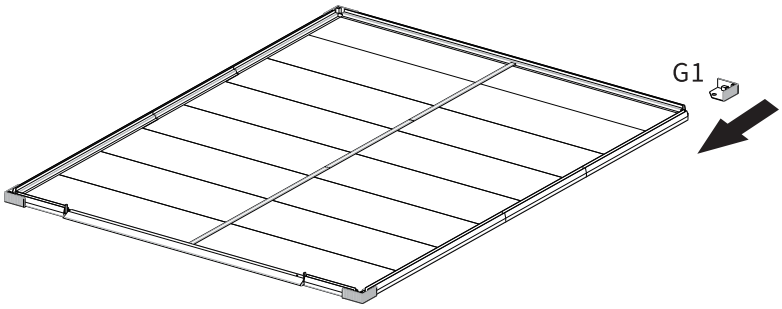

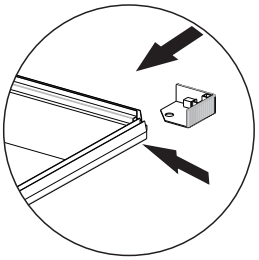


12




•J20 (×38)

Cork Hammer


Electric Drill

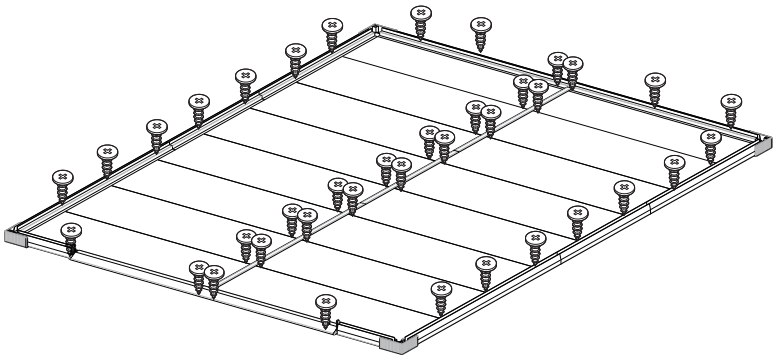



After the floor screws are tightened, proceed to the next installation step.

13  •F13 (×1)


Cork Hammer Scraper

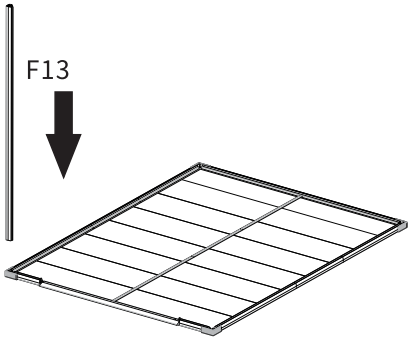


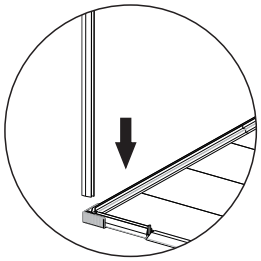


14  •E3 (×3)


Cork Hammer Scraper

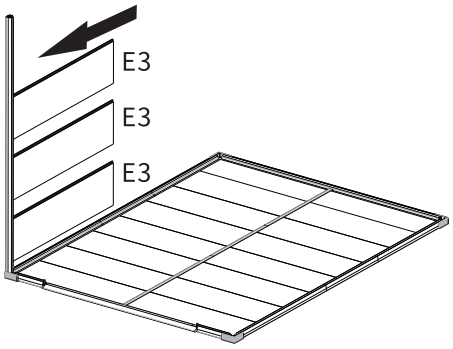


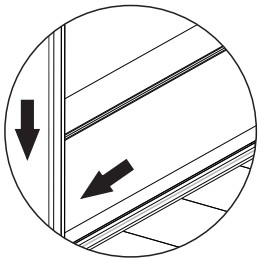


15  •E43 (×2)


Cork Hammer

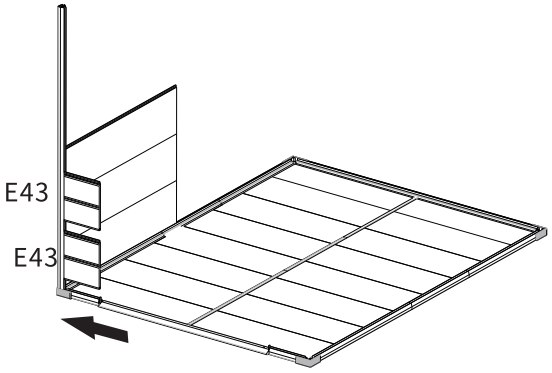


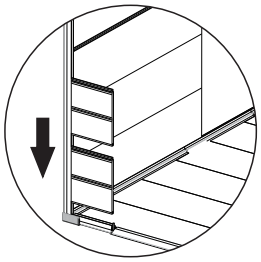

16  •E3 (×3)


Cork Hammer Scraper

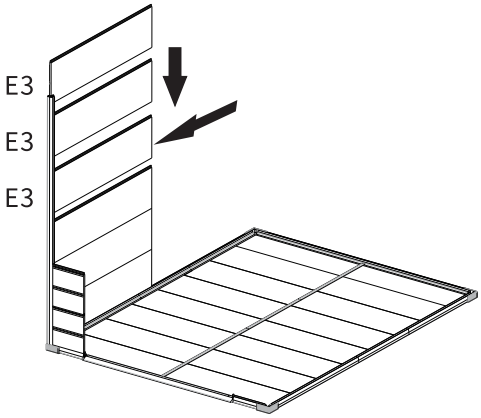


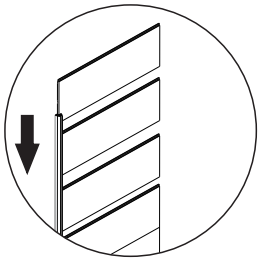


17  •F2 (×1)


Cork Hammer Scraper

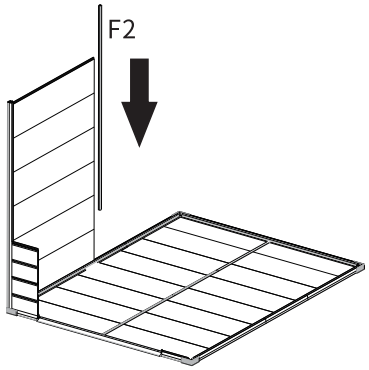


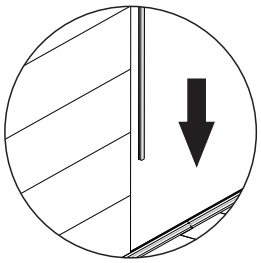

18  •E54 (×6)


Cork Hammer Scraper

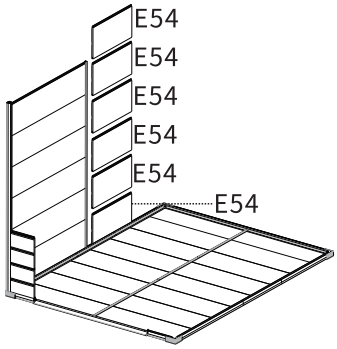


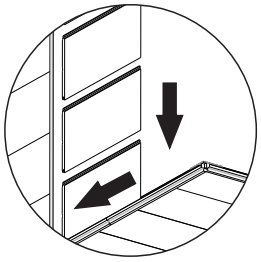


19  •F2 (×1)


Cork Hammer Scraper

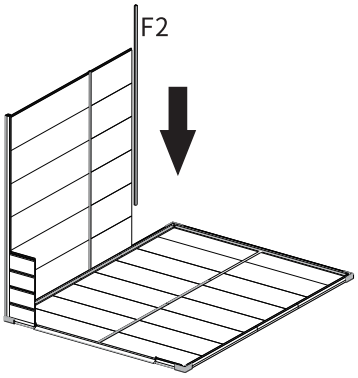


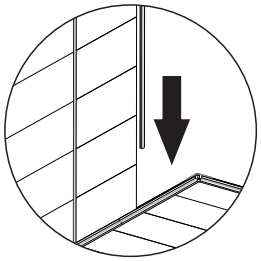

20  •E54 (×6)


Cork Hammer Scraper

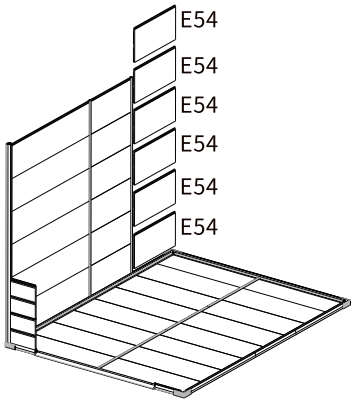


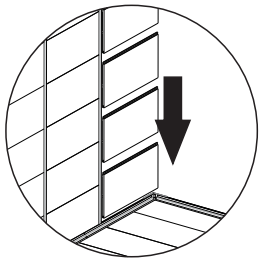

21 •F13 (×1)


Cork Hammer Scraper

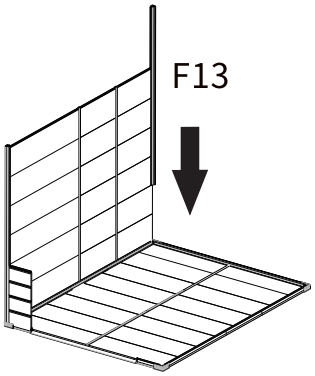


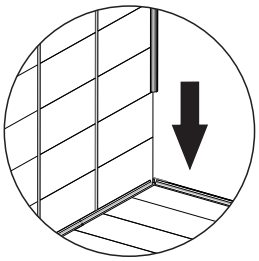

22 •J20 (×38)


Cork Hammer Electric Drill

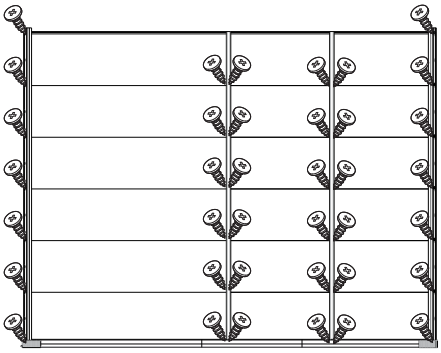


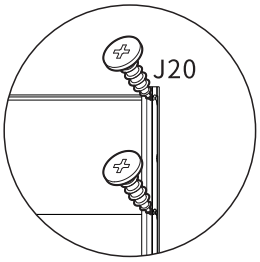

23 •E62 (×6)


Cork Hammer Scraper

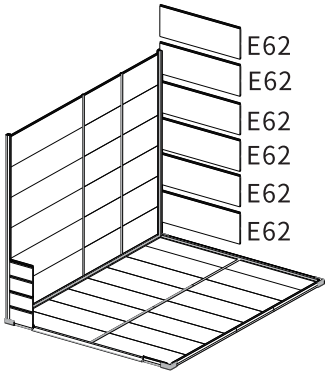


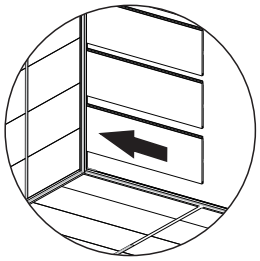


24 •F65 (×1)

Cork Hammer

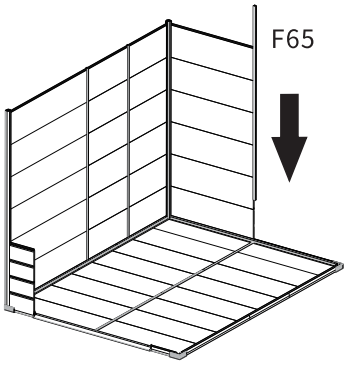

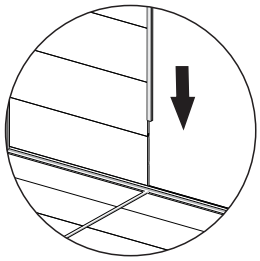

25





•E62 (×6)

Cork Hammer




Scraper

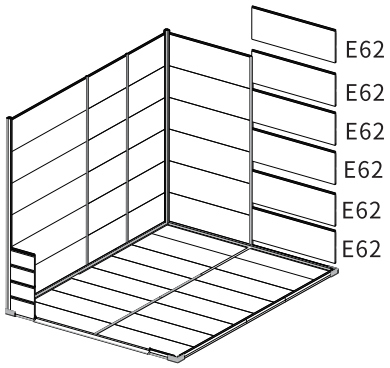

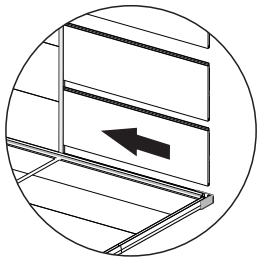

26




•G3 (×2) •E37-B (×1)
•J20 (×8)


Cork Hammer



Electric Drill

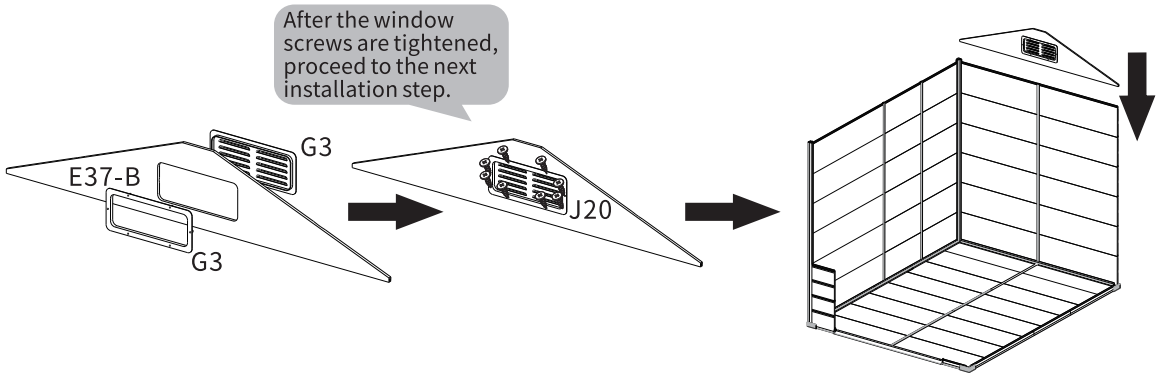


27






•F13 (×1) •J20 (×32)

Cork Hammer

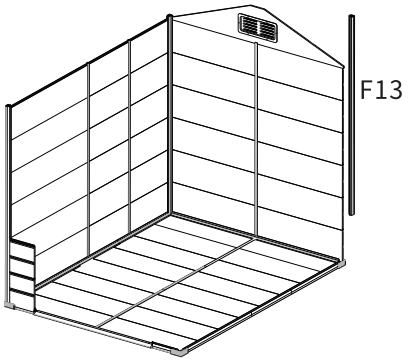

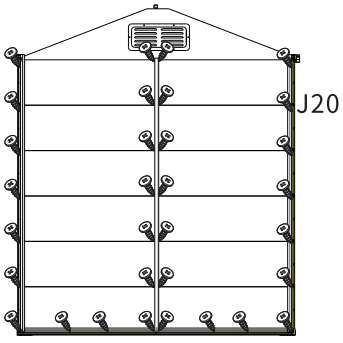

28





•E54(×6)

Cork Hammer



Scraper

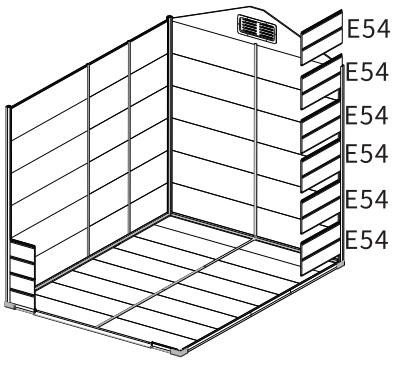


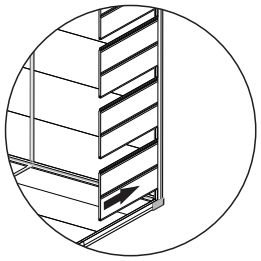


29 

•F2 (×1)

Cork Hammer

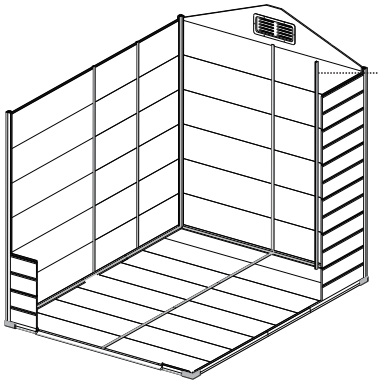


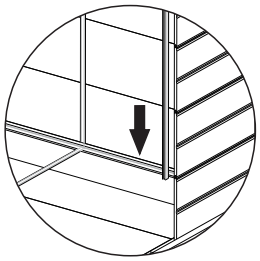


30 

•E54 (×6)

Cork Hammer Scraper

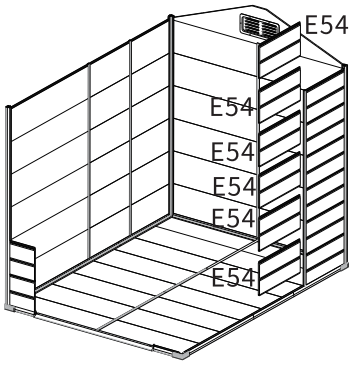


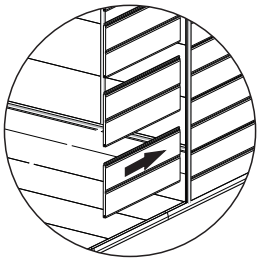



31 

•F2 (×1)

Cork Hammer

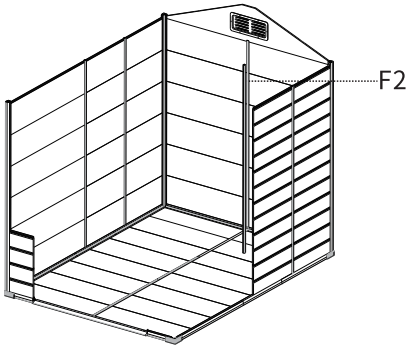


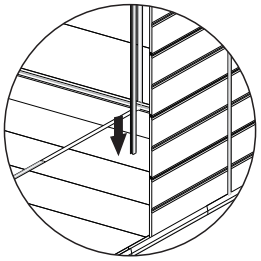


32 


•E3 (×3)

Cork Hammer Scraper

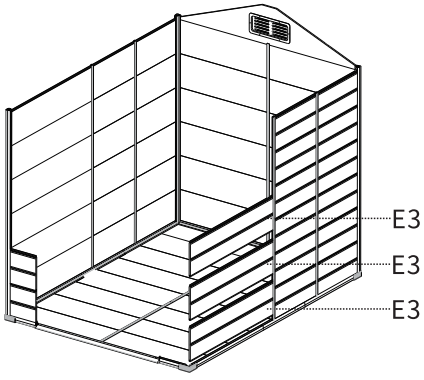

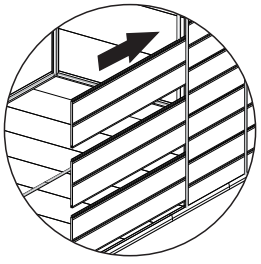


33



•G18 (×2) •G5 (×1) •J20 (×11)
•E74 (×1) •E75 (×1)

Cork Hammer Electric Drill

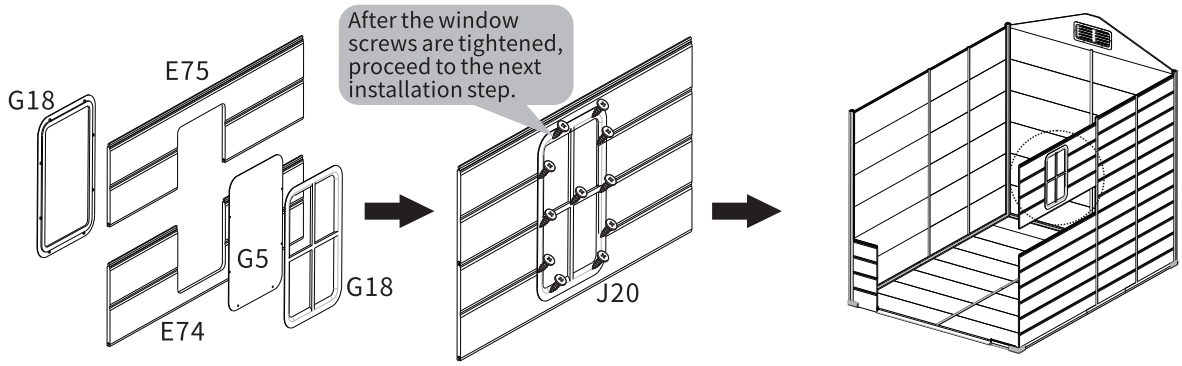


34



•E3 (×1)

Cork Hammer Scraper Electric Drill

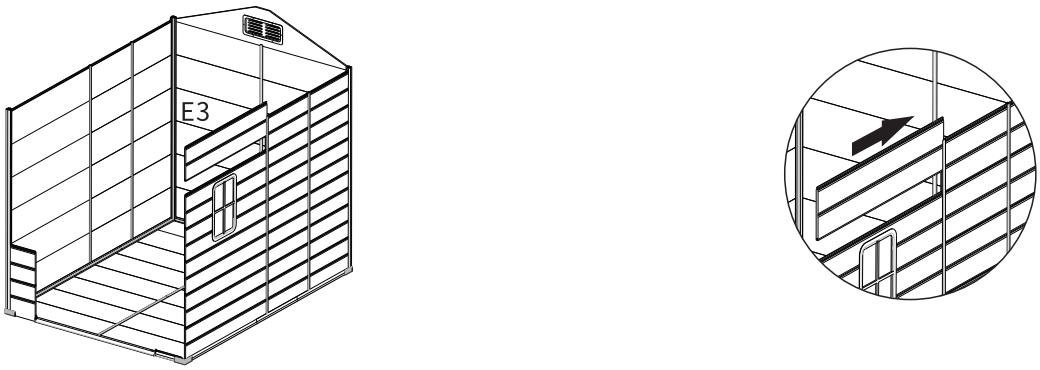


35



•E43 (×4)

Cork Hammer Scraper

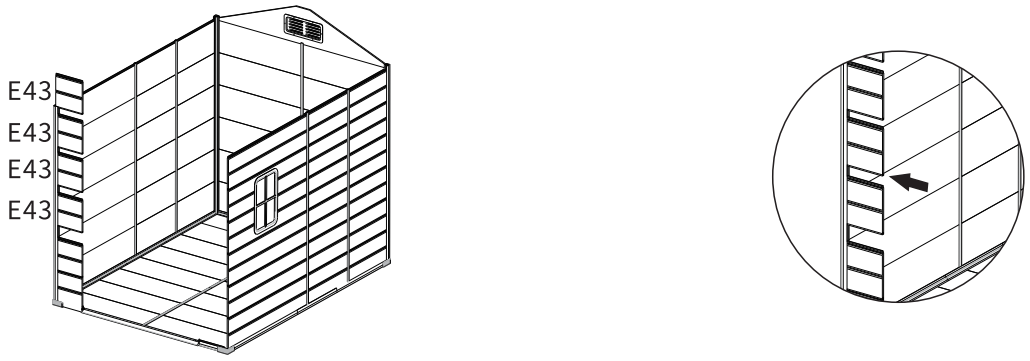


36



•H16-L (×1) •H5 (×1)
•H16-R (×1)

Cork Hammer

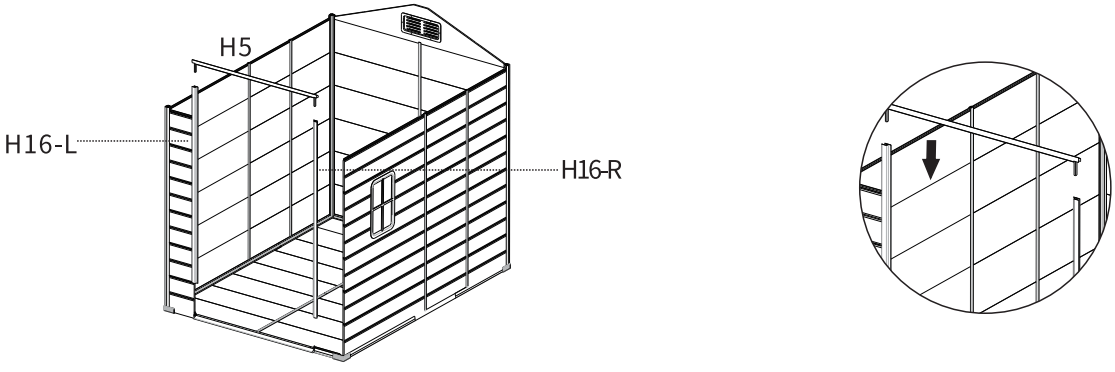


37




•E43 (×6)


Cork Hammer

Scraper

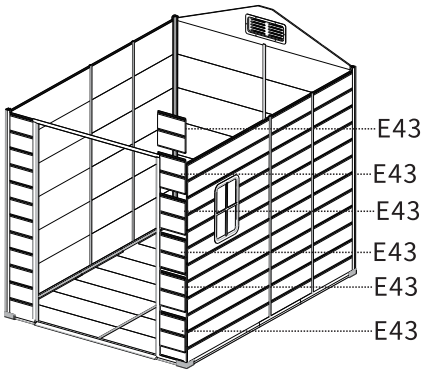

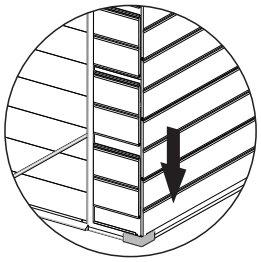

38




•G3 (×2) •J20 (×8)
•E37-F (×1)


Cork Hammer

Ladder

Electric Drill

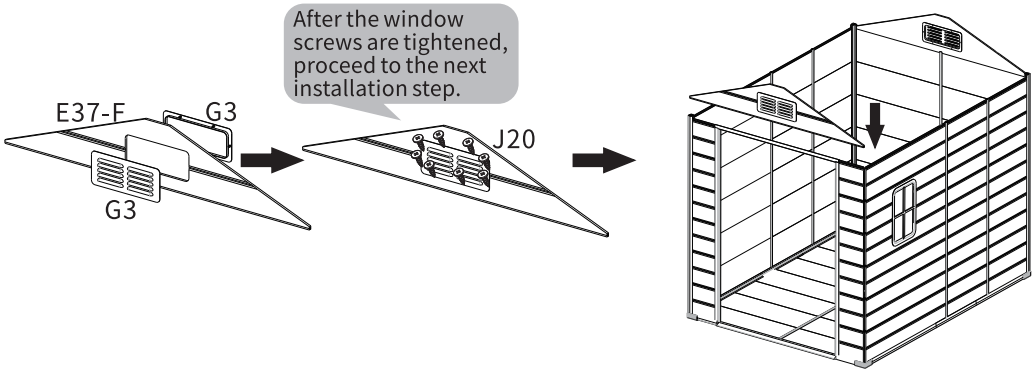

39





•F13 (×1)




•J20 (×42)

Cork Hammer

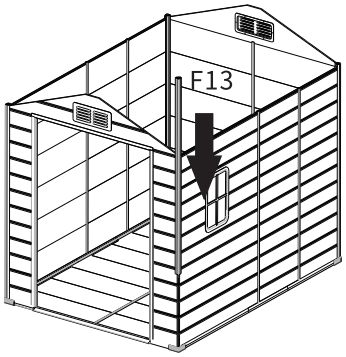

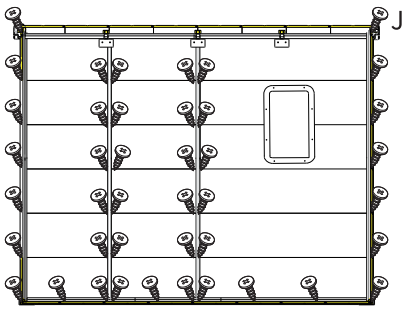

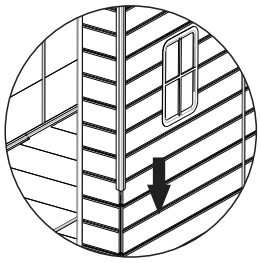


40





•G21 (×5) •J20 (×14)
•J21 (×10)

Cork Hammer

Electric Drill

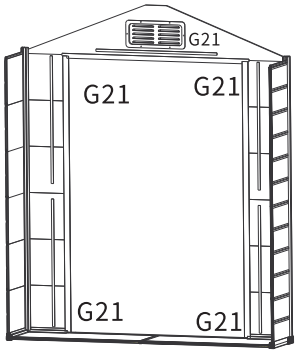

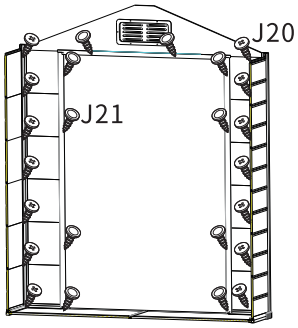


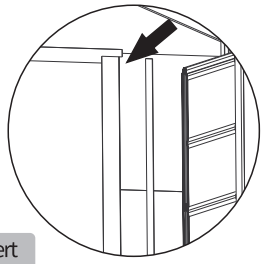


From inside the tool room, insert the door frame clip G21 into the gaps on all three sides of the door frame to maintain its stability.

41 •F37 (×4) •J20 (×8)


Cork Hammer Ladder

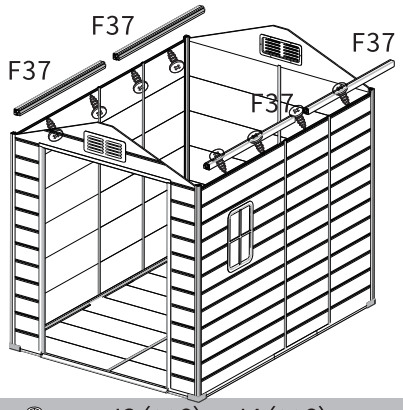


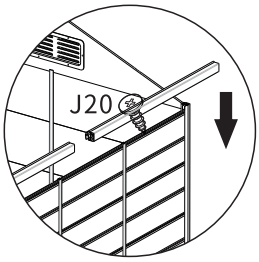


42 •J3 (×6) •J4 (×6) •J65 (×12)


Cork Hammer Scraper Punch Small Wrench Allen key

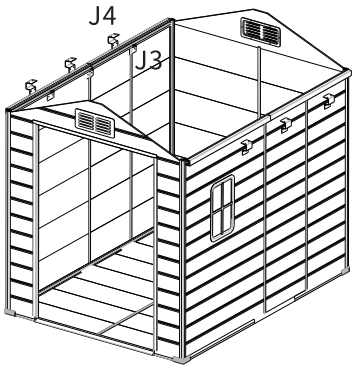

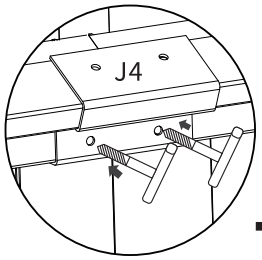

First, drill two holes on each side of the tool room, then install J3 and J4.

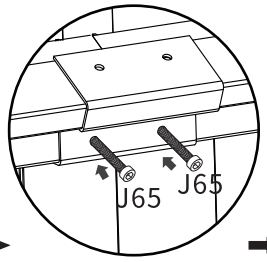


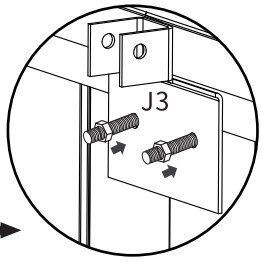


The screw passes through the holes of J4 and J3 and is locked with a nut.

43 •J10 (×6) •J63 (×3) •J19 (×18) •J48 (×3)


Cork Hammer Electric Drill Small Wrench Allen key

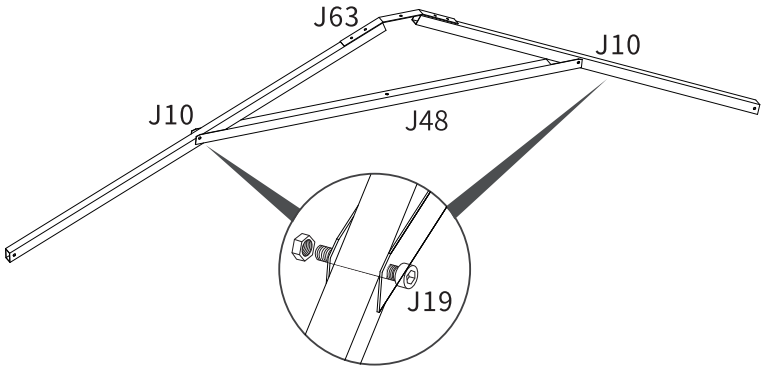


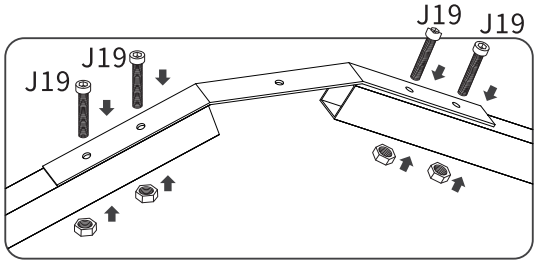

44 •J19 (×6)

Cork Hammer Electric Drill Small Wrench Allen key

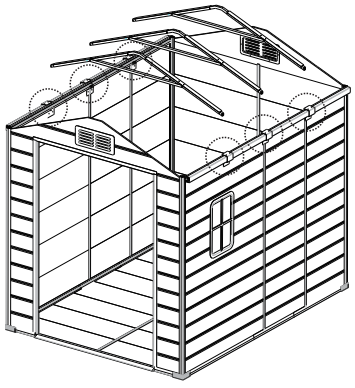


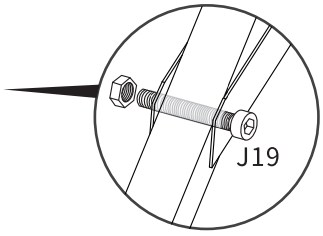


45

•E63（×8）

Cork Hammer

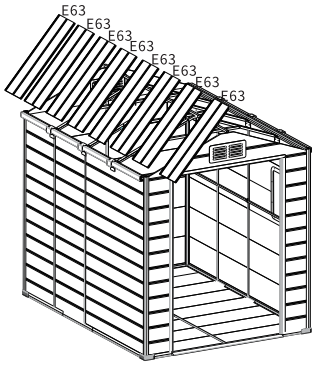


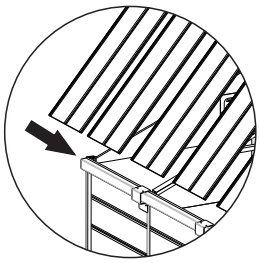


46

•F71（×1） •F70（×2）

Cork Hammer Scraper

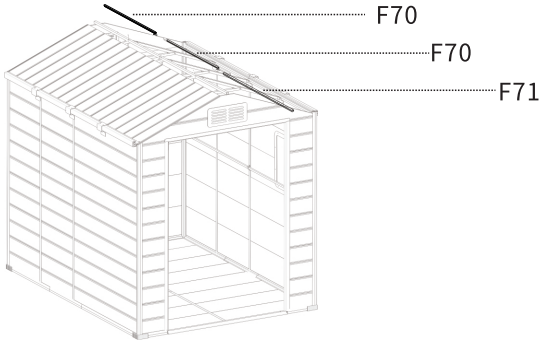


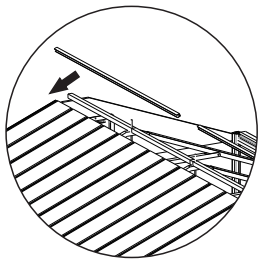


47

•F41（×2）

Cork Hammer Ladder

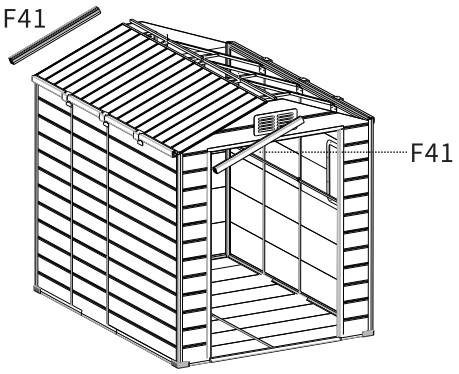


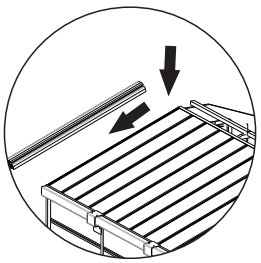


48

•E63(×8)

Cork Hammer Ladder

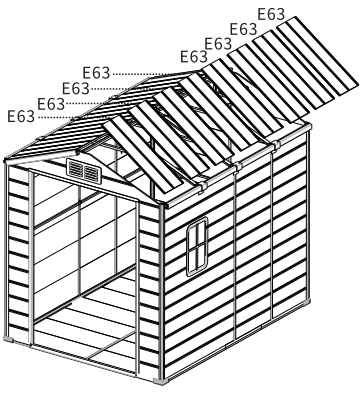


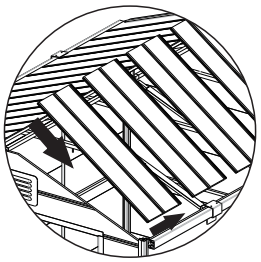


49

•F71 (×1) •F70 (×2)

Cork Hammer | Ladder

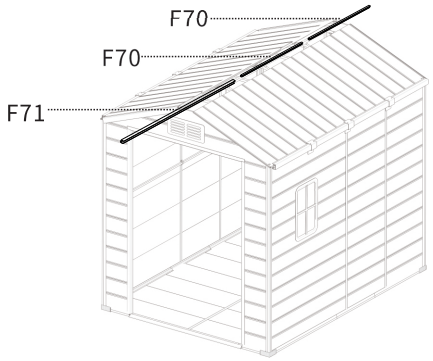


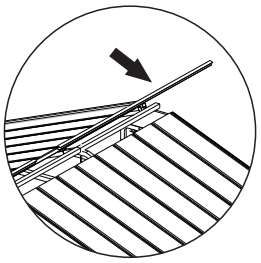


50

•F41 (×2)

Cork Hammer

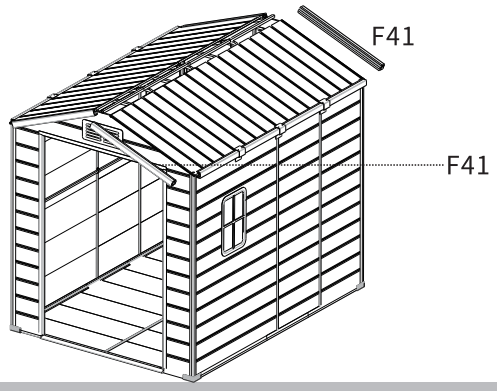


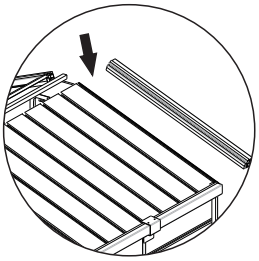


51

•J37 (×1) •J61 (×1)
•J46 (×1) •J19 (×2)

Cork Hammer | Ladder | Electric Drill | Small Wrench | Allen key

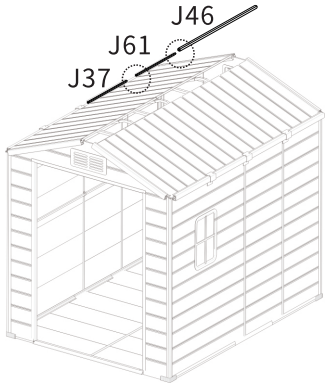


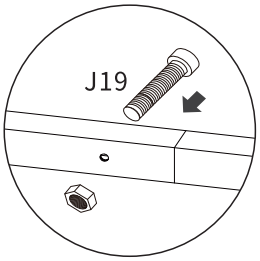


52


•J5 (×3)

Cork Hammer | Ladder

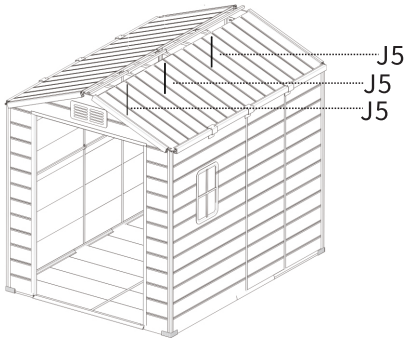

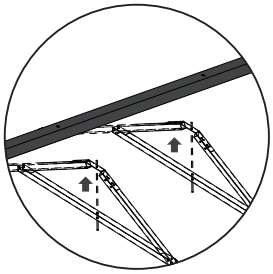



53



•G12(×2) •G10(×1)

Cork Hammer Ladder

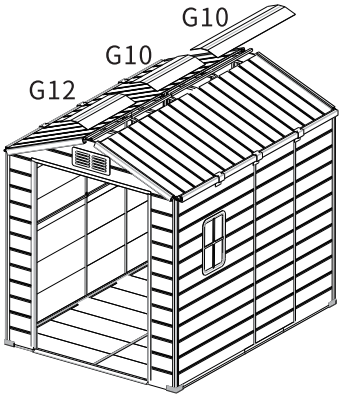

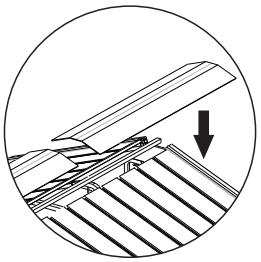



54



•G8(×2)

Cork Hammer Ladder

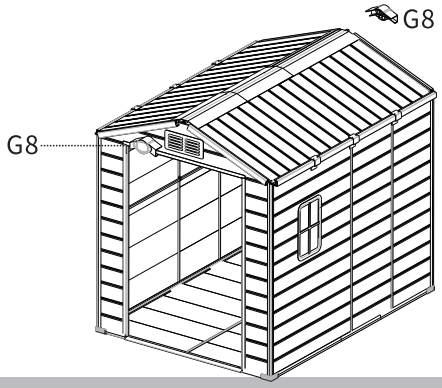

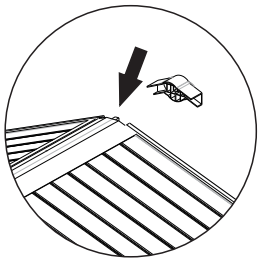



55



•G9(×4)

Cork Hammer

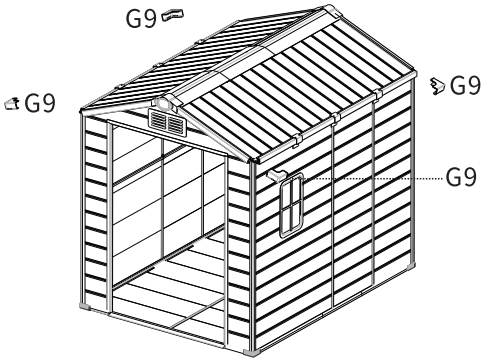

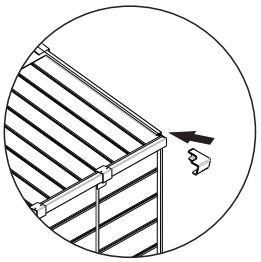


56




•J20(×42)

Cork Hammer Electric Drill

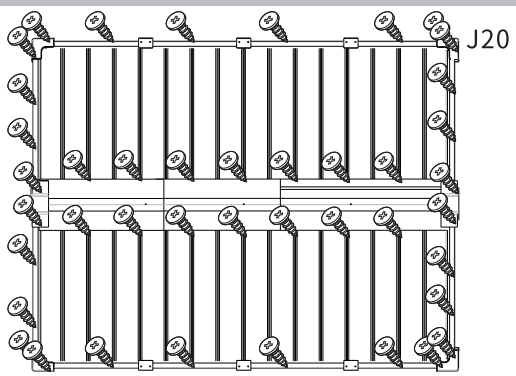


Install the door after securing the top panel screws.


57




•G25 (×2) •J39 (×1) •G15 (×3)
•J20 (×4) •J21 (×10)

Cork Hammer Electric Drill

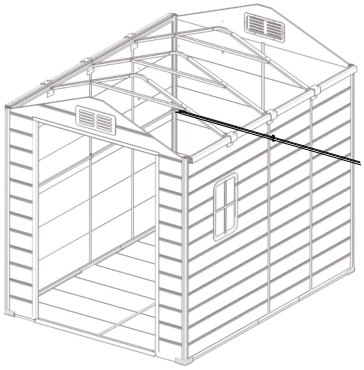

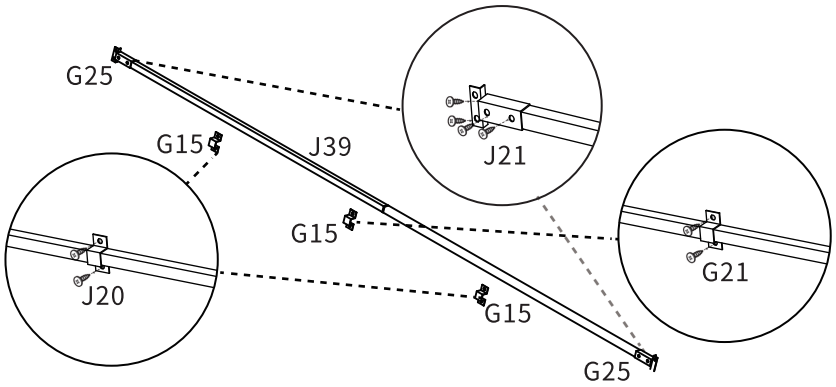



58




•E50(×2) •E55 (×10) •J60 (×16)
•H14(×4) •H17 (×4)


Cork Hammer Electric Drill

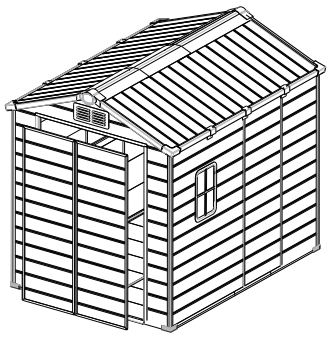

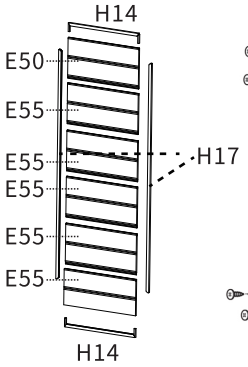

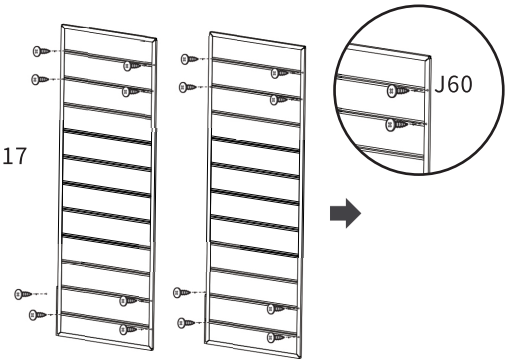



59




•J17 (×4) •J21 (×20)
•J20 (×8)

Cork Hammer Electric Drill

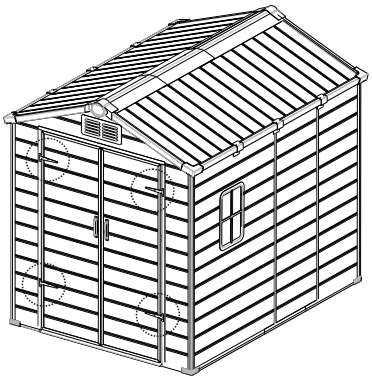

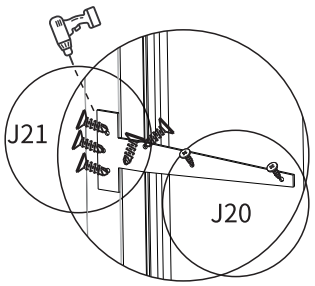



60




•J18 (×2) •J21 (×10)
•J16 (×2)

Electric Drill

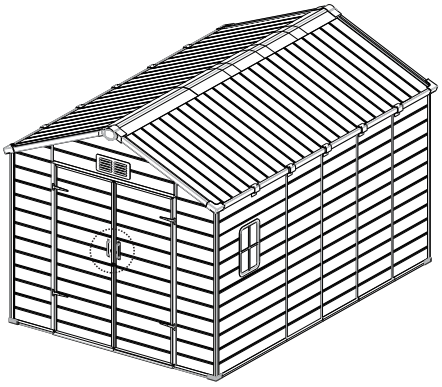

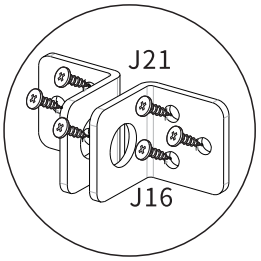

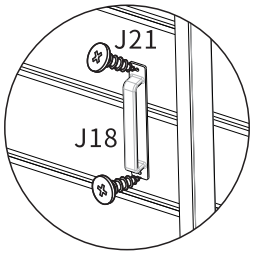

61

• J31 (×1) •J21 (×4)
• J32 (×1)


Electric Drill



62

•J59 (×1) •J20 (×2)

Electric Drill

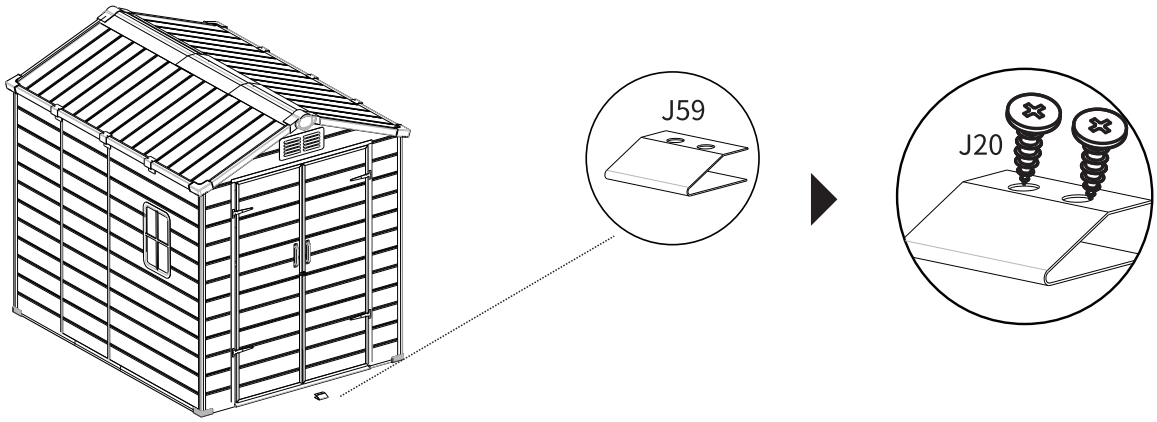


63


•J1 (×4) •J20 (×28) •D91 (×4) •D90 (×4)

Cork Hammer


Electric Drill

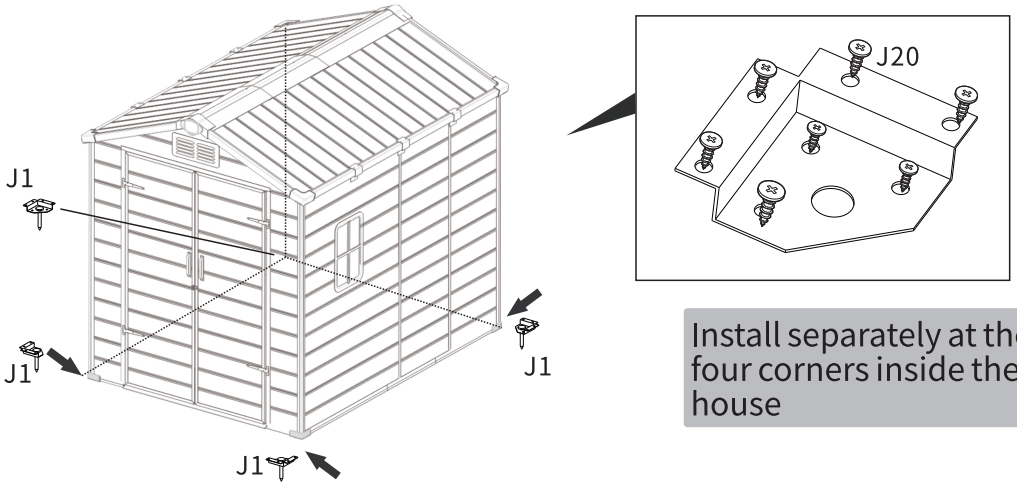


Install separately at the four corners inside the house

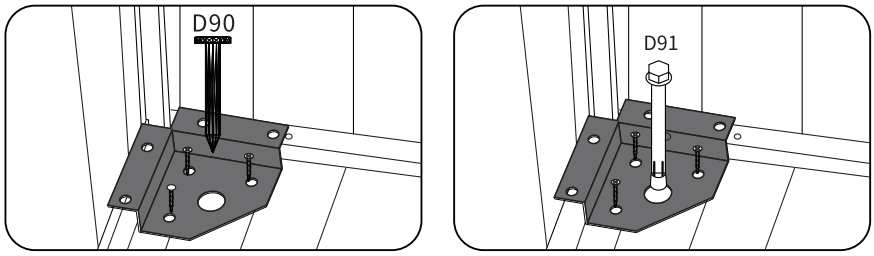

64 •J6 (×8) •J65 (×16) Cork Hammer Electric Drill Small Wrench Allen key Punch

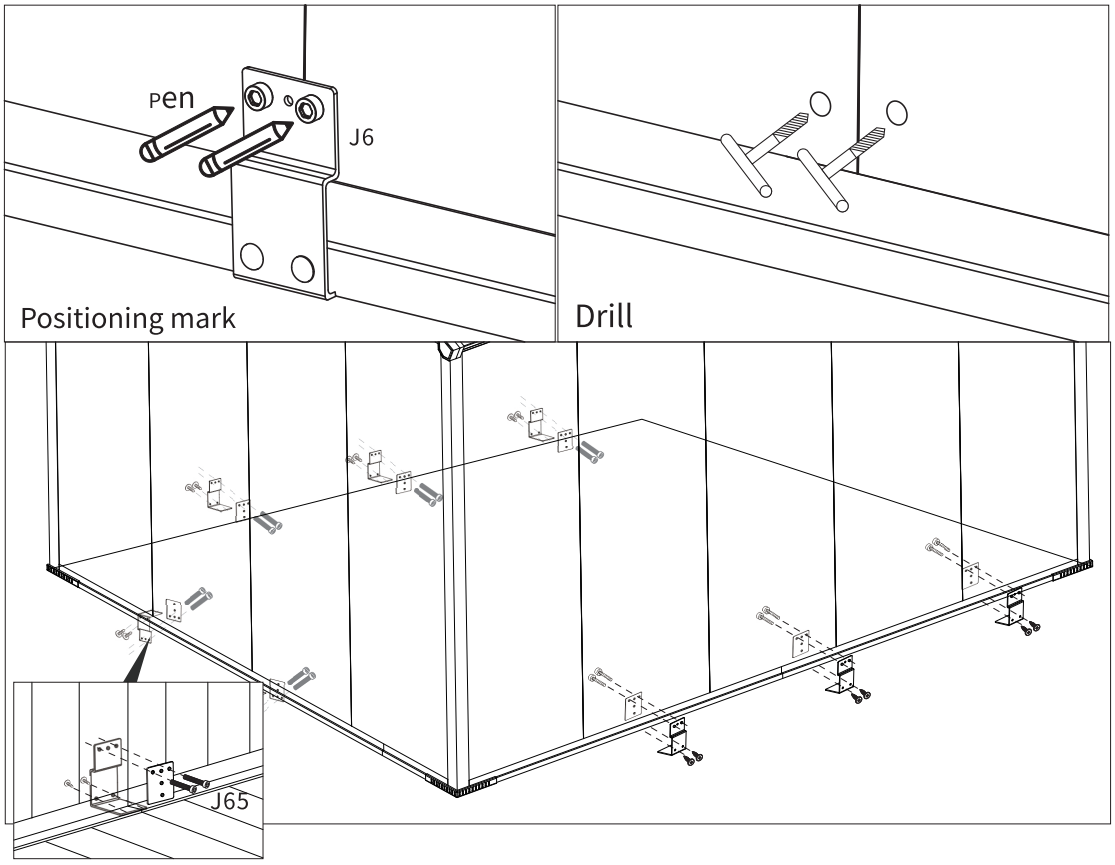

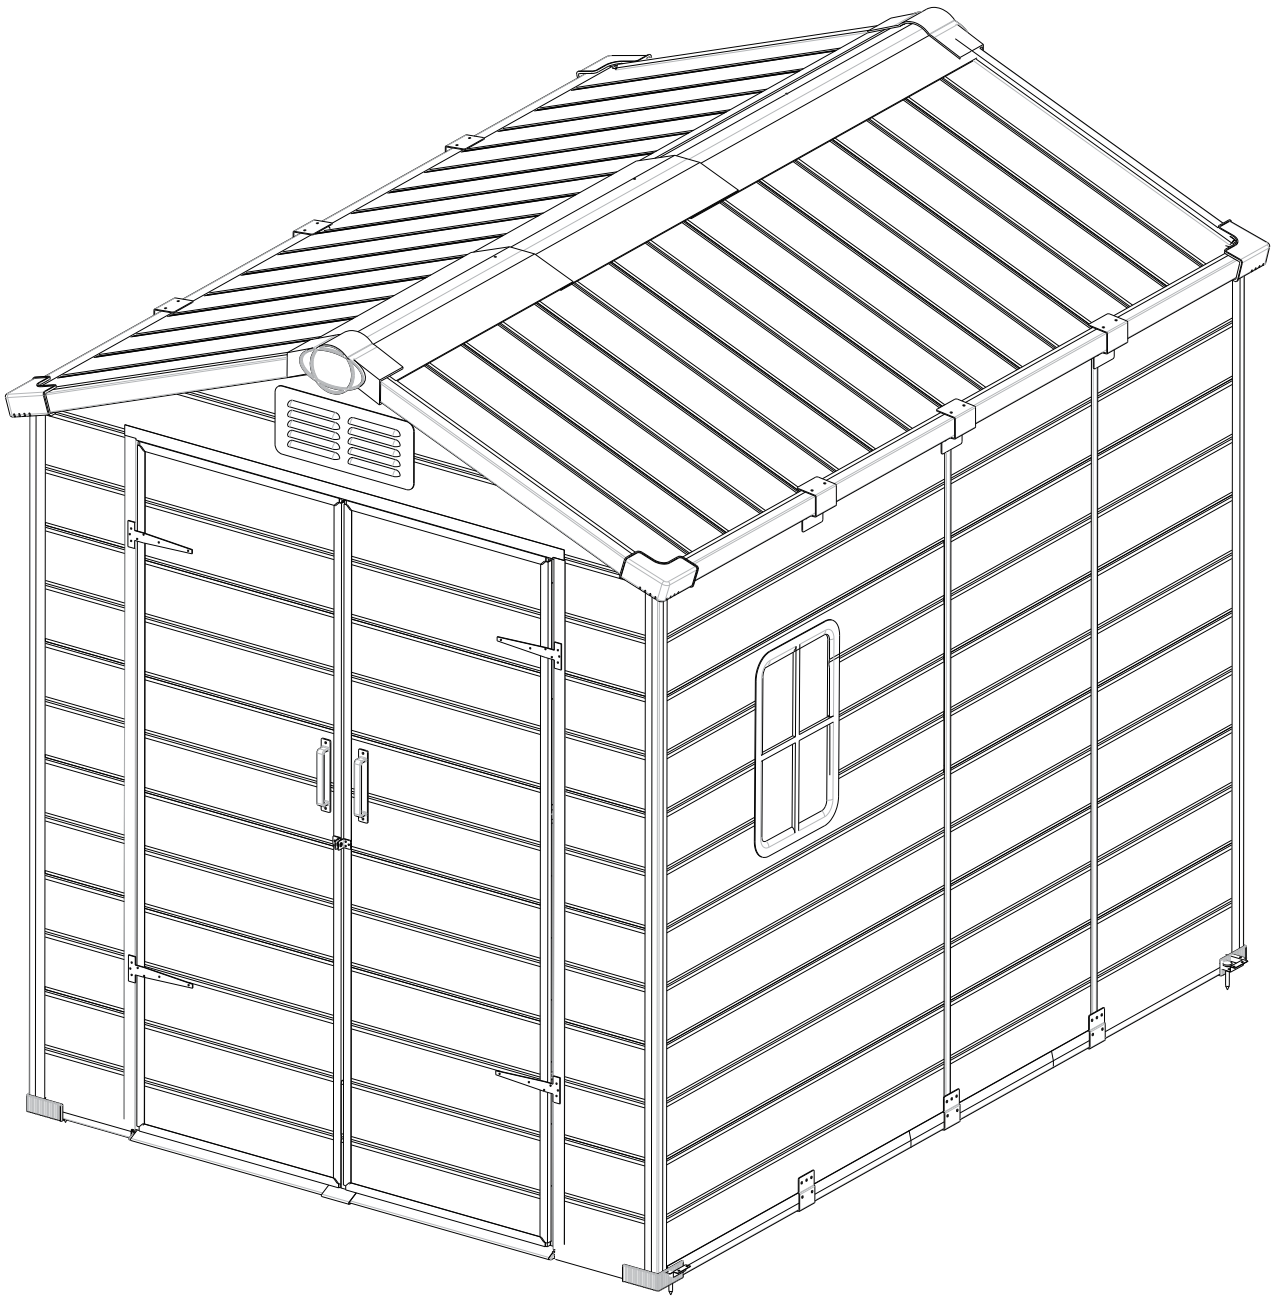

Bottom reinforcement,
effective wind resistance

Key Installation Precautions

Adhering to safety and preparation steps is crucial for a successful installation.

Personal Safety

Wear protective gloves during assembly.

Personnel & Assistance

Assembly requires 2–3 people. Ensure the work area is clear of children and pets during the process.

Foundation & Securing

The plastic shed must be anchored to a stable base (not included) to prevent damage.

Product Limitations

This structure is designed for storage purposes only—not for habitation. Do not store hot items (e.g., recently used grills) or volatile chemicals inside.

Maintenance After Installation

Proper maintenance will extend the life of your plastic tool shed.

Cleaning

Clean the shed with a cloth and water.

Debris Removal

Remove leaves from the roof promptly to prevent staining. In snowy conditions, clear snow regularly to avoid structural damage from heavy load.

General Care

Keep the door closed and locked when not in use to prevent wind damage.