


ASSEMBLY INSTRUCTIONS:

FULL PLATFORM BED

VERSION 1.1

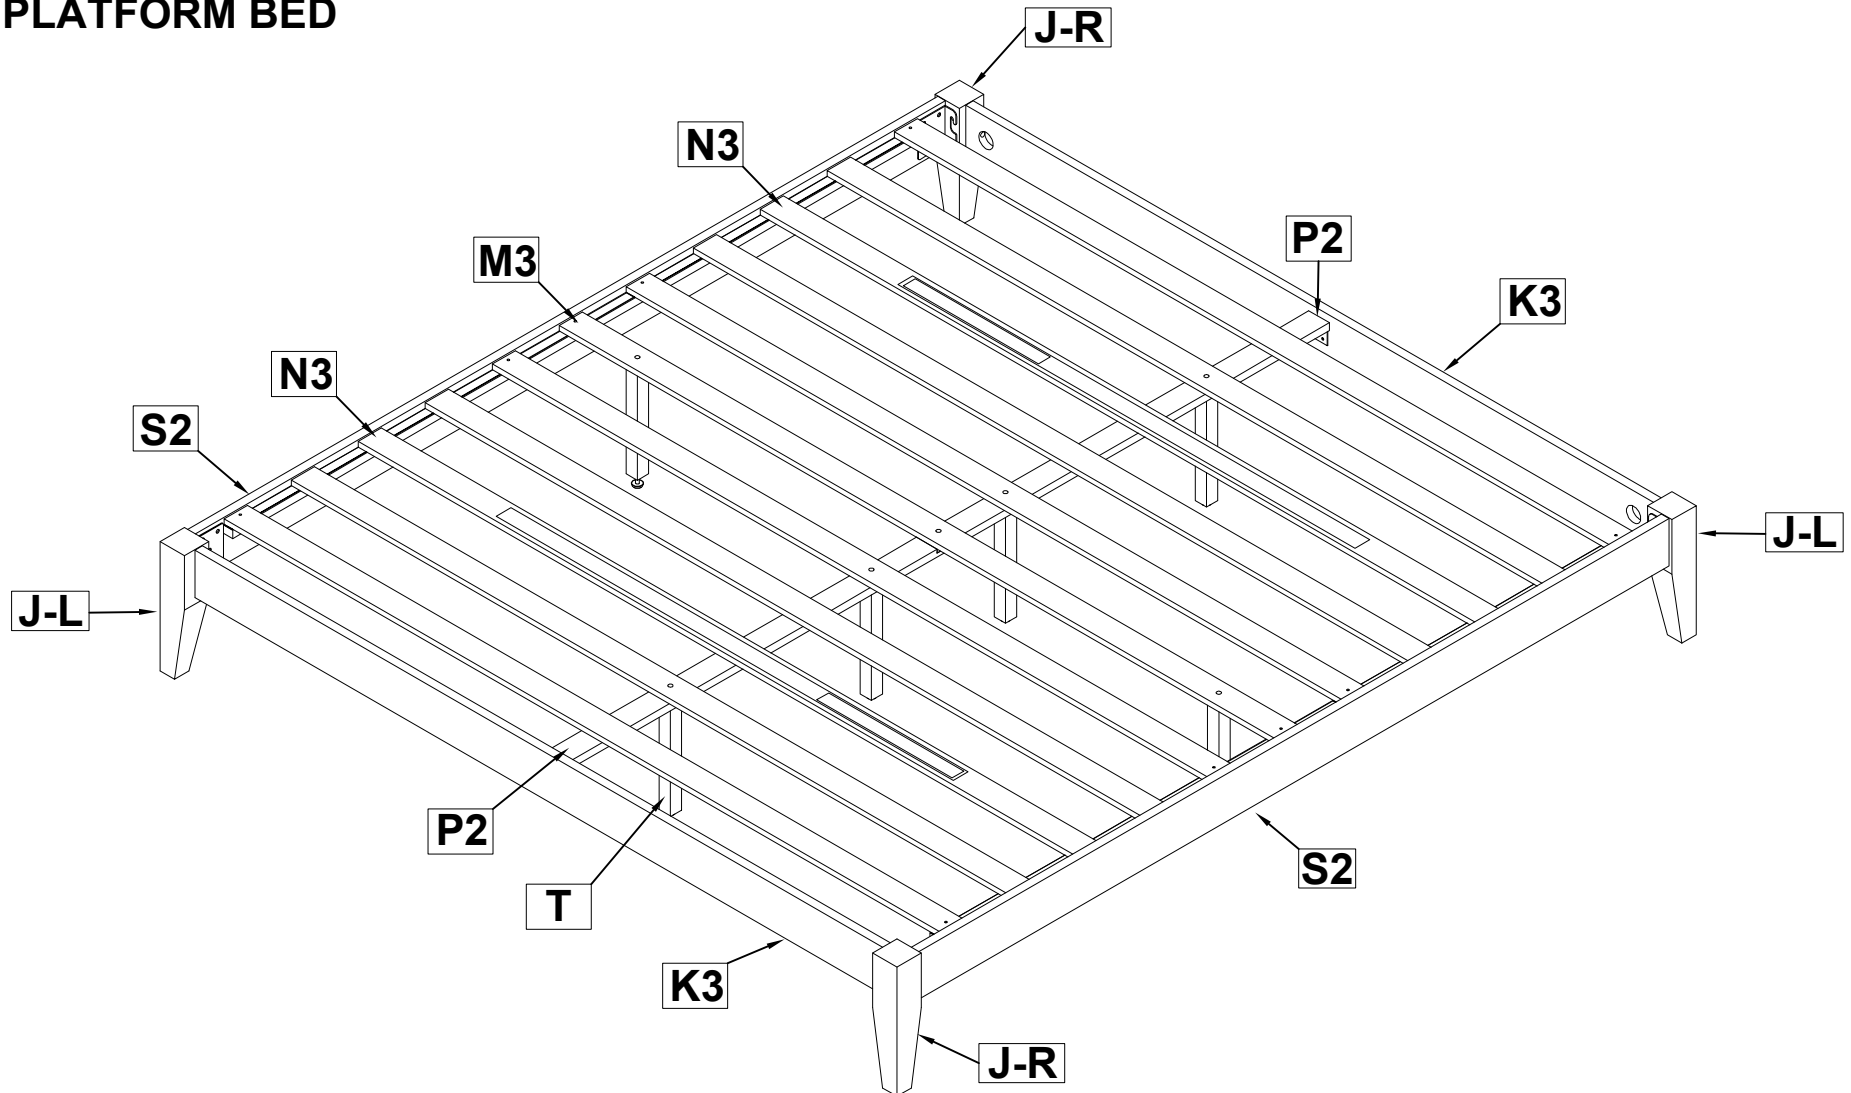

FULL PLATFORM BED

Page 2 of 11

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

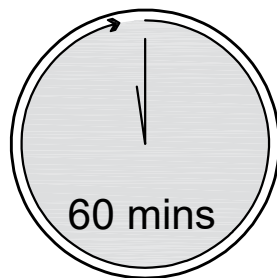

TIME

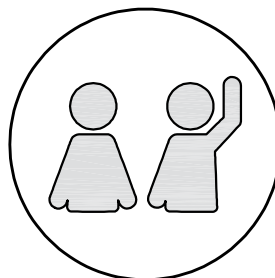

OF PEOPLE

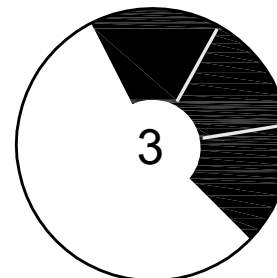

DIFFICULTY

Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.

FULL PLATFORM BED

Parts List


CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
K3	Footboard	2 pcs	P2	Middle Cross Slats	2 pcs
S2	Side Rails	2 pcs	N3	Slats	2 rolls
J-L	Left Leg	2 pcs	M3	Slat	1 pc
J-R	Right Leg	2 pcs	T	Support Legs	6 pcs

FULL PLATFORM BED


Page 4 of 11

Hardware List


CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
1	Dowel Ø10x1-5/8"	9 pcs	9	Allen Key	1 pc
2	Bolt Ø5/16"x2"	6 pcs	10	Screw #8x1/2"	8 pcs
3	Bolt Ø5/16"x1"	8 pcs	11	Screw #8x1-1/4"	10 pcs
4	Bolt Ø1/4"x1"	1 pc	12	Bolt Ø5/16"x3"	4 pcs
5	Nut Ø1/4"	1 pc	13	Curved Washer Ø5/16"	4 pcs
6	Spring Washer Ø5/16"	12 pcs	14	Nut Ø5/16"	4 pcs
7	Flat Washer Ø5/16"x3/4"	14 pcs	15	Wrench	1 pc
8	L Bracket	2 pcs	16	Philips Head Screwdriver	1 pc

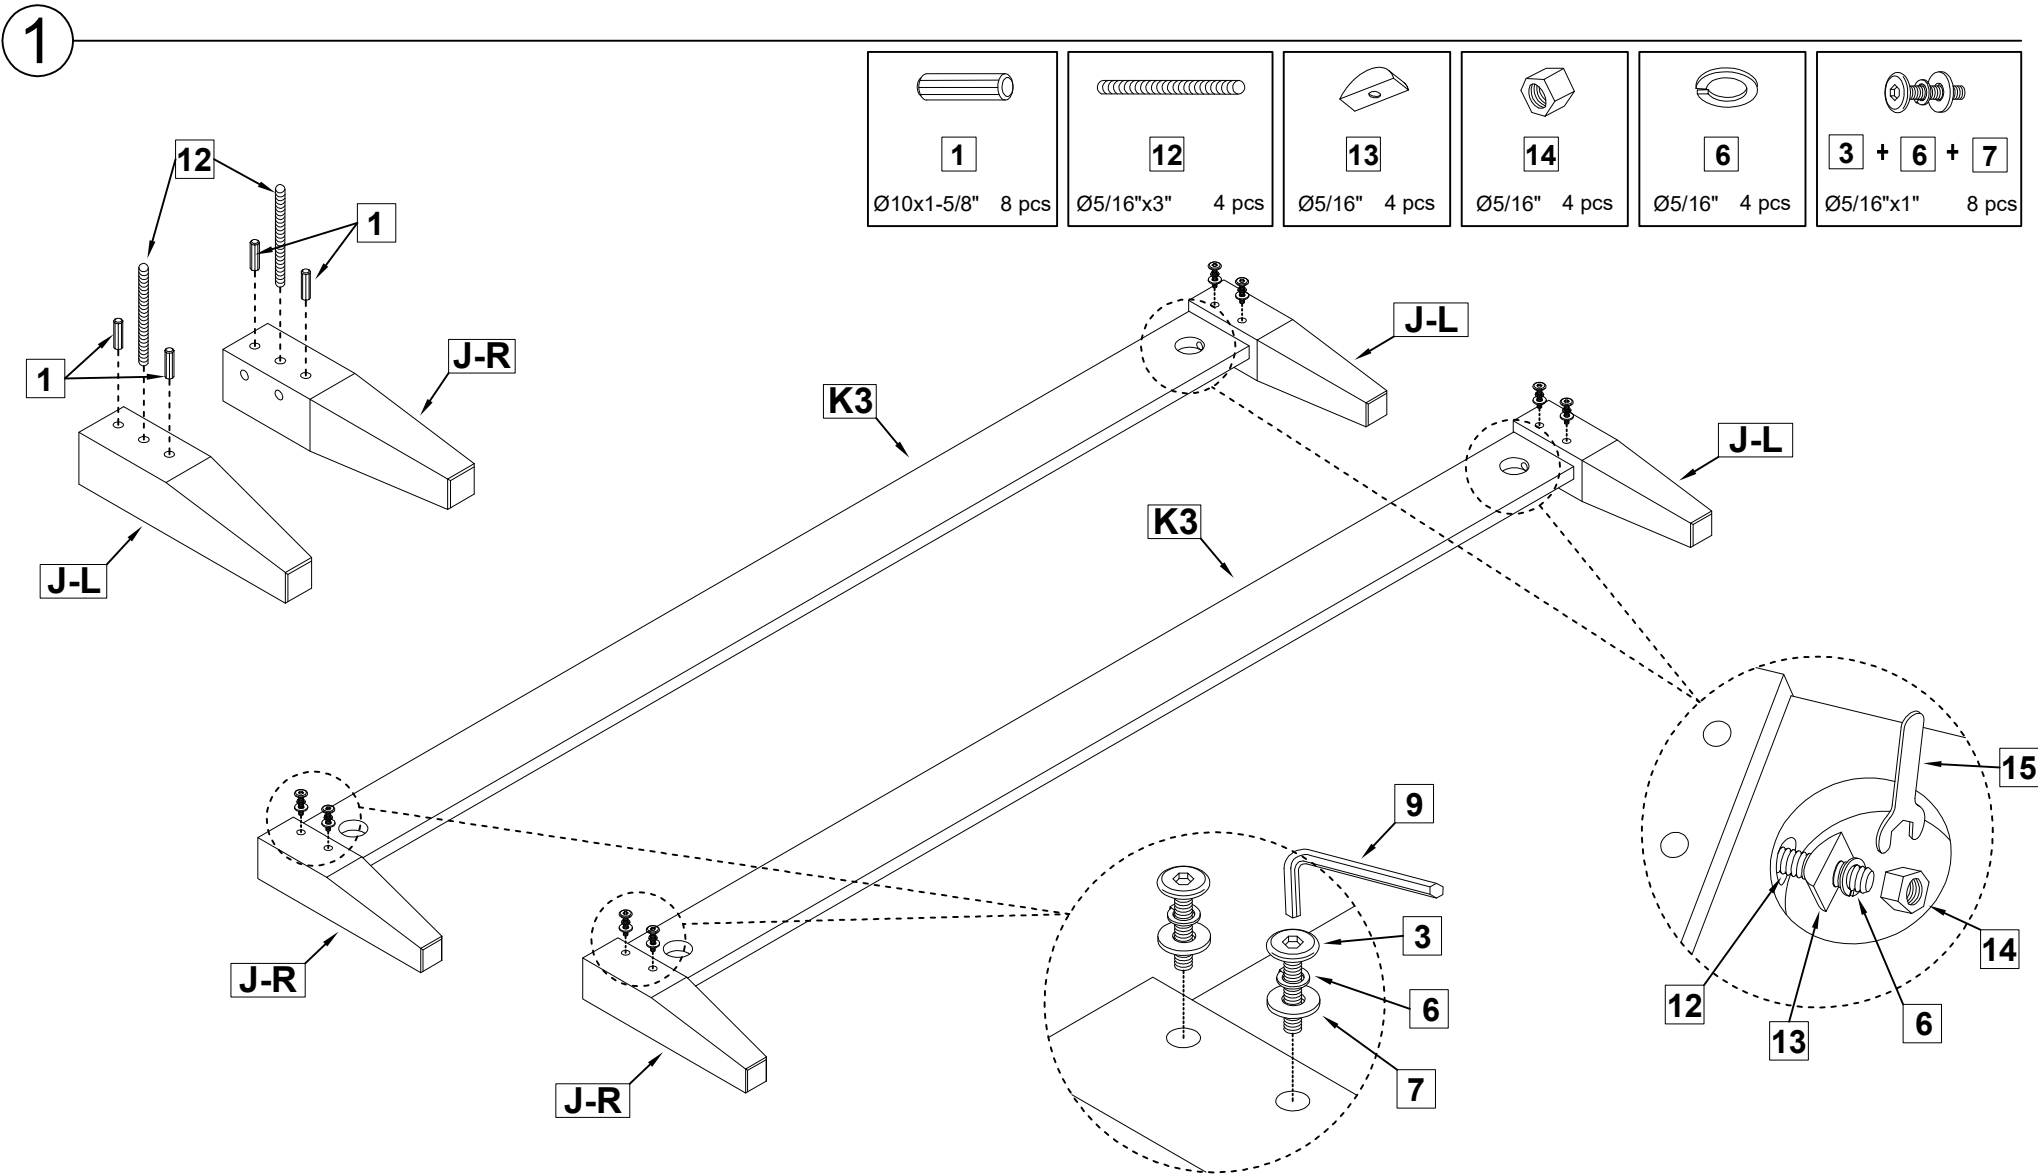







2

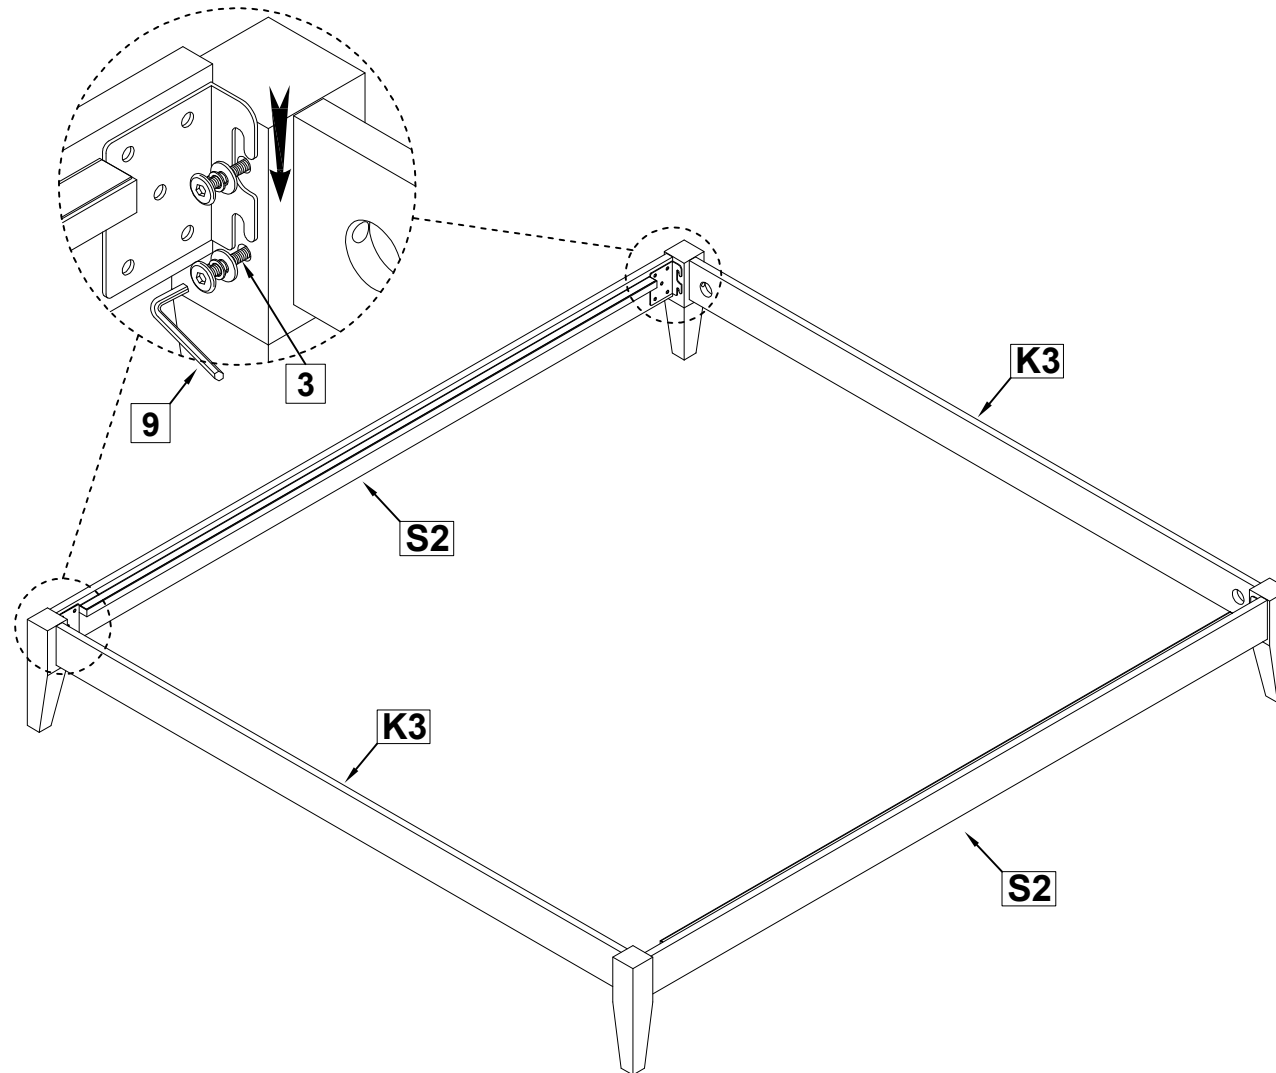

3

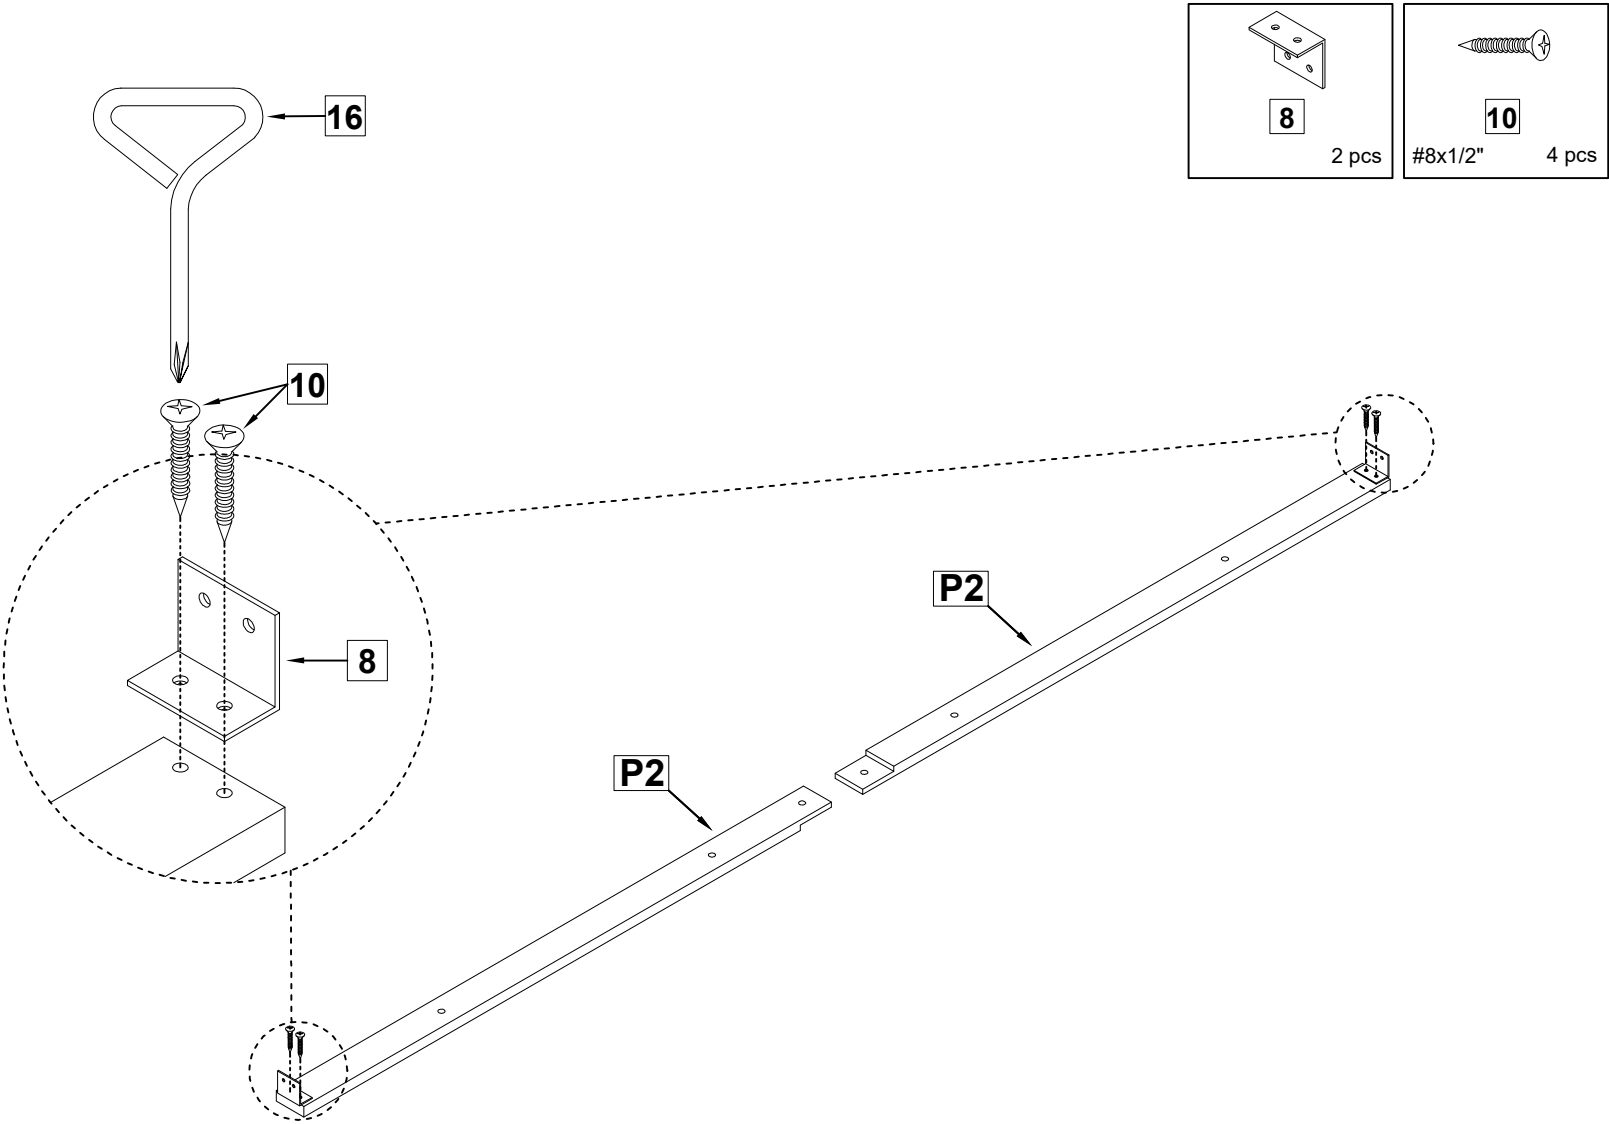


4

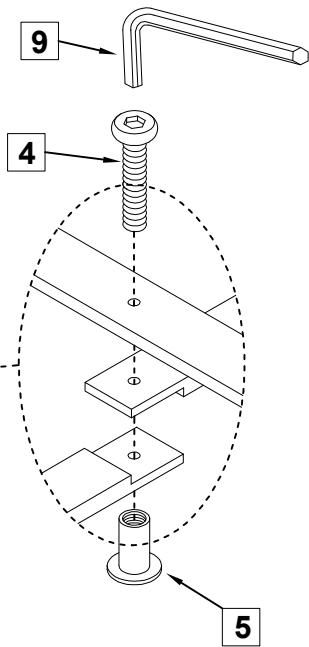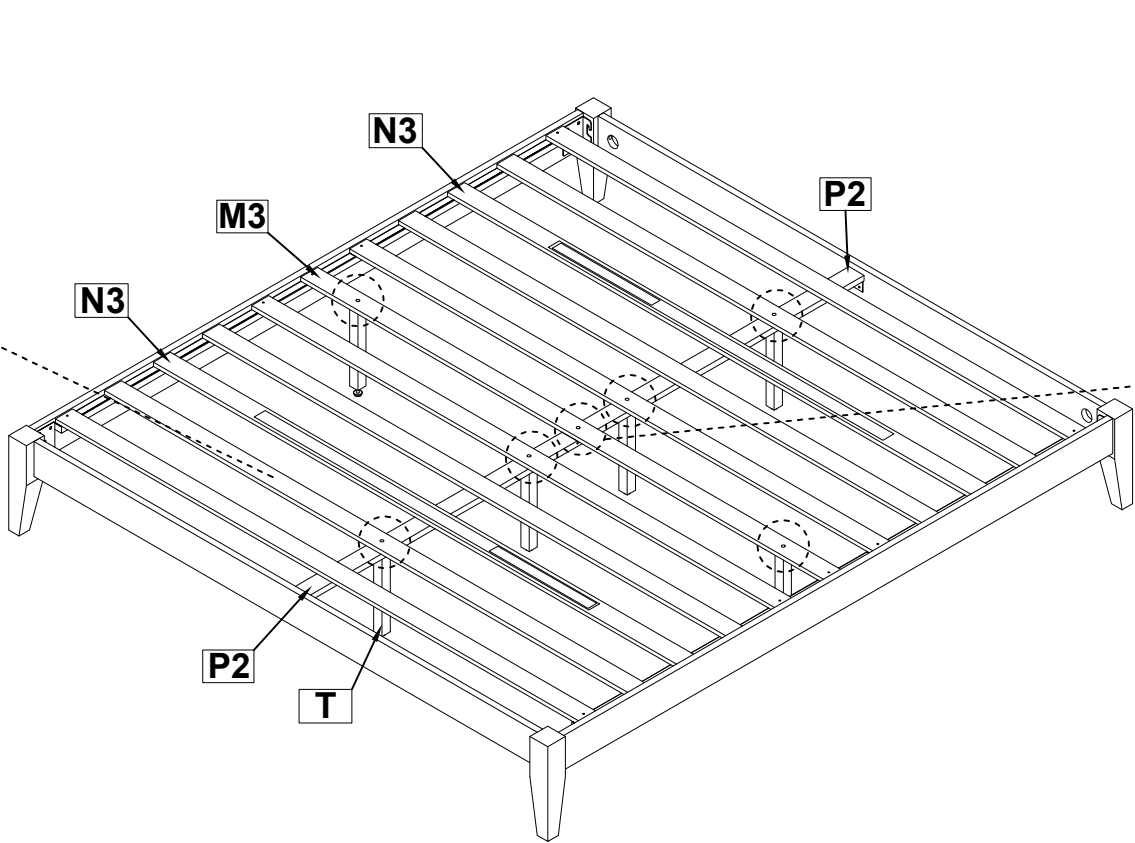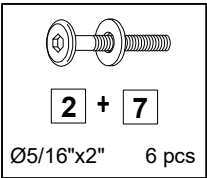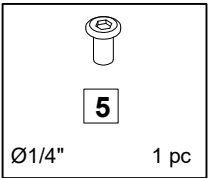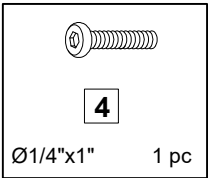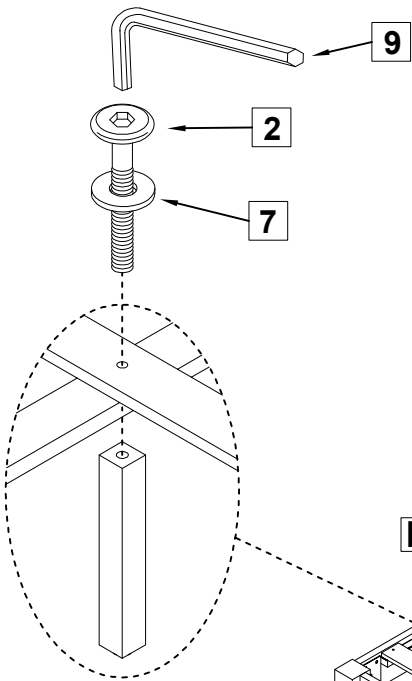


5

After the slat system is assembled, place the slats into the frame of the bed as shown, and velcro the slats to the cleat of side rail as shown below.

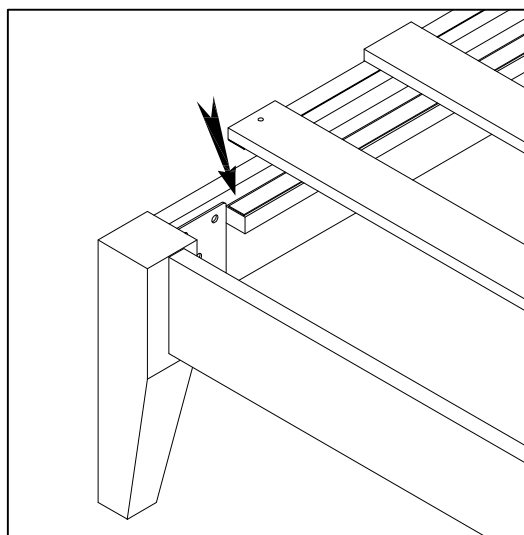

Velcro the ends of slat to the cleats of side rail

6



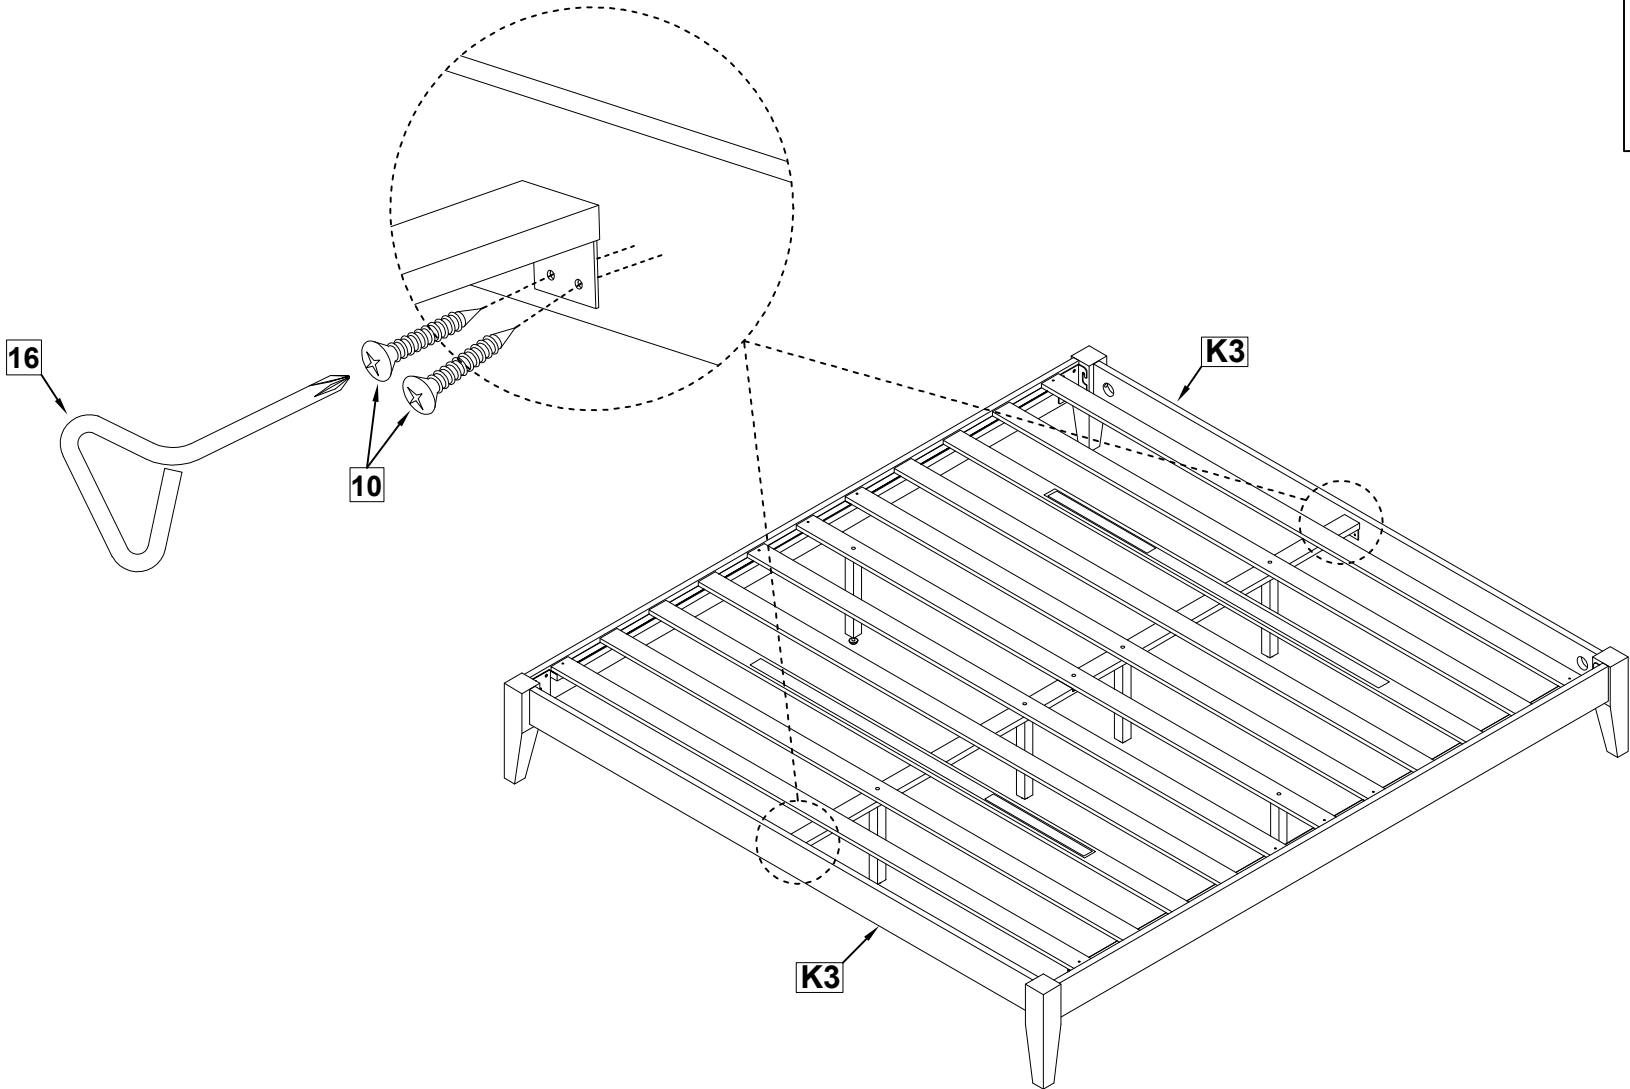




10

#8x1/2" 4 pcs


7

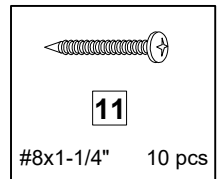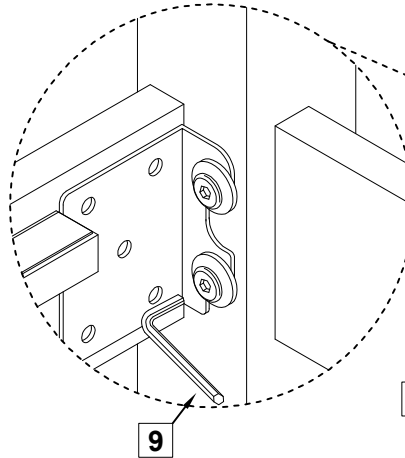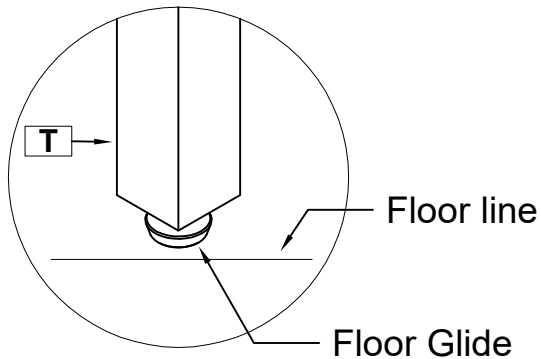

NOTE:

The center support leg glide sits approximately 1/4" off of the floor. The glide will usually touch the floor after a mattress is placed on the bedframe.

Do not place a mattress on bedframe until it is fully assembled and tightened. The bedframe should be located in your desired location. Sliding the bed with weight upon it can compromise the integrity of the center support legs.

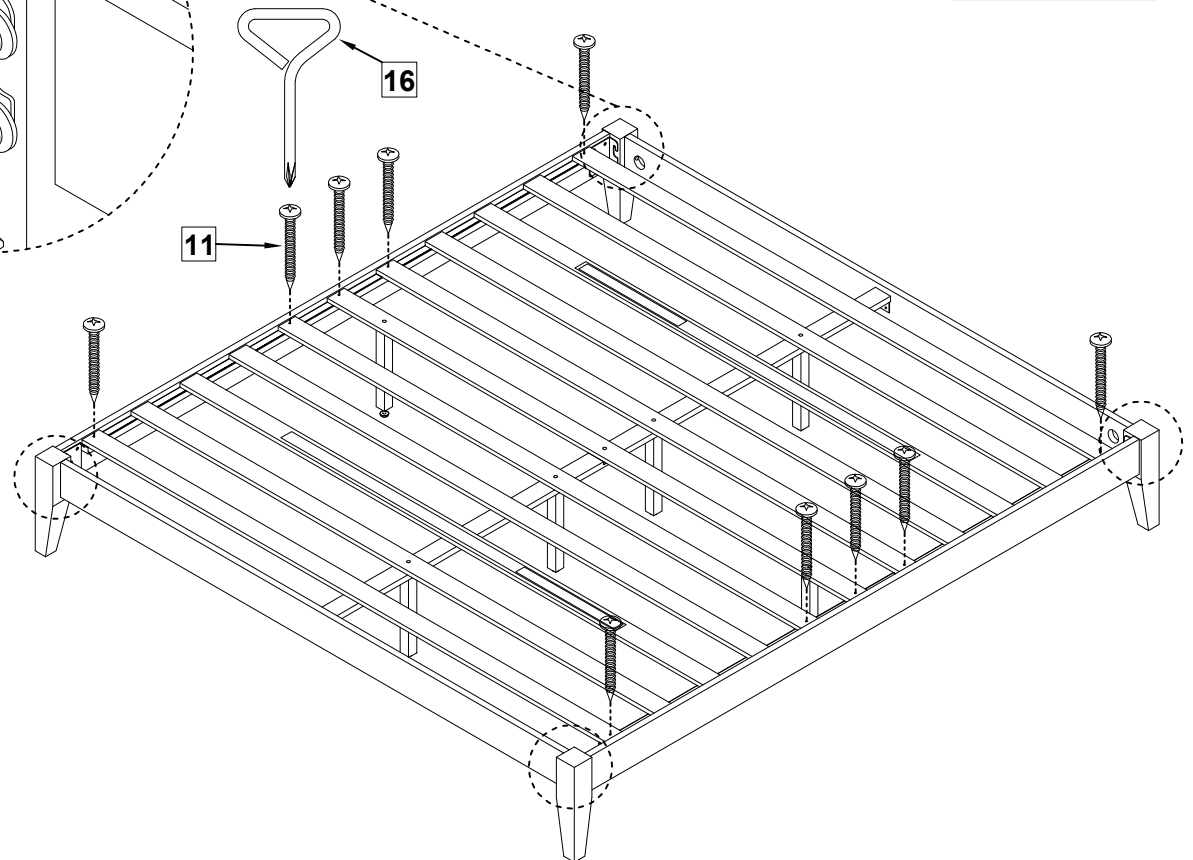

You're all finished! Sweet dreams!