Assembly Instructions


Caution: You must read this before you proceed

Please look in the magic tape pouch for hardware packs and legs

Care & Maintenance

16





- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside . For indoor use only.
- Stains may be removed with mild soap solution and damp cloth.
- Children should not climb or jump on the furniture.
 - Dust and pick-up spills using a clean, non-colored, lint-free cloth.




Part List				
Label	Picture	Description	QTY	
А		Backrest	1	
В		Left Armrest	1	
С		Right Armrest	1	
D		Seat	1	
E		Front Rail	1	
F		Seat Cushion	3	
G		Back Cushion	3	
Н		Pillow	3	
I		Foot Frame(Long)	2	
J	(E 9 9	Foot Frame(Short)	2	
К		Brace	4	
L		Leg	4	

Hardware List				
Label	Picture	Description	QTY	
1)	©	Bolt(M6*50MM)	7	
2	©	Bolt(M8*30MM)	9	
3	()	Bolt(M8*60MM)	5	
4		Screw	7	
(5)	9	Flat Washer(M6*16mm)	7	
6	0	Flat Washer(M8*14mm)	5	
7	ပ	Spring Washer(M8)	5	
8		Allen Wrench(S4)	1	
9		Allen Wrench(S5)	1	
10		Screwdriver	1	
(1)	©	Pre installed screw (M8*25mm)	1	

Assembly Preparation

Before Beginning Assembly:

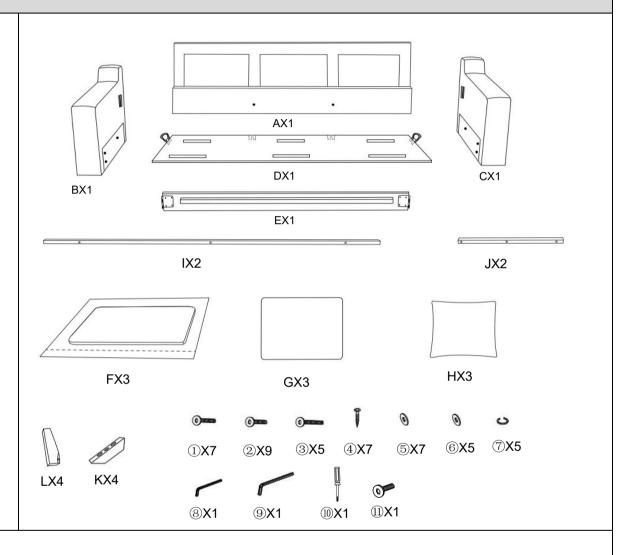



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

OVERVIEW

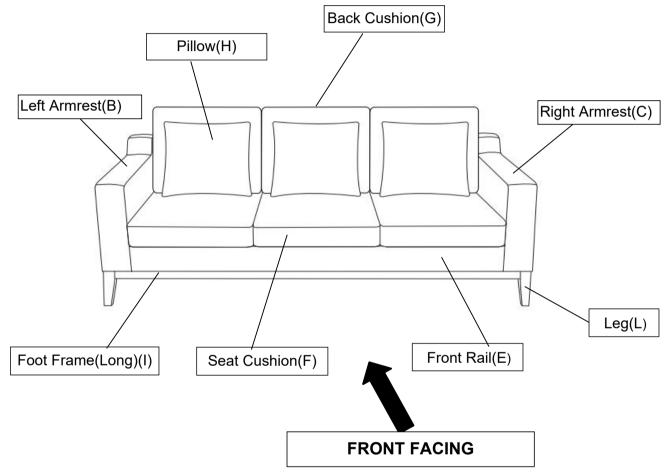


This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

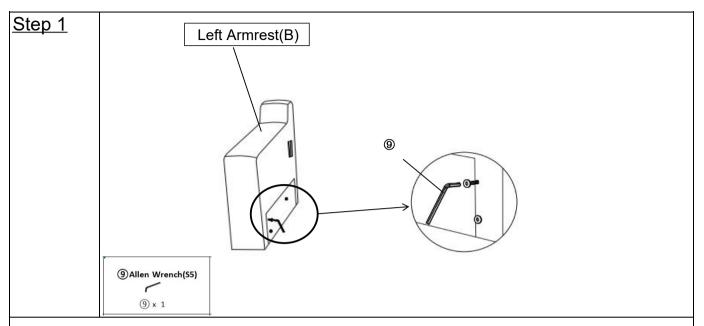

Open the carton and place all the parts on a clean, non-marring surface. Loosen the 3 bolts in Left Armrest(B) around half inch by Allen Wrench((9)). Repeat the same step to loosen 3 bolts in Right Armrest(C).

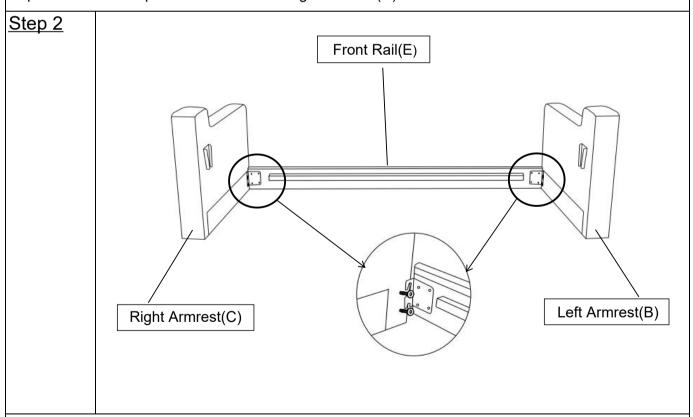


With the assistance of your dault partner, slide the hook in the eng of Front Rail(E) into the bolts on the Left Armrest(B) and Right Armrest(C), as shown above.

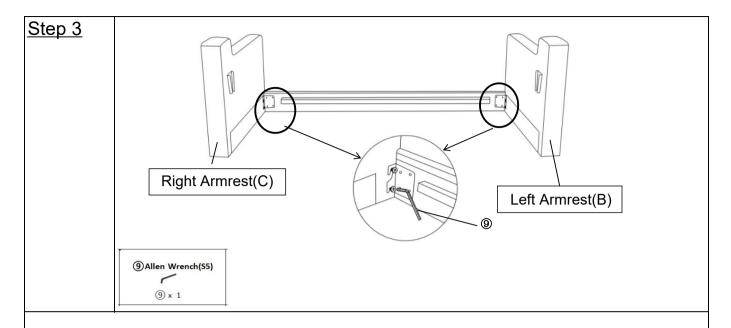


After step 2, tighten 4 Bolts on the side of Left Armrest(B) and Right Armrest(C) by Allen Wrench(③) as pictured above.

Tighten the Bolts fully in a sequential manner.

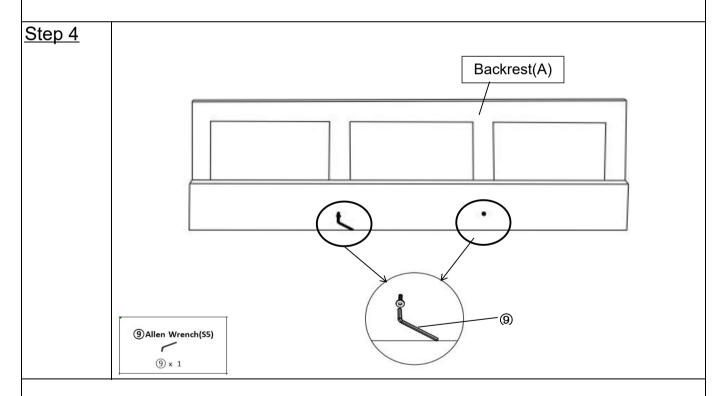

Loosen the 2 bolts in Backrest (A) around half inch by Allen Wrench((9)) as shown above.

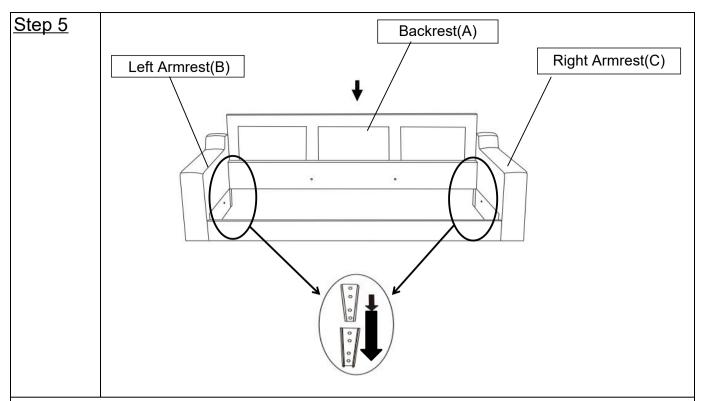

Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture.


Repeat the same process with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C).


Assistance from an adult partner is necessary for this assembly process.

During this assembly process - do exercise caution. You may need to use your hand to press down and or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

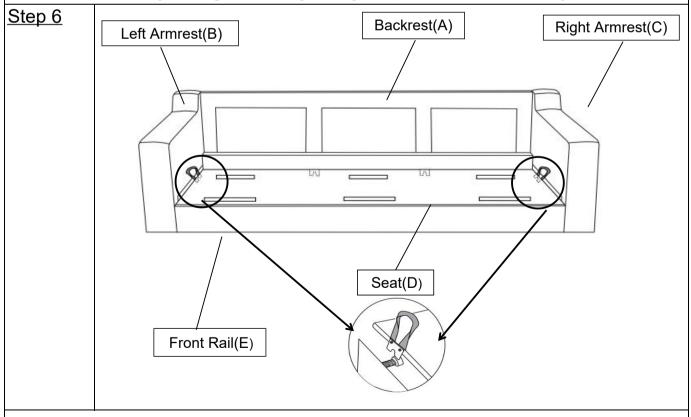


With the assistance of your adult partner, lift the rope on the two sides of Seat(D) by hand. Put the Seat(D) on the wood bar of the Front Rail(E) and then slowly place it down as shown above. **Note:All the u-shaped iron sheet need clamped to the bolt.**

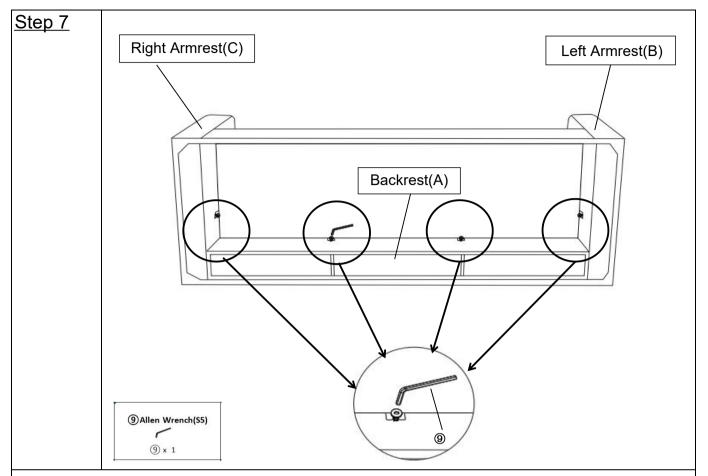


Tilt and lay the sofa onto a flat surface.

Tighten the 6 Bolts in the bottom of Left Armrest(B) and Right Armrest(C) and Backrest (A) by Allen Wrench(9) as pictured above.


Tighten the Bolts fully in a sequential manner.

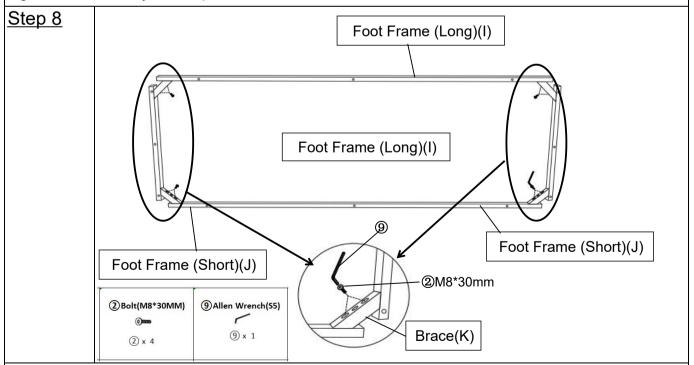


Connect the Foot Frame (Long)(I) and Foot Frame (Short)(J) with Brace(K) using 2 bolts (M8*30mm)(2) and tighten with Allen Wrench(S5)((9)), as shown ablve.

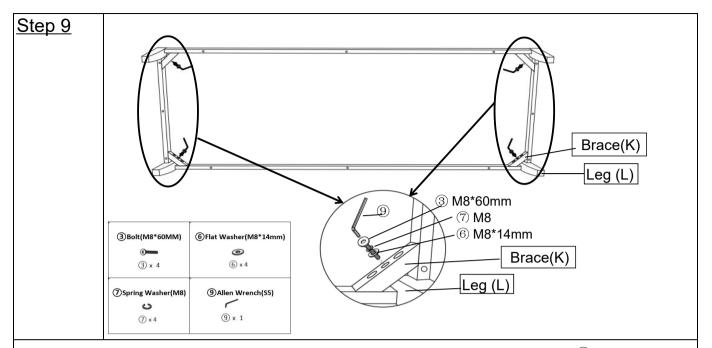


Install the Leg(L) to the Brace(K) at the bottom of the sofa using the Bolt (M8*60mm)(3), Flat Washer(M8*14mm)(6), Spring Washer(M8)(7) with Allen Wrench(9), as shown above. Tighten the Bolts fully in a sequential manner.

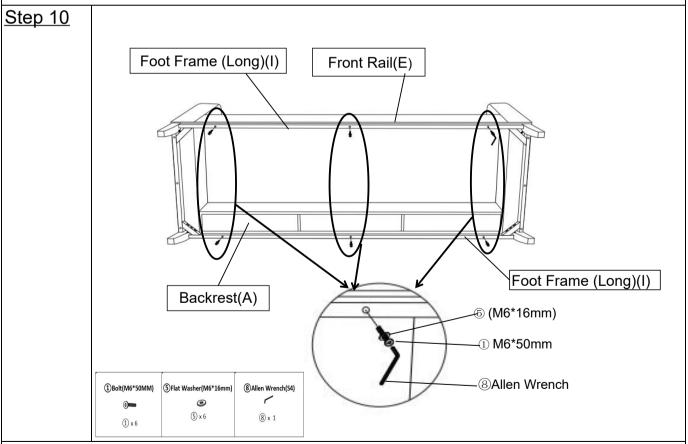

Attach 2 Foot Frame (Long)(I) to the Front Rail(E) and Backrest(A) using Bolts (M6*50mm)(\mathbb{Q}), Flat Washer(M6*16mm)(\mathbb{Q}) with Allen Wrench(\mathbb{Q}) as shown above.

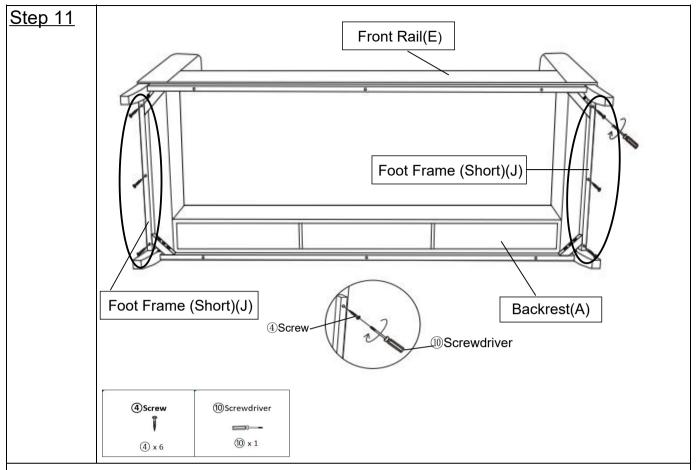


Attach 2 Foot Frame (Short)(J) to the Front Rail(E) and Backrest(A) using Screw (④) by Screwdriver(⑩) as shown above.

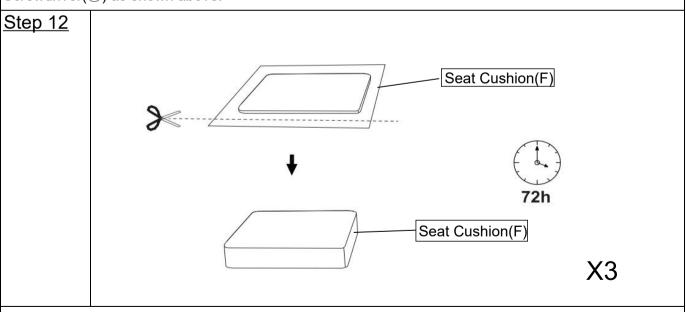


Open the compression Seat cushion (F) as shown.


Please be patient and wait for the cushion to return to its fluffy state, it might take up to 72 hours.

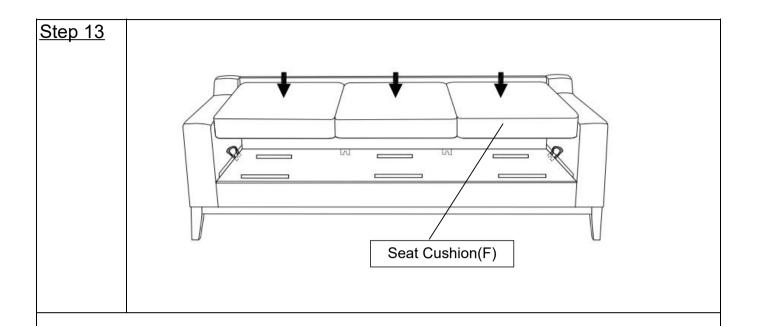


Put 3 pcs Seat Cushions(F) on the sofa.

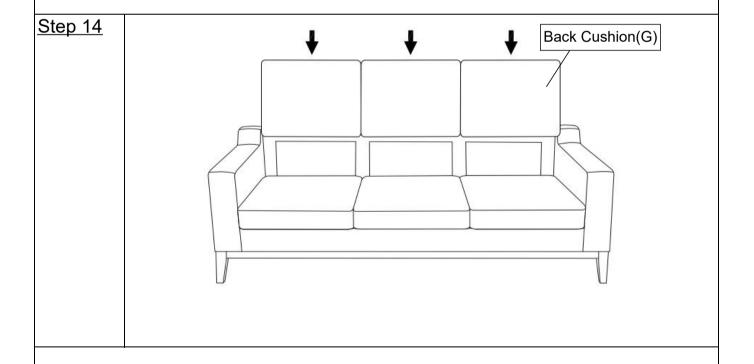

Put 3 pcs Back Cushions(G) on the sofa.

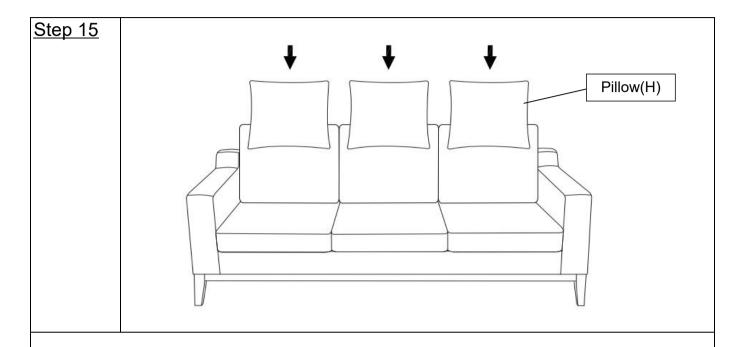

Put 3 pcs Pillows(H) on the sofa.

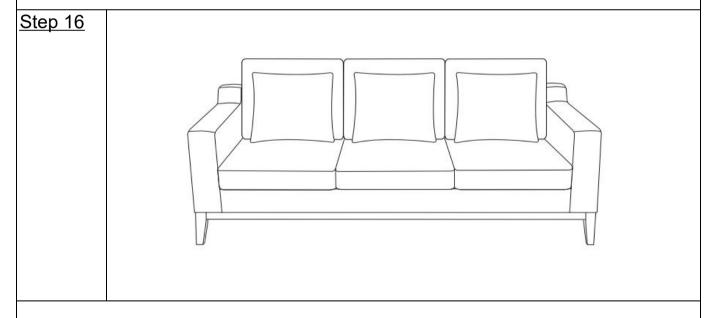

Your Sofa is ready for use.

This Sofa can only be used on a flat, level surface.