



HOW TO MEASURE - ROLLER SHADES

INSIDE MOUNT

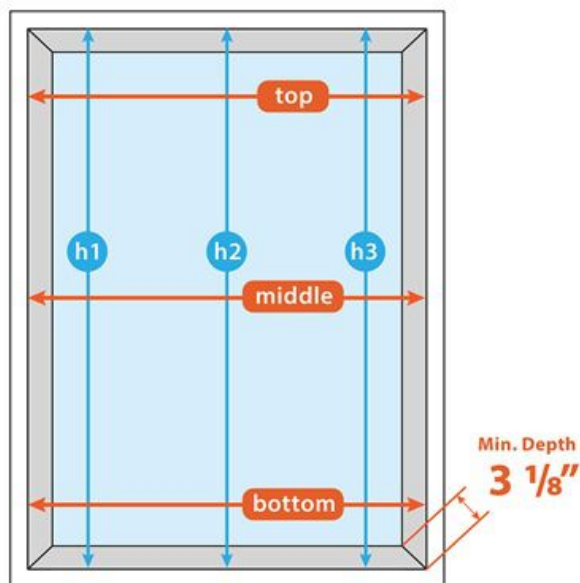

- **Width:**
Step 1: Measure the width at the top, middle, and bottom inside of your window opening. Use the **smallest** measurement.
Step 2: **Subtract 1/4** inch from that number.
Step 3: Round **down to the nearest size** when ordering.
- **Height:** **Largest** of inside framed height (h1, h2, h3). Choose the height that matches or exceeds the window length.
- **Depth:** **3 1/8\"/>**

OUTSIDE MOUNT

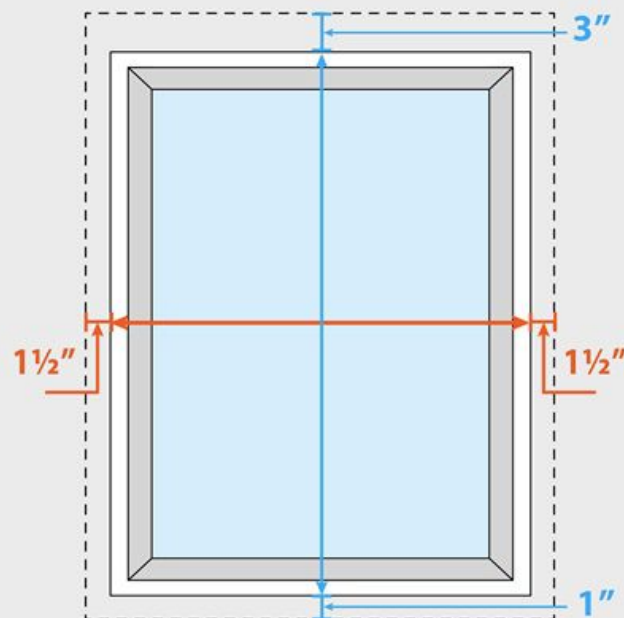

- **Width:** Include window trim and **add 1 1/2\"/>**
- **Height:** Include window trim and **add 3\"/>**
- **Minimum 3\"/>**

IMPORTANT

We ship exact width measurement.
If you order 20\"/>