

TARRY SPINDLE LEG WOOD DRESSER

DESIGN # SFV1332

Assembly Instructions



SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new dresser. You won't need any additional tools.

Parts List


A x 1
TOP PANEL



B x 1
LEFT ASSEMBLY



C x 1
RIGHT ASSEMBLY



D x 1
DIVIDER




E x 1
TOP RAIL




F x 2
FRONT RAIL




G x 1
BOTTOM ASSEMBLY



H x 1
UPPER BACK PANEL



I x 1
LOWER BACK PANEL



J x 2
SMALL DRAWER FRONT



K x 2
SMALL DRAWER LEFT



L x 2
SMALL DRAWER RIGHT



M x 2
SMALL DRAWER BACK




N x 6
DRAWER BASE



O x 6
DRAWER SUPPORT



P x 4
LARGE DRAWER FRONT




Q x 4
LARGE DRAWER LEFT



R x 4
LARGE DRAWER RIGHT



S x 4
LARGE DRAWER BACK




Hardware List

HW1 x 2
ROUND HEAD SCREW 4x1x32 mm




HW2 x 2
ROUND HEAD SCREW 4x1x25 mm



HW3 x 66
FLAT HEAD SCREW 3x1x32 mm



HW4 x 24
FLAT HEAD SCREW 3x1x19 mm



HW5 x 39
CAMBOLT




HW6 x 39
CAMLOCK



HW7 x 8
HANDLE BOLT




HW8 x 8
HANDLE



HW9 x 33
DOWEL




Attach Cambolts (HW5) to Top Panel (A), Left and Right Assemblies (B) and (C), Bottom Assembly (G), Upper and Lower Back Panels (H) and (I).

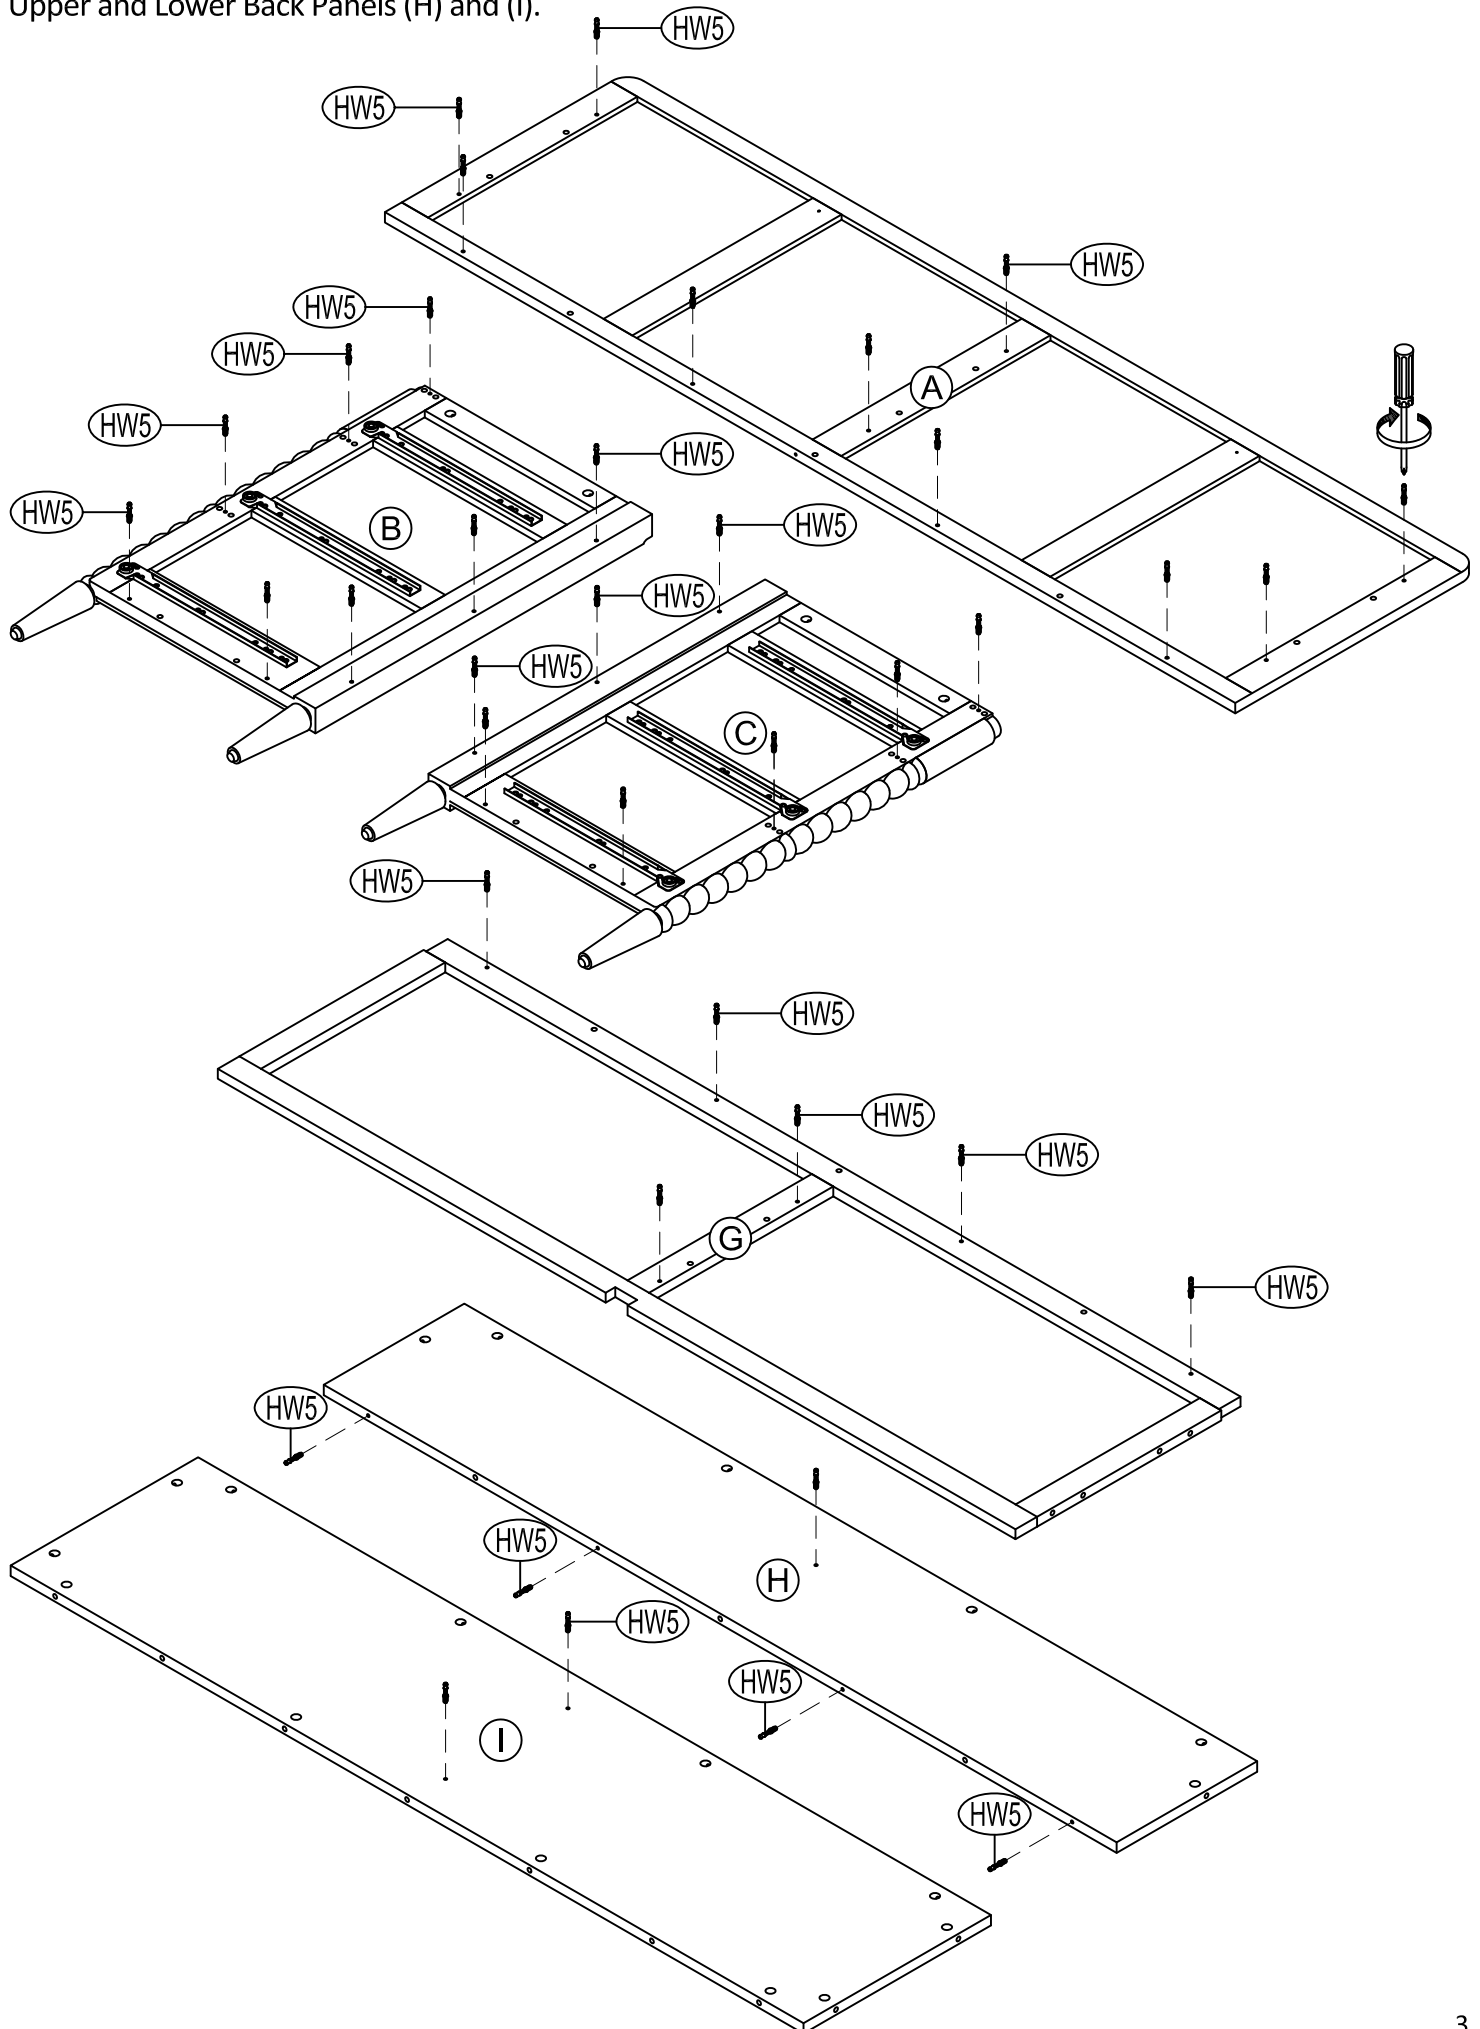


2

Join Upper and Lower Back Panels (H) and (I) using Camlocks (HW6) and Dowels (HW9).

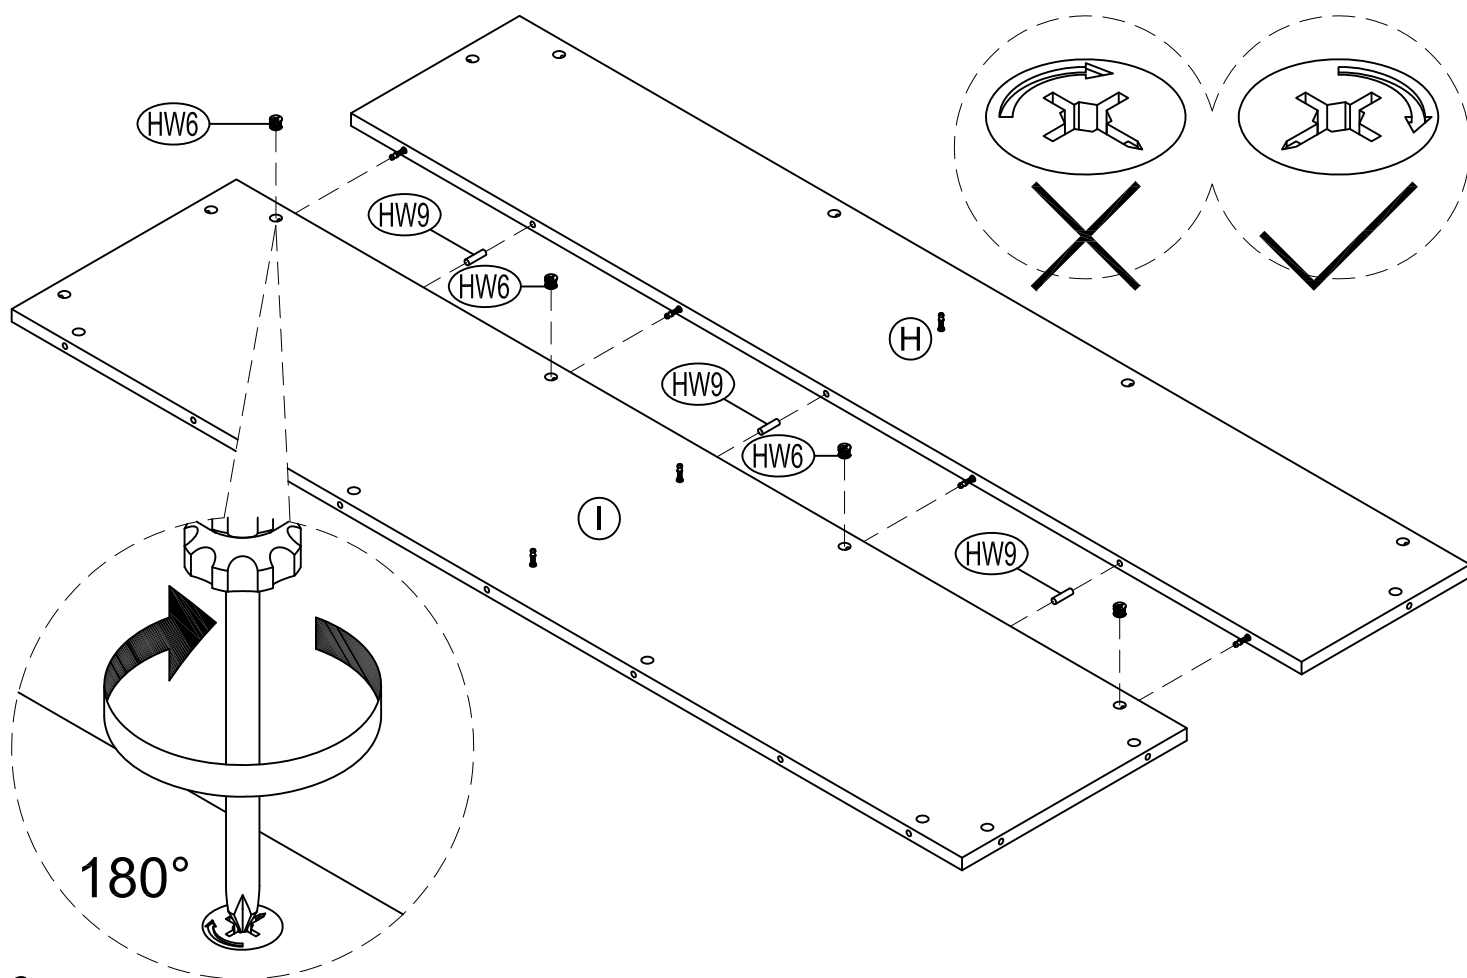


3

Attach Front Rails (F) to Divider (D) using Round Head Screws 32 mm (HW1).

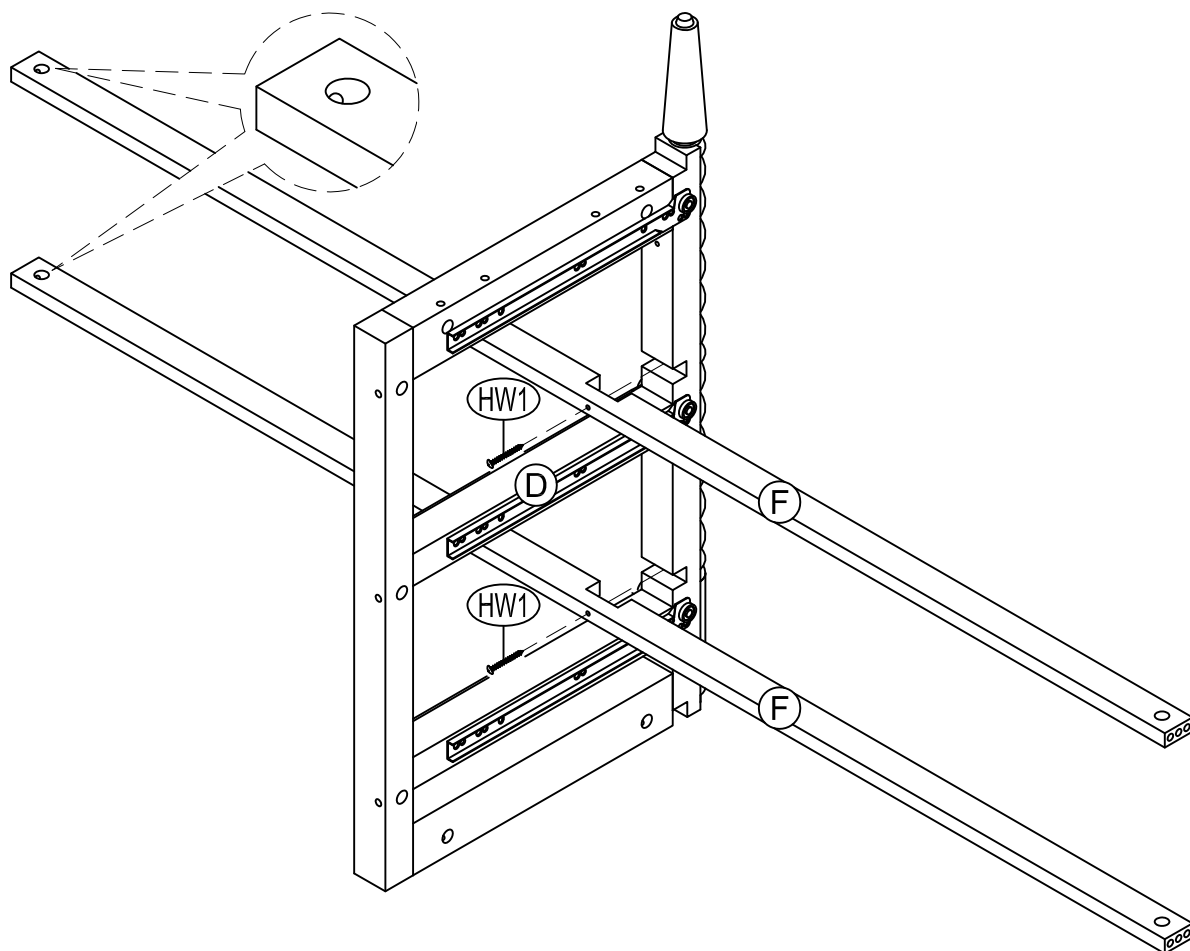


4


Attach Divider (D) to Back Panel Assembly using Camlocks (HW6).

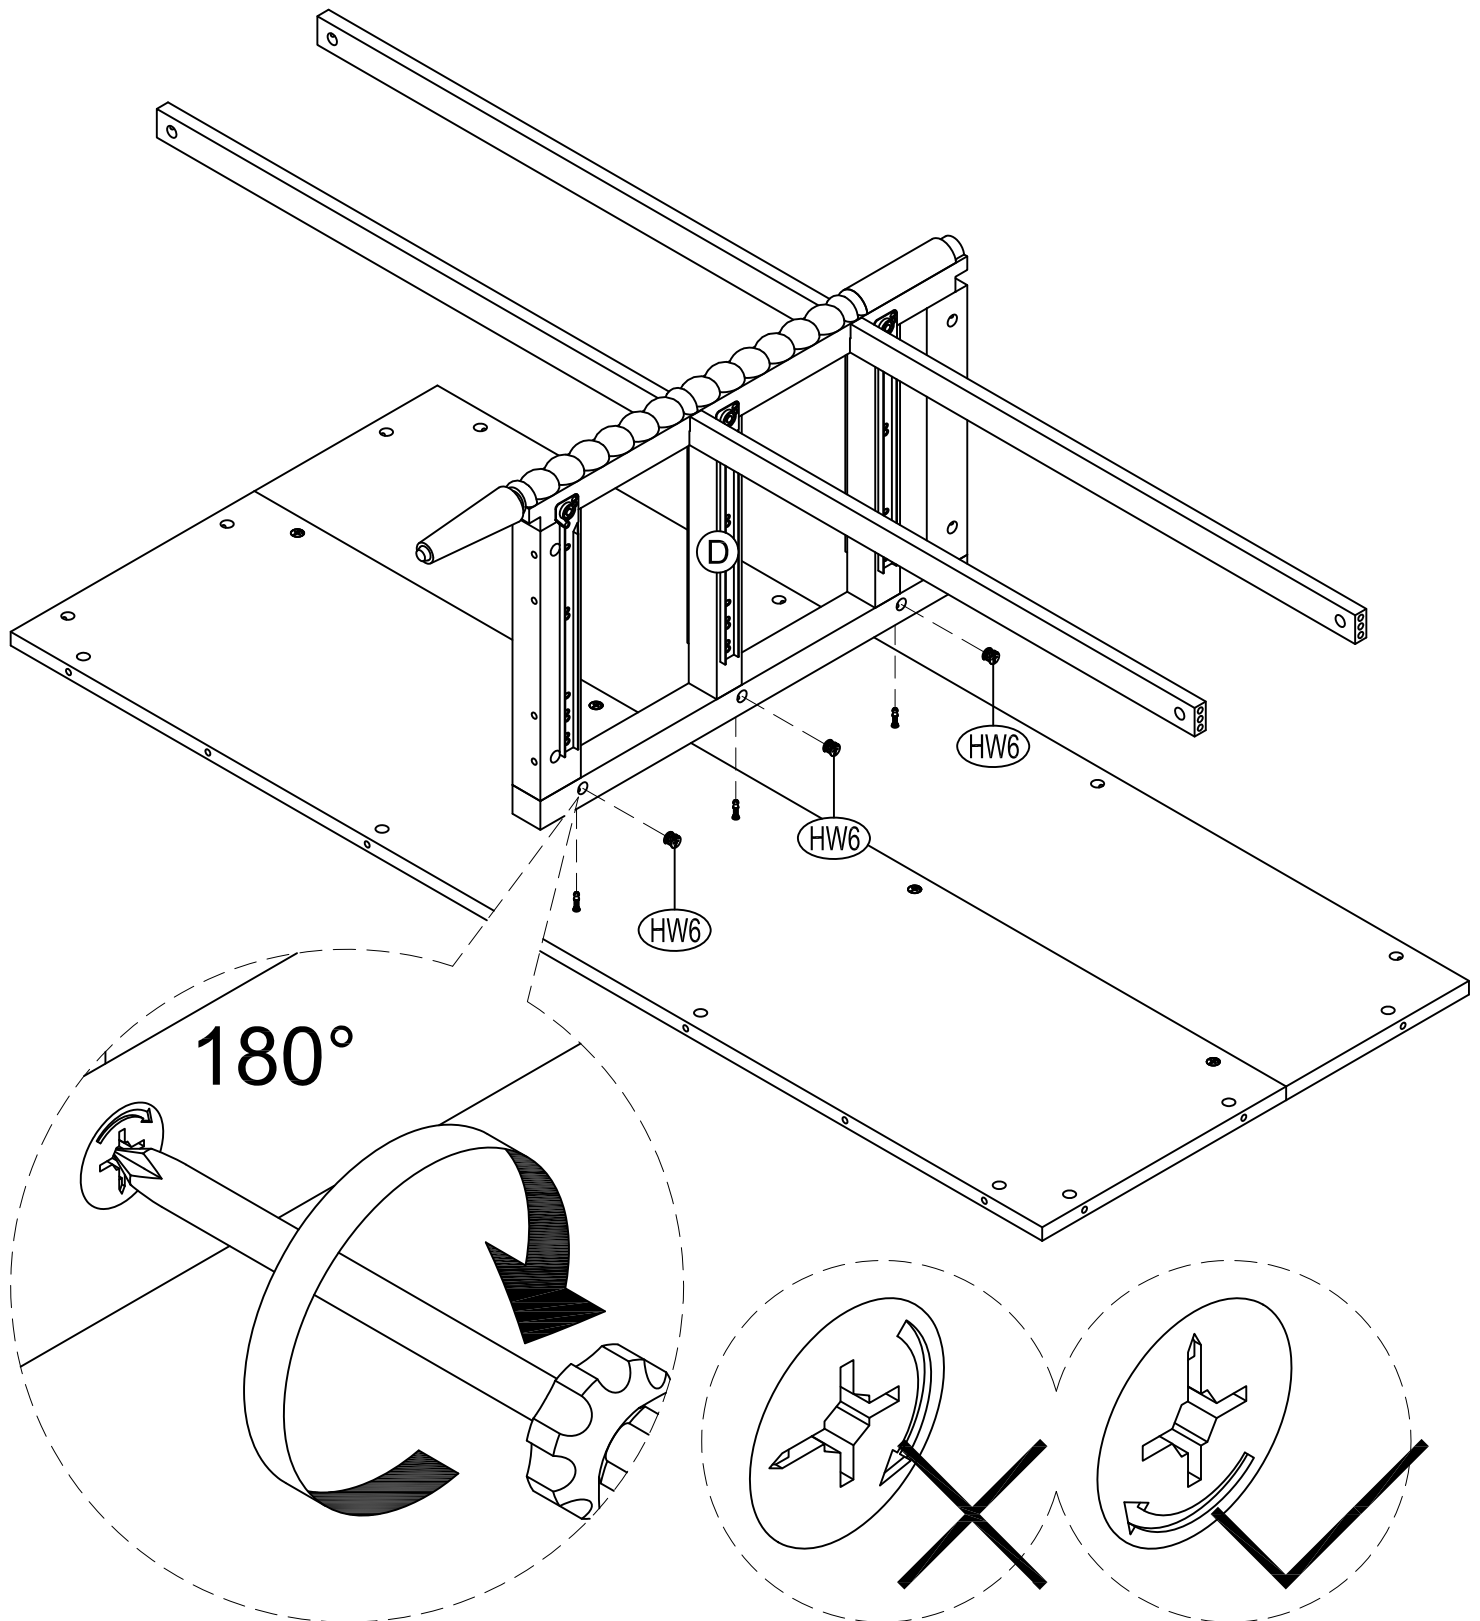


Attach Bottom Assembly (G) to unit using Camlocks (HW6) and Dowels (HW9).

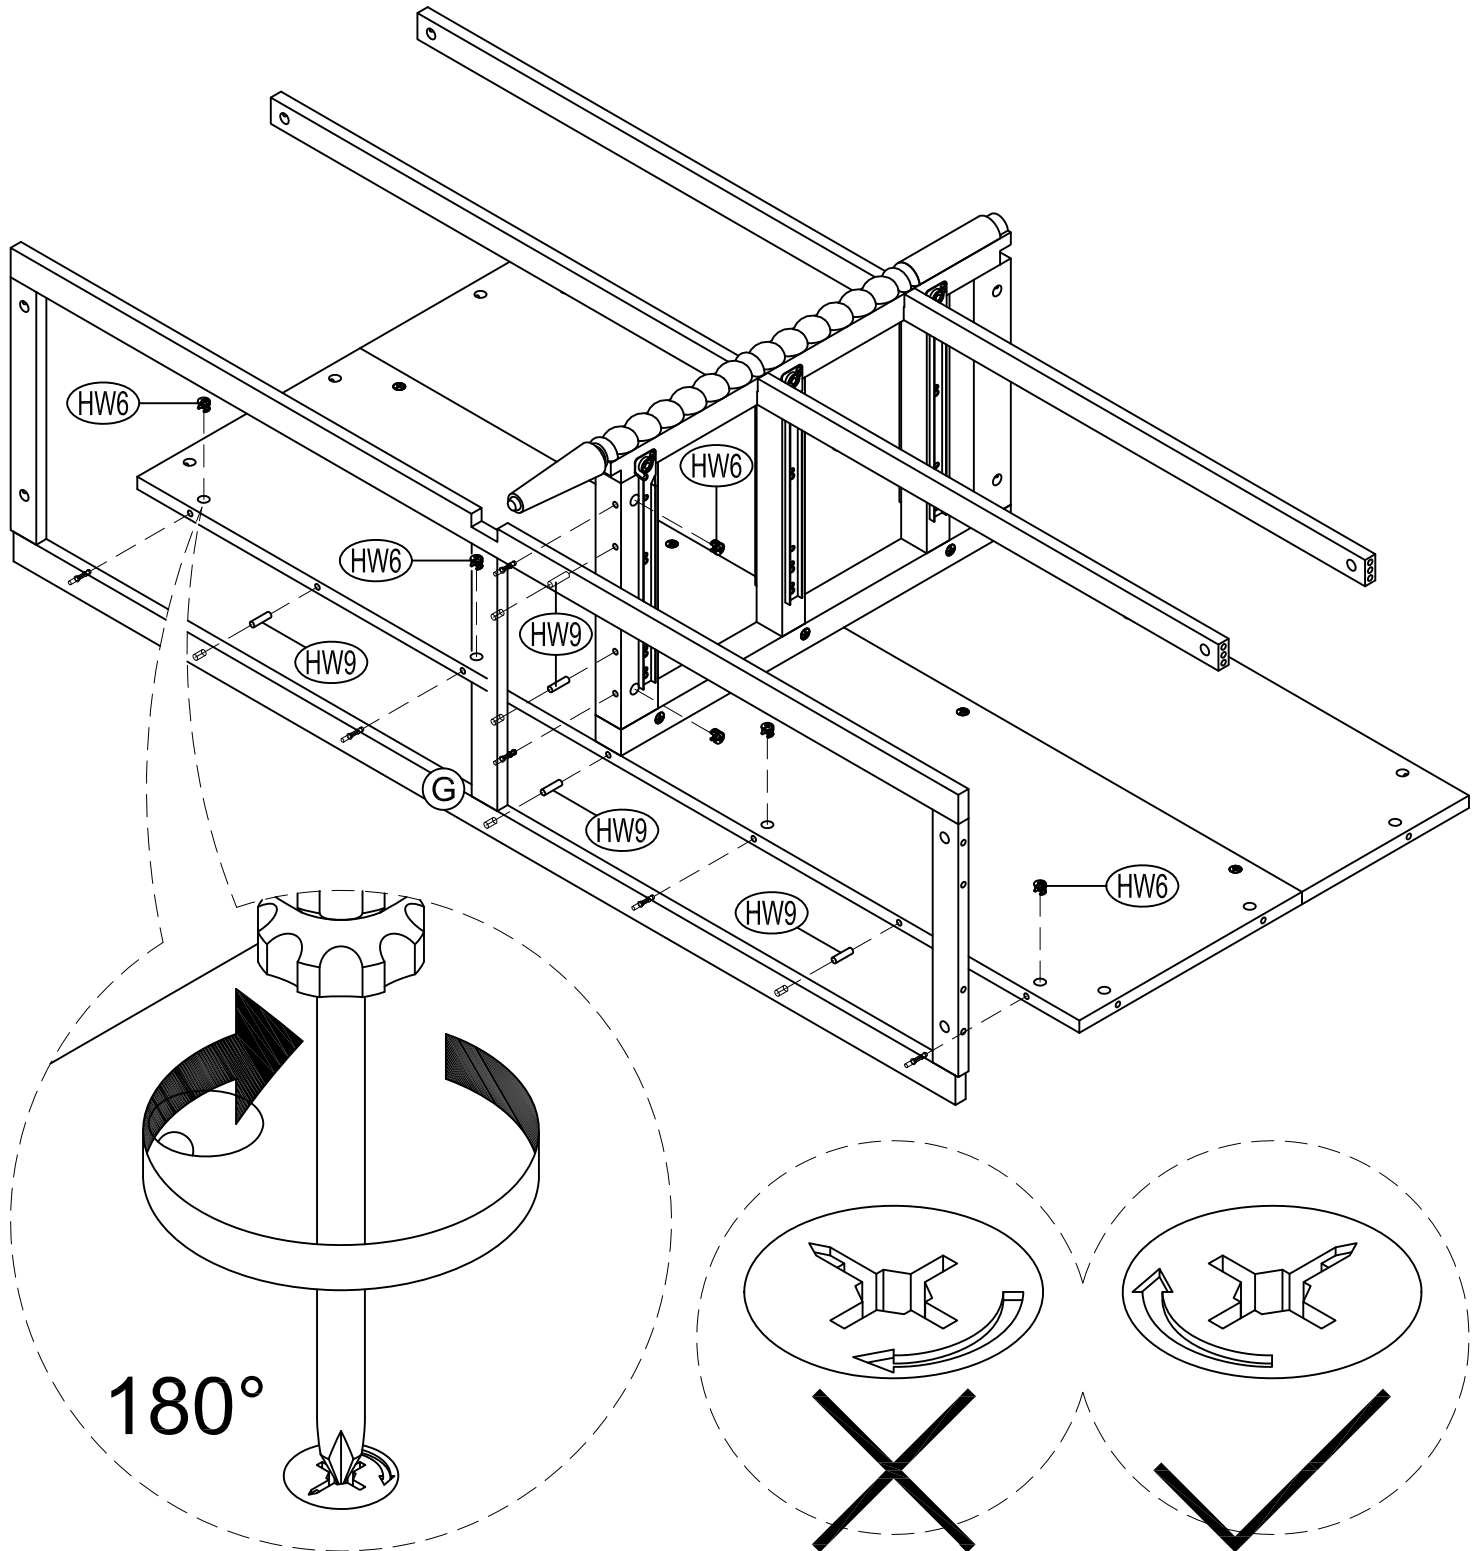


Attach Left and Right Assemblies (B) and (C) to unit and Top Rail (E) using Camlocks (HW6) and Dowels (HW9).

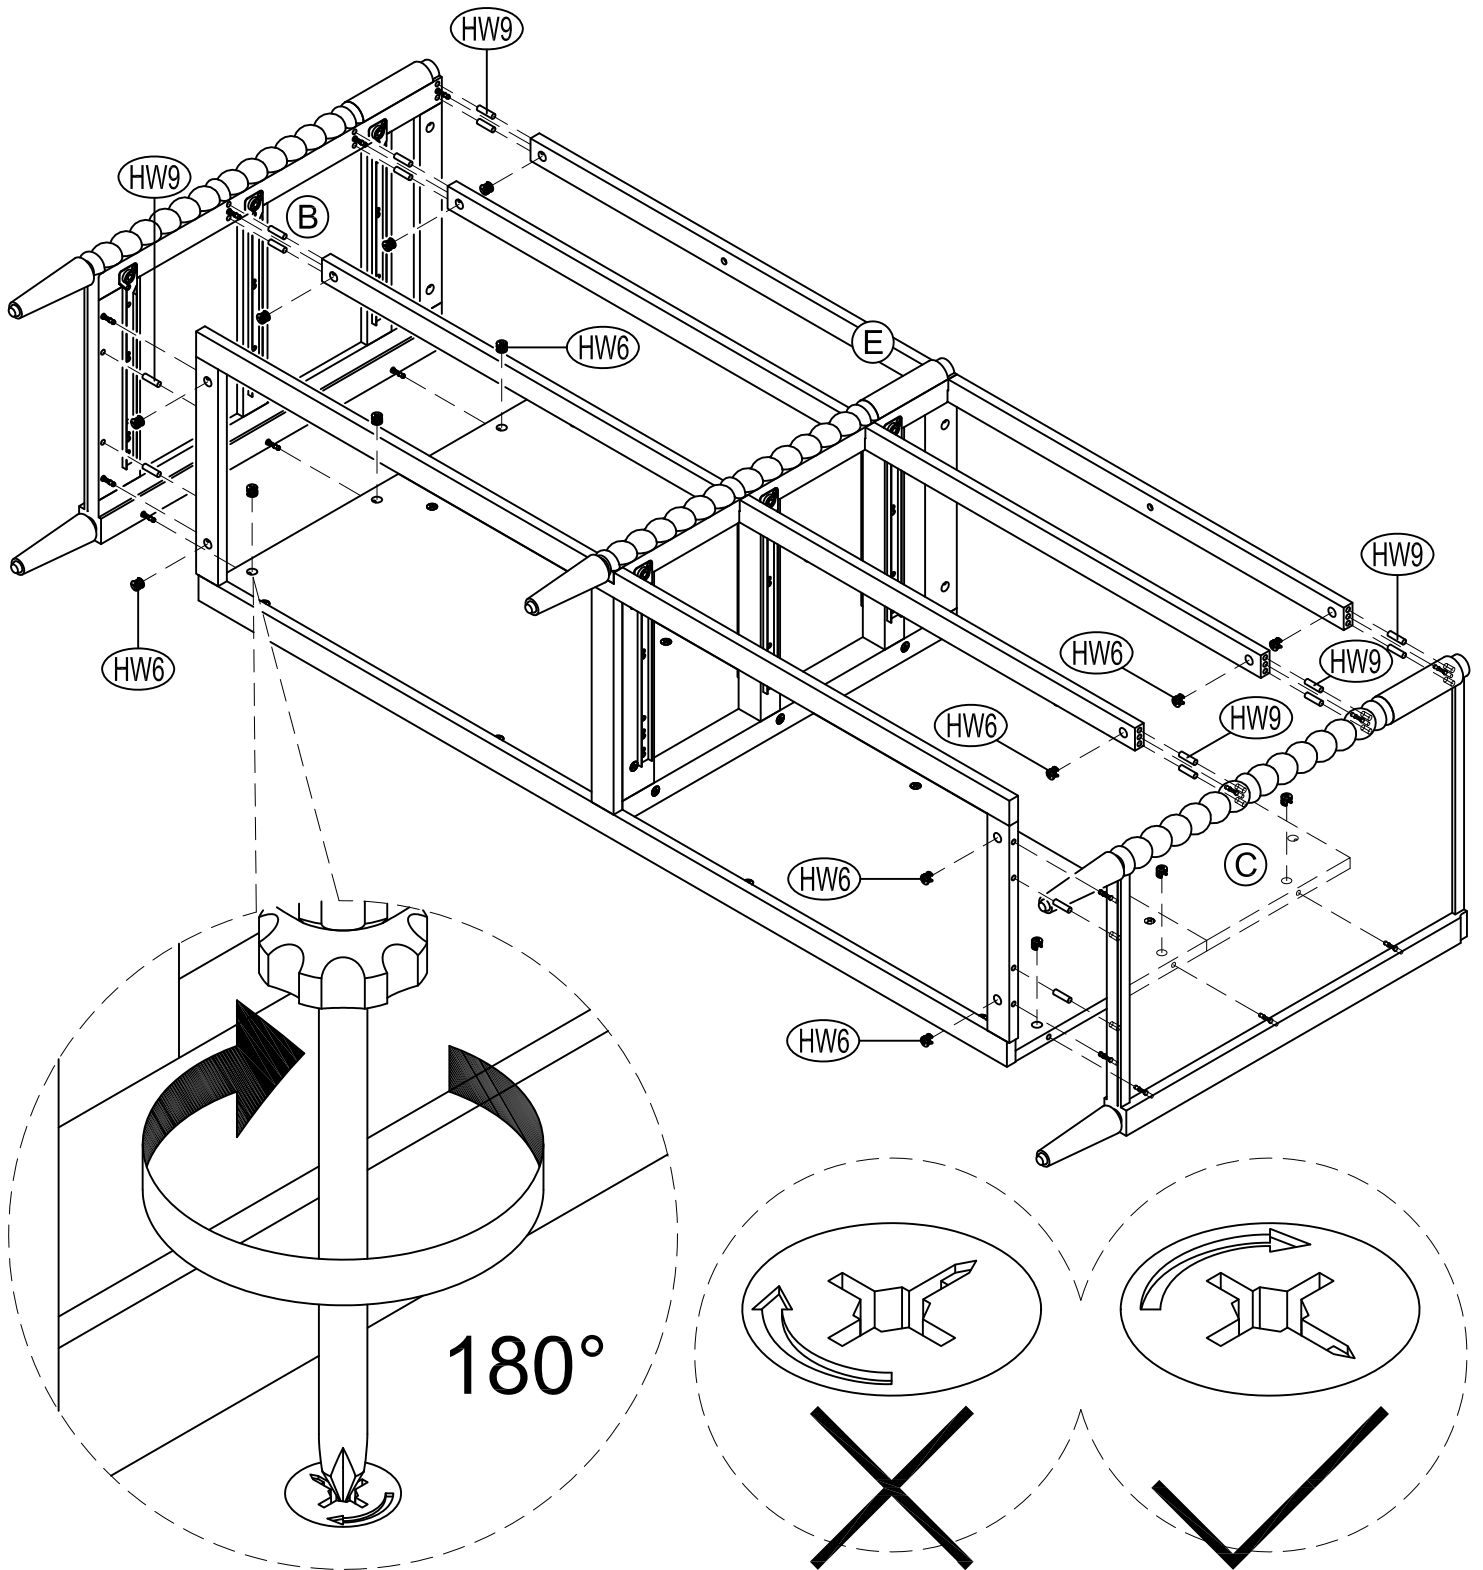

Attach Top Panel (A) to unit using Round Head Screws 25 mm (HW2), Camlocks (HW6) and Dowels (HW9).

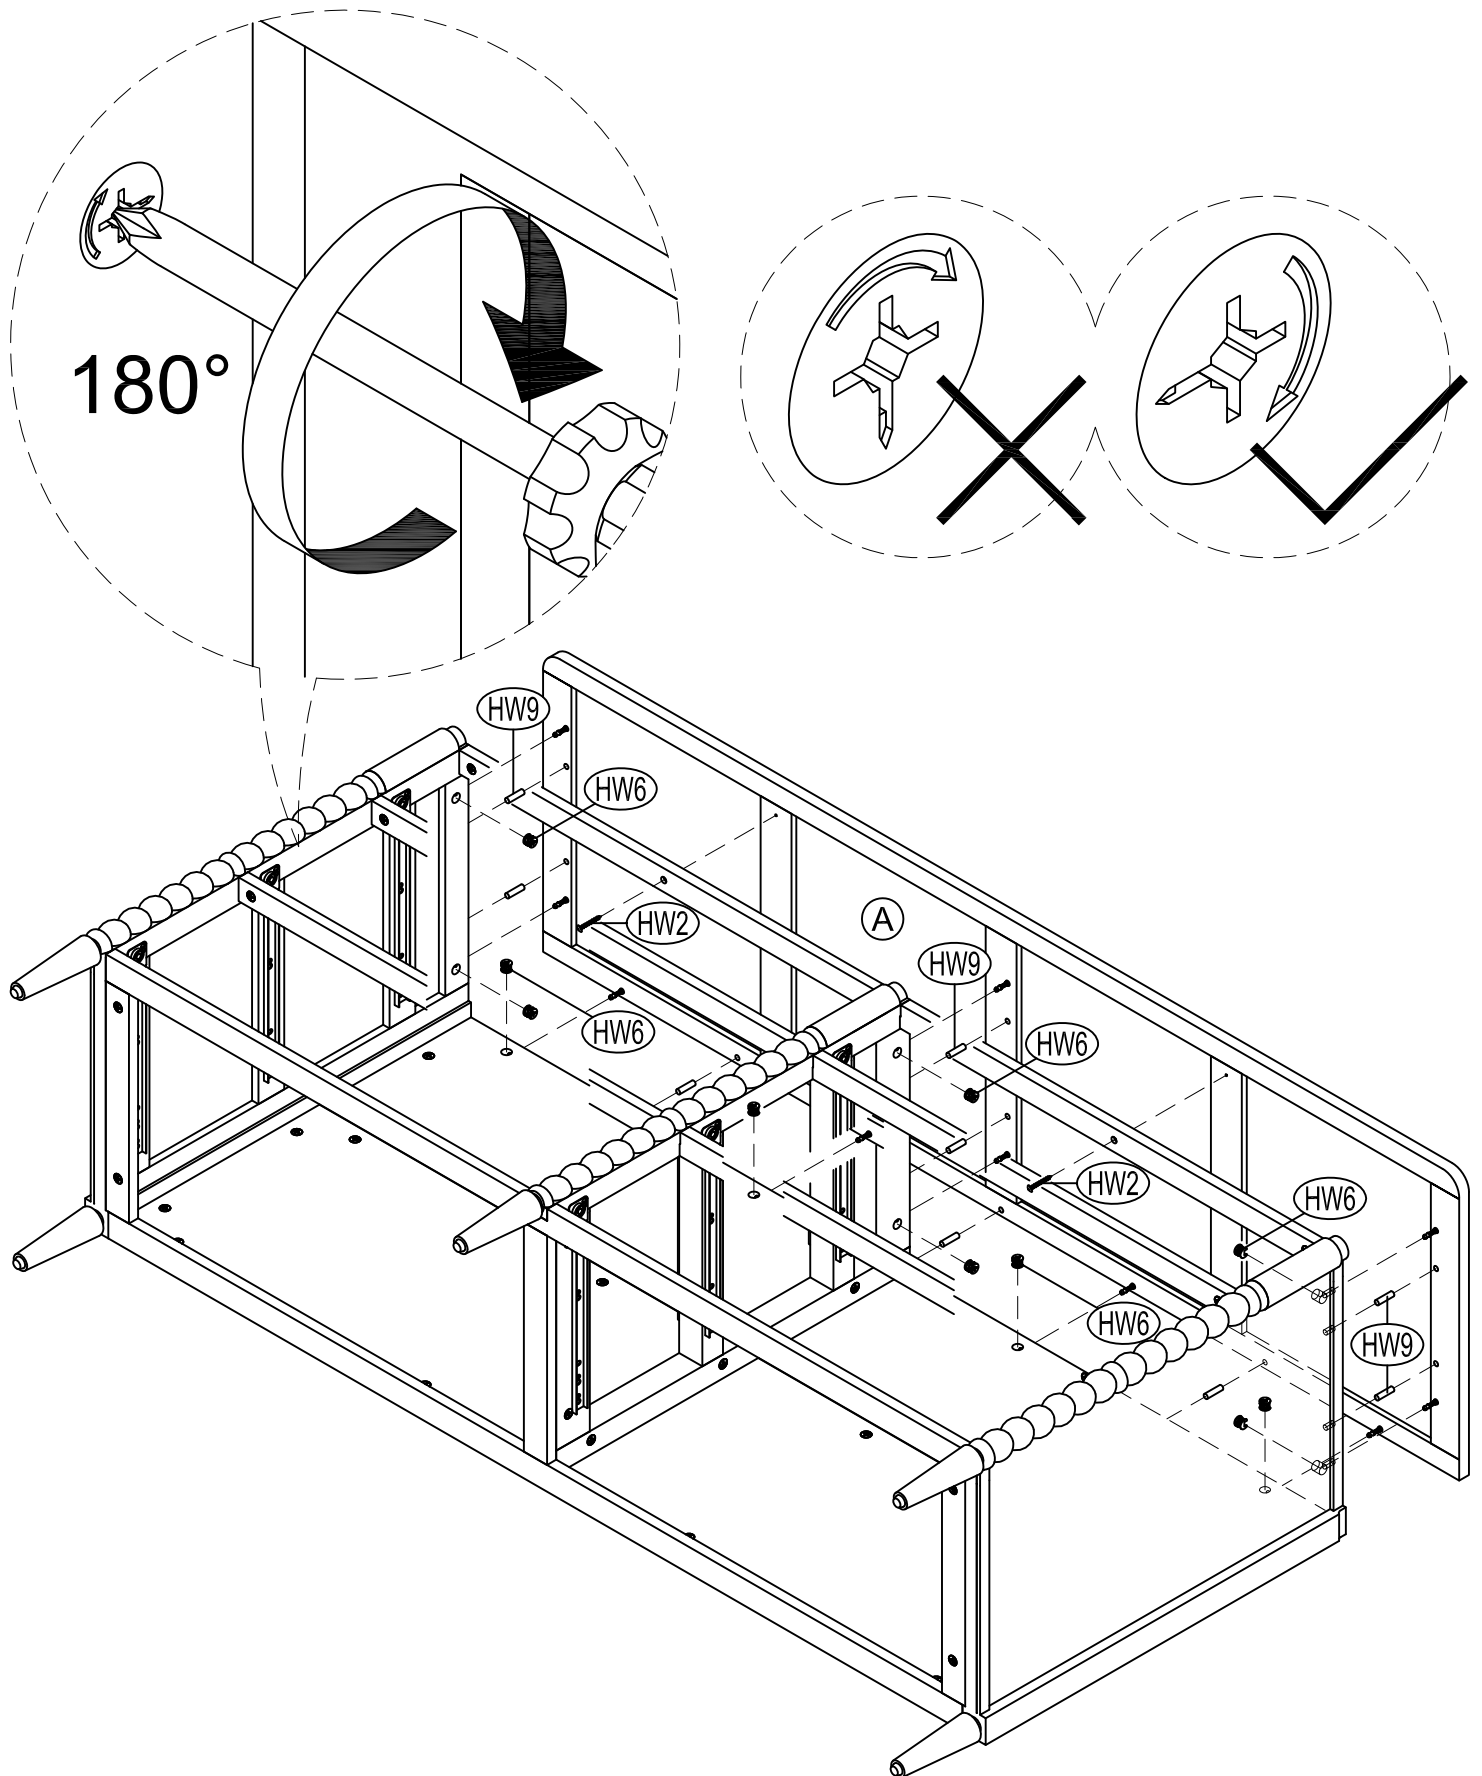

Turn the unit upright and adjust the levelers on the bottom of the legs as needed.

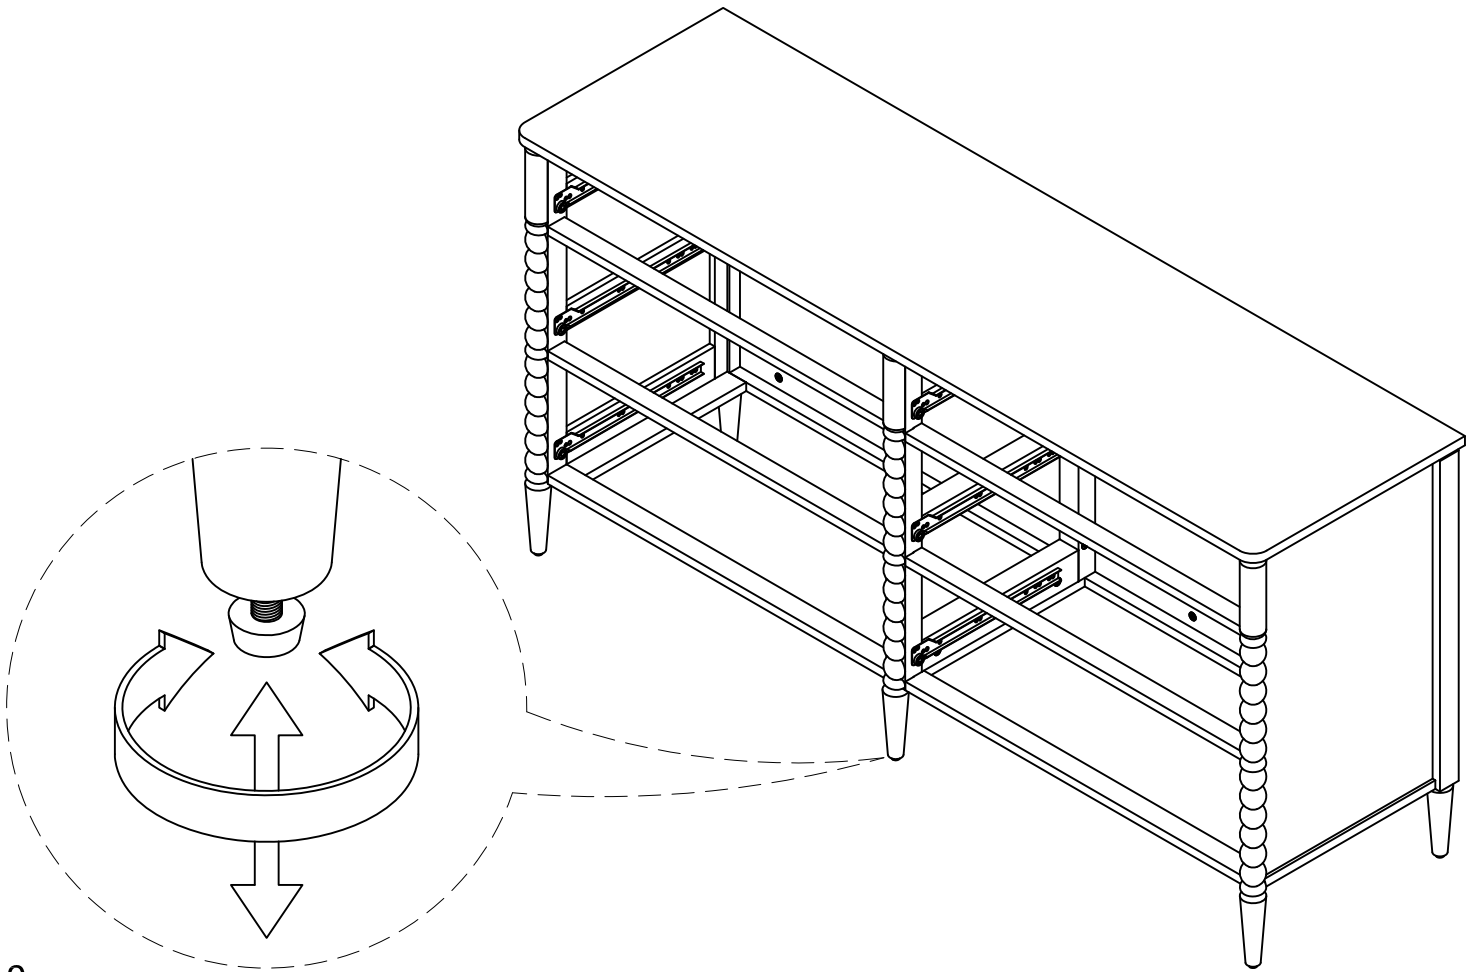


Attach Handles (HW8) to Small Drawer Front (J) using Handle Bolts (HW7).

Attach Small Drawer Left and Right (K and L) to Small Drawer Back (M) using Flat Head Screws 32 mm (HW3).

Slide Drawer Base (N) into the groove.

Attach Small Drawer Front (J) to Small Drawer Left and Right (K and L) using Flat Head Screws 32 mm (HW3).

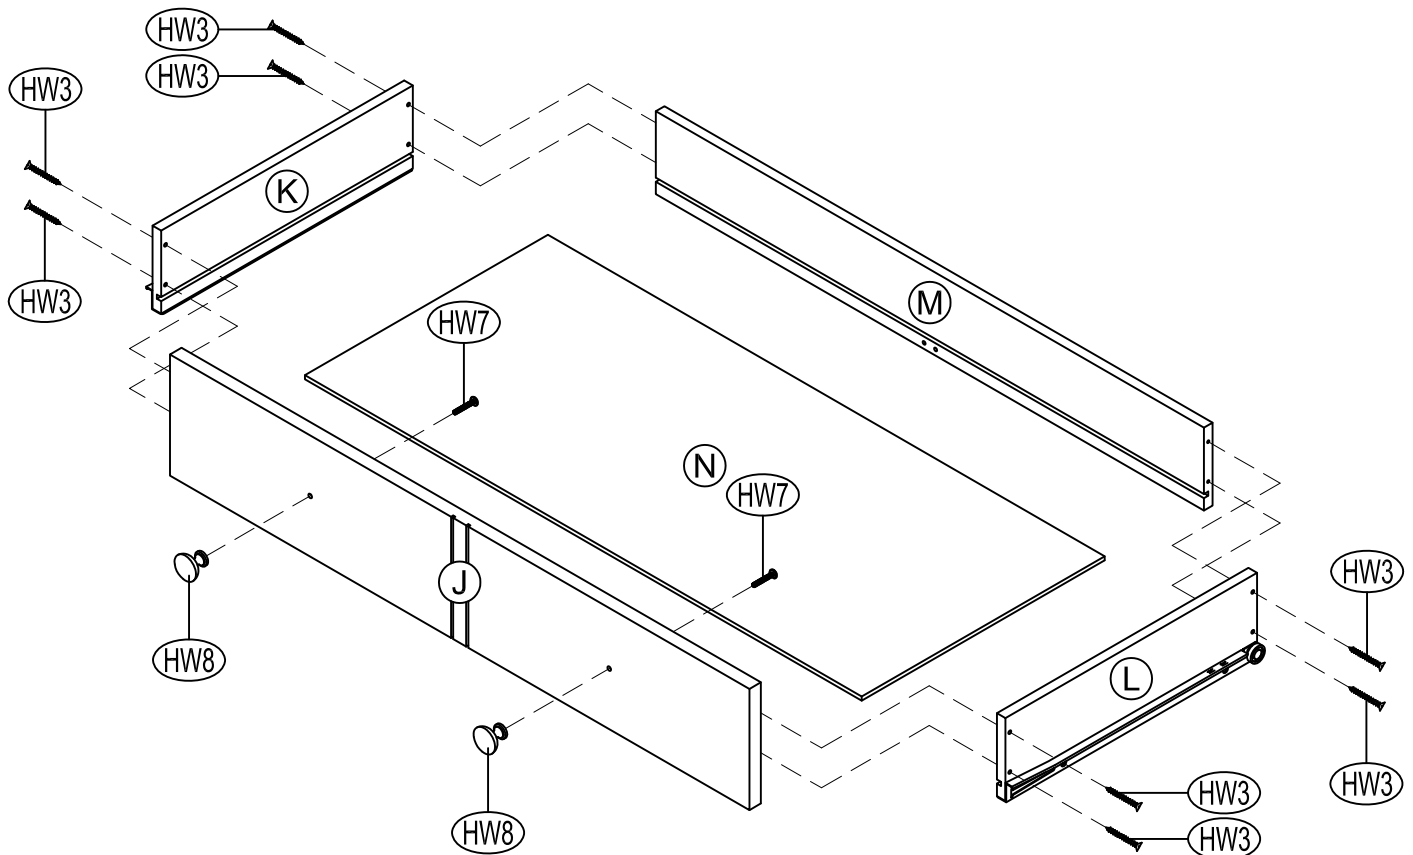


10

Attach Handle (HW8) to Large Drawer Front (P) using Handle Bolt (HW7).

Attach Large Drawer Left and Right (Q and R) to Large Drawer Back (S) using Flat Head Screws 32 mm (HW3).

Slide Drawer Base (N) into the groove.


Attach Large Drawer Front (P) to Large Drawer Left and Right (Q and R) using Flat Head Screws 32 mm (HW3).

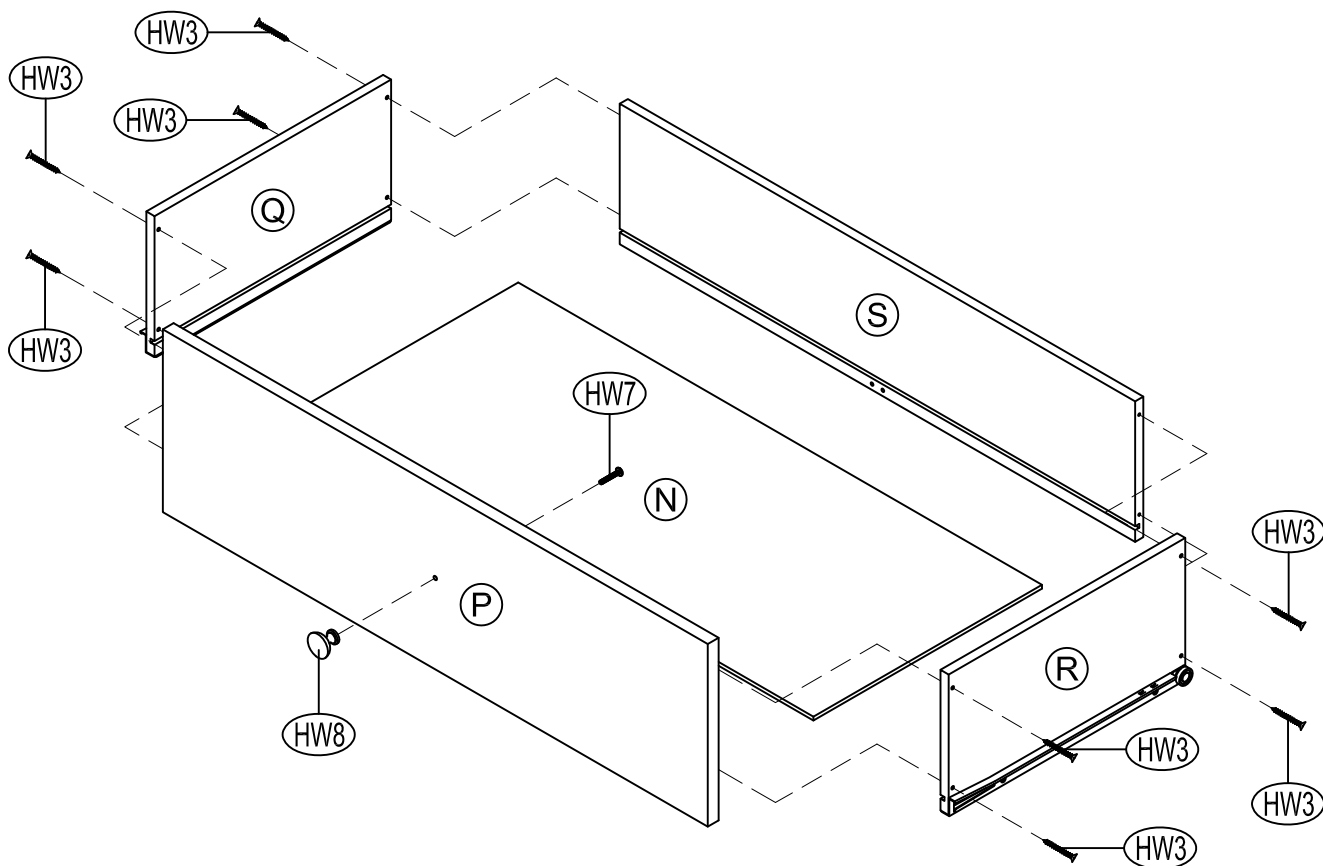


11


Attach Drawer Support (O) to Small and Large Drawers using Flat Head Screws 32 mm (HW3).

Do the same step for remaining drawers

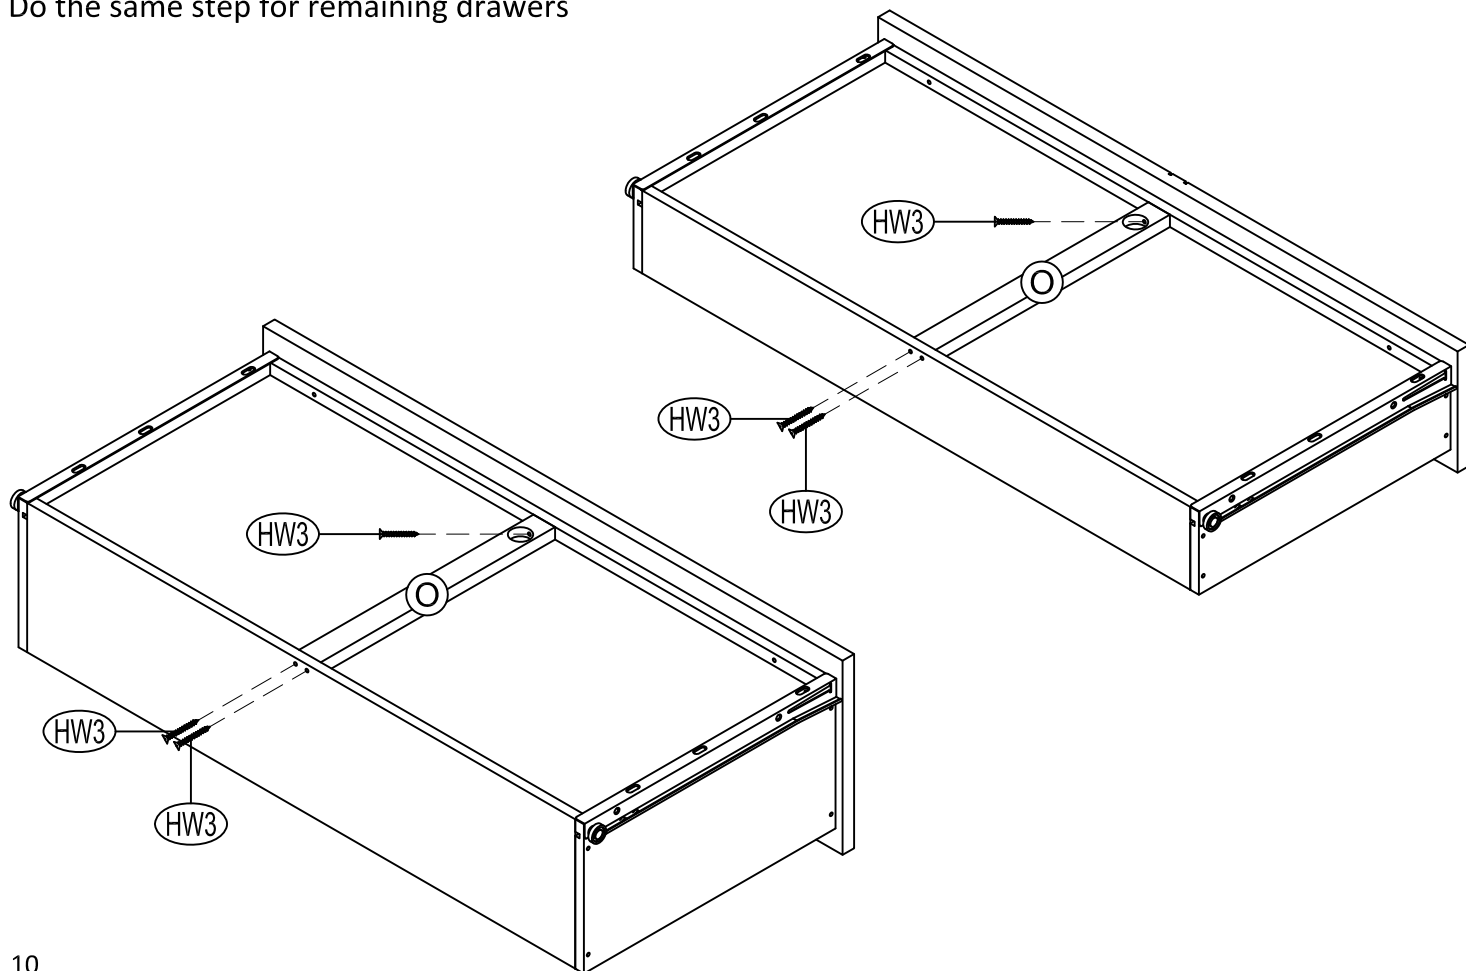


Loosen slightly the screws pre-installed on the back of the Drawer Fronts.

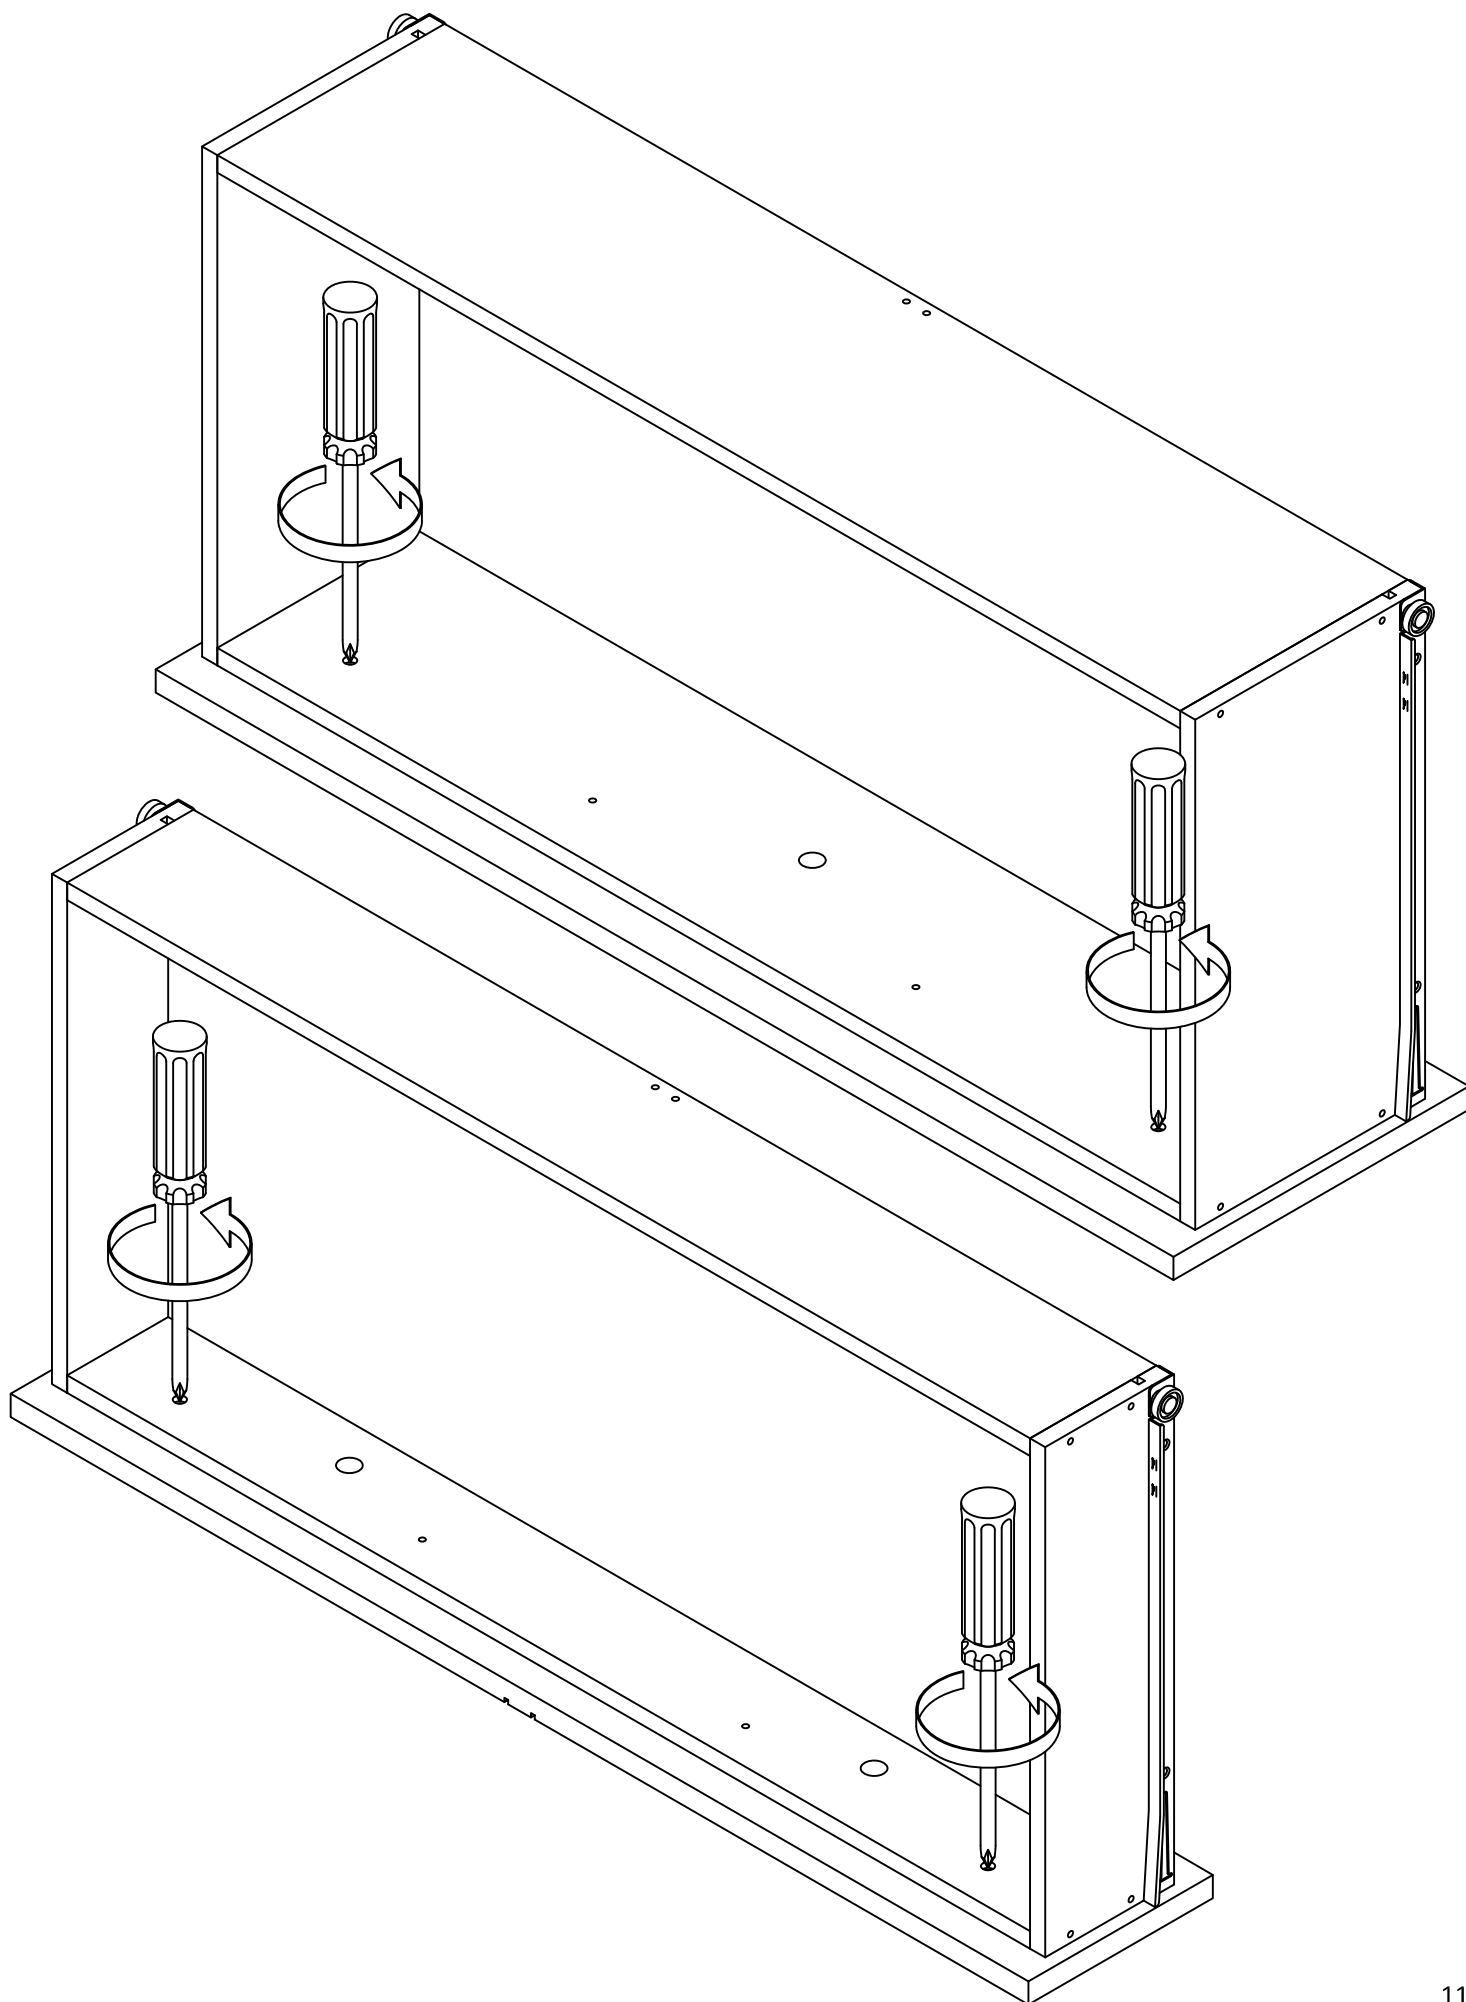

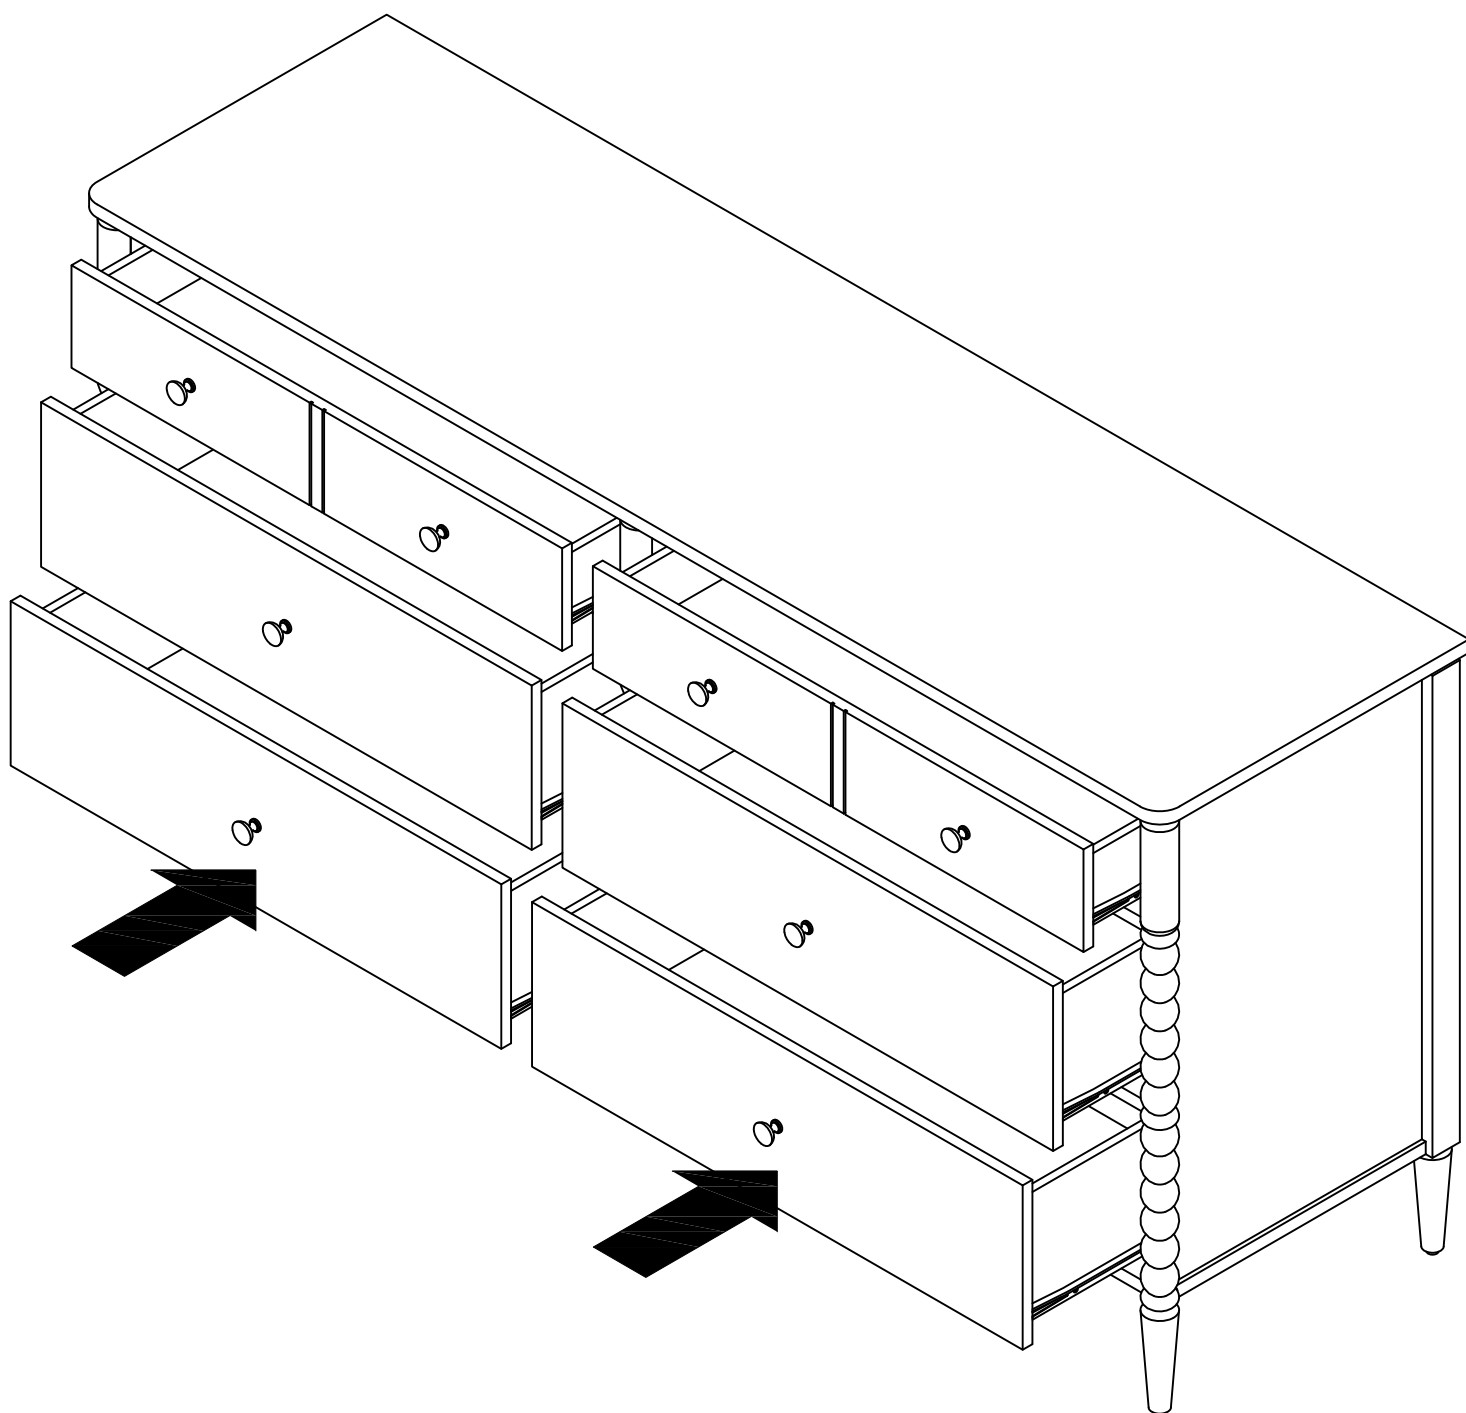


14

Adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

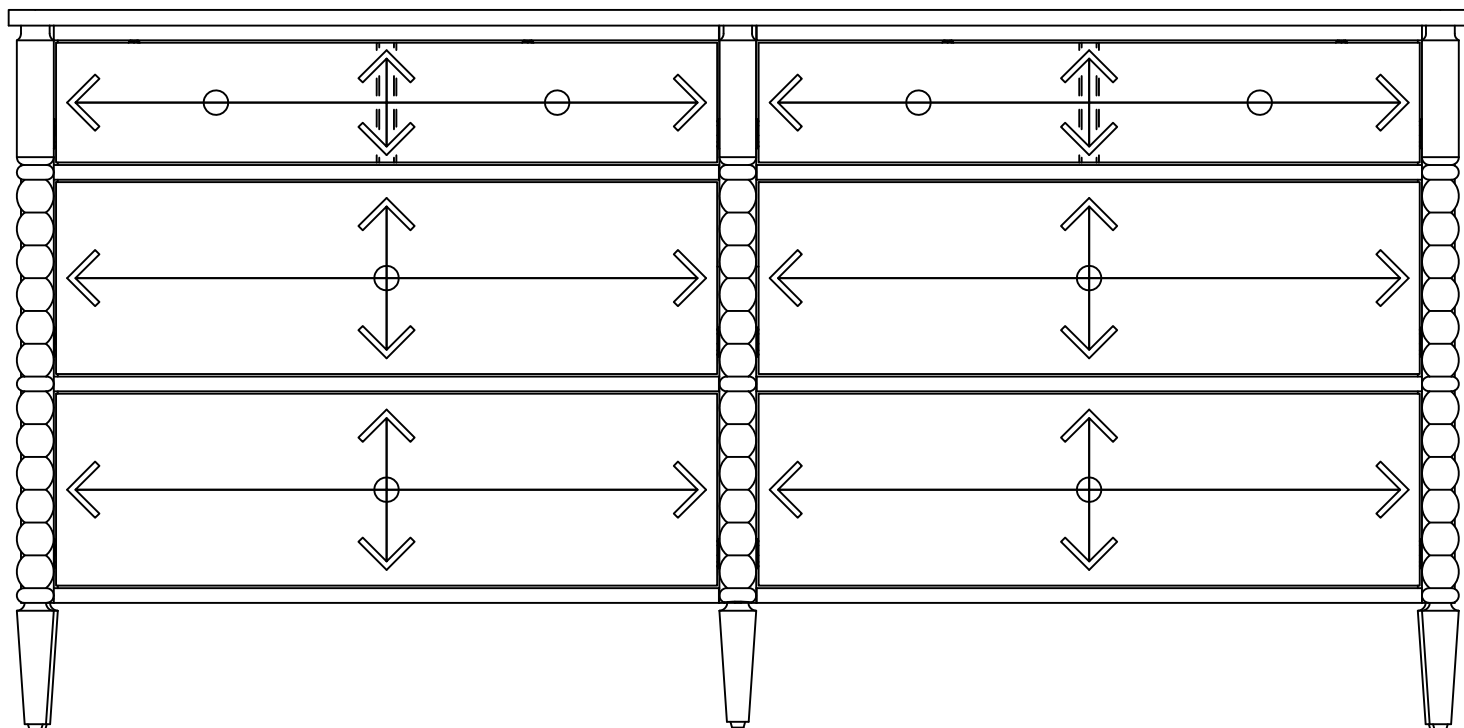


15

Pull the drawer open slowly.

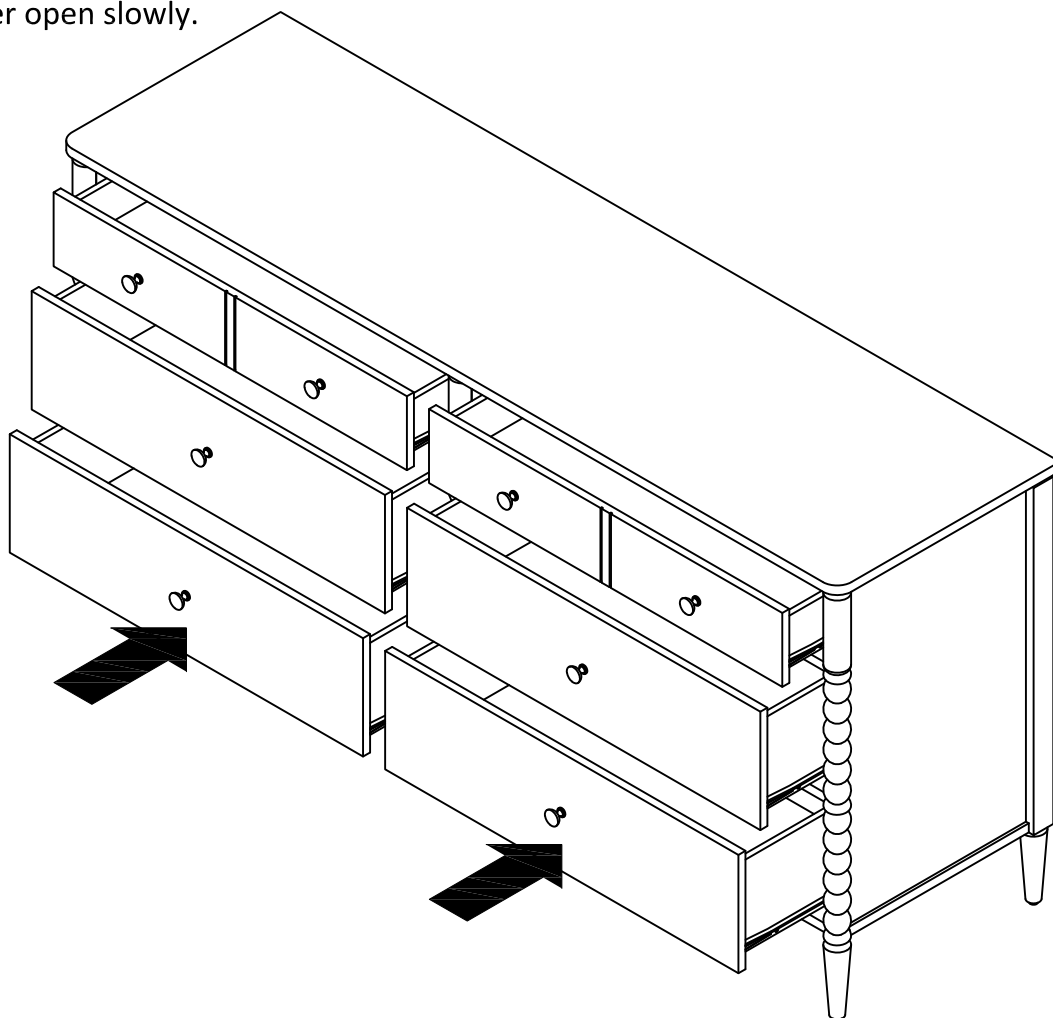


Re-tighten the screws from step 12.

Make sure the front panel does not move and lock the drawer front panel into position with Flat Head Screws 19 mm (HW4).

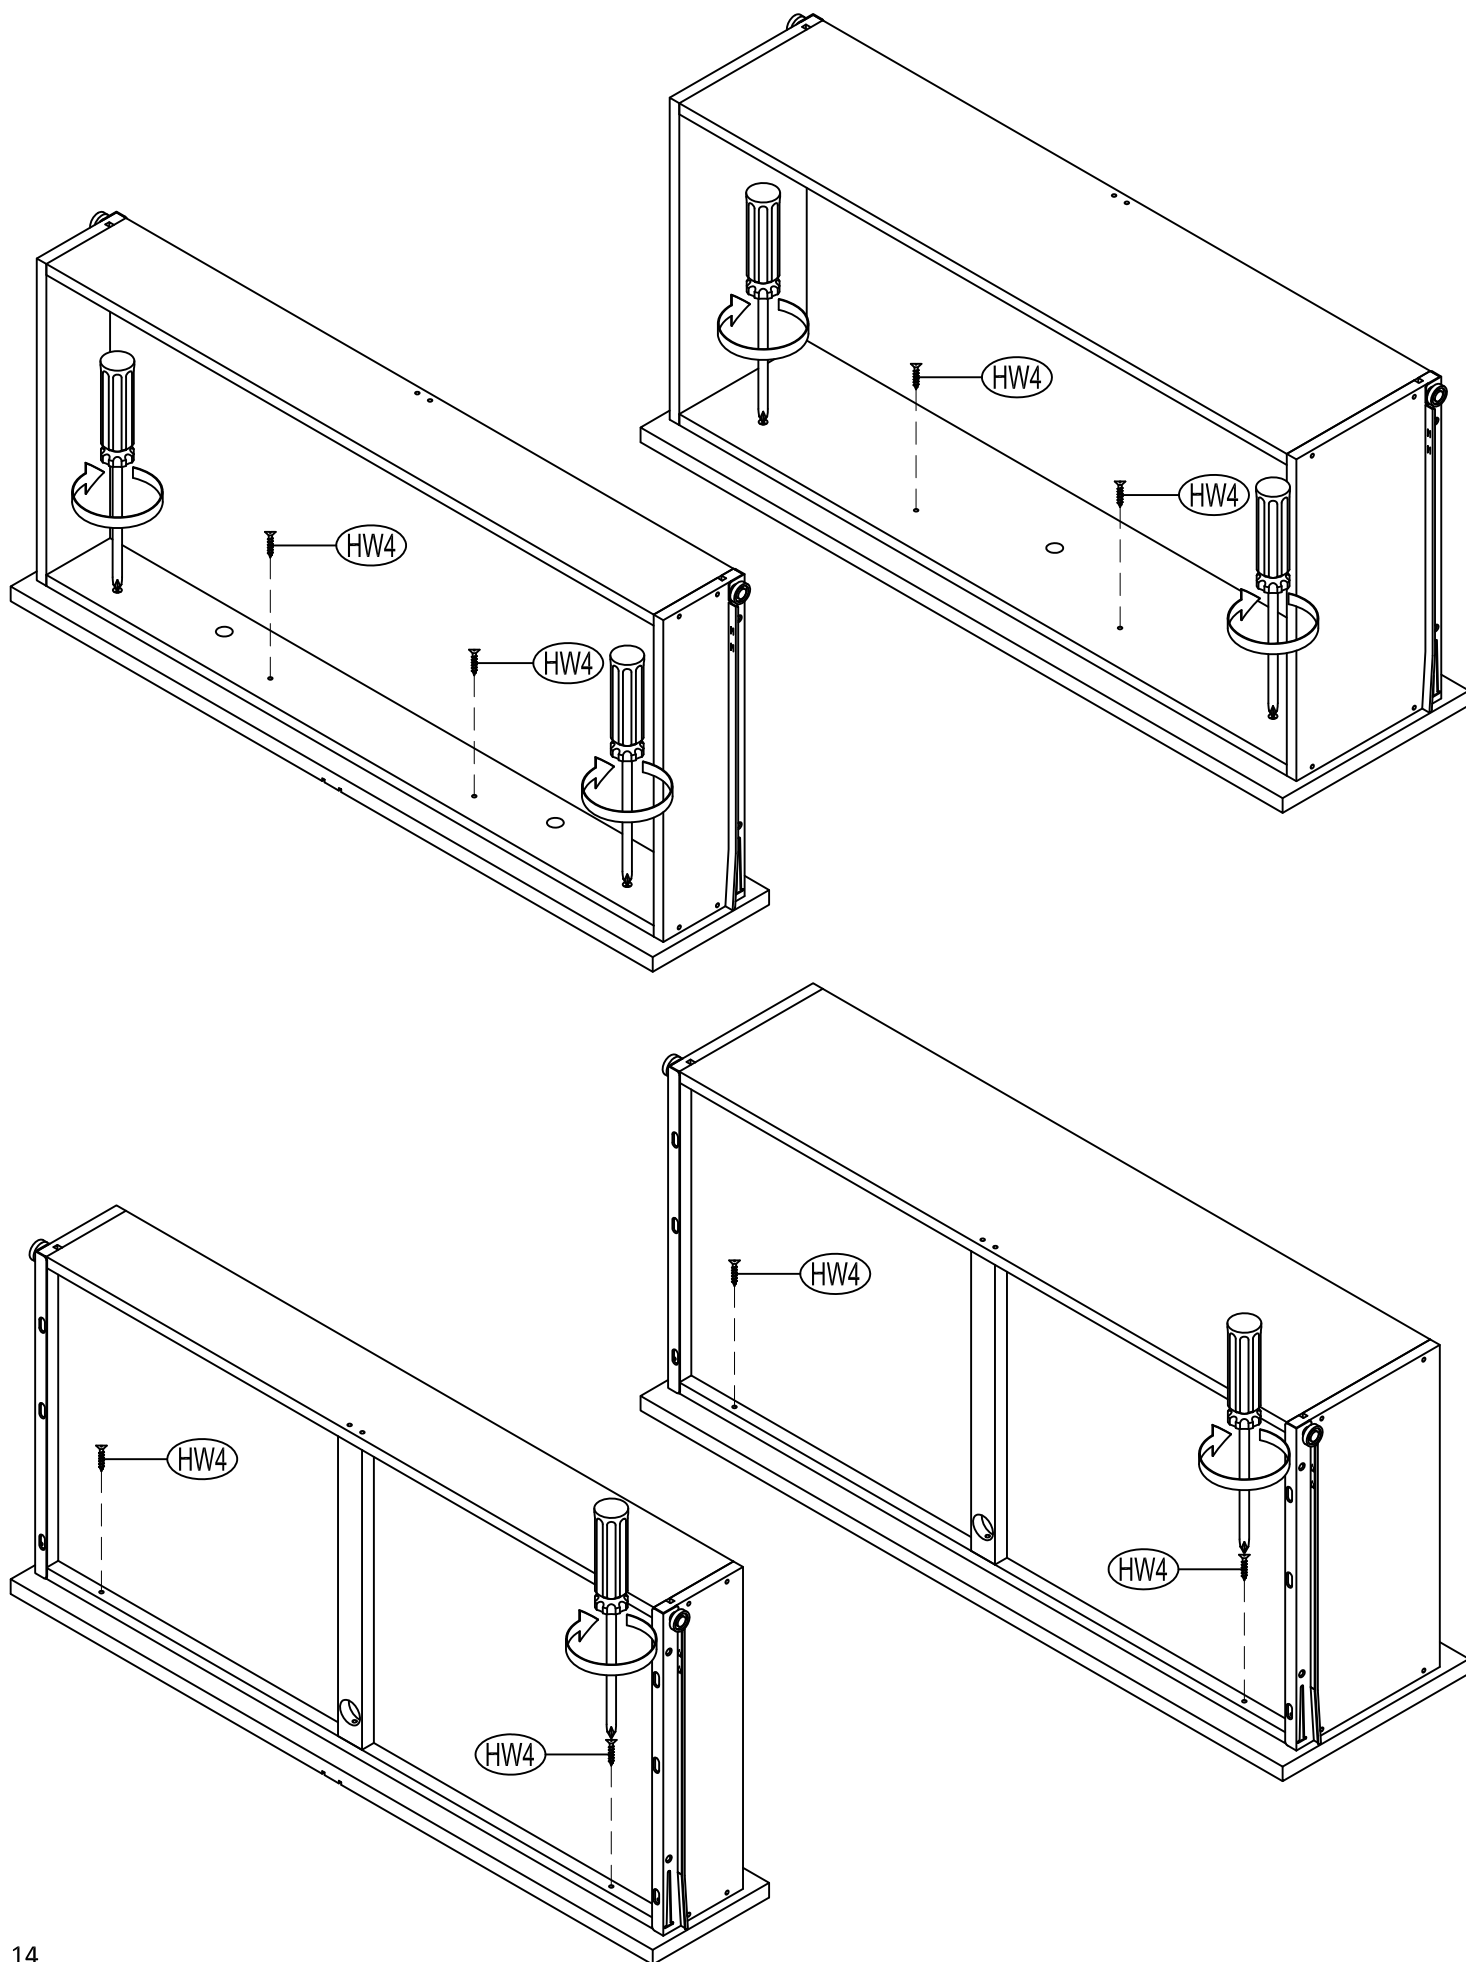

Insert the drawers in the dresser. Place the dresser in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

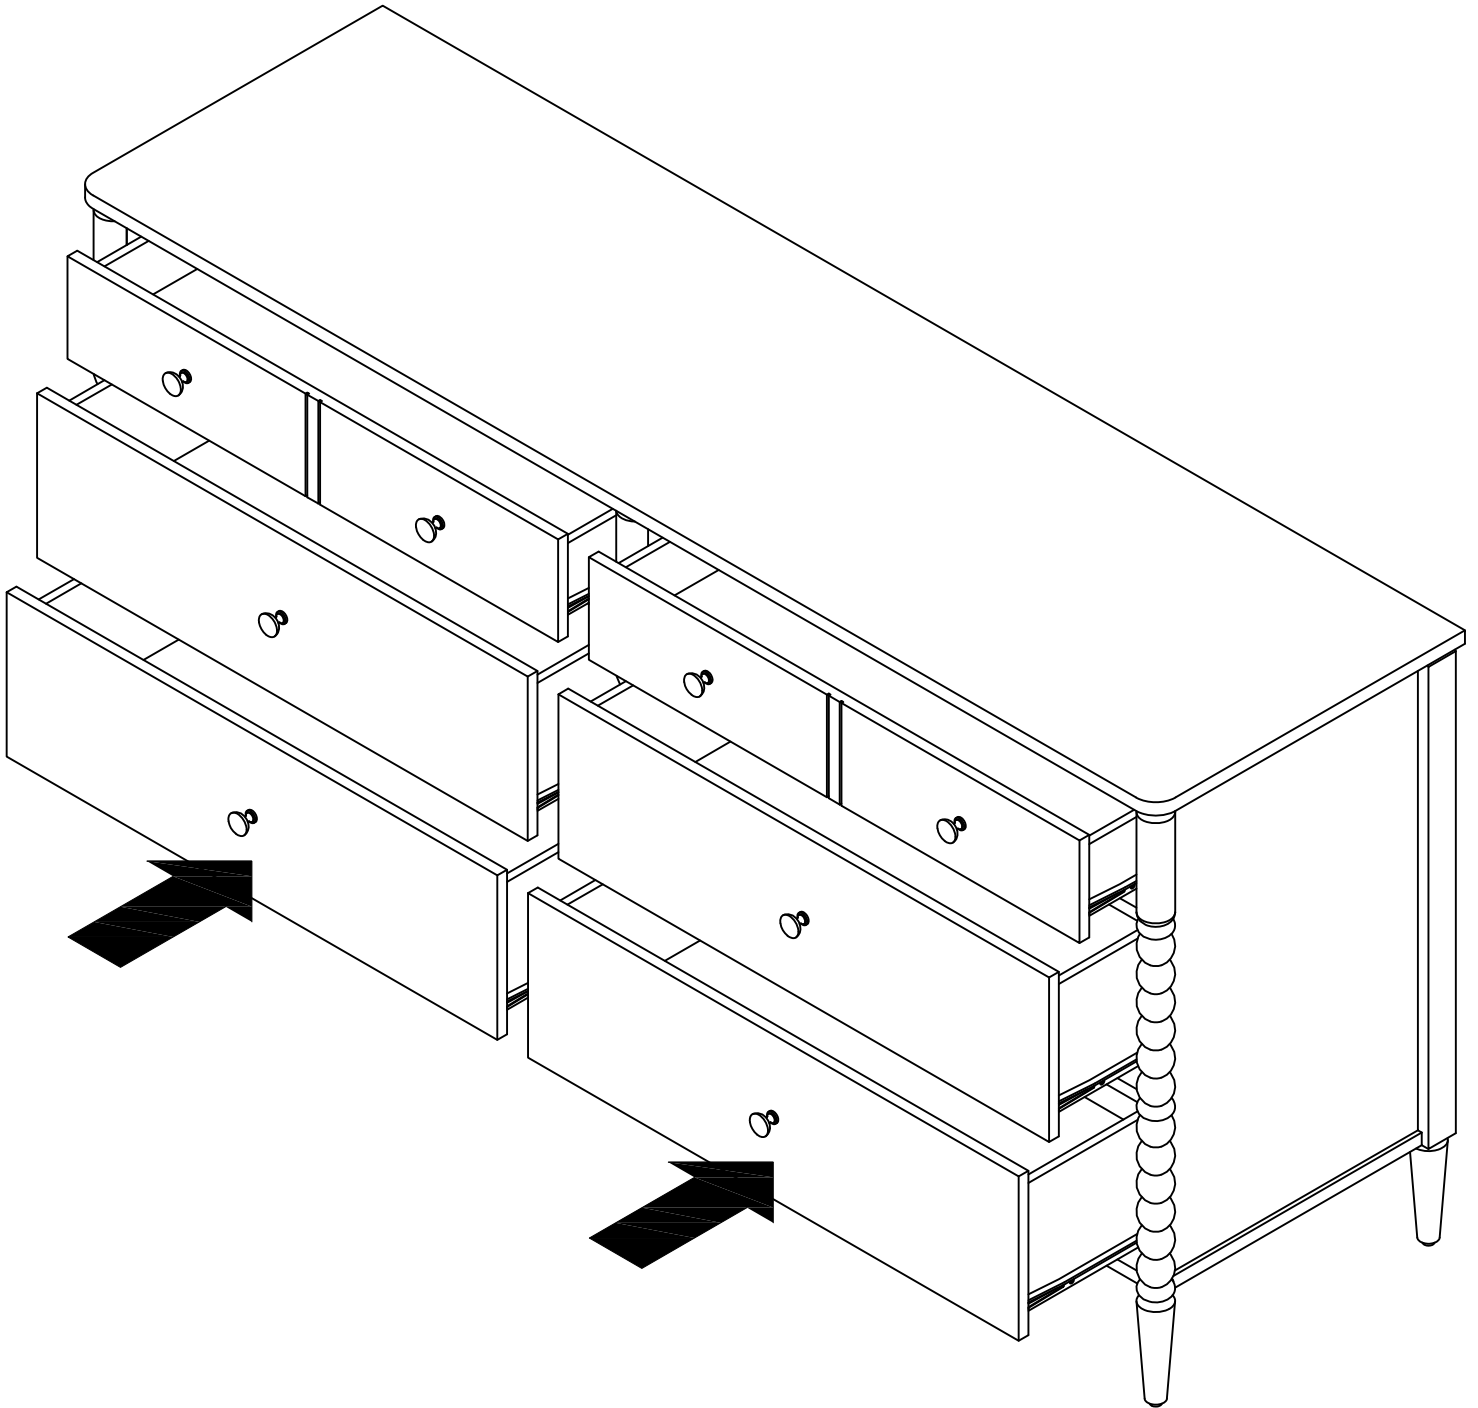

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070