
## ASSEMBLY INSTRUCTIONS

- CAREFULLY UNPACK AND PLACE ALL PARTS
   ON A SMOOTH SURFACE AND LAY THEM UP AS
   PER THE SKETCH.
- 2. THREAD TUBE (B) AND TUBE SECTION(C)
  ONTO LAMP BASE (A) IN TURN.
- 3. THREAD SHADE SECTION (F) ONTO TUBE (E)
  OF TUBE SECTION(C)
- UNSCREW THE NUT (D), ADJUST SHADE SECTION (F)
   TO APPROPRIATE HEIGHT, THEN SCREW THE NUT
   (D) TIGHTLY.
- 5. INSERT THE POLARIZED PLUG INTO OUTLET,
  TURN ON THE SWITCH AND ENJOY YOUR LAMP.

**WATTAGE:** 100W TYPE A (BULB NOT INCLUDED)

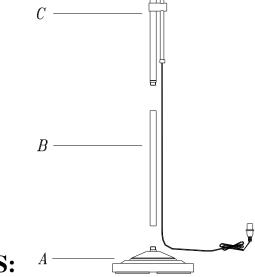

E

D

## **IMPORTANT SAFETY INSTRUCTIONS:**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.