


Install Instruction

Shower enclosure

SY222-Y-60x76B

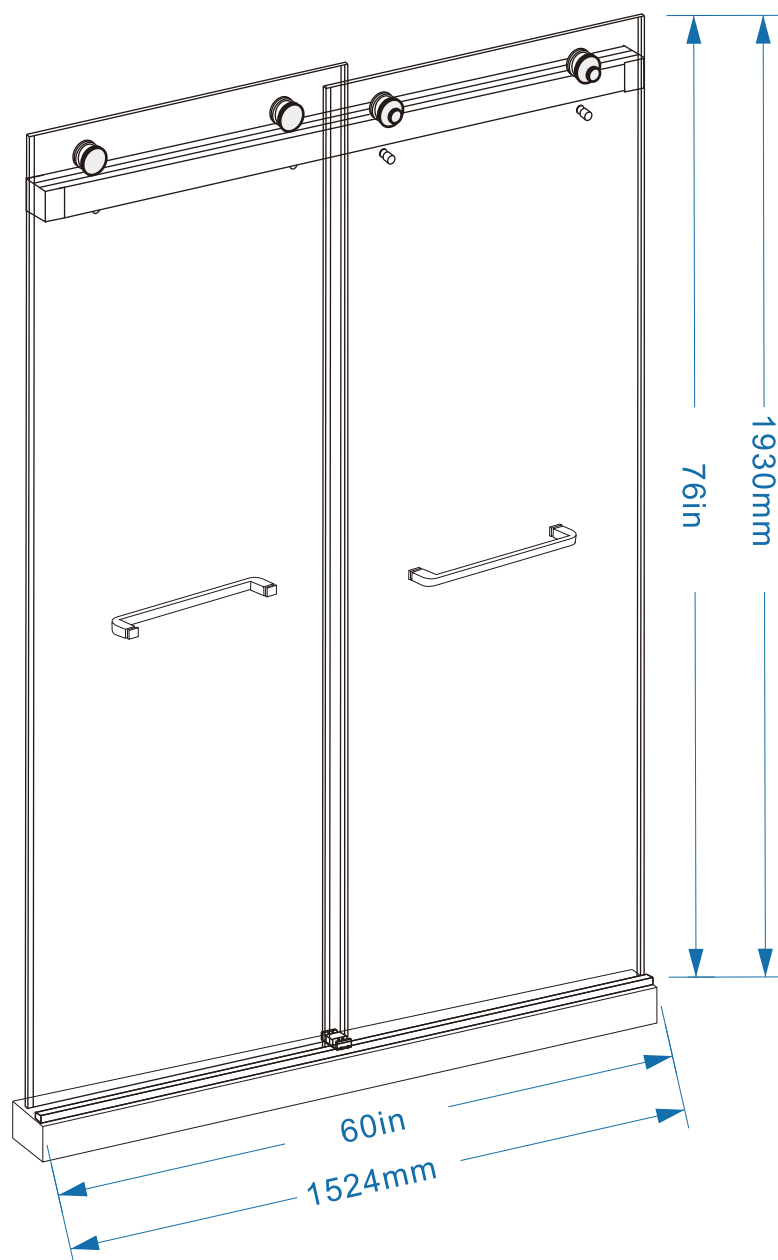

MODEL SY222-Y-60x76B

PREPARATION



You will need at least two people to install this unit properly. Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


WARNING

STRONGLY RECOMMENDS THIS INSTALLATION BE COMPLETED BY A LICENSED PROFESSIONAL.
INSTALLATION OF DOOR UNIT REQUIRES AT LEAST TWO PEOPLE.


INSTALLATION OF THE SHOWER DOORS BY AN INEXPERIENCED PERSON MAY RESULT IN GLASS BREAKAGE AND CONSEQUENTLY, CAUSE PERSONAL INJURY OR DEATH.

- Handle fragile items with care to prevent personal injury or material damage.
- The glass panels are tempered and cannot be cut. Never attempt to do so.
- Always rest glass on a level surface.

TOOLS REQUIRED (not supplied)




Silicone Gun




Electric Drill



Allen Key




Phillips Screwdriver



Pencil



Measuring Tape



Spirit Level







Hammer



Installation_Instructions



SY222-Y-60x76B

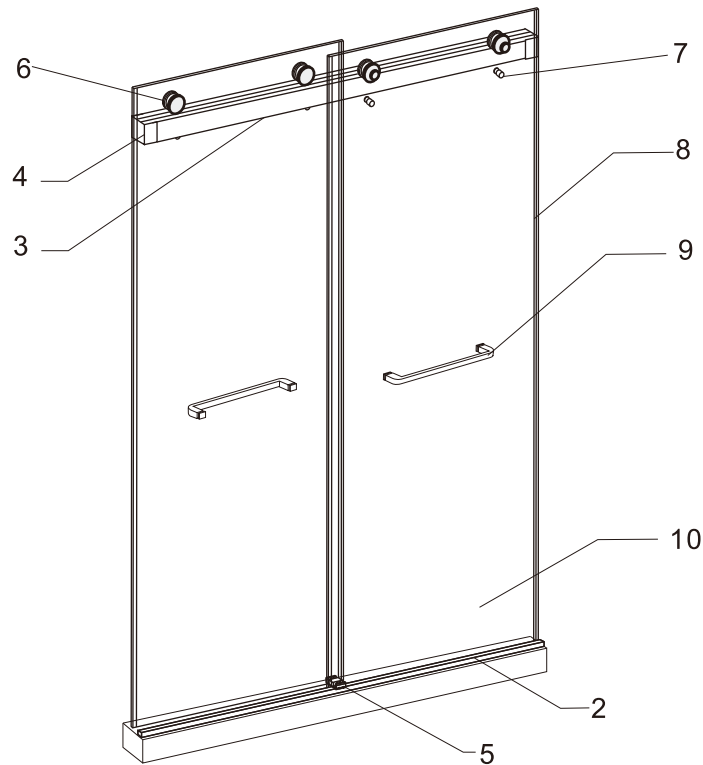

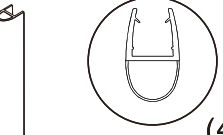1-1 Plastic Anchor  (6 PCS)	1-2 4*30 Screws  (4 PCS)	1-3 4*20 Screws  (2 PCS)
1-4 Allen Key 2.5mm  (1 PCS)	1-5 Allen Key 4mm  (1 PCS)	1-6 4mm Screw Cover  (4 PCS)
2 Door Threshold  (1 PCS)	3 Structural Rail  (1 PCS)	4 Wall Mount Bracket  (2 PCS)
5 Door Bottom Guide  (1 PCS)	6 Roller  (4 PCS)	7 Anti-Jump Guide  (4 PCS)
8 Waterproof Tape  (4 PCS)	9 Handle  (2 PCS)	10 Glass Door Panel  (2 PCS)

Note: Installation must be carried out by a qualified and licensed professional.
The actual quantity of accessories used shall be subject to the instruction manual.

MODEL SY222-Y-60x76B

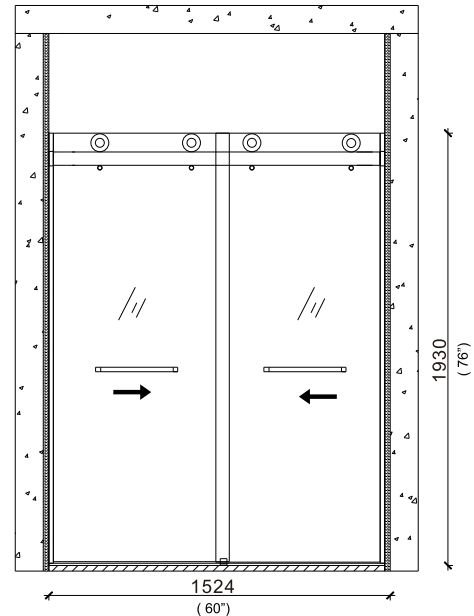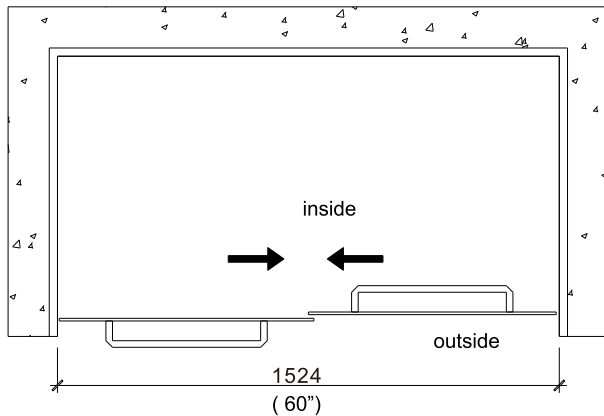

⊘ IMPORTANT


- Fiberglass, acrylic or sheetrock construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface. By not leveling the unit during construction the unit may leak causing possible water damage.

BEFORE INSTALLATION: If needed, remove the plastic layer of the base border. Do not remove the plastic layer off the plastic platform of the base. Wall and base joints must be siliconed properly.

PLEASE NOTE:


THE CLEAR GLASS MODEL HAS A REVERSIBLE DOOR AND CAN BE INSTALLED TO THE RIGHT OR LEFT SIDE. (SEE CONFIGURATION DIAGRAM BELOW)

See suggestion of configuration below.

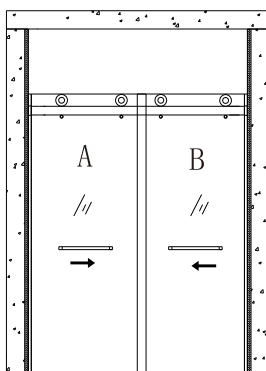

Pay attention to the location of the hole

Movable Glass



front

Movable Glass



front

The two pieces of glass are identical, no matter they are installed in position A or B, the nano-hydrophobic coating is inside the shower enclosure.




One side of the nano layer is the side with stickers attached


INSTALLATION MANUAL

1

Determine the installation position and adjust the base to ensure that the ground is horizontal and the wall is vertical.

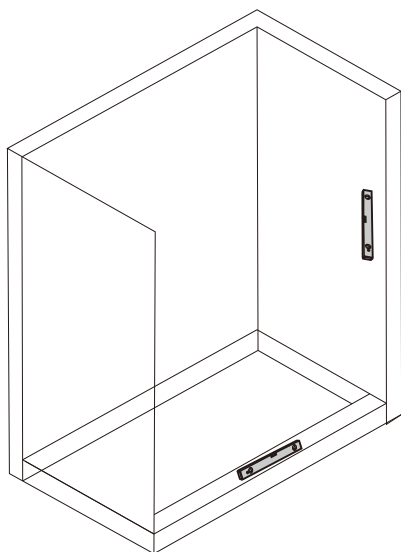

One side of the nano layer is the side with stickers attached

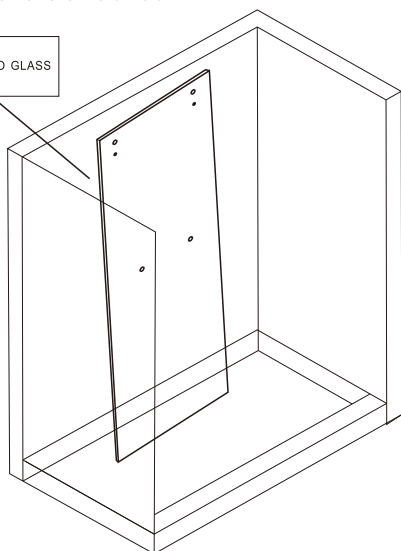


2


Place one of the glass door panels(#10) in the shower with the front side facing out and the nano coating facing in, to prevent damage to the glass or base / the tub from not being able to properly seat the glass.

3

Determine the installation position, use a level to determine the center installation position of the shower room, and mark the line with a pencil.


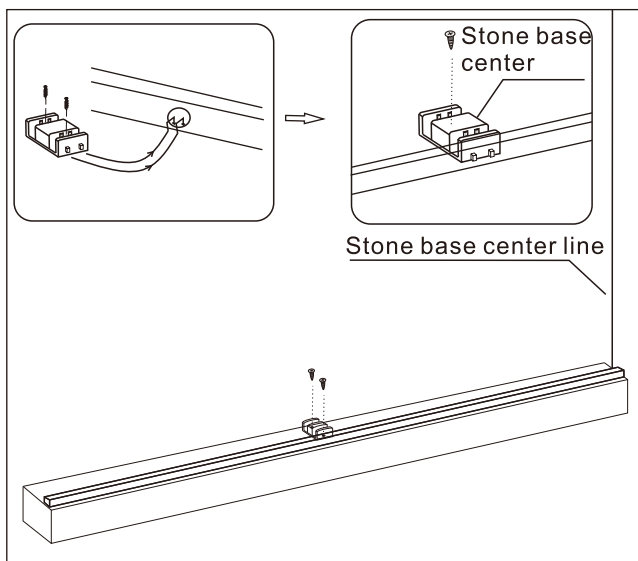


INSTALLATION MANUAL

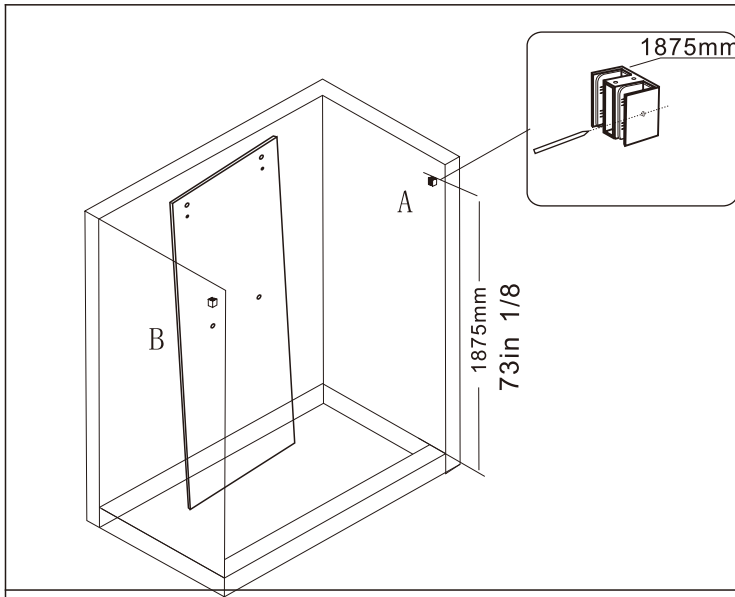



4

On both walls, use a tape measure to draw a horizontal line 1875mm (73in 1/8) from the ground with a pencil. Place the top of the wall mount bracket (#4) on the marked horizontal line, the center of wall mount bracket corresponds to the centerline of the location where the shower enclosure needs to be installed, and mark the positions of the left and right screw holes.

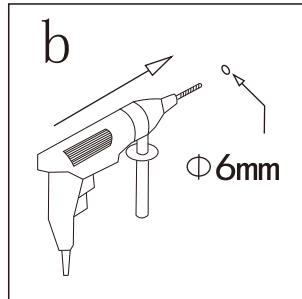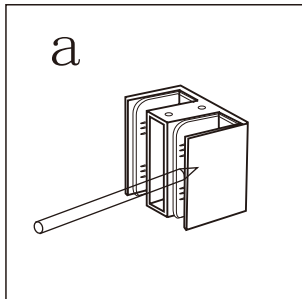


5

Use the same method to mark the other side of the wall. Use a hand drill to drill a 6mm hole at the mark. Insert the plastic anchor (#1-1). Use 4*30 screws (#1-2) to install a wall mount bracket (#4) at wall A.

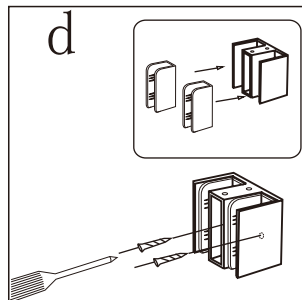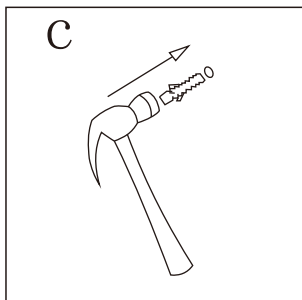

6


Use allen key 2.5mm(#1-4) to loosen the screws on the wall mount bracket (#4), slip the structural rail (#3) into the wall mount bracket(#4), insert them together into the wall mount bracket A (#4), use 4*30 screws(#1-2) to install another wall mount bracket (#4) at the other wall.

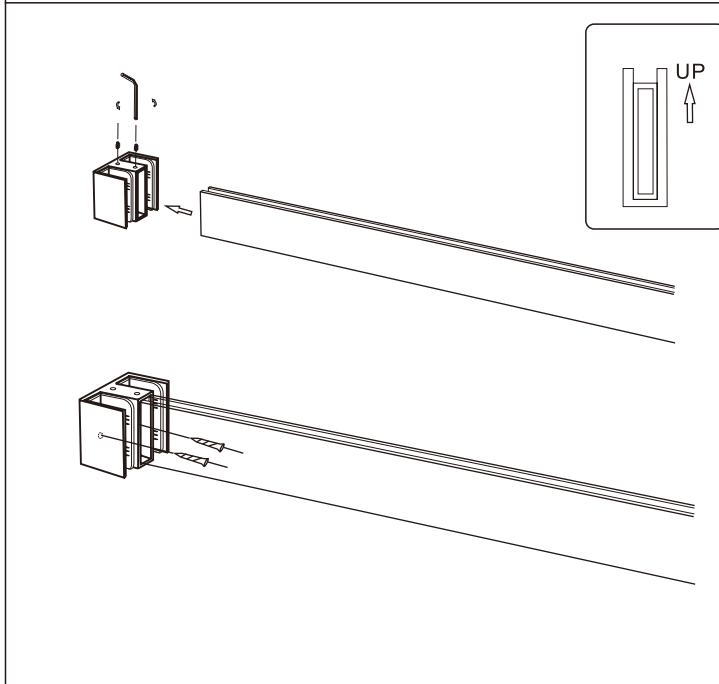

INSTALLATION MANUAL


7

Use the allen key 2.5mm(#1-4) to tighten the hex screw on the wall mount bracket (#4).

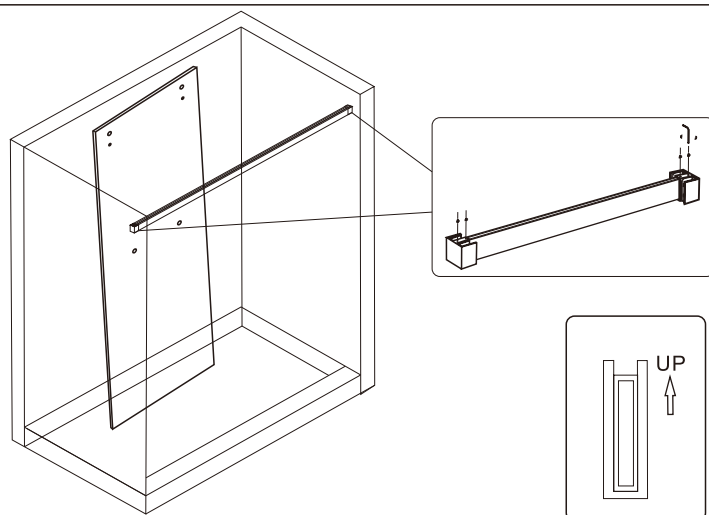


8

1. Place the door bottom guide (# 5) as shown in the picture and clip it into the hole in the middle of the door threshold (# 2) from top to bottom (note that the door bottom guide is inside the structural rail).
2. Mark the screw holes and use a handheld drill to drill a 6mm hole at the marked location.
3. Insert the rubber plastic anchor (# 1-1) and then install the door bottom guide (#5) on the ground with 4*20 screws (#1-3).

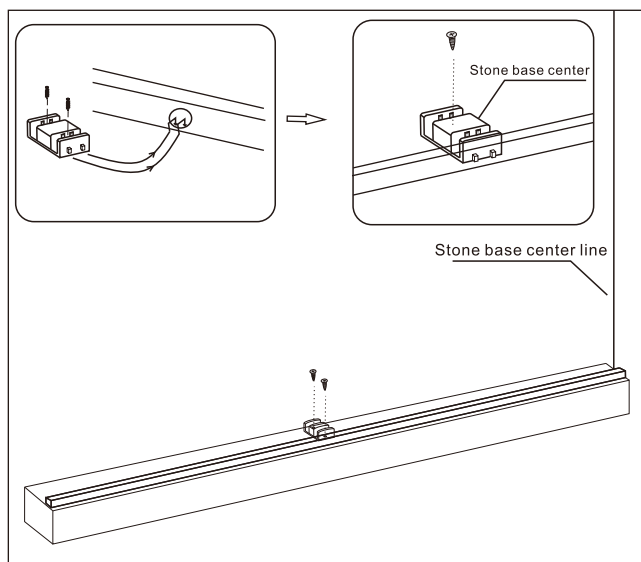

9


Install the roller (#6) on the glass door panel A (#10) stored inside. Note that the roller is on the outside of the glass. Unscrew the cover on the back of the roller. Remove the large hexagon screw, insert the screw through the hole on the top of the movable door glass, and tighten the screw.

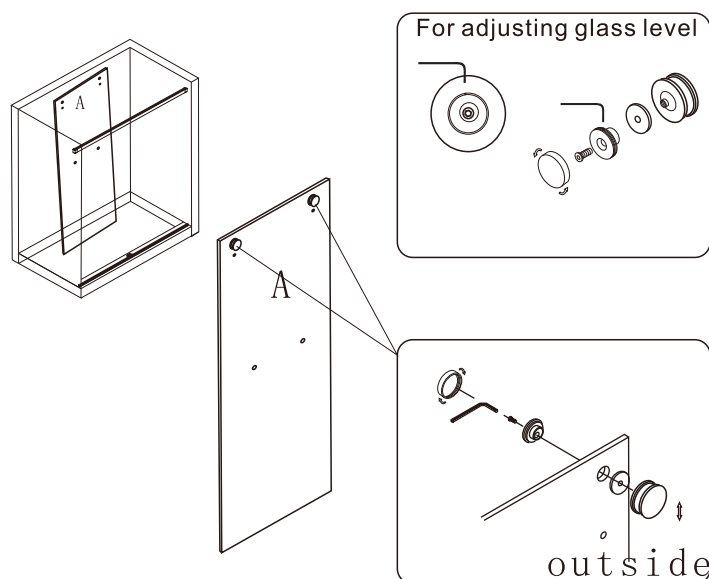

INSTALLATION MANUAL


10

Hang glass door panel A (#10) onto the track from the inside and insert the bottom of the glass into the inner groove of the door bottom guide (#5).

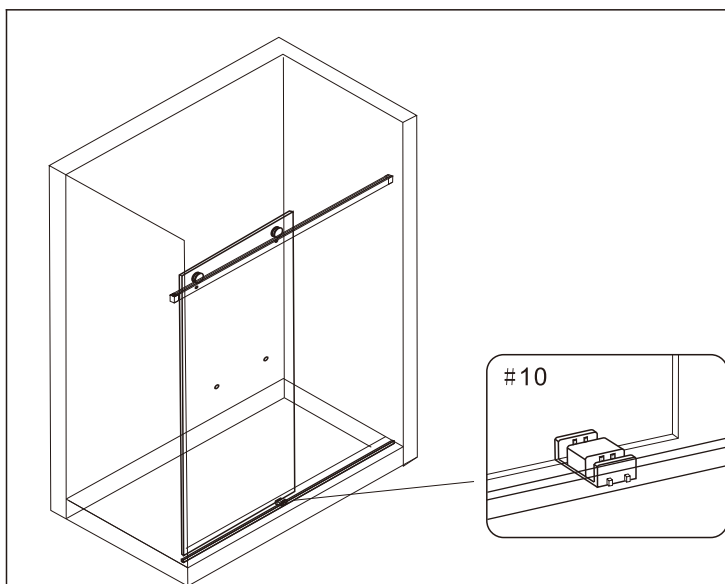


11

Install the roller (#6) on the other glass door panel B (#10). Note that the roller (#6) is on the inside of the glass. Note the nano hydrophobic coating inside.

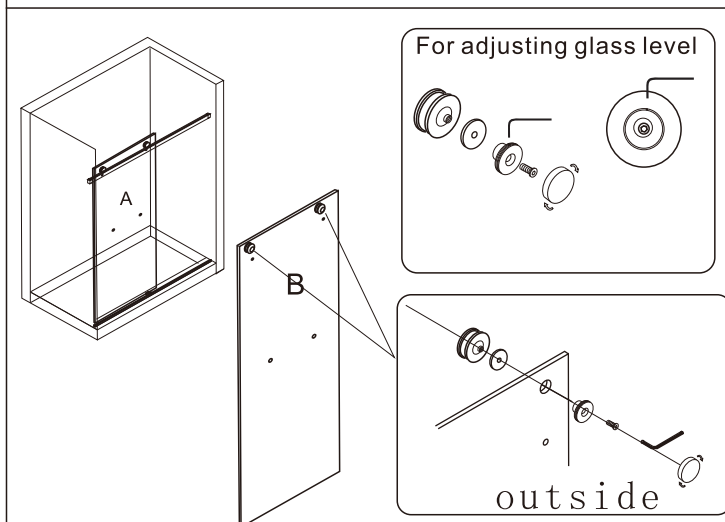



12

Hang the another movable glass door panel (#10) onto the track from the outside. At the same time, insert the bottom of the glass into the outer groove of the door bottom guide (#5).

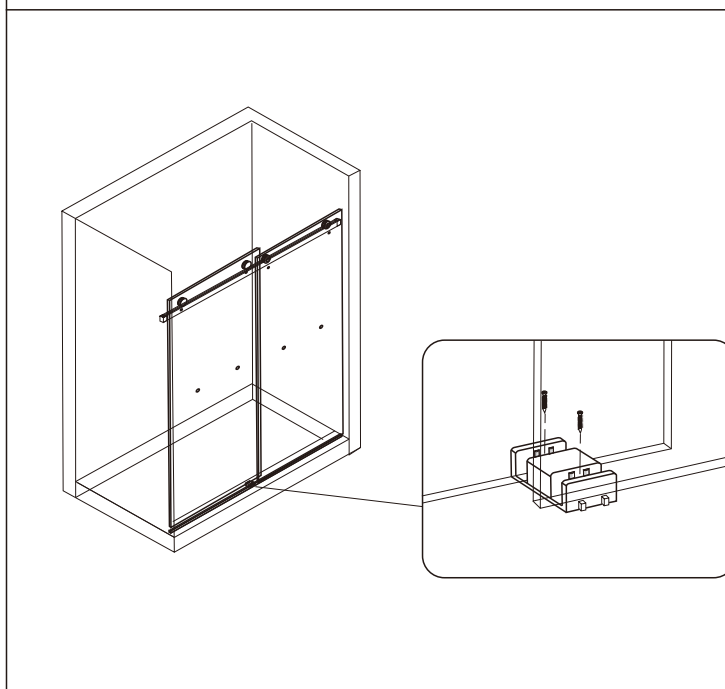

INSTALLATION MANUAL

Use your hand or a 2.5mm allen key (# 1-4) to assist in rotation

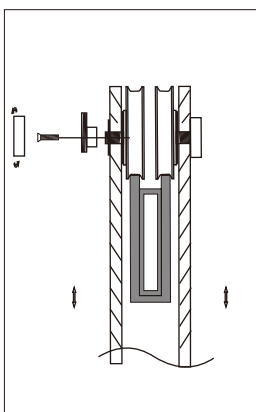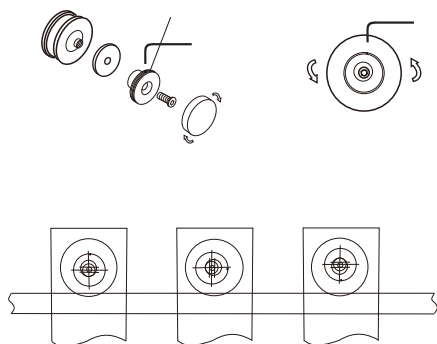

13


Open the roller(#6) cover adjust the balance of the glass door panel:

1. Open the back cover of the roller(#6) and use allen key 4mm (#1-5) to loosen a little bit of the hex screw (not removed, only adjusting the tension for adjustment).

2. Then insert the allen key into the small hexagonal hole as shown in the picture, and adjust it by rolling to the right or left until the glass is completely perpendicular to the wall.


14

Install the anti-jump guide(#7) at the bottom of the four rollers (#6). The direction of the rubber ring should be consistent with the rollers (#6).

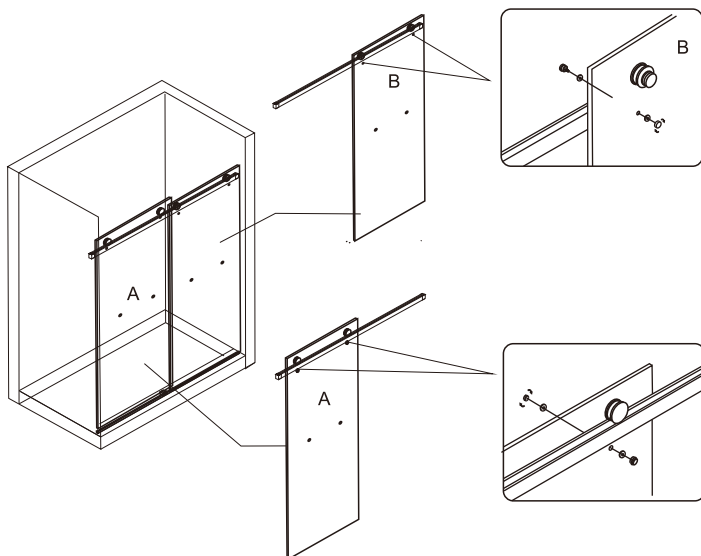


15

Inside glass door panel (#10) A, handle (#9) is installed inside, tighten the nut from the outside of the shower.

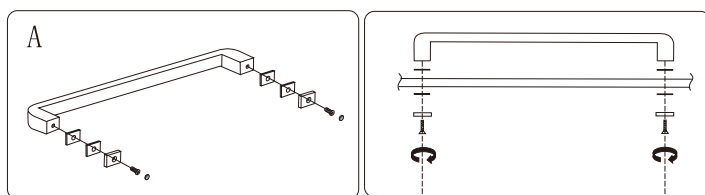


Outside glass door panel(#10) A, handle (#9) is installed on the outside, tighten the nut from the inside of the shower.

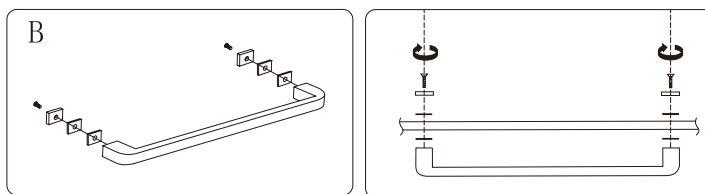

INSTALLATION MANUAL


16


Install waterproof tape (#8) on both sides of the two glass door panels (#10).
Align the bottom of the glass and tap it in with your hands or a soft hammer.

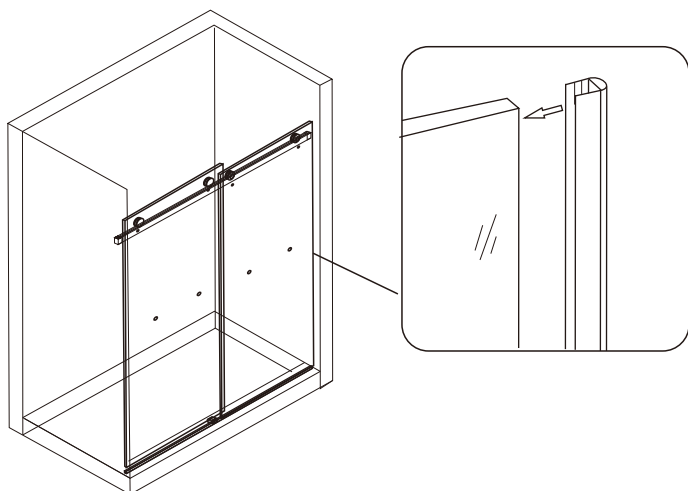

17

Put 4mm screw cover (#1-6) on the two handle screws.

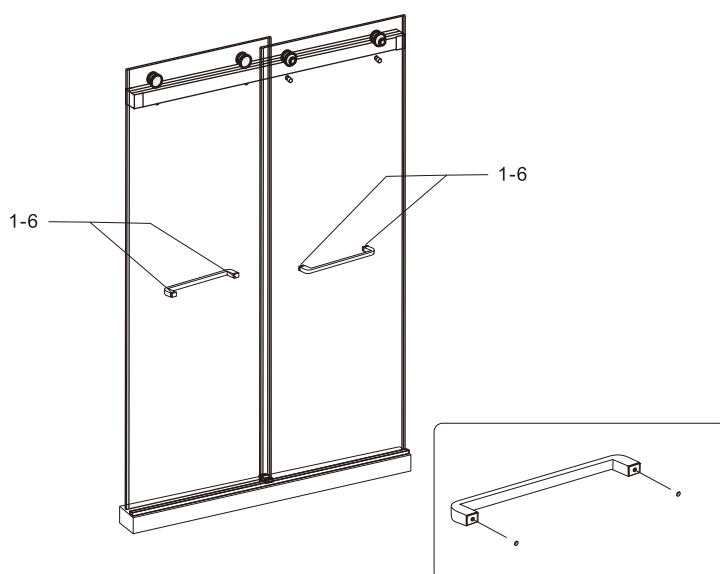

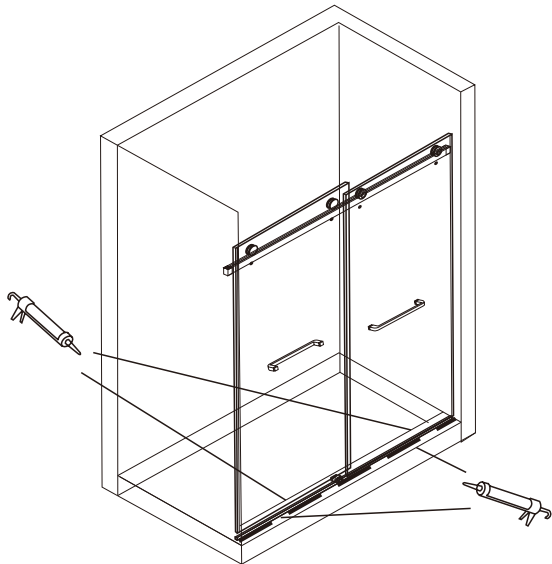

* Do not use the enclosure for at least 24 hours.



Apply clear silicone caulking along the floor of the shower enclosure interior and along the fixed panel and threshold of the shower enclosure interior.
(Note: Both the inside and outside sides are required)

IMPORTANT

- WAIT 24 HOURS BEFORE USING SHOWER
 - DO NOT ALLOW WATER TO DIRECTLY HIT DOOR SEAL STRIPS.
- CLEANING INSTRUCTIONS FOR THE SHOWER CABIN AND DOOR PANEL

1. Use a mild liquid household cleaner to keep metal surfaces bright and clean. Rinse well and dry with a soft, clean cloth.
2. Remove dust with a soft, damp cloth.
3. Use a standard household window cleaner to clean the glass panels.
4. A water beading treatment, similar to what you would use on an automobile windshield, can be used on the inside of the glass to keep it looking brand new.
5. Use rubbing alcohol to clean and remove grease, oil, paint and ink.
6. Should you accidentally scratch or stain your shower enclosure, use a liquid automobile polish to remove.

IMPORTANT

1. DO NOT use abrasive cleaners, scrapers, metal brushes or any items that could scratch or dull the surface.
2. DO NOT allow surface to come in contact with acetone (nail polish remover), dry cleaning solution, lacquer thinner, gasoline or other similar products.

REGULAR CARE AND MAINTENANCE OF YOUR SHOWER ENCLOSURE

Your home is a moving entity, shifting and settling over time. We understand this and has designed their shower enclosures with this in mind. It is the responsibility of the homeowner or end user to maintain the integrity of their newly installed enclosure, using the integrated adjustability features. In order to keep your shower enclosure in optimal working condition, recommends regularly inspecting your enclosure and tightening any hardware that may have loosened during use. This simple step will insure optimal results from your shower enclosure for many years to come.