

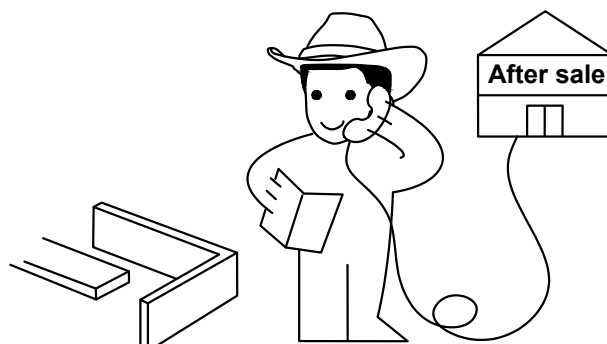
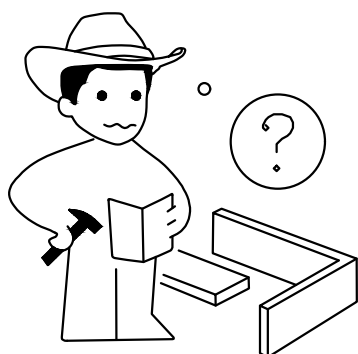
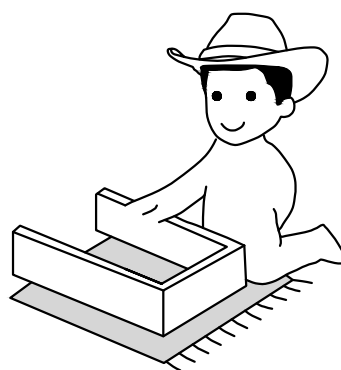
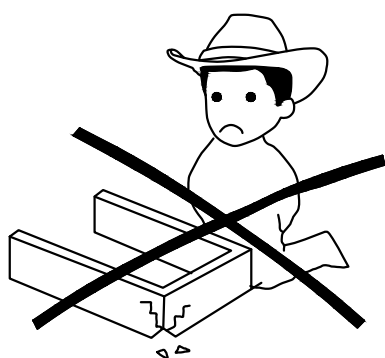
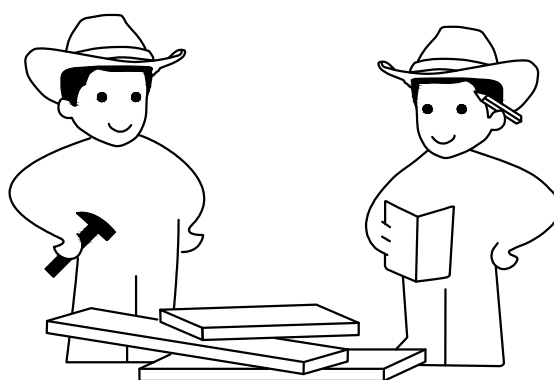
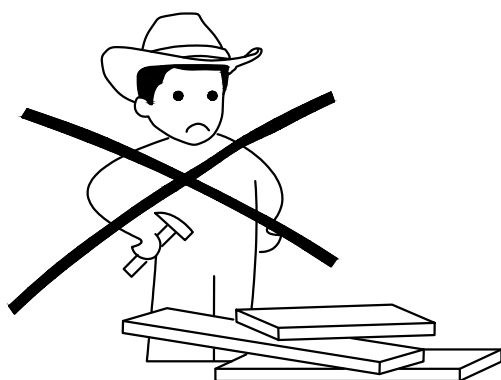
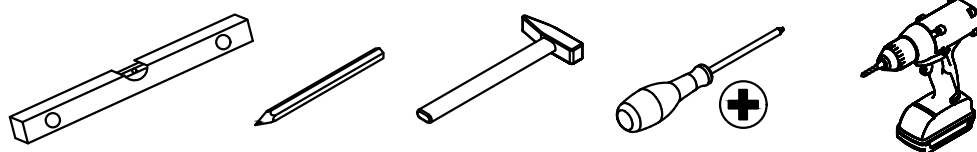
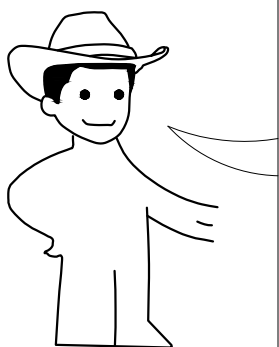
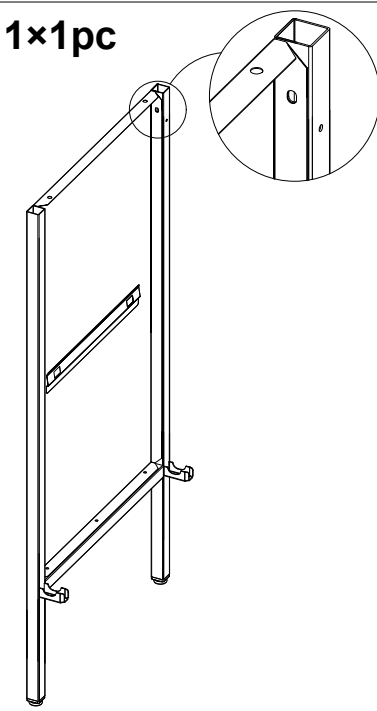
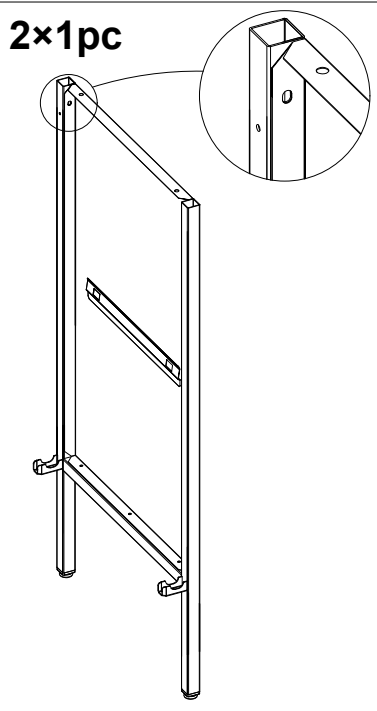
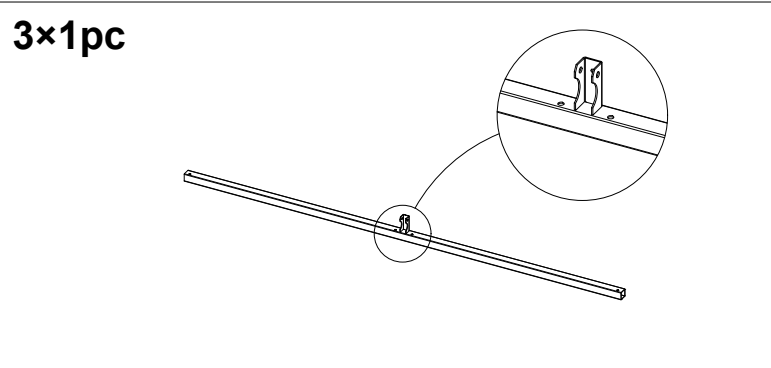
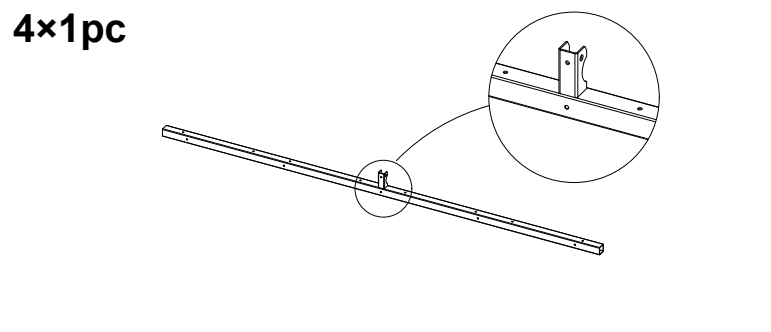
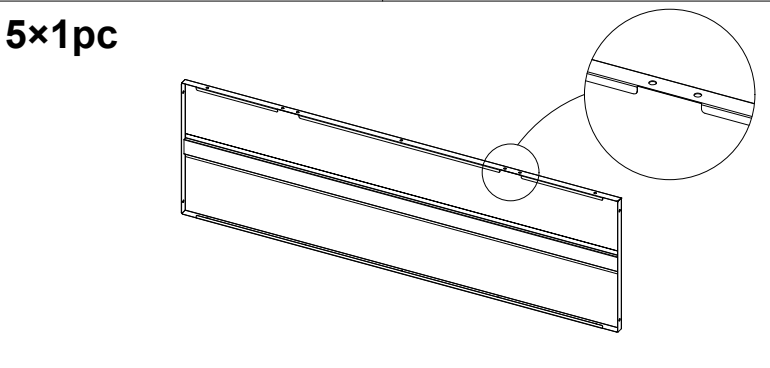
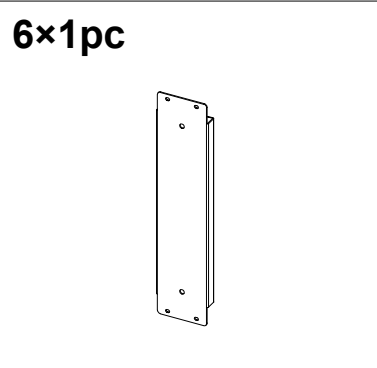
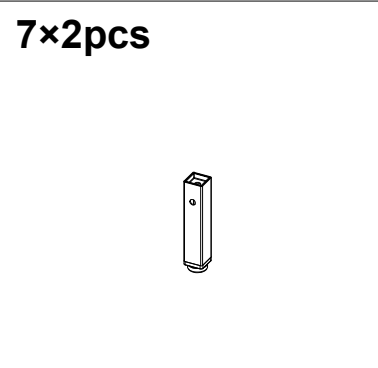
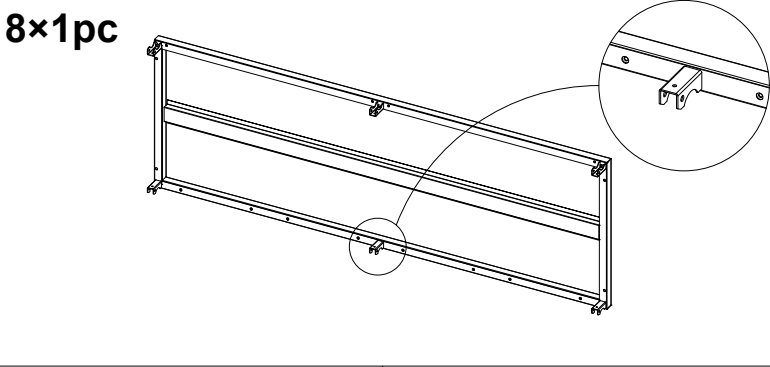
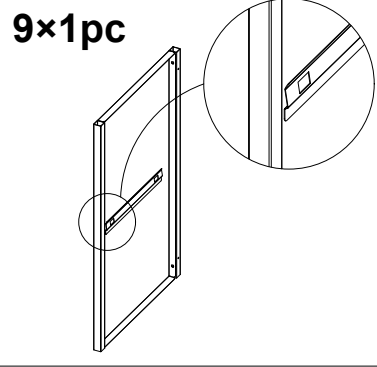
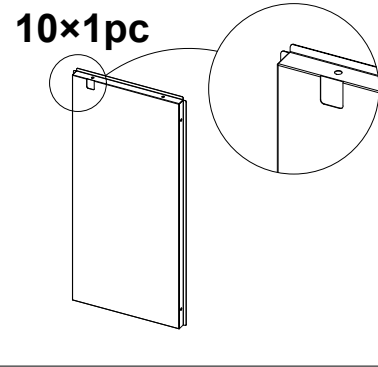
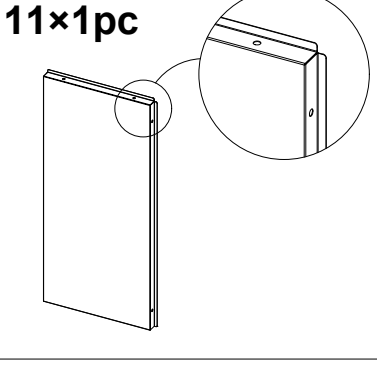
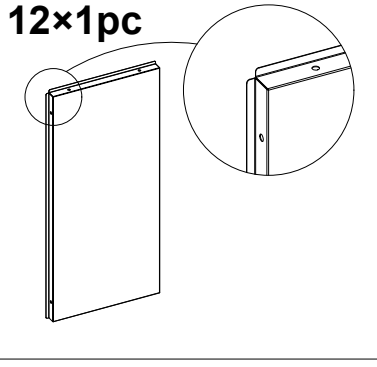
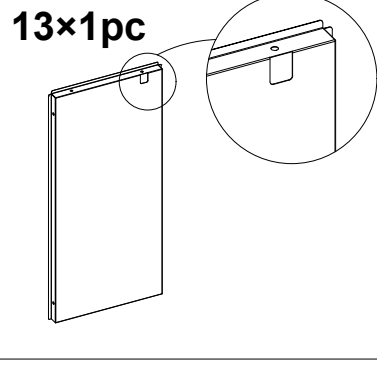
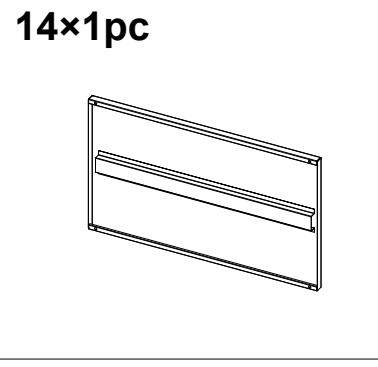
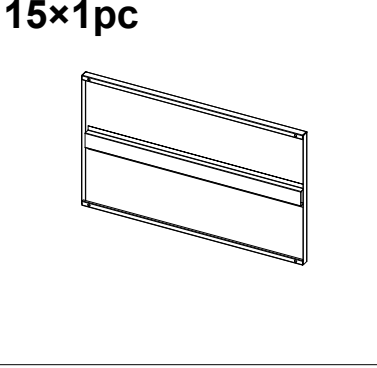




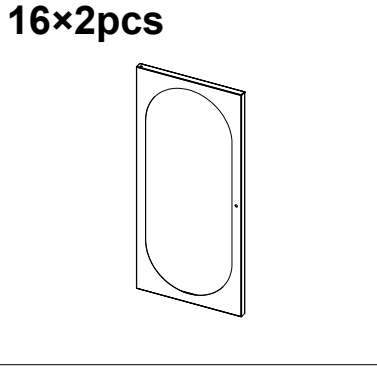





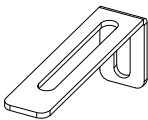






Installation video

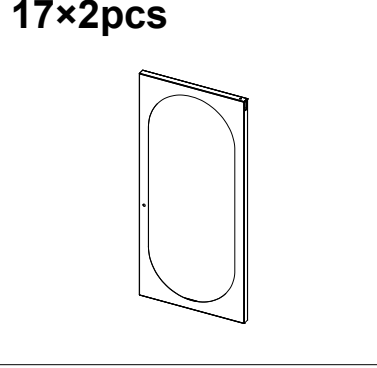


<b>1×1pc</b> 	<b>2×1pc</b> 	<b>3×1pc</b> 
		<b>4×1pc</b> 
<b>5×1pc</b> 	<b>6×1pc</b> 	<b>7×2pcs</b> 
<b>8×1pc</b> 	<b>9×1pc</b> 	<b>10×1pc</b> 
<b>11×1pc</b> 	<b>12×1pc</b> 	<b>13×1pc</b> 
		<b>14×1pc</b> 
<b>15×1pc</b> 	<b>16×2pcs</b> 	<b>17×2pcs</b> 

<b>A×68pcs</b>  M4×8mm	<b>B×4pcs</b>  M6×10mm	<b>C×4pcs</b>  M4×22mm	<b>D×4pcs</b> 	<b>E×4pcs</b> 	<b>F×1pc</b>  4mm	<b>G×8pcs</b> 	<b>H×4pcs</b> 
<b>I×4pcs</b> 	<b>J×2pcs</b>  M6×25 mm	<b>K×2pcs</b> 	<b>L×2pcs</b> 				

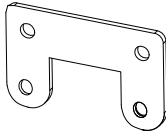

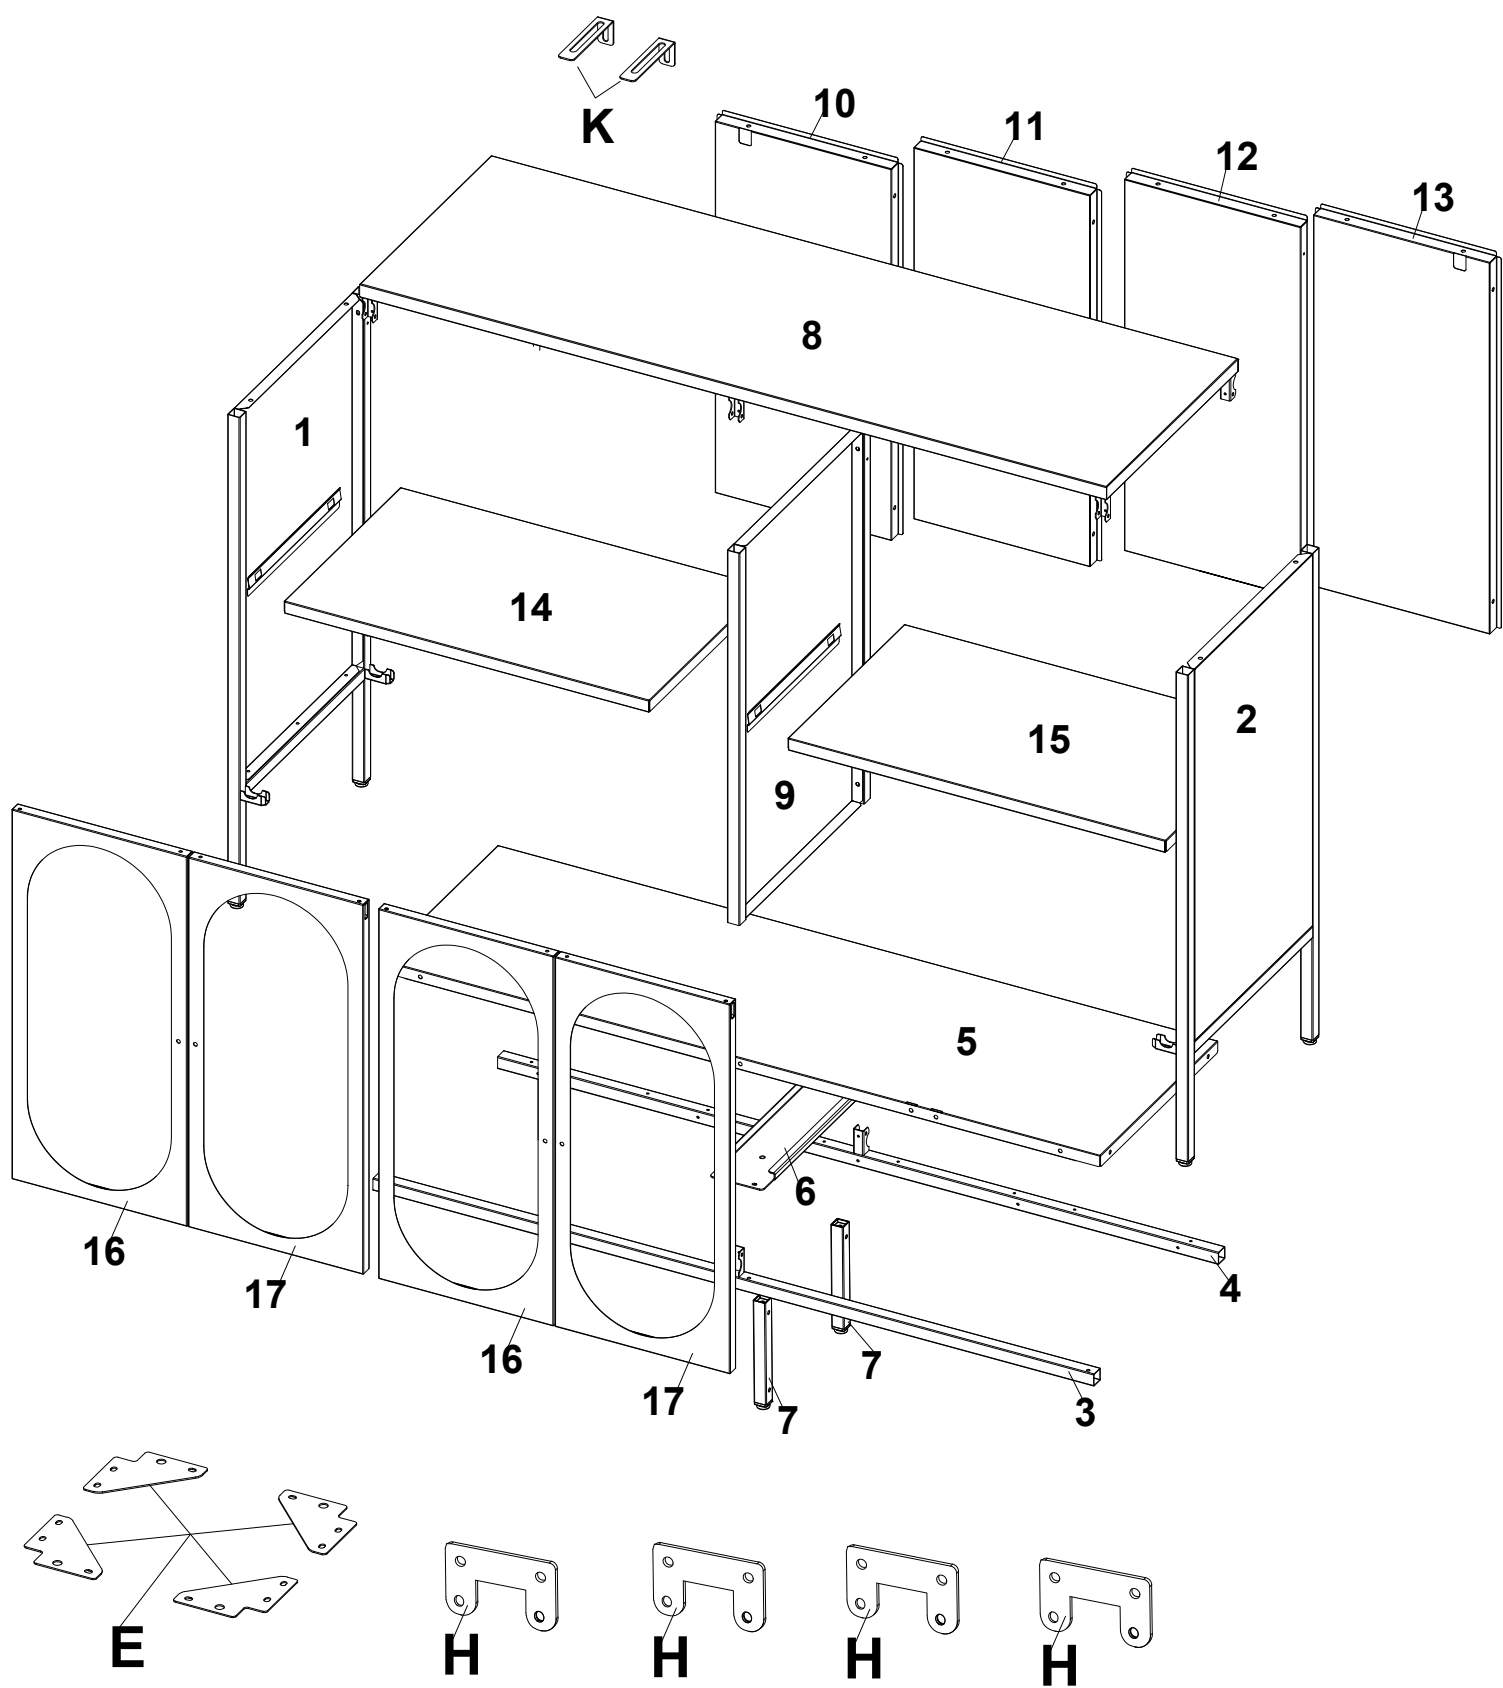


# 1

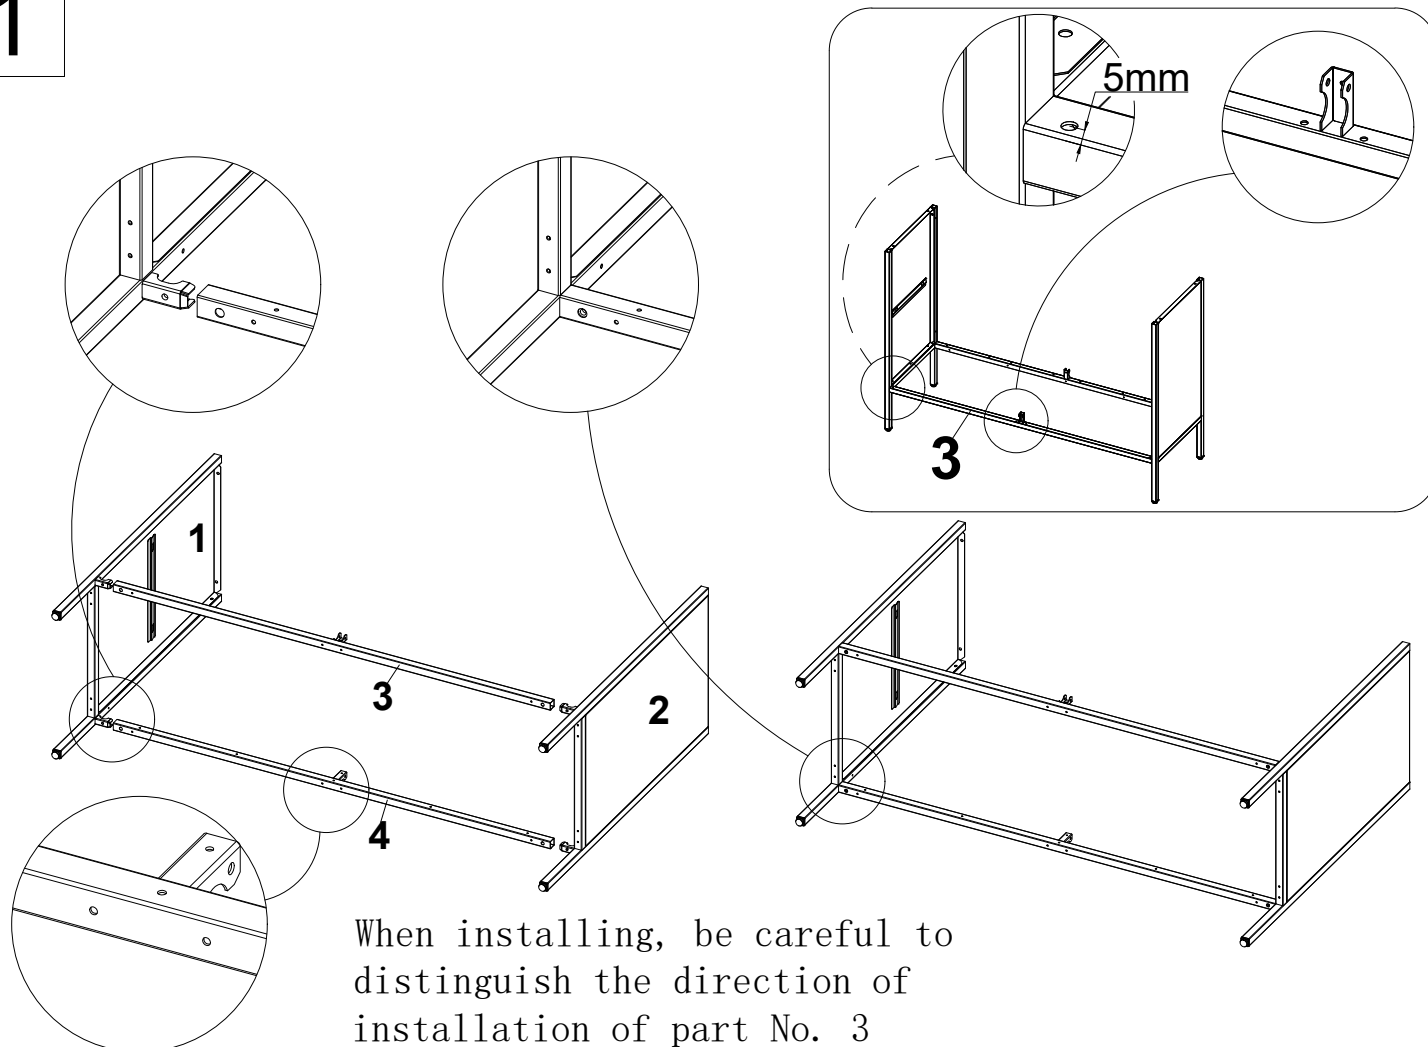



# 2

When installing Accessory E, install B screws in the large holes and A screws in the small holes.

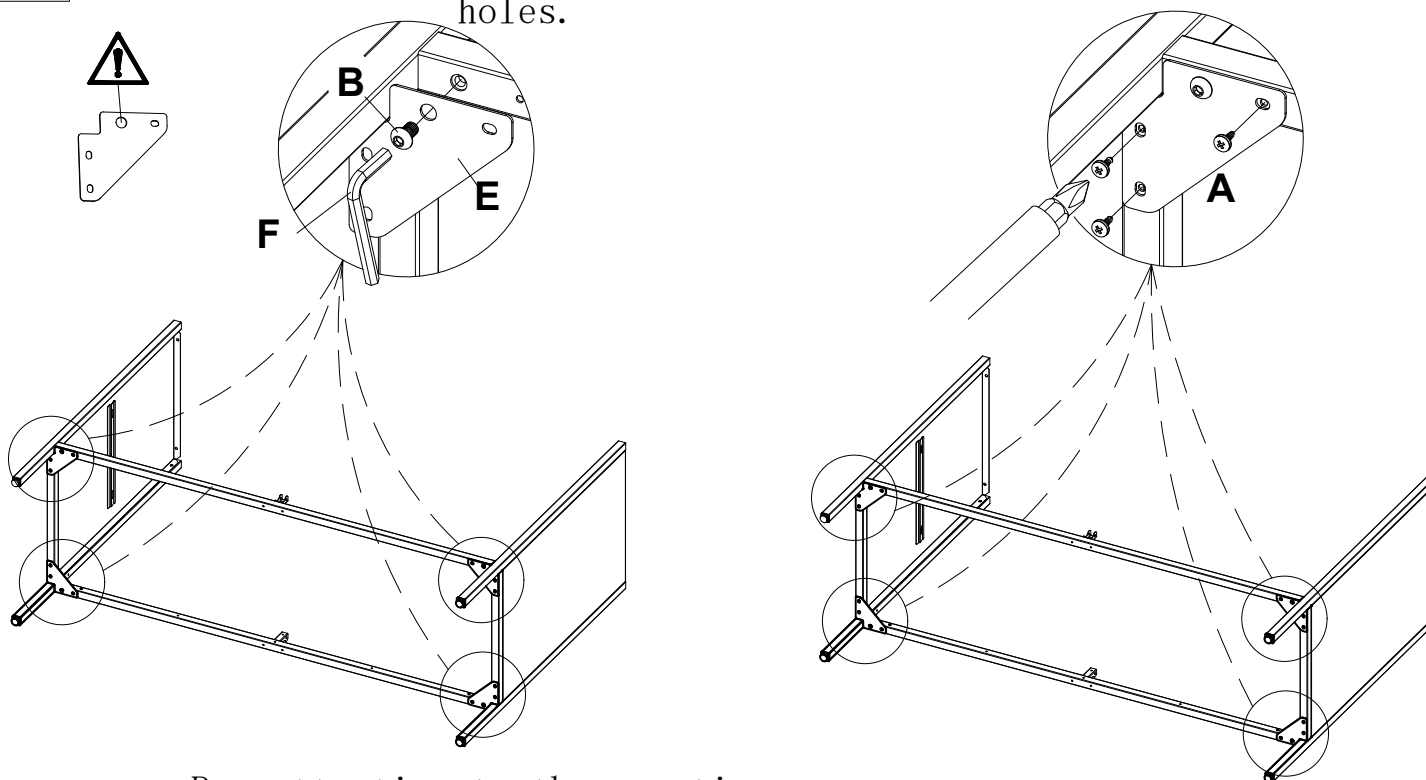

<b>A×12</b>	<b>B×4</b>	<b>E×4</b>	<b>F×1</b>
-------------	------------	------------	------------


# 3

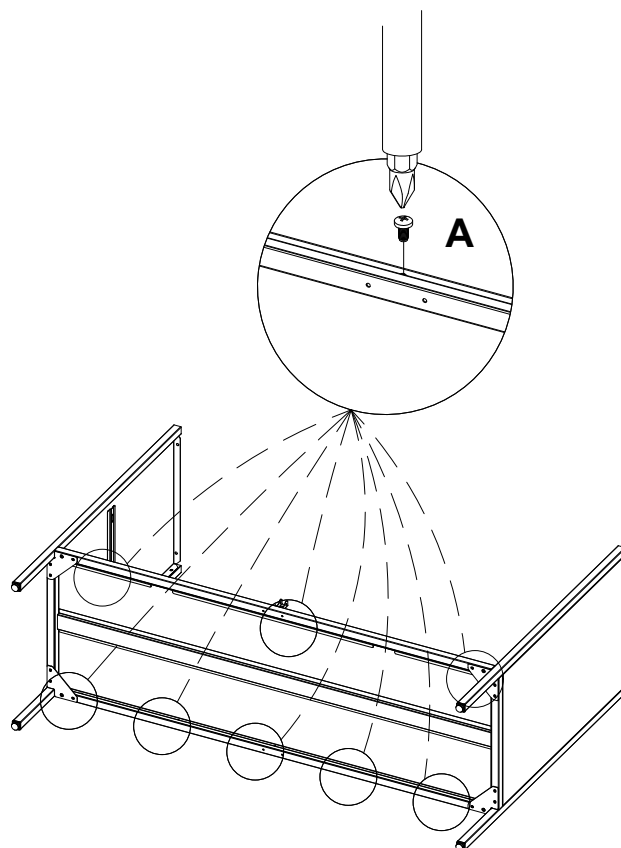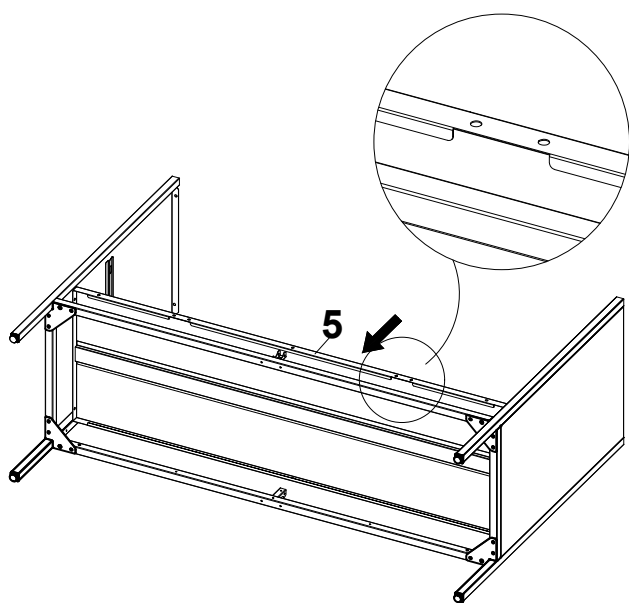




8 screws need to be installed here (no screws where there are gaps in the floor)

 **A×8**

# 4

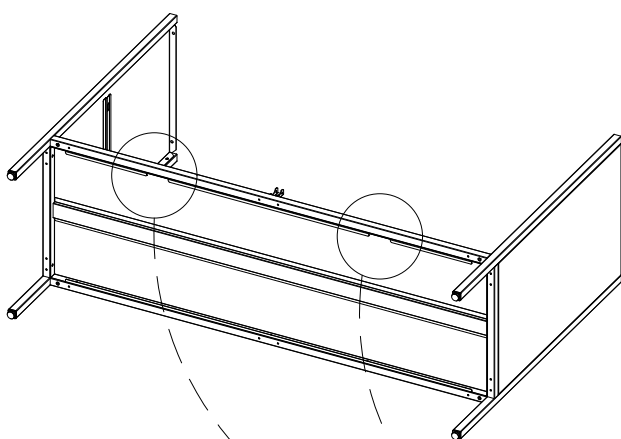

Install the magnet after putting the fitting H through the base plate first.

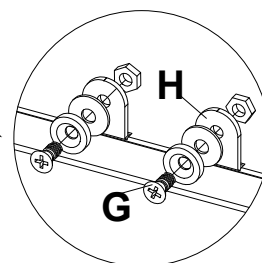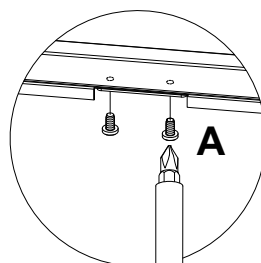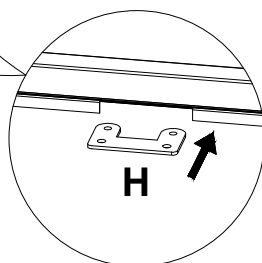


 **A×4**

 **G×4**

 **H×2**


# 5

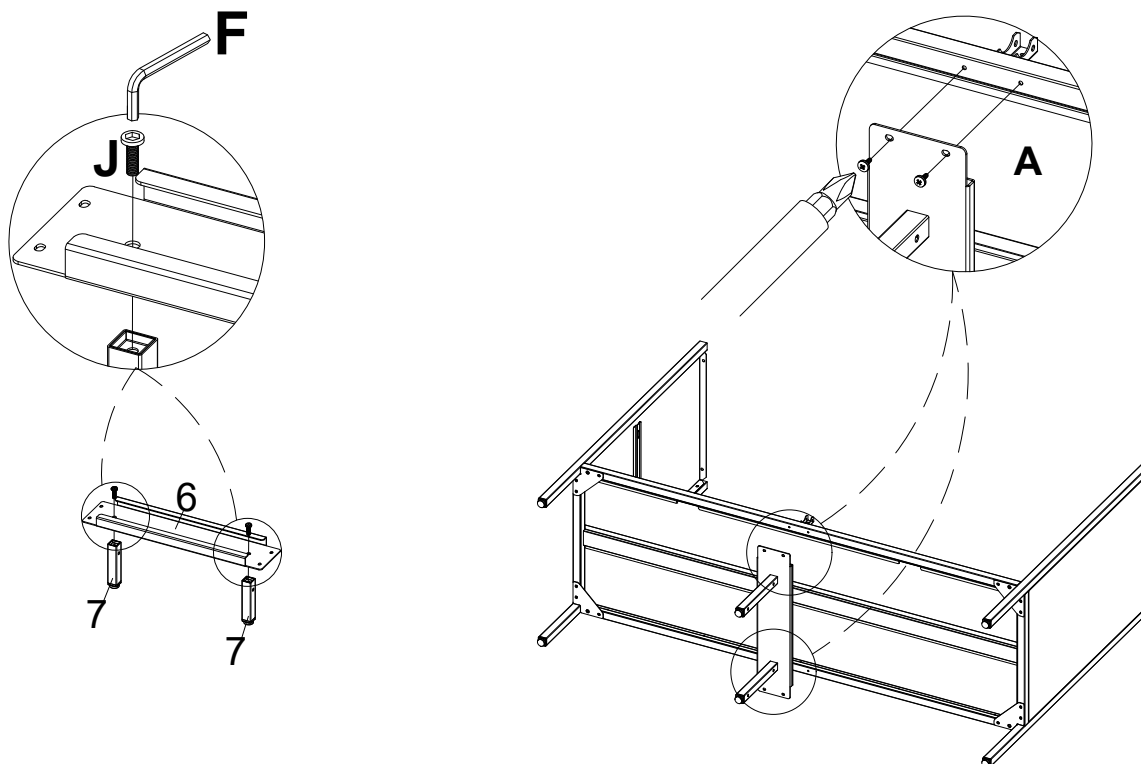

Installation to the cabinet floor  
after installing fittings 6 and 7  
in place




# 6

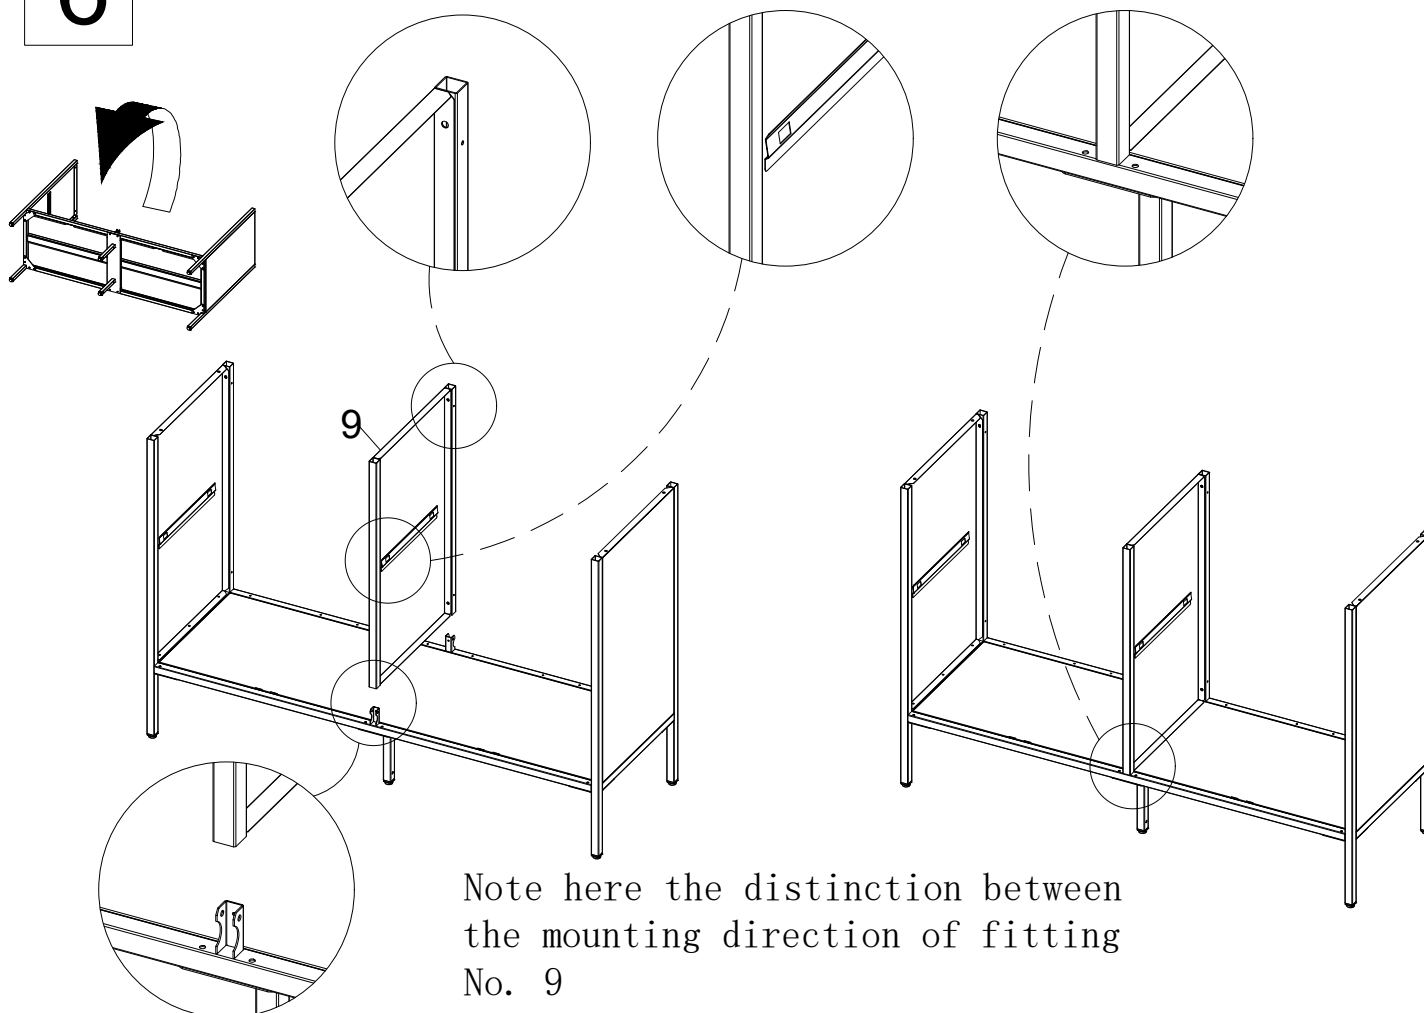


Note here the distinction between  
the mounting direction of fitting  
No. 9



# 7







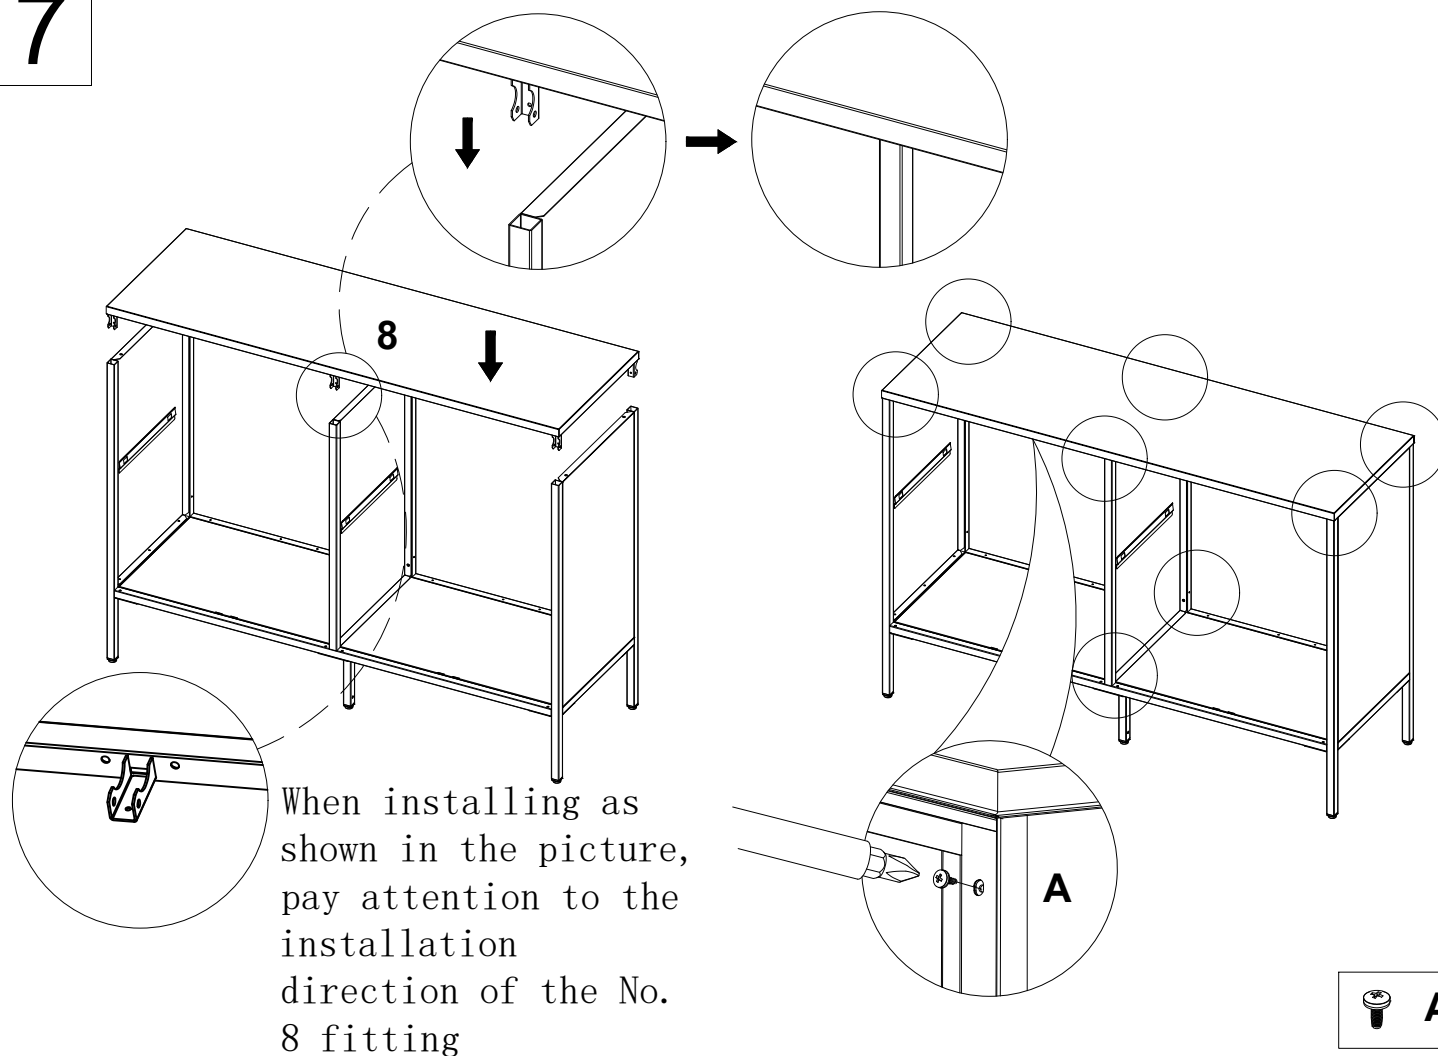


# 8

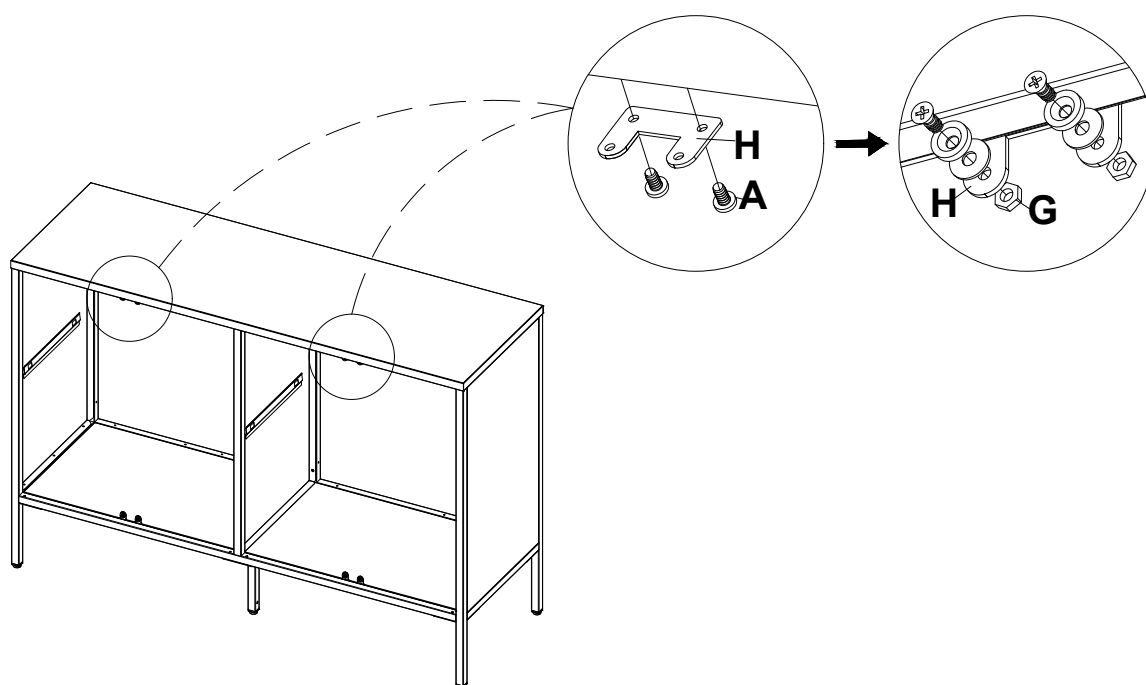







Top-mounted H-fittings and bottom-mounted H-fittings correspond one to the other

9

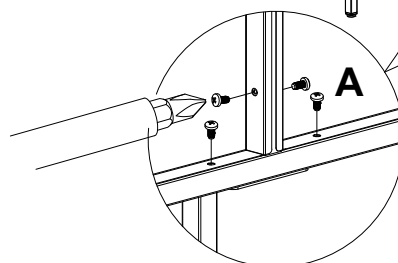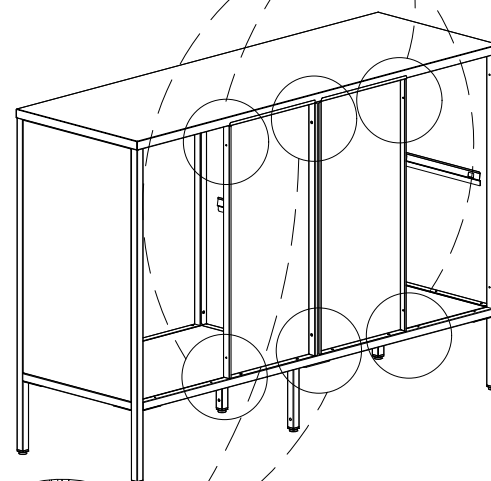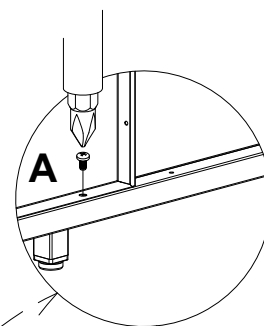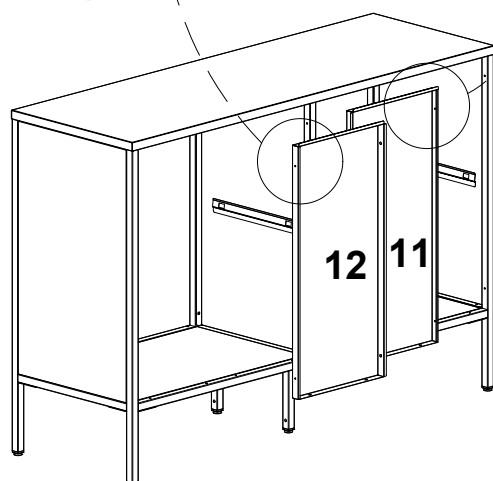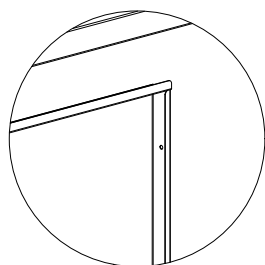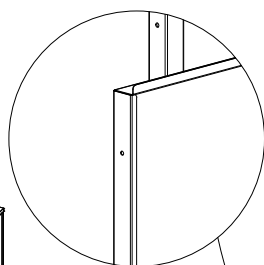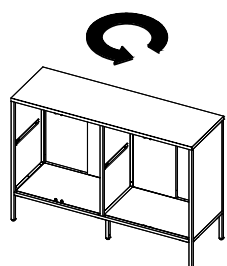






 A×12

10

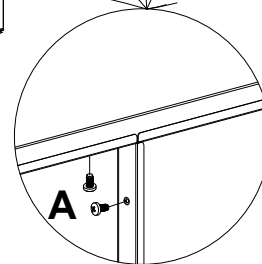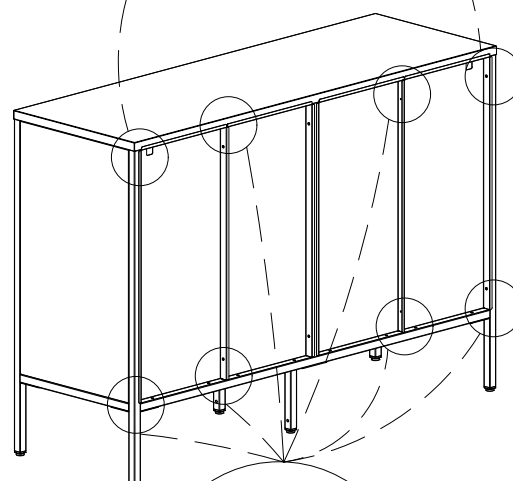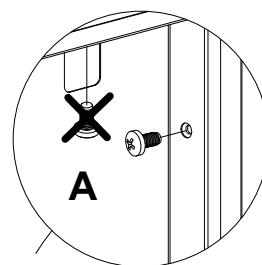
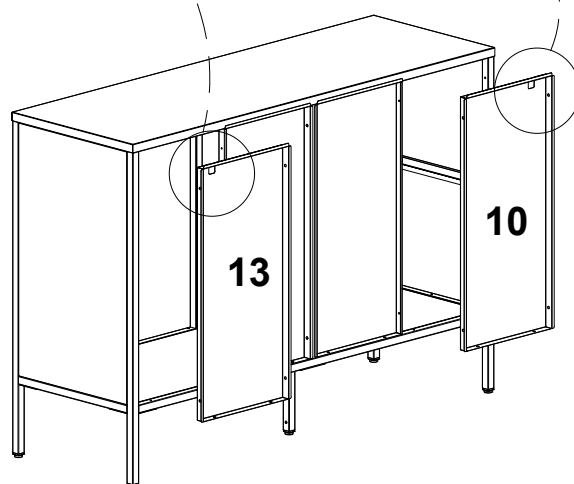
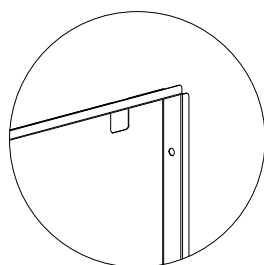
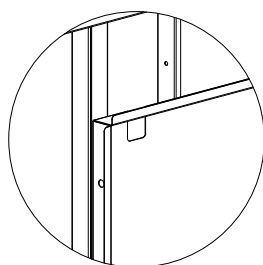


 A×14



11

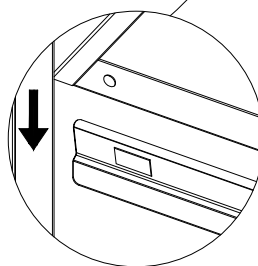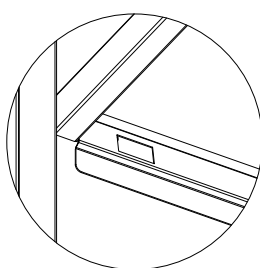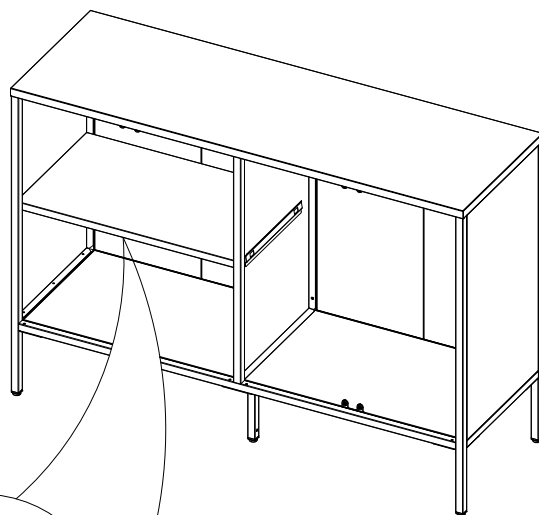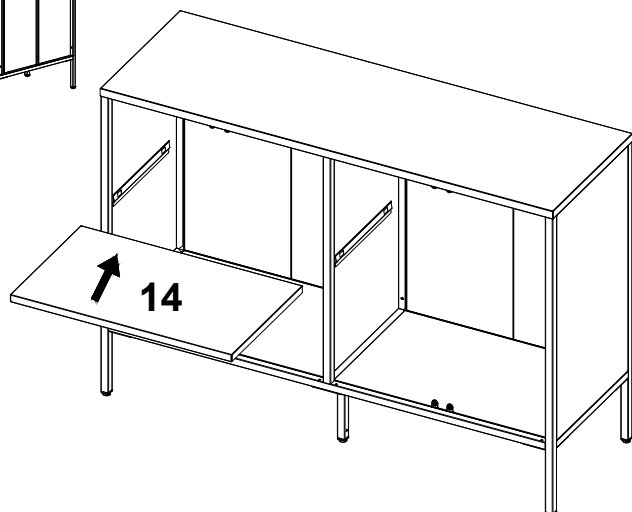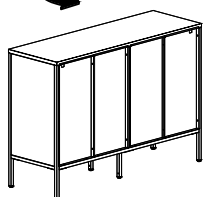

12

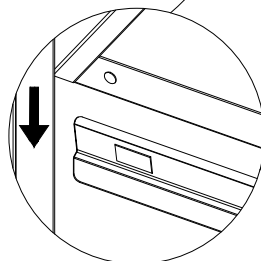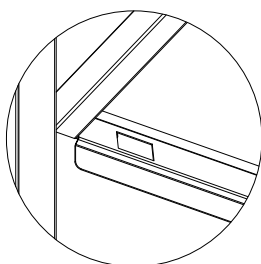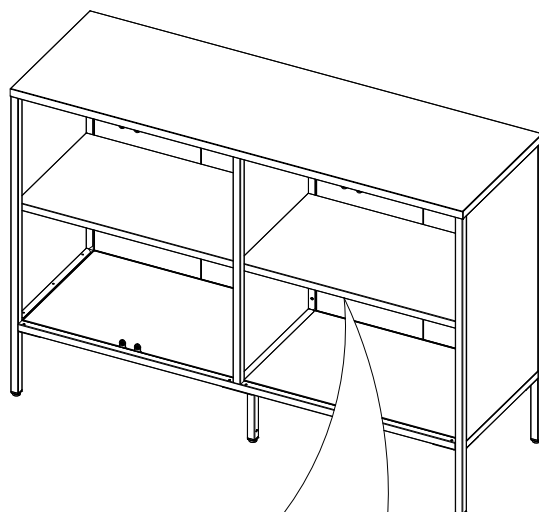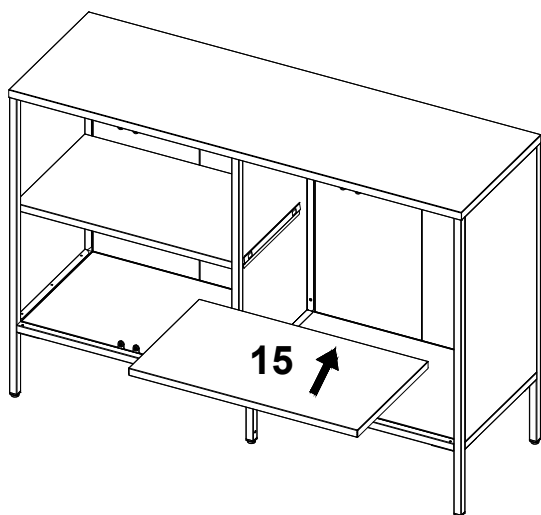


# 13

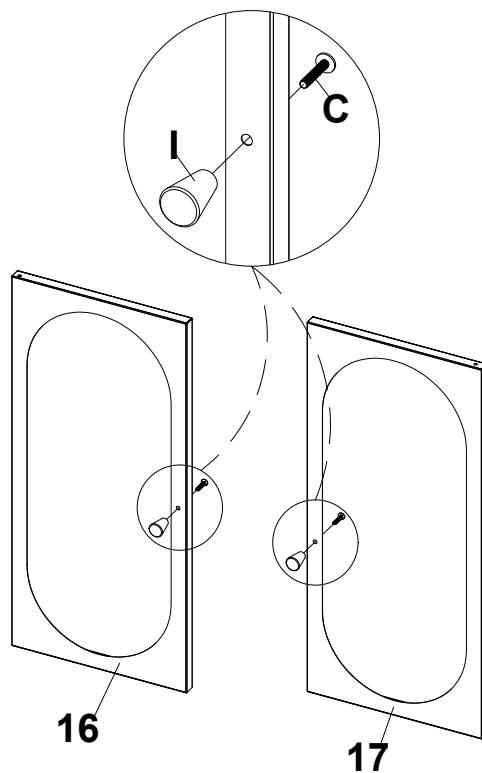







# 14

## STEP 2

## STEP 1

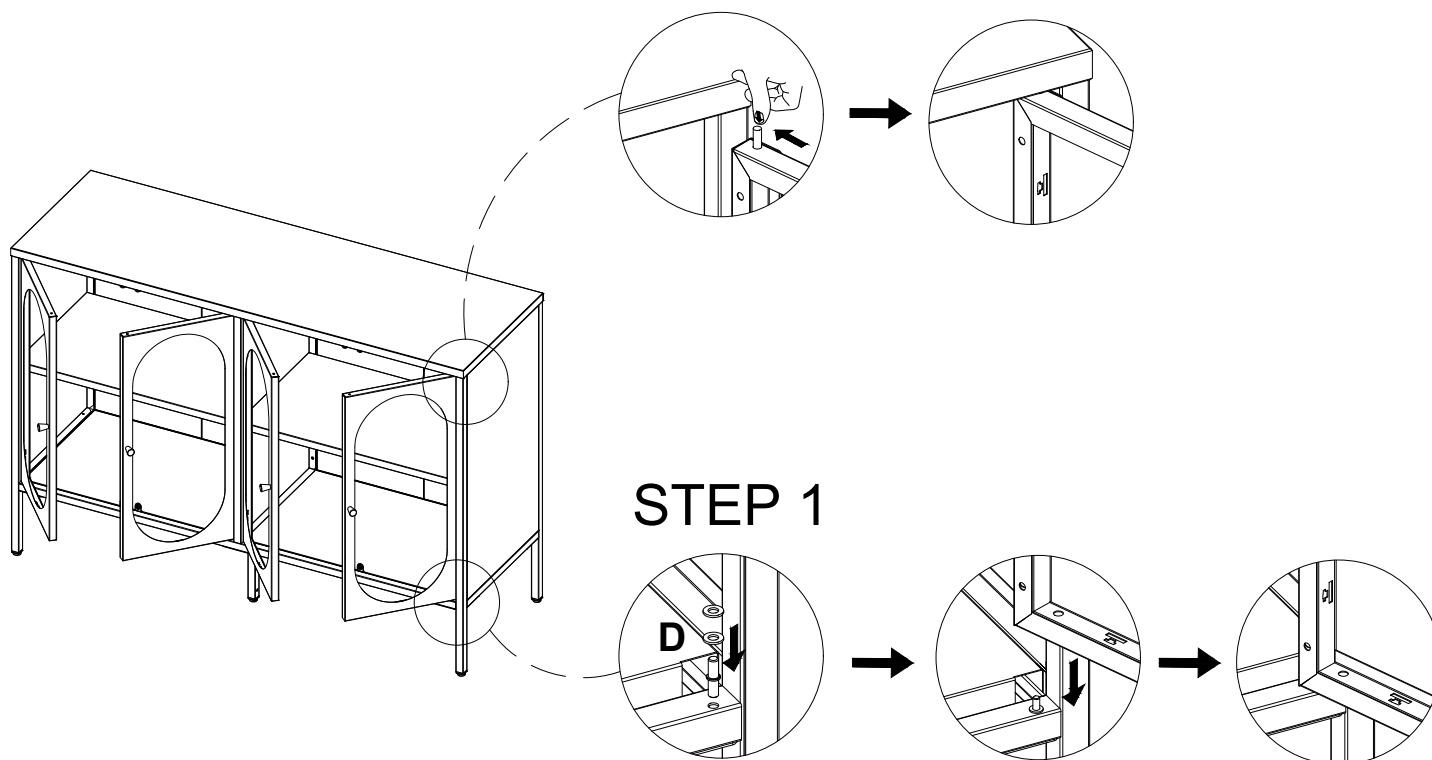

# 15

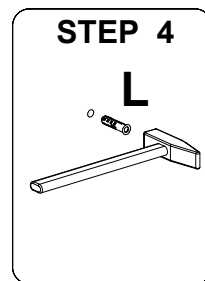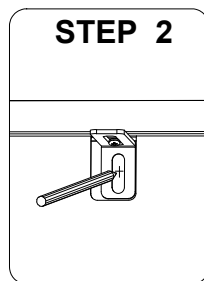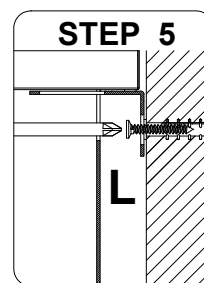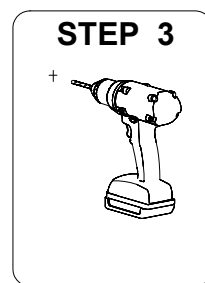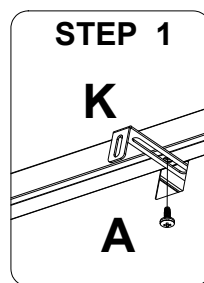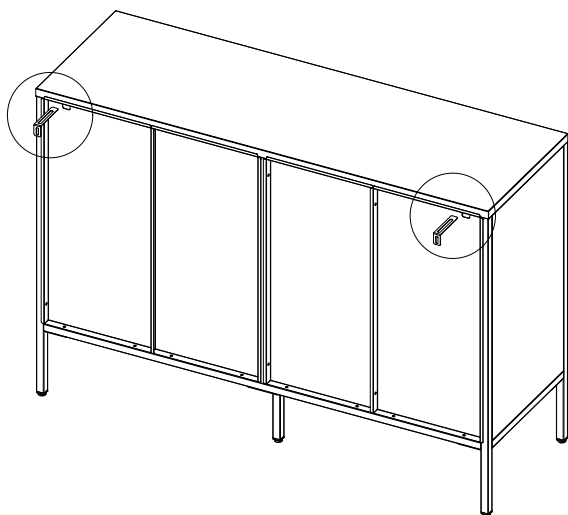

<b>A×2</b>	<b>K×2</b>	<b>L×2</b>
------------	------------	------------

# 16

