


Pure Cloud Sofa

Owner's Manual

MODEL:FSO035

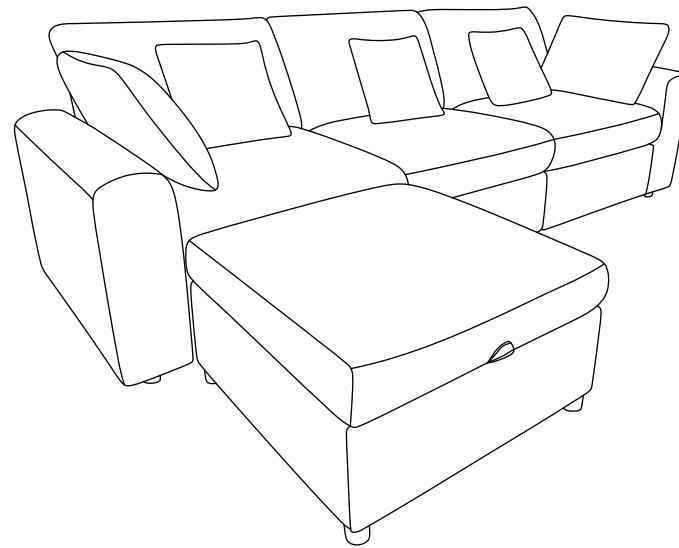


Important Caution

Before beginning assembly of the product, make sure all parts are present. Compare parts with the package contents list and hardware contents. If any part is missing or damaged, do not attempt to assemble the product. If any part is missing or damaged, please contact customer service at sofabedservice@163.com.

- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- When using power tools, please start with the minimum power setting to avoid potential damage to the parts.

Safety Guide

- For your safety and to reduce the risk of severe personal injury, the user must read and understand this Safety Guide.
- Assemble each piece only by following the instructions. Using tools or hardware not included in the original packaging, or improper assembly may cause the product to malfunction or create a risk of severe personal injury.
- Assemble on a flat and soft surface, such as carpeting, to avoid scratches or damage.

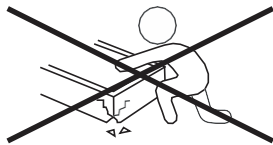

NOTICE

- Tighten all bolts and screws again within the first two weeks of assembly.
- Check the tightness of all bolts every two months; tighten them if necessary.

Care & Maintenance

- Fluff cushions regularly to maintain their shape and loft.
- Vacuum crevices weekly using a soft brush attachment to prevent dust and soil from settling into the fabric.
- Keep furniture out of direct sunlight and away from heat sources to prevent fading and deterioration.
- Spills should be wiped up immediately. Blot (do not rub) spills promptly with a clean, colorfast, absorbent cloth.
- Always pre-test cleaning agents in a small, inconspicuous area first.

Read & Save These Instructions Before Assembly

- Please separate and identify all parts, making sure you have all parts listed.
- To avoid scratches during assembly, please assemble on a soft mat or similar surface.
- Please assemble step by step and follow the instructions.
- Washers must be used.
- Do not fully tighten each screw and nut until all screws are properly aligned.

Return Policy:

- If you want to return the product, please contact us about return issue, make sure that the boxes packaging are complete, the product is not damaged, stained and not affecting secondary sales.
- Return product that do not use the original packaging may be rejected, and the pictures may be requested to offer.

Read & Save These Instructions Before Assembly

- Two adults are required for safe assembly.




Quick Start Guide

Box Checklist

Find your variant & check boxes. Different variants ship with different boxes. Before assembly, confirm you've received all boxes. If any box or part is missing or damaged, please contact us by email or through the platform and we'll help right away.

Model Variant		Box Delivery Checklist	Key (Parts List)	
3 Seat Sofa +1 Ottoman		A + B + C	Box A	Double Armrests
4 Seat Sofa +2 Ottoman		A + B + 2C	Box B	Bilateral Location
			Box C	Median+Ottoman

Cushion Decompression

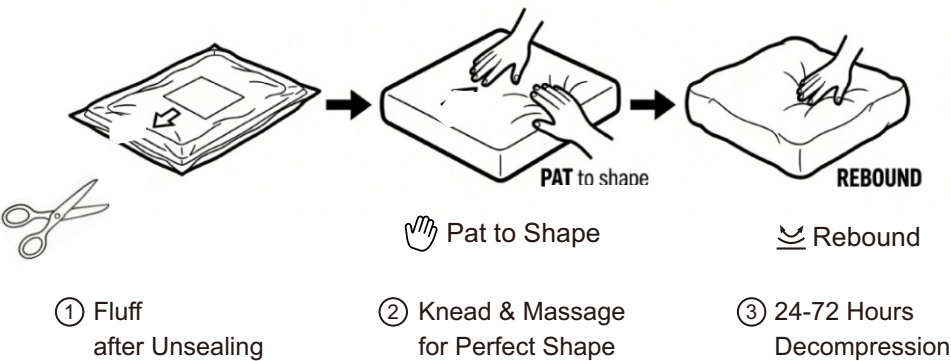

Parts List

Carton	Part				Hardware			
BOX A	A1	Left armrest		1PC	T	Plastic gasket		4PCS
	A2	Right armrest		1PC				
	D	Backrest pad		2PCS				
	F1	Armrest pillow		2PCS				
	S	Short feet		4PCS				

Carton	Part				Hardware			
BOX B	B	Backrest		2PCS	O3	M8x45mm Bolt		22+1PCS
	C1	Main seat cushion		2PCS	O4	M8x60mm Bolt		1+1PCS
	C2	Sub-seat cushion		2PCS	P	Gasket		24+1PCS
	E	Front seat baffle		2PCS	Q	Butterfly nut		1+1PCS
	F2	Throw pillow		2PCS	V	Wrench		1PC
	I	Wooden slat		2PCS	M2	Rubber gasket		2PCS
	K1	L-shaped square tube		4PCS				

Parts List

Carton	Part				Hardware			
BOX B	L	Connecting pipe		1PC				
	M1	Support pipe		2PCS				
	R	Tall feet		2PCS				

Carton	Part				Hardware			
BOX C	B	Backrest		1PC	O1	M8x20mm Bolt		16+1PCS
	C1	Main seat cushion		1PC	O2	M8x40mm Bolt		8+1PCS
	C2	Sub-seat cushion		1PC	O3	M8x45mm Bolt		8+1PCS
	D	Backrest pad		1PC	O4	M8x60mm Bolt		1+1PCS
	E	Front seat baffle		1PC	P	Gasket		34+1PCS
	F2	Throw pillow		1PC	Q	Butterfly nut		1+1PCS
	G	Ottoman cushion		1PC	V	Wrench		1PC
	H1	80cm Panel		2PCS	N	Fastener		4PCS
	H3	75cm Side panel		2PCS	T	Plastic gasket		4PCS
	I	Wooden slat		1PC				


Carton	Part				Hardware			
BOX C	J	Base plate		1PC				
	K2	Central square tube		2PCS				
	L	Connecting pipe		1PC				
	M1	Support pipe		1PC				
	R	Tall feet		2PCS				
	S	Short feet		4PCS				
	W	Partition strip		4PCS				

Assembly Instructions

- Start the installation only after all corresponding boxes have been received.
- The installation steps vary depending on the different combinations


3 Seat Sofa+1 Ottoman

Include 3 Box: **BoxA** + **BoxB** + **BoxC**

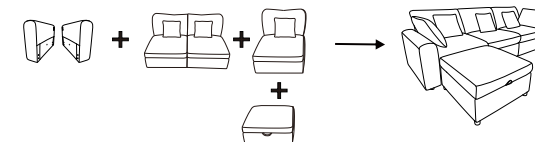


4 Seat Sofa+2 Ottoman

Include 4 Box: **BoxA** + **BoxB** + **BoxC** + **BoxC**

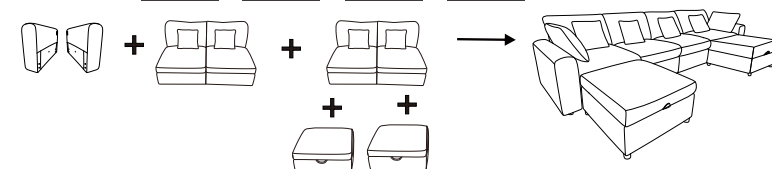


Note: The installation steps for 4 seat+2 ottoman combination start from page 19!


- 1 Take out all the compression bags from the box and open them all. Place all the sponge pads aside and gently pat them, then wait for the sponges to rebound. Note: Be careful not to scratch the interior of the sponge with sharp objects. Remove the compression bag and sofa legs from the bottom of the armrests.

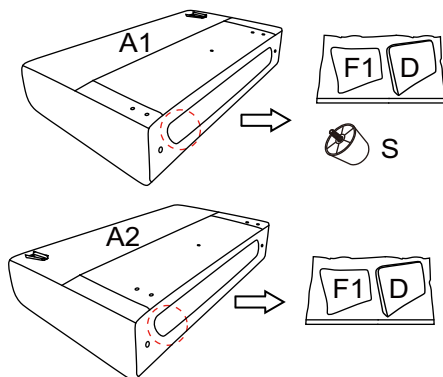


- 2 Install two L-shaped square tubes (K1) and the straight square tube (K2) at the hole positions of front guard plate (E), and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

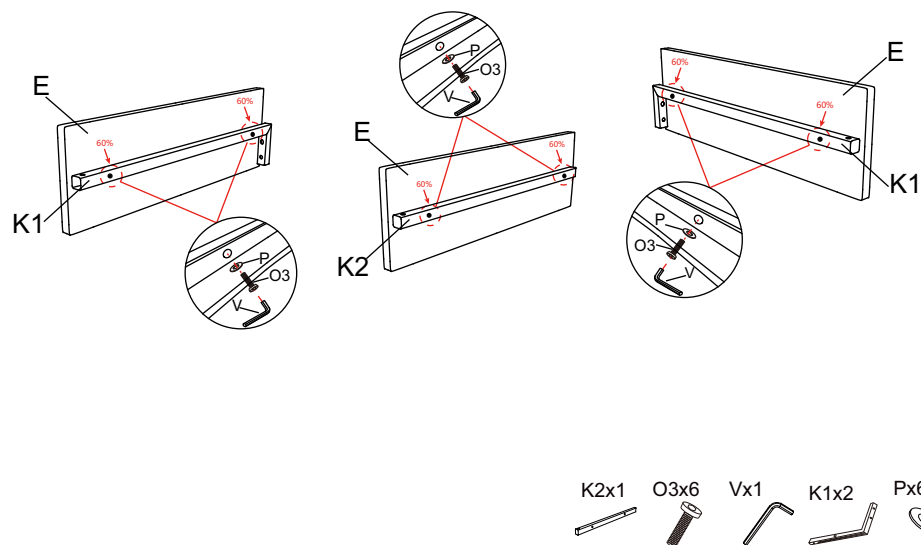


- 3 Install two L-shaped square tubes (K1) and the straight square tube (K2) at the hole positions of backrest(B), and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

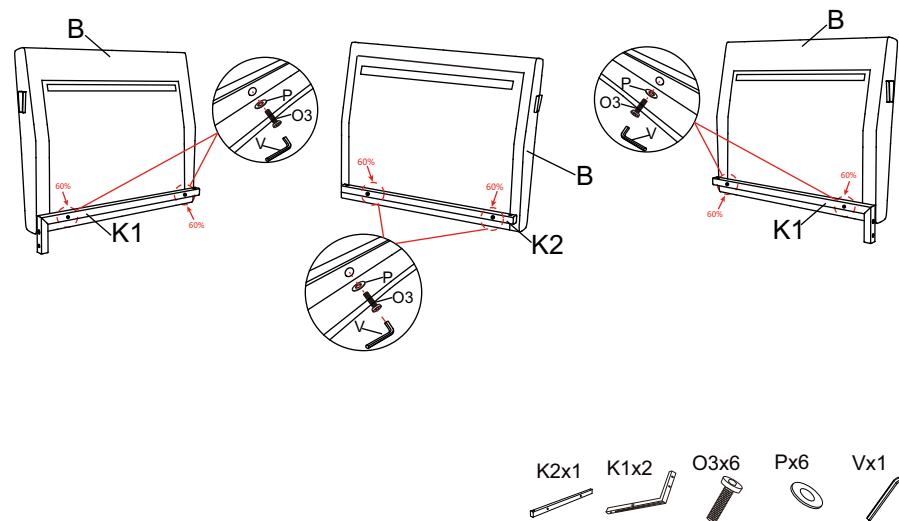


- 4 Install the backrest (B) insert onto the left armrest (A1) insert, then press down until fixed in place.

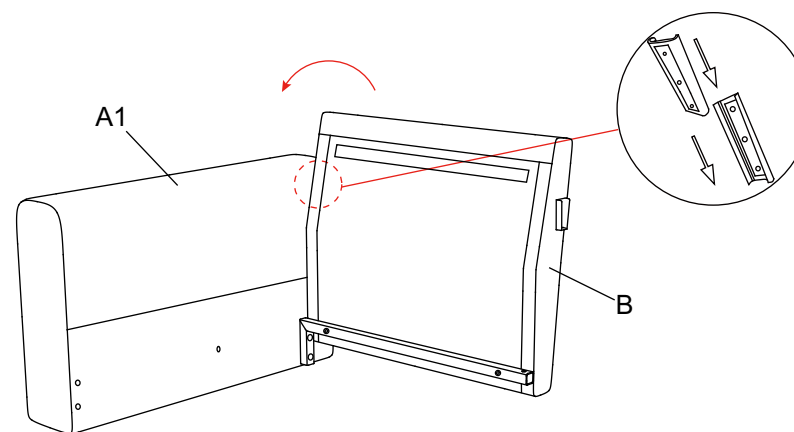


- 5** Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the left armrest (A1), then fasten them with the gasket (P), M8×45mm bolt (O3) and a wrench (V).

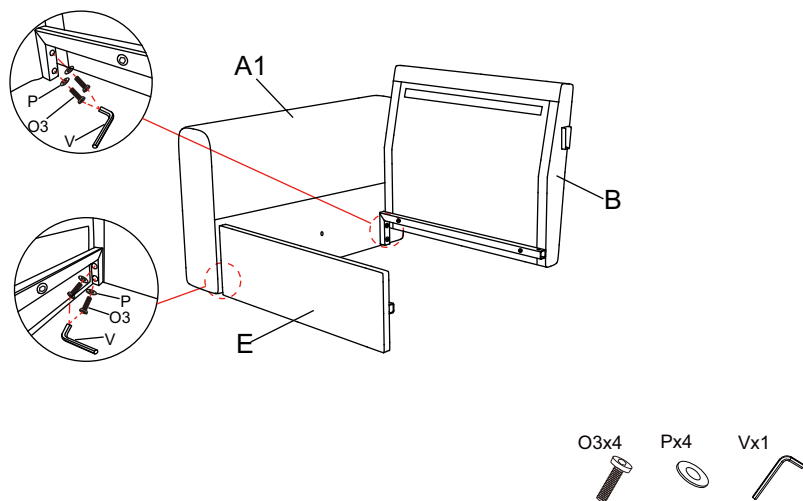


- 6** Install the middle backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

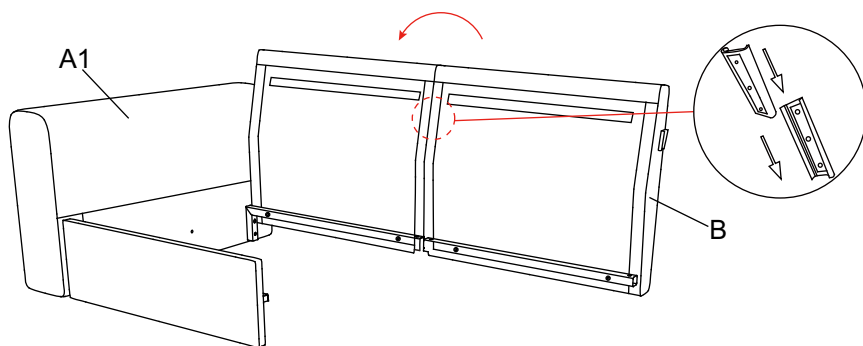


- 7** Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

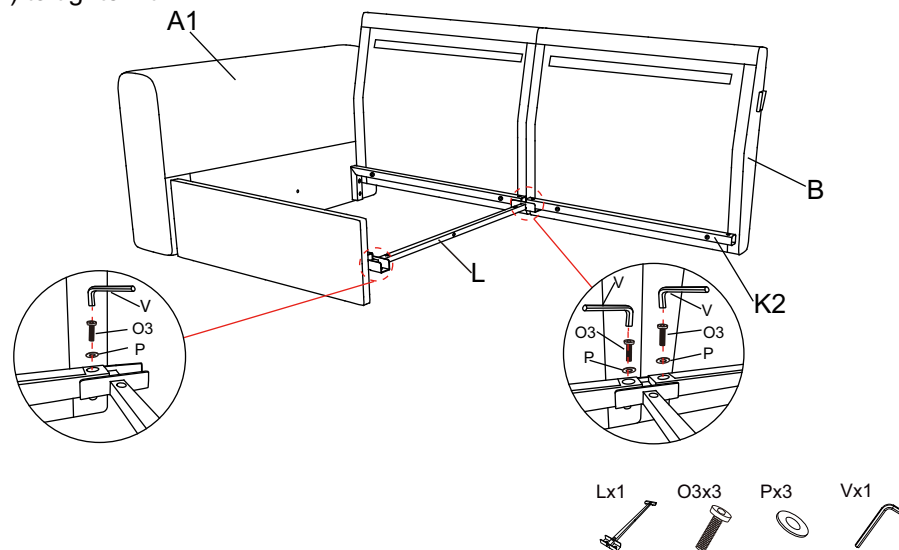


- 8** Connect the central square tubes (K2) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

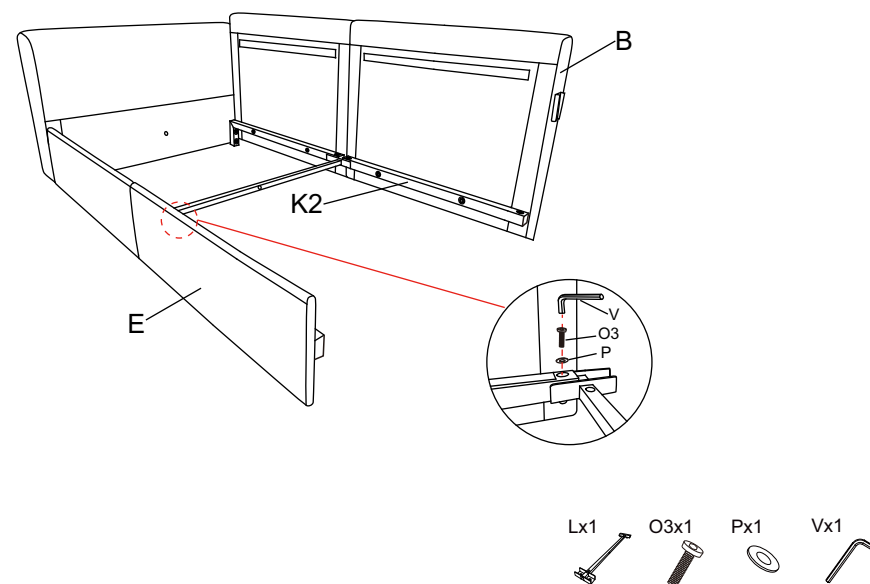


- 9** Install the right backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

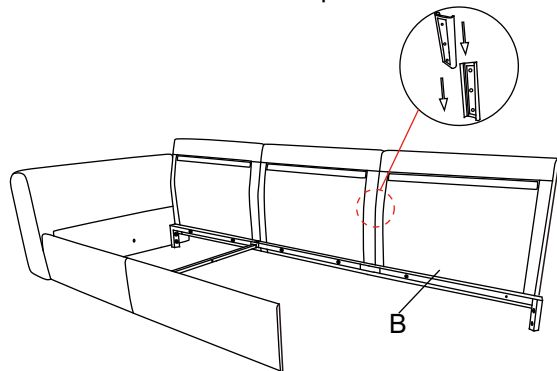


- 10** Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

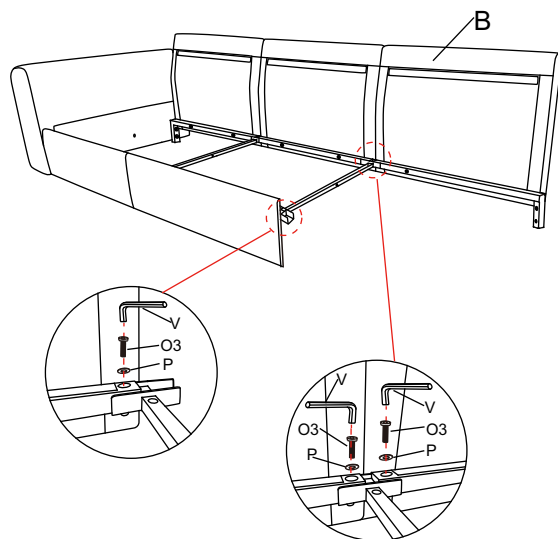


- 11** Connect the central square tubes (K1) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

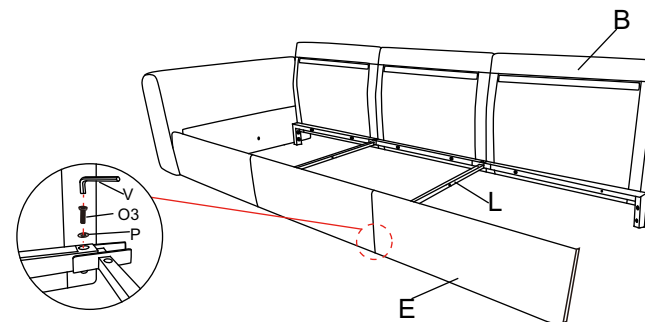


- 12** Install the right armrest (A2) insert onto the backrest (B) insert, then press down until fixed in place. Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the right armrest (A2), then fasten them with the gasket (P), M8x45mm bolt (O3) and a wrench (V).

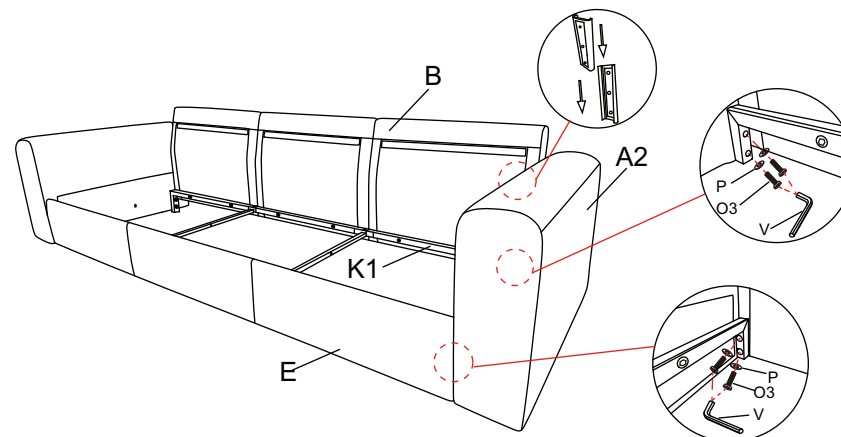

- 13** Install the support pipe (M1), and secure it at the handrail end with a rubber gasket (M2) and M8*45mm bolt (O3). For connection to the middle position, a butterfly nut (Q) and M8*60mm bolt (P) should be used for fastening. Note: Don't forget to use the gasket (P)

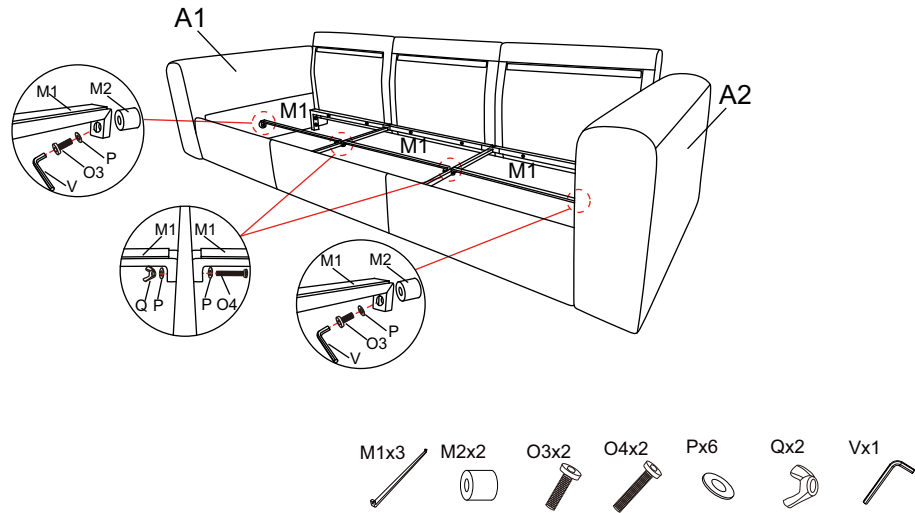


- 14** Flip the seat frame over, then install the four tall feet (R) to the bottom of the connecting pipe (L).

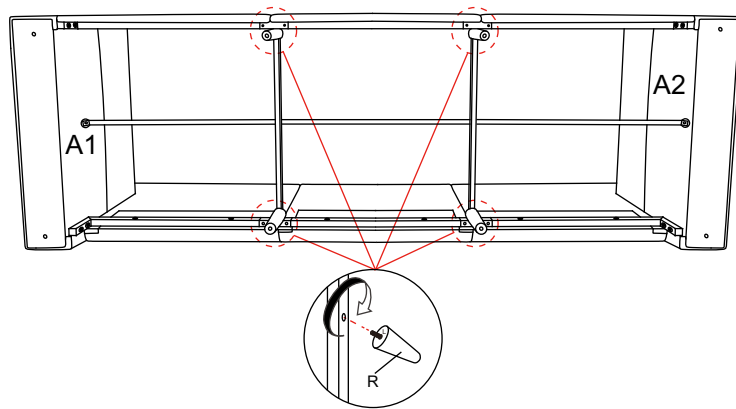


Rx4

- 15** Flip the seat frame over, and install the four short feet (S) to the bottom of both armrests. Note: Do not forget to use the plastic gasket (T).

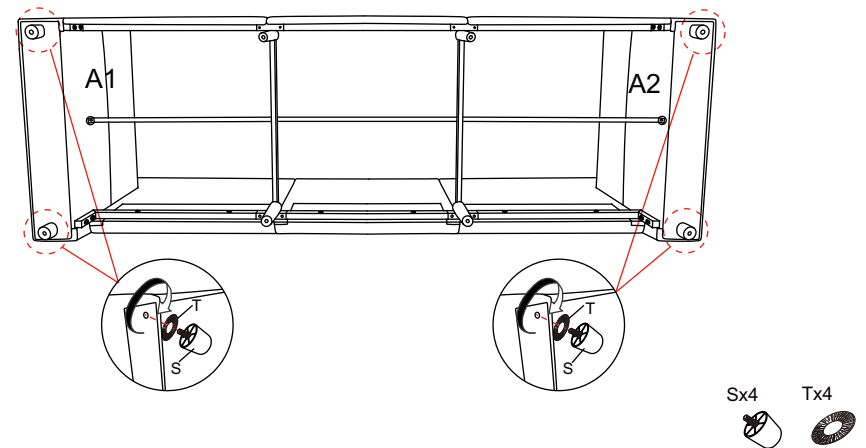


- 16** Remove the adhesive tape on the backrest (B) and ensure that the velcro at the wooden slat (I) is fully attached to the square tube of the seat frame.

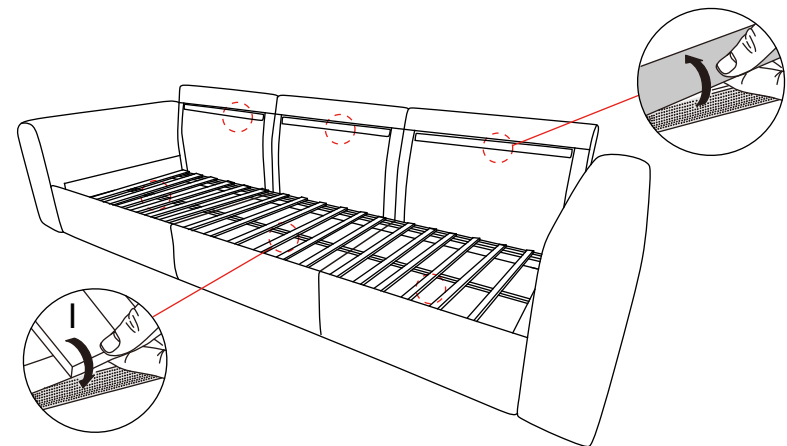


Ix3


- 17** Place three sub-seat cushions (C2) above the wooden slats.

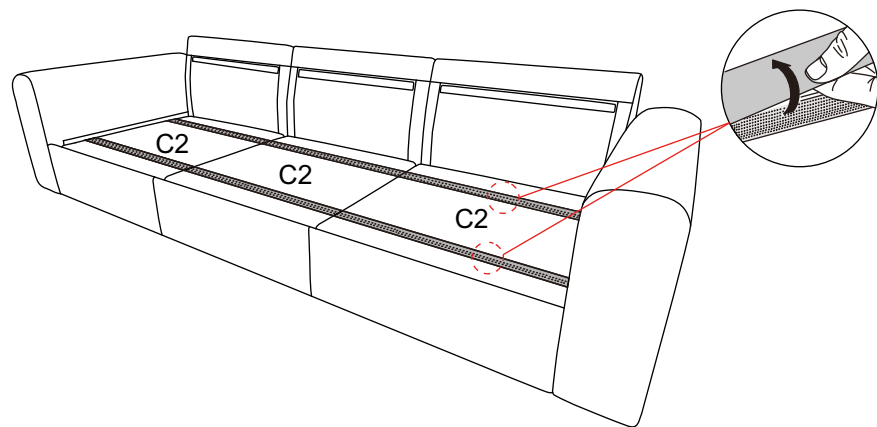


- 18** Remove the adhesive cloth at the bottom of the three main seat cushions (C1) and place them above the sub-seat cushions. then, place the three backrest pads (D).

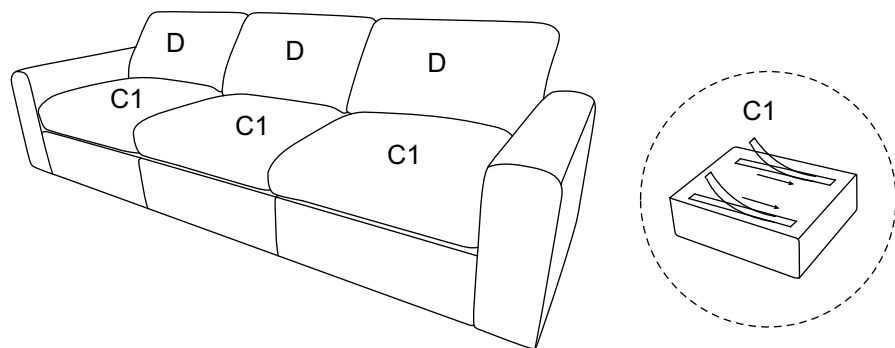


- 19** Connecting the 80cm panel (H1) and 75cm side panel (H3) with installation fasteners (N), and fasten them with M8*20mm bolts(O1) and a wrench (V). Note: Don't forget to use the gasket (P).

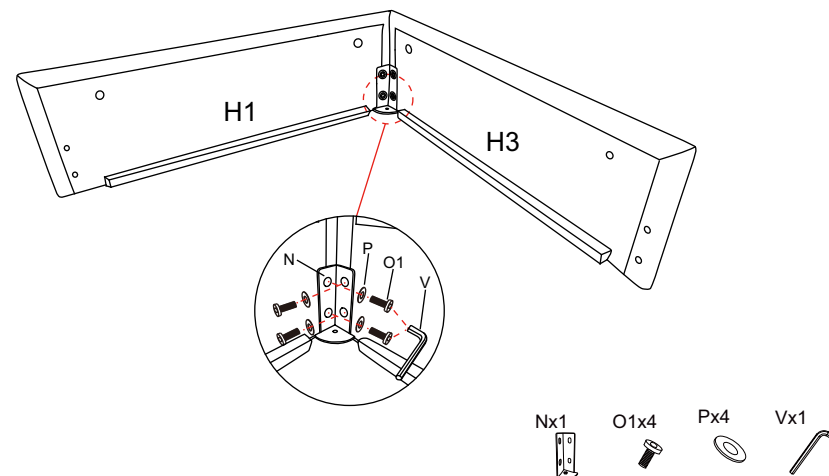


- 20** Repeat step 19 installation to complete the installation of the remaining 80cm panel (H1) and 75cm side panel (H3), and then place the base plate (J).

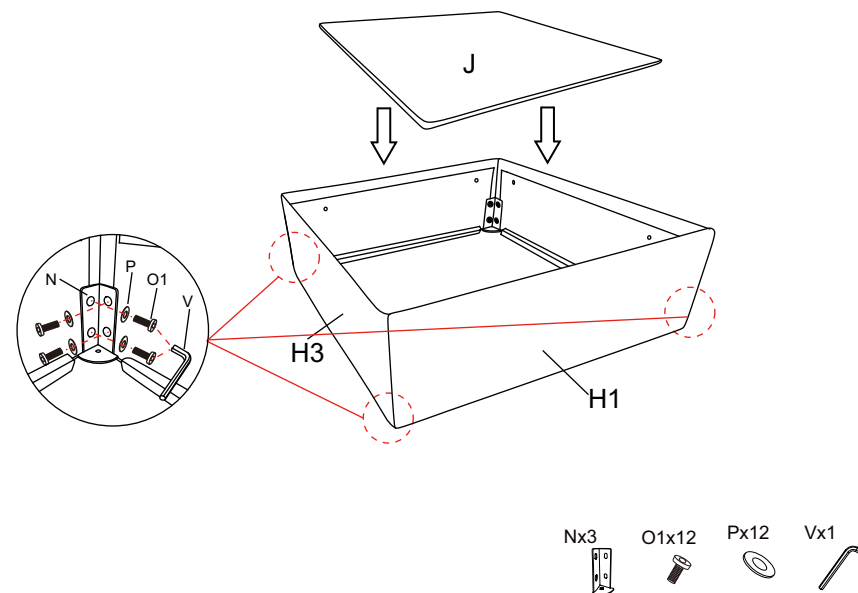


- 21** After completing the installation of the ottoman frame, locate the partition strip (W) and install it on the inner side of the four panels. use M8*40mm bolt(O2) and a wrench (V) to tighten it. Note: Don't forget to use the gasket (P)

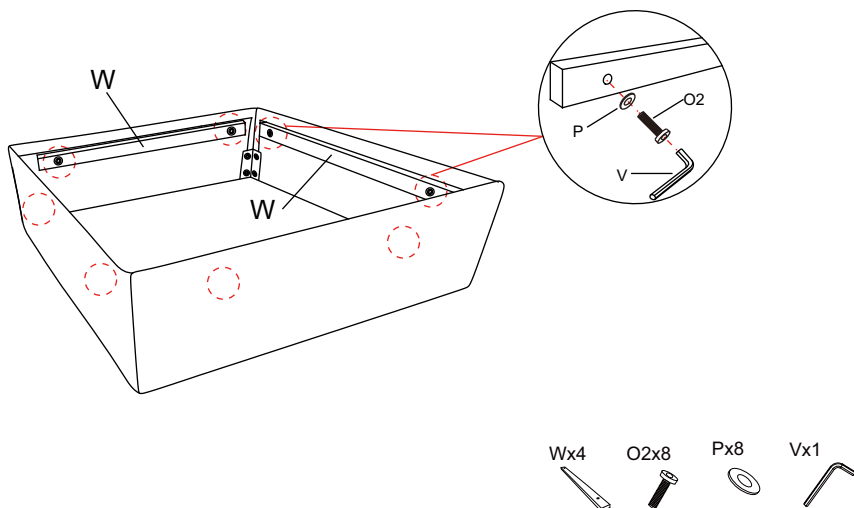


- 22** Turn the ottoman frame over to the bottom and screw on the low feet (S) at the four fasteners. Note: Don't forget to use plastic gaskets (T) .

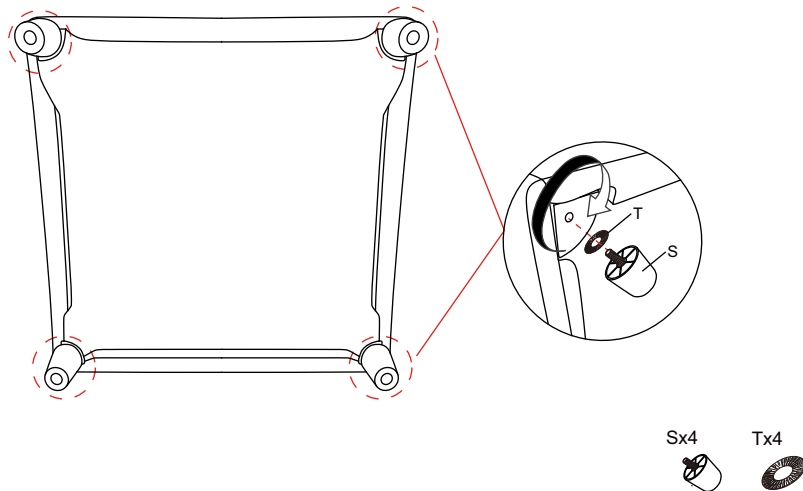

- 23** After all the installation of the ottoman frame is completed, place the ottoman cushion (G) on top.

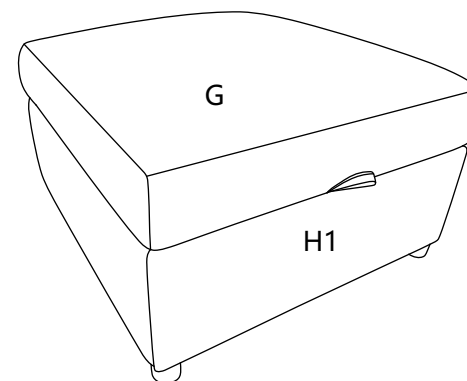


- 24** Combine the seat frame and ottoman as shown in the following picture, and finally place the armrest pillow (F1) and throw pillow (F2) properly.

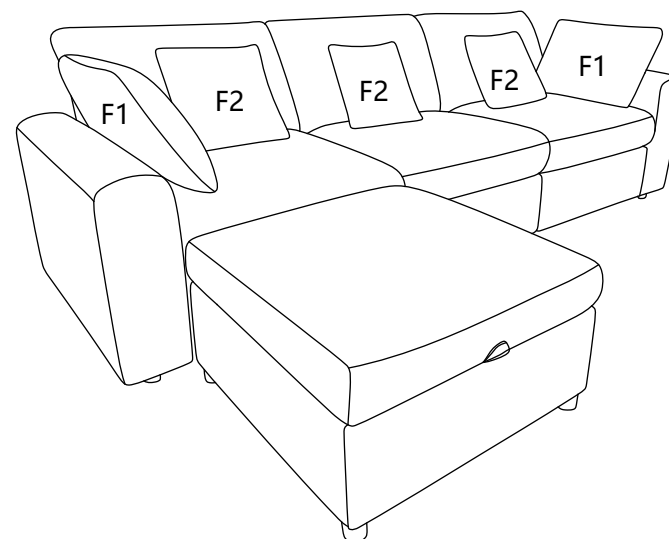


Note: The installation steps from page 19 to 32 is for 4 seat+2 ottoman combination!


- 1 Take out all the compression bags from the box and open them all place all the sponge pads aside and gently pat them, then wait for the sponges to rebound. Note: Be careful not to scratch the interior of the sponge with sharp objects. Remove the compression bag and sofa legs from the bottom of the armrests.

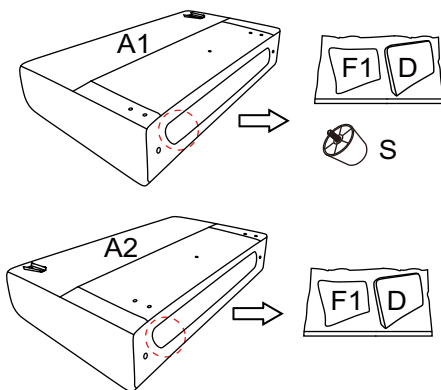


- 2 Install two L-shaped square tubes (K1) and two straight tubes (K2) at the hole positions of the front guard plate (E), then fasten them to the 60% position using gaskets (P), M8×45mm bolts (O3) and a wrench.

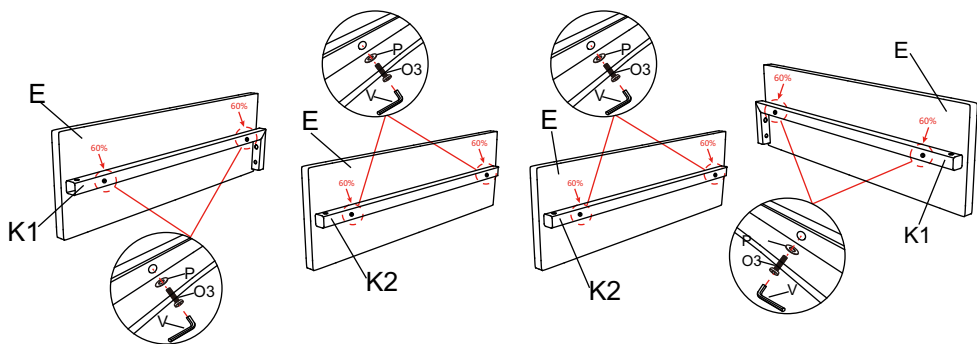


- 3 Install two L-shaped square tubes (K1) and two straight square tubes (K2) at the hole positions of the backrest (B), then fix them to 60% with gaskets (P), M8×45mm bolts (O3) and a wrench.

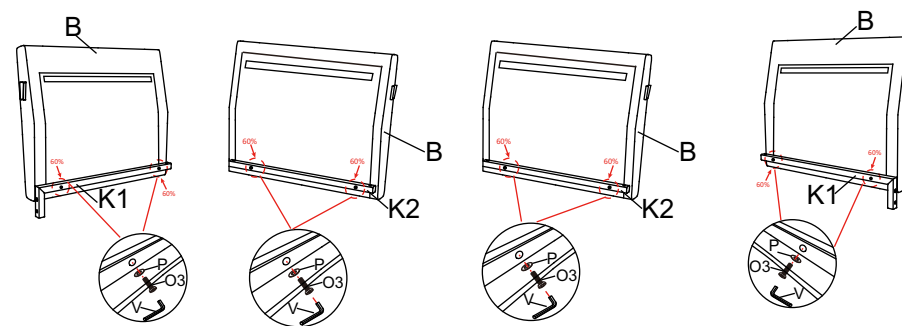


- 4 Install the backrest (B) insert onto the left armrest (A1) insert, then press down until fixed in place.

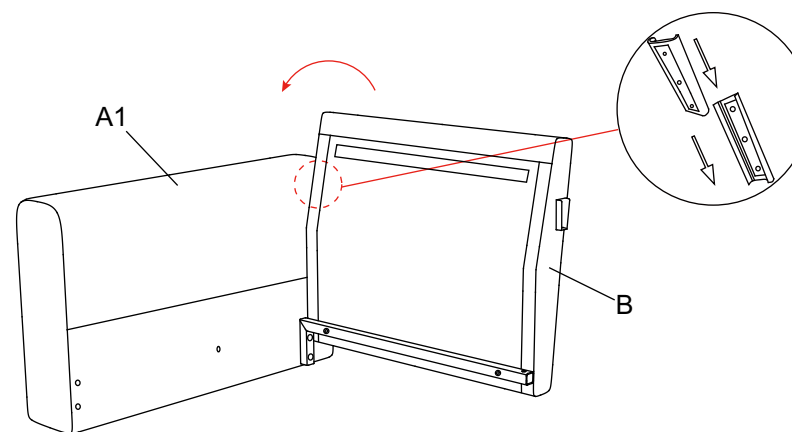


- 5** Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the left armrest (A1), then fasten them with the gasket (P), M8×45mm bolt (O3) and a wrench (V).

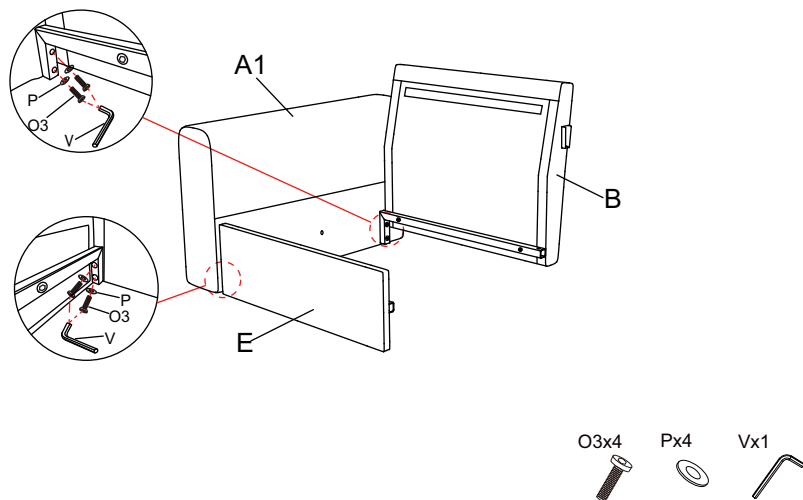


- 6** Install the right backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

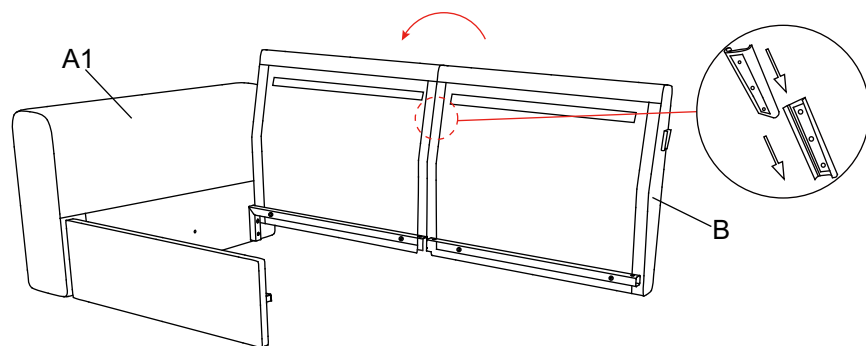


- 7** Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

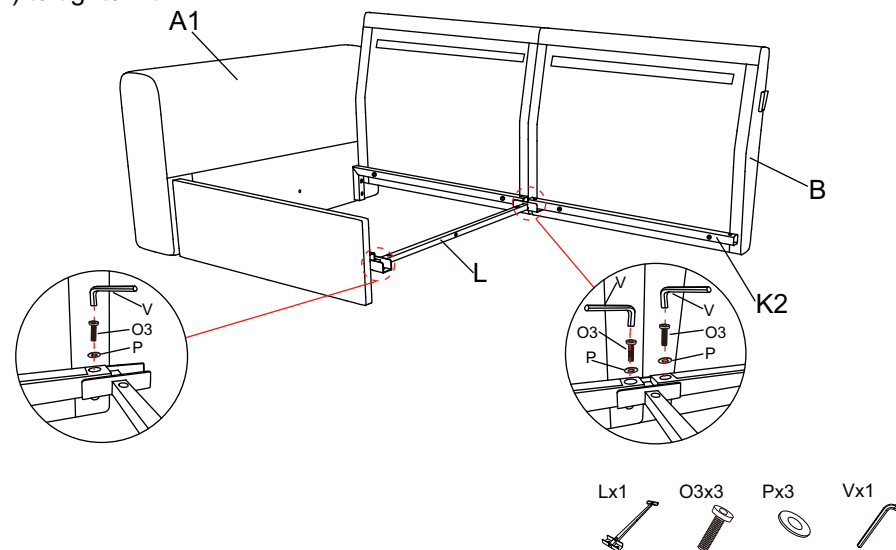


- 8** Connect the central square tubes (K2) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

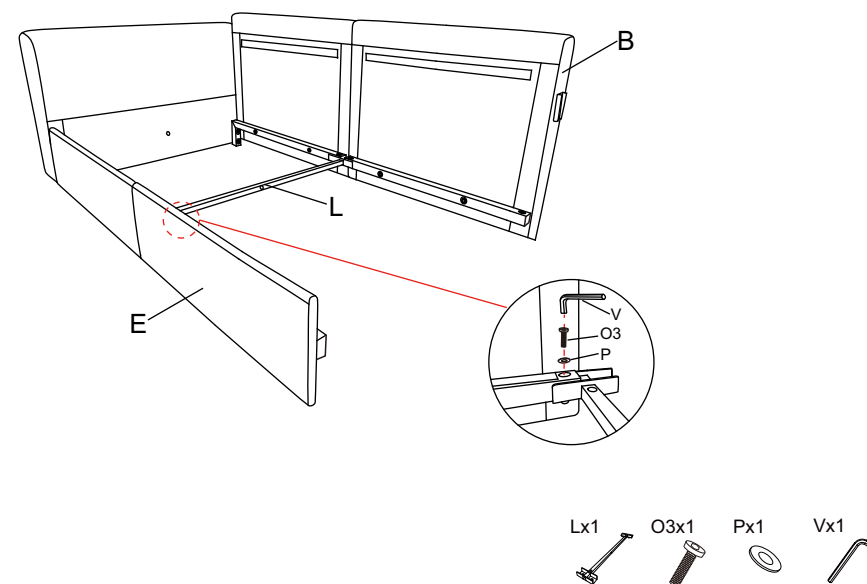


- 9** Install the right backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

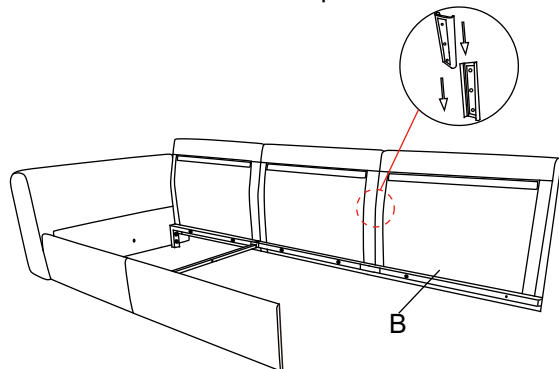


- 10** Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

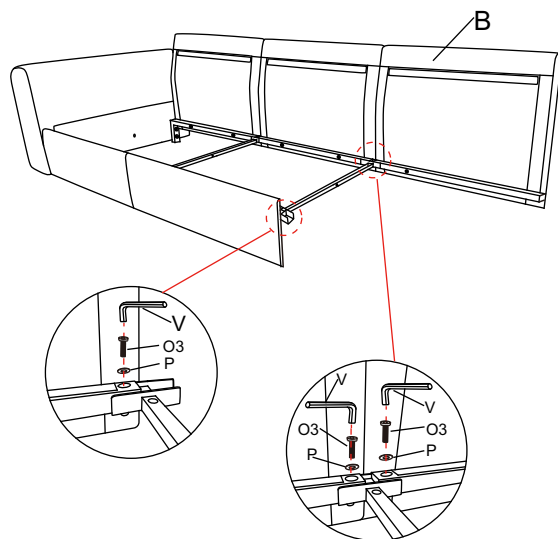


- 11** Connect the central square tubes (K1) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

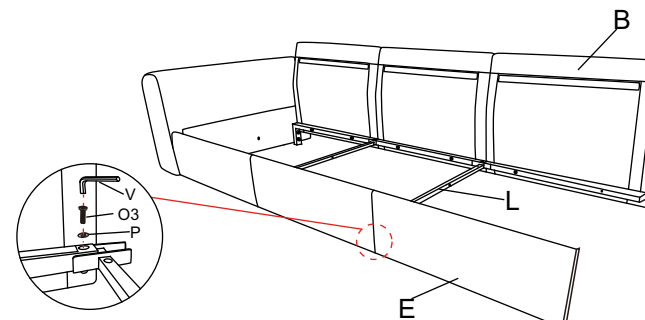


- 12** Install the right backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

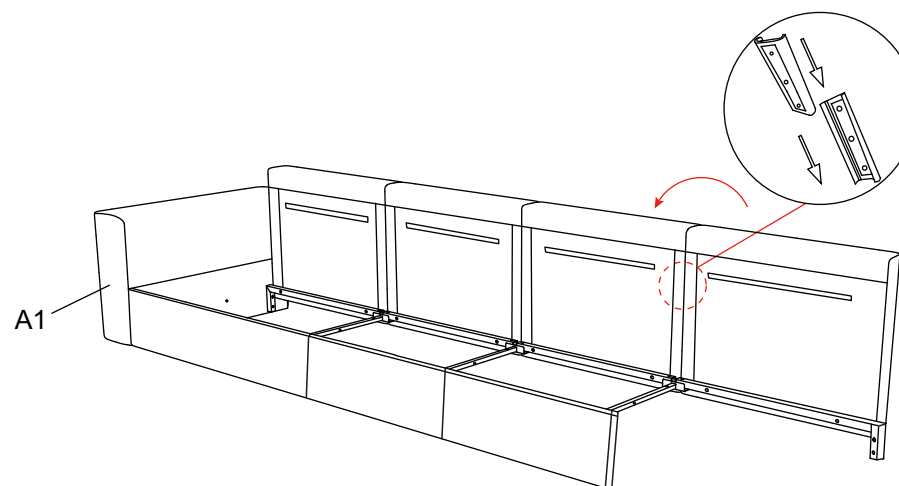


- 13** Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

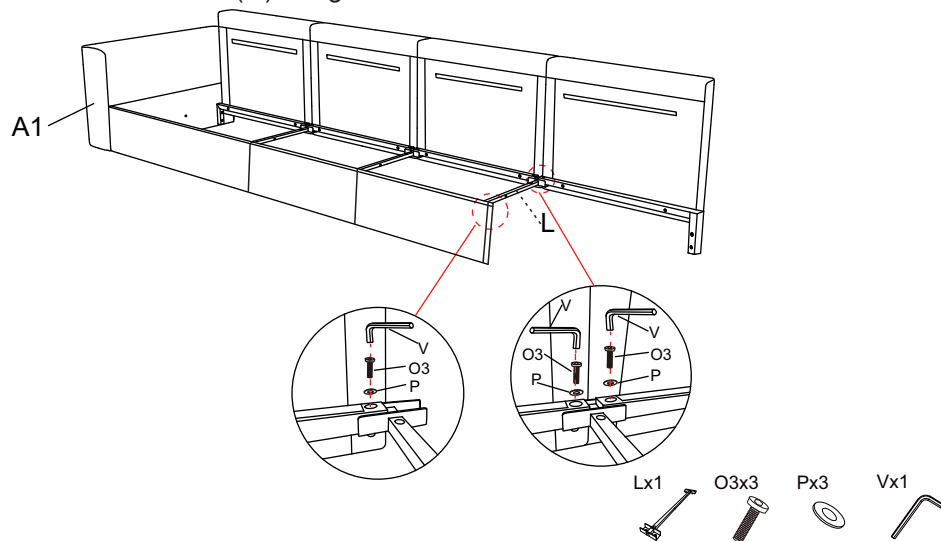


- 14** Connect the central square tubes (K1) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

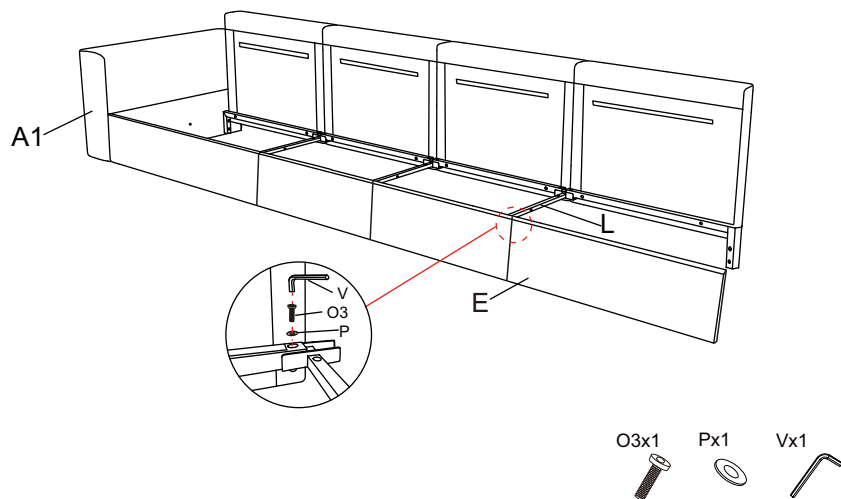


- 15** Install the right armrest (A2) insert onto the backrest (B) insert, then press down until fixed in place. Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the right armrest (A2), then fasten them with the gasket (P), M8x45mm bolt (O3) and a wrench (V).

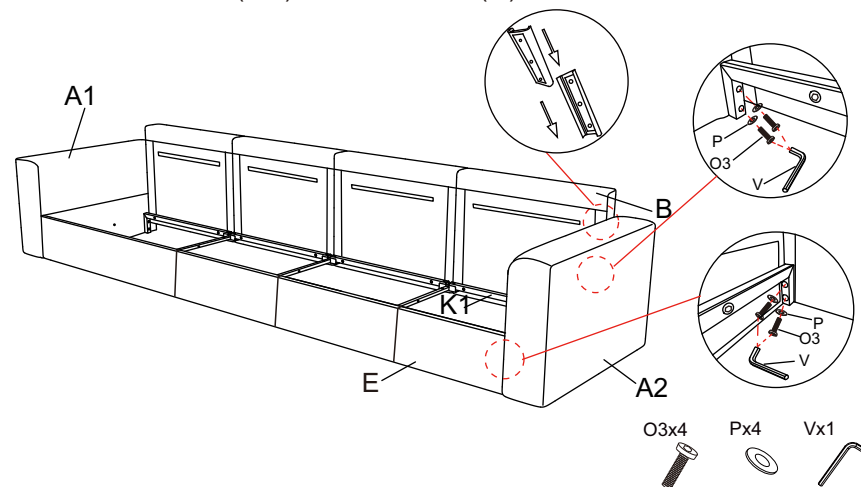

- 16** Install the support pipe (M1), and secure it at the handrail end with a rubber gasket (M2) and M8*45mm bolt(O3). for connection to the middle position, a butterfly nut (Q) and M8*60mm bolt(P) should be used for fastening. Note: Don't forget to use the gasket (P).

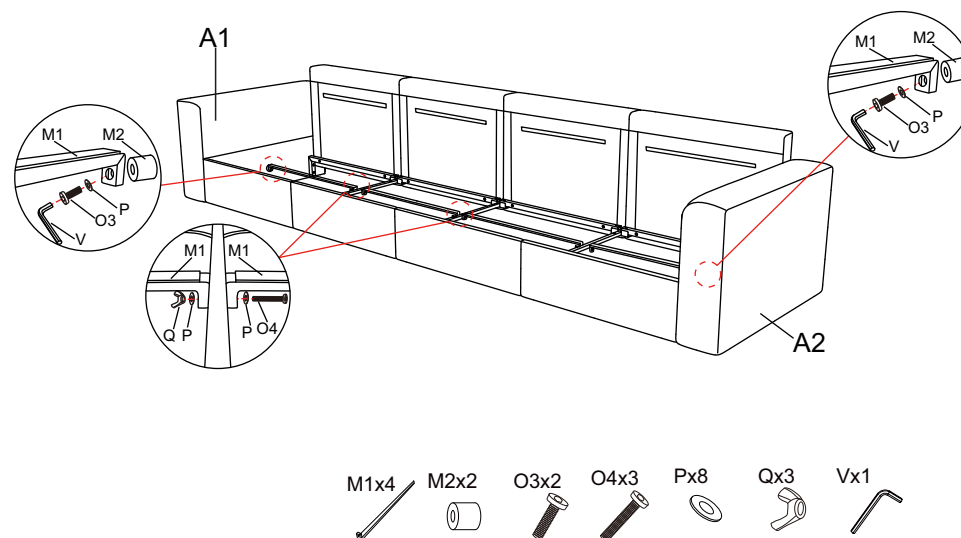


- 17** Flip the seat frame over, then install the six tall feet (R) to the bottom of the connecting pipe (L).

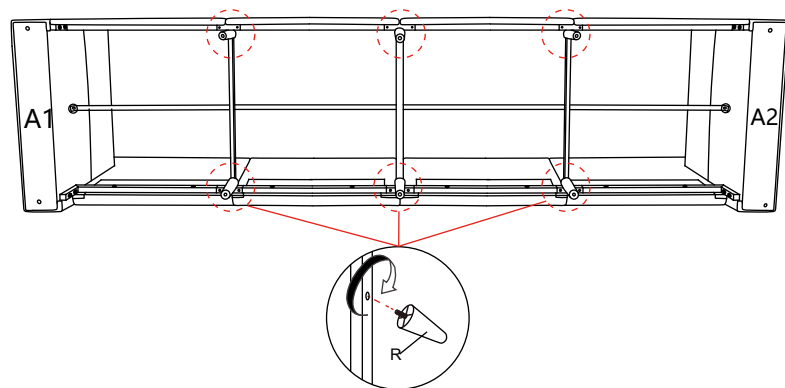


Rx6

- 18** Flip the seat frame over, and install the four short feet (S) to the bottom of both armrests. Note: Do not forget to use the plastic gasket (T).

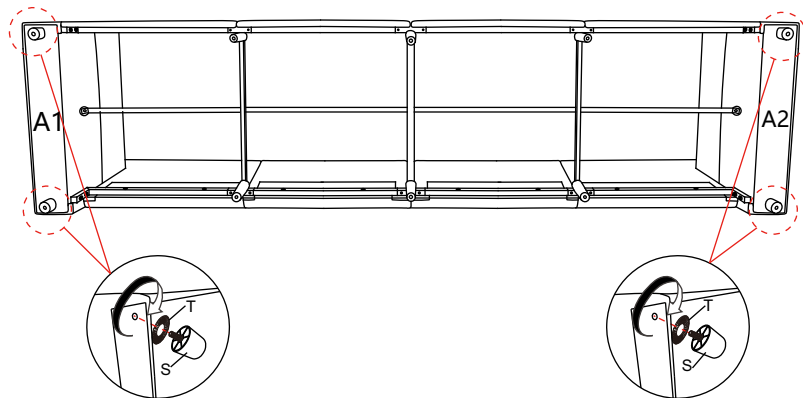


Sx4 Tx4

- 19** Remove the adhesive tape on the backrest (B) and ensure that the velcro at the wooden slat (I) is fully attached to the square tube of the seat frame.

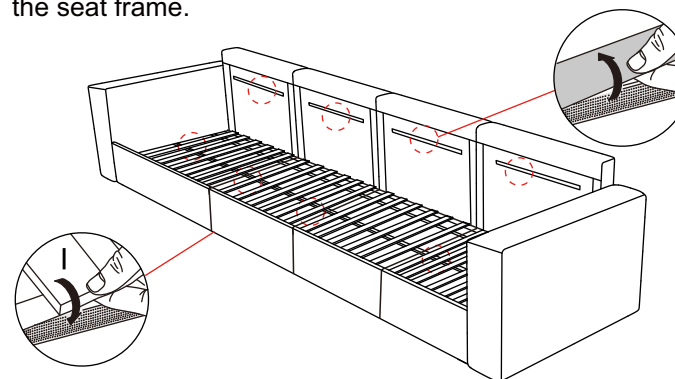


Ix4

- 20** Remove the adhesive tape on the backrest (B) and ensure that the velcro at the wooden slat (I) is fully attached to the square tube of the seat frame.

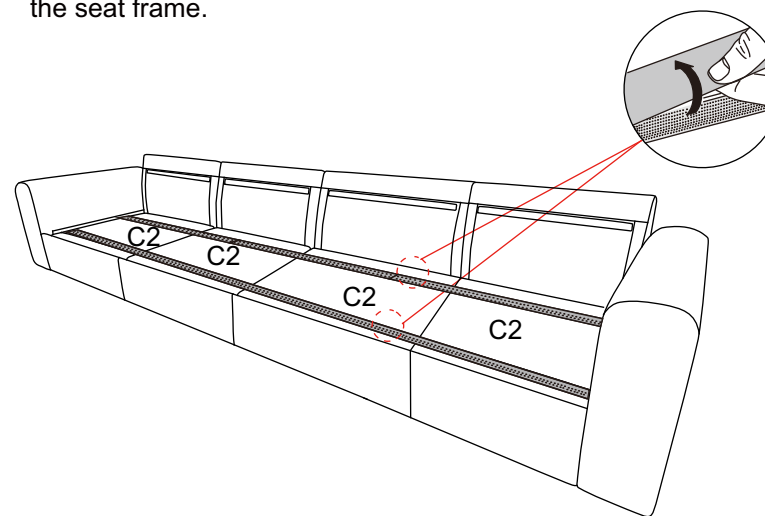


Cx4


- 21** Remove the adhesive cloth at the bottom of the four main seat cushions (C1) and place them above the secondary seat cushions. finally, place the four backrest cushions (D).

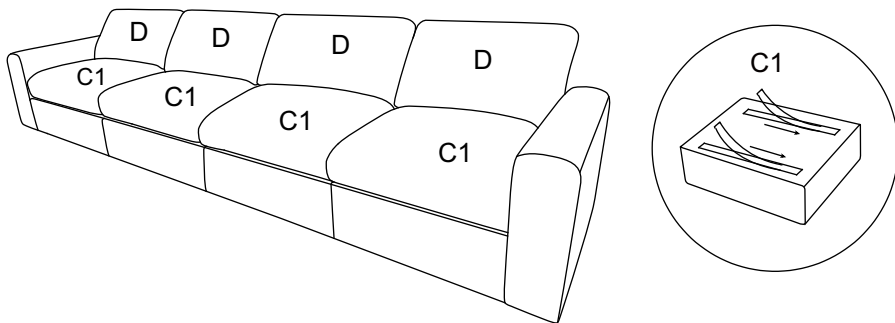


- 22** Connecting the 80cm panel (H1) and 75cm side panel (H3) with installation fasteners (N), and fasten them with M8*20mm bolts(O1) and a wrench (V). Note: Don't forget to use the gasket (P).

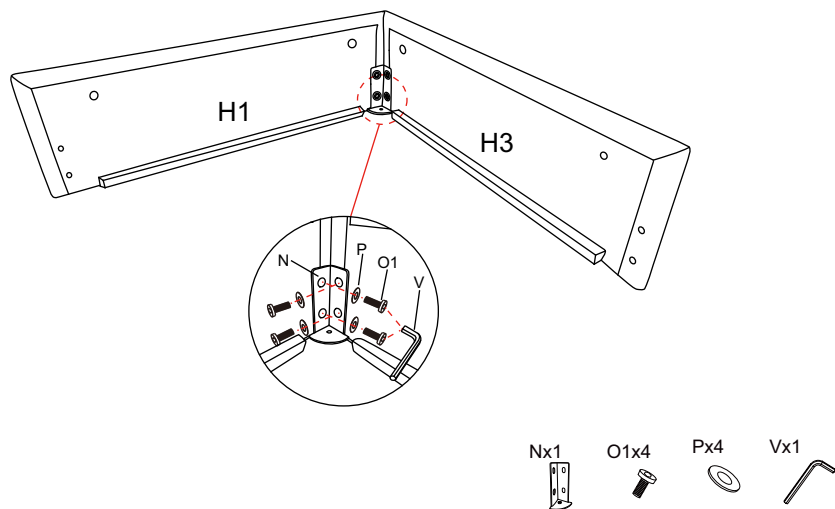


- 23** Repeat step 22 installation to complete the installation of the remaining 80cm panel (H1) and 75cm side panel (H3), and then place the base plate (J).

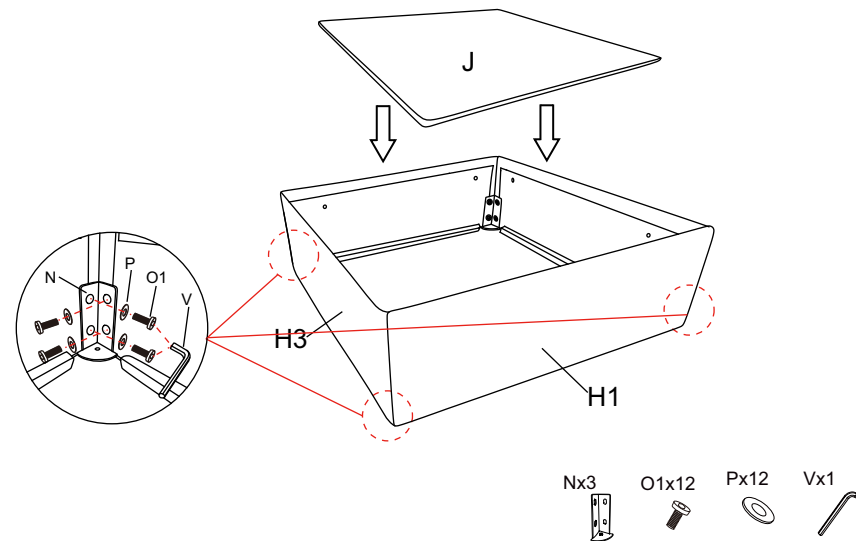


- 24** After completing the installation of the ottoman frame, locate the partition strip (W) and install it on the inner side of the four panels use M8*40mm bolt(O2) and a wrench (V) to tighten it. Note: Don't forget to use the gasket (P)

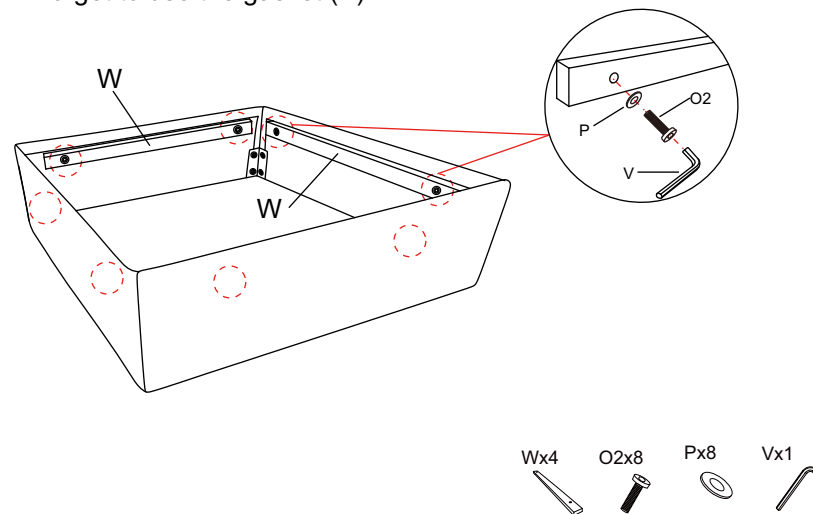


- 25** Turn the ottoman frame over to the bottom and screw on the low feet (S) at the four fasteners. Note: Don't forget to use plastic gaskets (T)

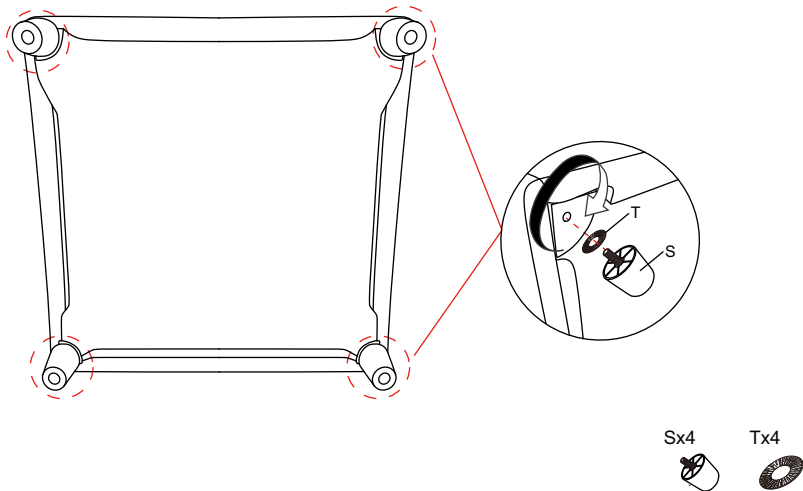

- 26** After all the installation of the ottoman frame is completed, place the ottoman cushion (G) on top.

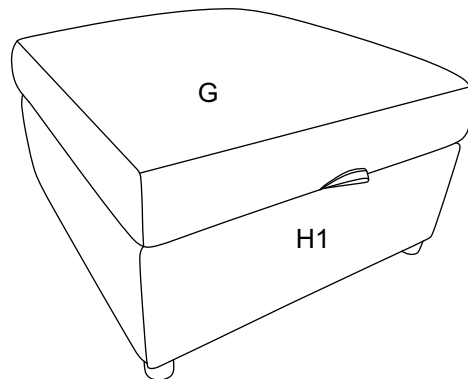


- 27** Combine the seat frame and ottoman as shown in the following picture, and finally place the armrest pillow (F1) and throw pillow (F2) properly.

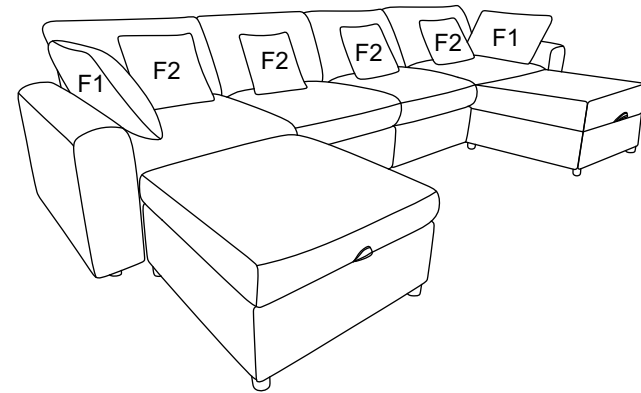

3+1Seats(A+B+C)

Left single seat + right single seat + middle position+footstool assembly method.

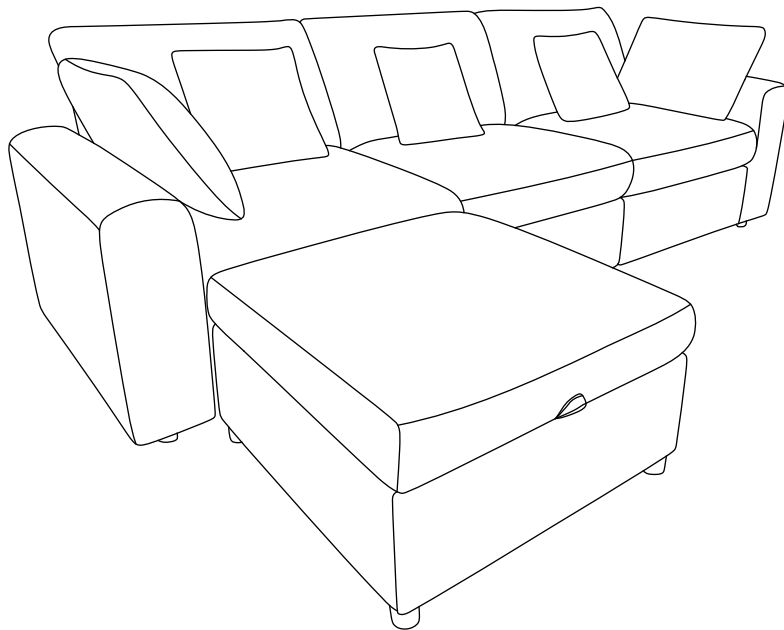

4+2Seats(A+B+C+C)

Left single seat + right single seat + middle position + middle position + footstool + footstool assembly method.

