
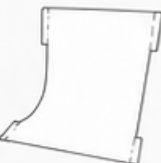


ASSEMBLY INSTRUCTIONS

Any problem contact service email: mffm_service@163.com


A ×2 	B ×1 	C ×2 	D ×1 	E ×1 	F ×4  M6×25MM	G ×4  M8×40MM	H ×1  M6	 Estimated assembly: 20-30 minutes
--	--	--	--	---	---	---	--	---

1

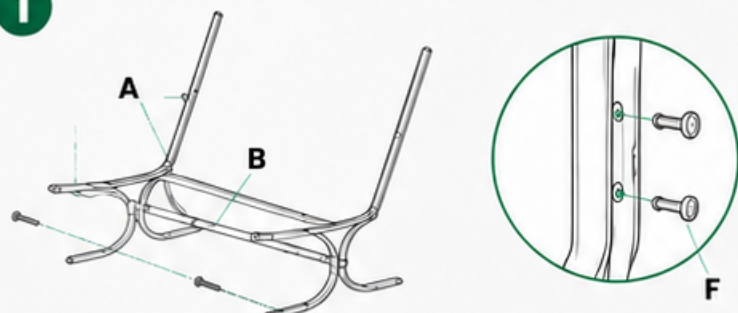


! Insert and pre-tighten both screws first, then tighten them fully one by one.


2

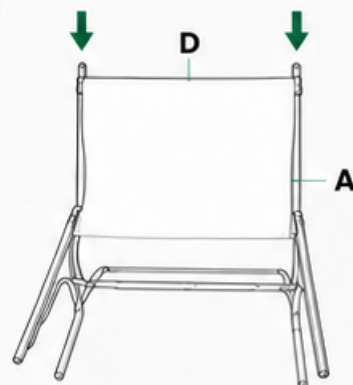


3

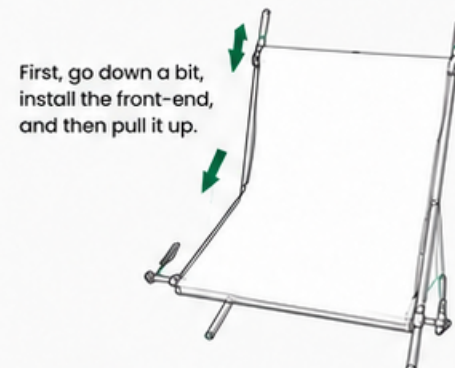


4

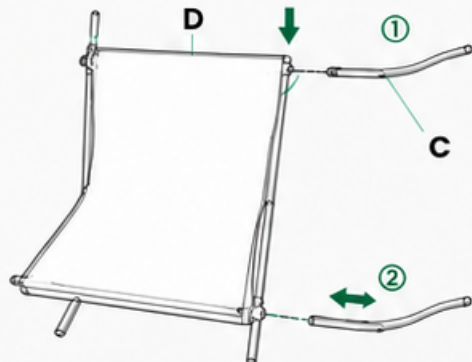

5

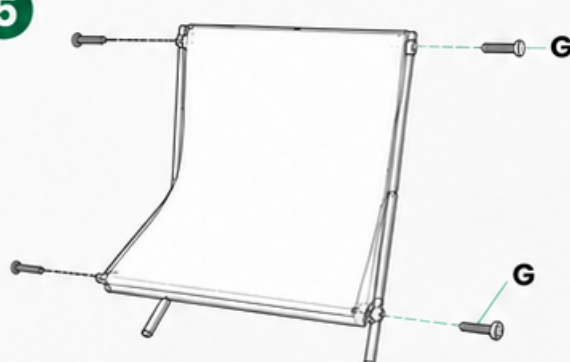


6

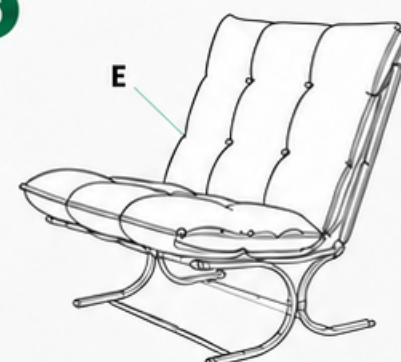

Step 1

Important: Pre-tighten Both Screws First

Insert and pre-tighten both screws first, then tighten them fully one by one.

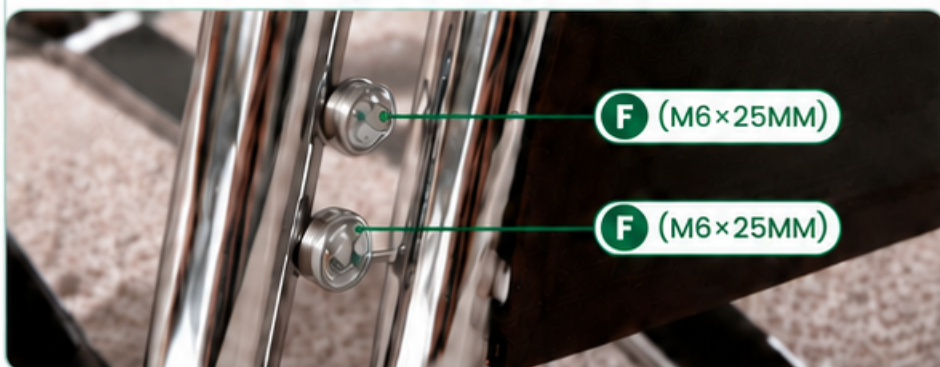

Why?

- ✓ Ensures proper alignment of the holes.
- ✓ Prevents screws from getting stuck or hard to install.
- ✓ Makes the assembly process smoother and easier.



✓ Tighten securely for better stability.