



Installation & Assembly

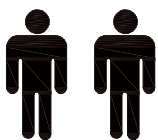

2 PERS.

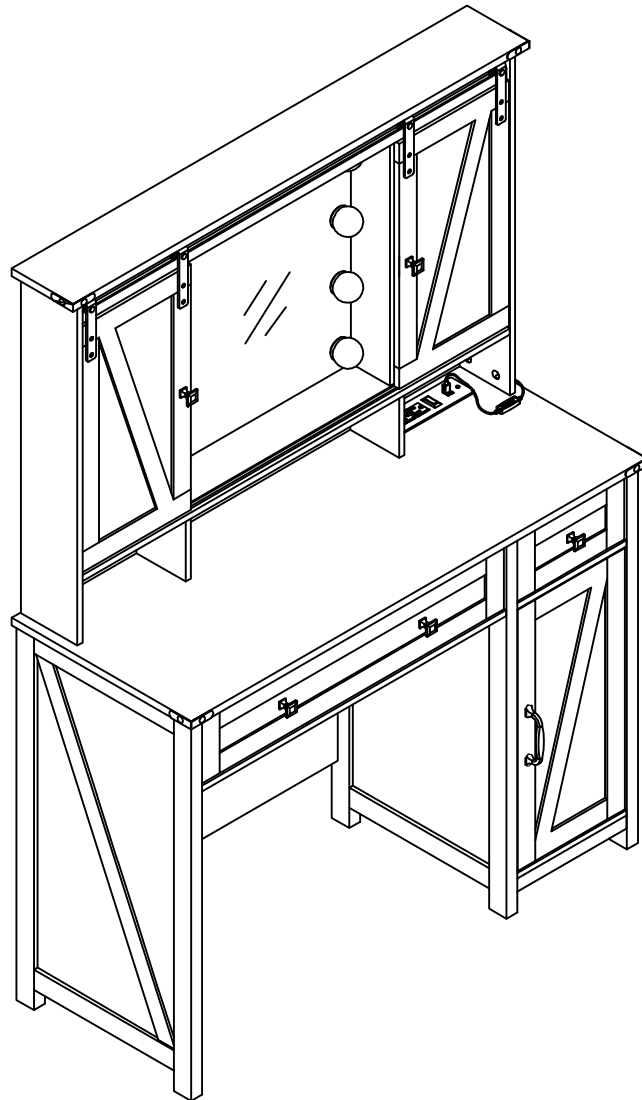


Tools required
(not included)

Version: 1.2


1. Matters needing attention

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">-ALWAYS install Anti-tip device provided.-NEVER put a TV on this product.-NEVER allow children to stand, climb or hang on drawers, doors, or shelves.-NEVER open more than one drawer at a time.-Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>
	

2. Matters needing attention

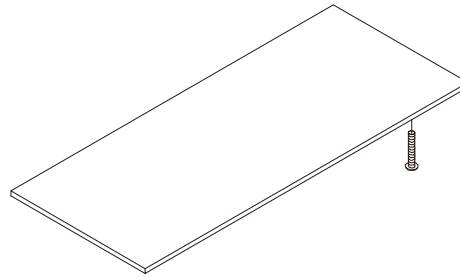


Be sure to use the proper screws to avoid damaging the parts

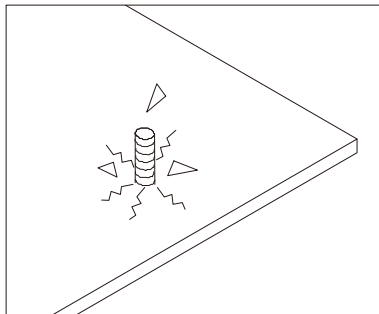

X

Wrong screws can cause the plank to crack

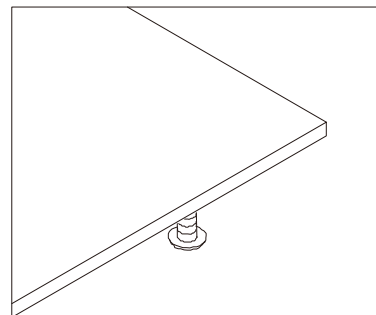


✓

The right screw is the right size


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

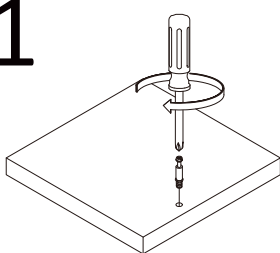

2

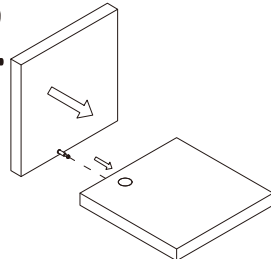


3

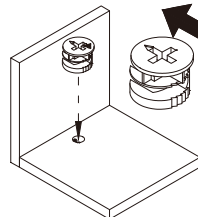

The opening must point toward the edge of the board

4

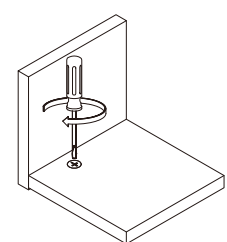

Installation Parts



CL

x2

L300mm(L)



CR

x2

L300mm(R)



DR

x2

L300mm(R)



DL

x2

L300mm(L)



E

x20+2

Ø 3.5x12mm



F

x76+3

Ø 6x35mm



G

x76+3

Ø15x10mm



H

x16+1

Ø4x30mm



I

x4



J

x20+2

Ø4x12mm



K

x12+1



L

x1


L=36mm



M

x2

Ø3x12mm

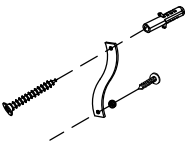

N

x2



O

x1



P

x1

Ø 3x12mm



Q

x3

Ø4x8mm



R

x59+3

Ø6x30mm



S

x6

Ø20x2mm



T

x16+2



U

x18+2

Ø3x14mm



V

x4

Ø4x16mm



W


x1

L=96mm



X

x5

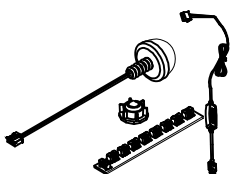

Y

x1



Z

x4



a


x4



b

x4

Ø6x25mm



d


x4



e

x2

Ø 3x12mm




f

x6

Ø 30x10mm


Installation Parts

Mounting frame

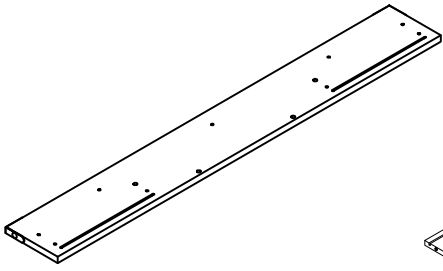


①

x1

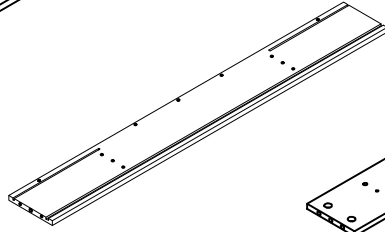


②

x1

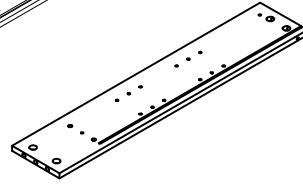


③

x1

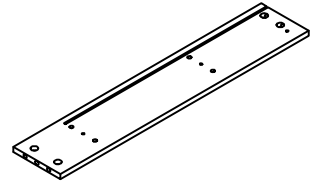

④

x1




⑤

x1




⑥

x1

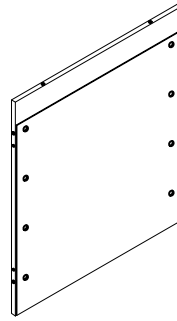


⑦

x1

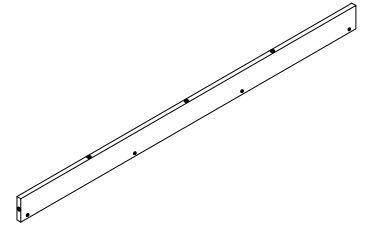


⑧

x1

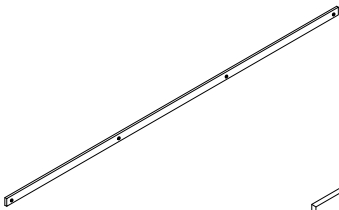


⑨

x1

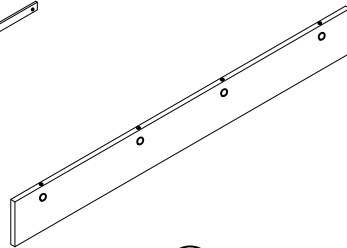

⑩

x1




⑪

x2




⑫

x2




⑬

x2




⑭

x1



⑮


x1

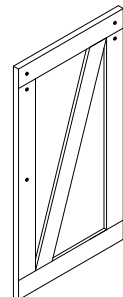


⑯

x1


Mounting frame

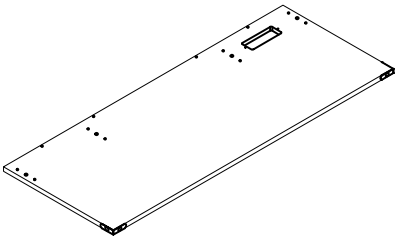


17
x1

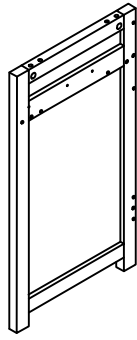


18
x1

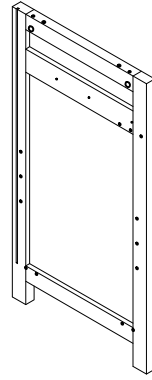


19
x1

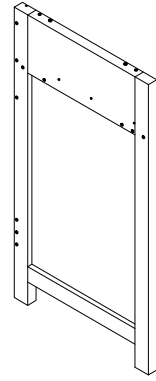


20
x1

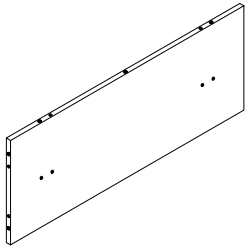


21
x1

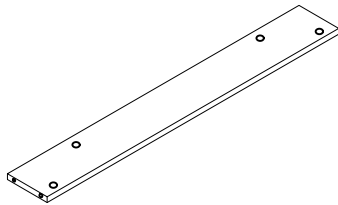


22
x1

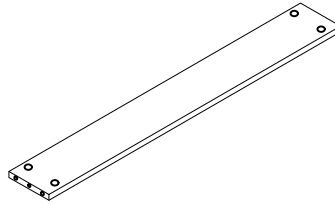


23
x2




24
x1

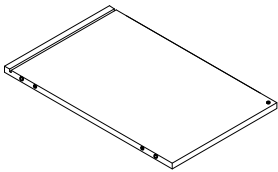


25
x1




26
x1

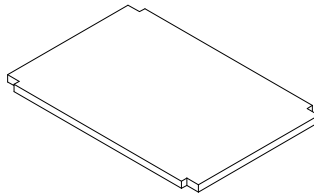


27
x1




28
x1

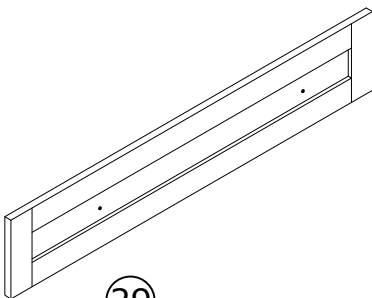


29
x1

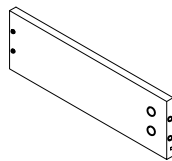

30
x2

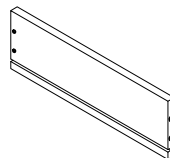


31
x2

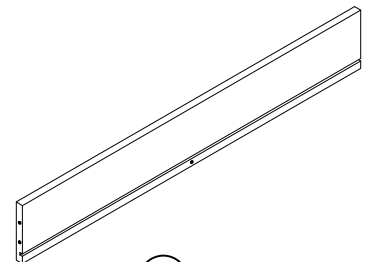


32
x1

Mounting frame

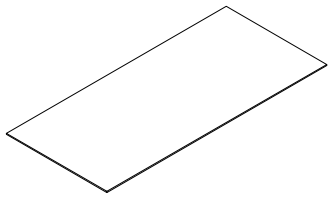


33

x1

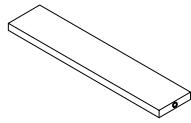


34

x1

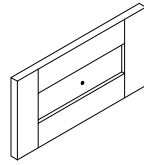


35

x1

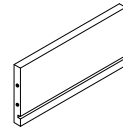


36

x1

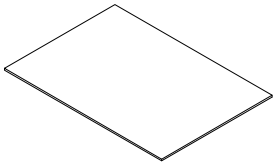

37


x1




38

x1



Please use each screw in strict accordance with the instructions.

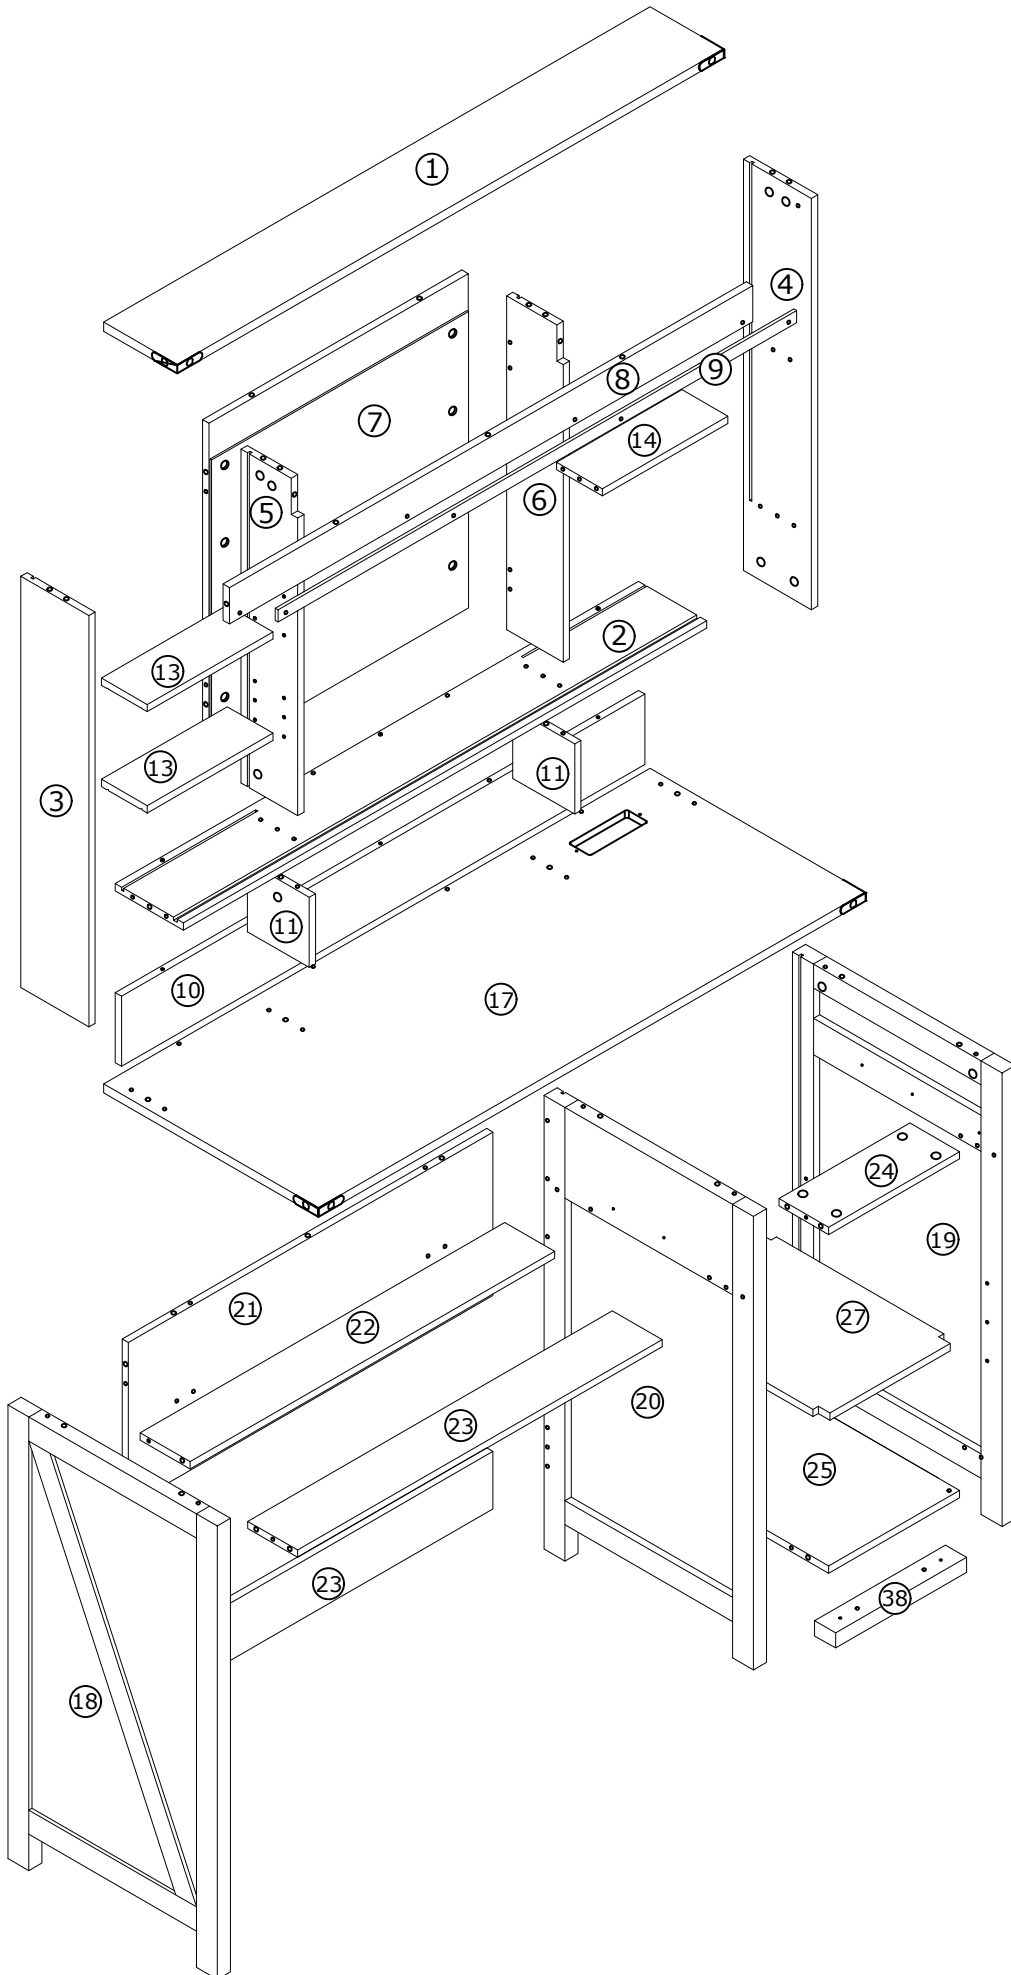

Please use each screw in strict accordance with the instructions.

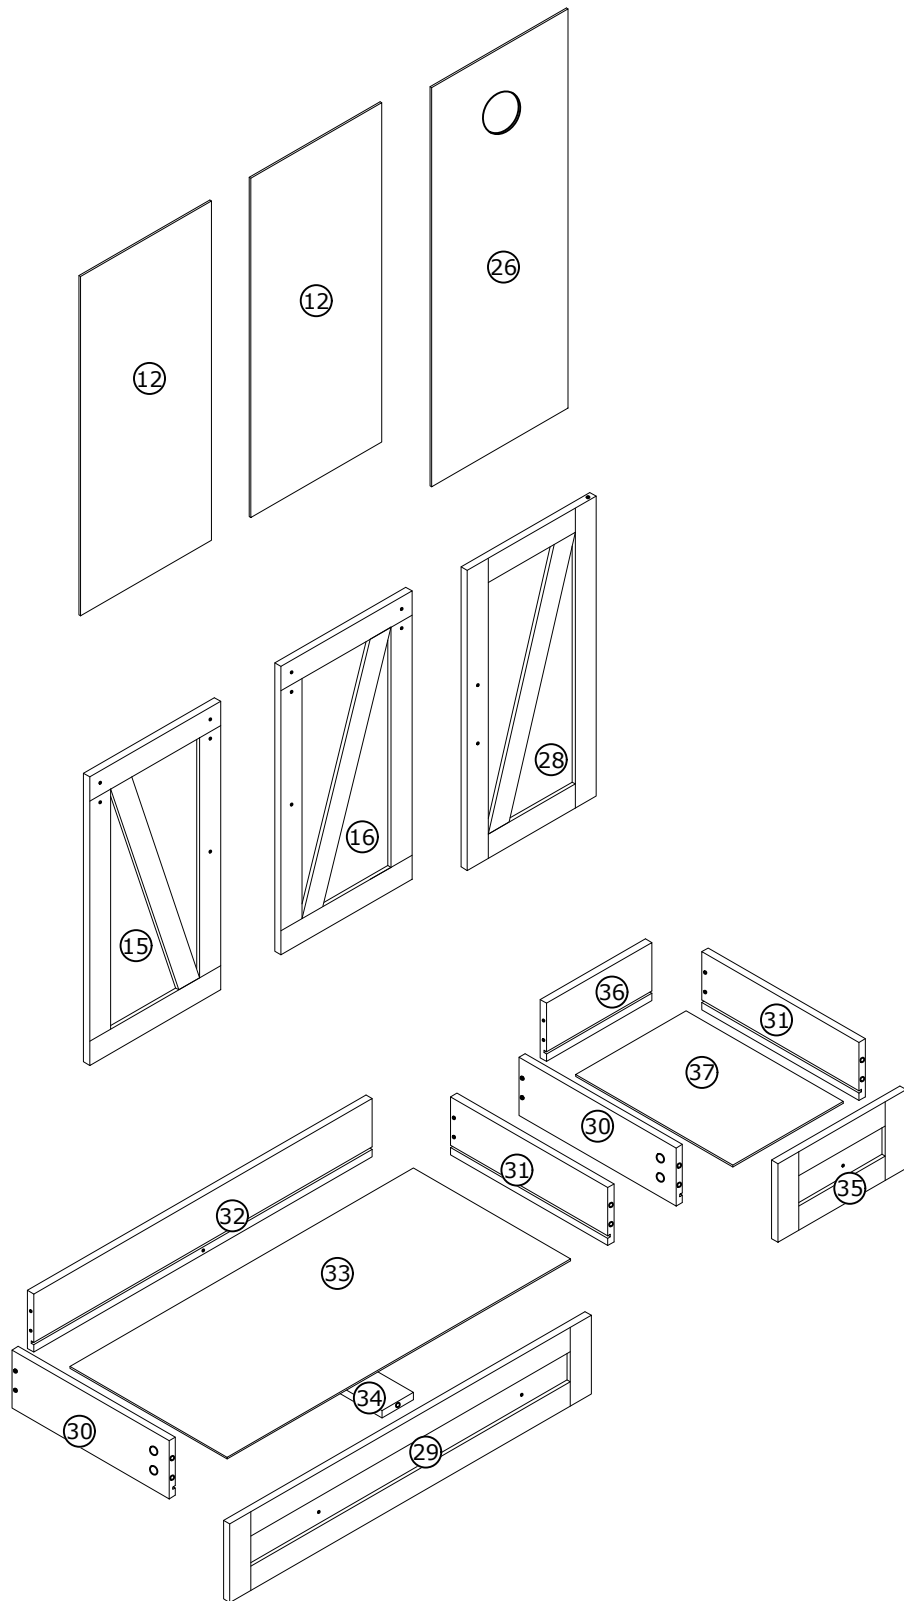

1

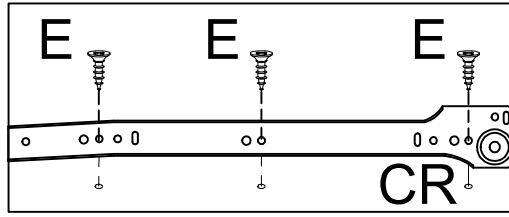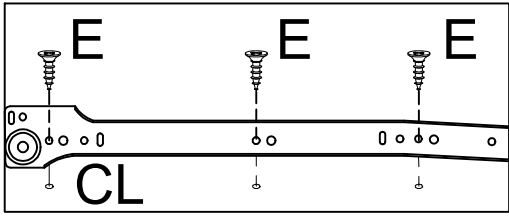


CL
L300mm(L) X1

CR
L300mm(R) X1


E
Ø3.5×12mmX6

f
Ø30×10mm X4






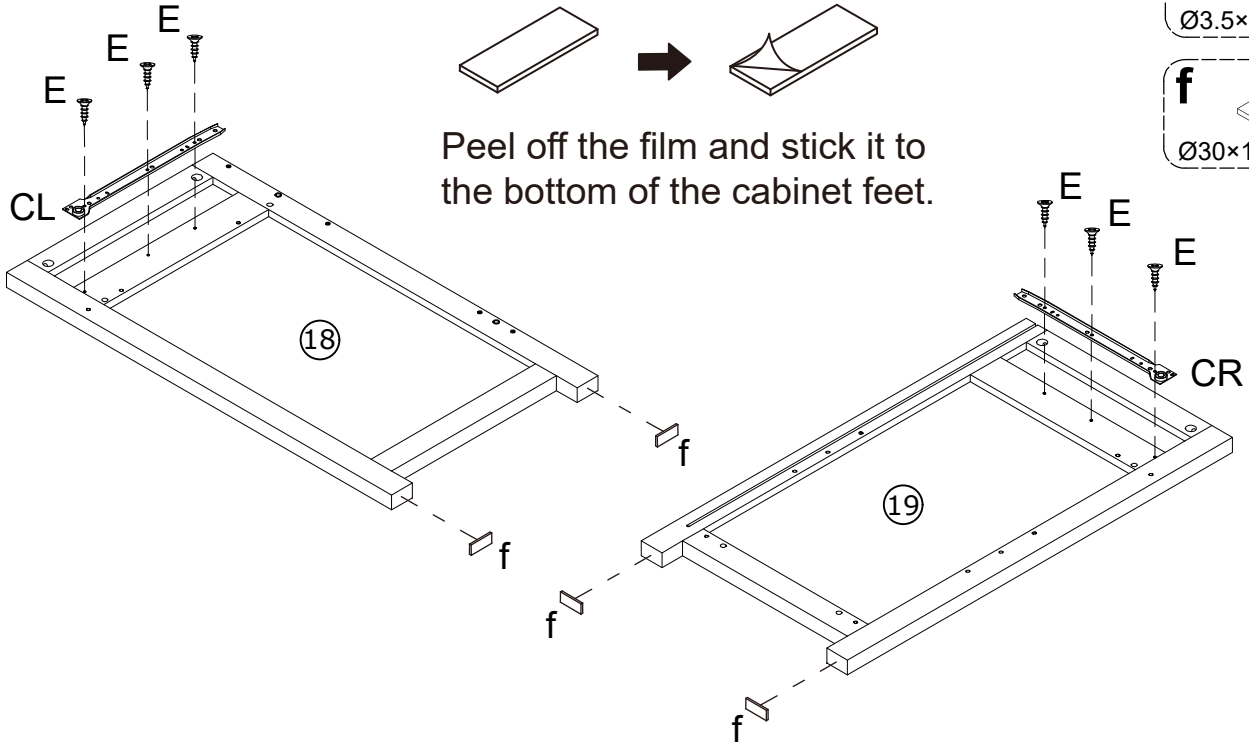


2


F
Ø6×35mm X11

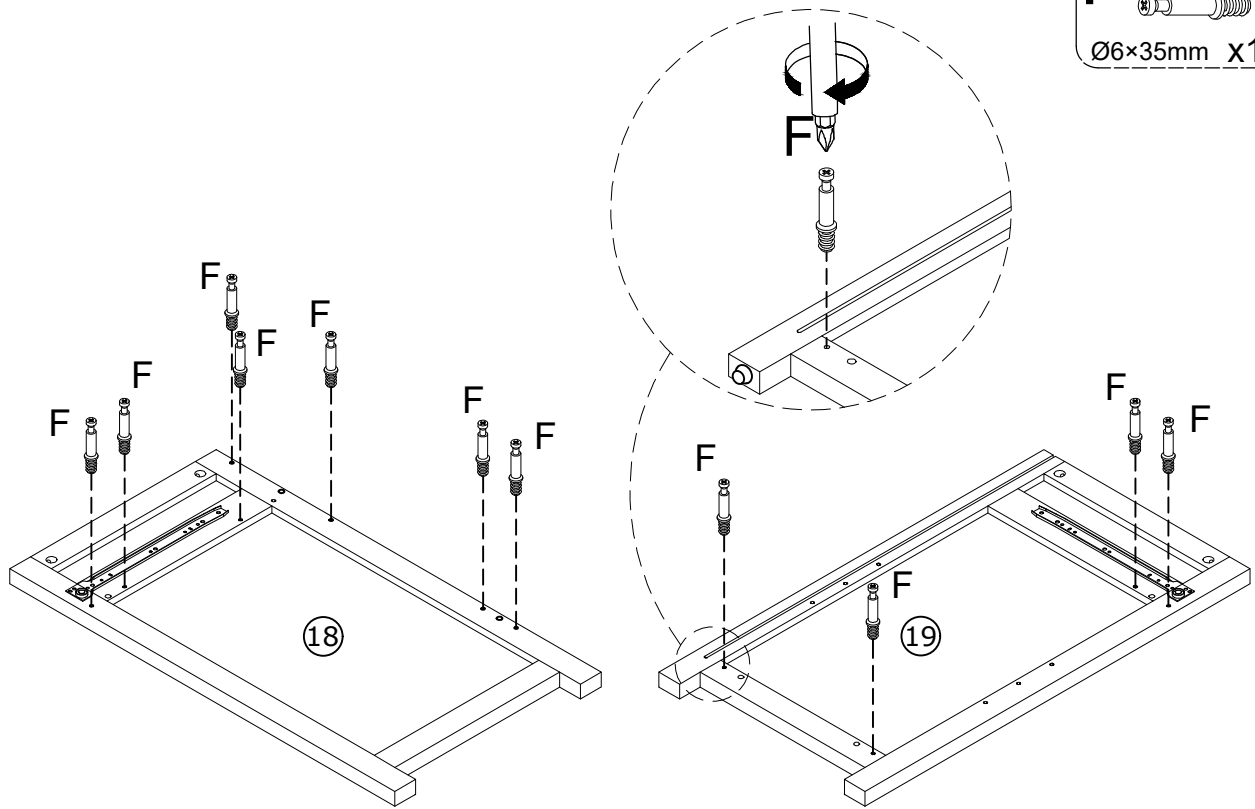



3

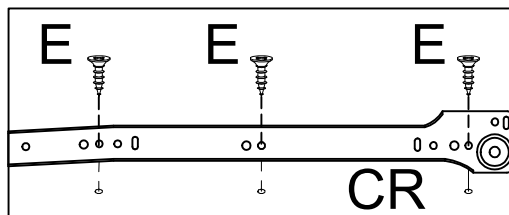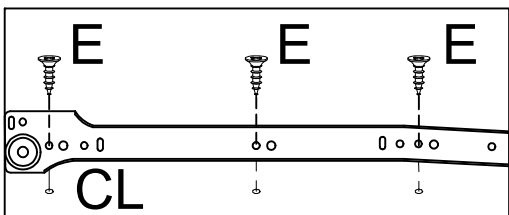


Peel off the film and stick it to the bottom of the cabinet feet.

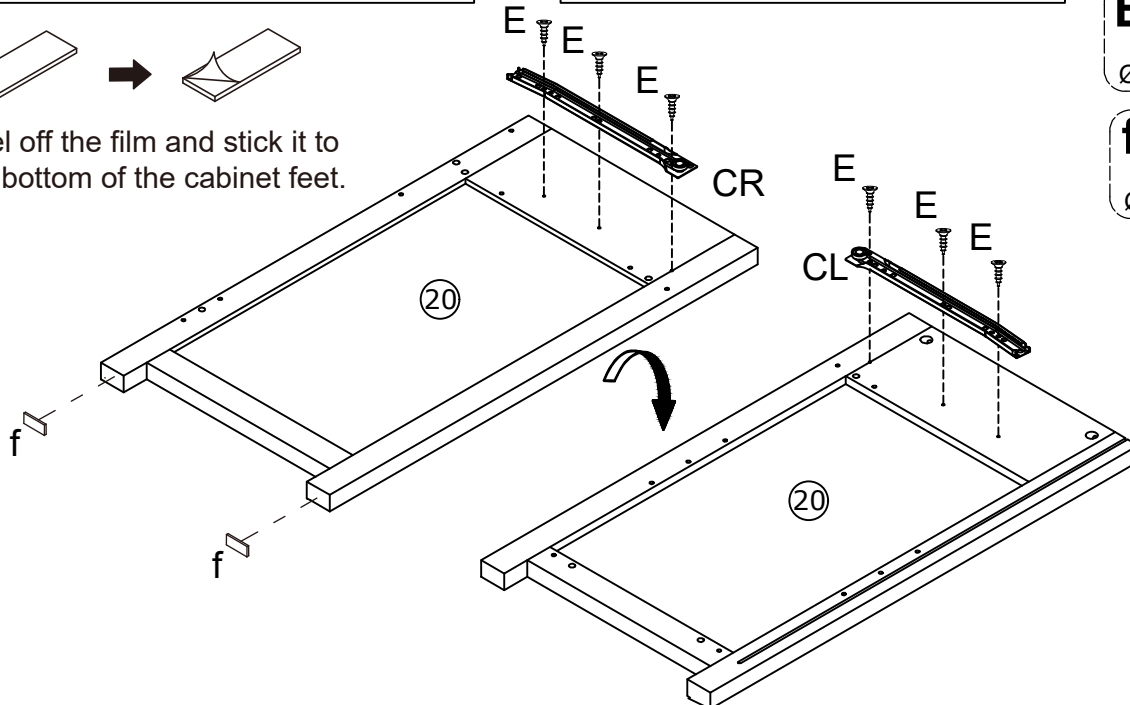

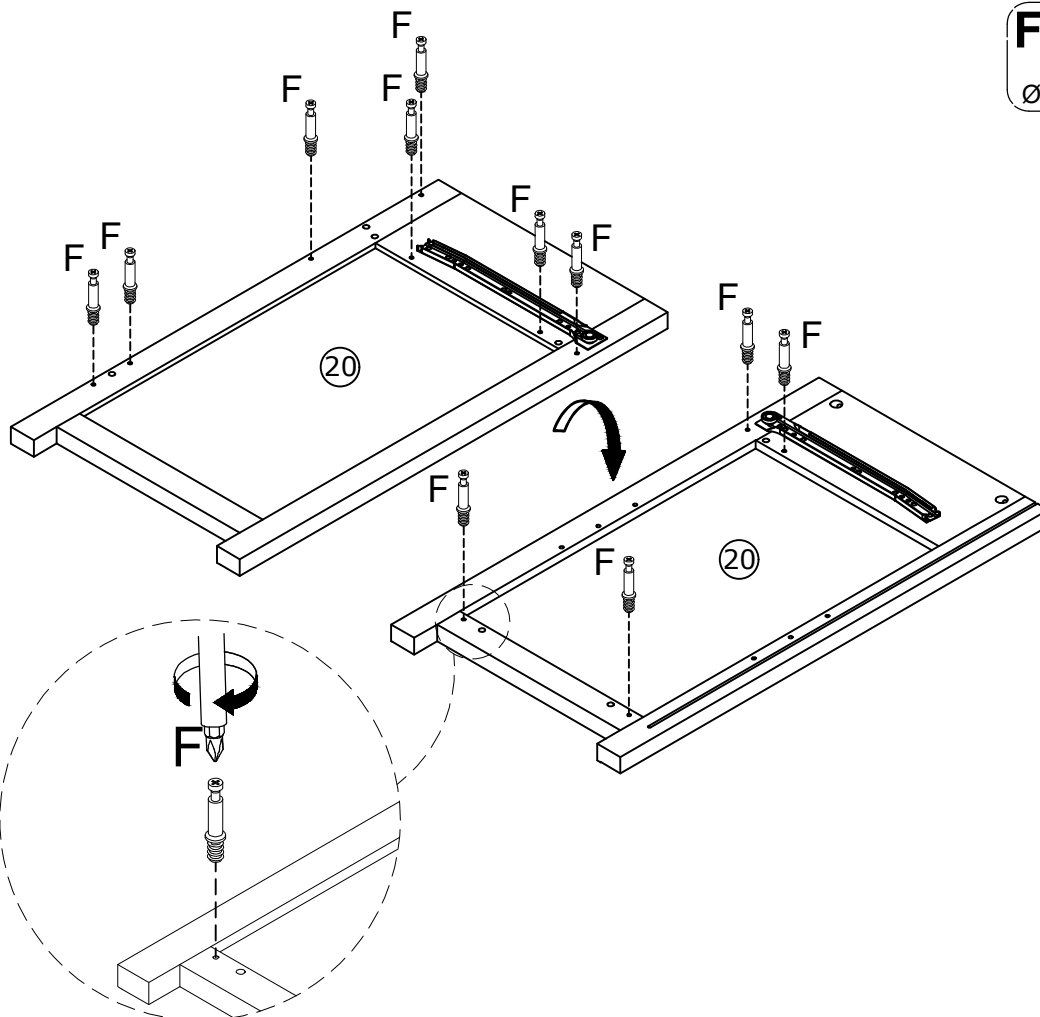

4




5


G 
Ø15×10mm x2


H 
Ø4×30mm x2


R 
Ø6×30mm x4

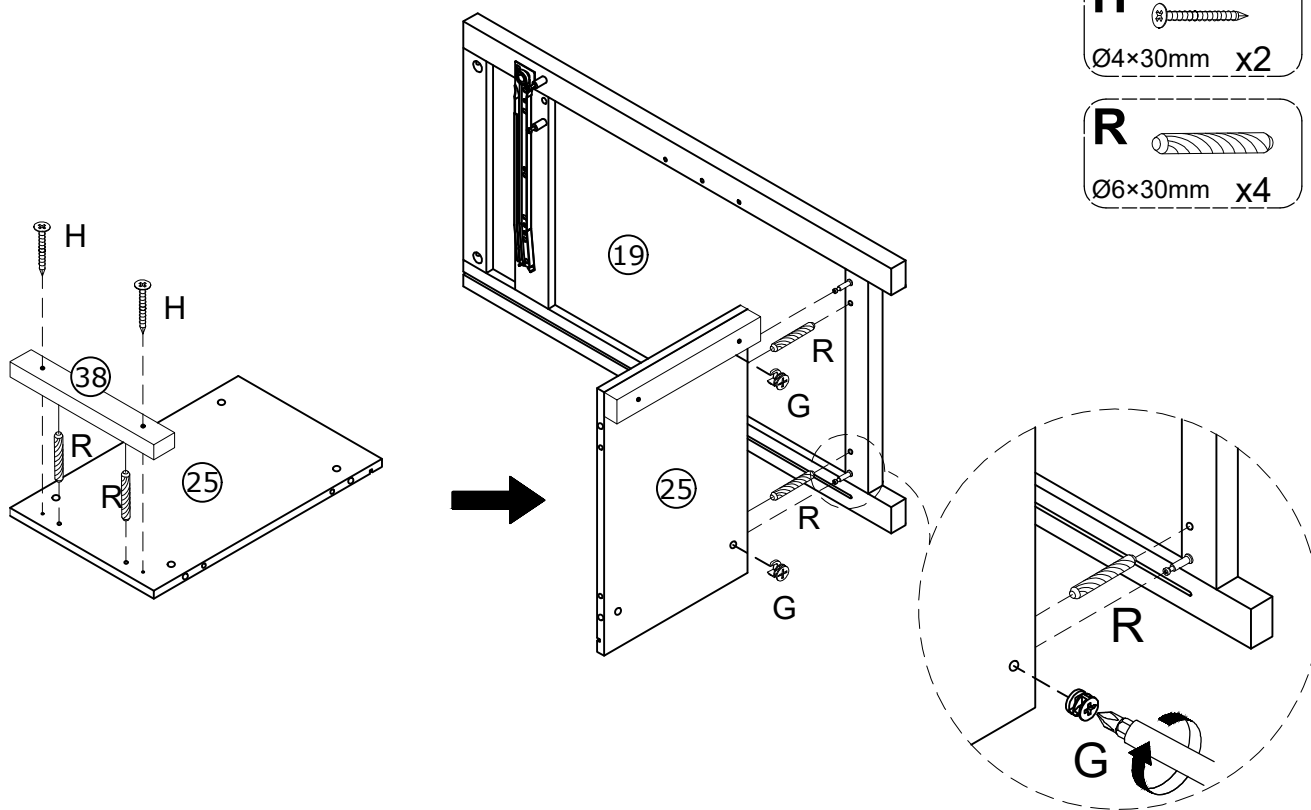


6


L 
L=36mm x1




U 
Ø3×14mm x2

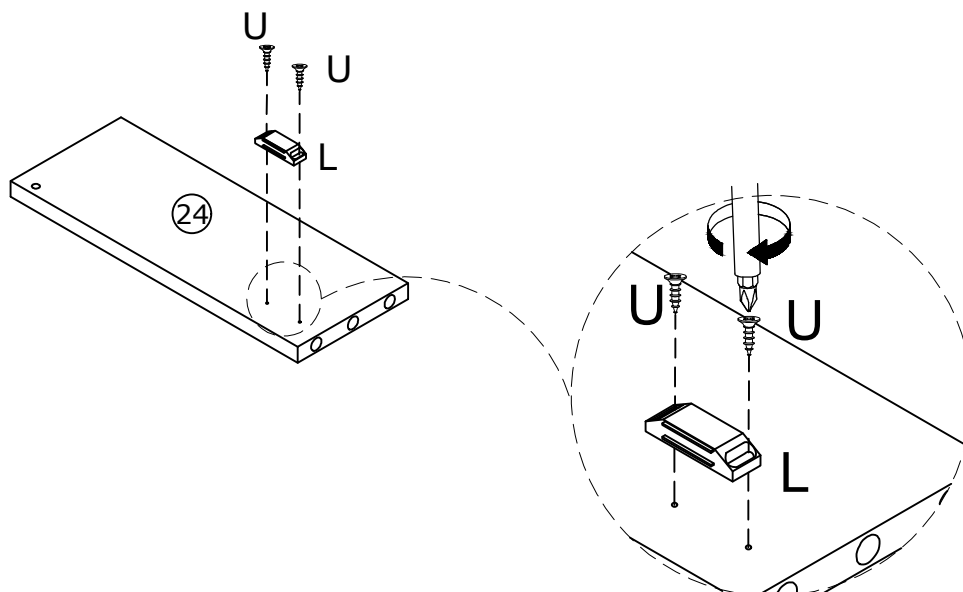


7


G 
Ø15×10mm x2




R 
Ø6×30mm x1

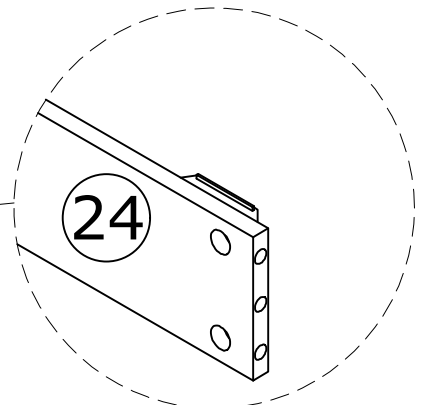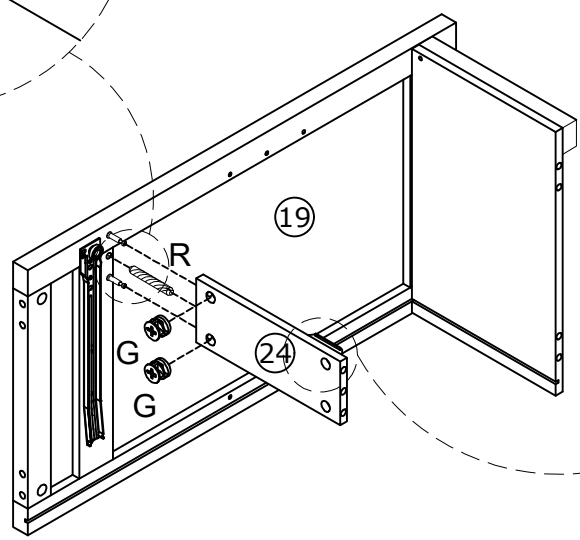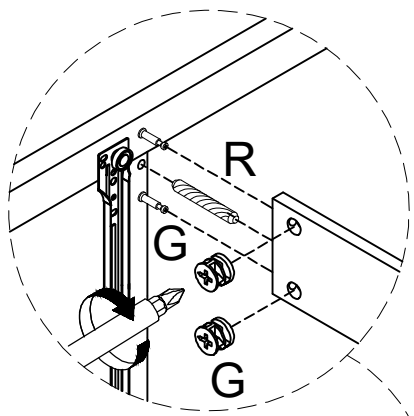


8


G 
Ø15×10mm x4


R 
Ø6×30mm x3

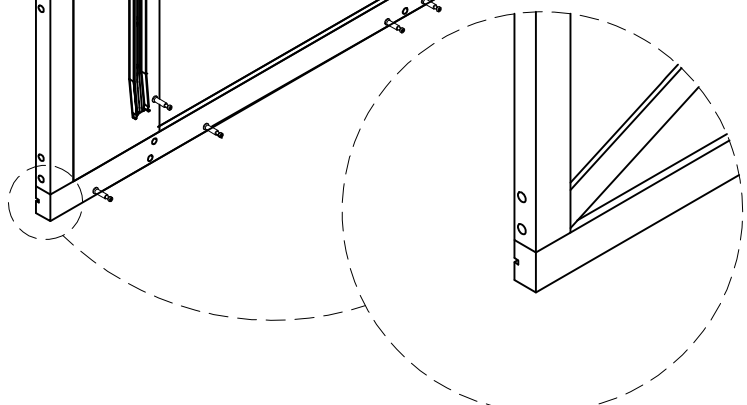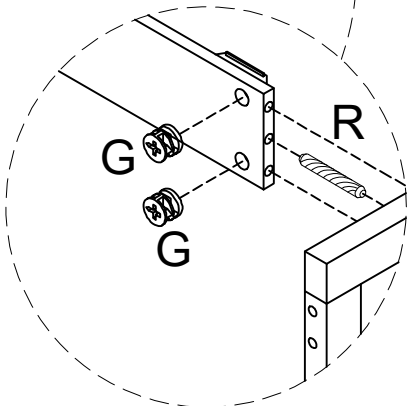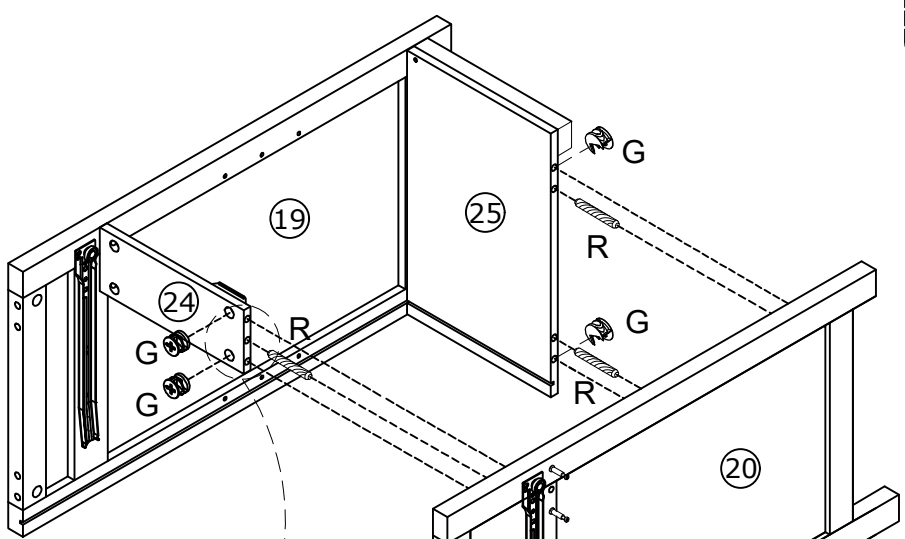


9


F 
Ø6×35mm x2


G 
Ø15×10mm x2


R 
Ø6×30mm x2

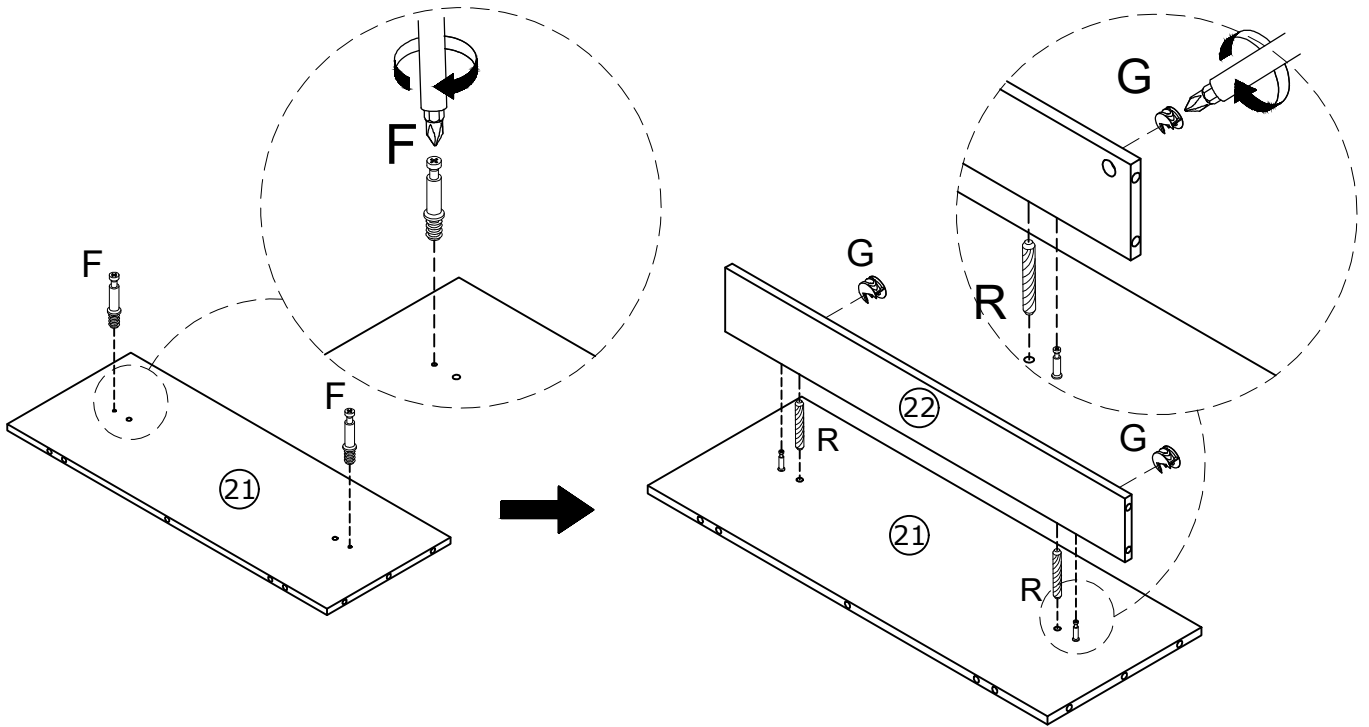


10


G 
Ø15×10mm x3


R 
Ø6×30mm x4

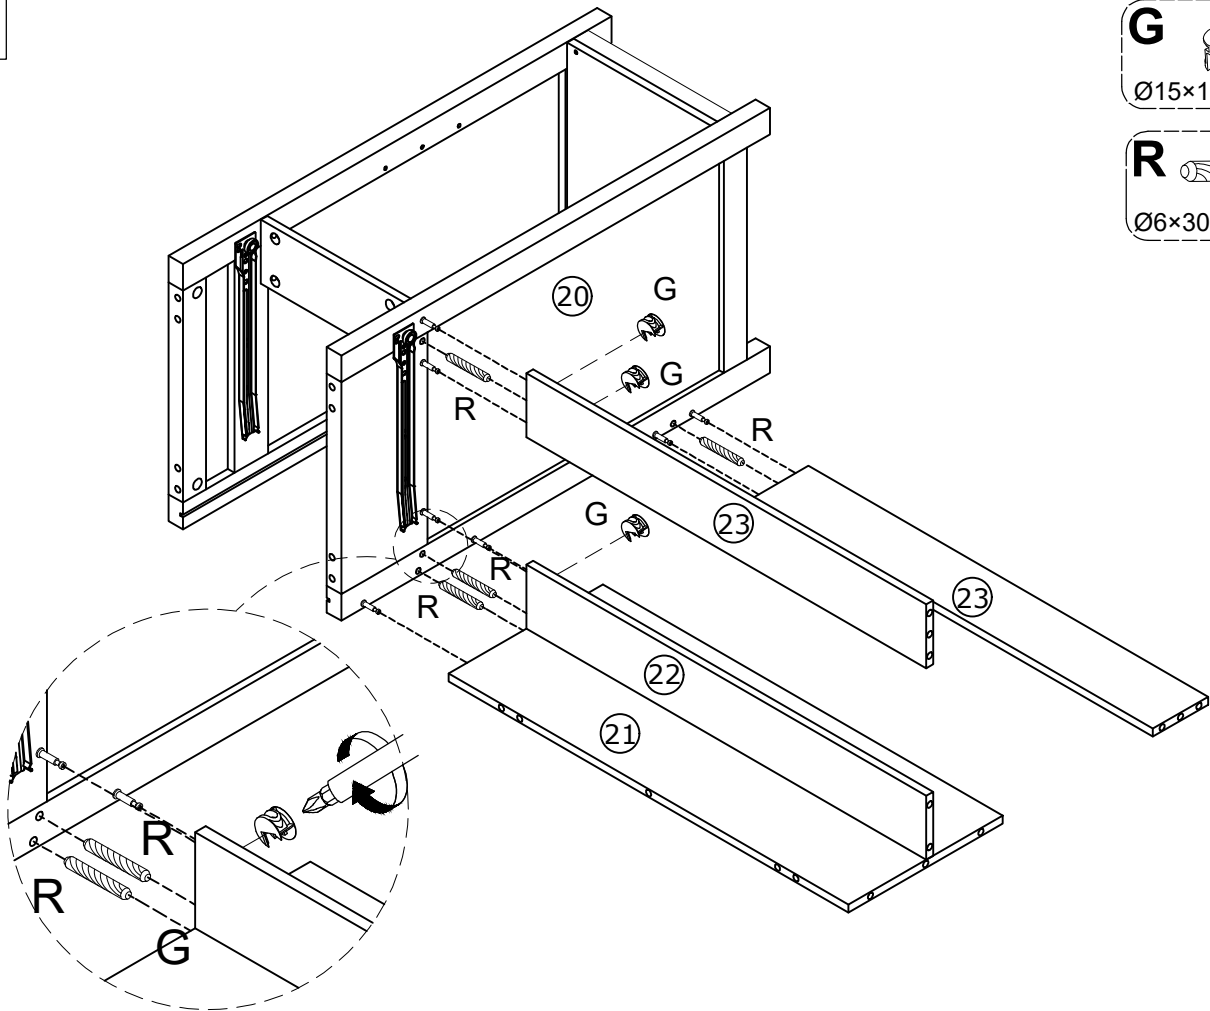


11


G 
Ø15×10mm x3

R 
Ø6×30mm x4

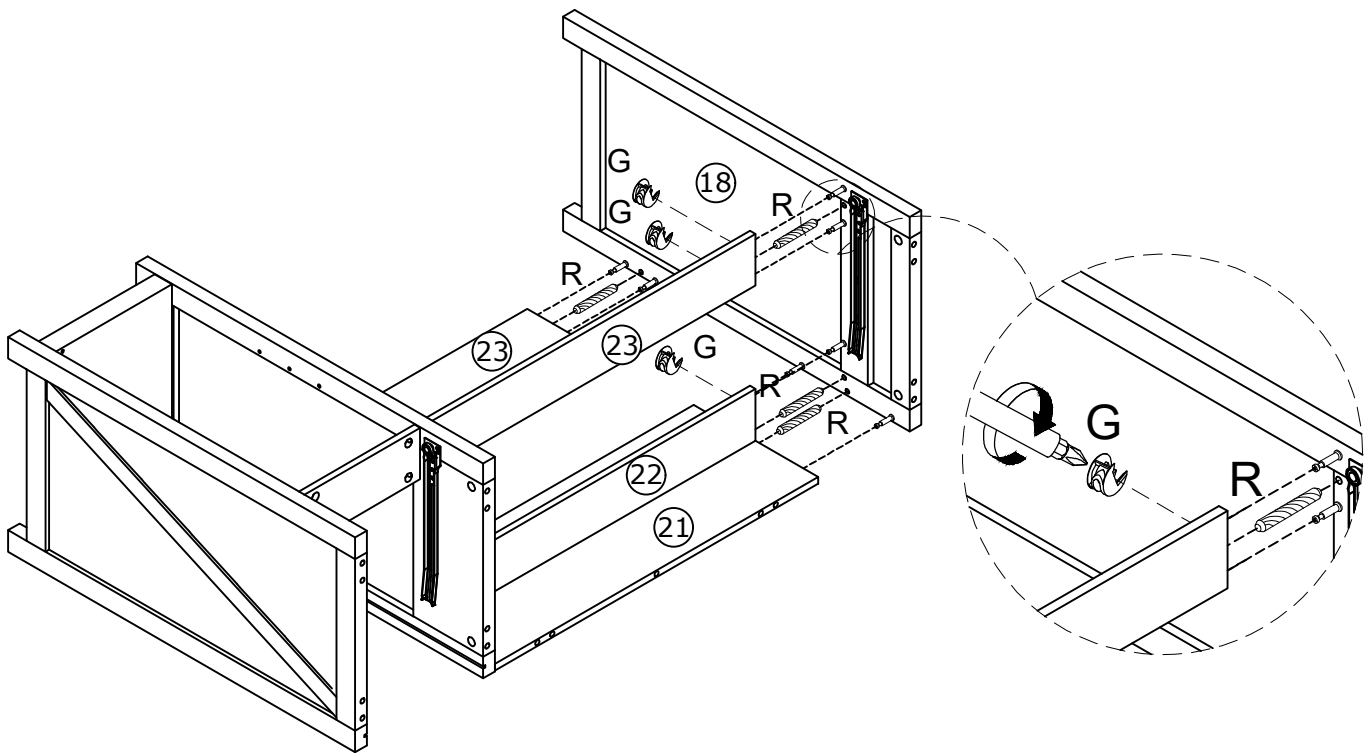


12



G 
Ø15×10mm x8

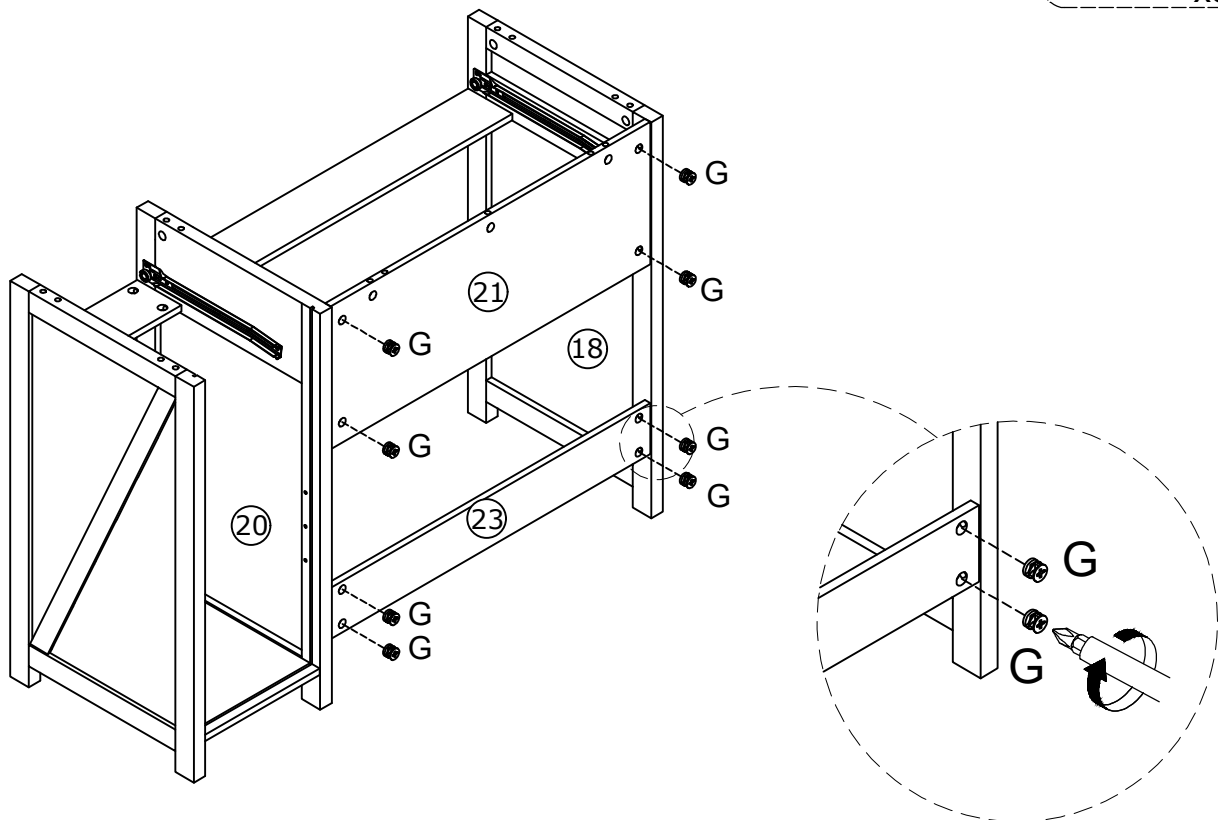


13

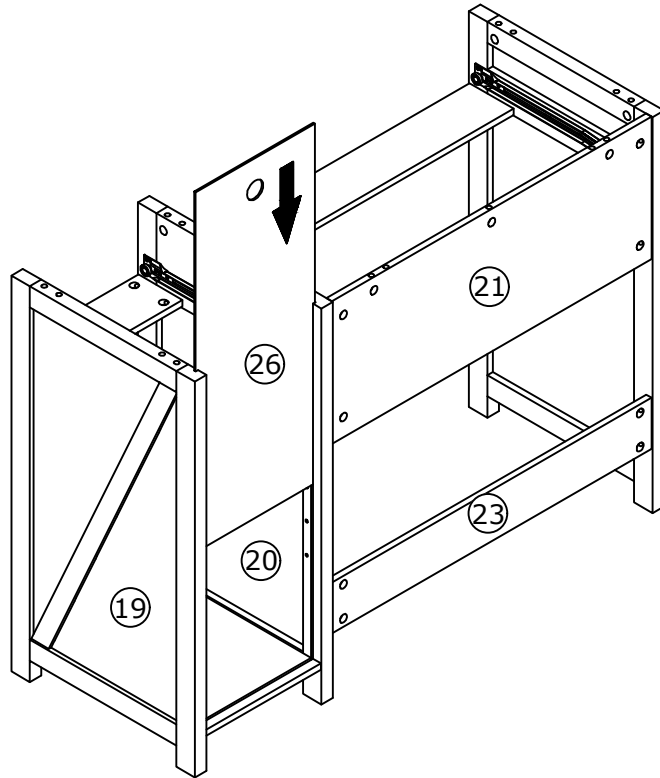



14

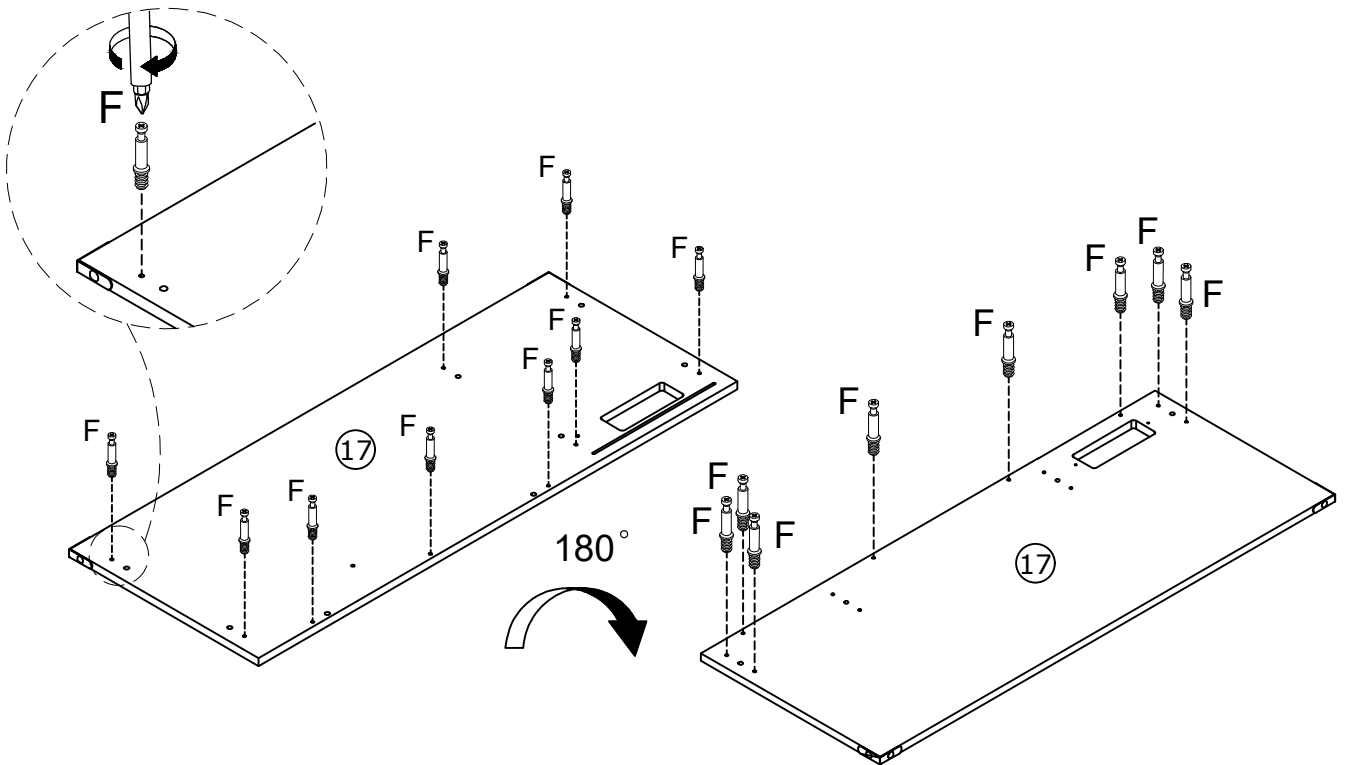


15

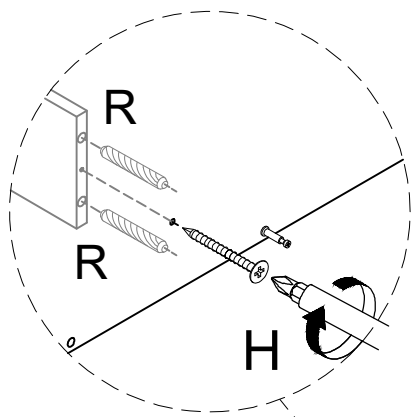



H 
 Ø4×30mm x2


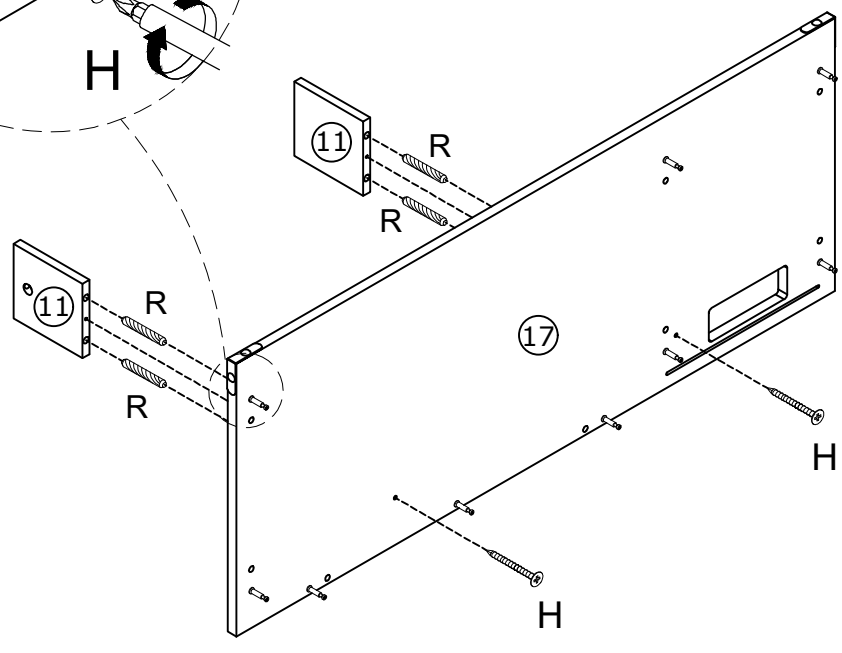
R 
 Ø6×30mm x4









16


G 
 Ø15×10mm x9


R 
 Ø6×30mm x8

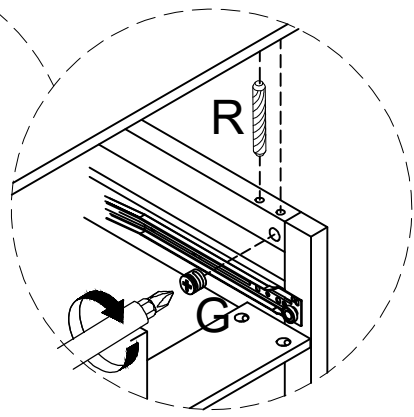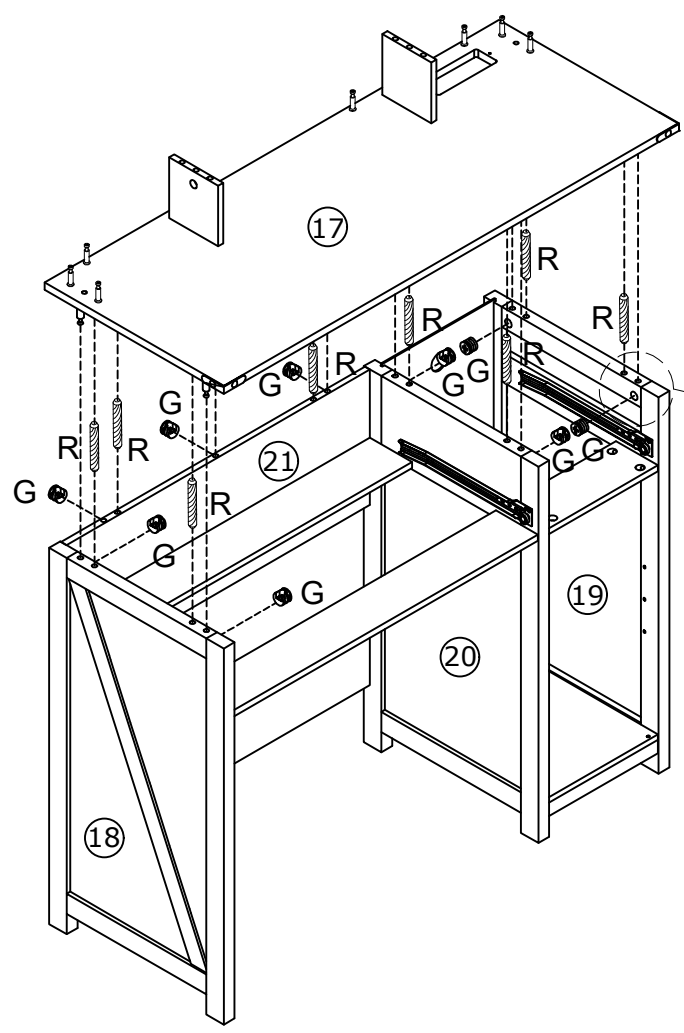

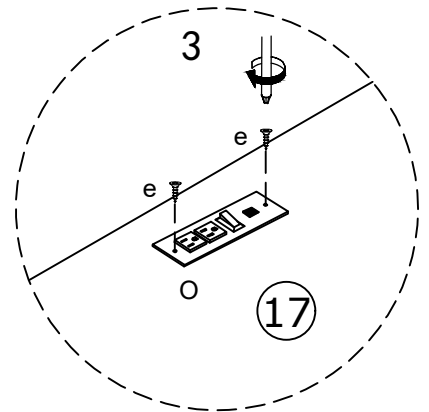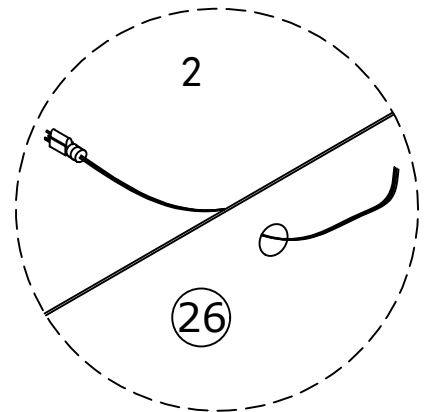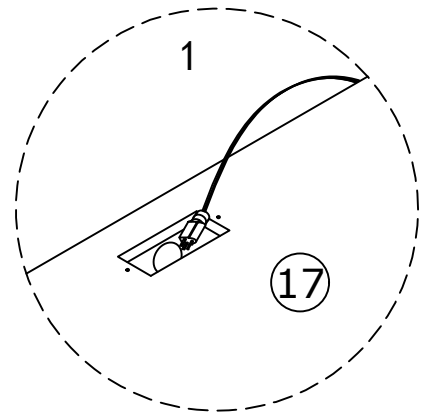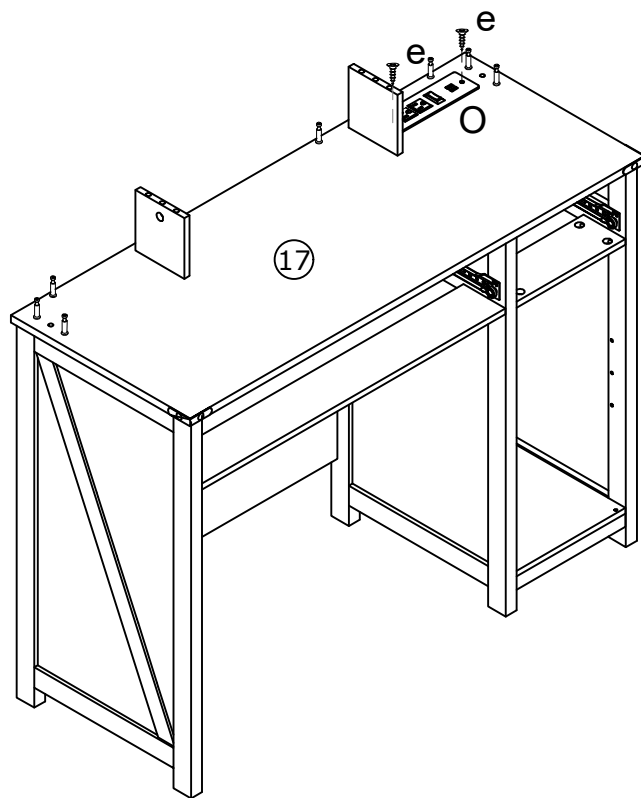



18

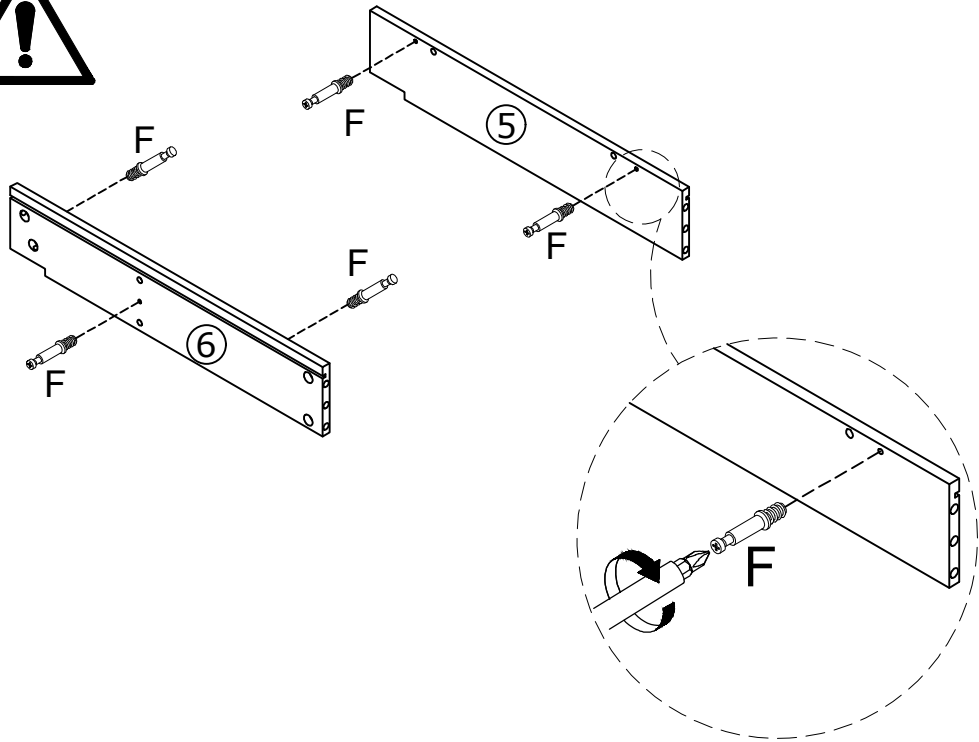
F 
Ø6×35mm x5




19

G 
Ø15×10mm x4


R 
Ø6×30mm x4

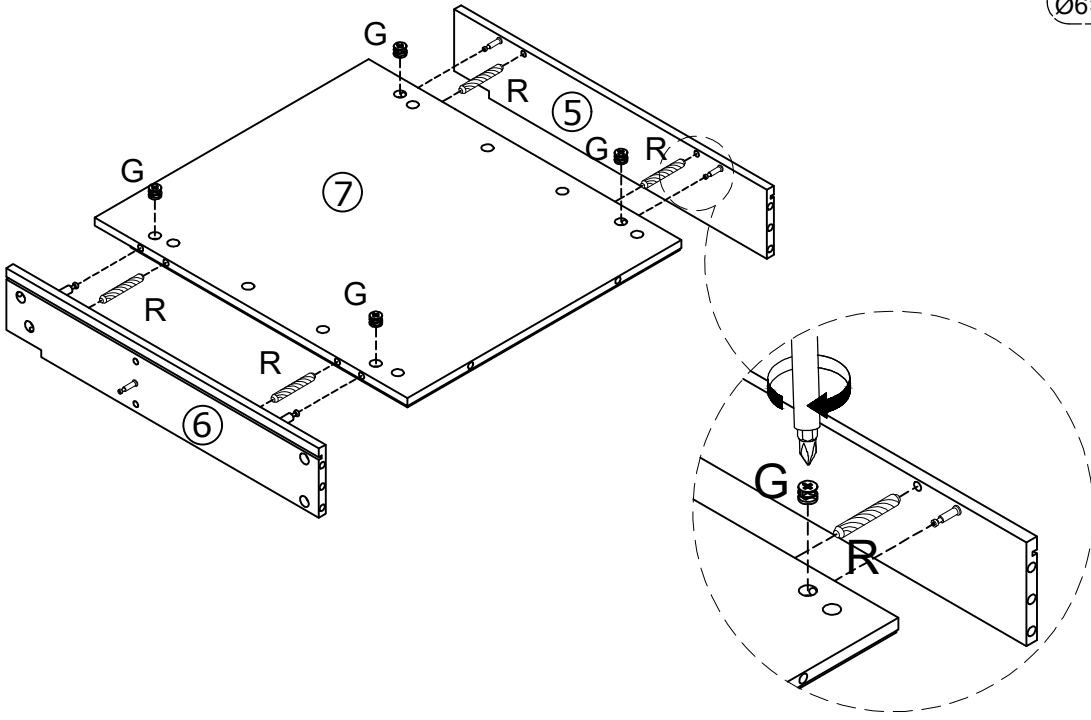


20

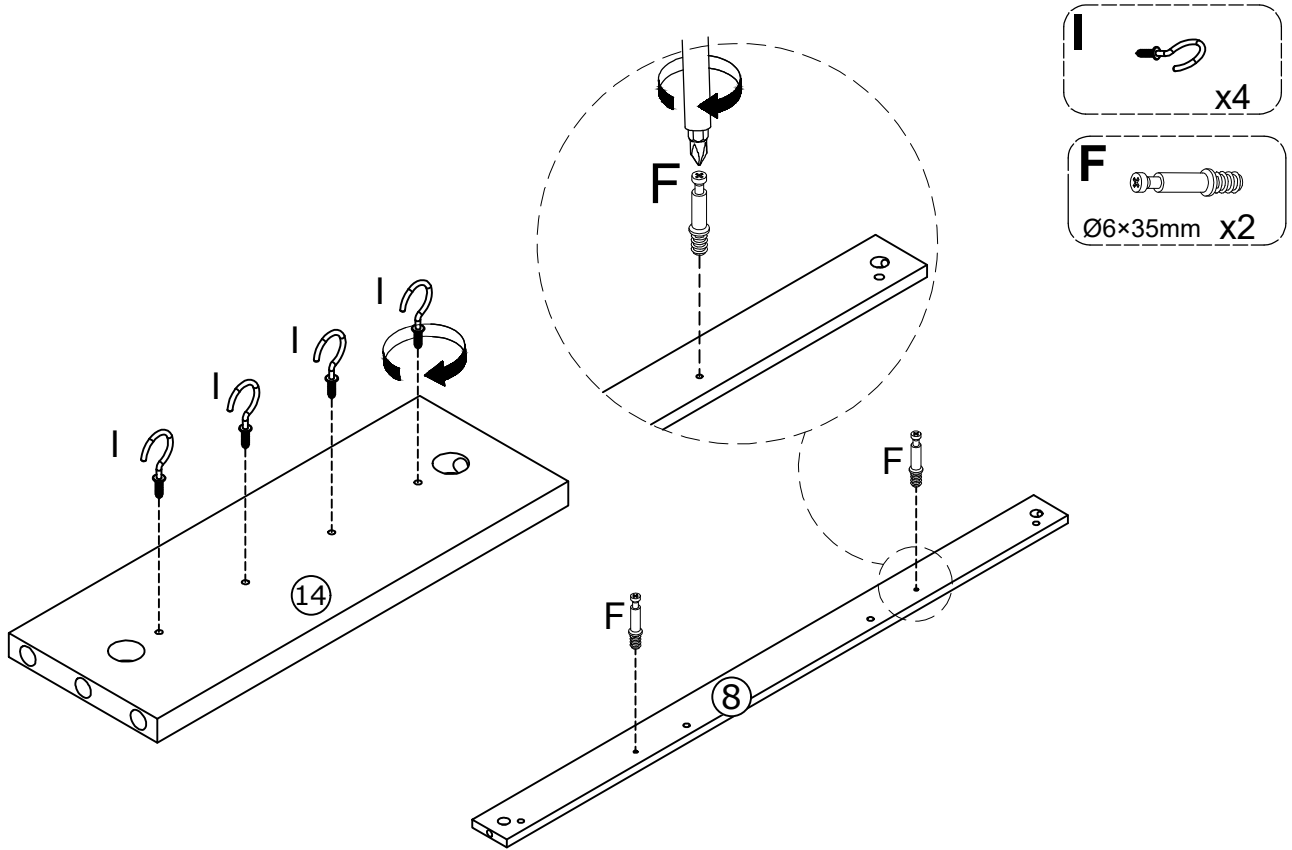


21

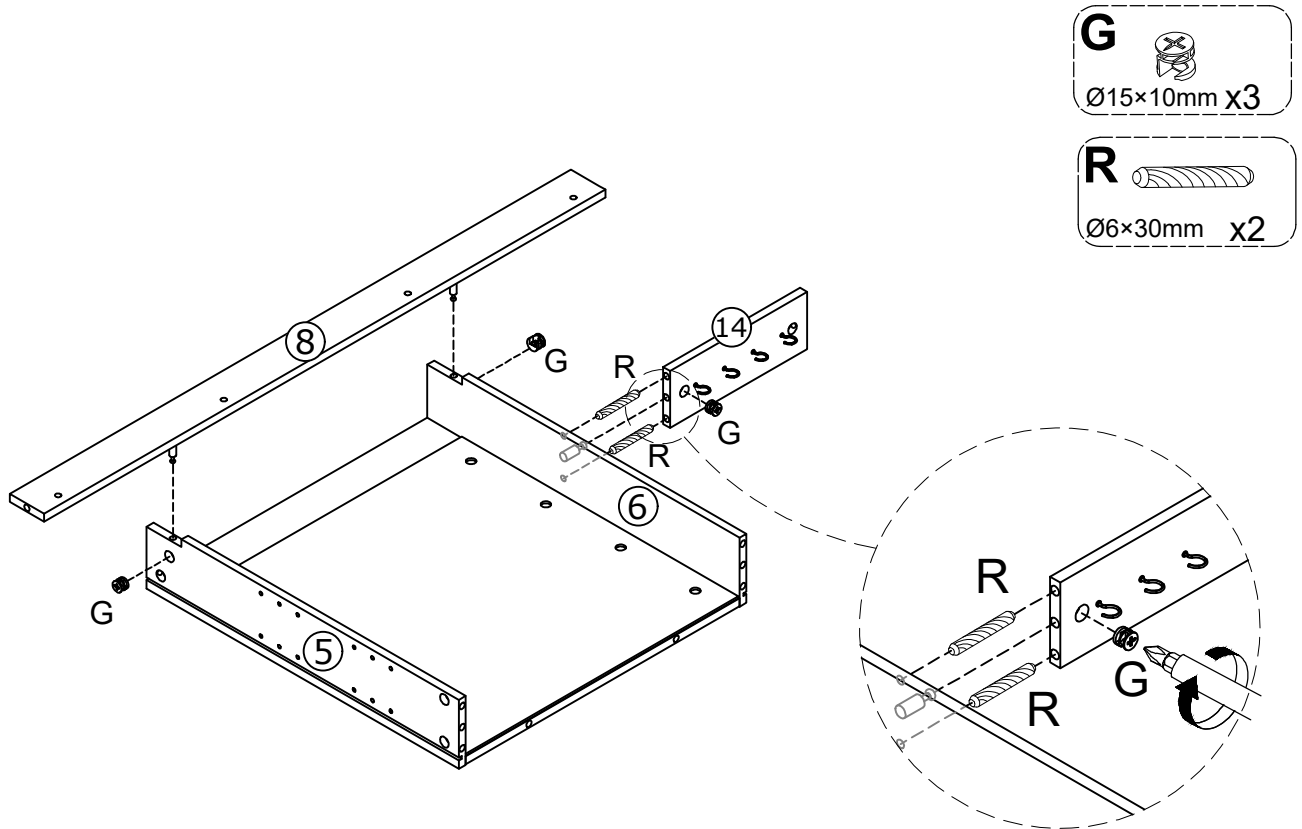



22


F 
Ø6×35mm x6

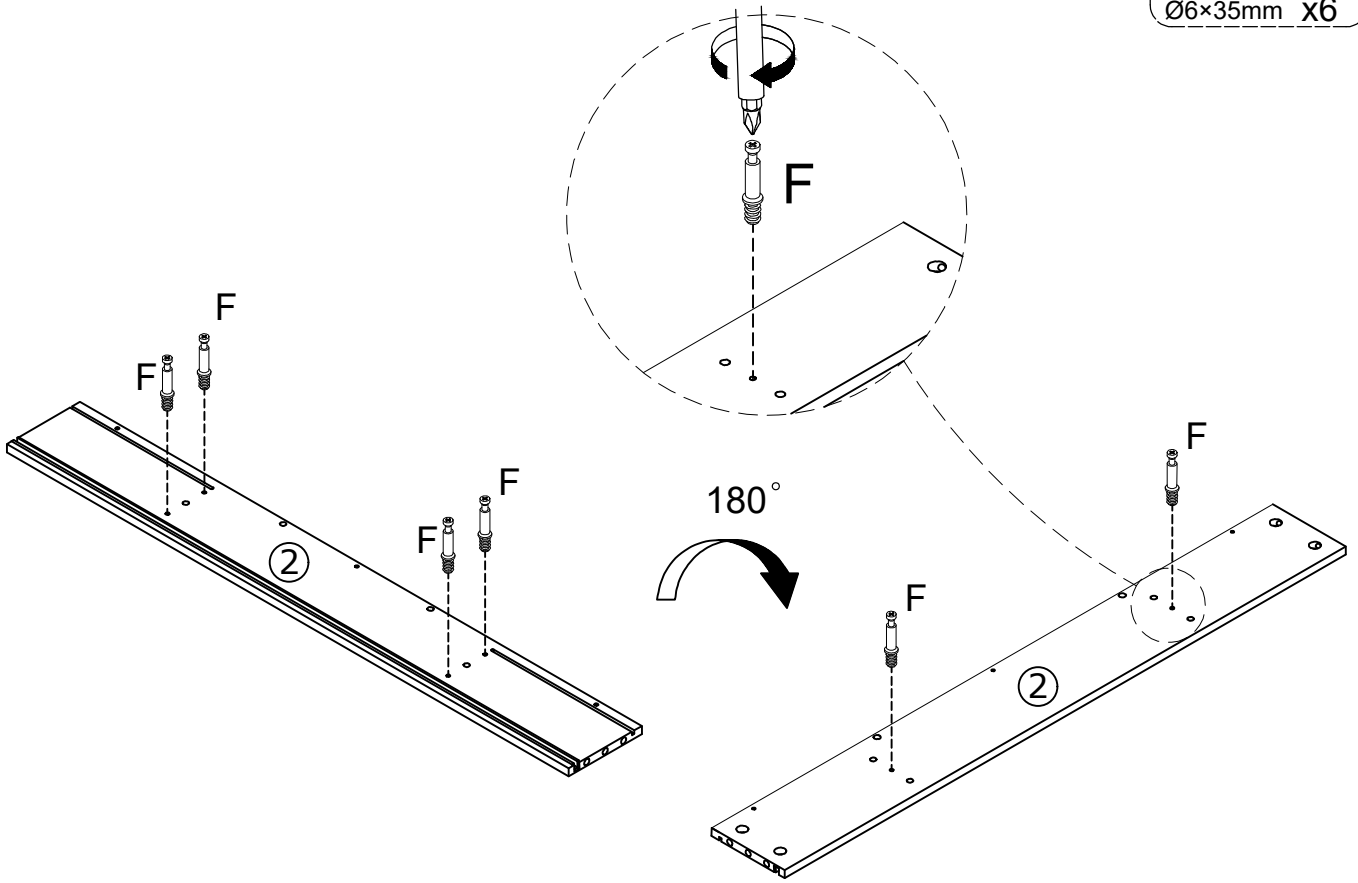


23


H 
Ø4×30mm x3


R 
Ø6×30mm x2

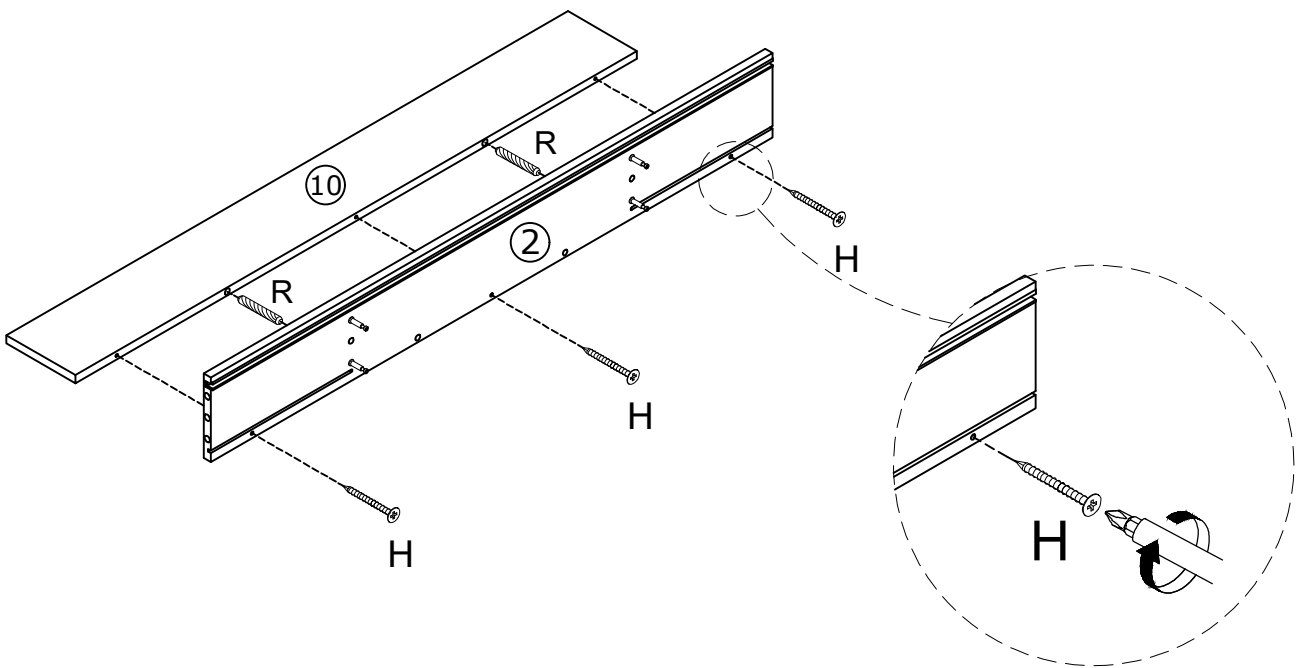


24


G 
Ø15×10mm x4

R 
Ø6×30mm x4

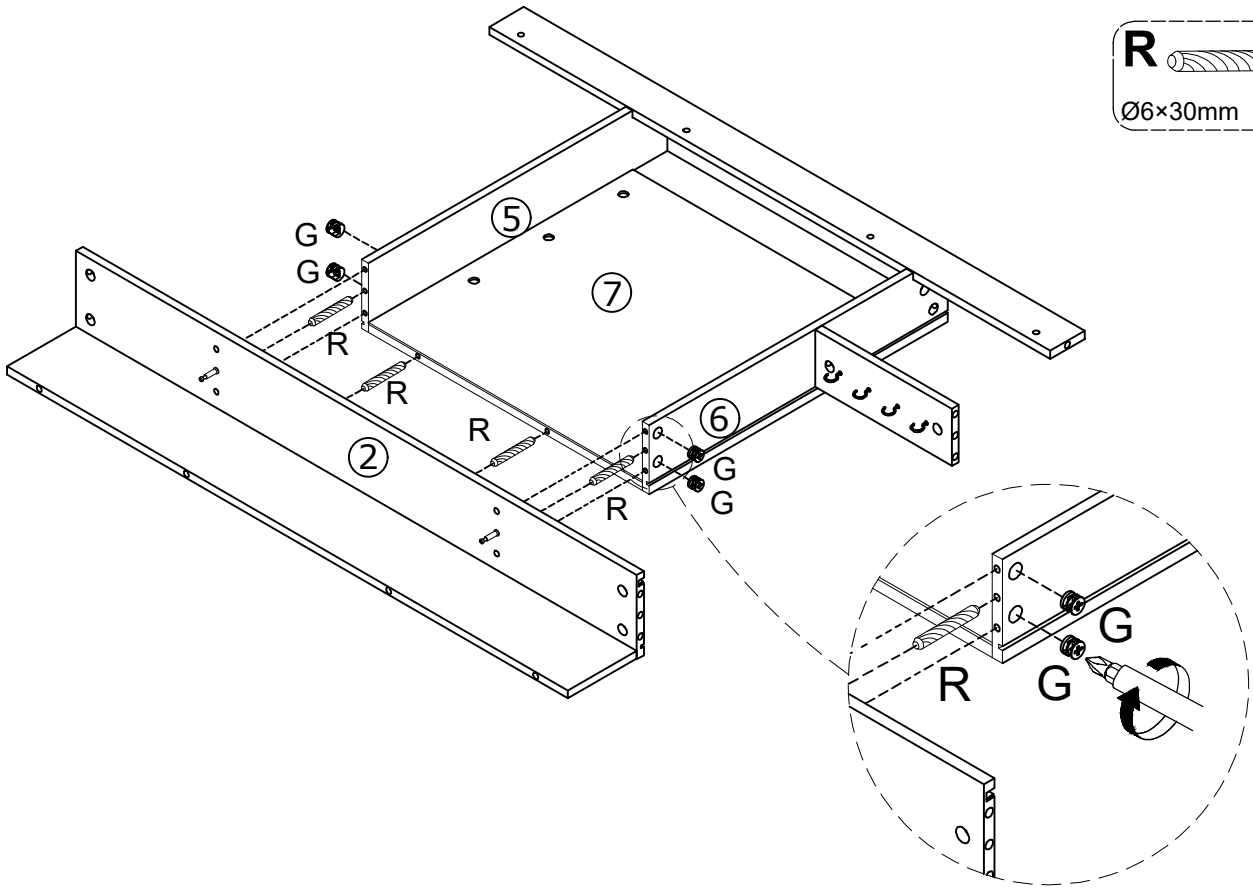



25

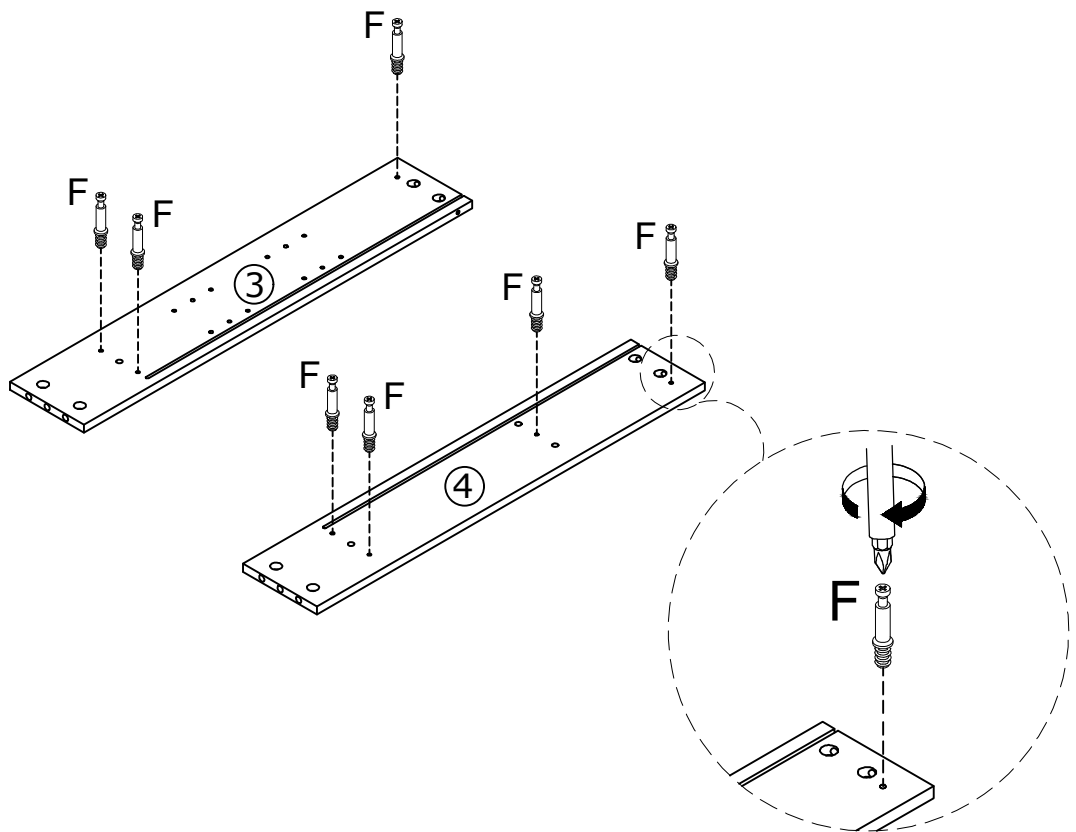
F 
Ø6×35mm x7




26


G 
Ø15×10mm x3


R 
Ø6×30mm x1

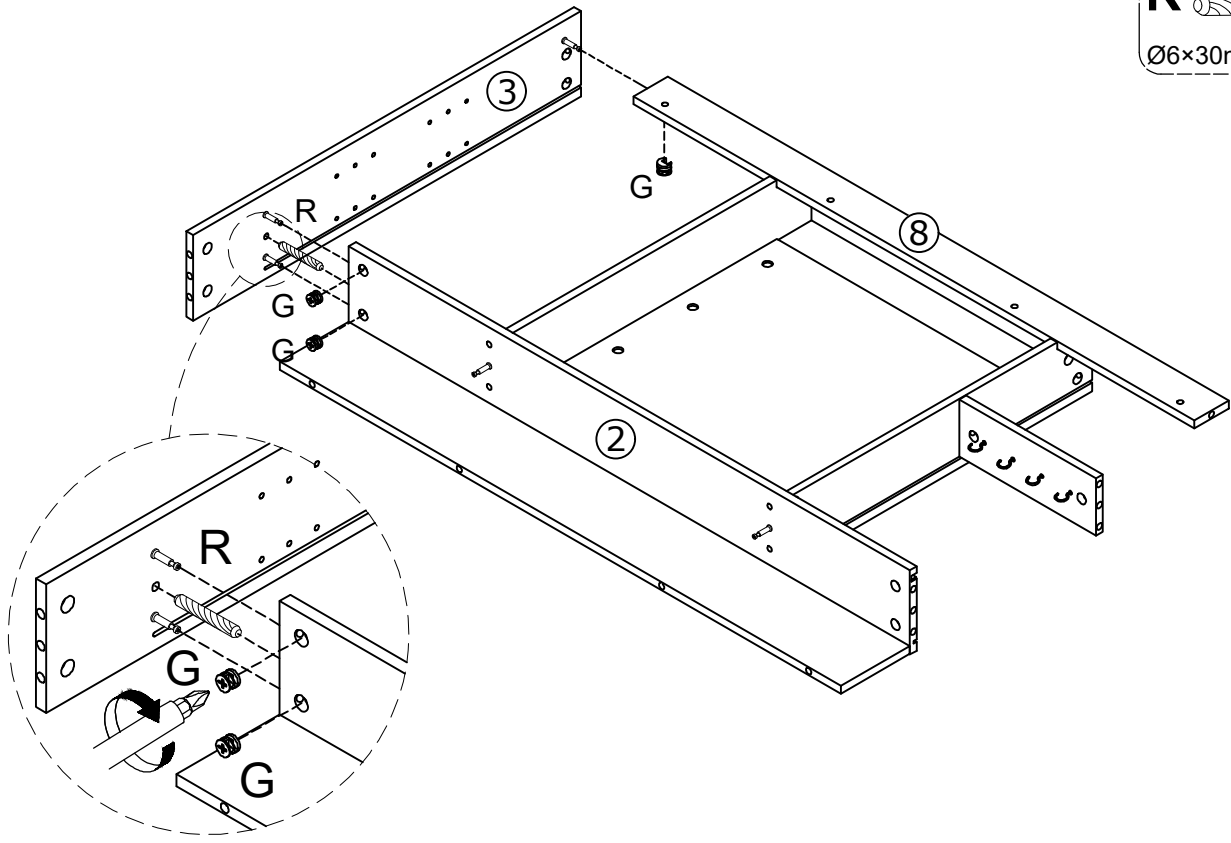


27

G 
Ø15×10mm x4



R 
Ø6×30mm x3

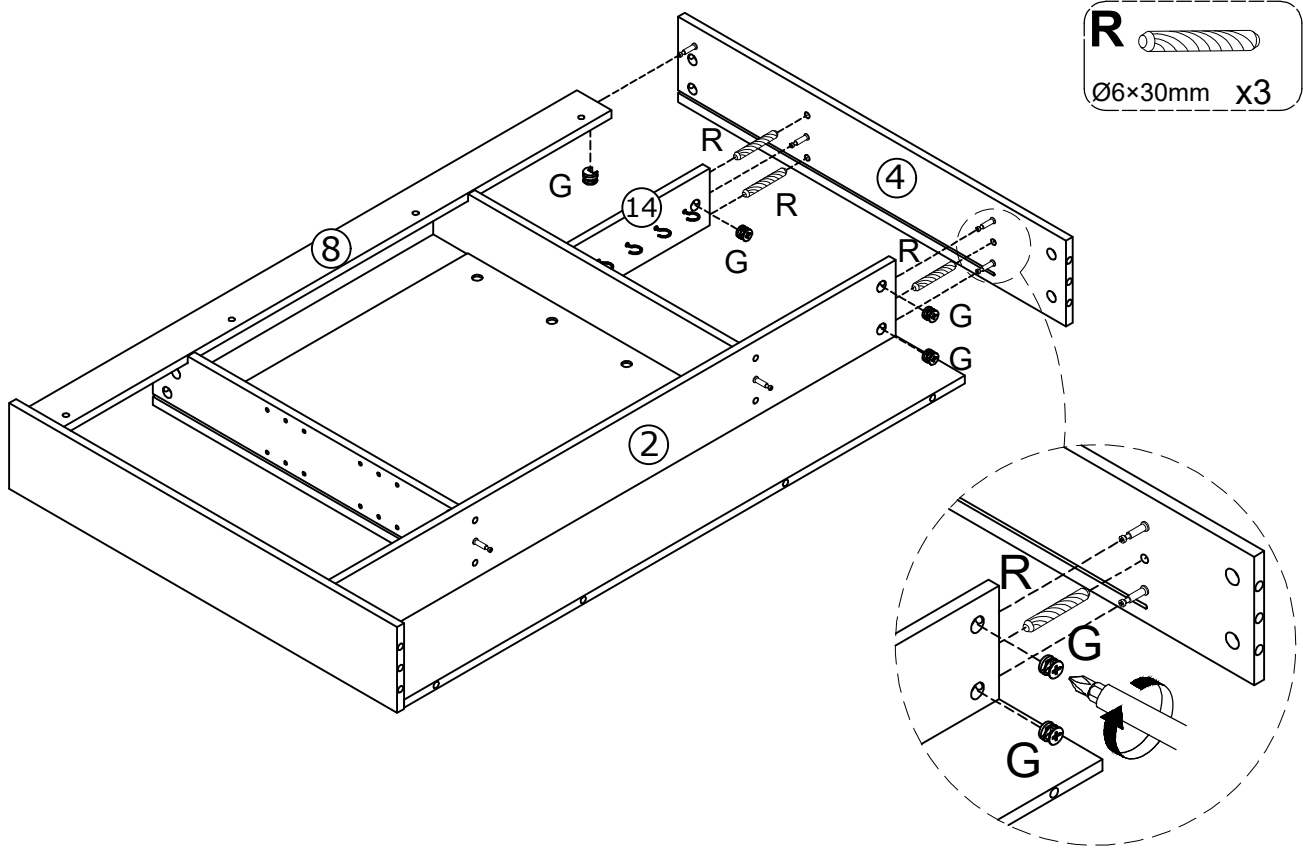

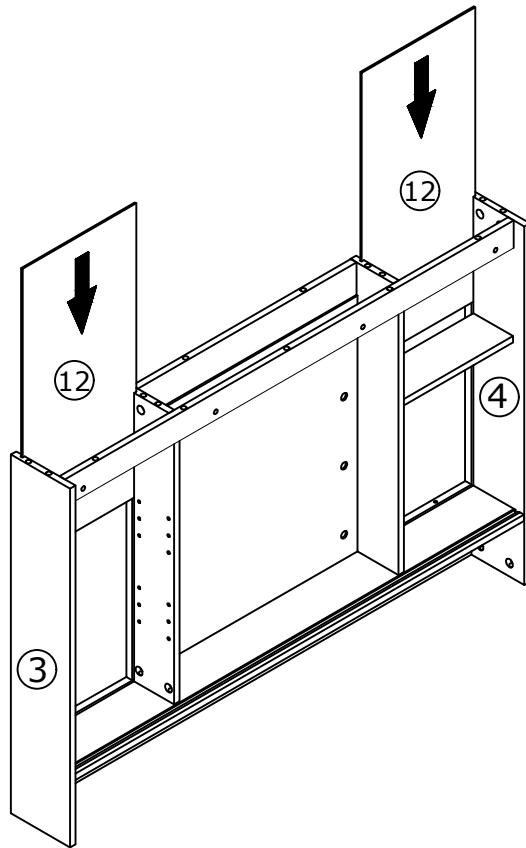

28

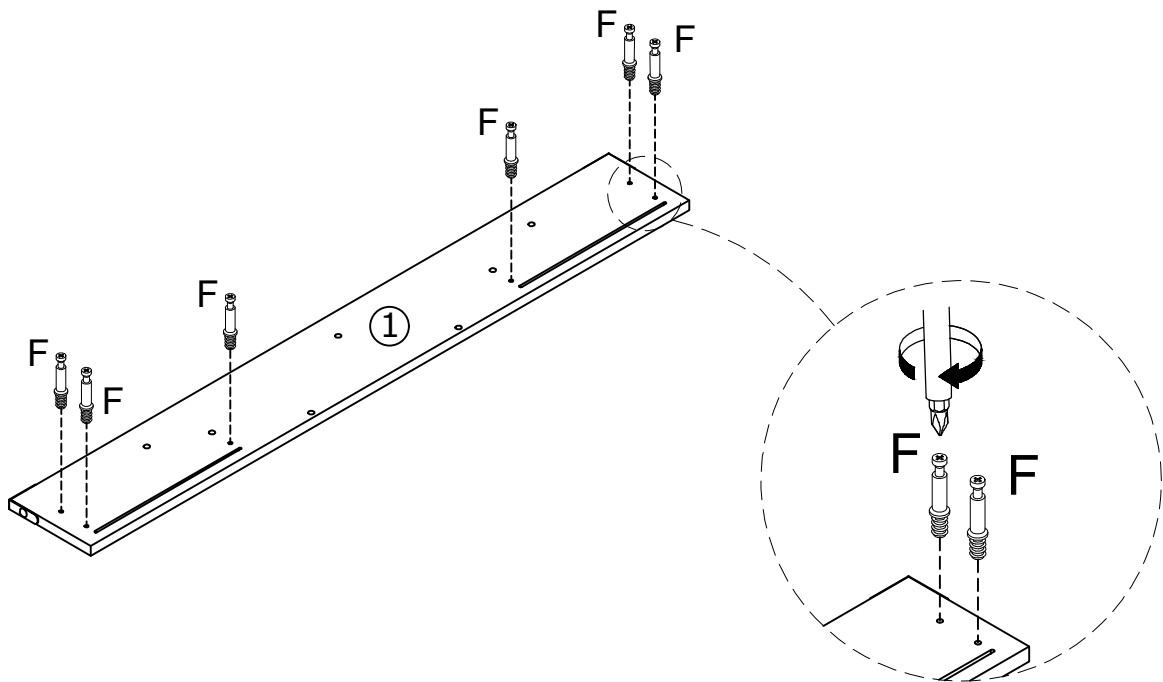




29




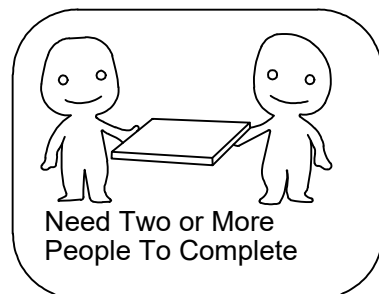
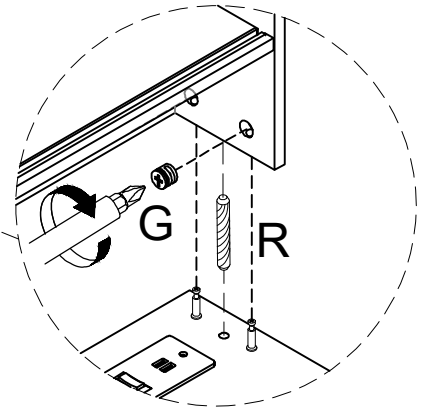
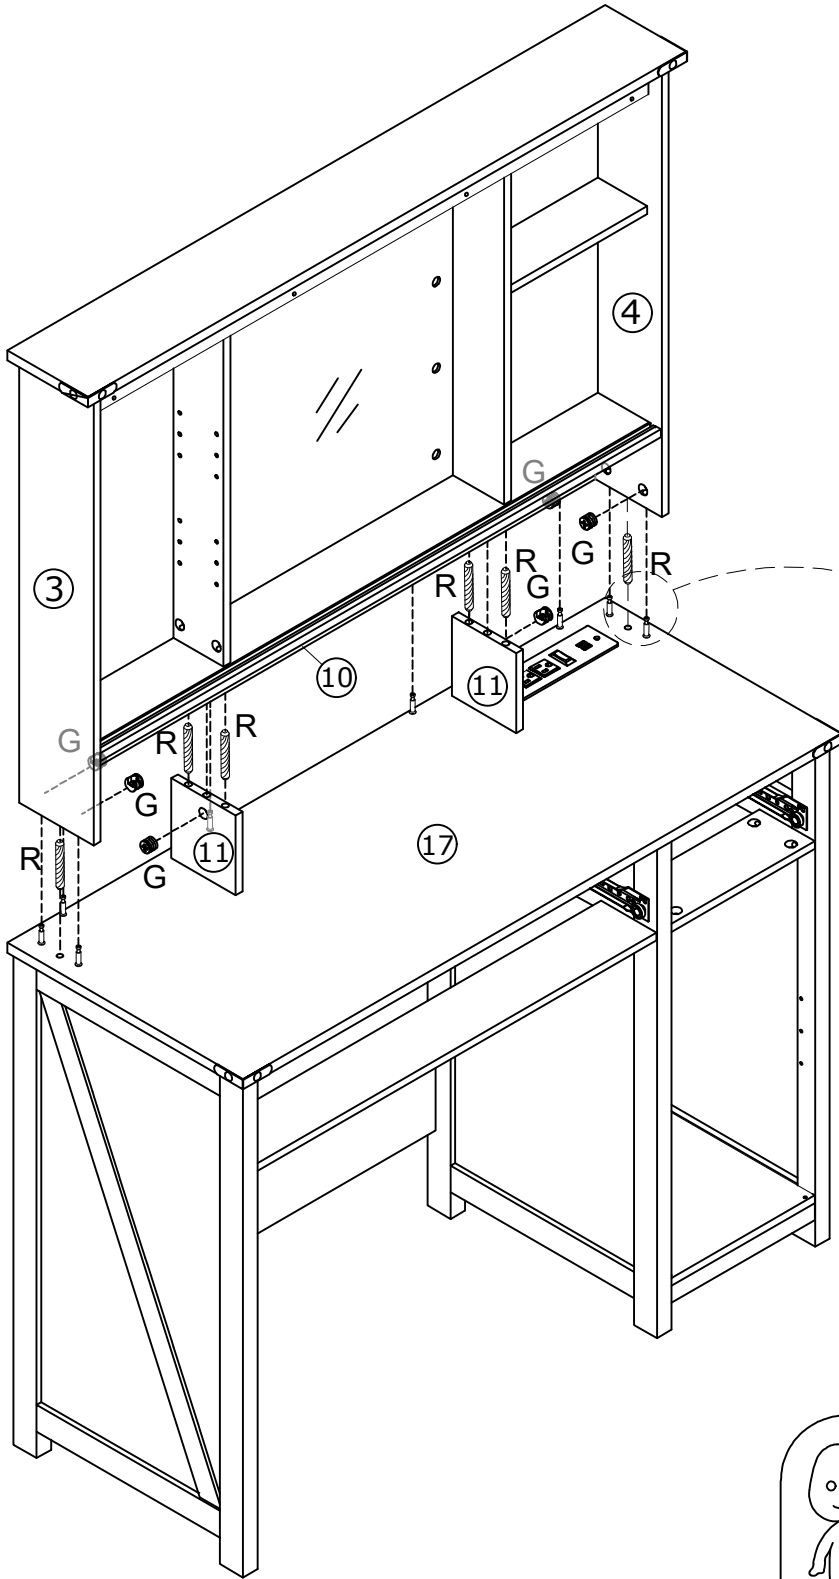
G 
Ø15×10mm x6


R 
Ø6×30mm x7


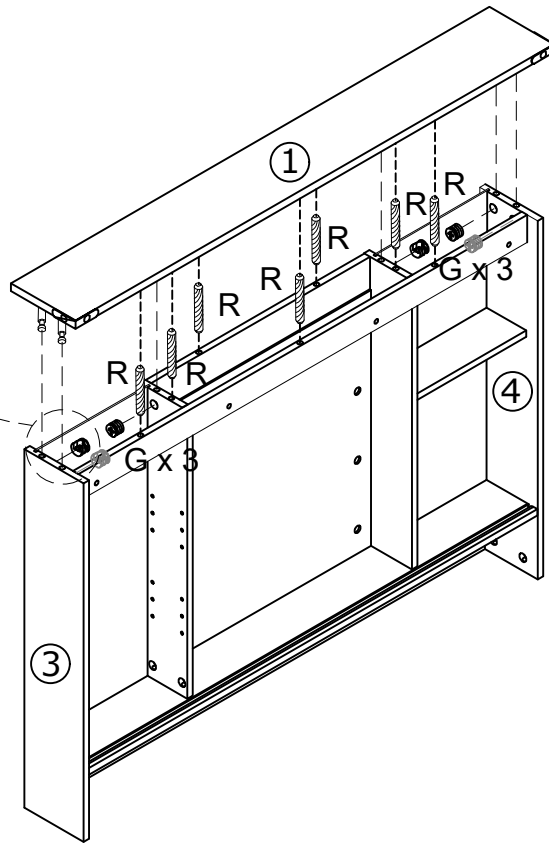
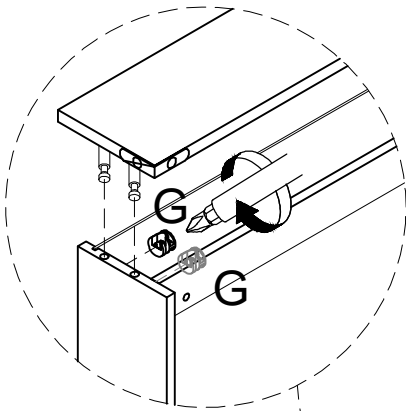



G 
Ø15×10mm x6

R 
Ø6×30mm x6



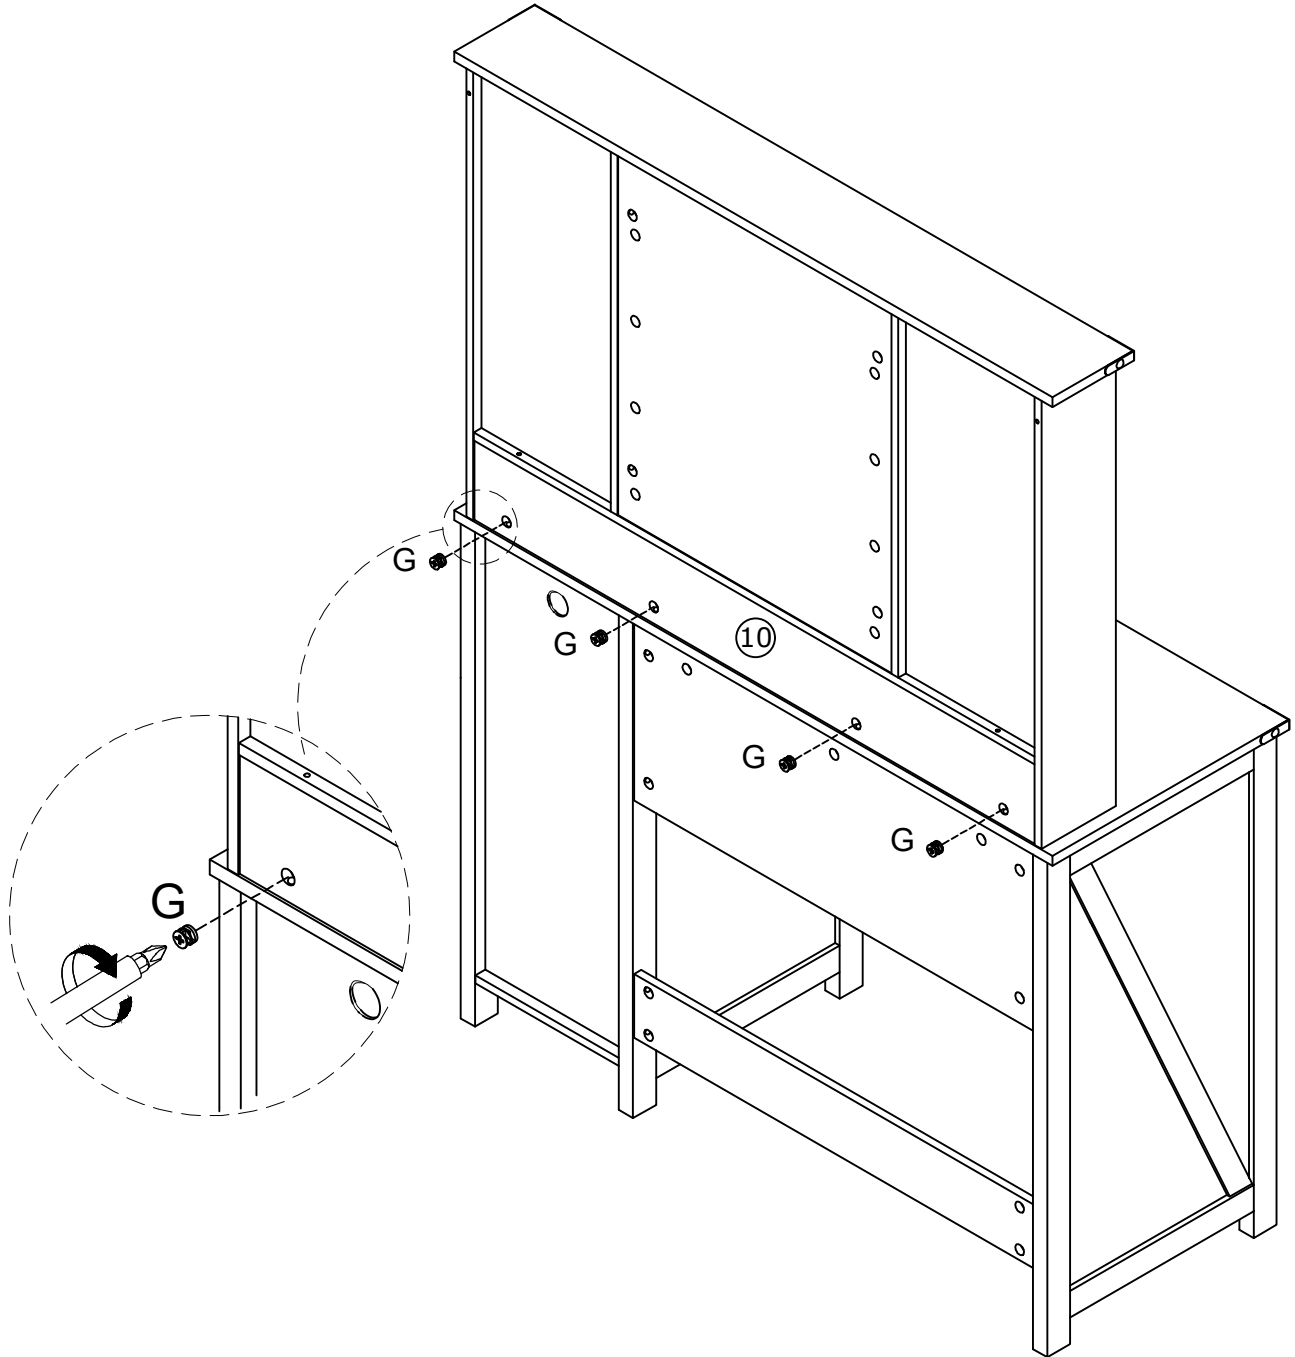

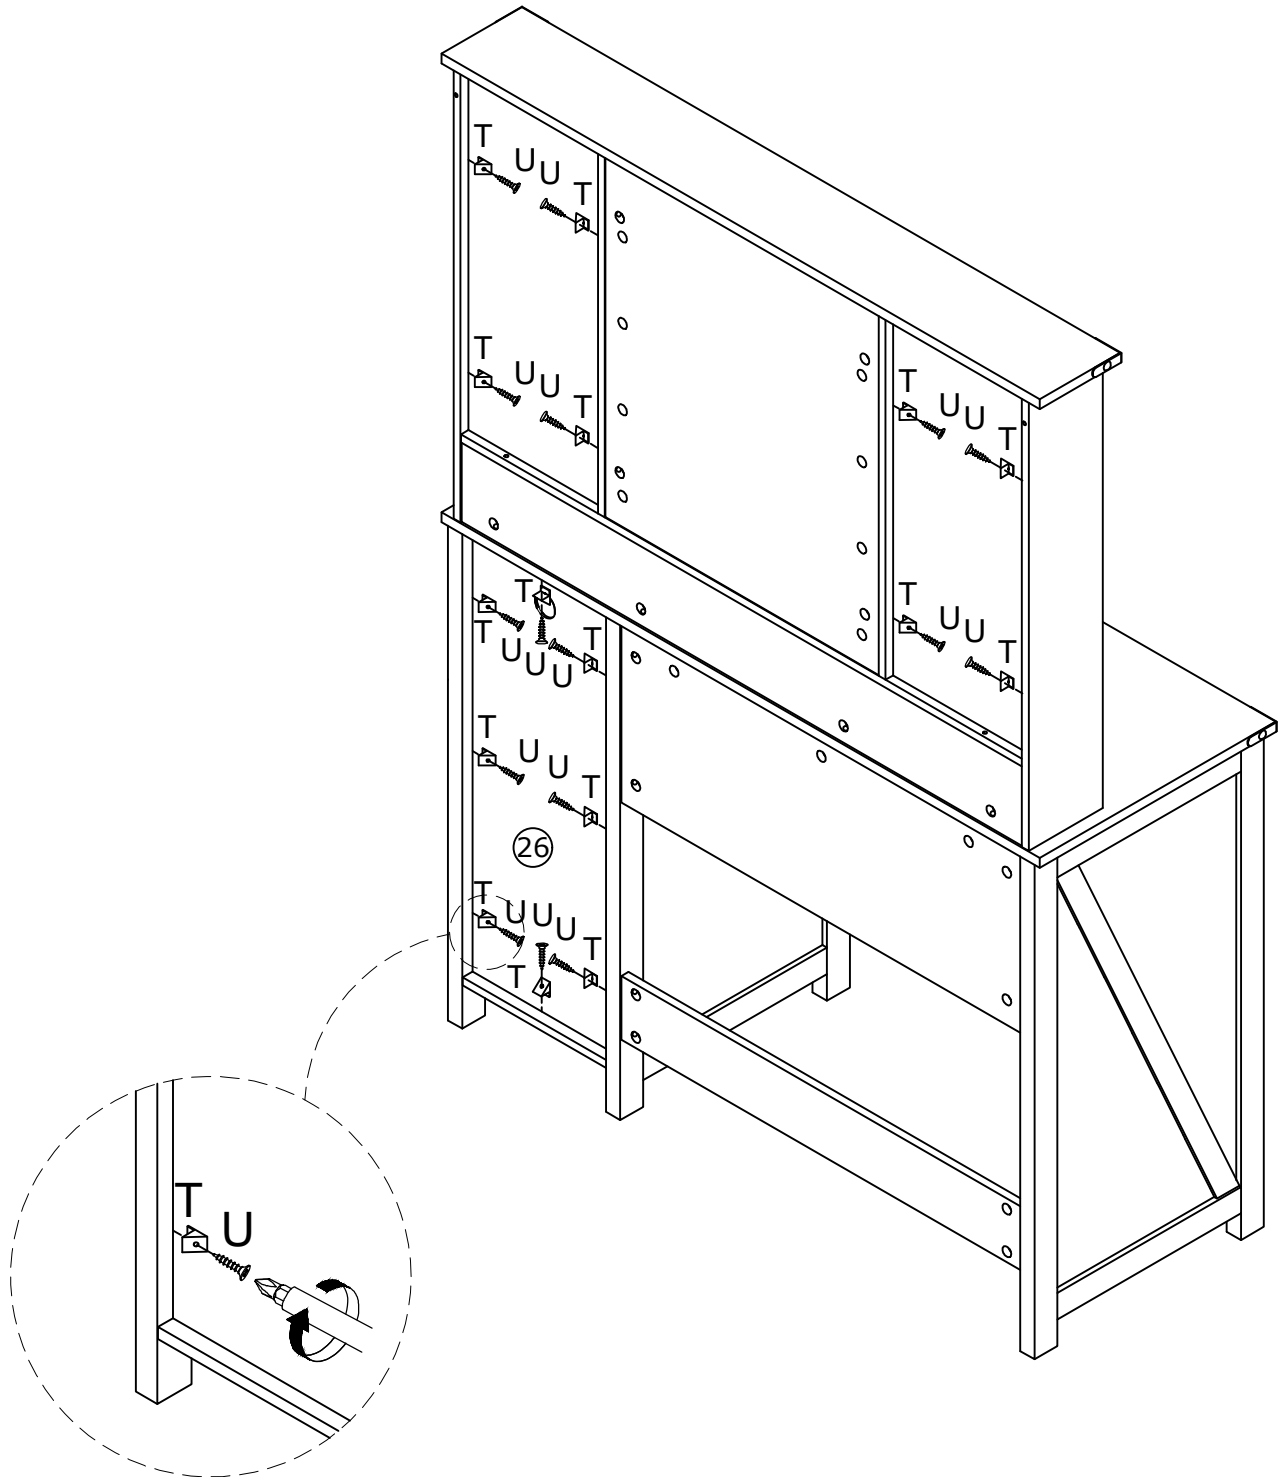
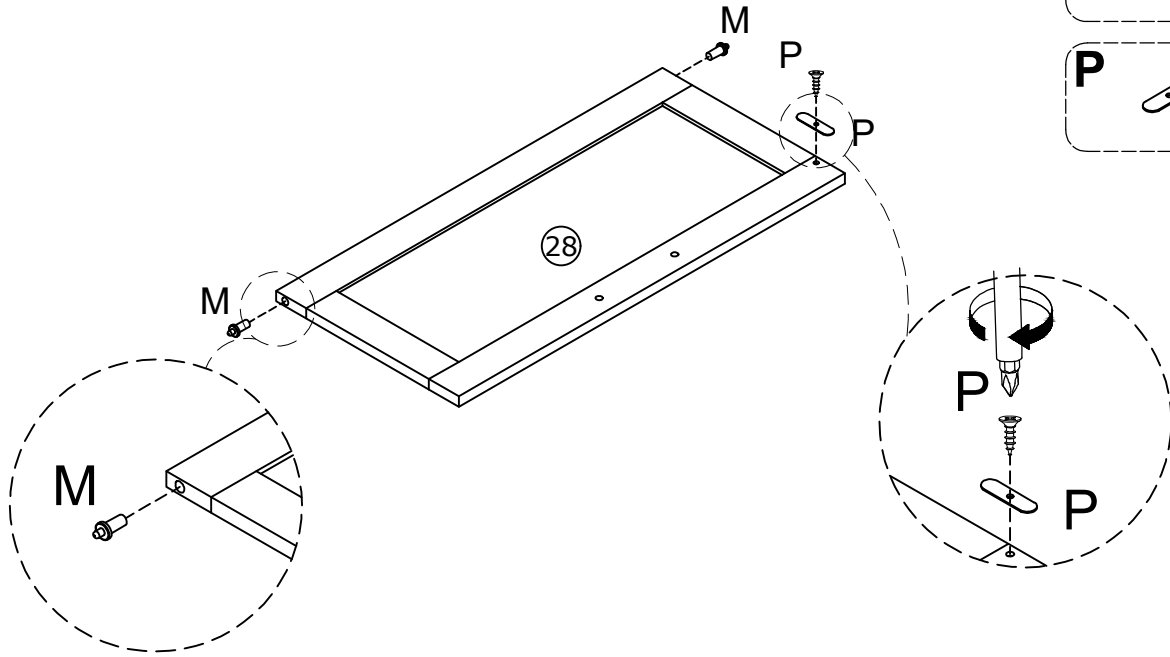


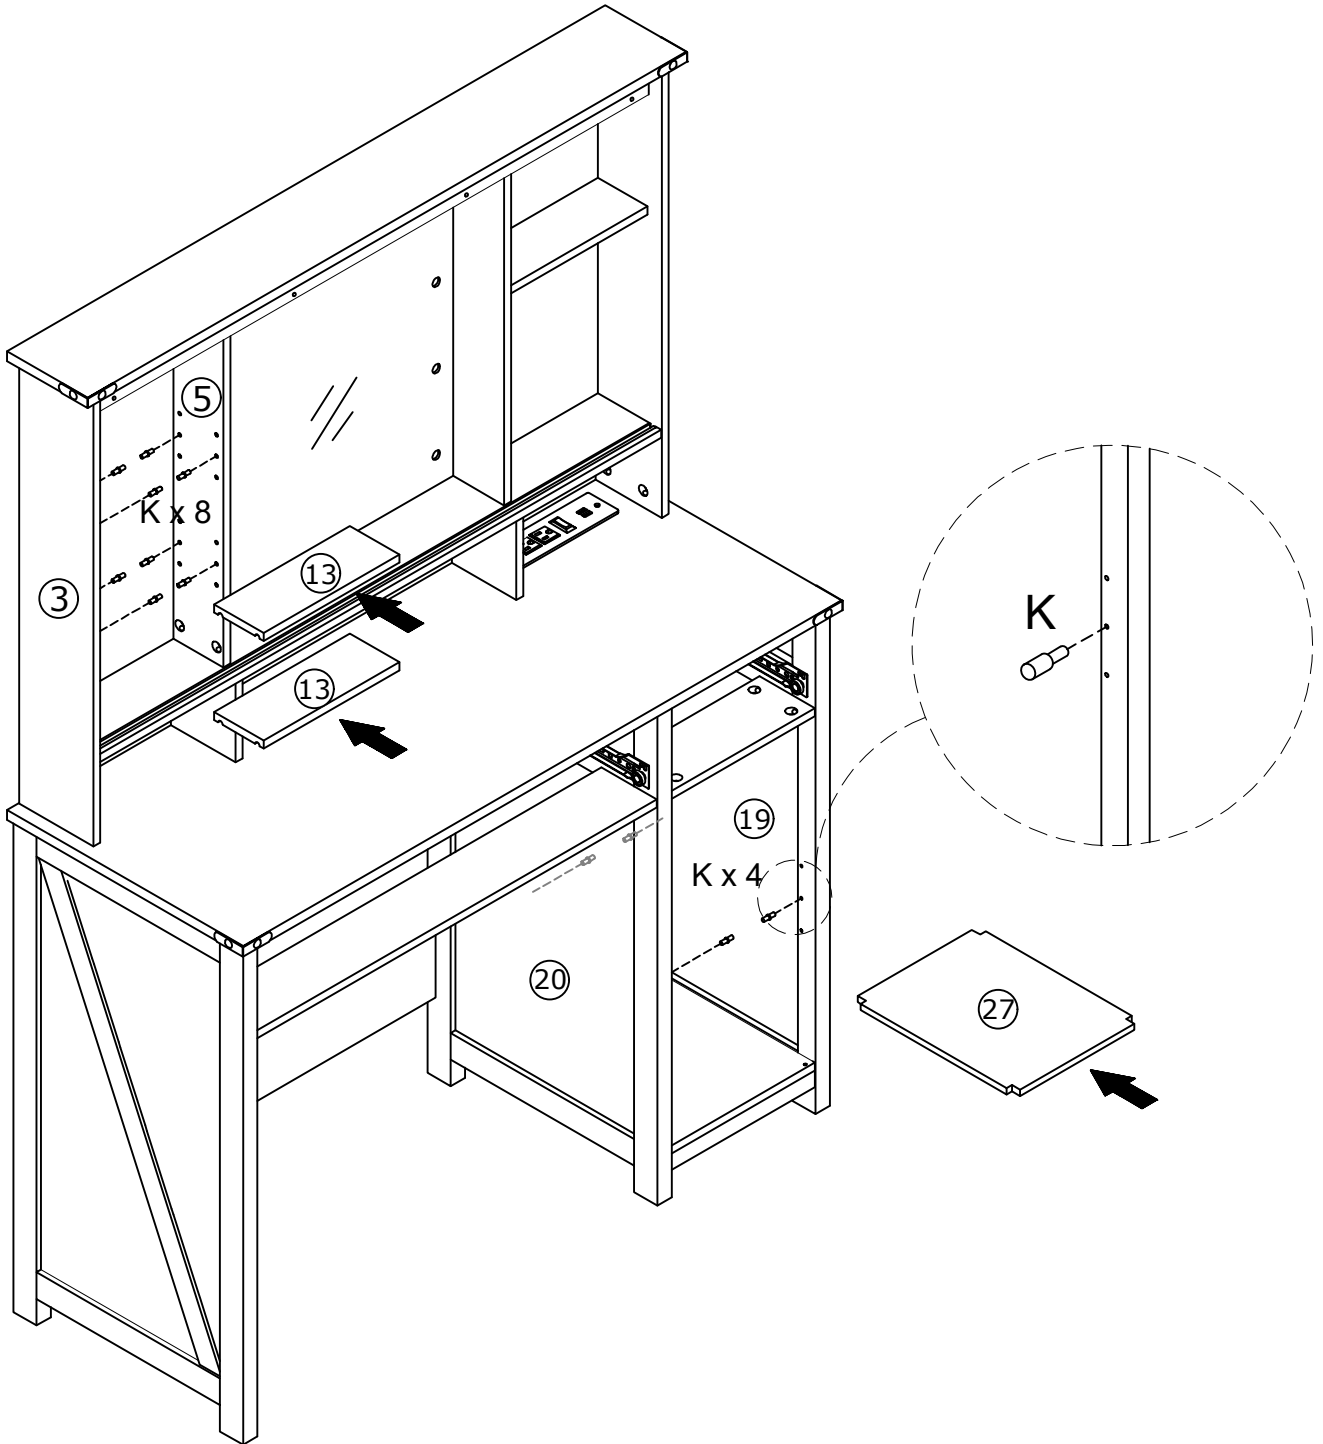






35


- P**  Ø3×12mm x1
- M**  x2
- P**  x1




36


- V**  Ø4×16mm x2
- W**  L=96mm x1

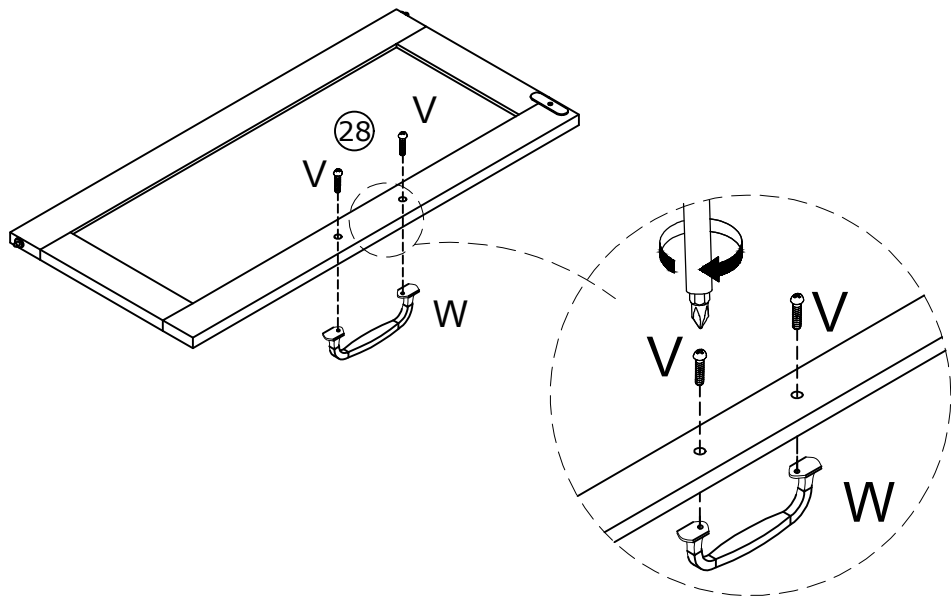

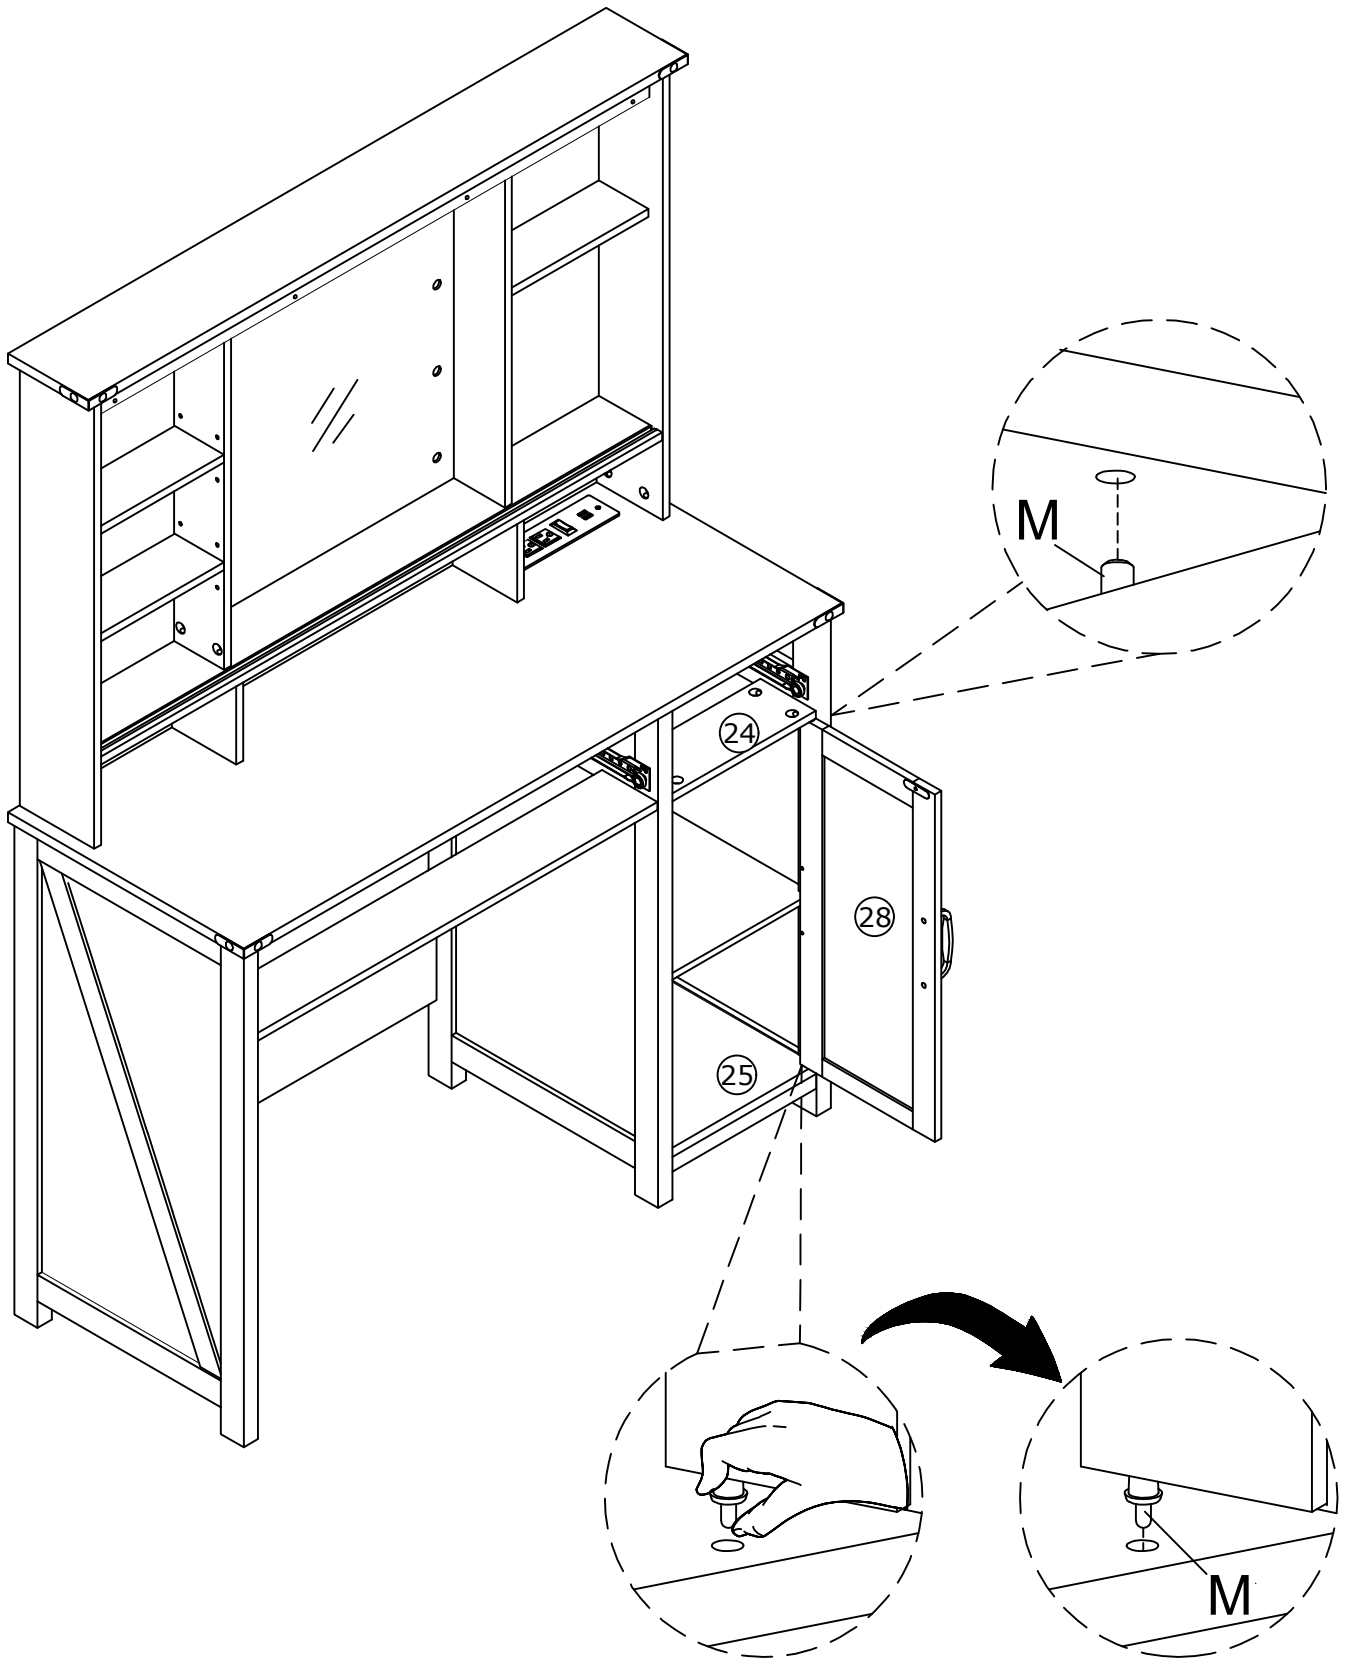



38

H 
Ø4×30mm x4

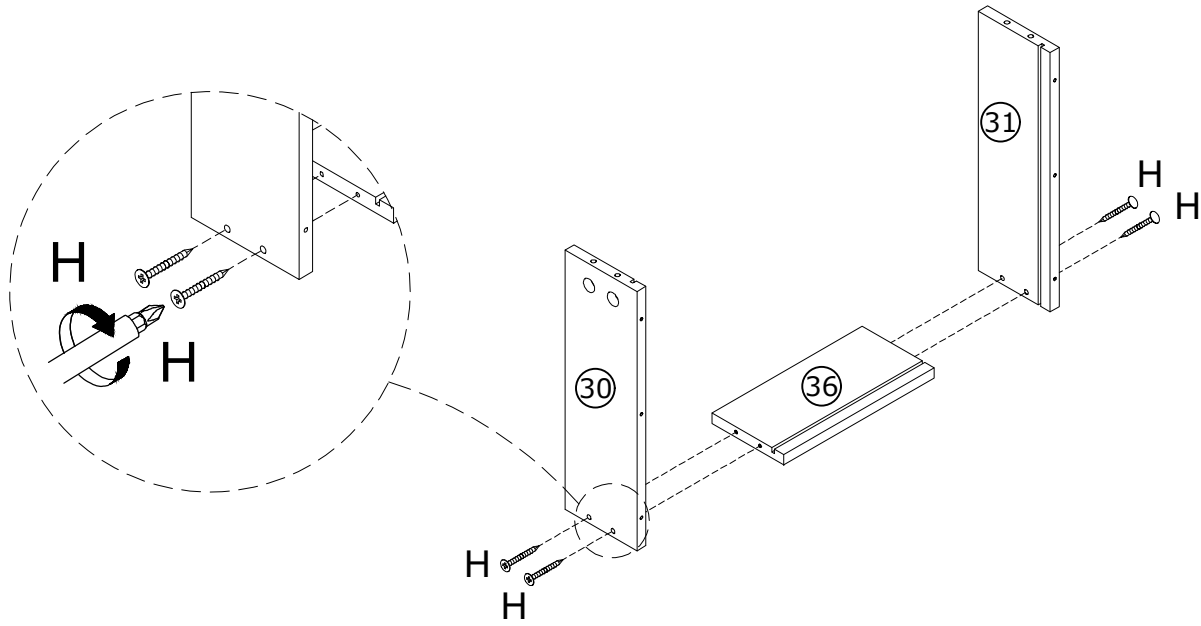


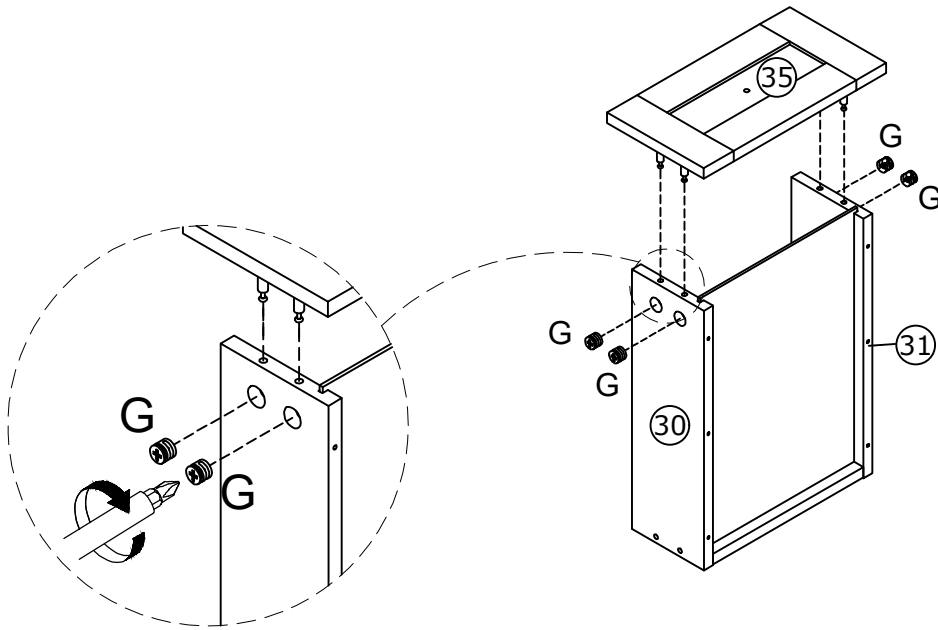
39

F 
Ø6×35mm x4

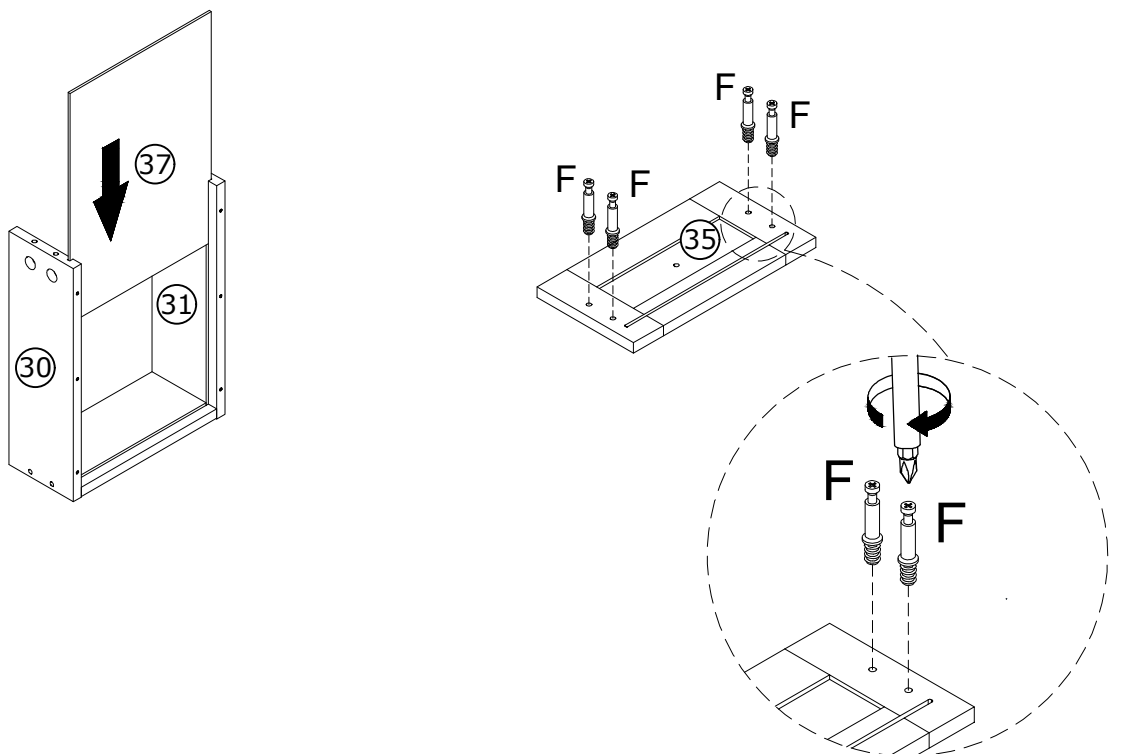



40


G 
Ø15×10mm x4





41

Q 
Ø4×8mm x1

X 
x1

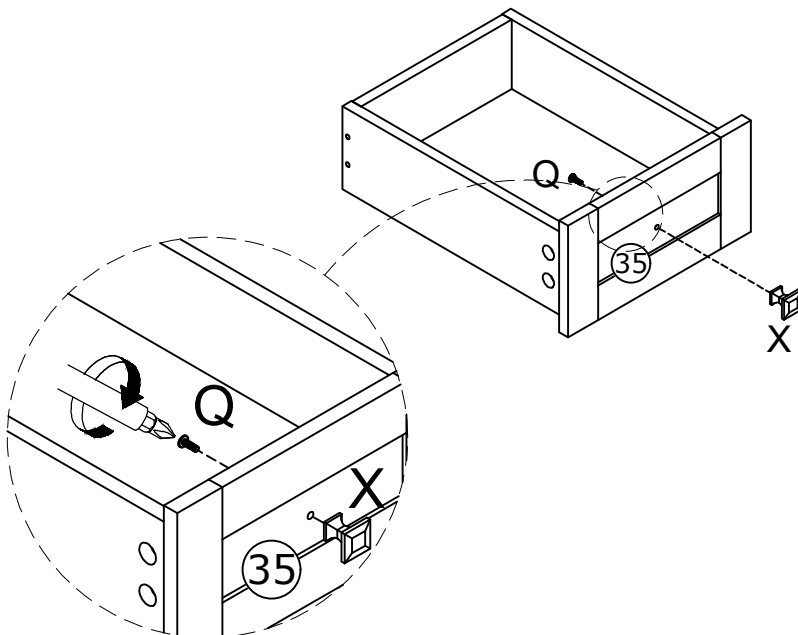


42

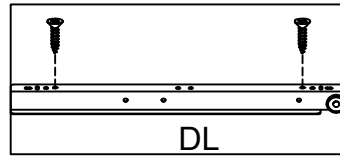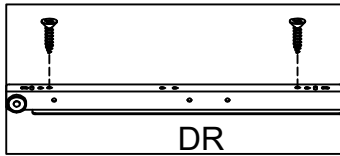

DR
L300mm(R) X1


DL
L300mm(L) X1

E
Ø3.5x12mmX4

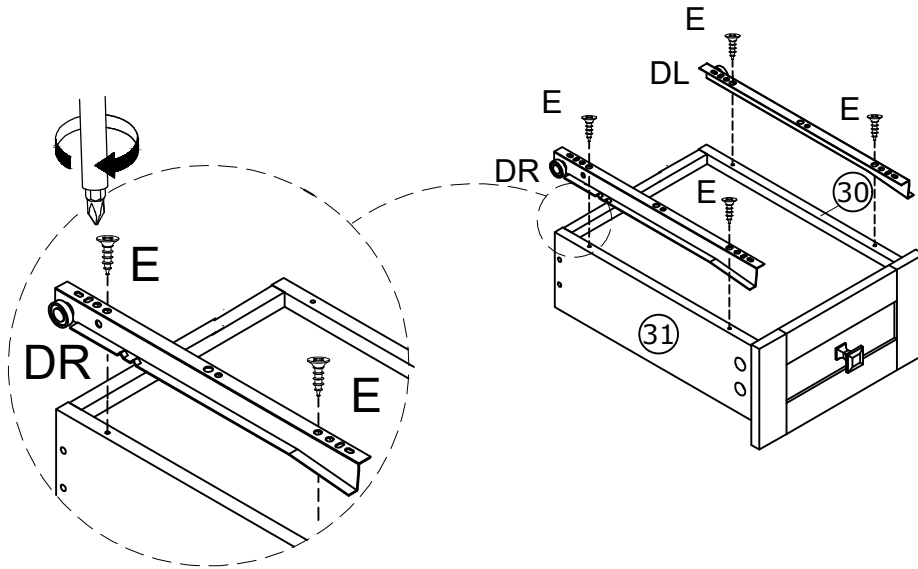




43

H
Ø4x30mm x5

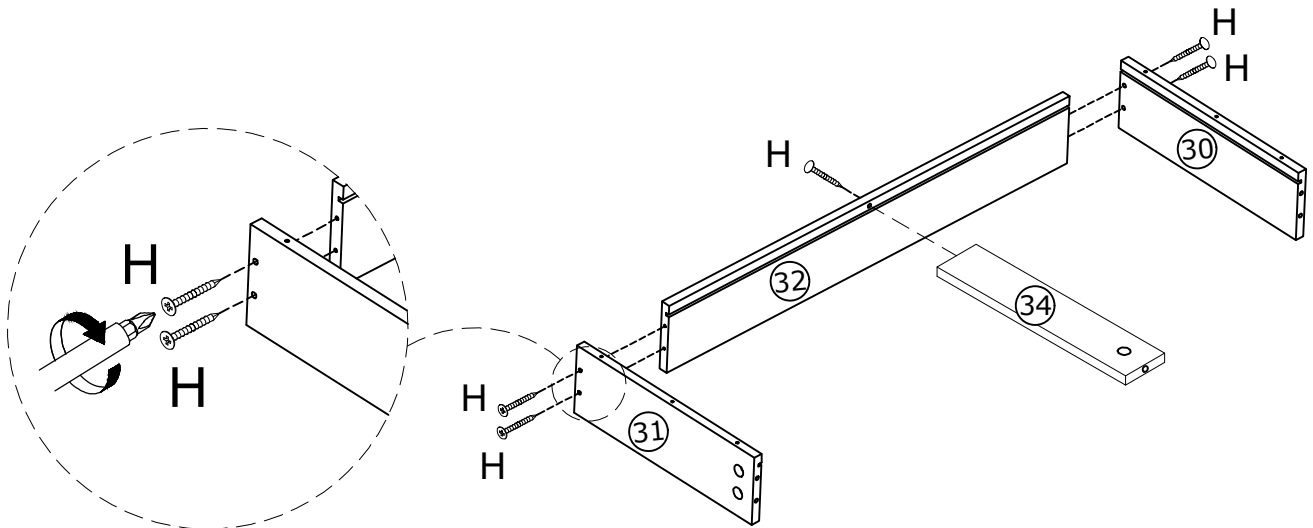


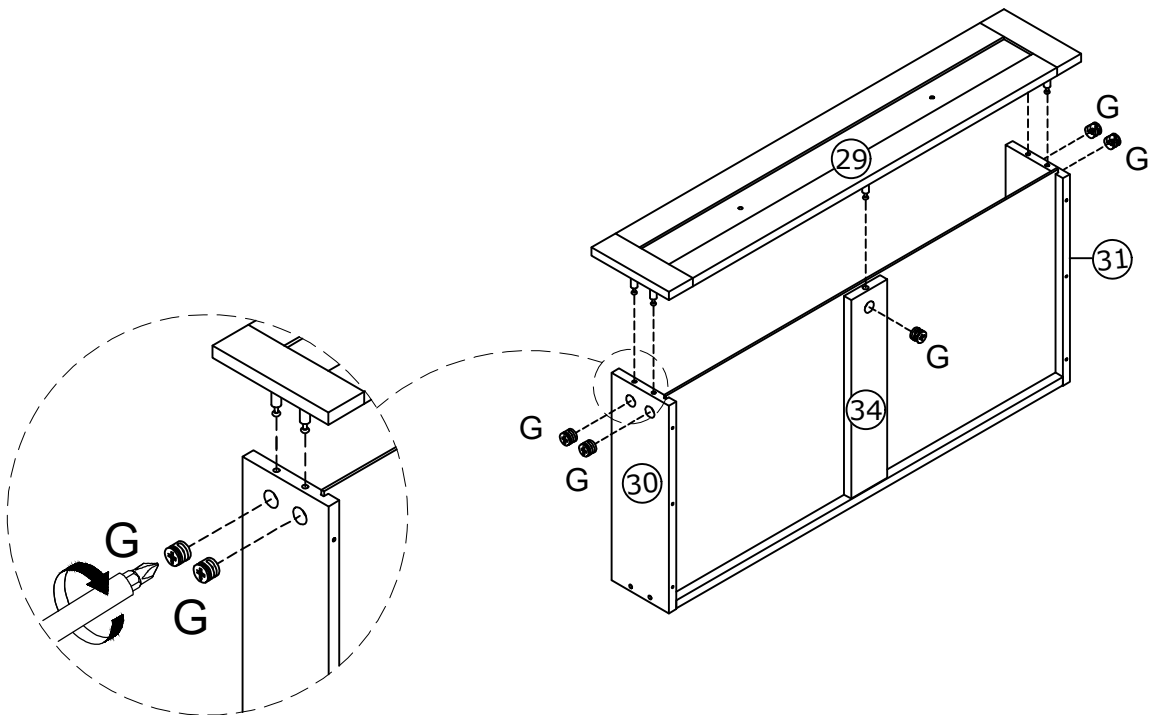
44

F 
Ø6×35mm x5


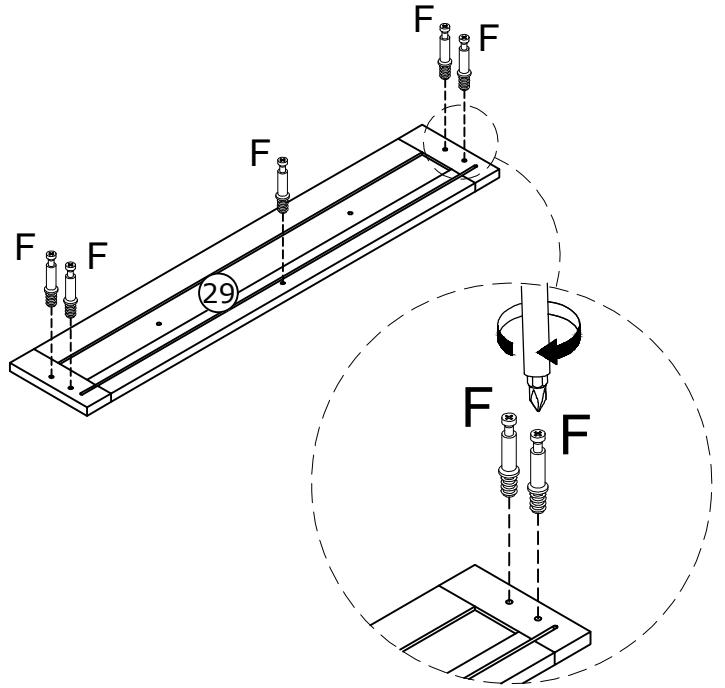
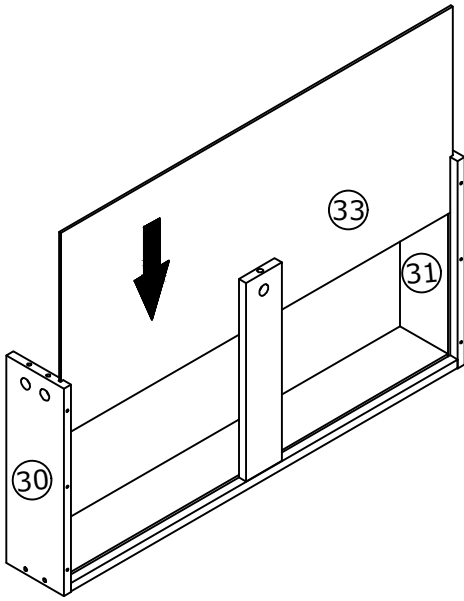


45







G 
Ø15×10mm x5








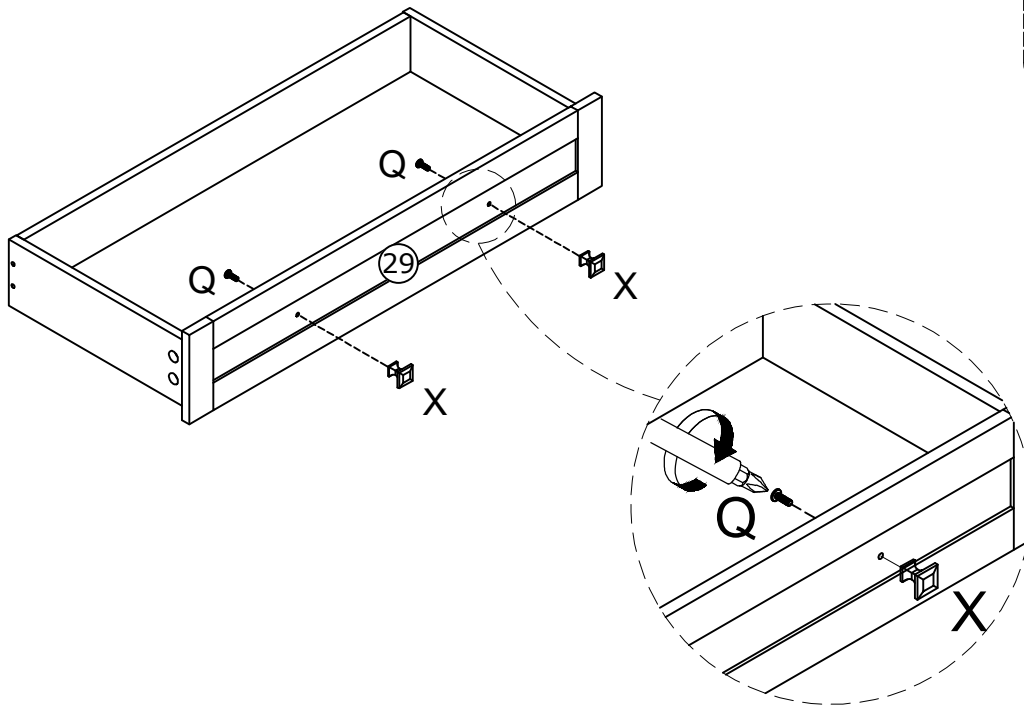46








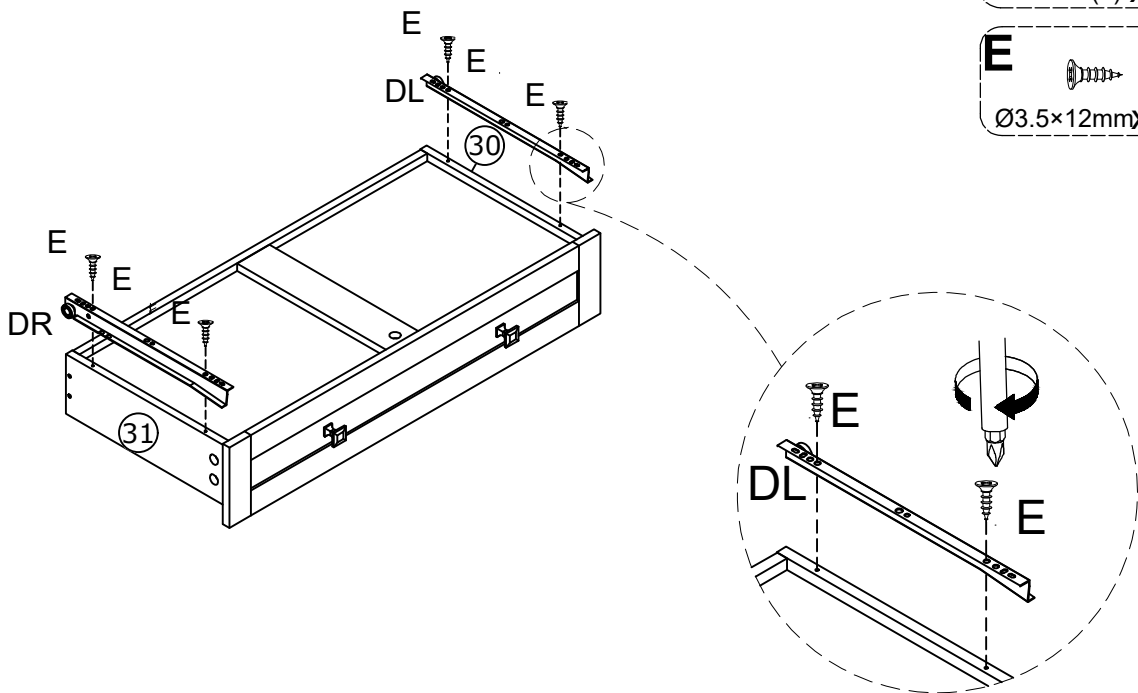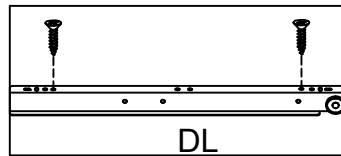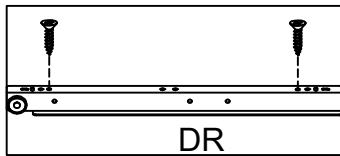

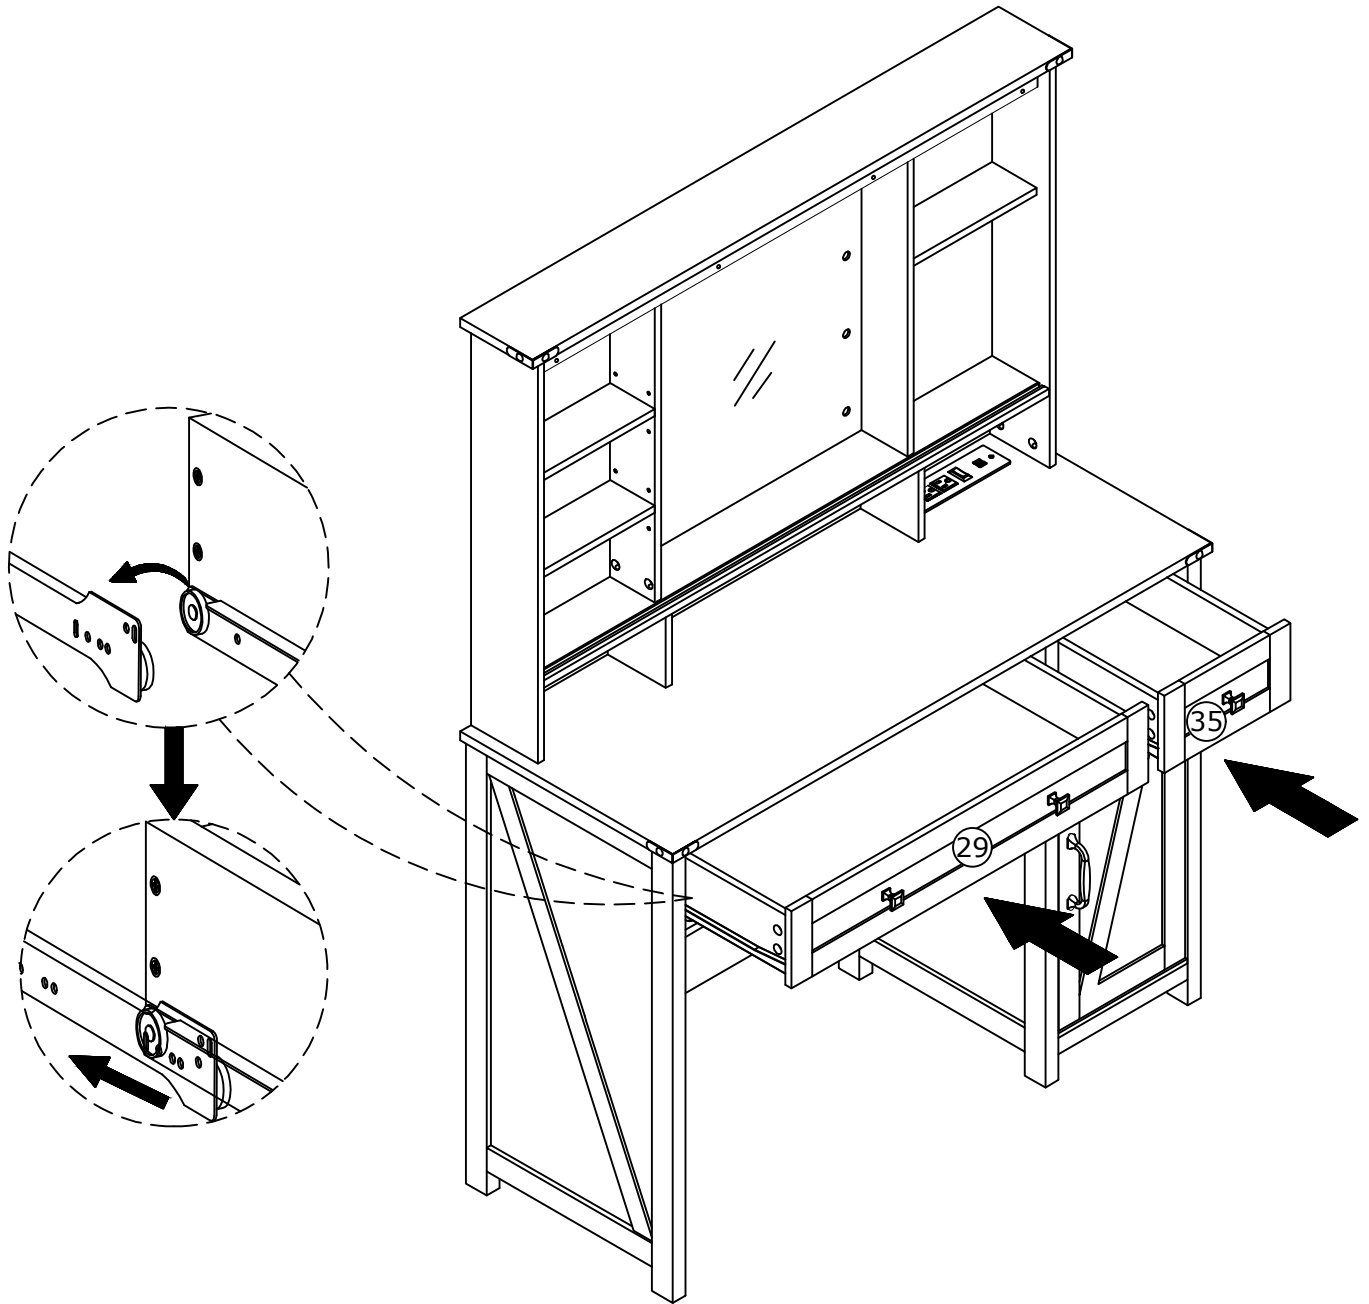47





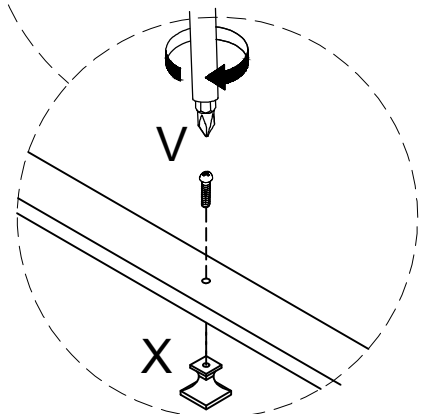
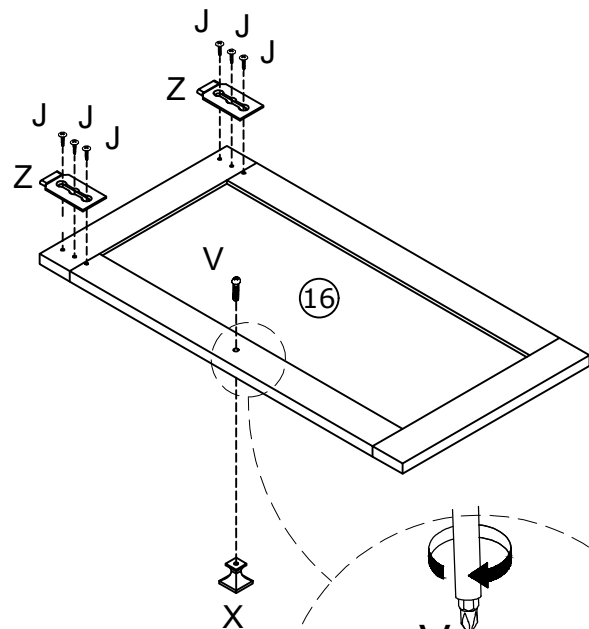
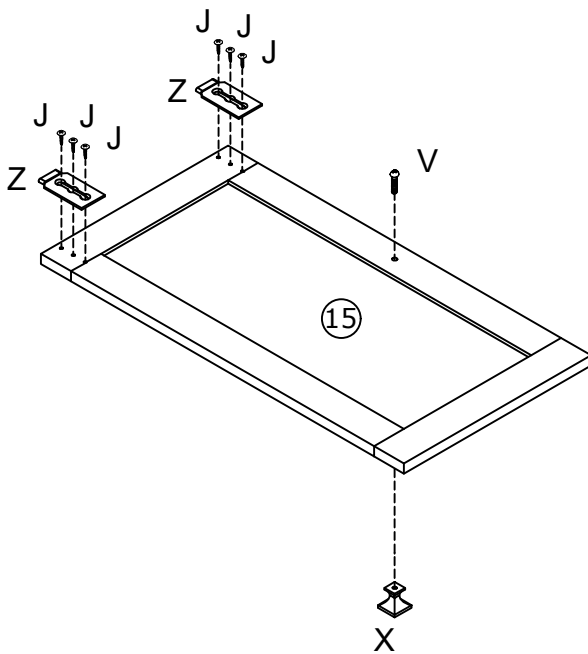
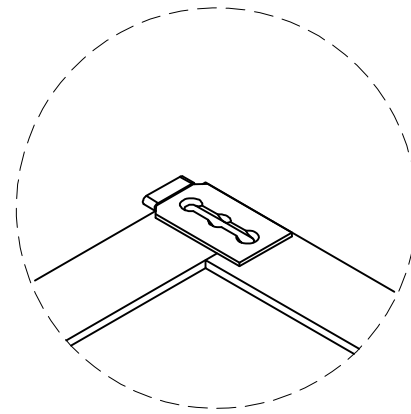
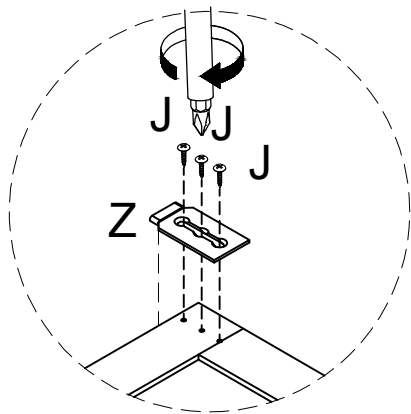









- J**  Ø4×12mm x12
- V**  Ø4×16mm x2
- X**  x2
- Z**  x4









- a**  x4
- b**  Ø6×25mm x4

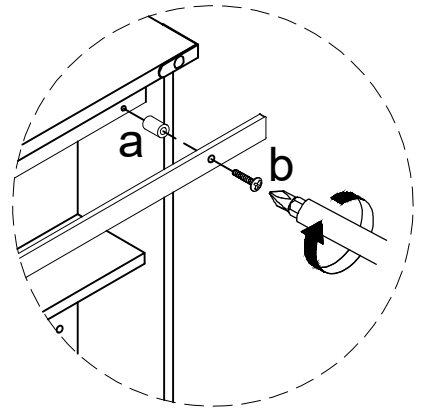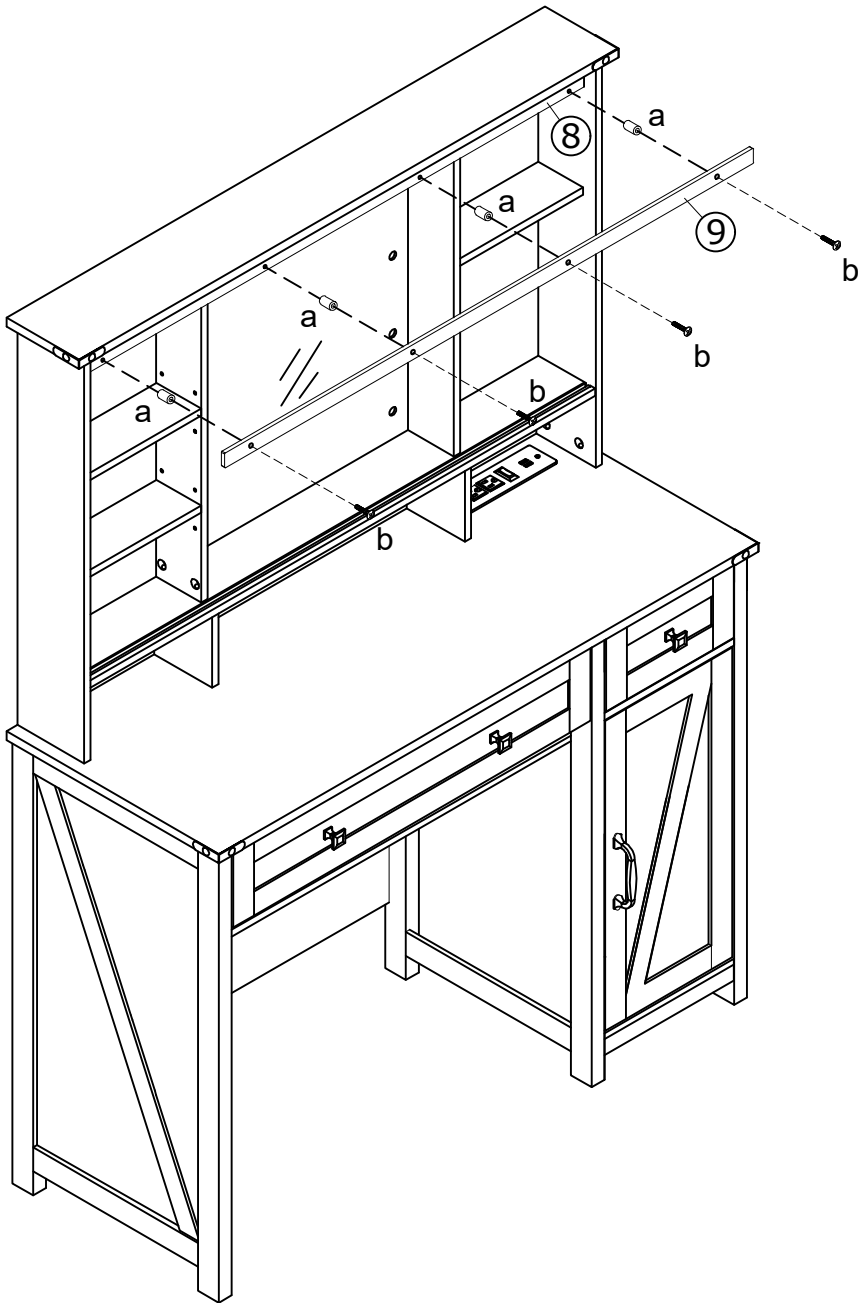

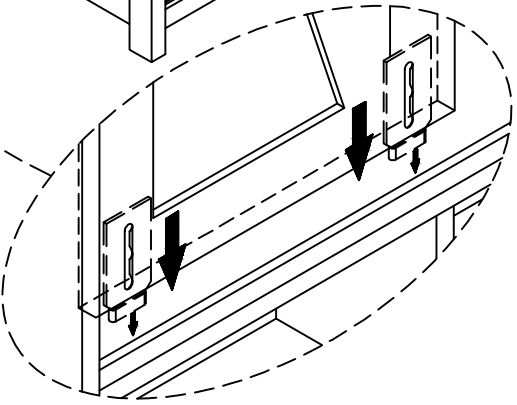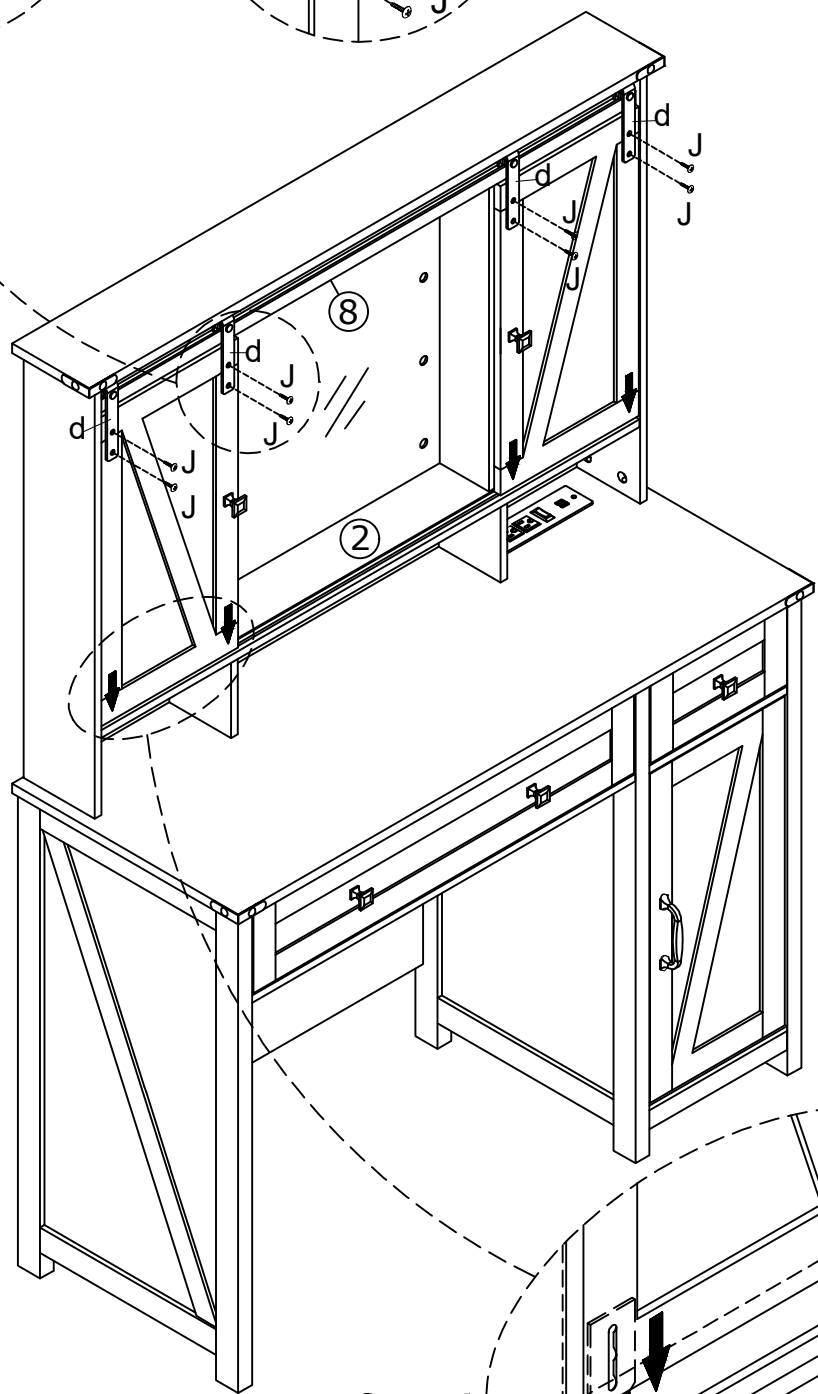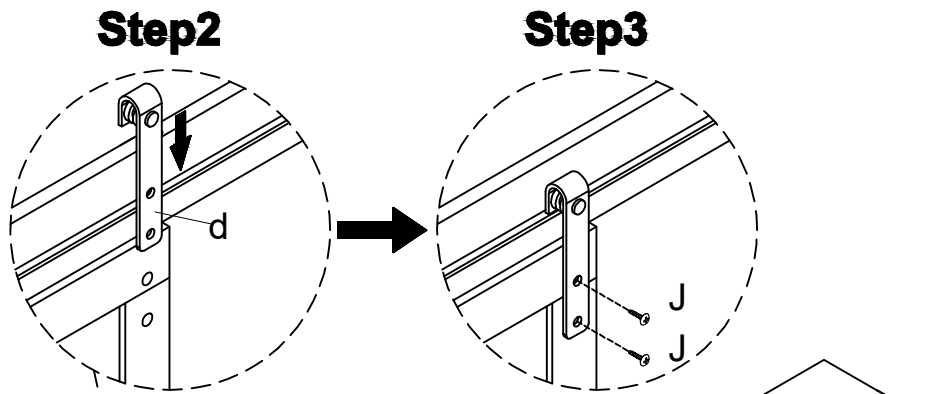

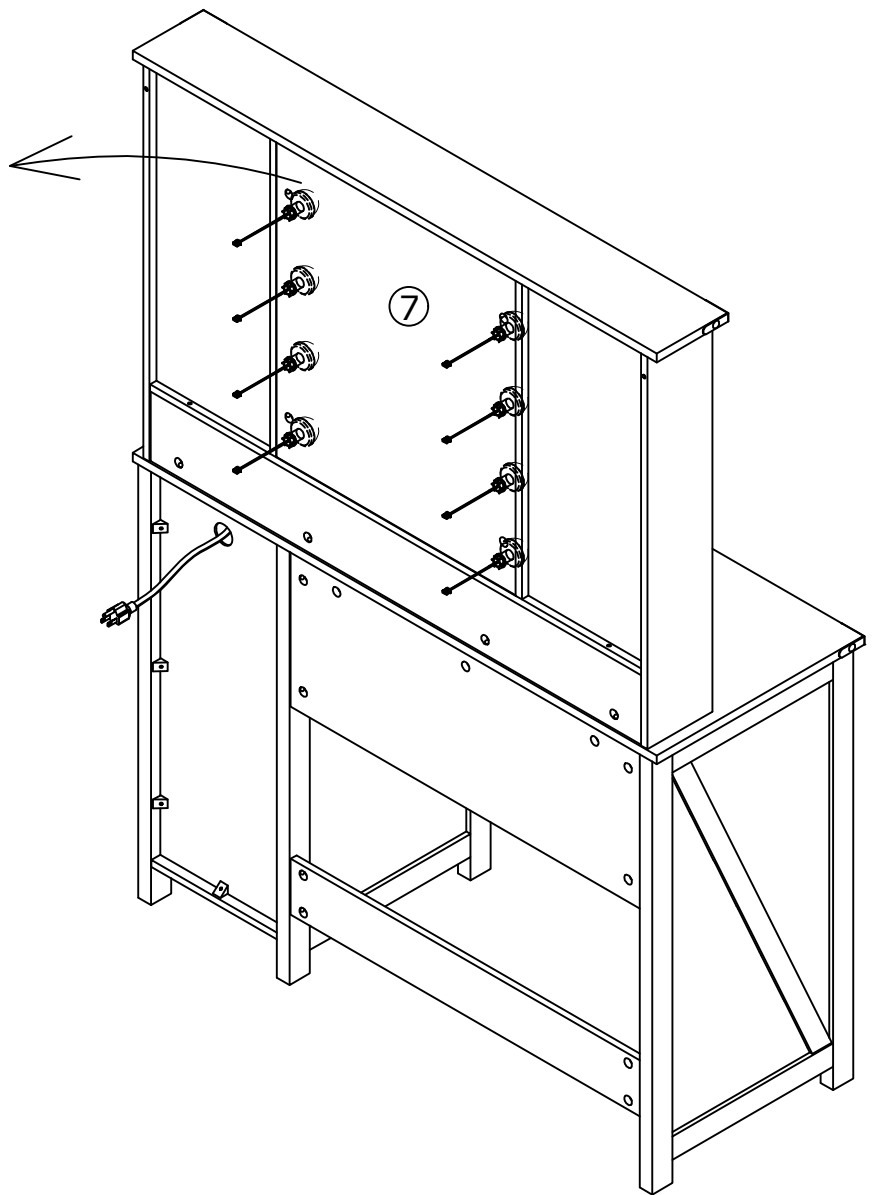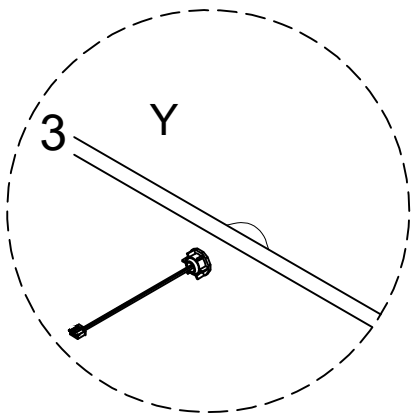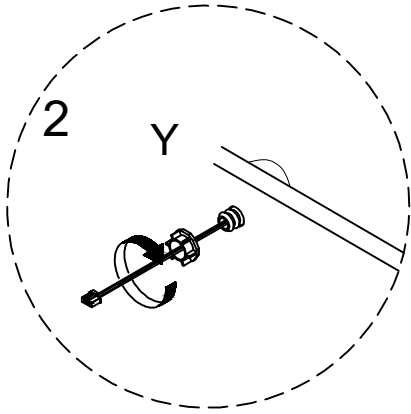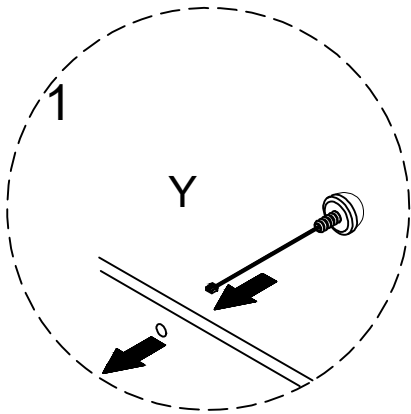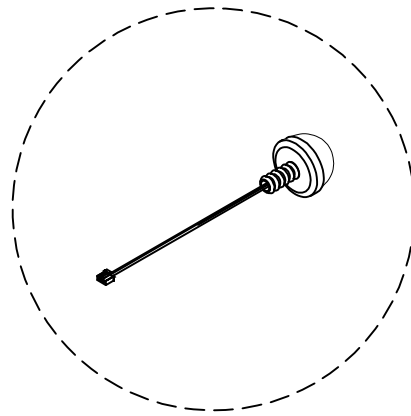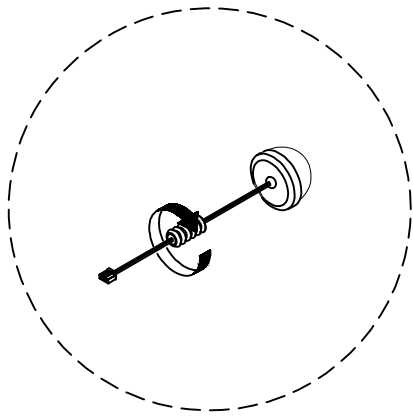


Please note that each terminal
of **Y** can be used

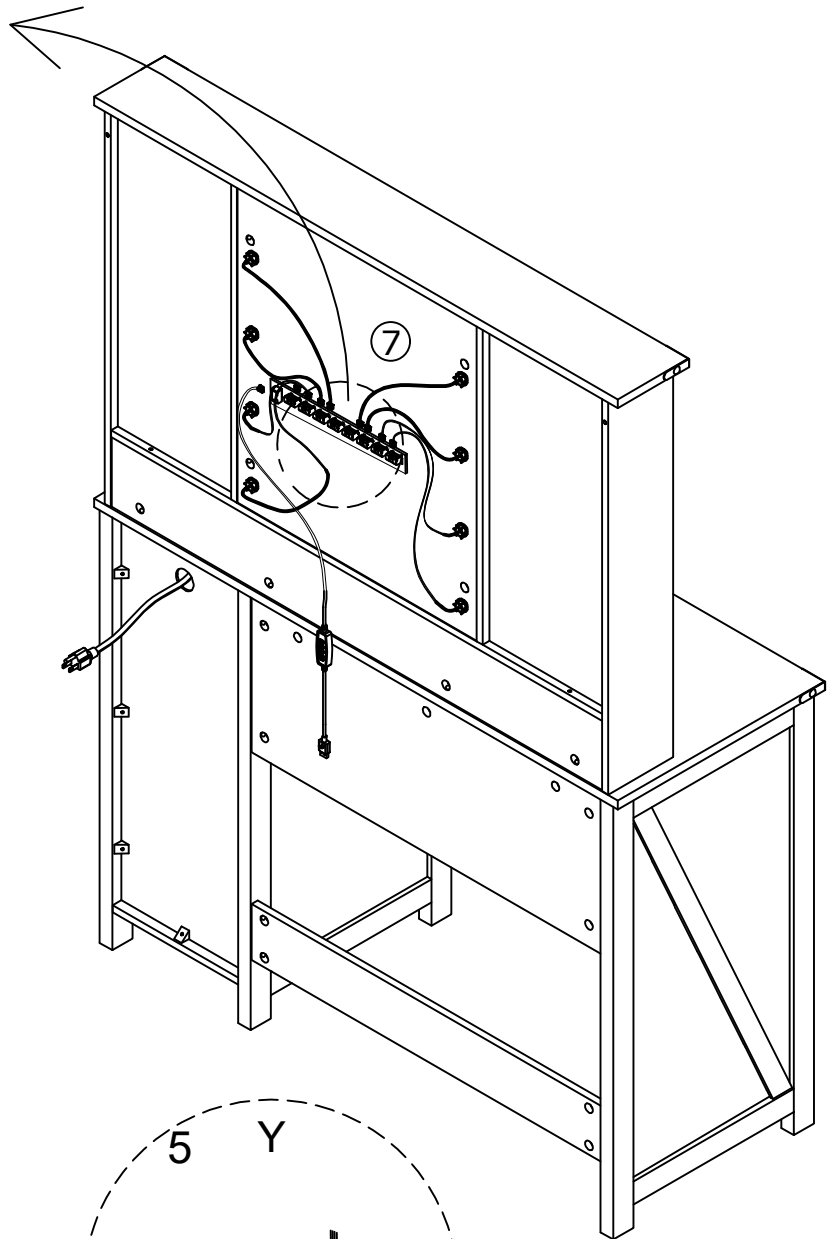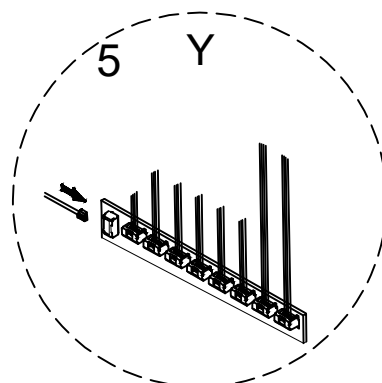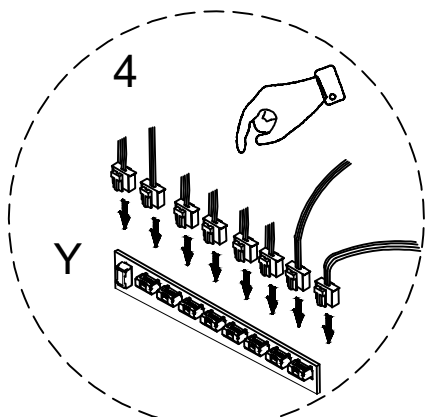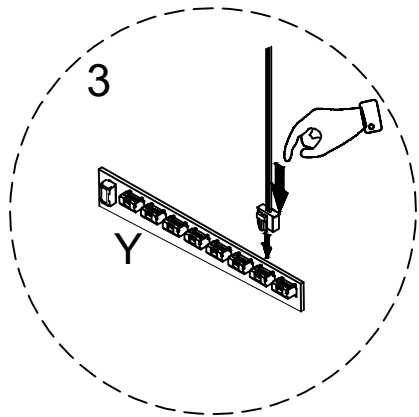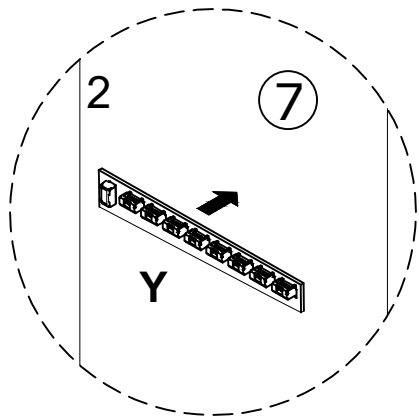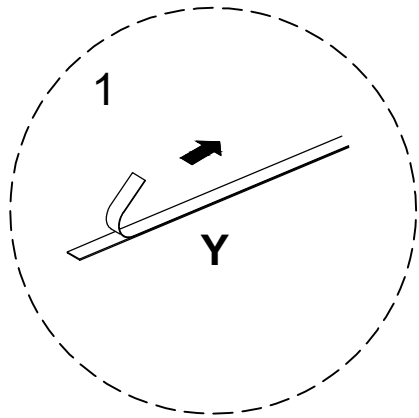

S 
Ø15mm x6

