

55" computer desk with monitor shelf



HELPFUL HINTS

! BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.

! OTHER


- People needed for assembly: 1 2
- Estimated assembly time: 0.5 1 hour.

! CAUTION


- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.

DETAILS

UNIT : INCH

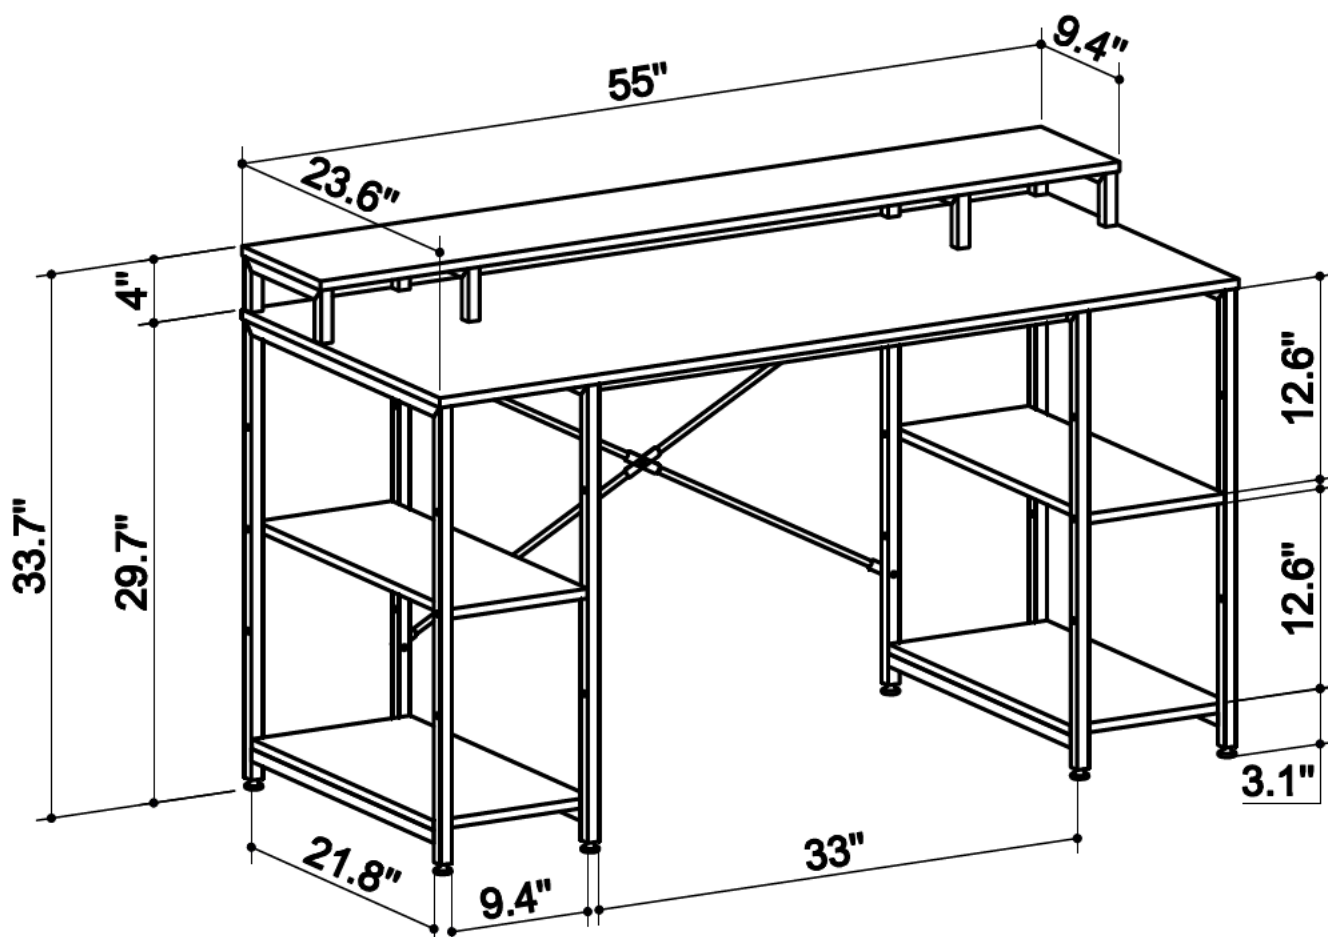


PARTS LIST

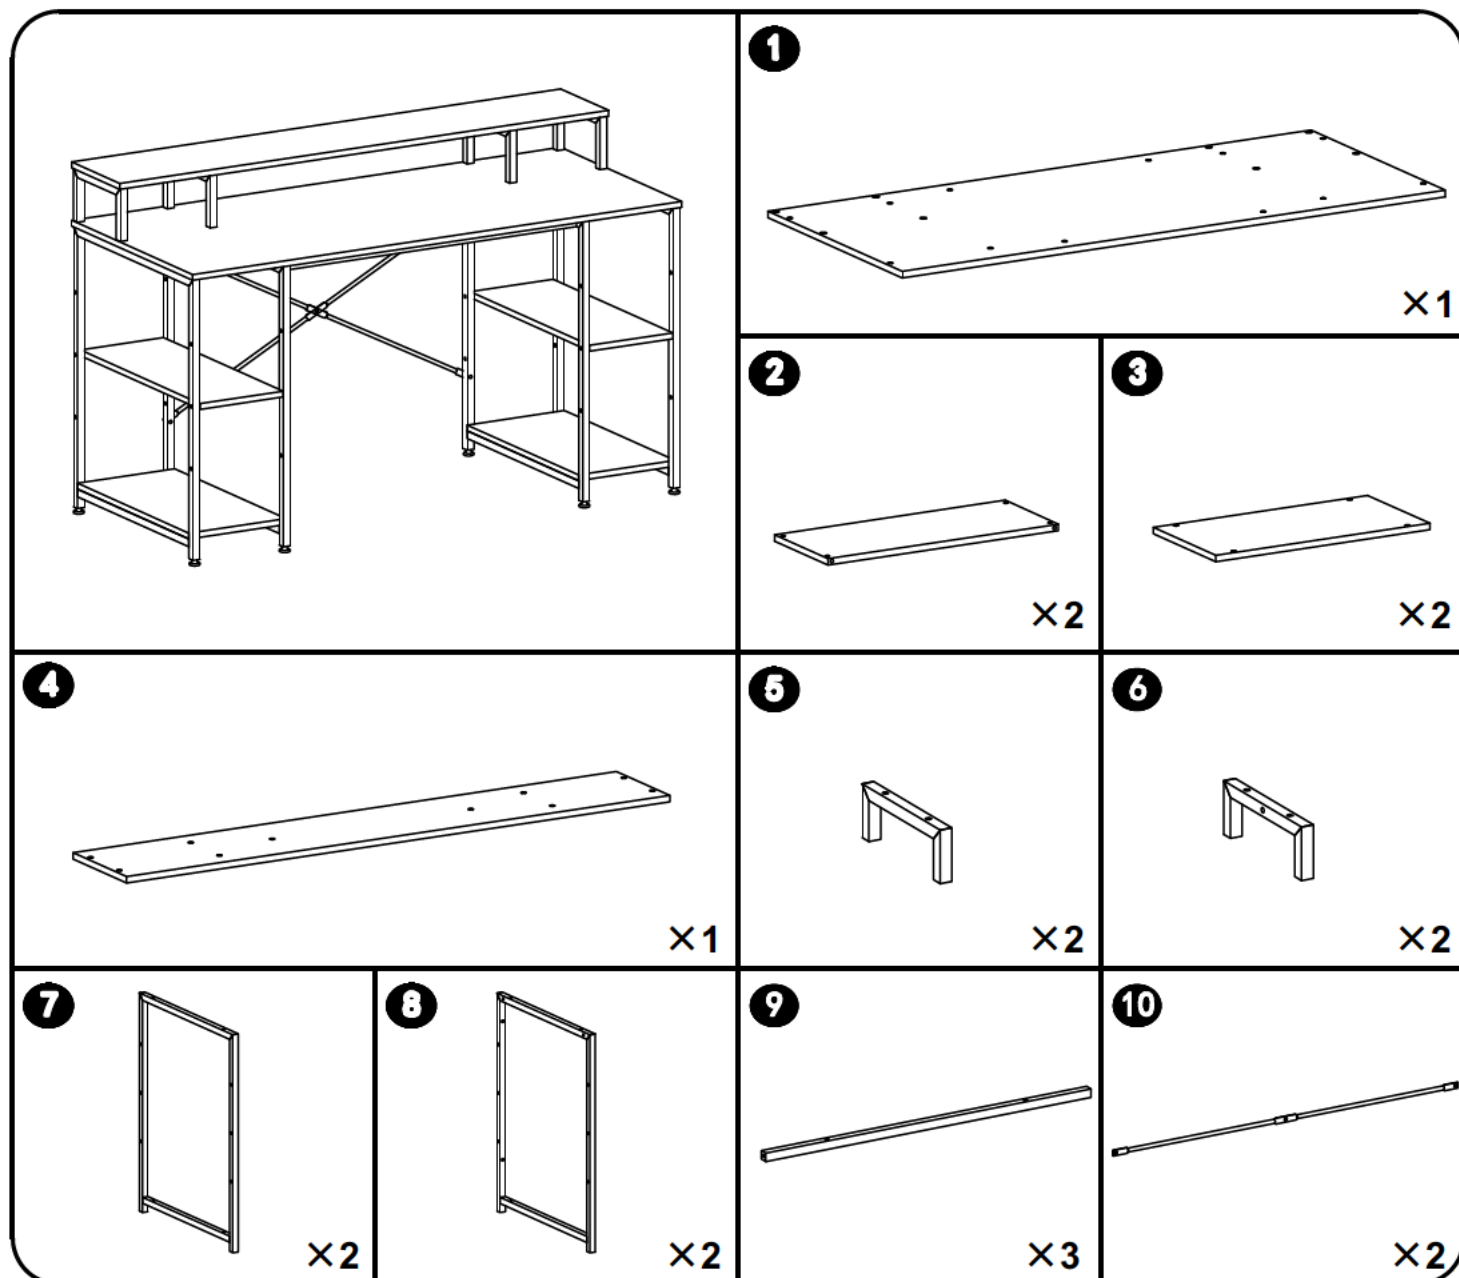

ACCESSORIES LIST

No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A		M6x10	1	E		M6	5
B		M6x30	42	F		M8-φ28	8
C		M6x35	6				
D		ST5x50	8				


STEP 1

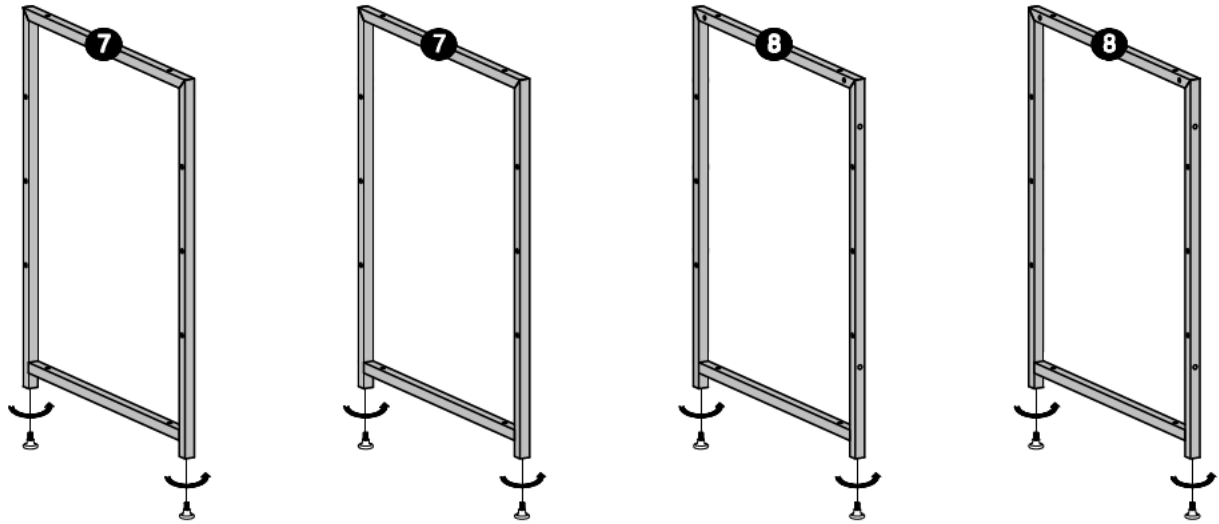

F  M8- ϕ 28 8


STEP 2


※ You can install the shelf board in different height to meet your need. Do not tighten the screws before step 9 finished.

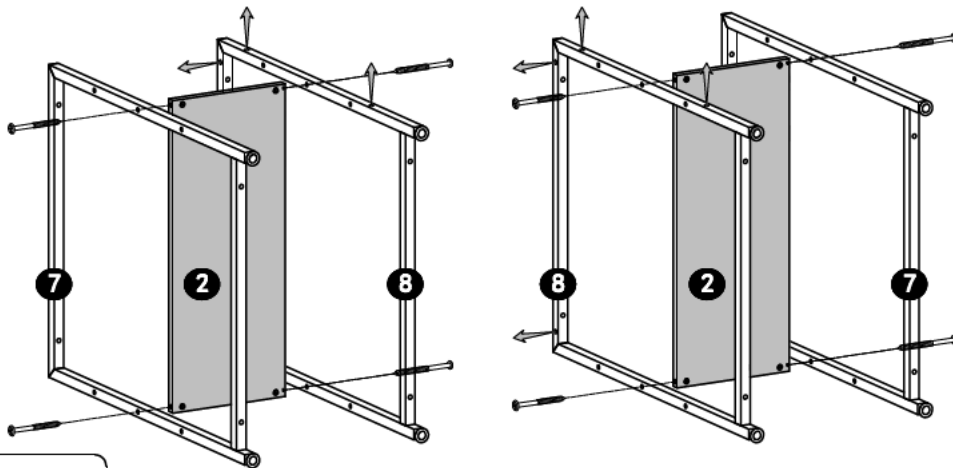

D  ST5x50 8


STEP 3

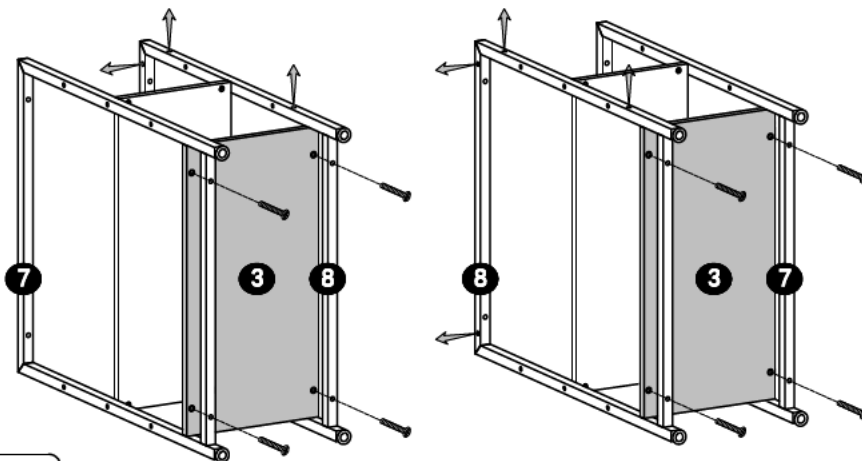


B  M6x30 8

STEP 4


※ Do not tighten the screws before step 9 finished.

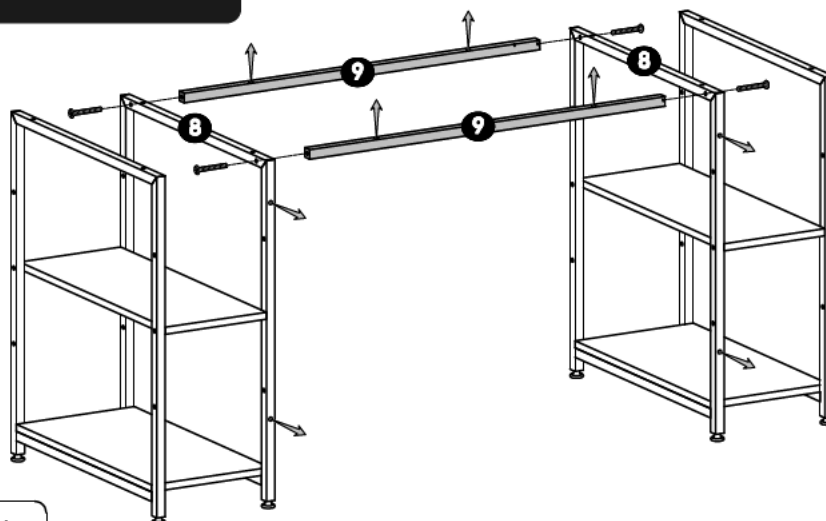




C  M6x35 4


STEP 5

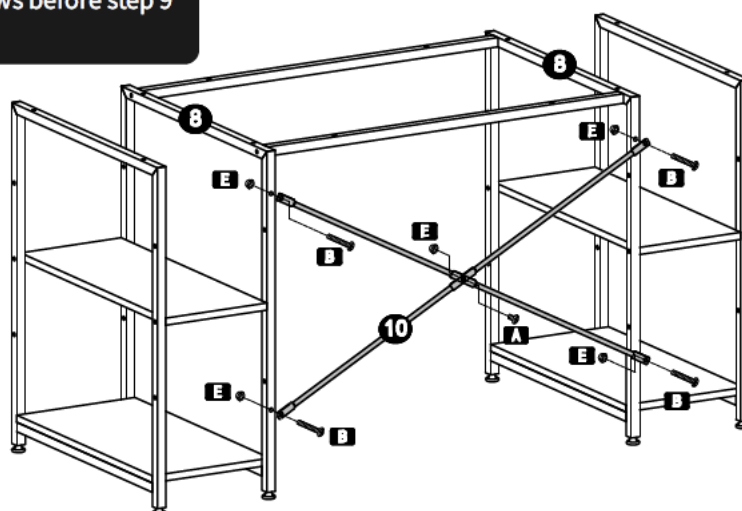
※ Do not tighten the screws before step 9 finished.



A  M6x10 1 **B**  M6x30 4 **E**  M6 5


STEP 6

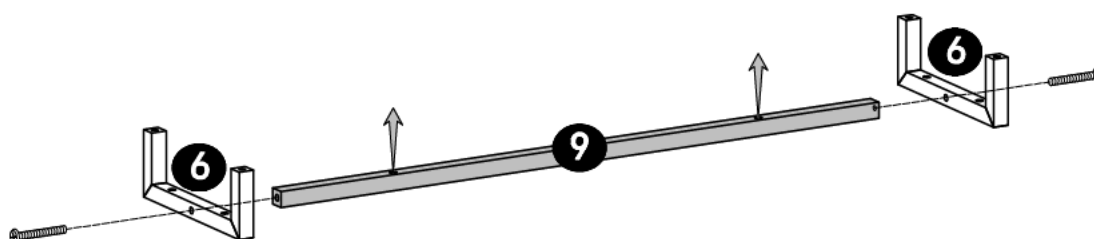

C  M6x35 2

STEP 7


※ Tighten the screws in this step.

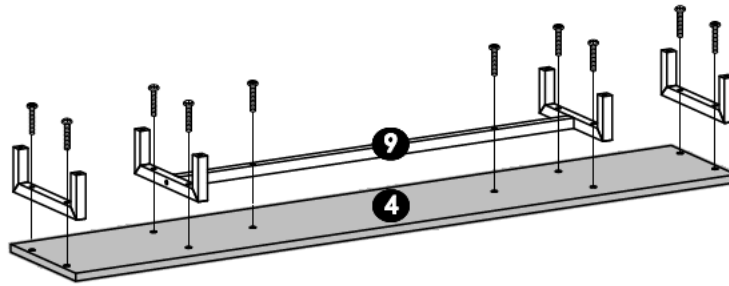

B  M6x30 10

STEP 8


※ Tighten the screws in this step.

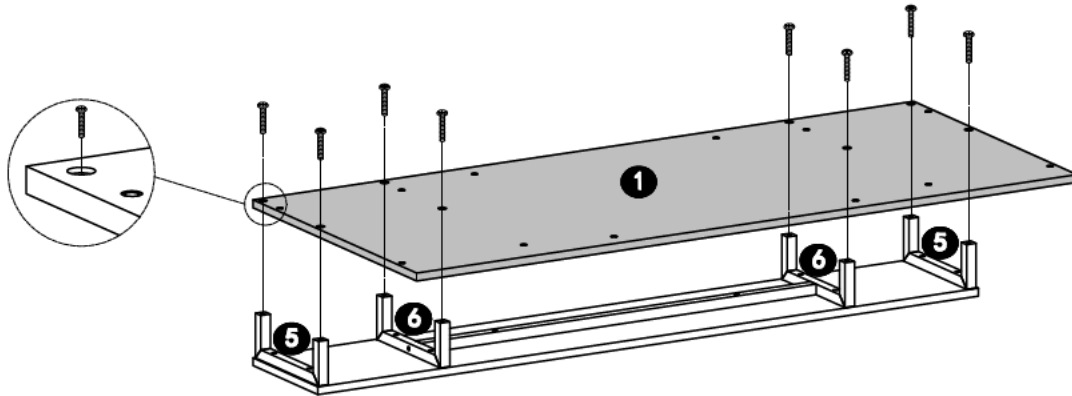

B  M6x30 8

STEP 9

※ Tighten all screws in this step when there is not gap.

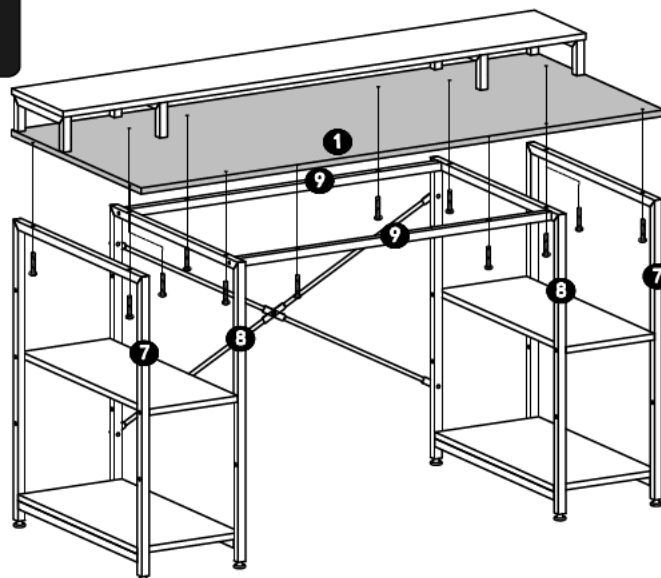

B  M6x30 12