



BED FRAME

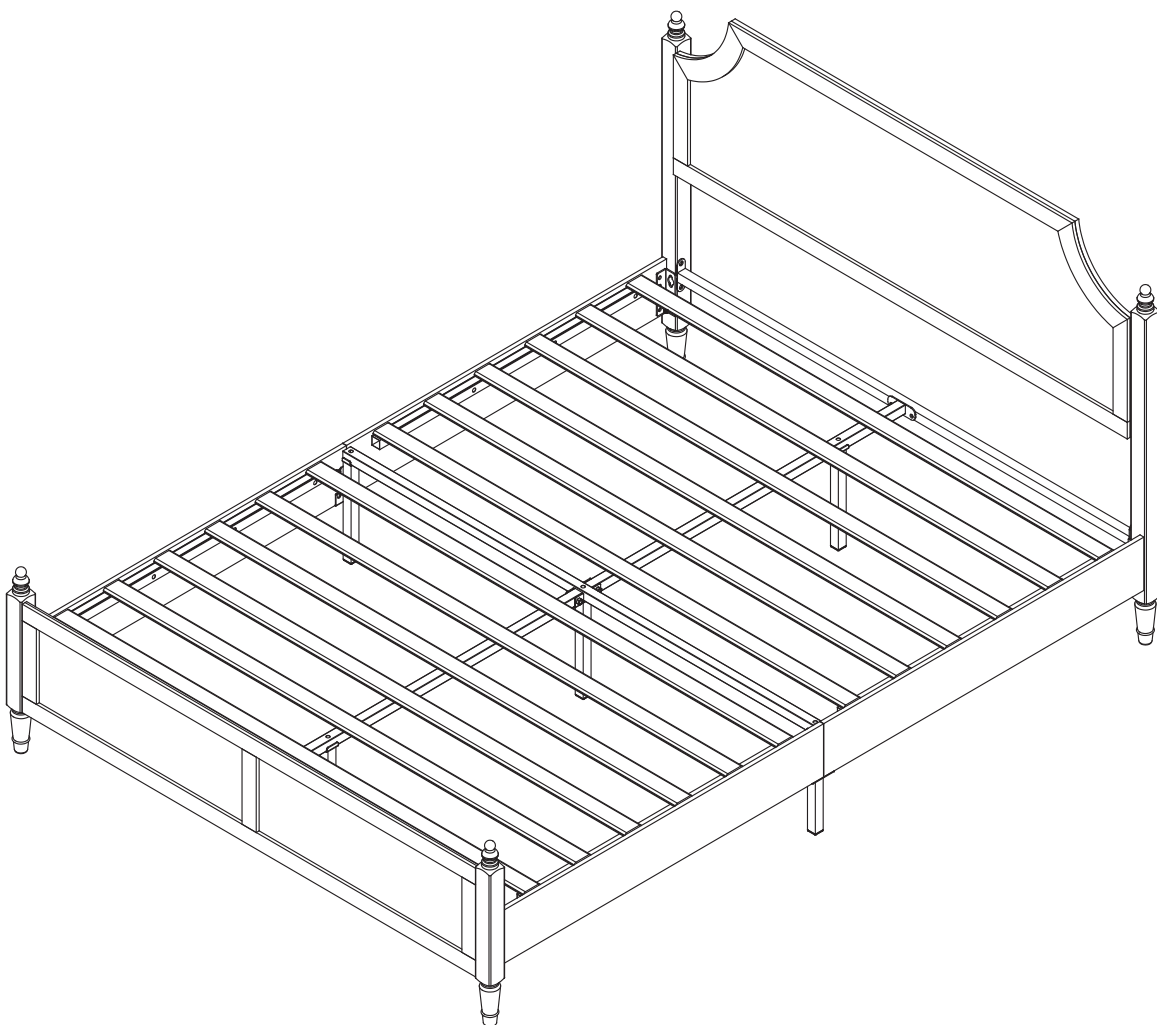

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




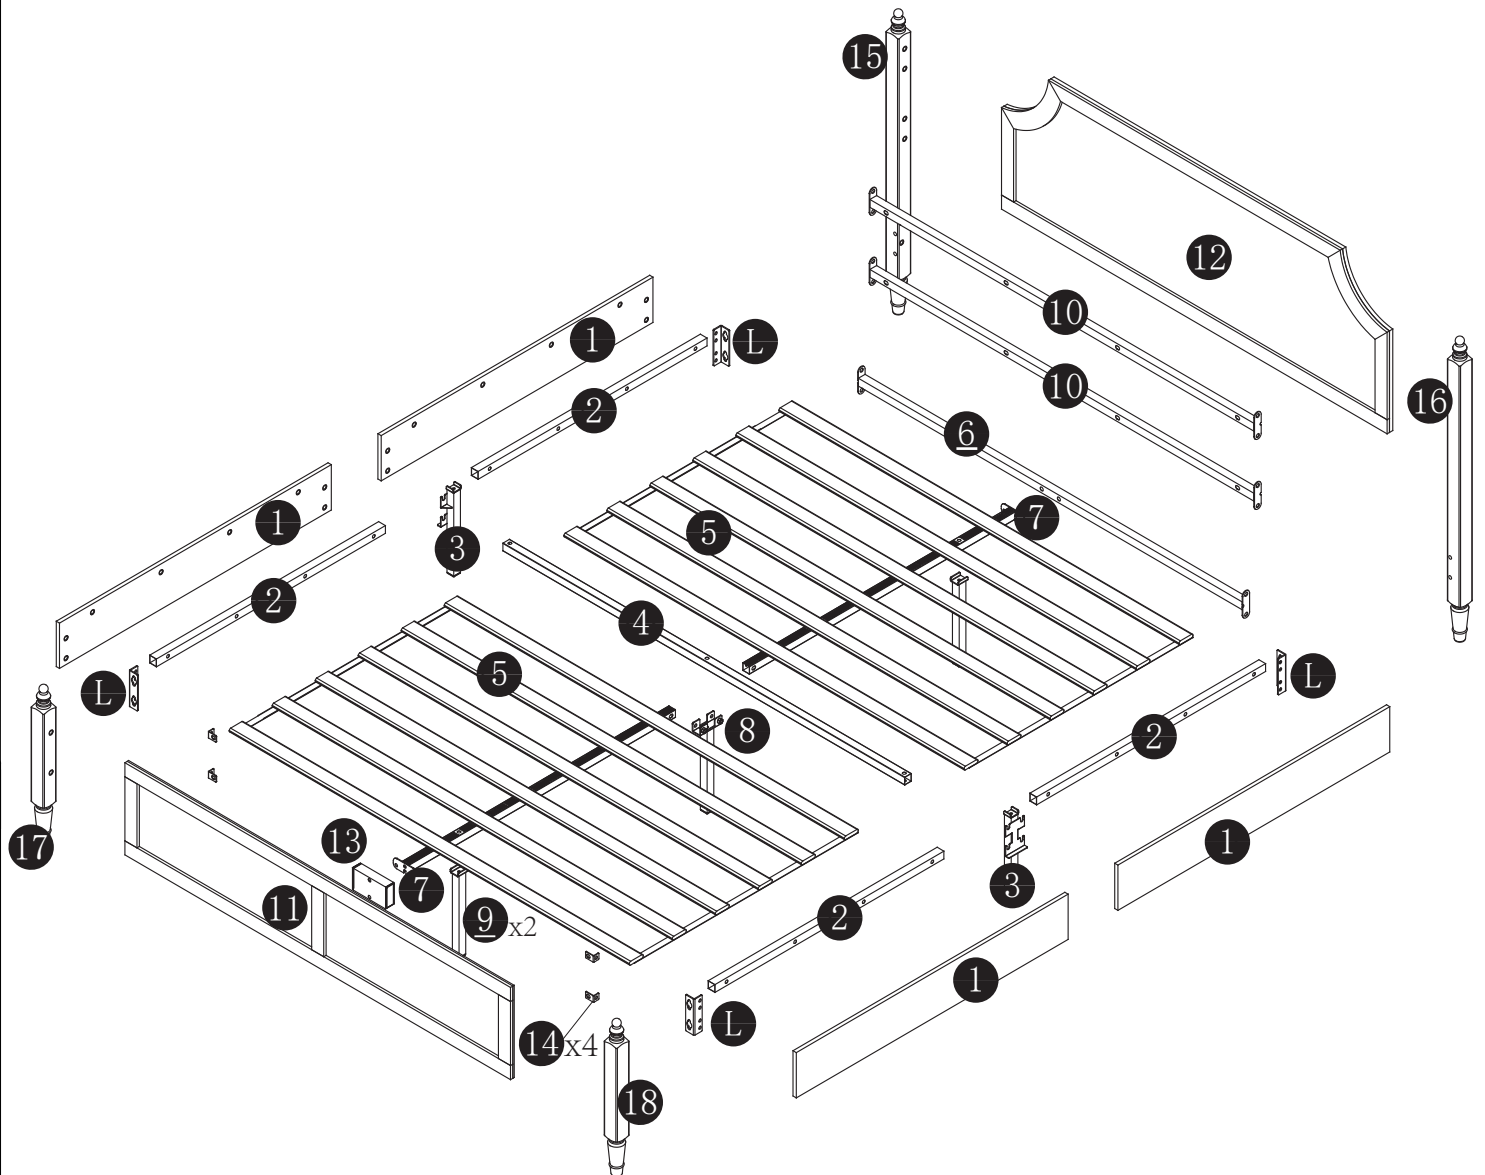


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

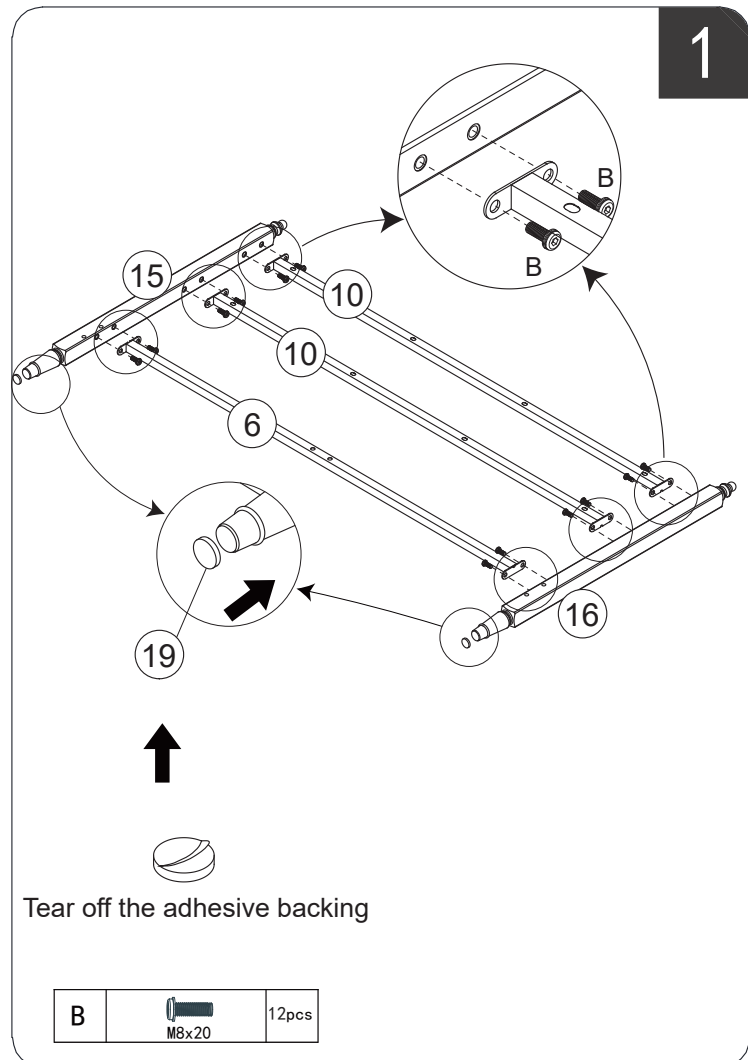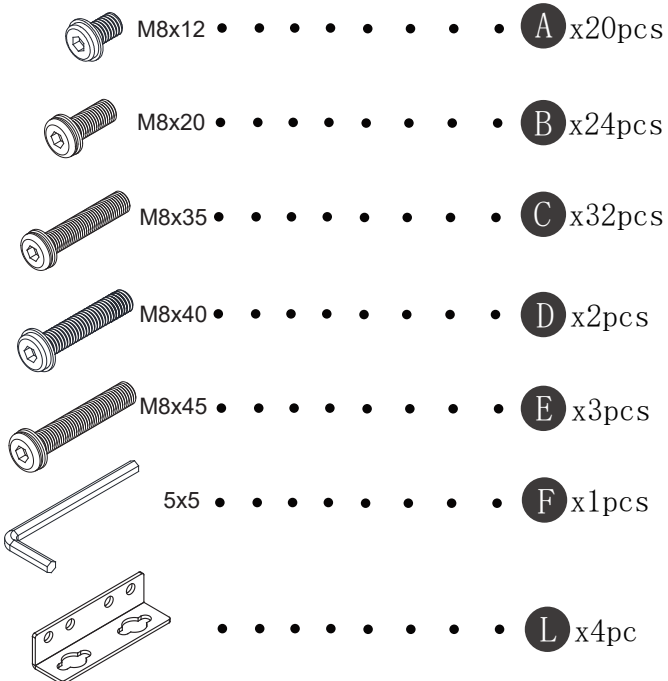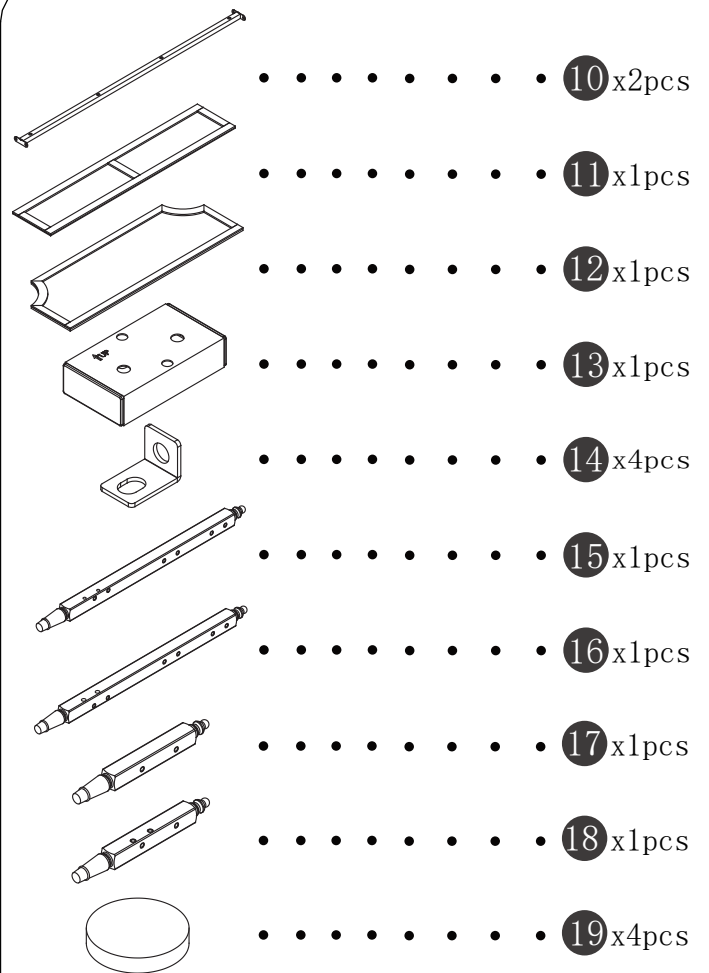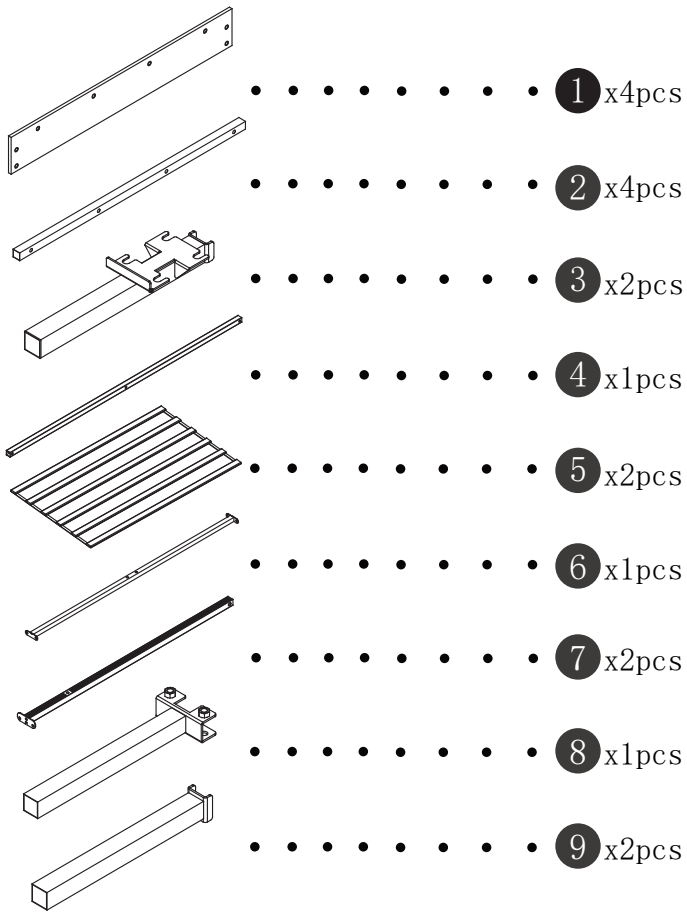


2

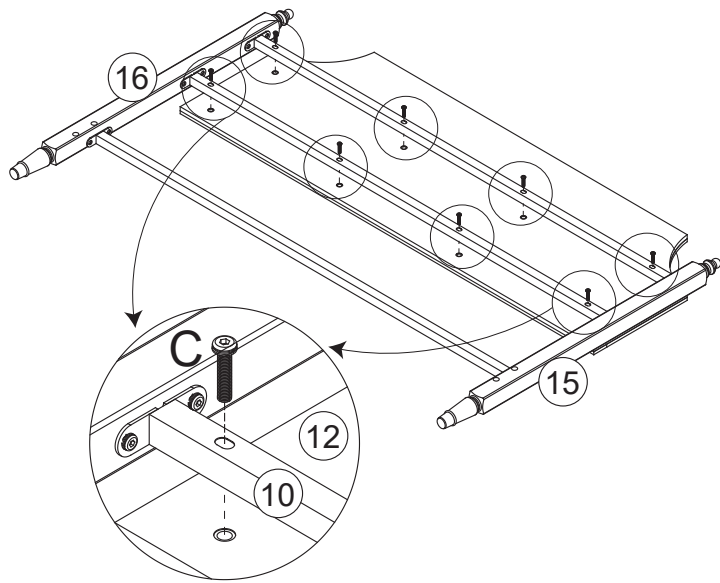


C		8pcs
	M8x35	

3

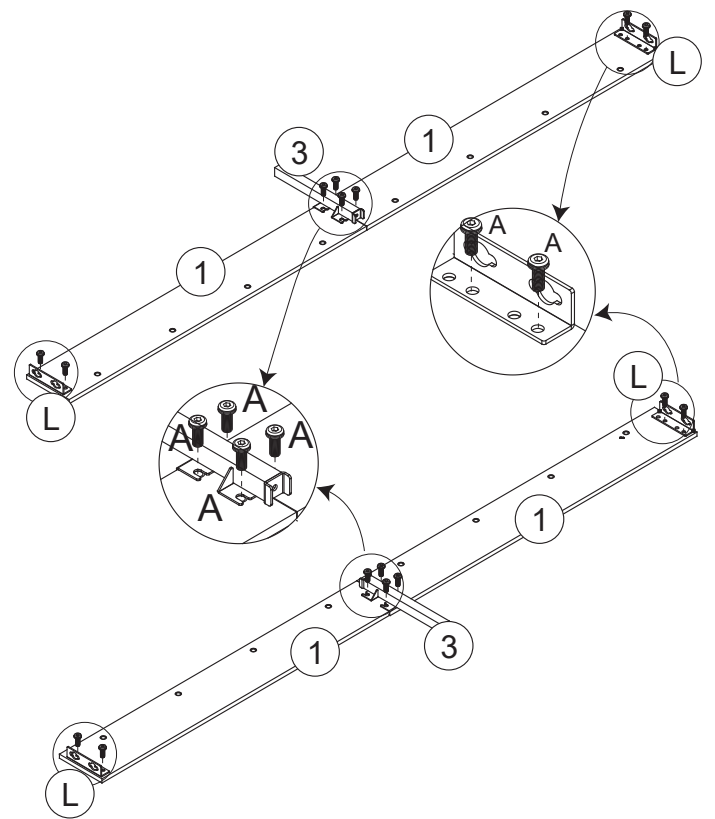


A		16pcs
	M8x12	

4

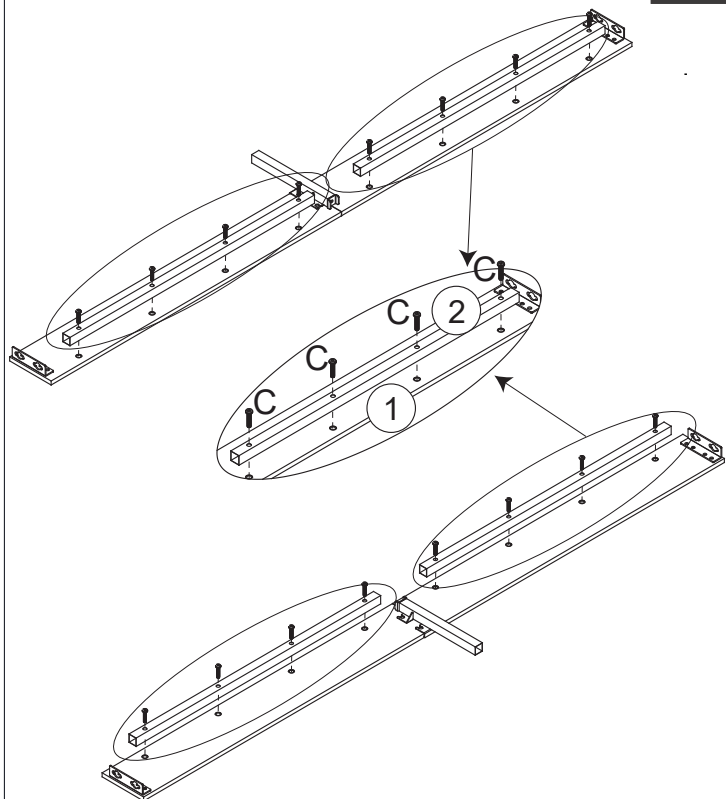

C		16pcs
	M8x35	


5

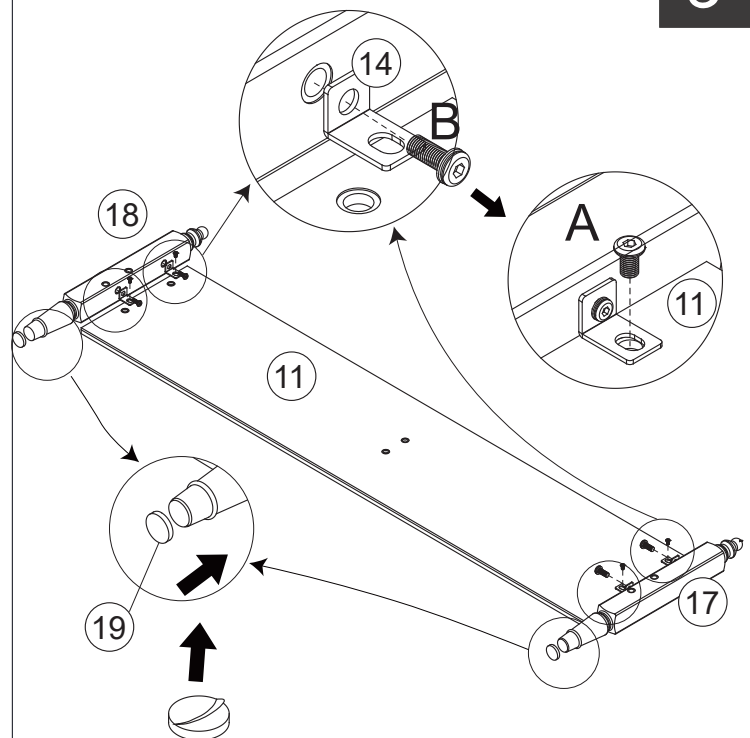

Tear off the adhesive backing


A		4pcs
	M8x12	
B		4pcs
	M8x20	



6

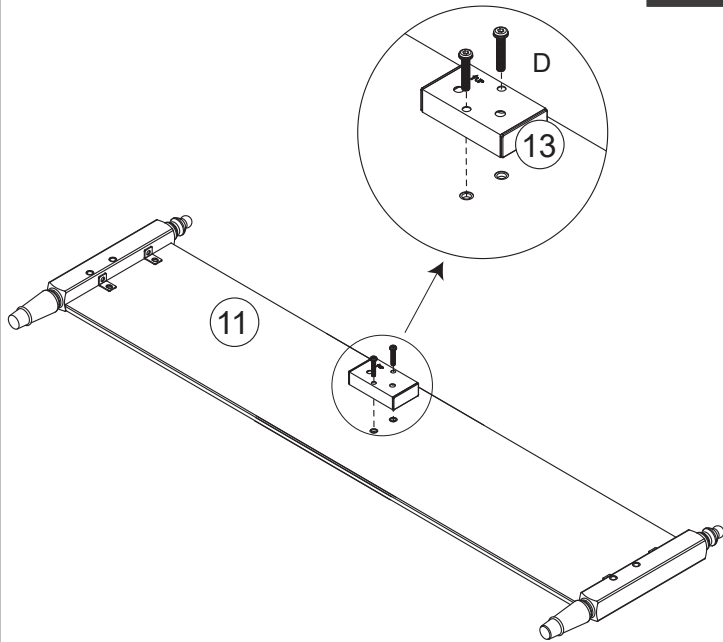


D		2pcs
M8x40		

7

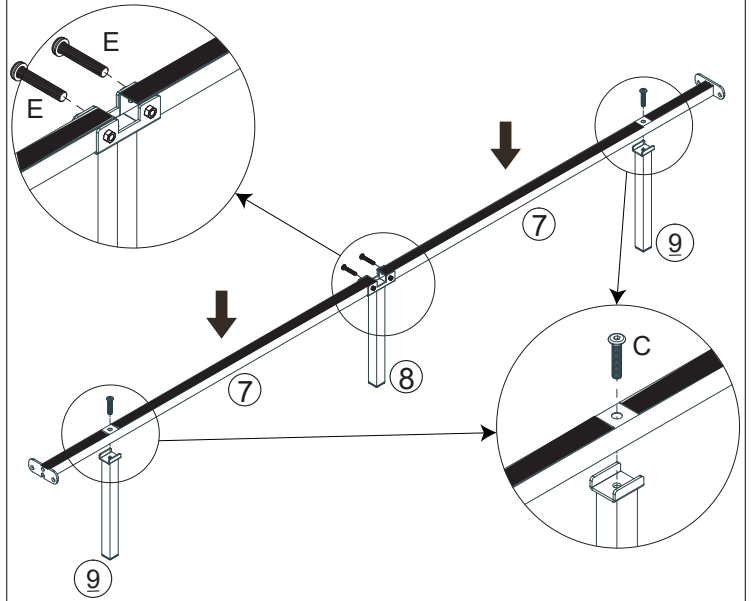


C		2pcs
M8x35		
E		2pcs
M8x45		


8

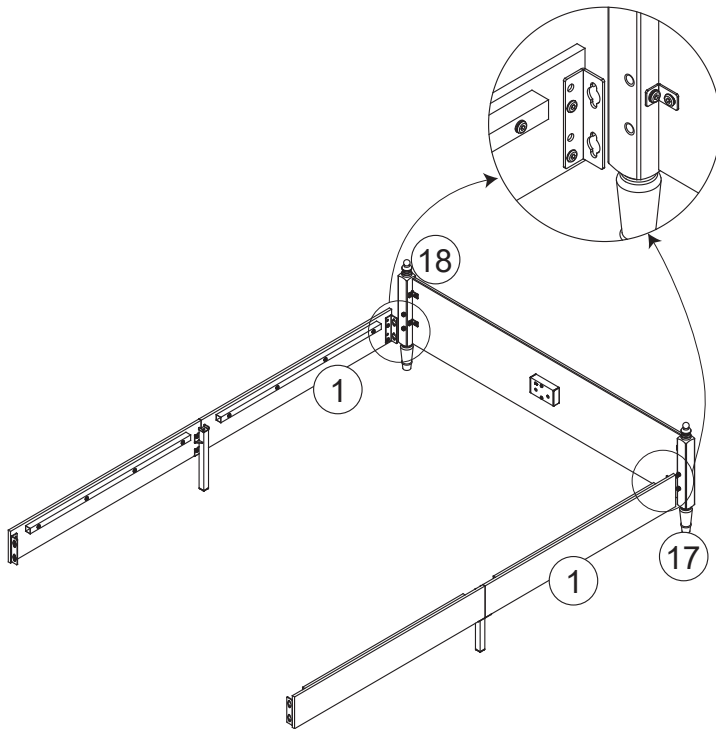


Screw locks in 80%,
not tight.

B		4pcs
M8x20		




9

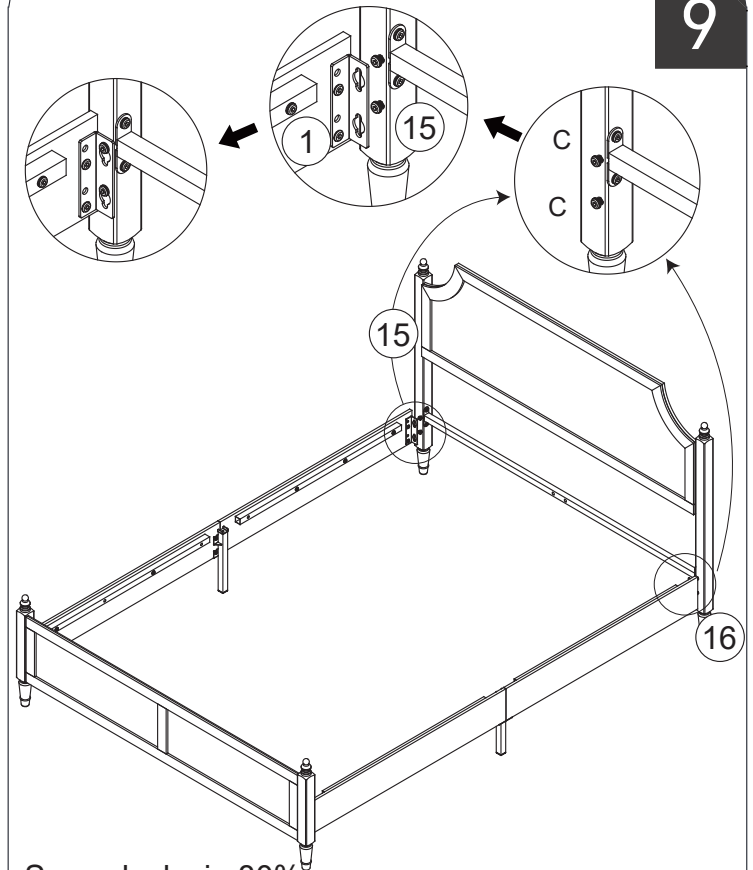

Screw locks in 80%,
not tight.




C		4pcs
M8x35		

10

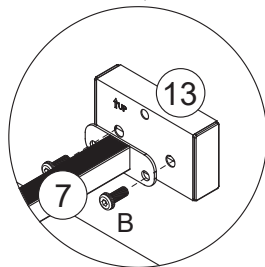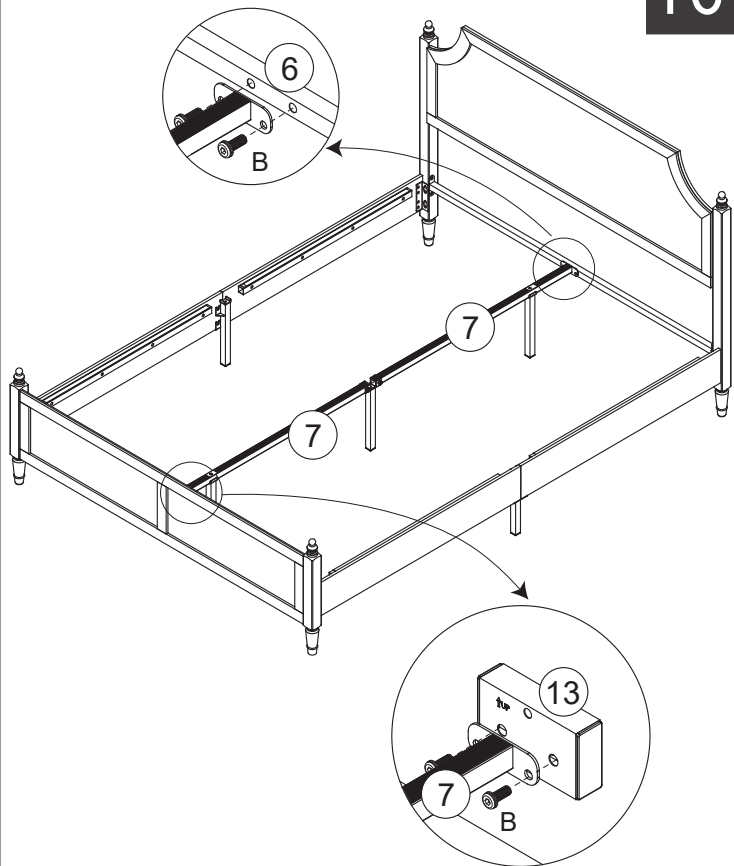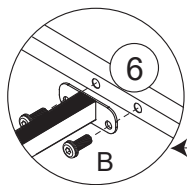



B		4pcs
---	--	------

11

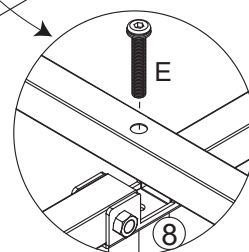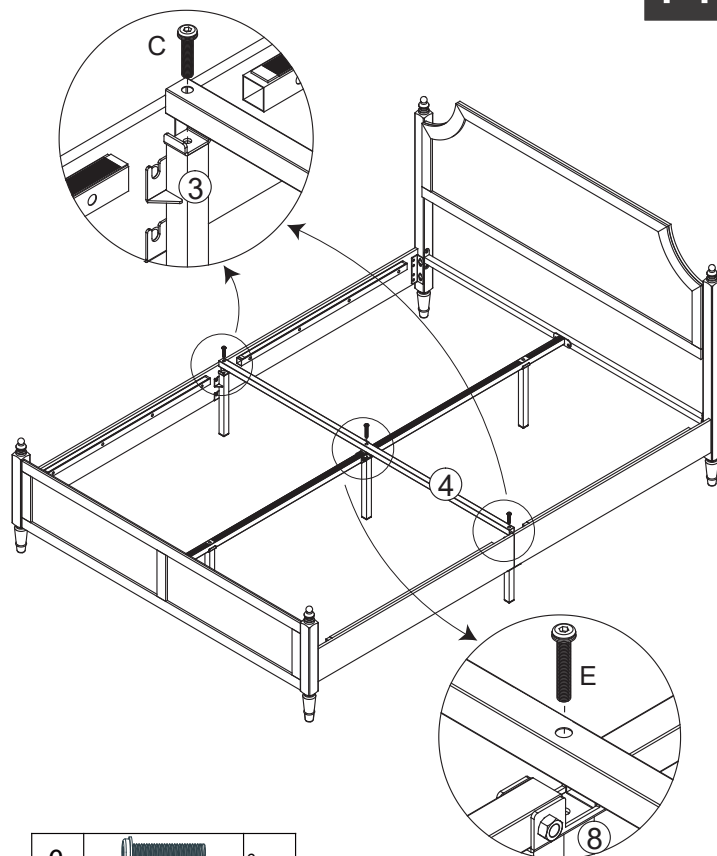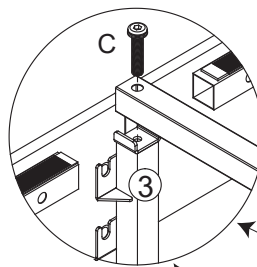

C		2pcs
E		1pcs

12

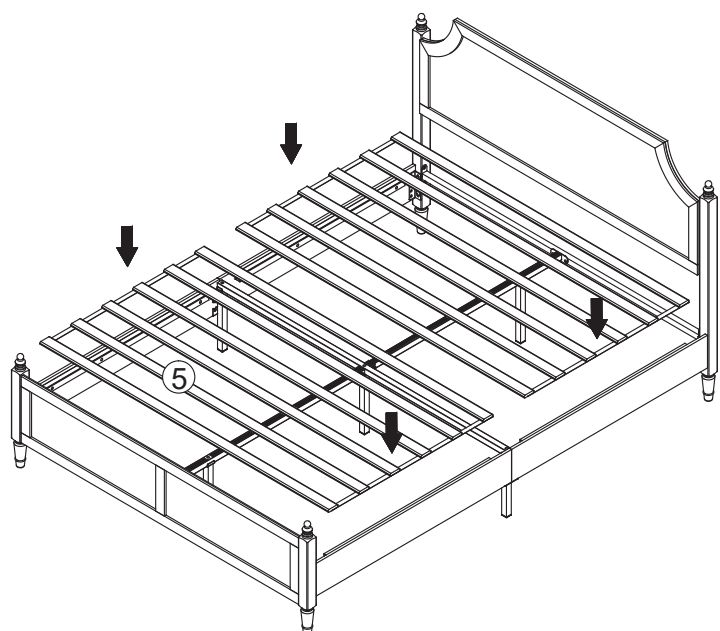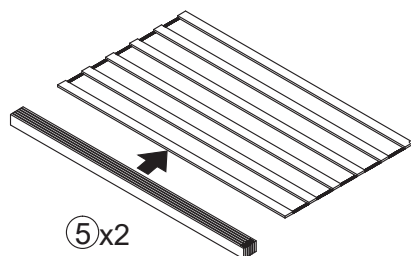

13

