

ASSEMBLY INSTRUCTIONS

4'6"

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

CARE & MAINTENANCE:


Assemble in the room of use.

Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.





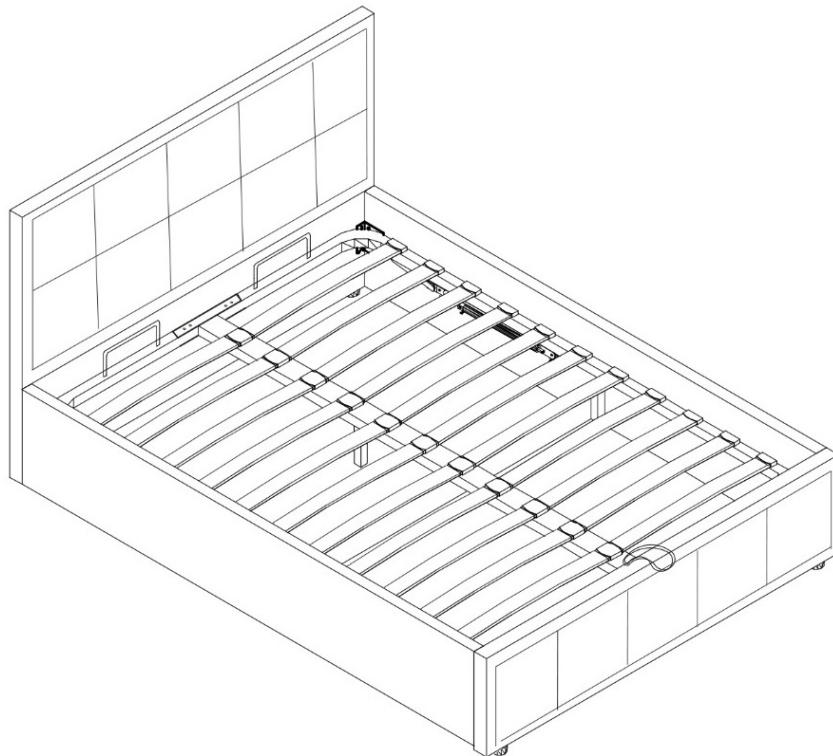








Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.



PARTS LIST

HARDWARE LIST(Found in box2)

No	Item	Box	Qty	No	Item	Qty
1	Wooden Block	3	1	A	M5 Allen Key 	1
2	Footboard	3	1	B	Bolts (M8x30mm) 	8
3	Headboard	1	1	C	Spring Washer (M8) 	8
4	Left Side Rail	2	1	D	Flat Washer (M8x22mm) 	8
5	Right Side Rail	2	1	E	Nuts (M8x14mm) 	16
6	Cross Bar	3	1	F	Spanner (M14) 	1
7	Corner Bracket	2	4	G	Bolts (M6x20mm) 	16
8	Metal Frame	3	1	H	Bolts (M8x40mm) 	8
9	Slats	3	26	I	M4 Allen Key 	1
10	Support Leg	3	1	J	Screws (M4x60) 	4
11	Metal Hook	3	2	K	Bolts (M8x80mm) 	2
12	Pull Strap	3	1	L	Bolts (M8x45mm) 	8
13	Fabric Base	3	1	M	Single Plastic caps 	52
14	U Shape Metal	3	2	** You will need a screwdriver(not provided)		

**** There is one single cap as spares.**

Step 1:


To fix the left side rail(4) and right side rail(5) to the headboard(3) and footboard(2) you will need to use hardware parts B, C and D with the M5 allen key(A)

To position the gas lifts pre-assembled on the left side rail(4) and right side rail(5).

To fix the wooden block(1) to the footboard(2) you will need to use hardware parts H with the M5 allen key(A).

DO NOT use any power tools as this may damage the bed frame and will invalidate any claims.

A	 M5 Allen Key (1pc)
B	 Bolts (M8x30mm) (8 pcs)
C	 Spring Washer (M8) (8 pcs)
D	 Flat Washer (M8x22mm) (8 pcs)
H	 Bolts (M8x40mm) (2 pcs)

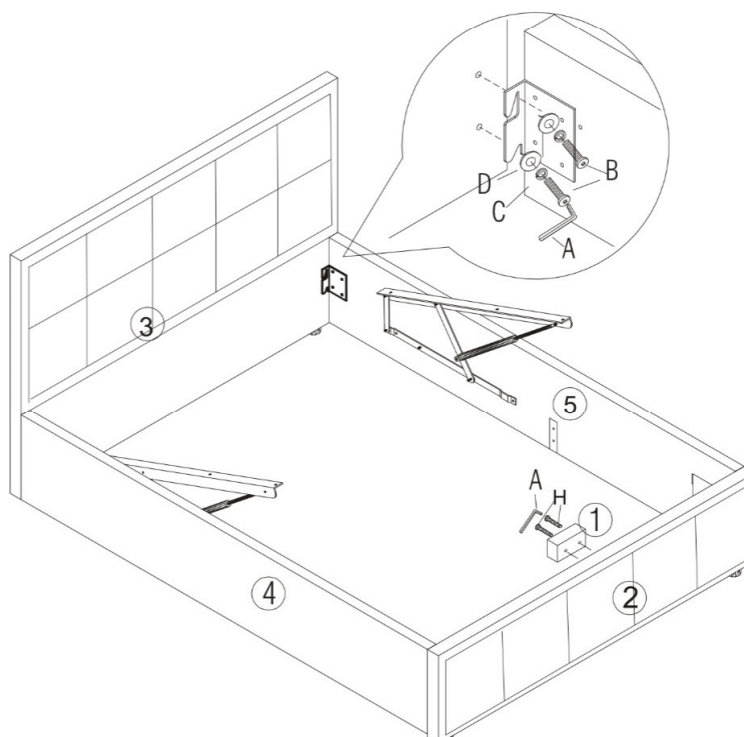

Step 2:


To attach the corner bracket (7) to the headboard (3), footboard (2) and left side rail (4) and right side rail (5) you will need to use hardware parts G and the M4 allen key (I)

To fix the cross bar (6) to the left and right side rail, you will need to use hardware parts J with a screw driver (not provided)

You will need to use the M4 allen key (I) as provided and a screwdriver for this step of the assembly.

DO NOT use any power tools as this may damage the bed frame and will invalidate any claims.

G	 Bolts (M6x20mm) (16 pcs)
I	 M4 Allen Key (1 pc)
J	 Screws (M4x60) (4 pcs)

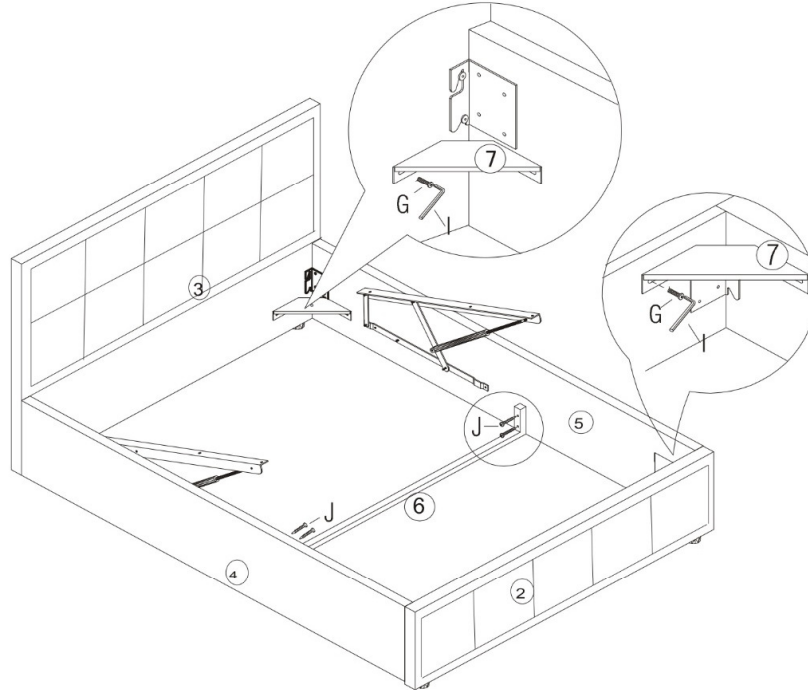




**Step 3:**


You will need to fix the metal hook (11) and u shape metal (14) to the metal frame (8) using hardware parts E and L with the M5 allen key (A) and the M14 spanner (F).

To attach the metal frame (8) to the gas lifts pre-fixed left (4) and right (5) side rails, you will need to use hardware parts E, H with the M5 allen key (A) and the M14 spanner (F).

You will need to use the M5 allen key (A) and the M14 spanner (F) provided for this step of the assembly.

DO NOT use any power tools, this may damage the bed frame and will invalidate any claims

A	 M5 Allen Key (1 pc)
E	 Nuts (M8x14mm) (14 pcs)
F	 Spanner (M14) (1 pc)
H	 Bolts (M8x40mm) (6 pcs)
L	 Bolts (M8x45mm) (8 pcs)

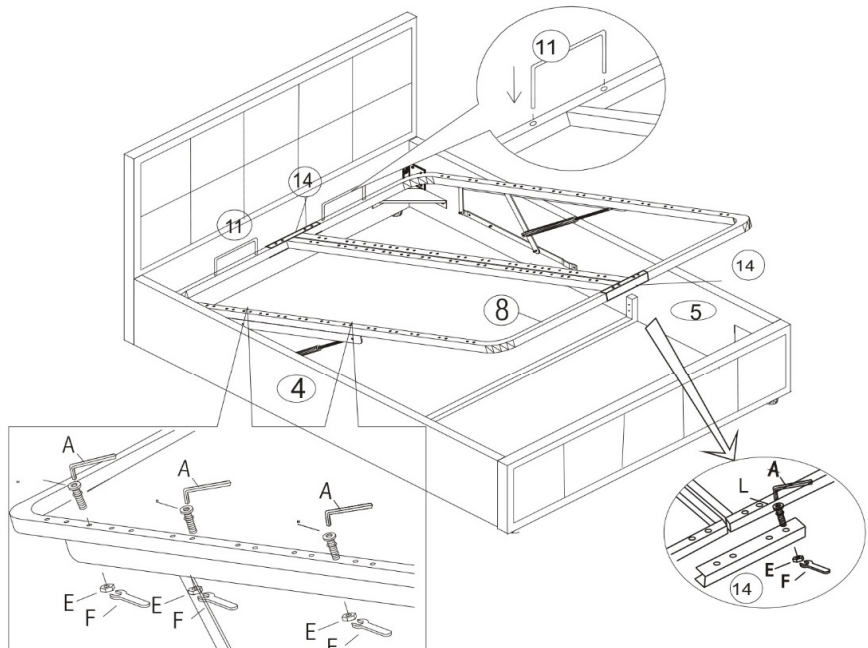

Step 4:


To attach the support leg(10) to the centre rail of the metal frame(8) you will need to hardware parts E and K with the M5 allen key(A) and the M14 spanner(F).

To attach the pull strap(12) to the metal frame(8) you will place the pull strap(12) beneath the metal frame(8) and then pull the strap on the inner side of the frame through the strap on the outer side of the frame to form a knot

To assemble the slats(9) place a single plastic cap(M) onto each end of every slat then need push the single plastic caps(M) into the metal frame(8).

You will need to use the M5 allen key(A) and the M14 spanner(F) as provided for this step of the assembly.


DO NOT use any power tools as this may damage the bed frame and will invalidate any claims.

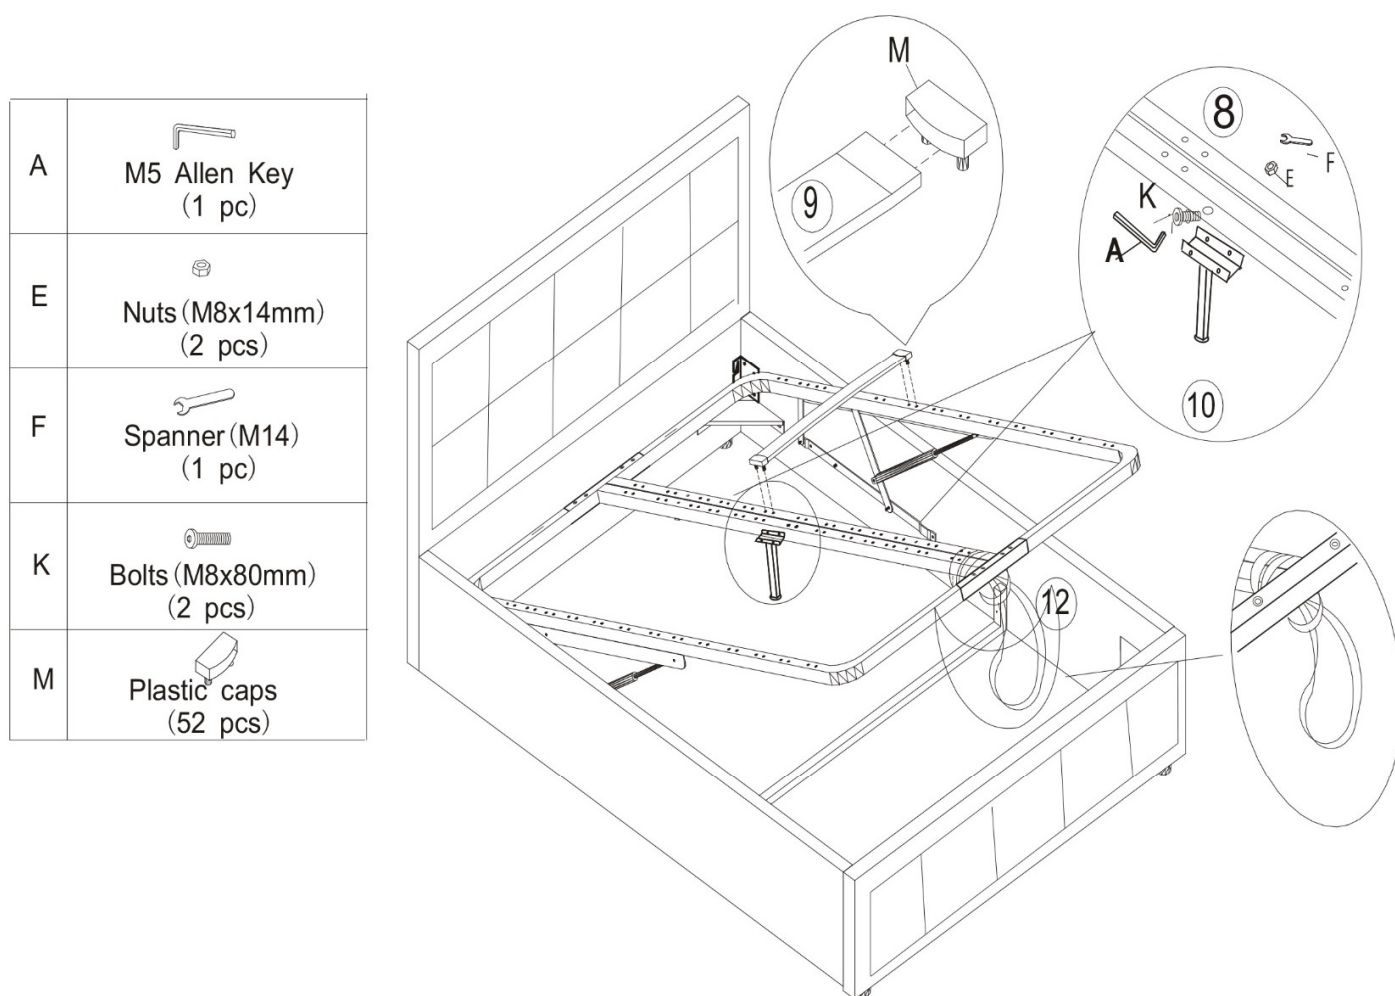

Step 5:

stick the Non-woven fabric(13) on the bottom

DO NOT use any power tools as this may damage the frame and will invalidate any claims

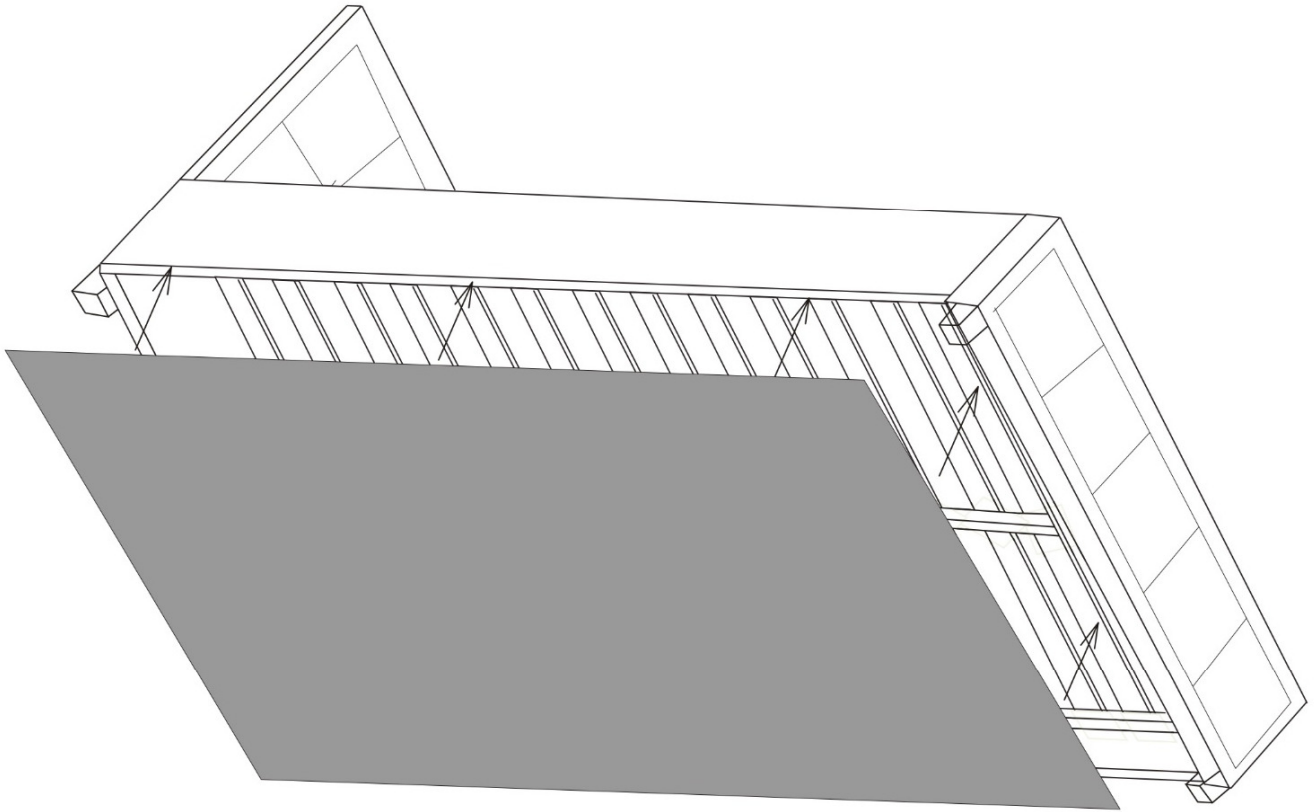

Additional Information:

- For complete product information, images and dimension diagrams please visit the website.
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues.