












ASSEMBLY INSTRUCTION

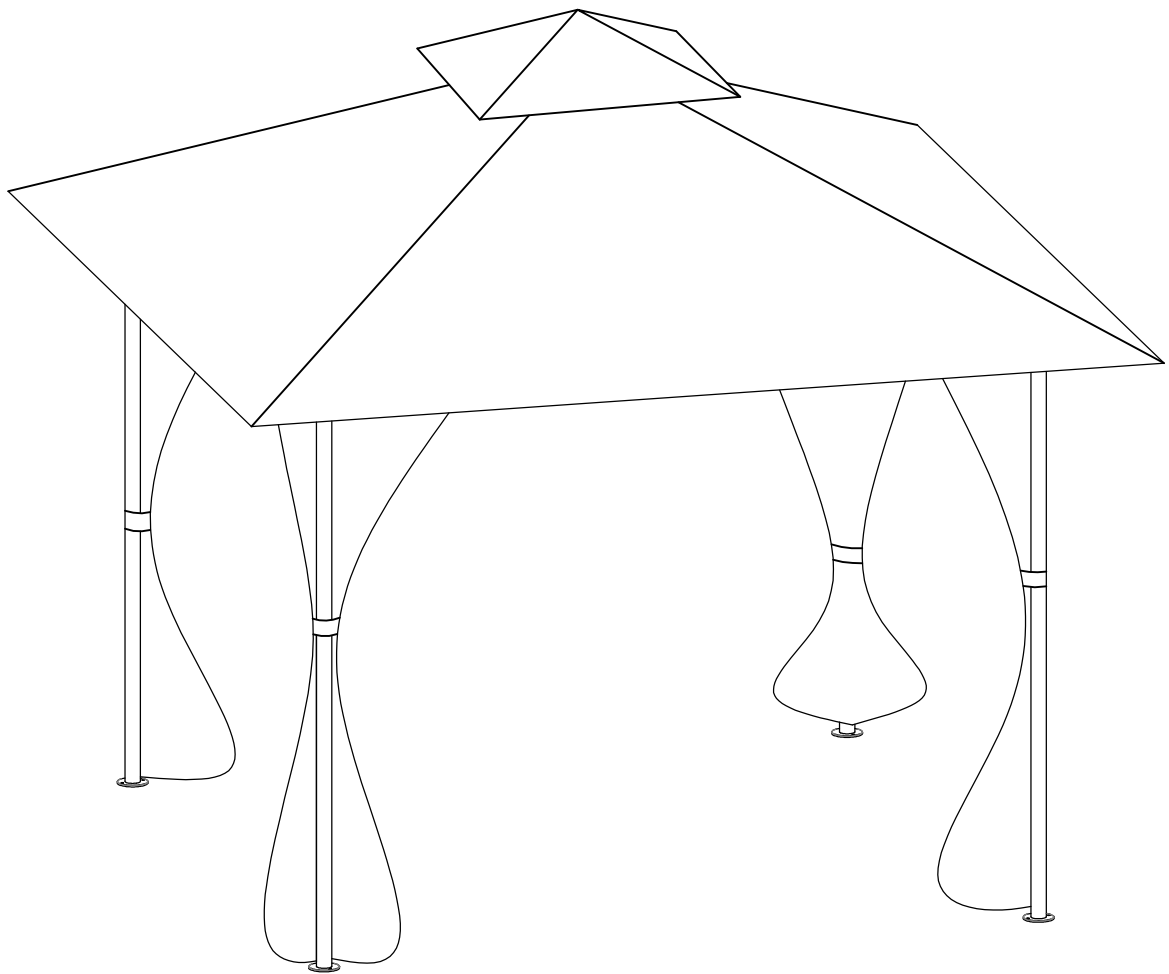








10ft x10 ft Gazebos with Curtain



Before You Start


- *Please read all instruction carefully Retain instructions for future reference.
- *Separate and count all parts and Hardware.
- *Read through each step carefully and follow the proper order.
- *Keep all small parts and packaging materials for this product.

Parts Name	Item No.	Parts Images	Qty.
Top Leg Post	A1		4
Lower Leg Post	A2		4
Cross Beam 1	C1		4
Cross Beam 2	C2		4
Upper Slant Bar	G1		4
Lower Slant Bar	G2		4
Upper Top Bar	H1		4
Lower Top Bar	H2		4
Short Extension Tube	K4		4
Long Extension Tube	K5		4

Parts Name	Item No.	Parts Images	Qty.
Top Connector	J		1
Big Canopy	01		1
Small Canopy	02		1
Privacy Curtain	P2		4
Bolt BB	BB	 M6×18mm	12
Stake	II		8
Ring	LL		32
Hook	N		1
Sandbags			4




Hammer not included

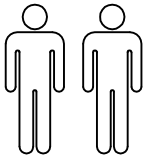

Two person




①

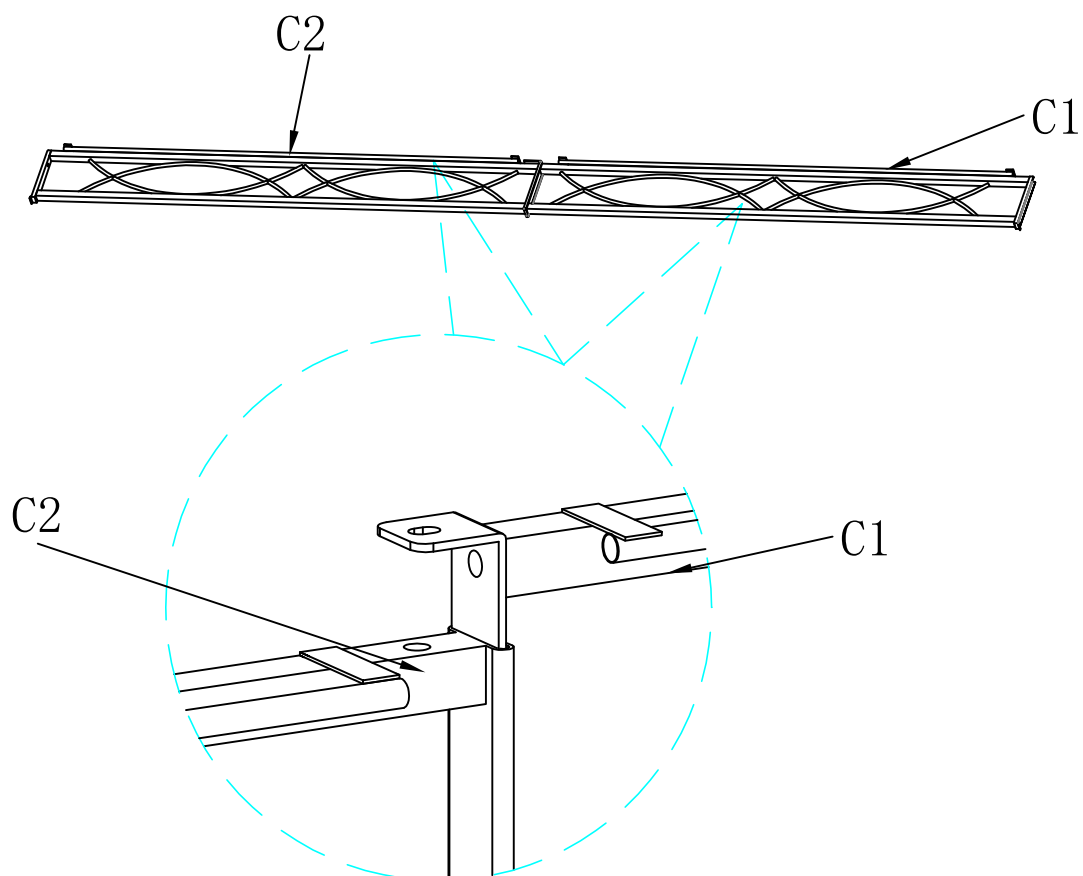

Connect Cross Beam 1(C1) and Cross Beam 2(C2).

②

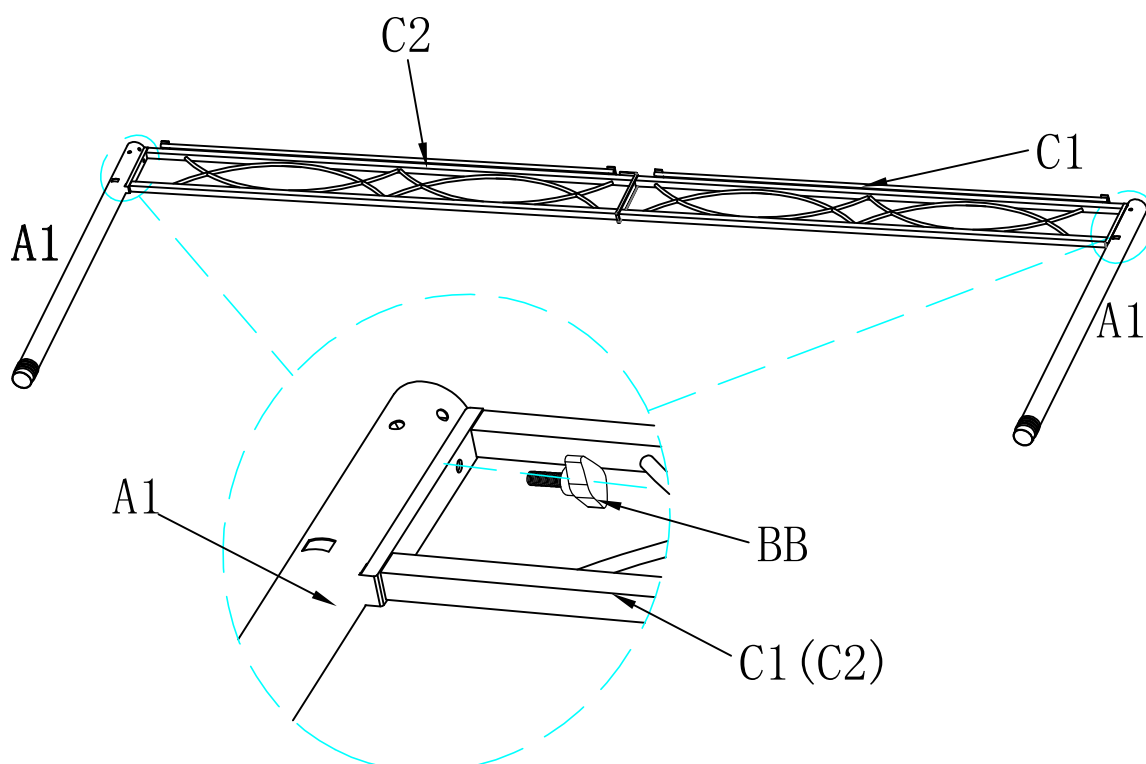


Connect Top Leg Post(A1) to assembled Corss Beam 1/2(C1/C2),locking by Bolt BB.


Attention: Lay flat beam on the ground, and face up.

③

Connect Cross Beam 1/2(C1/C2) to assembled Top Leg Post(A1) by Bolt BB.

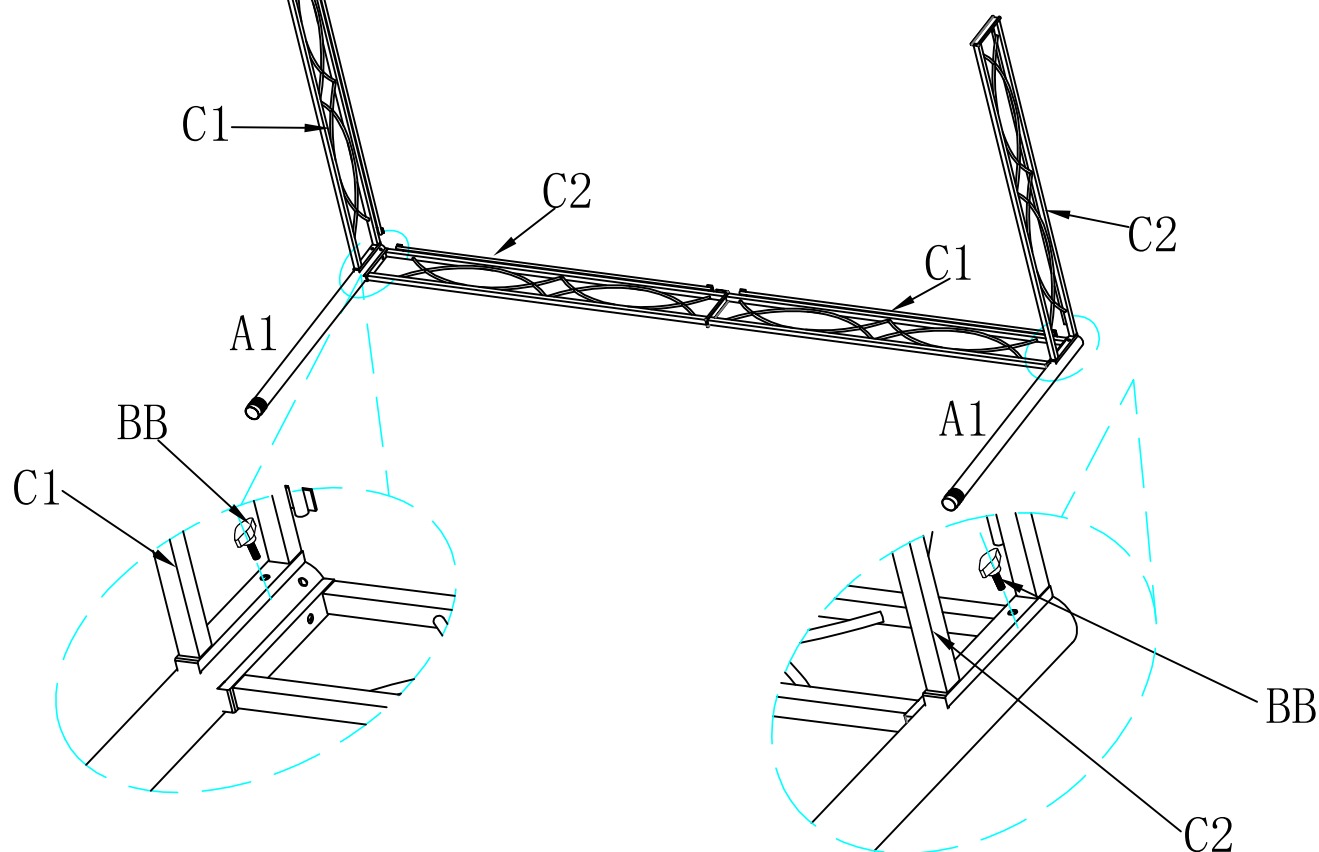


④

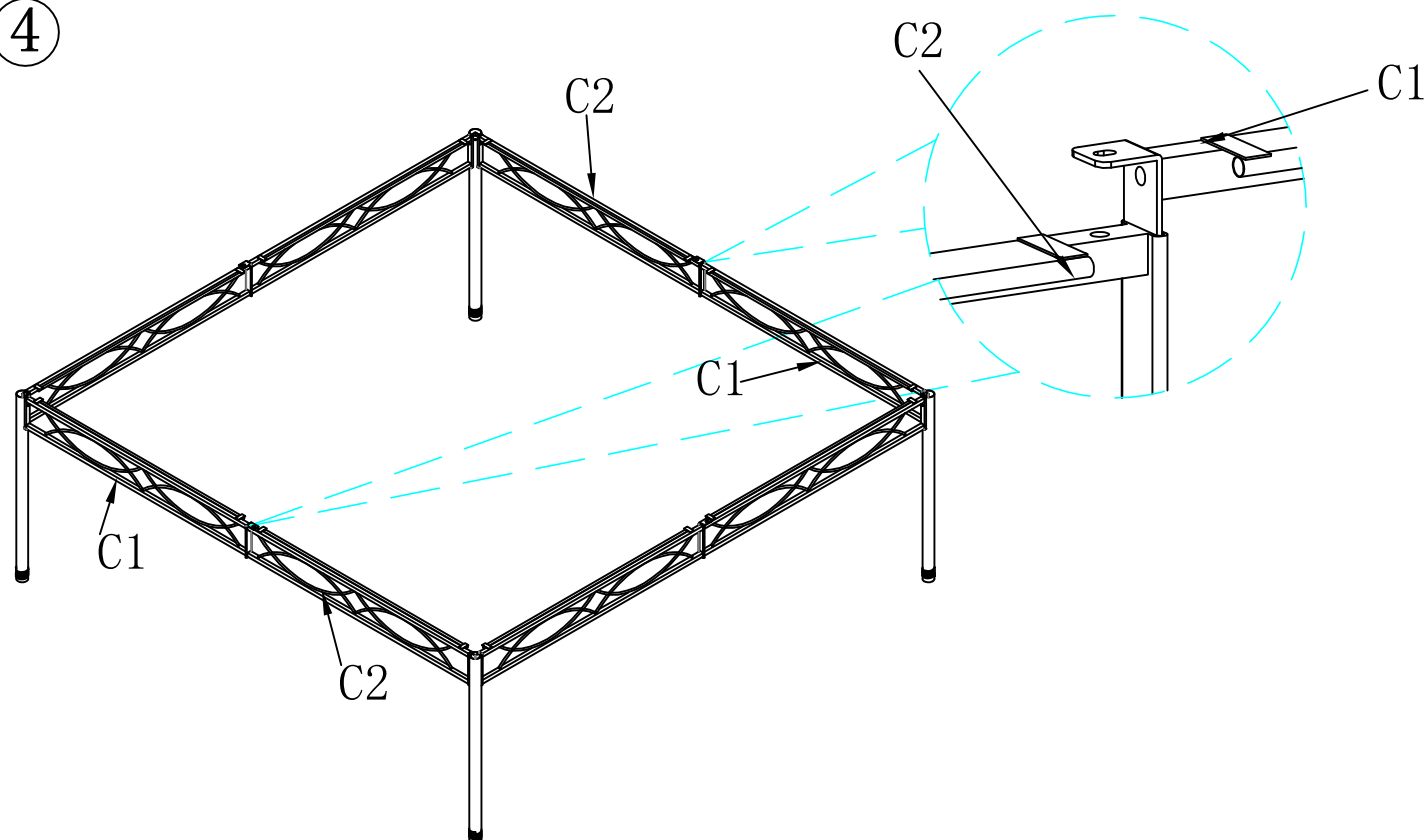


Connect assembled Cross Beam 1/2 (C1/C2) .

⑤

Insert Lower Slant Bar(G2)to Upper Slant Bar(G1);

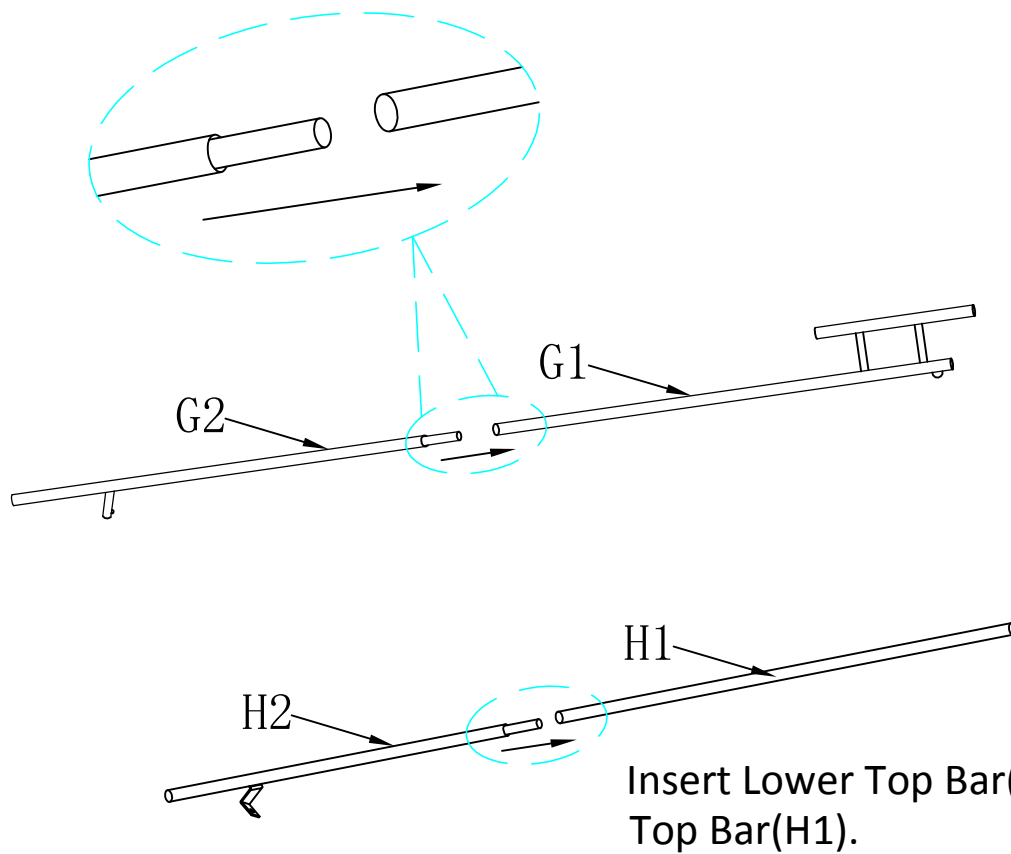

⑥

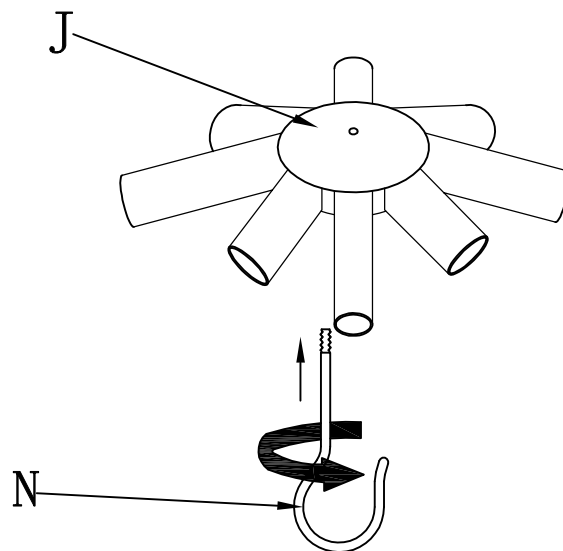


Connect the Hook(N) to the Top Connector(J).

Attention: the Hook(N)should be under the Top Connector(J).

7


Connect Upper Top Bar(H1)to Top Connector(J);

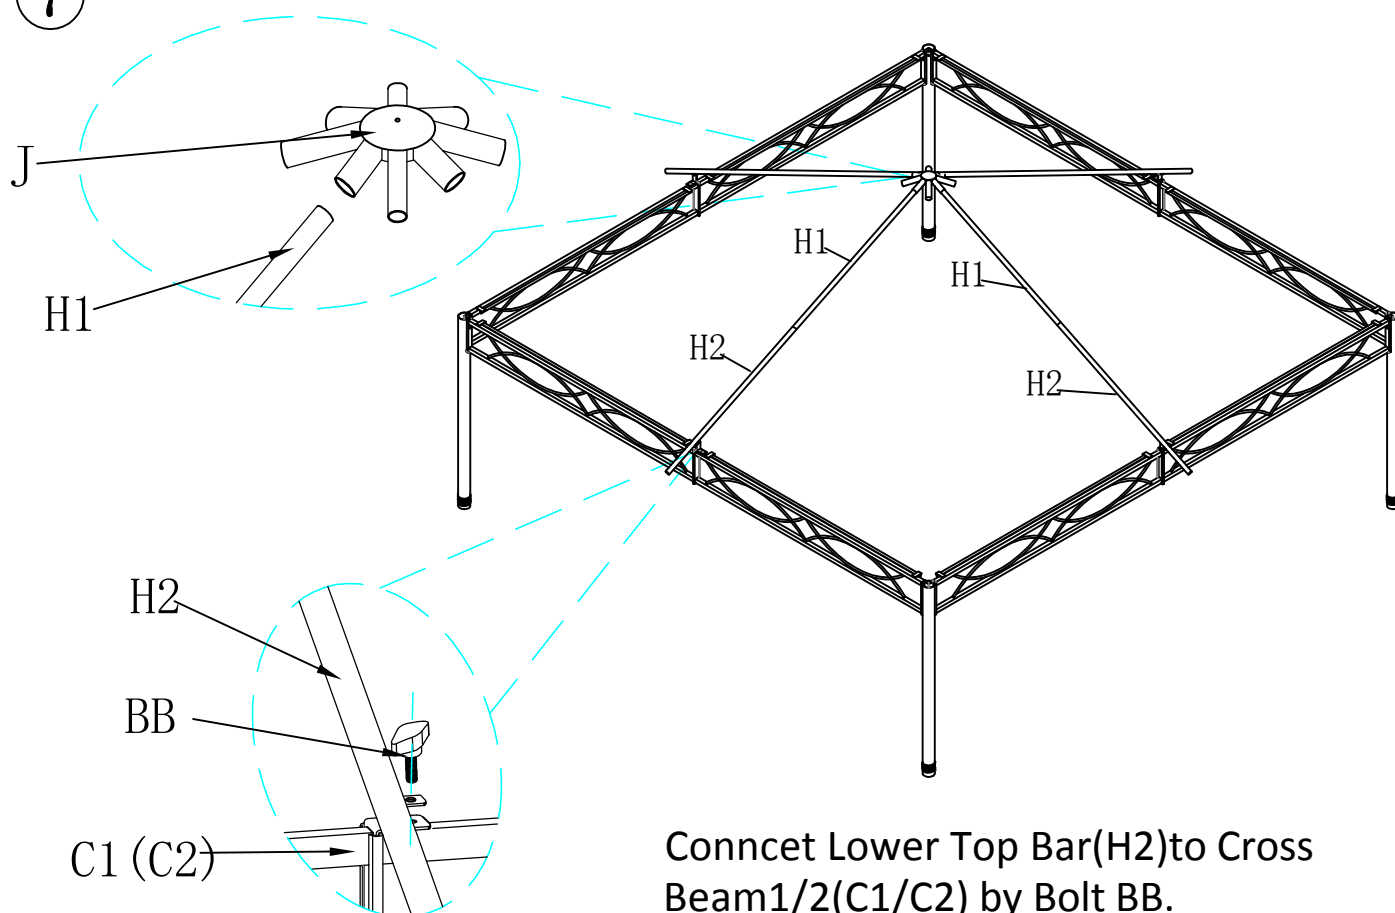

Connctet Lower Top Bar(H2)to Cross Beam1/2(C1/C2) by Bolt BB.


8

Insert Lower Slant Bar(G2) into Top Leg Post(A1).

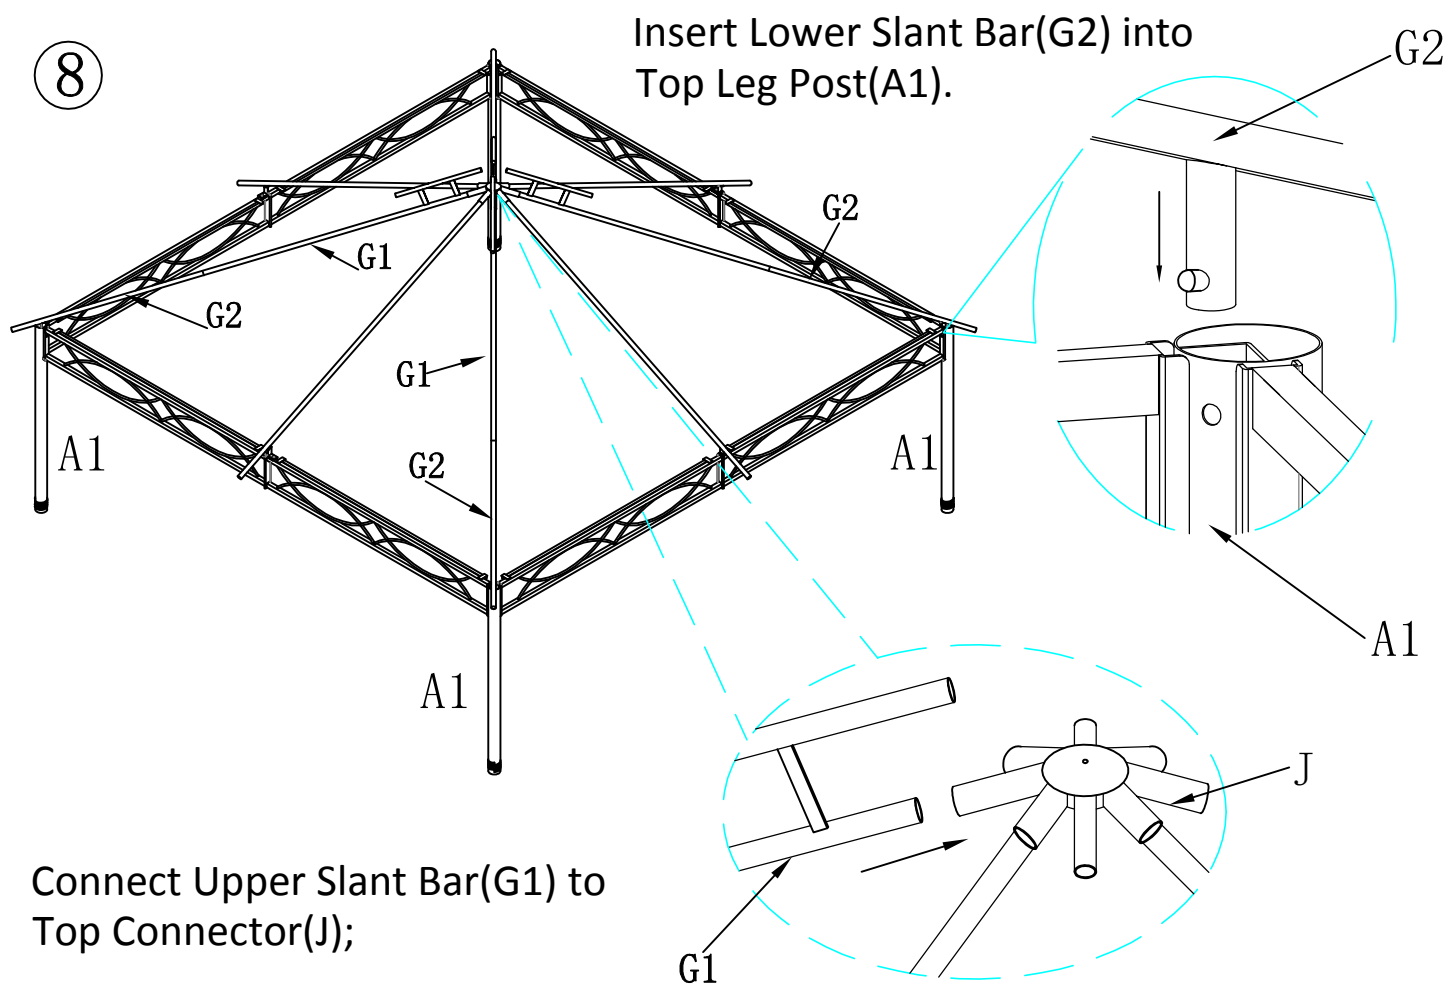

Connect Upper Slant Bar(G1) to Top Connector(J);


9

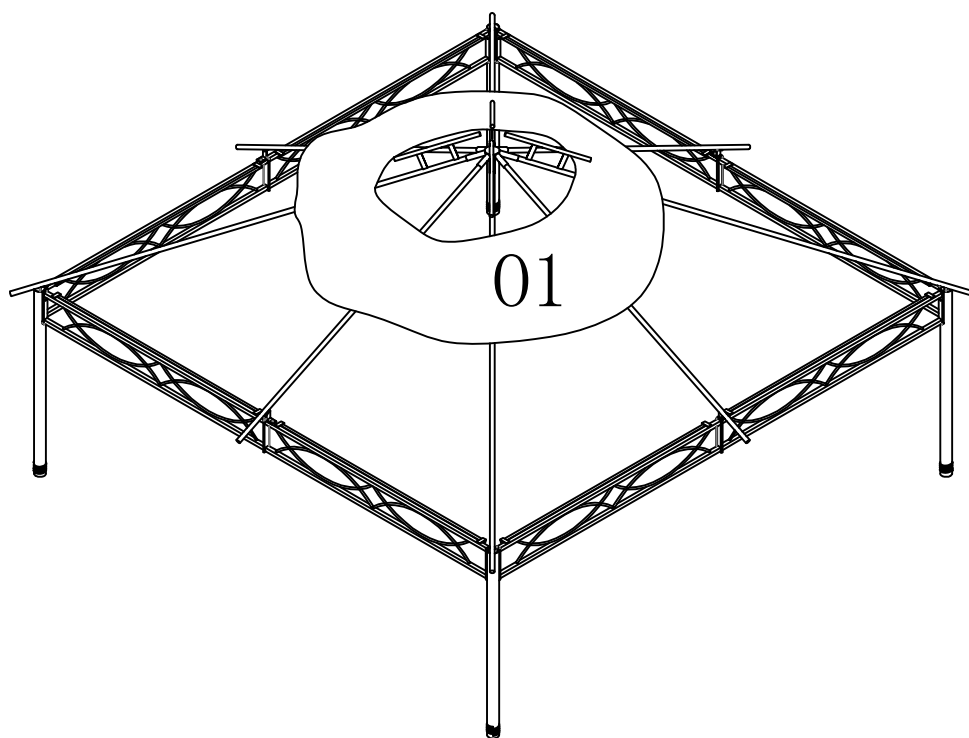

Put Big Canopy(O1) on big roof frame.


10

Insert Short Extension Tube(K4) into Upper Slant Bar(G1);

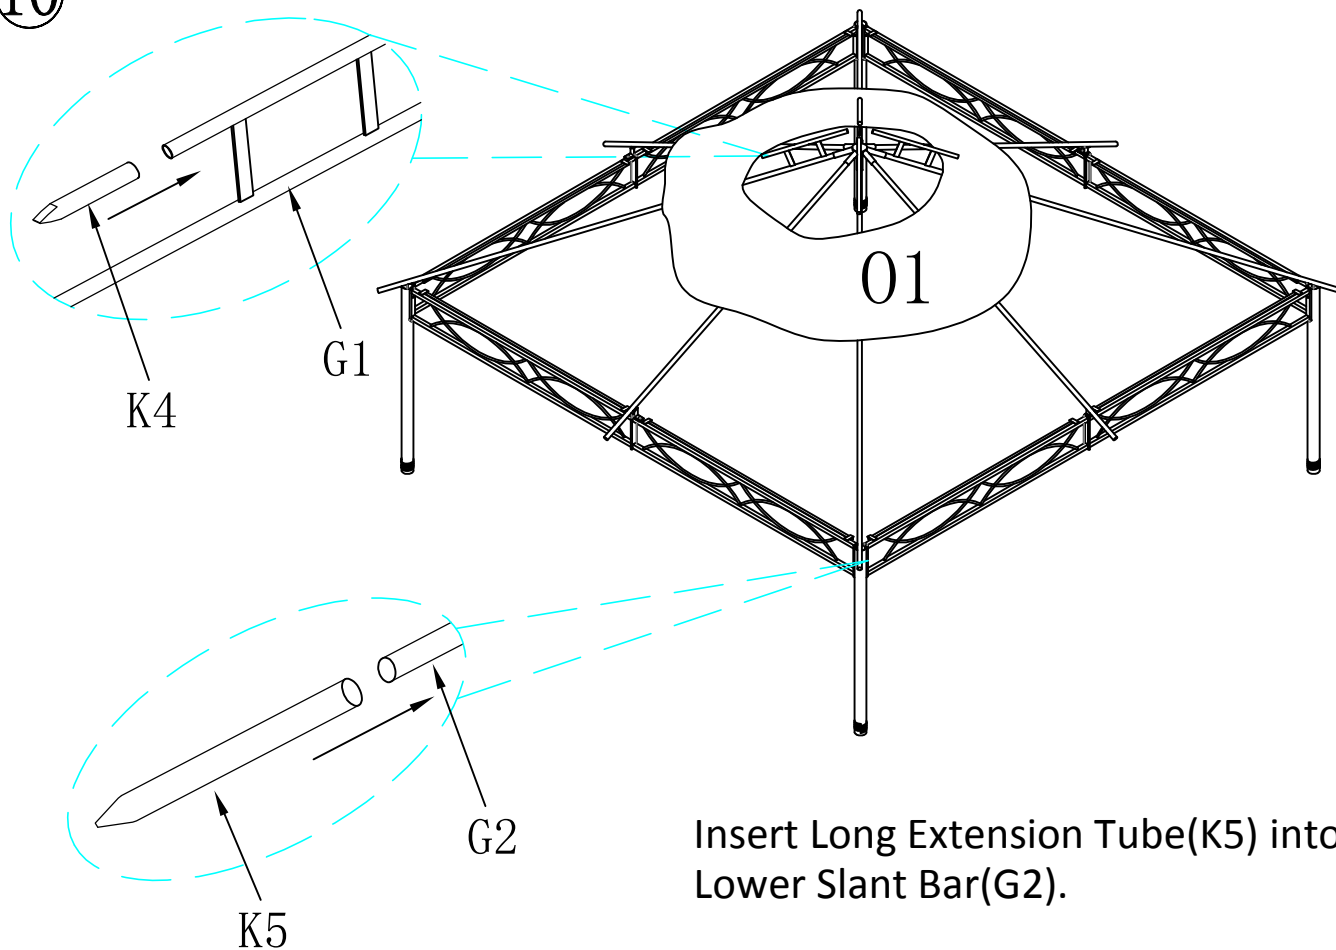


Insert Long Extension Tube(K5) into Lower Slant Bar(G2).

11

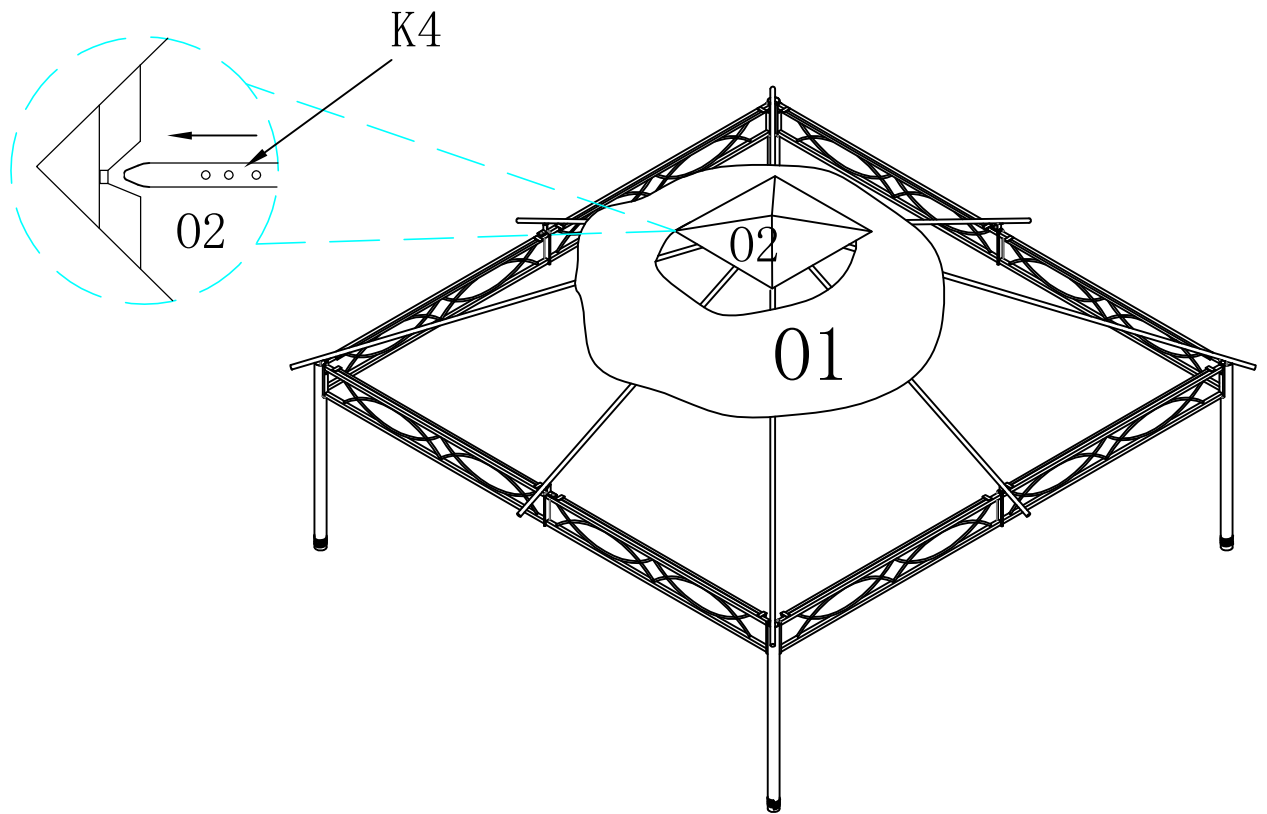

Put Small Canopy(O2) on small roof frame, fix four corners to Short Extension Tube(K4) and adjust tube to suitable length.


12

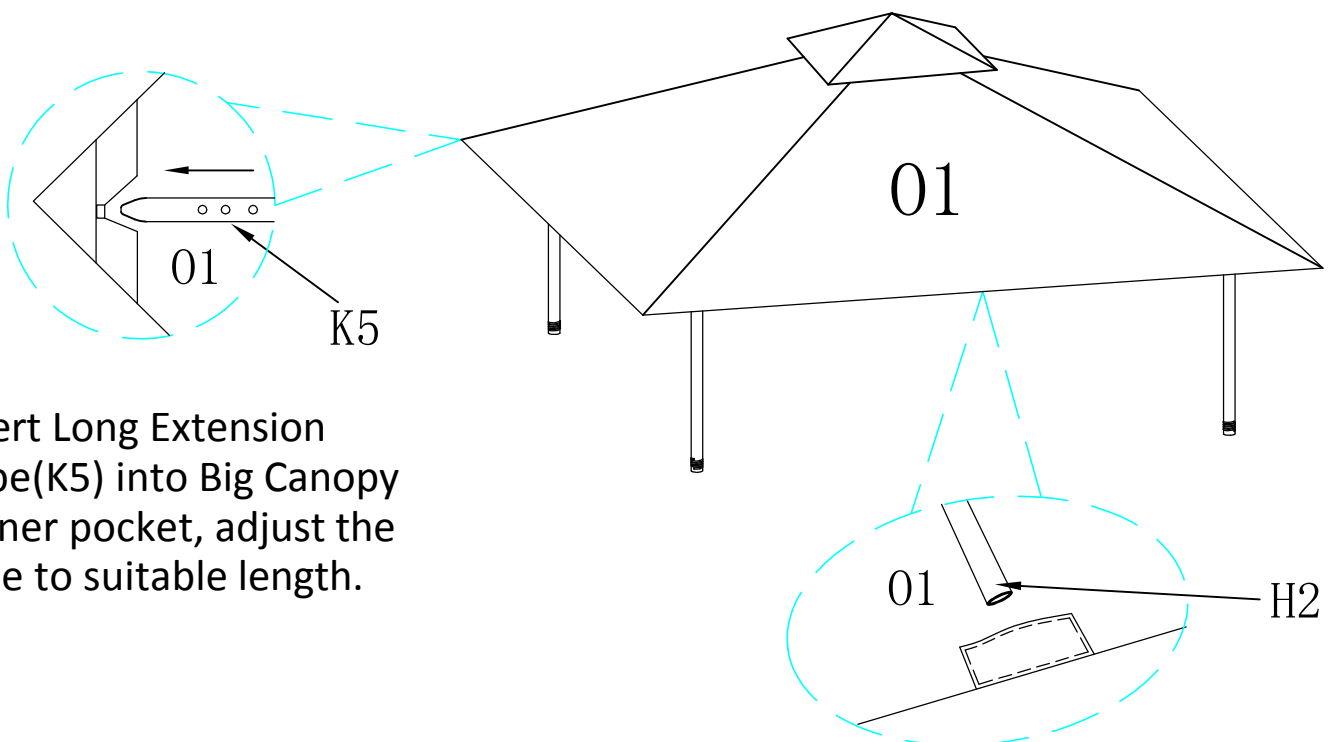

Insert Long Extension Tube(K5) into Big Canopy corner pocket, adjust the tube to suitable length.

Insert Lower Top Bar(H2) into side edge pocket on Big Canopy(O1).


13

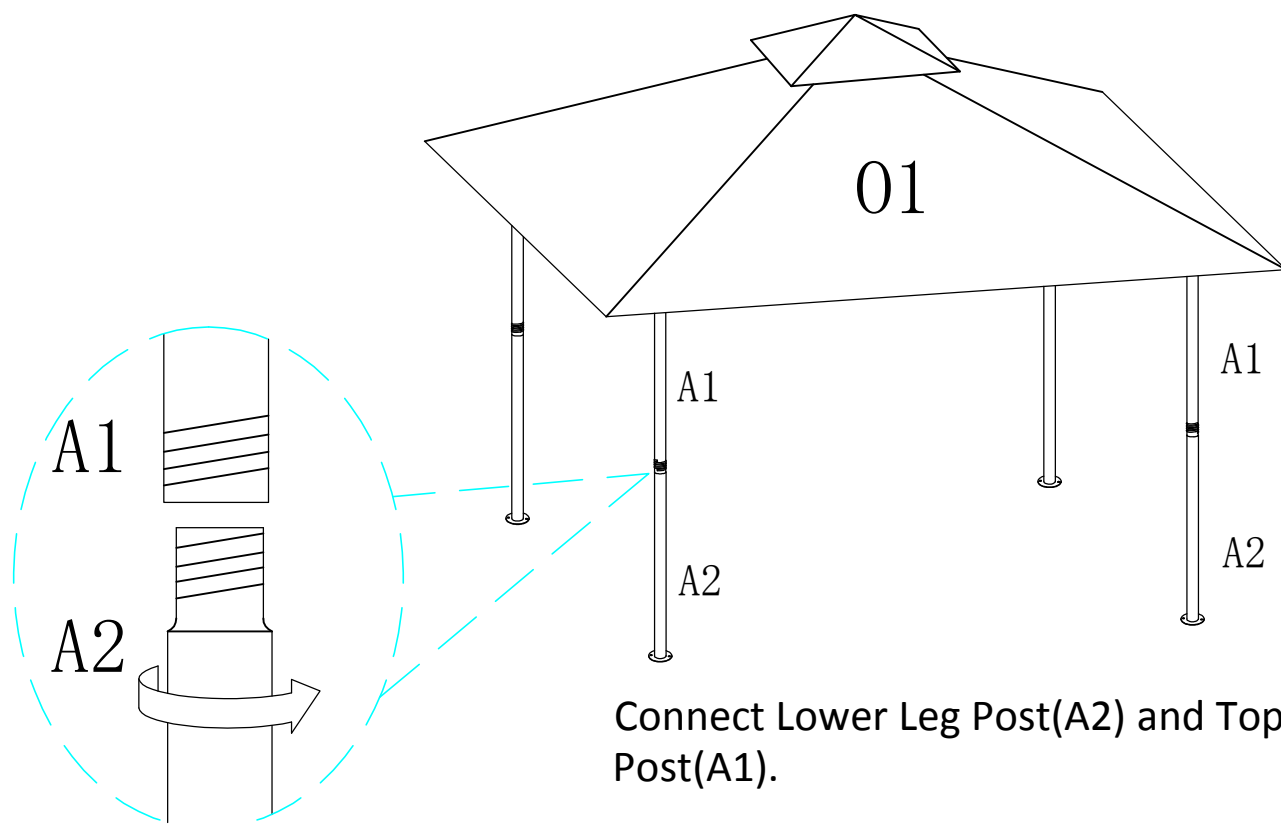

Connect Lower Leg Post(A2) and Top Leg Post(A1).


Attention: This step requires two persons.

14

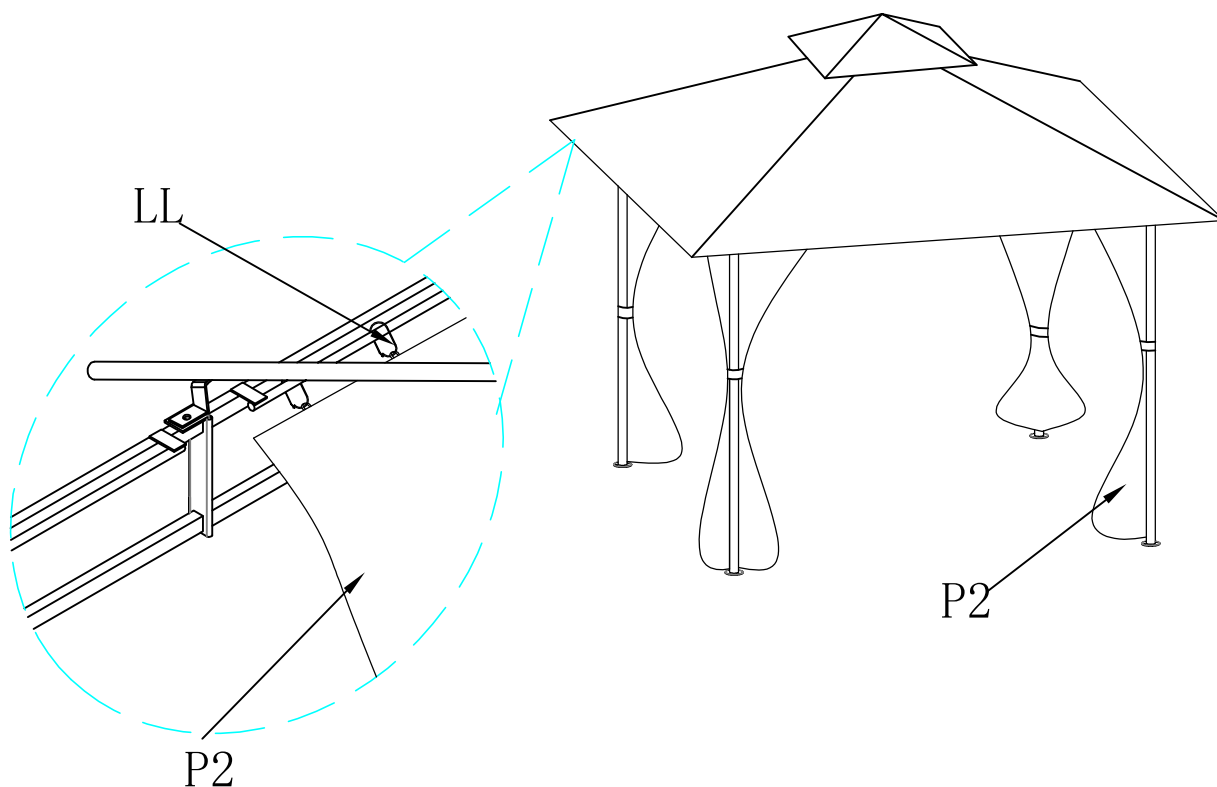

Hang Privacy Curtain(P2) on netting rod by Rings(LL).

15

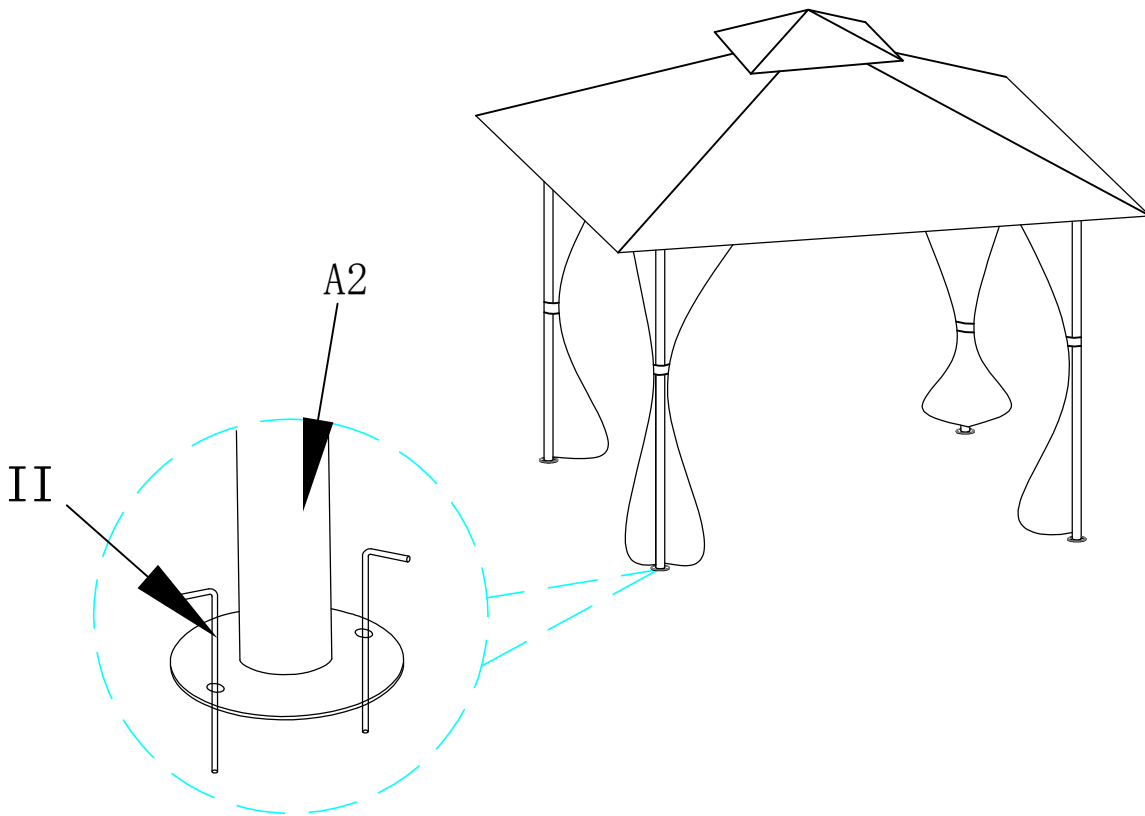

Fix gazebo Lower Leg Post(A2) on the ground by Stakes(II).