Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.








- ✓  • Dust and pick–up spills using a clean, non–colored, lint–free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


CORNER CHAIR
N842P294503

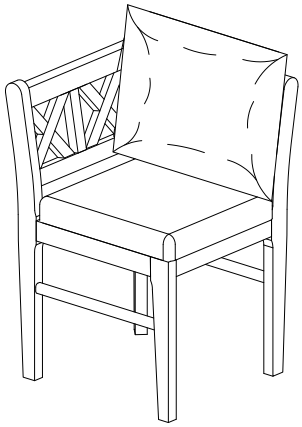

Parts List


Label	Picture	Description	QTY
Ⓐ		Chair Back	1
Ⓑ		Side Frame	1
Ⓒ		Side Apron	1
Ⓓ		Apron	1
Ⓔ		Frame	1
Ⓕ		Cushion Seat	1
Ⓖ		Cushion Back	1

Hardware

Label	Picture	Description	QTY
①		Bolt (M6x45)	5
②		Bolt (M6x30)	3
③		Curved Washer	2
④		Screw (3x15)	8
⑤		L-bracket	4
⑥		Allen Wrench	1

Assembly Preparation


Before Beginning Assembly :

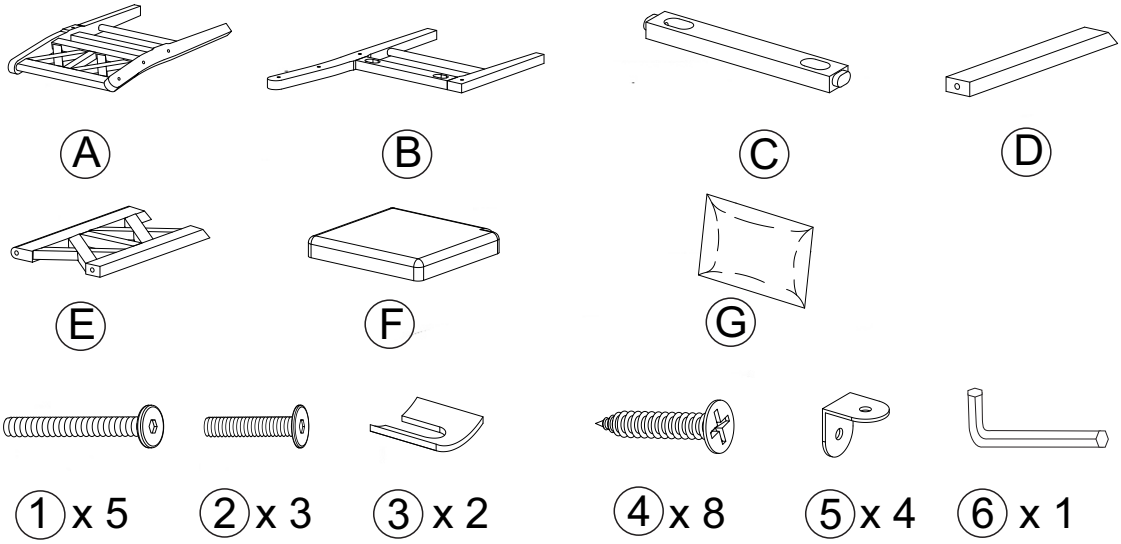

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-


Assembly Steps

Overview

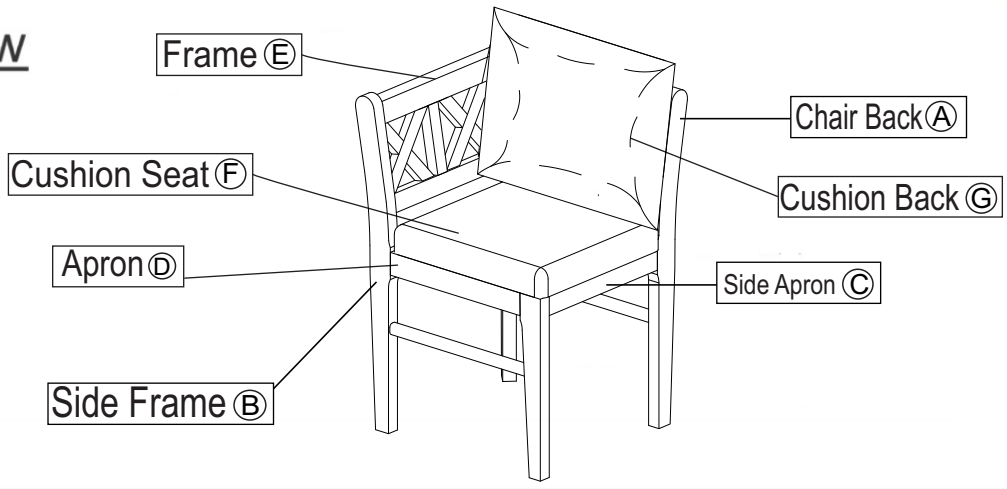


This chair has multiple parts and may require up to 30 minutes to assemble. The picture above provides an overview of the chair parts to help you visualize and understand each component. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Step1

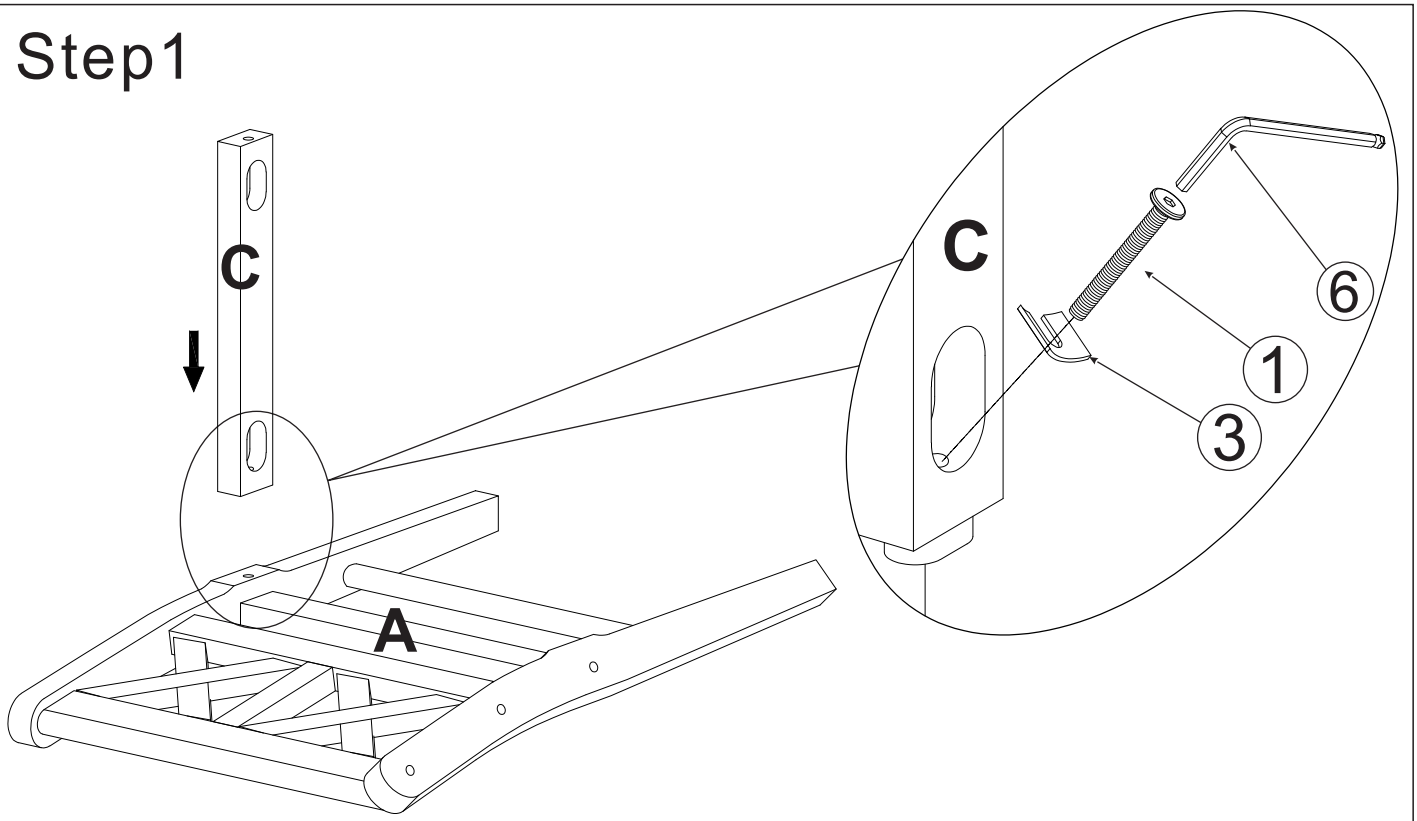


Attach Side Apron Ⓒ to the Chair Back Ⓐ using the Allen Wrench ⑥ , Bolt ①, and Curved Washer ③.

Step2

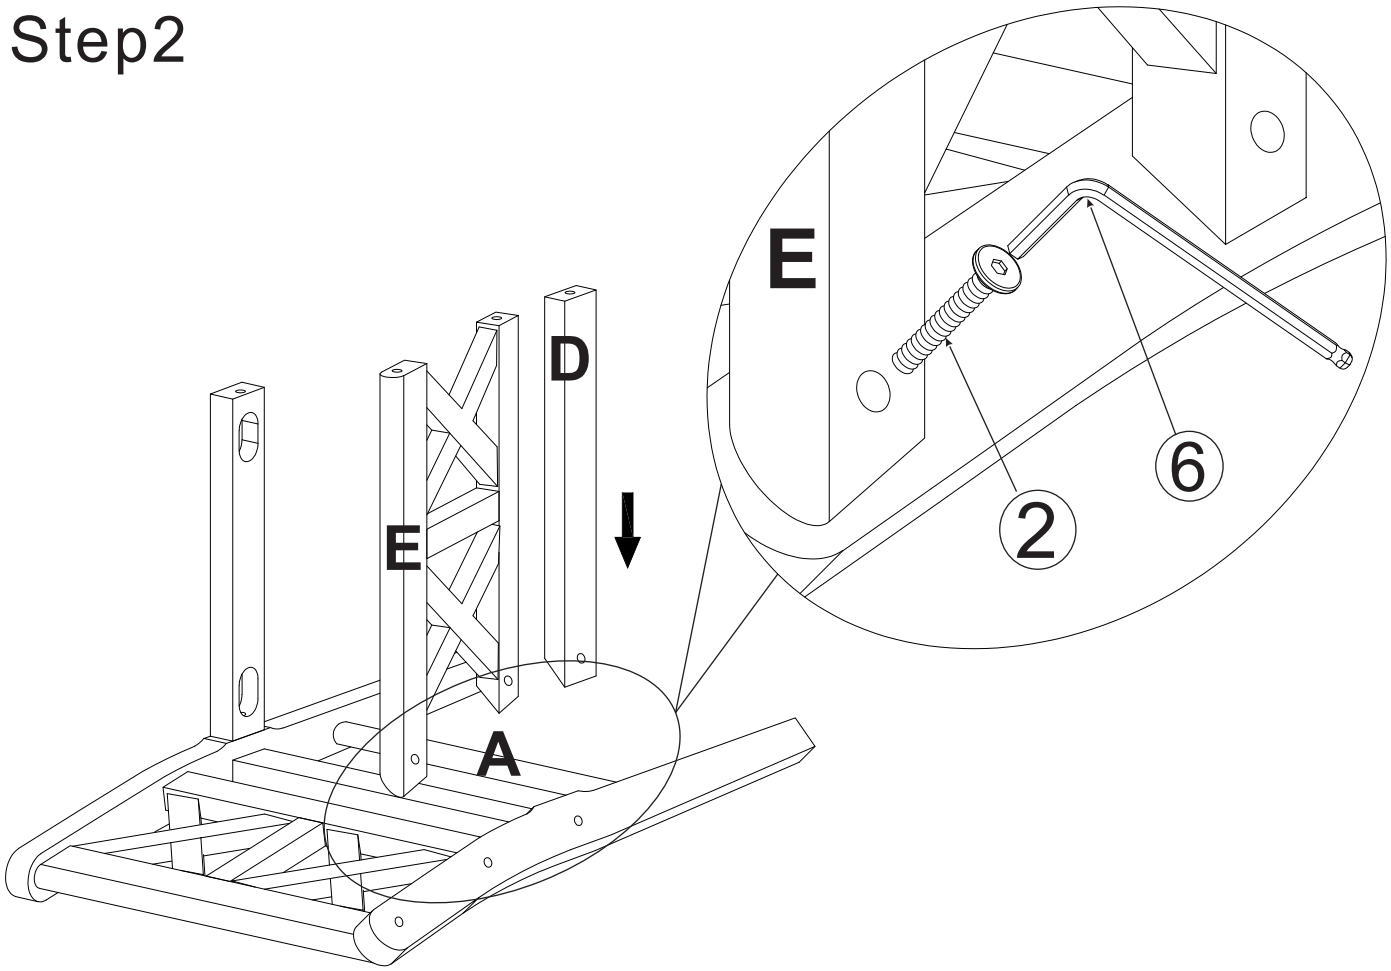


Attach Frame Ⓔ and Side Apron Ⓓ to the Chair Back Ⓐ using the Allen Wrench ⑥ , Bolt ②.

Step3

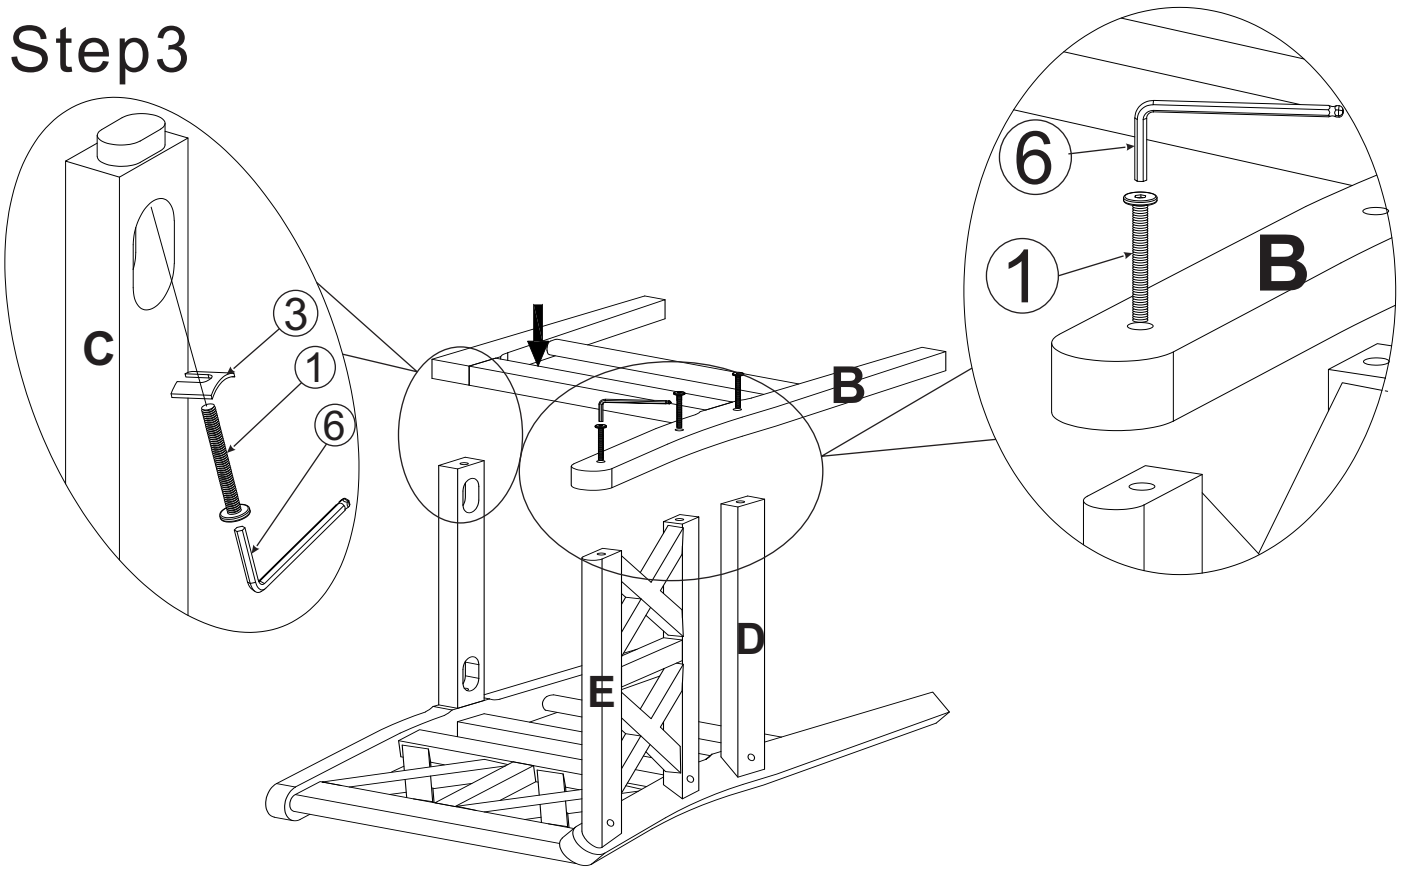


Attach Side Apron Ⓒ to the Side Frame using the Allen Wrench ⑥ , Bolt ①, and Curved Washer ③. Attach Frame Ⓔ and Side Apron Ⓓ to the Side Frame using the Allen Wrench ⑥ , Bolt ①.


Step4

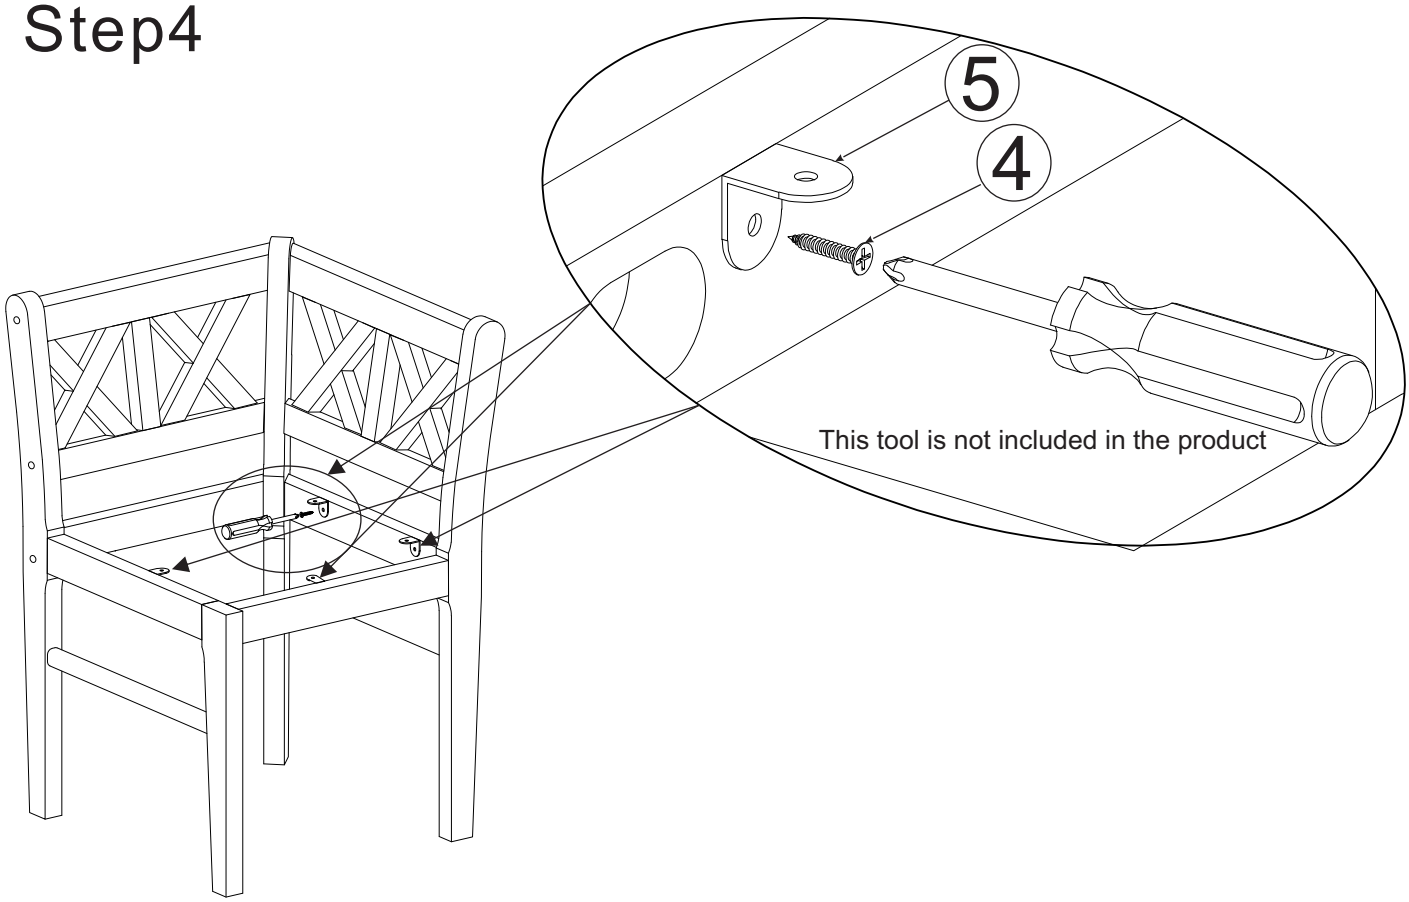

Attach L-bracket ⑤ to the Side Apron using the assembly tools required (Not Included), Screw ④


Step5

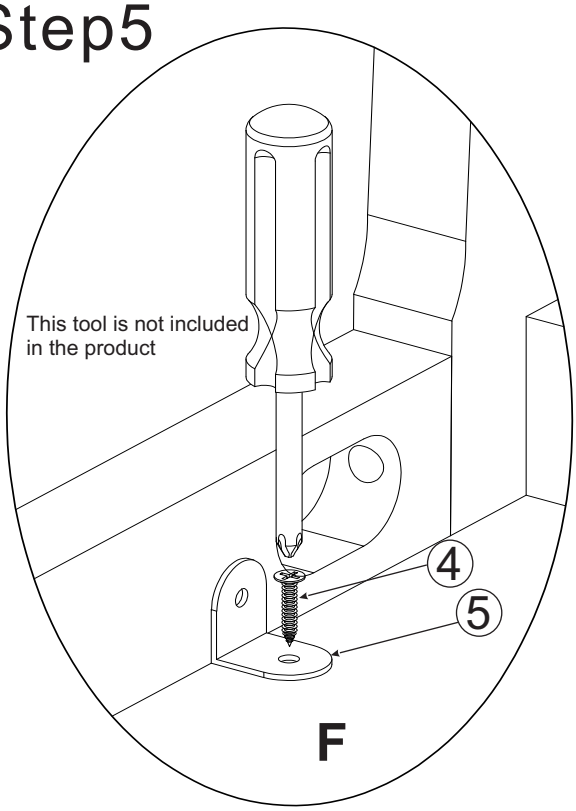

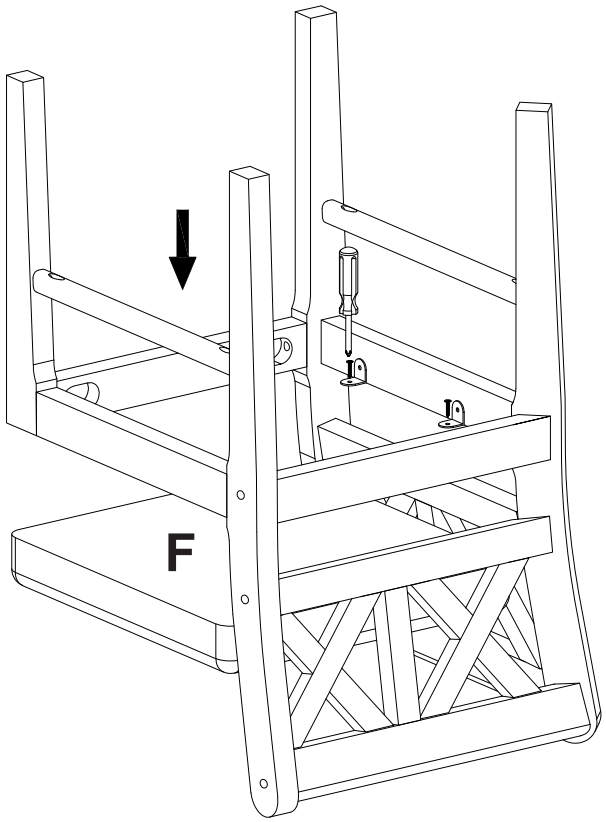


Attach Cushion Seat Ⓕ to the chair frame using the assembly tools required (Not Included), Screw ④, L-bracket ⑤.

Step6

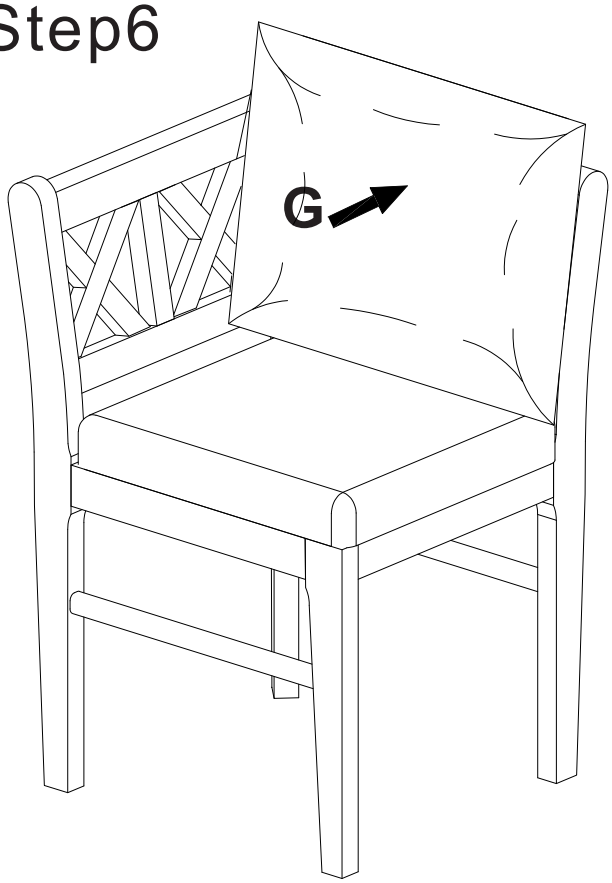

Step7

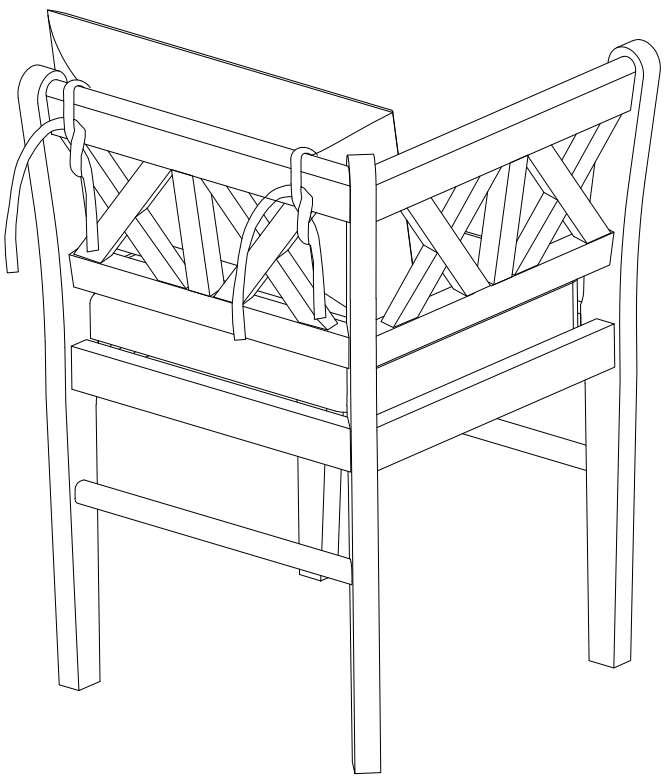

Attach Cushion Back Ⓖ to the Chair Back and tie the rope as shown.