


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

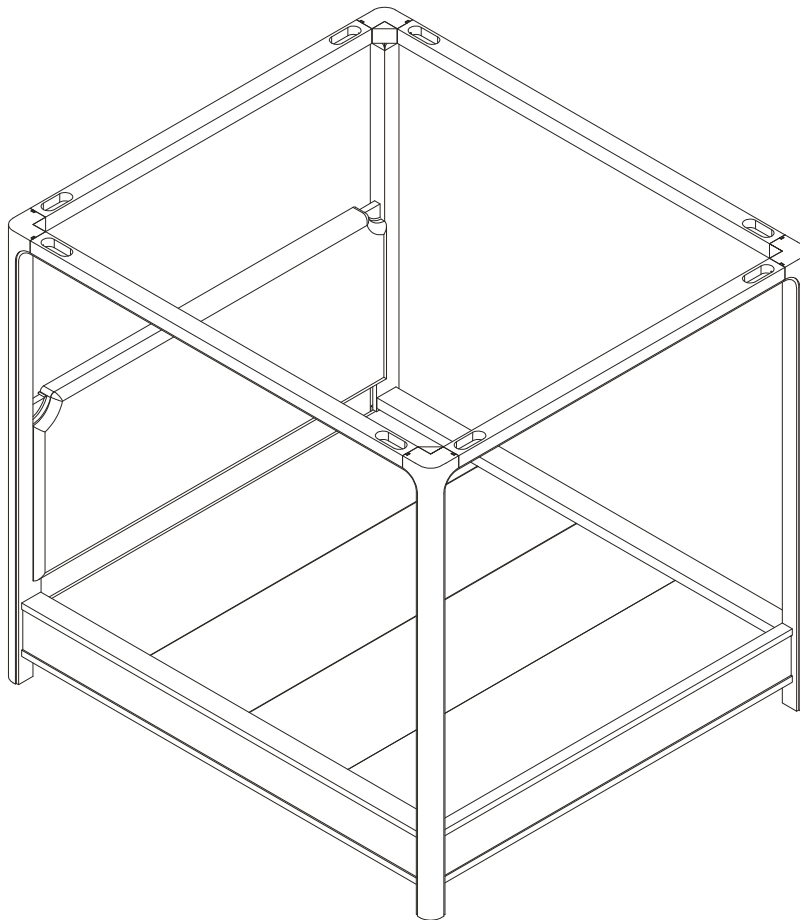

Fine Furniture for every stage of life

222520KW(B1-B3)
California King Bed

ITEM: 222520KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.







ASSEMBLY TIME


30 MINUTES

PARTS IDENTIFICATION





B1 (BOX 1)

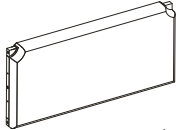A	HEADBOARD PANEL		1PC
B	HEADBOARD BOTTOM RAIL		1PC
C	FOOTBOARD		1PC
D	CONCEAL PANEL		4PCS

B2 (BOX 2)

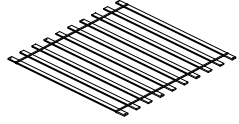E	BED RAIL		2PCS
F	ROLL SLAT (10 PCS)		1SET
G	CENTER RAIL		1PC
H	CENTER RAIL SUPPORT WITH LEVELER		4PCS

B3 (BOX 3)

I	LEFT HEADBOARD POST WITH LABEL "I"		1PC
J	RIGHT HEADBOARD POST WITH LABEL "J"		1PC
K	LEFT FOOTBOARD POST WITH LABEL "K"		1PC
L	RIGHT FOOTBOARD POST WITH LABEL "L"		1PC
M	CANOPY SHORT RAIL WITH LABEL "M"		2PCS
N	CANOPY LONG RAIL WITH LABEL "N"		2PCS

ITEM: 222520KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222520KW(B1)

1	LONG BOLT (5/16" x 50mm - BLK)		12PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		12PCS
3	FLAT WASHER (2 x 19mm - BLK)		8PCS
4	CURVE WASHER (2 x 27mm - BLK)		4PCS
5	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
6	WOOD DOWEL (10 x 40mm - BRW)		12PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222520KW(B2)

2	LOCK WASHER (1.6 x 14mm - BLK)		4PCS
3	FLAT WASHER (2 x 19mm - BLK)		4PCS
7	SHORT BOLT (5/16" x 19mm - BLK)		4PCS
8	SHORT THREADED BOLT (5/16" x 80mm - WHT)		8PCS
9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
11	WRENCH (13mm - WHT)		1PC
12	FLAT HEAD SCREW (8 x 32mm - BLK)		8PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222520KW(B3)

9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
13	LONG THREADED BOLT (5/16" x 150mm - WHT)		8PCS


NOTE :

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 222520KW(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

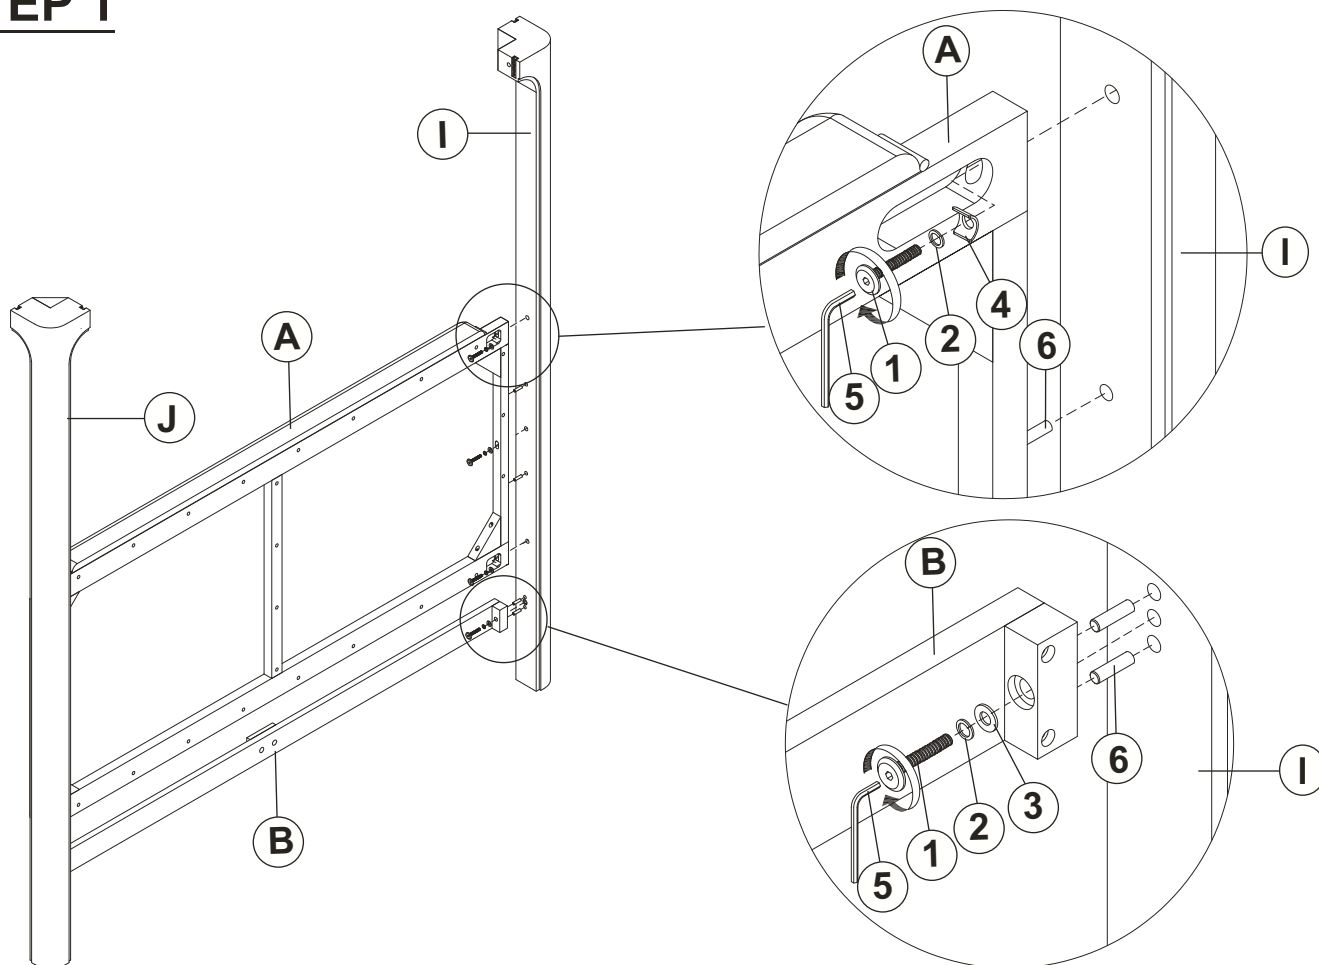

STEP 2

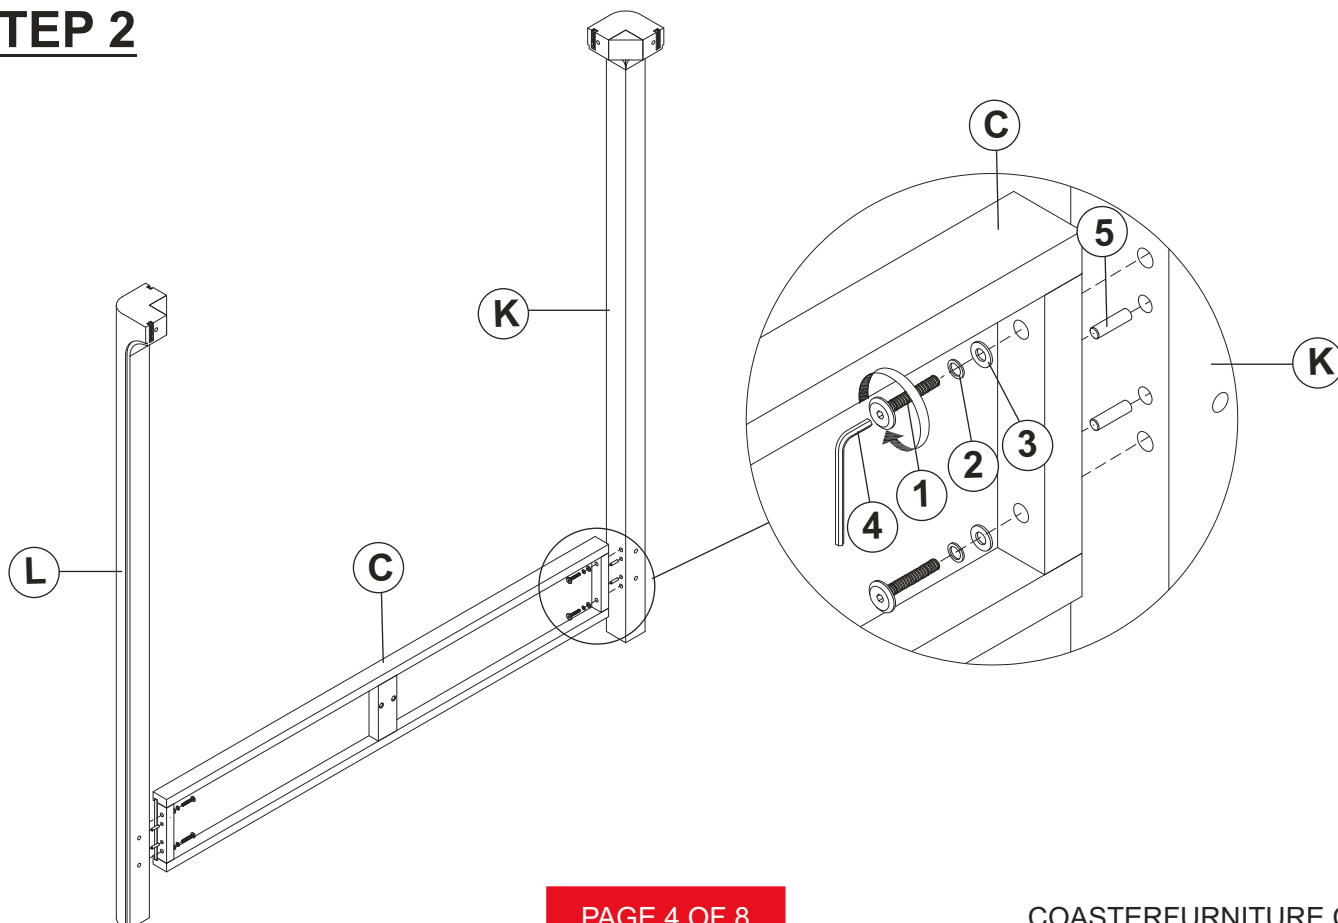


ITEM: 222520KW(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 3

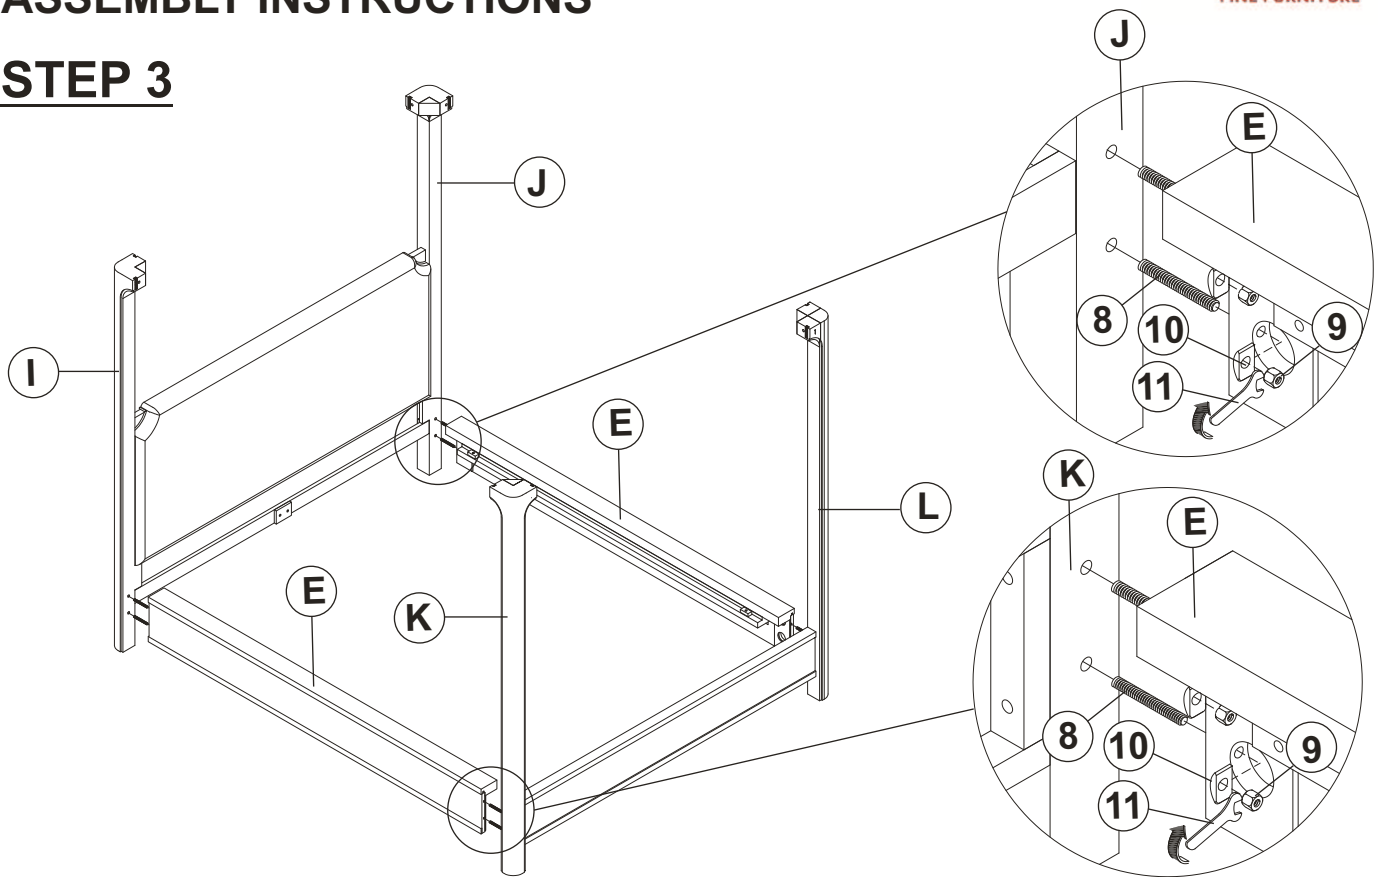

STEP 4

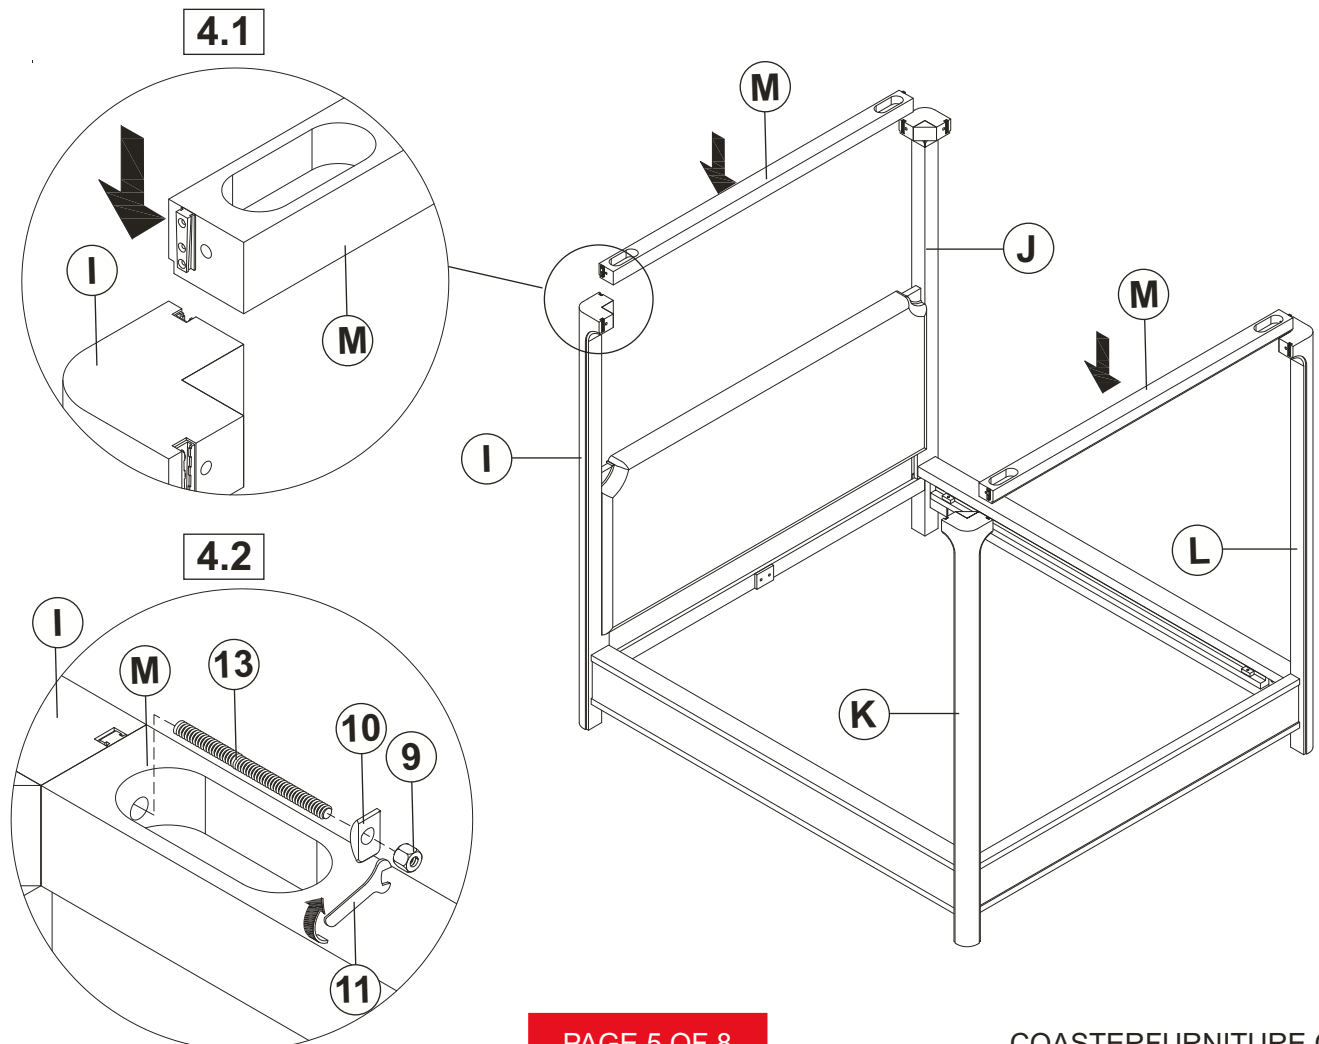


ITEM: 222520KW(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 5

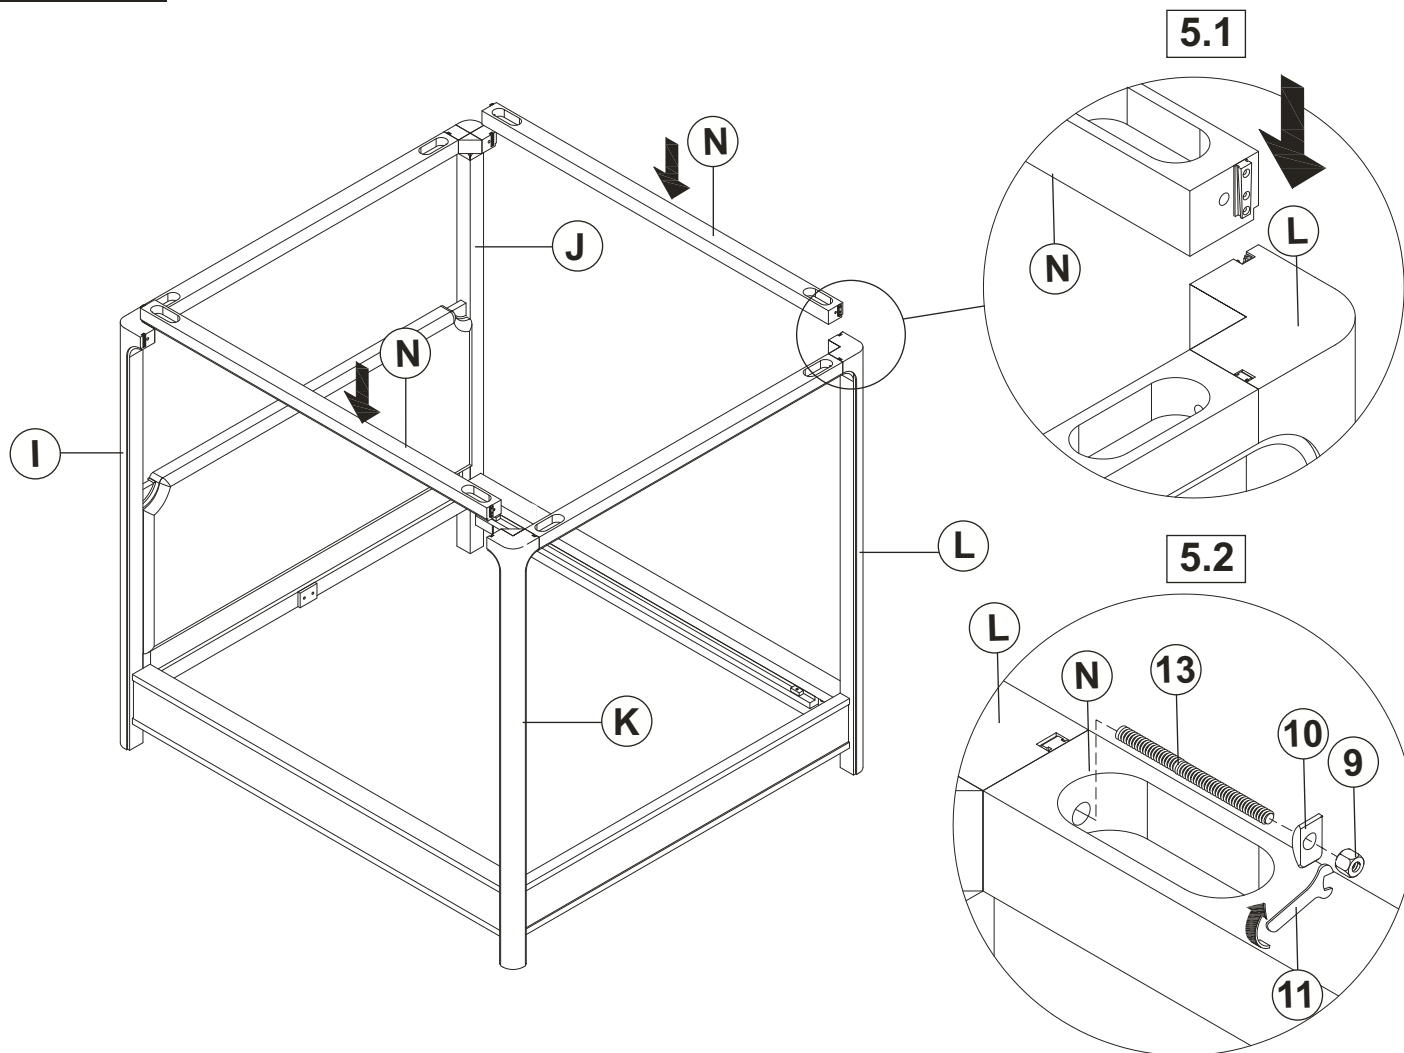

STEP 6

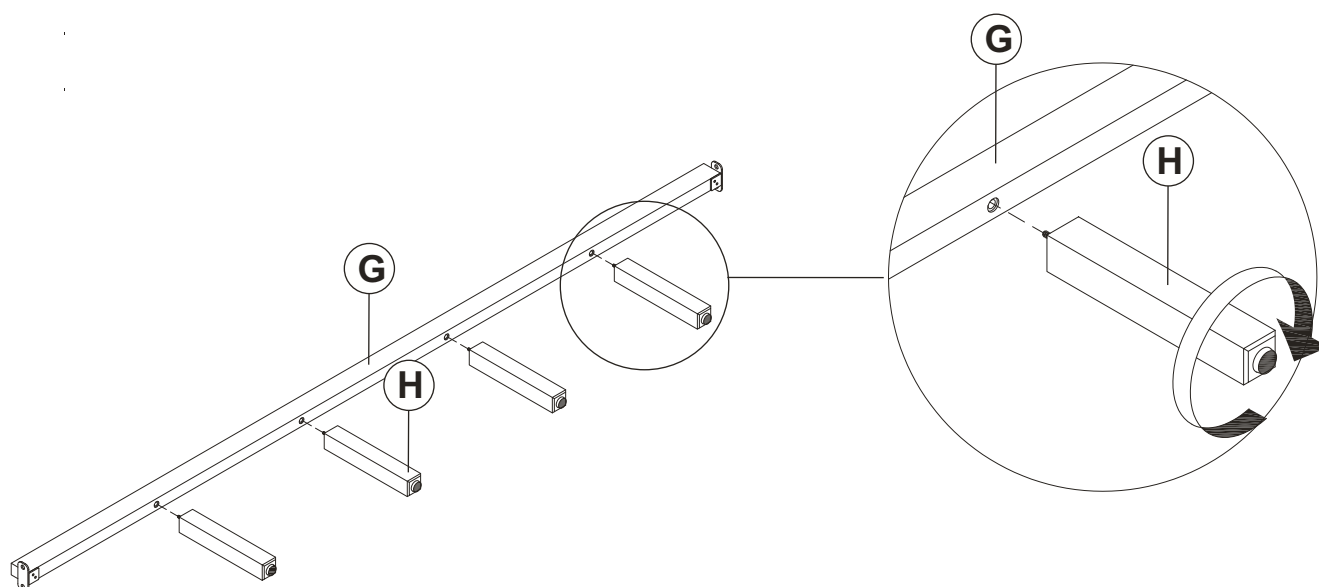


ITEM: 222520KW(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 7

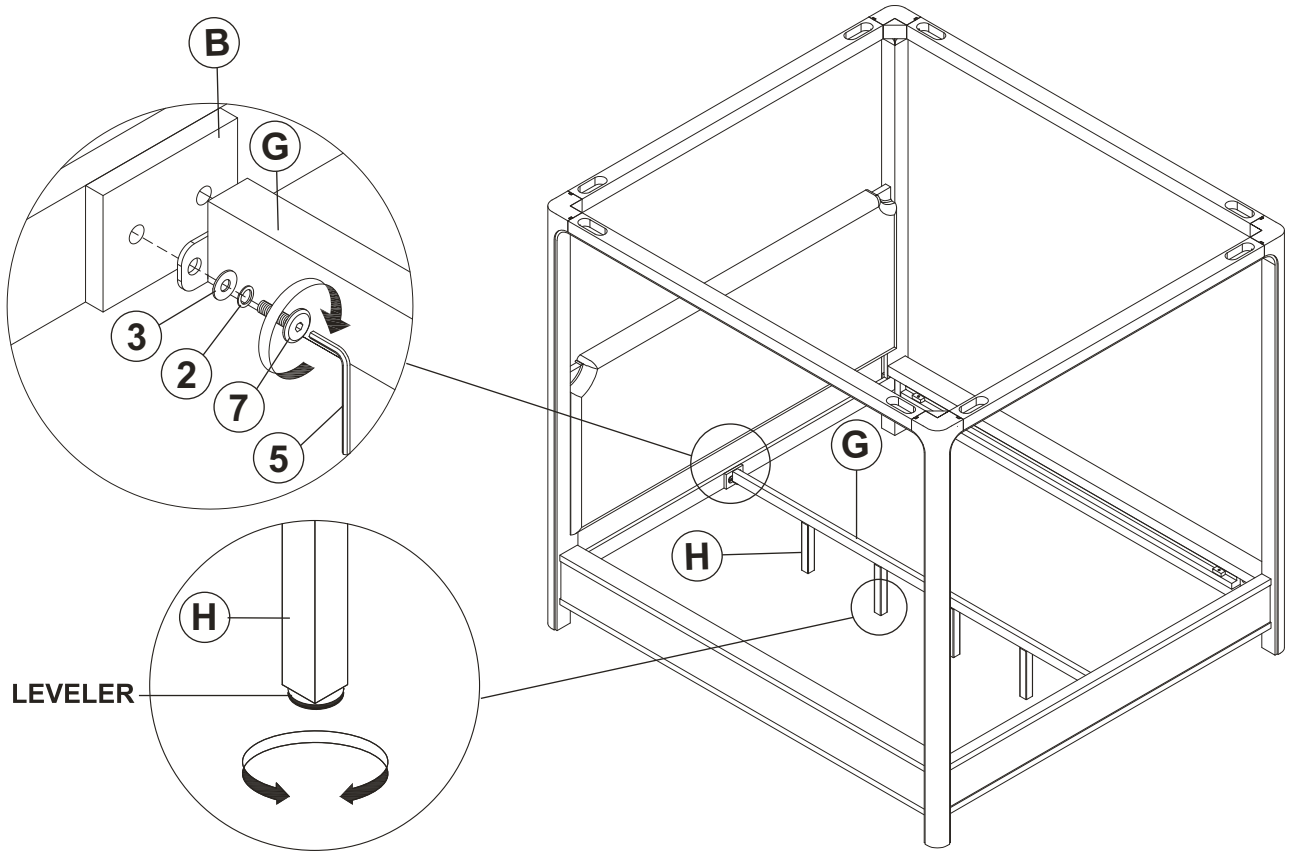

STEP 8

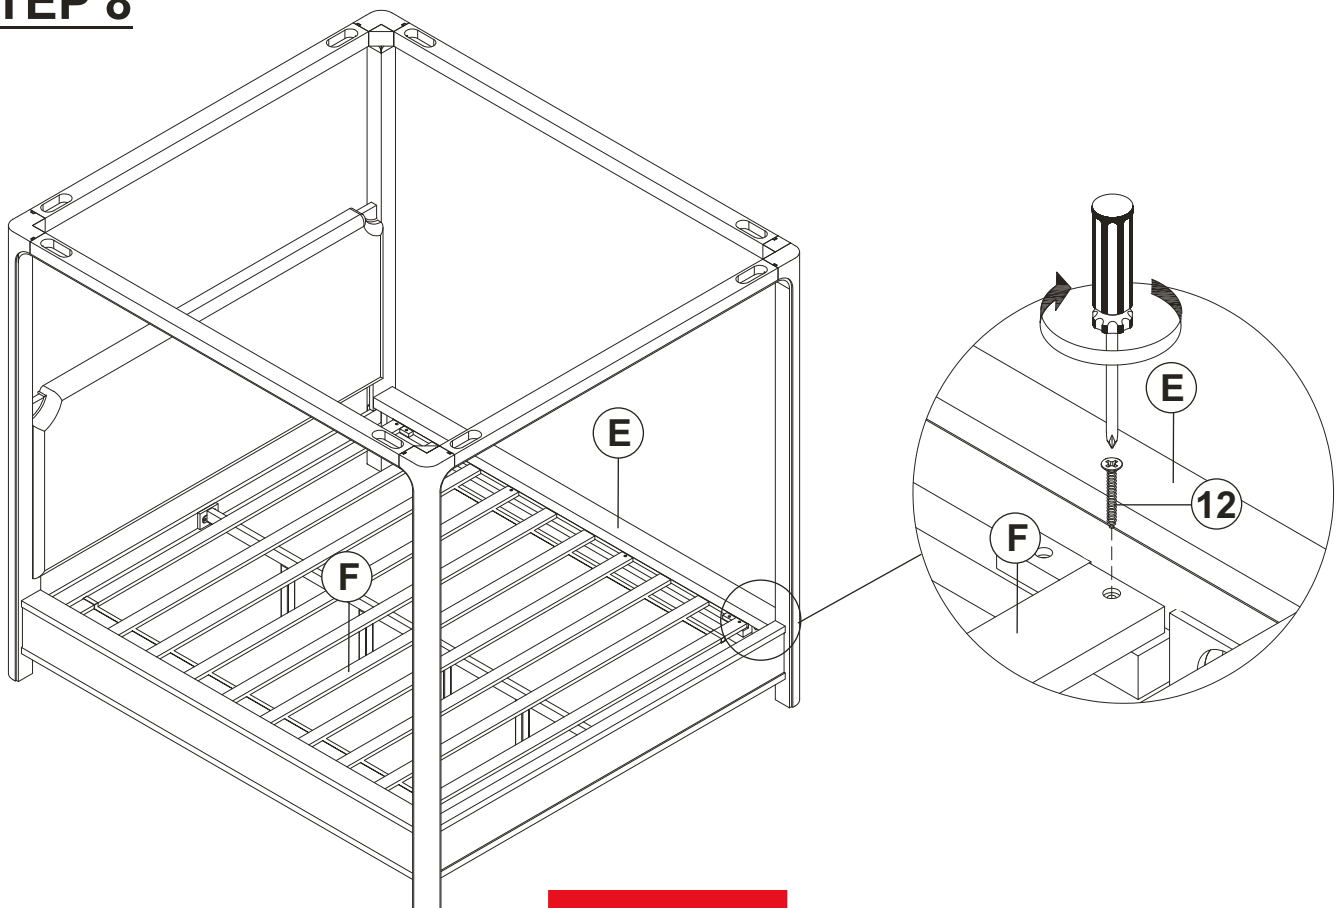


ITEM: **222520KW(B1-B3)**



ASSEMBLY INSTRUCTIONS



STEP 9

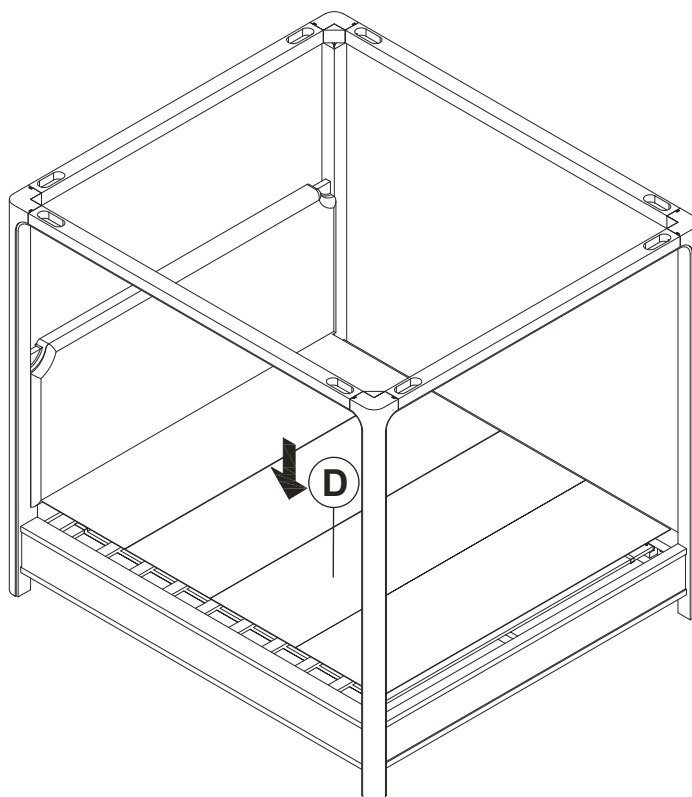


STEP 10 COMPLETE

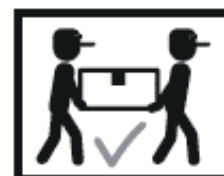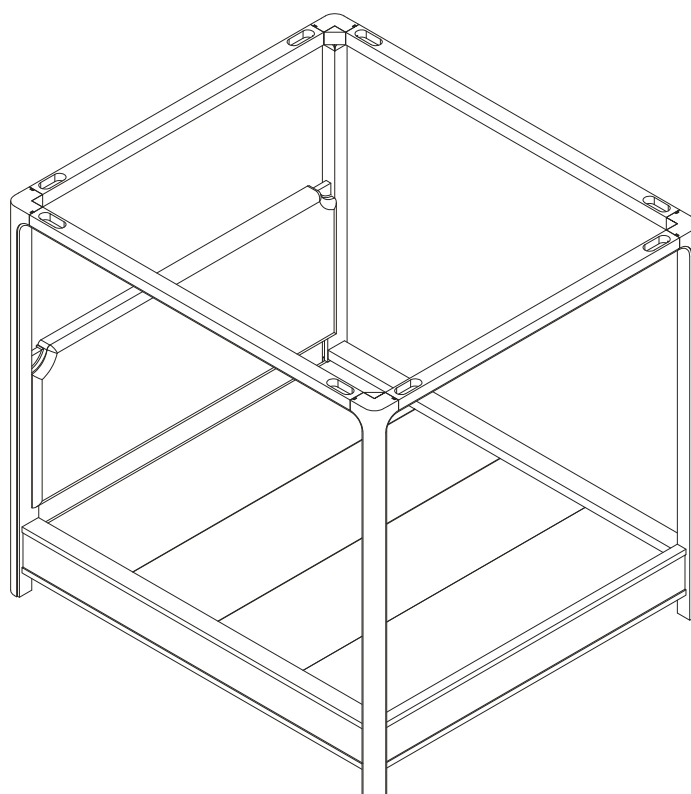

ITEM: **222520KW(B1-B3)**



Inner Size : 73.00"W x 86.00"D

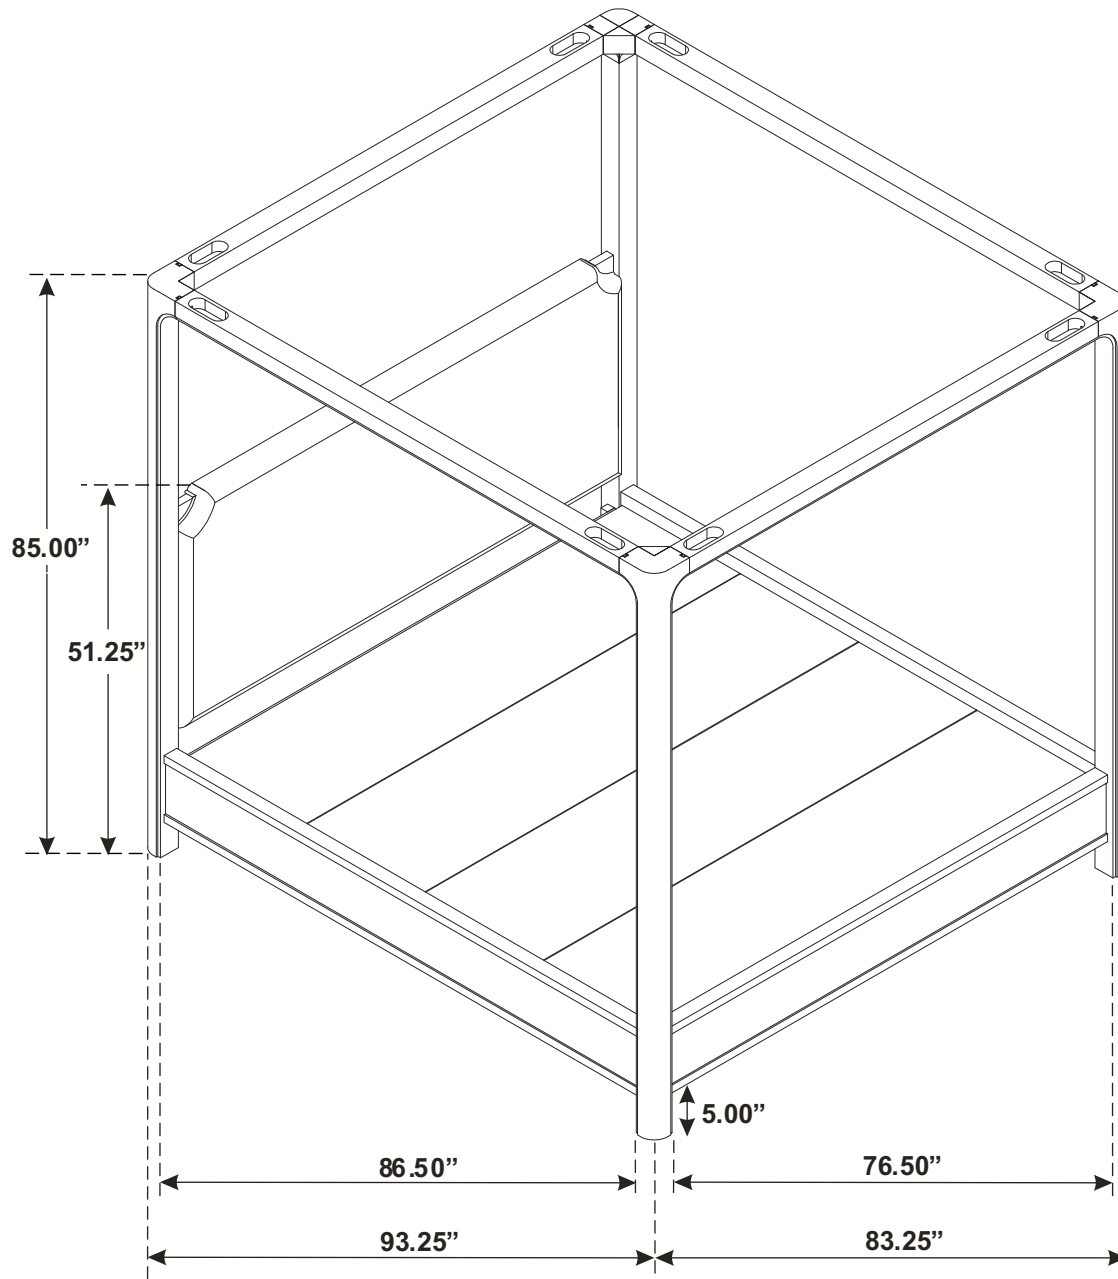

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222522
Nightstand

ITEM: **222522**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PART IDENTIFICATION



A NIGHTSTAND

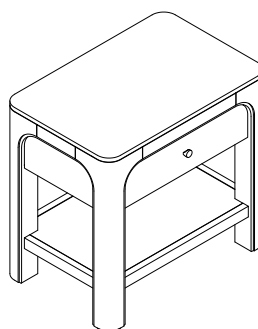

1 PC

ASSEMBLY INSTRUCTIONS

STEP 1 COMPLETE

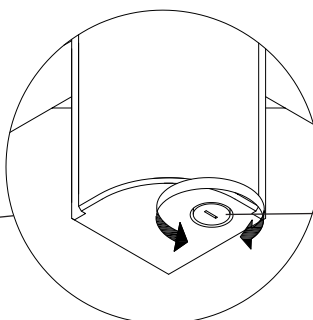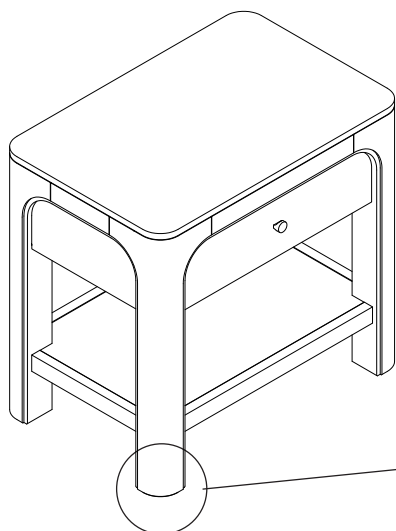


LEVELER



ITEM: **222522**



Inner Size of Drawer : 19.25"W x 12.75"D x 2.75"H x 0.50"T

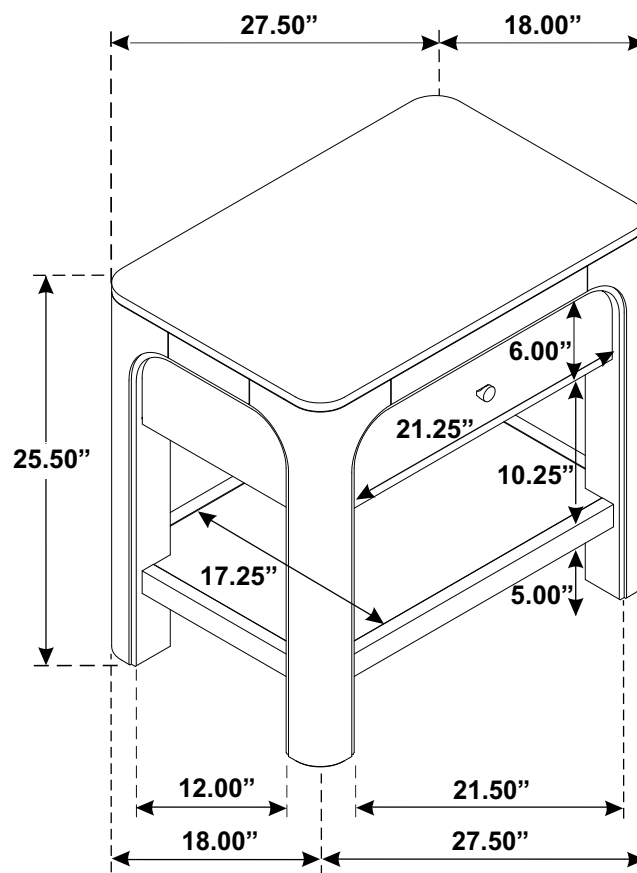

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222523
Dresser

ITEM: **222523**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PART IDENTIFICATION



A DRESSER

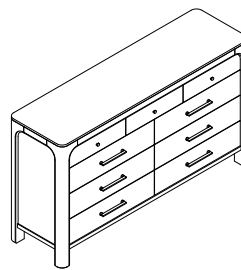

1 PC

ASSEMBLY INSTRUCTIONS

STEP 1 COMPLETE

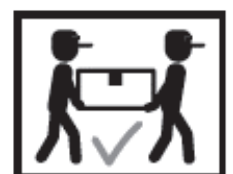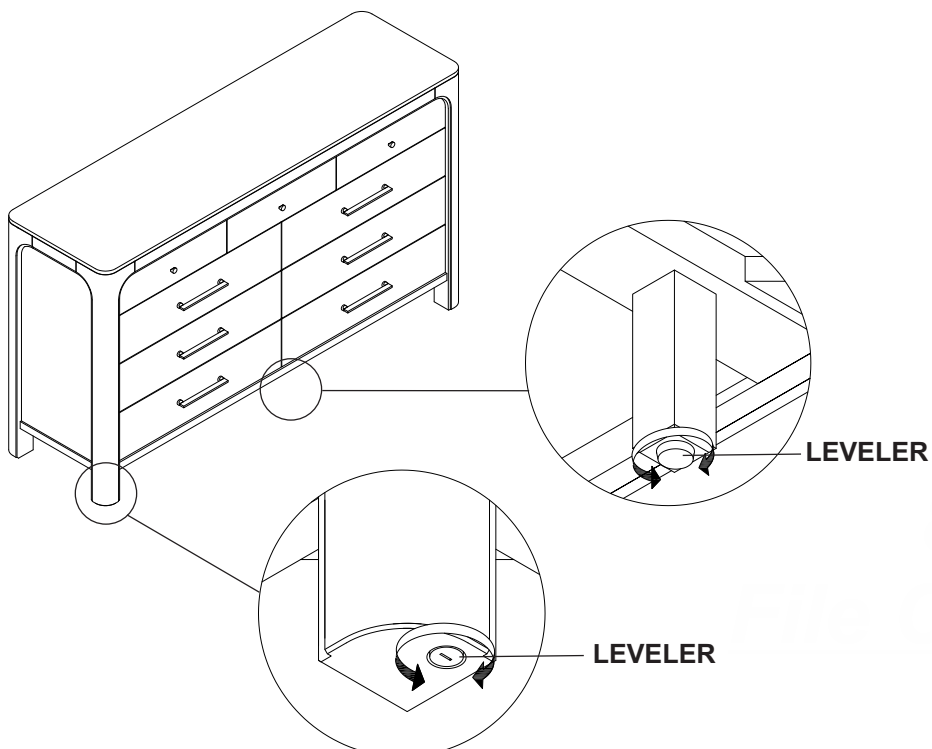

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

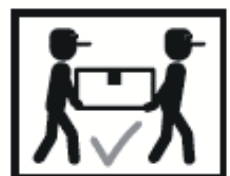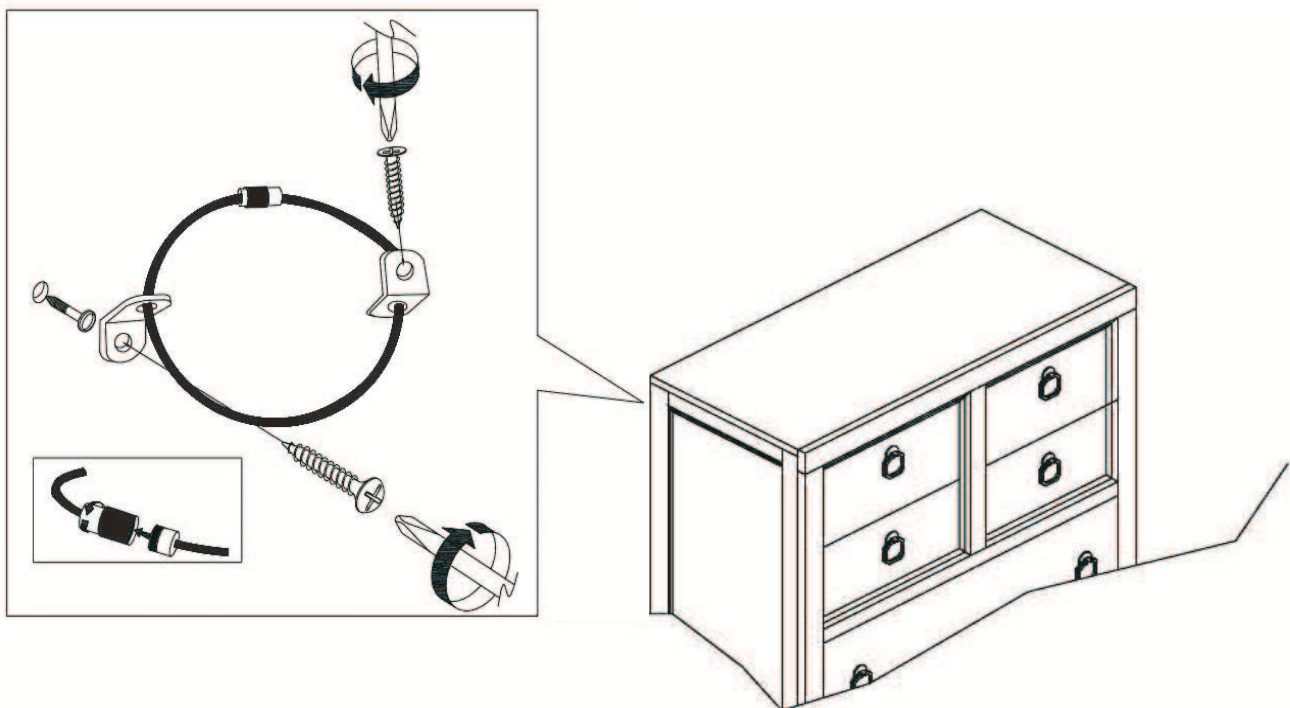

ITEM: **222523**



Inner Size of Drawer A : 18.50"W x 12.75"D x 3.25"H x 0.50"T
Inner Size of Drawer B : 18.00"W x 12.75"D x 3.25"H x 0.50"T
Inner Size of Drawer C : 29.25"W x 12.75"D x 5.50"H x 0.50"T

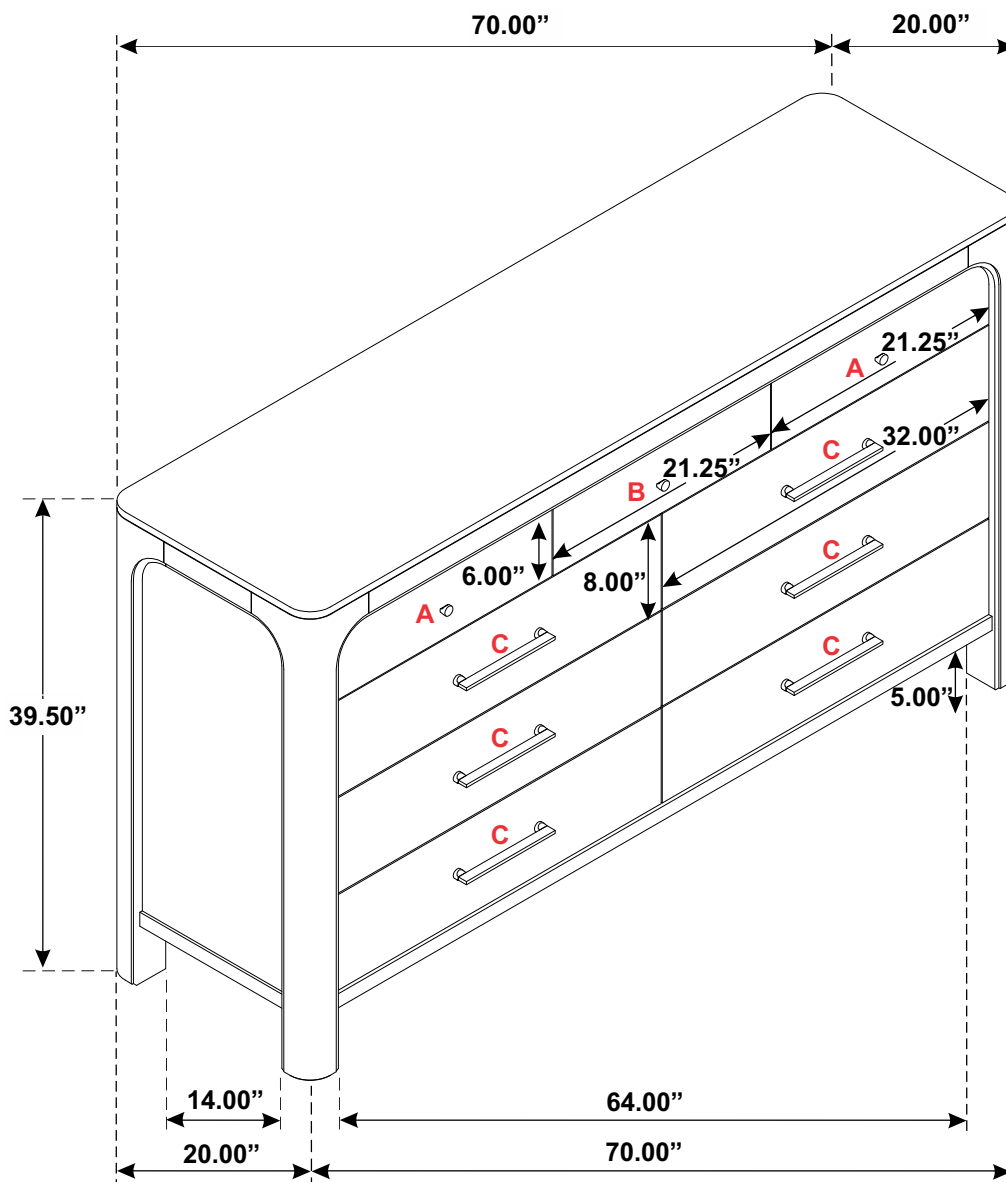

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222524
Mirror

ITEM: **222524**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

- A** **DRESSER**
FROM BOX ITEM 222523



1PC

- B** **MIRROR**



1PC


- C** **MIRROR SUPPORT**
(PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

- 1** **BOLT**
(5/16" x 35mm - BLK)



8PCS

- 2** **LOCK WASHER**
(1.6 x 14mm - BLK)



8PCS

- 3** **FLAT WASHER**
(2 x 19mm - BLK)



8PCS

- 4** **ALLEN WRENCH**
(M5 x 65mm - BLK)




1PC


ITEM: **222524**

ASSEMBLY INSTRUCTIONS


STEP 1

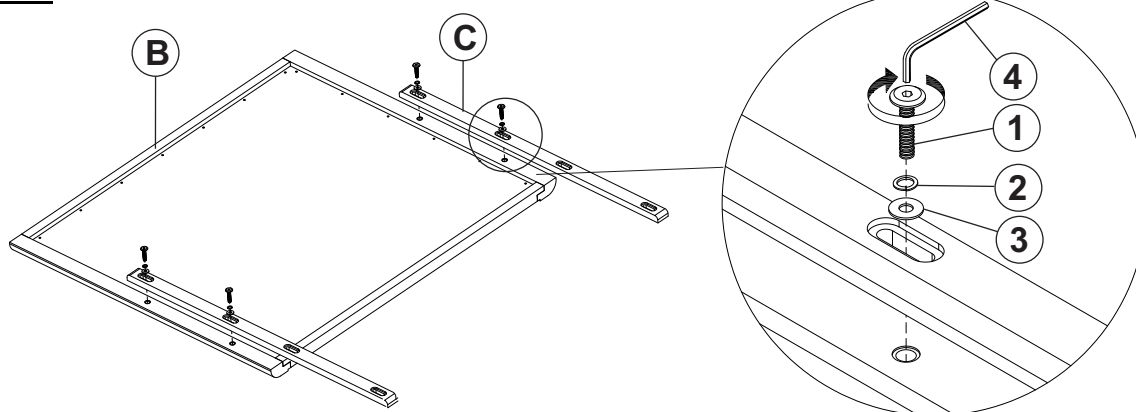


STEP 2

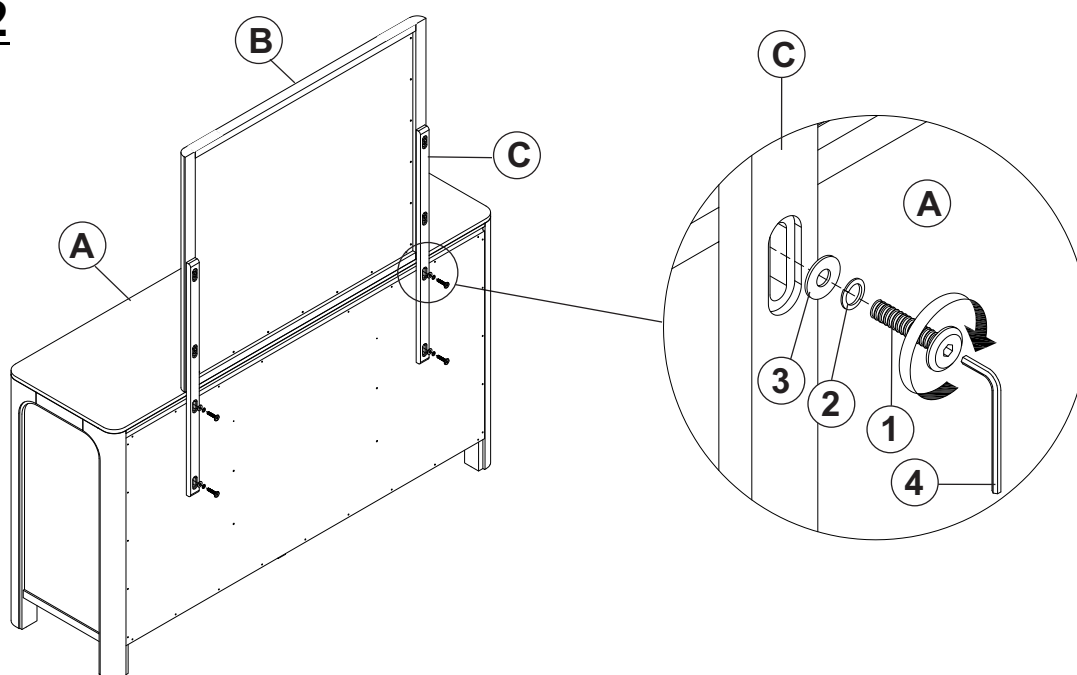

STEP 3 **COMPLETE**

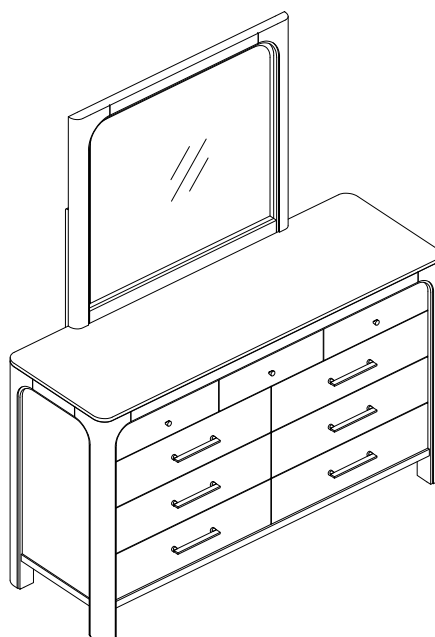

ITEM: **222524**

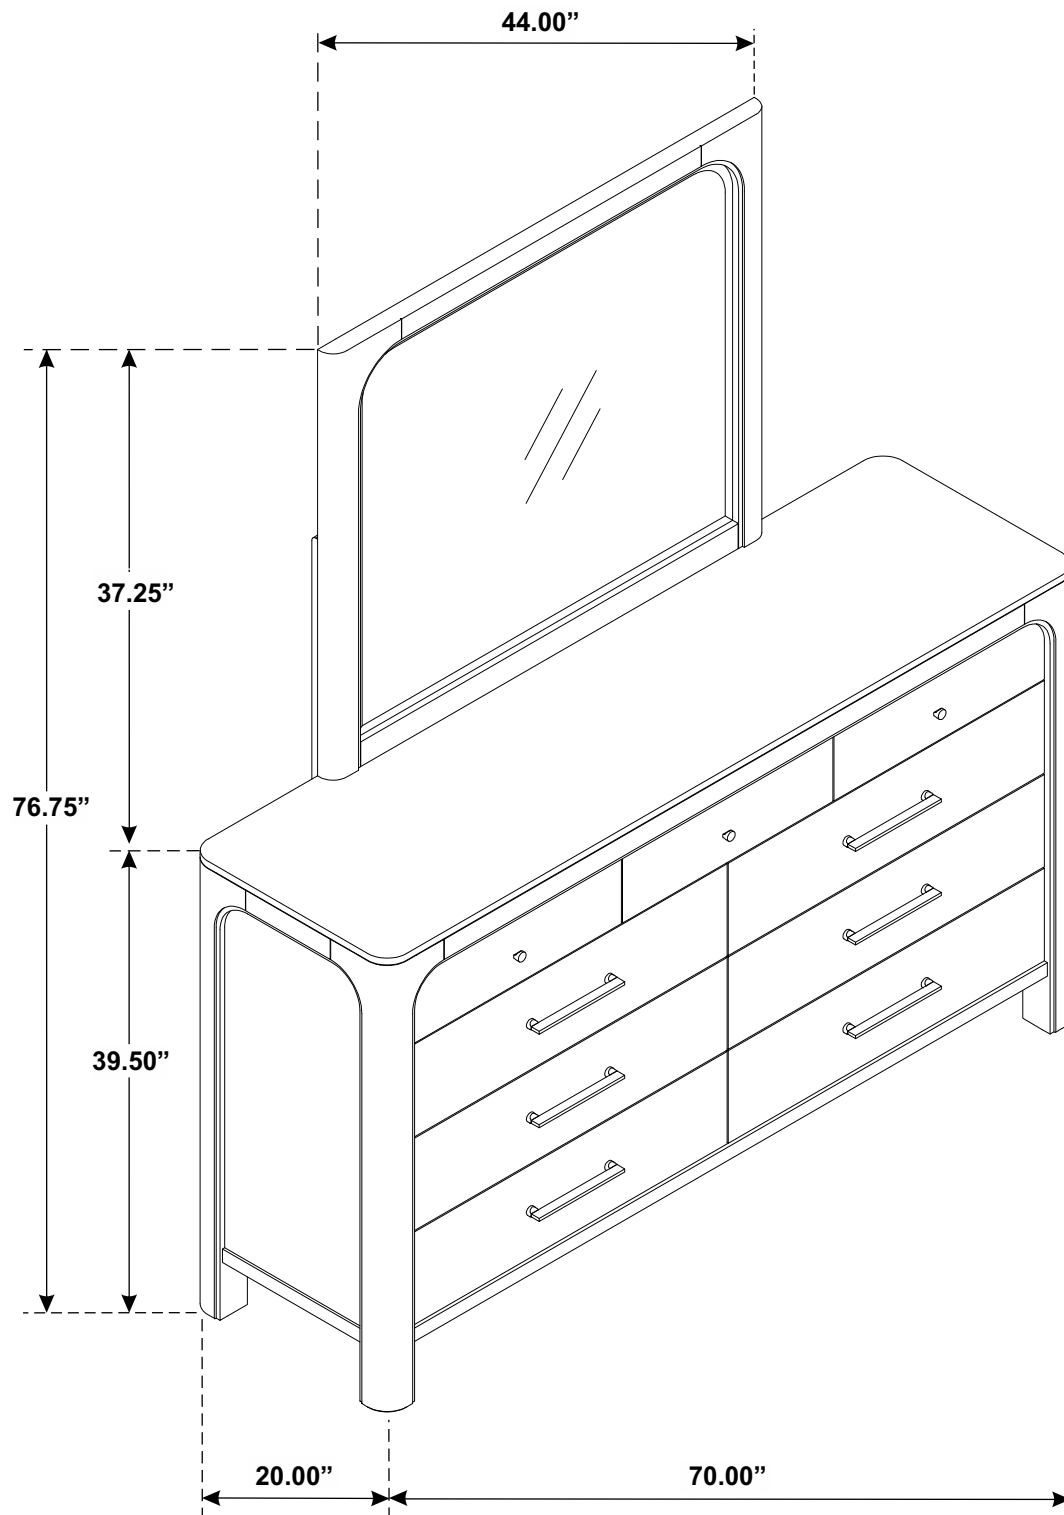

Note: Dimension tolerance $\pm 5\%$