



# MEASURING GUIDE

## FOR BOX SEAT FURNITURE (ONE, TWO, AND THREE PIECE SLIPCOVERS IN FORM FIT AND RELAXED FIT FABRICS)



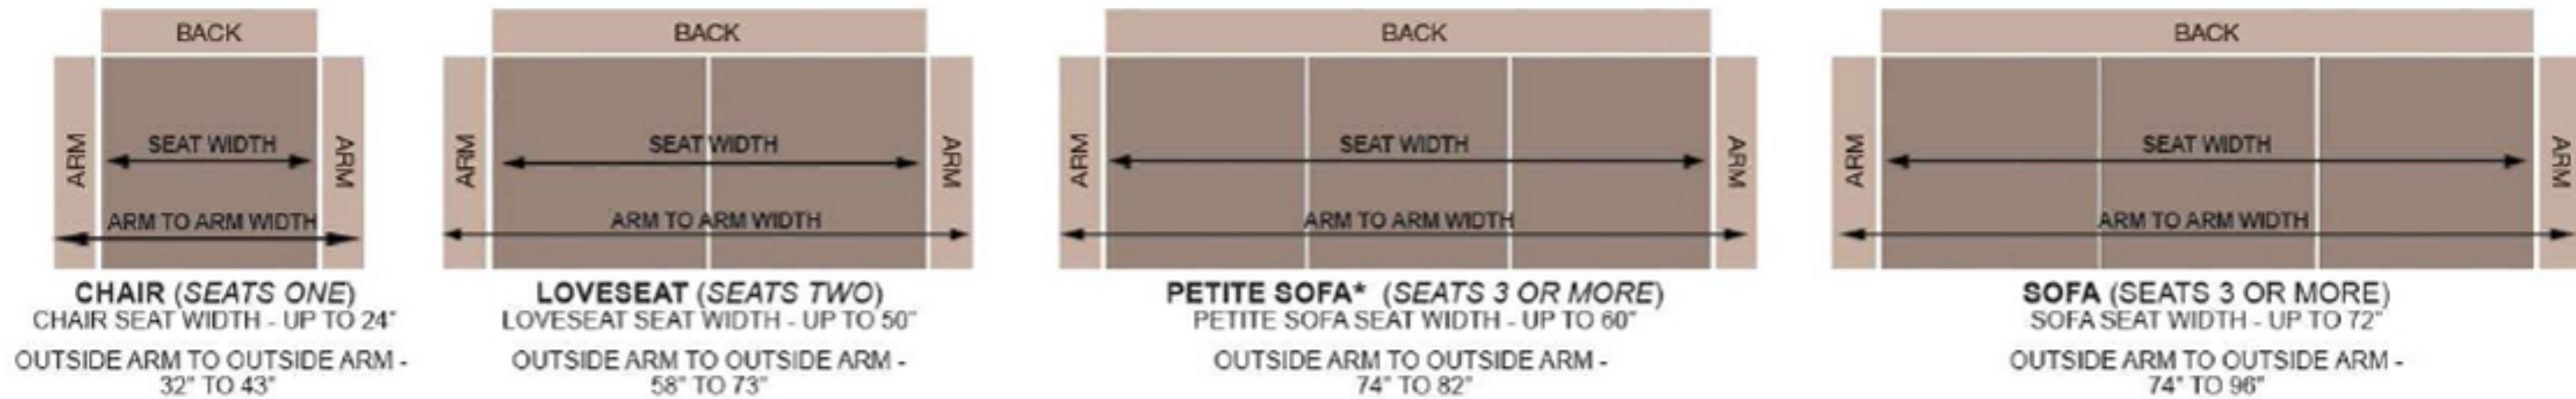


\* PETITE SOFA COVERS AVAILABLE ONLY IN SELECT, RELAXED FIT BOX SEAT COLLECTIONS.

## FOR T-CUSHION FURNITURE (ONE, TWO, AND THREE PIECE SLIPCOVERS IN FORM FIT AND RELAXED FIT FABRICS)

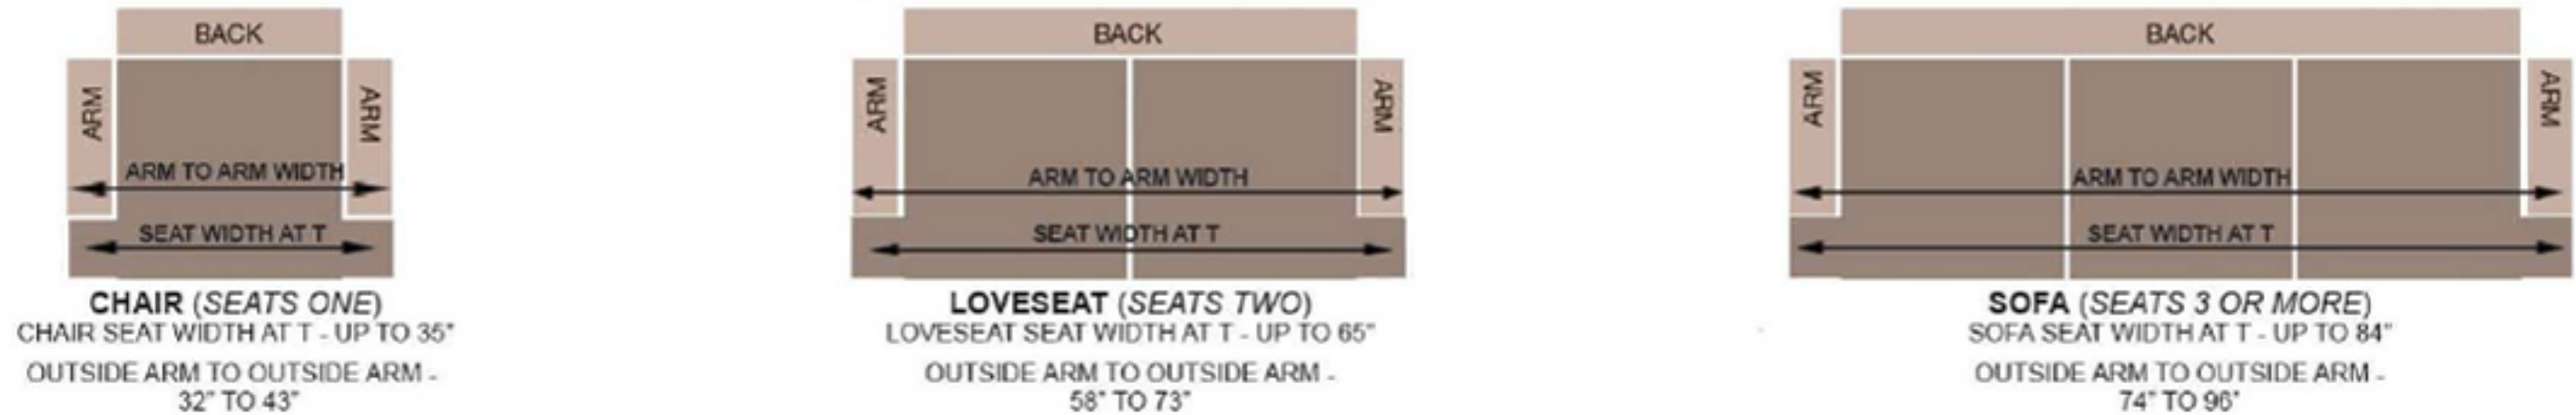


## FOR WING CHAIRS

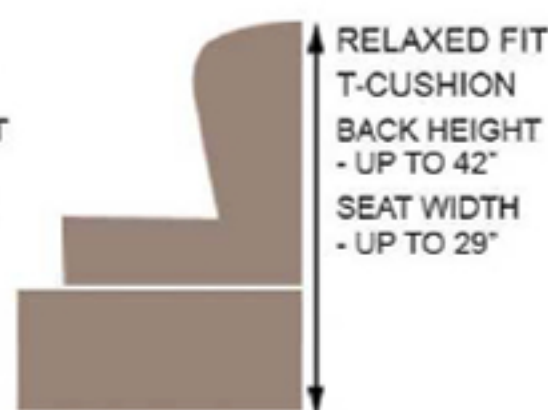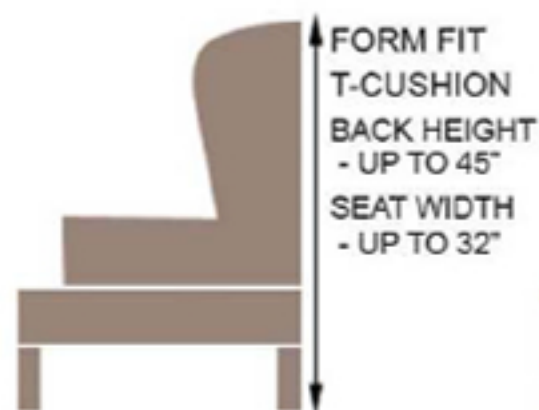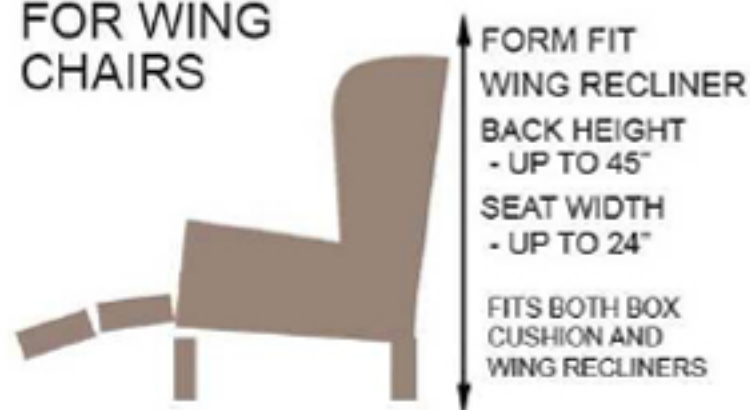


## FOR OTTOMANS

**FORM - UP TO 30"**  
MEASURE THE LONGEST SIDE OF OTTOMAN

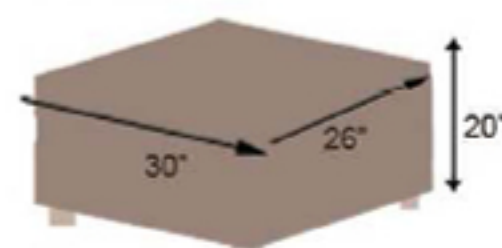

**RELAXED - UP TO 116"**  
MEASURE ALL 4 SIDES AND ADD TOGETHER.

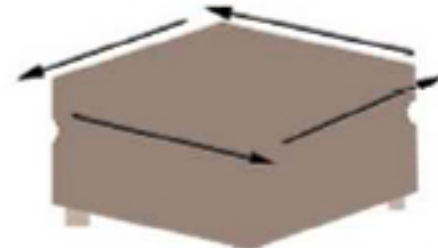


## FOR DINING CHAIR COVERS



## FOR RECLINERS

78" - 88"  
(MEASURE RECLINER AROUND THE ENTIRE BACK)

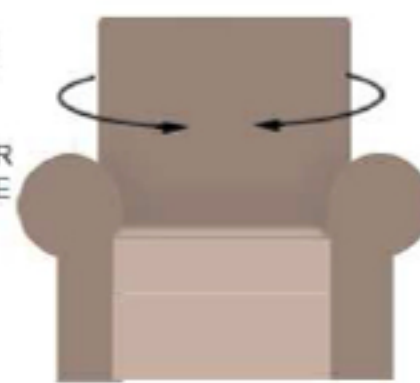

## FURNITURE COVERS

**DELUXE COVERS**  
CHAIR WIDTH - 26"  
LOVESEAT WIDTH - 52"  
SOFA WIDTH - 76"

**STANDARD COVERS**  
CHAIR WIDTH - 24"  
LOVESEAT WIDTH - 48"  
SOFA WIDTH - 70"

