Installing Your
Framed Mirror

FRAME MY MIRROR®
www.FrameMyMirror.com
800-331-6414

What's Included:

- 10 screws with wall anchors
- 2 T-bolts with wall anchors
- 1 security wrench (one per order)
- 2 hangrails

What You'll Need


- Hammer
- Drill with 1/4" and 3/16" drill bits
- Phillips head screwdriver
- Level


Step 1: Unpack and Prepare

First things first, let's ensure you have all the hanging hardware installed on the back of the frame in order to hang your framed mirror:

- 2 hangrails - one on width and height
- 4 security brackets - 2 on width and height
- 4 L-brackets - one on each corner

Your mirror has a hangrail secured on two sides, allowing you to hang it either horizontally or vertically. Decide which orientation you love best!

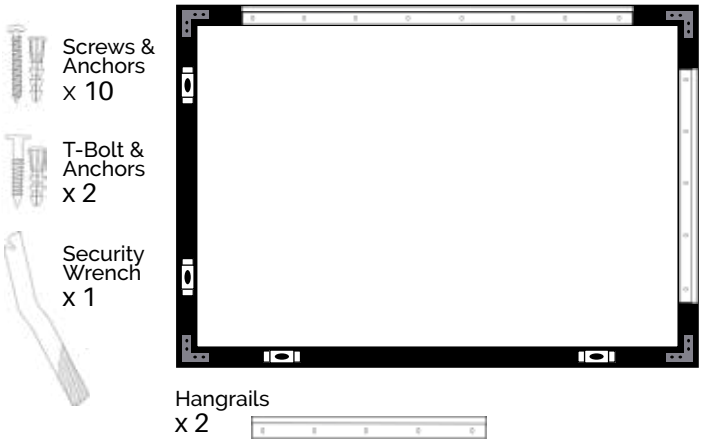

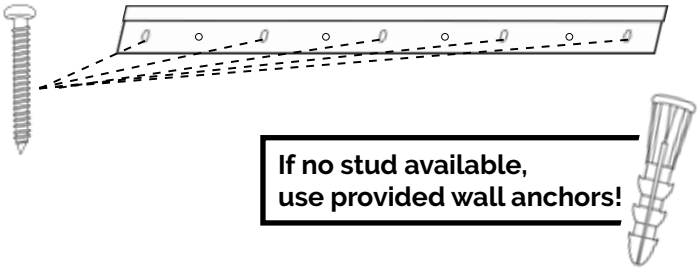

Step 2: Set Up the Hangrail


Choose your mirror's orientation and decide where you want it on the wall.

Install the hangrail at your chosen height, ensuring the screw holes point downwards. If you can, attach it to a wall stud for extra stability. If there is no wall stud available, use the included wall anchors. Be sure to use a 3/16" drill bit for this step to ensure the holes are the right size for the screws or the anchors.

Note: Install the screws in the oval openings on the hangrail - this will allow you to better level the mirror.


Step 3: Hang Your Mirror

Lower your mirror onto the hangrail, making sure **the hangrail on the back of the frame properly interlocks with the one on the wall.** It's crucial for the mirror's safety and stability that the hangrails are properly hooked.

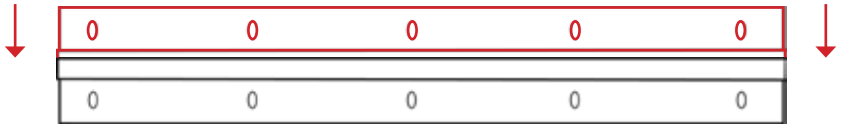

Step 4: Mark and Prep for Security

While your mirror is still hanging, **gently mark the wall** where the bottom edge of the frame meets the wall, ensuring you make this mark 6 inches in from both the left and right side of the frame. This will be your reference point for the security installation.

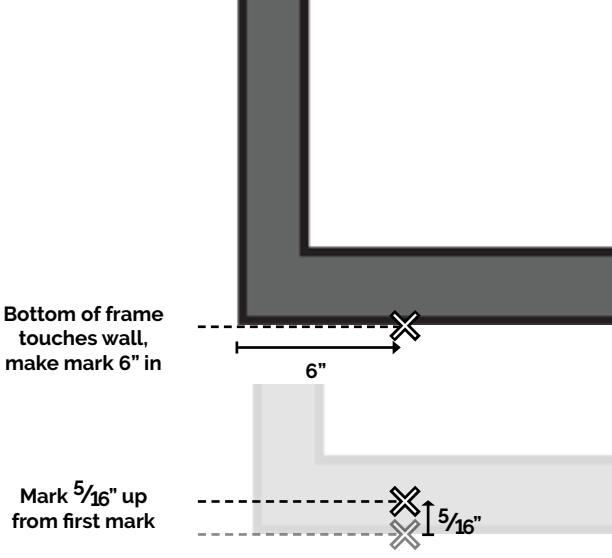


Next, carefully **remove the mirror from the wall**. From the marks you've just made, measure upward 5/16" and **mark this spot** as well. This is where you'll install the security T-Bolts.

Now, grab your 1/4" drill bit and **drill a hole at these new marks**. Insert the blue wall anchor into the holes. Following this, **insert the T-Bolts into the wall anchors**. Make sure the T-Bolts are positioned about 3/8" away from the wall, with the head laying horizontal. Ensure that no threads are visible once the T-Bolts are inserted. This precise positioning guarantees your mirror will hang securely and flush against the wall.



Step 5: Secure Your Mirror


Rehang your mirror, guiding the T-Bolts into the frame's security brackets on the back of the frame. This step is crucial for the initial securing of your mirror.

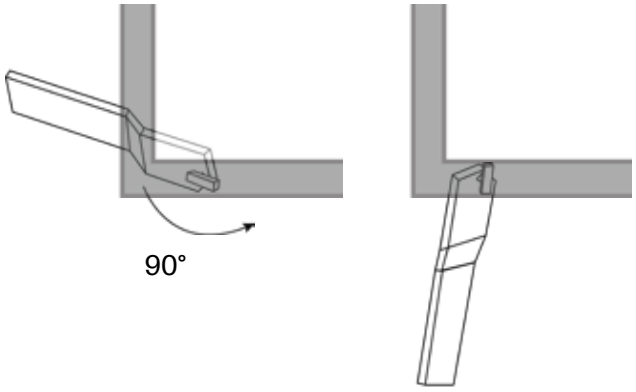

Attempt to use the provided security wrench to locate the T-Bolt behind the frame and turn it 90 degrees. **This action locks the mirror in place, providing extra security. However, if you find it challenging to turn the T-Bolt, don't worry!** As long as the T-Bolt has slid into the bracket, your mirror is securely hung. The turning and locking of the bolt offers additional security and is recommended if possible, but not being able to turn the bolt does not compromise the primary stability of the mirror.

You did it!

Now that your framed mirror is hung safely and securely, you can enjoy it for many years to come!

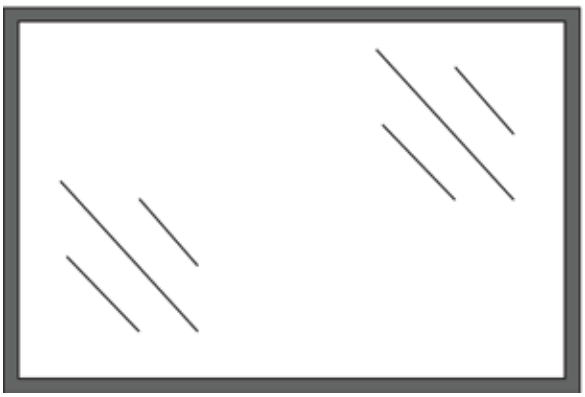

Questions?

Contact us at 800-331-6414
and our team will be happy to assist you.

FRAME MY MIRROR®

(800) 331-6414
support@framemymirror.com
rev. 05/26