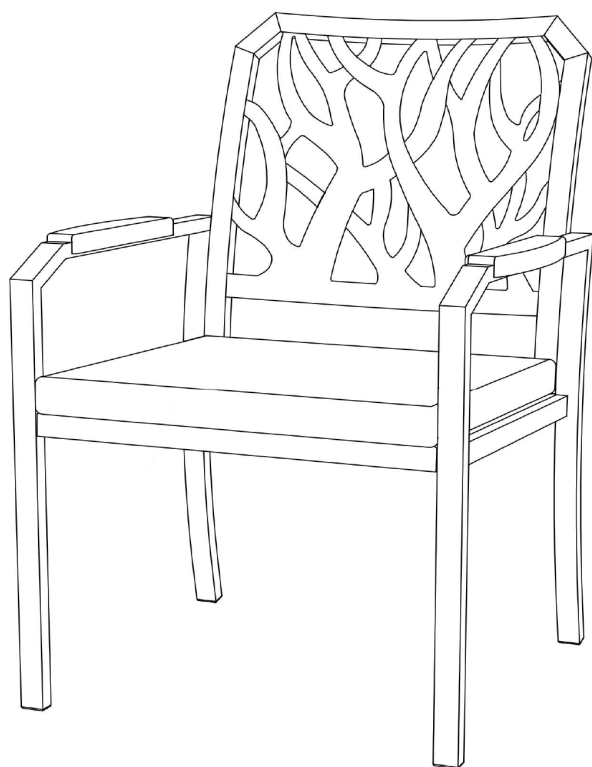


Dining Chair

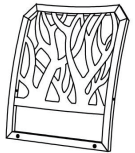
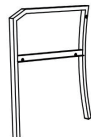
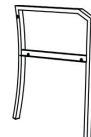
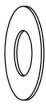
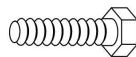
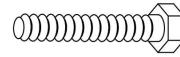
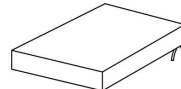
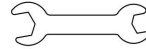
ASSEMBLY INSTRUCTIONS




BEFORE ASSEMBLY:

- Please read these instructions carefully before starting assembly. We suggest you carry out the assembly on a soft surface like a carpet, so as to avoid scratching the paint. Keep children away during assembly. This item contains small parts which can be swallowed by children.
- This product was made for the explicit purpose of providing outdoor function and is not to be used as a toy. This product is for residential use only. This product is NOT intended for commercial use; unintended use will void the warranty.
- This product is not intended for use during inclement or severe weather, that includes but is not limited to rain, hail, sleet, snow, wind, freezing conditions and extreme heat.
- Please note because of the nature of cast metal, you may find roughness on the surface which enhances the beauty of the product and is not a defect.
- Aluminum is soft metal, please do not use power tools, and over tighten may strip threads or break the parts.
- When not in use, store and/or cover the product in a cool dry location. Do not locate the product near any sort of high heat. Do not use the product as a support.
- Children under the age of 10, who are near the product, should be supervised by a competent adult at all times.
- Do not discard any of packaging until you finish the assembly. Keep the assembly instructions for future reference or warranty.
- **Minor product improvements may be made without prior notice.**

PARTS LIST:


AX2  Back	BX2  Seat	CX2  Left armrest	DX2  Right armrest
EX16  Washer	FX16  Lock washer	GX12  Bolt(M6*30)	HX4  Bolt(M6*45)
IX16  Bolt cap	JX4  Arm	KX2  Cushion	LX2  Wrench

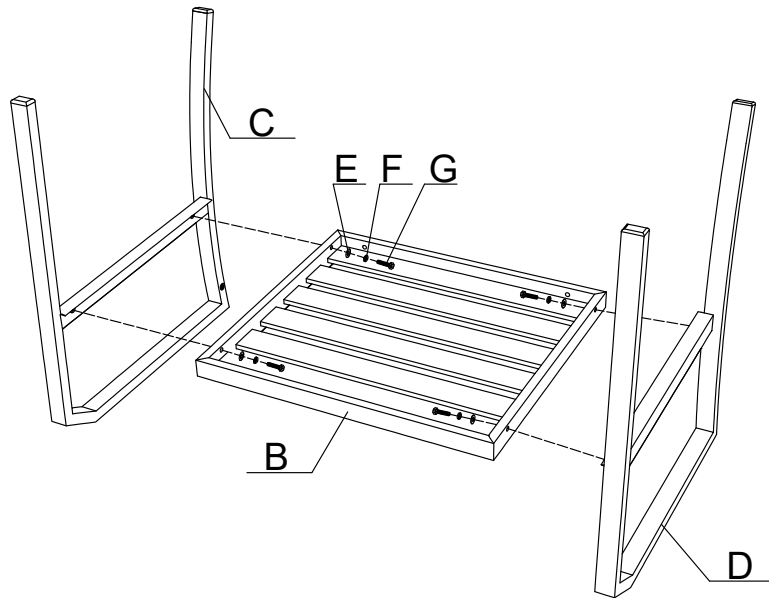Step 1: Place all the parts on a clean and soft surface identify all the parts and hardware kits against parts list. Assemble Left Armrest(C), Right Armrest(D) and Seat(B) with parts(E,F,G) as Fig(1) Remember not to tighten all the Bolts before they are all set up.




(1)

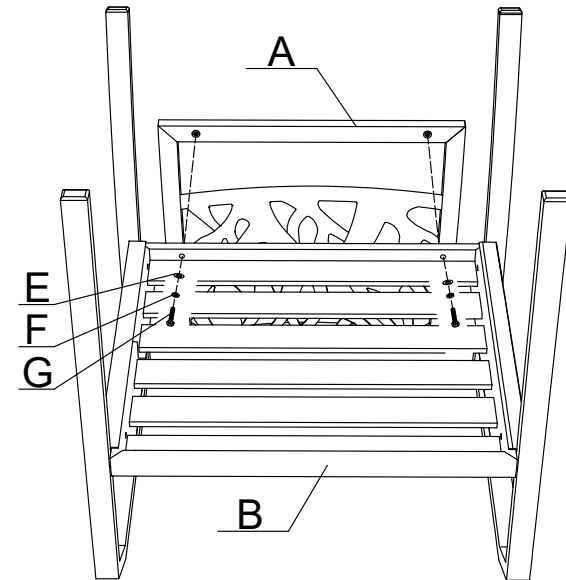Step 2: Connect Back(A) and Seat(B) with parts(E,F,G) as Fig(2). Remember not to tighten all the Bolts before they are all set up.




(2)

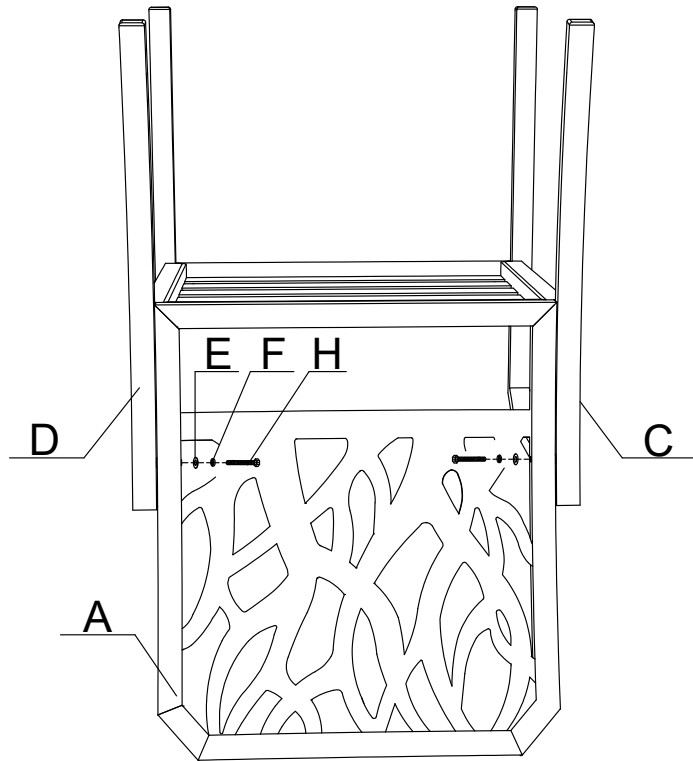Step 3: Connect Back(A) and 2 Armrests(C,D) with parts(E,F,H) as Fig(3). Remember not to tighten all the Bolts before they are all set up.




(3)

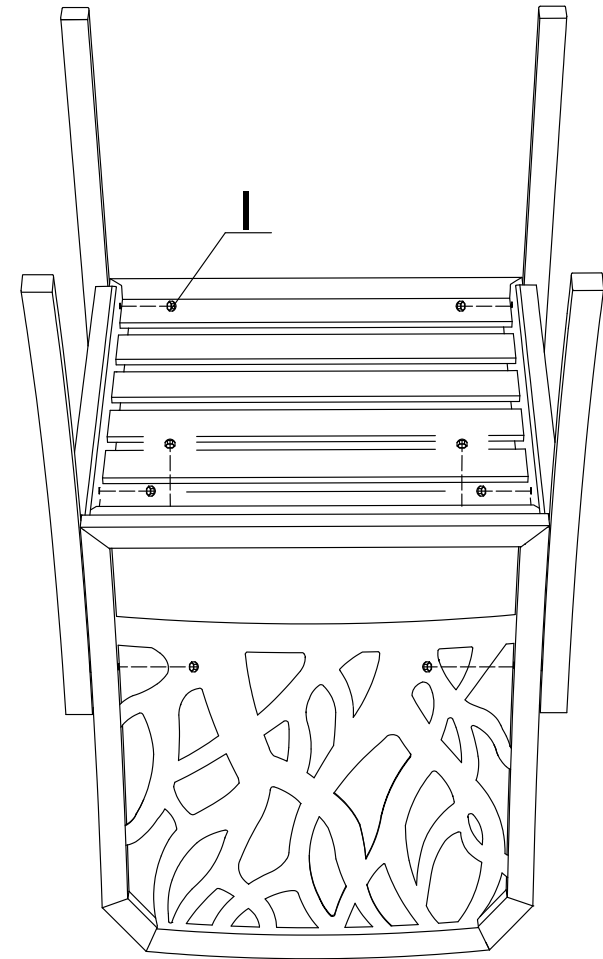Step 4: Ensure all parts are preliminarily connected before fully tightening all Bolts. Put all Bolt caps(I) on as Fig(4), after fully tightening Bolts. Turn the chair over.




(4)

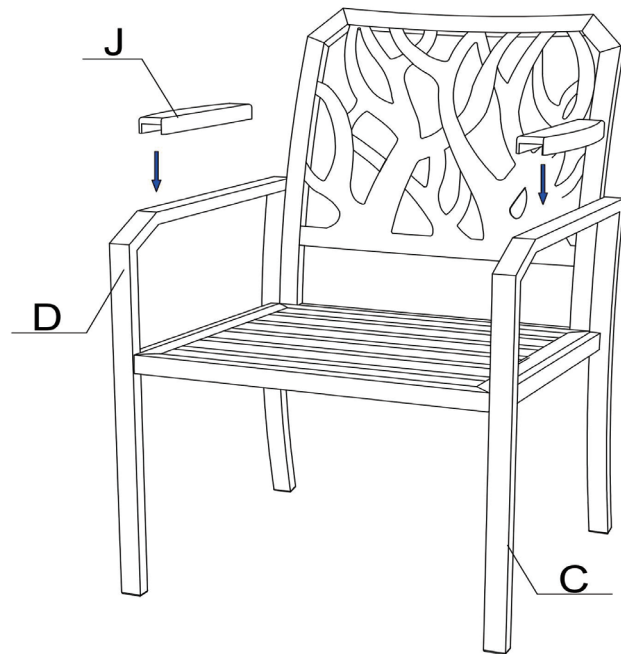Step 5: Start by adjusting the position of the Resin-treated Wood Arm(J), the default position is to place the front of the arms flush with the top edge of the cut corner of the Armrests. Remove the clear film from the bottom of the Resin-treated Wood Arm(J) and snap it onto the Armrest as Fig(5), pressing it down, make sure it is mounted. In an hour it will be completely bonded.



(5)

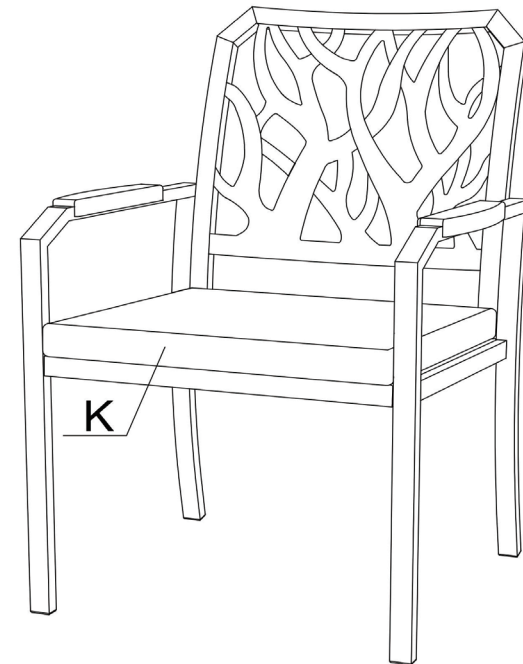Step 6: Then tie the Cushion(K) to the chair. Adjust the Non-Slip Pads till the chair is stable. Your chair should be ready for use.



(6)