



Installation Manual

Step 1

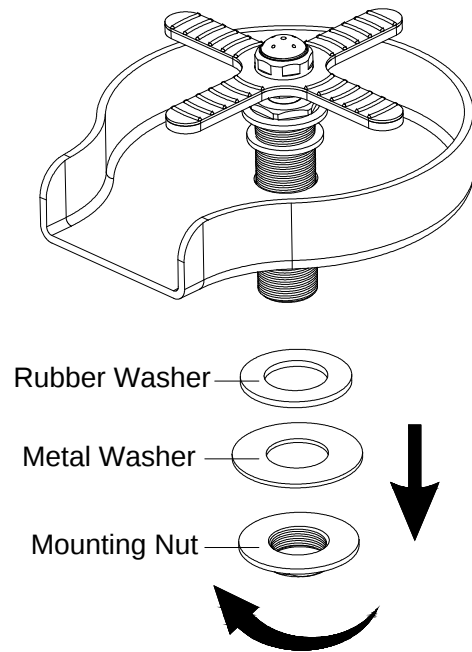

Takes off the nut and washer from the base of the mounting shank.


Step 2

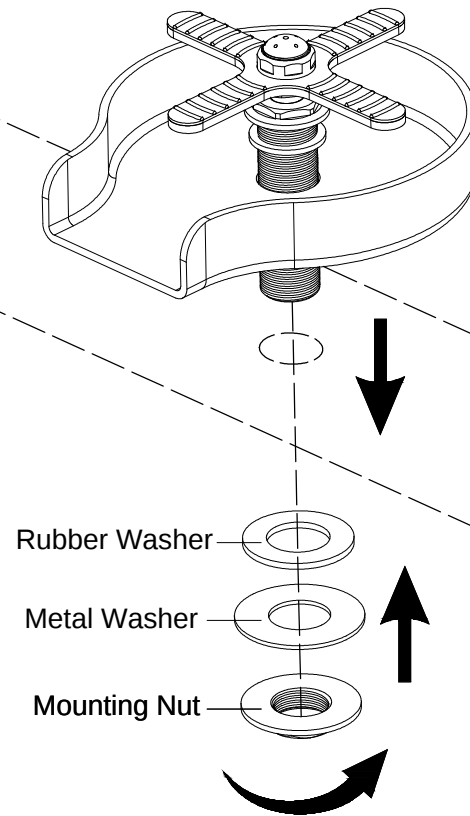

Size of the predrill holes: 0.86-1 inch

Slide the mounting shank through the sink hole from above. Put the metal washer and rubber washer in sequence. Then tightening mounting nut.

Step 3

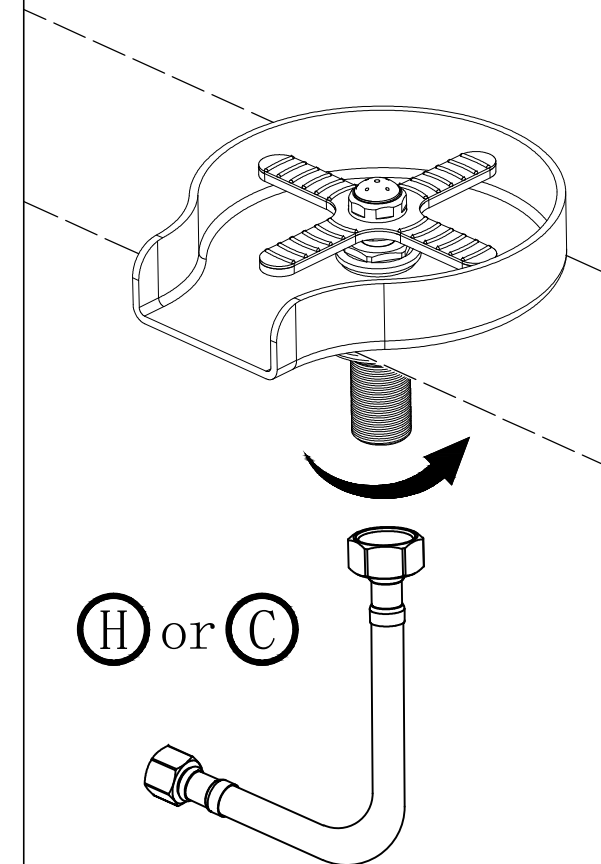

Connect the mounting shank to the water supply line.