


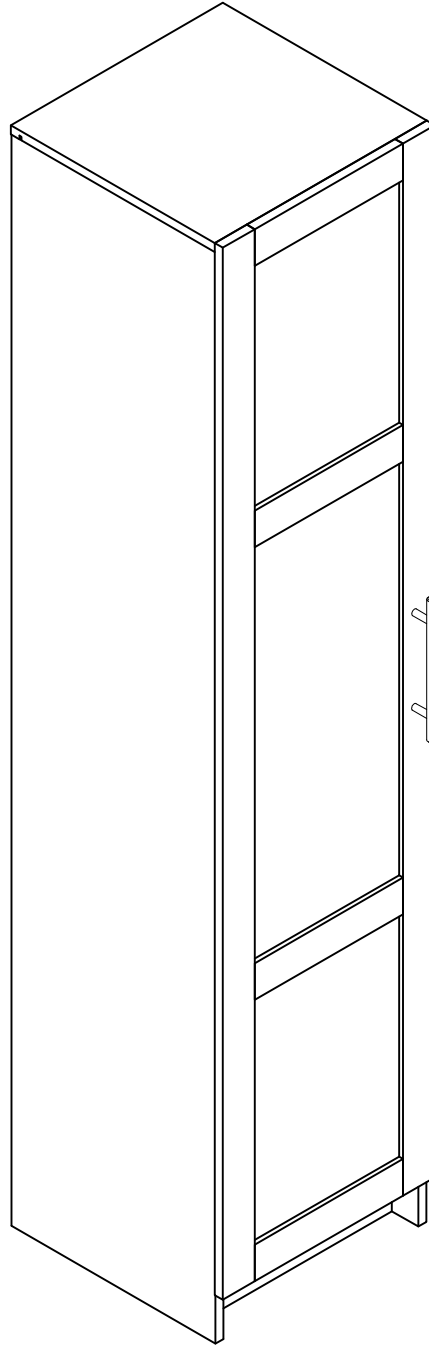
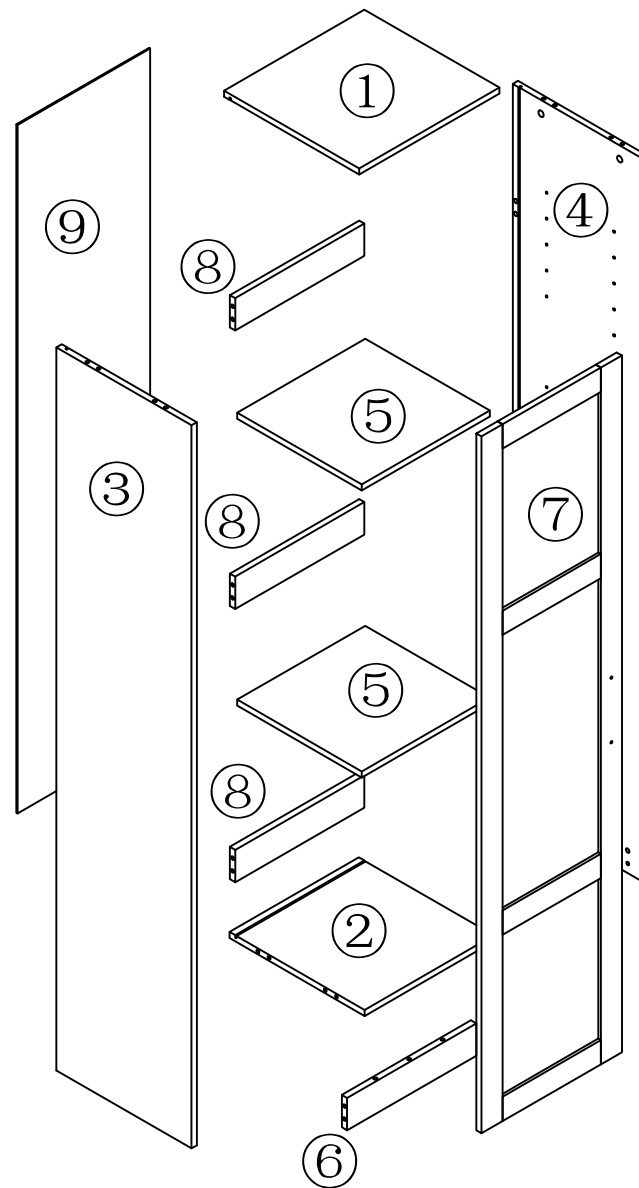

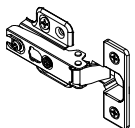

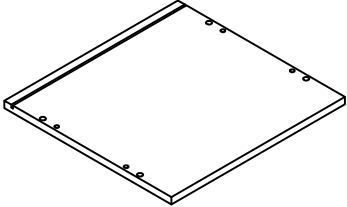
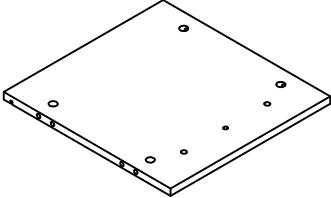
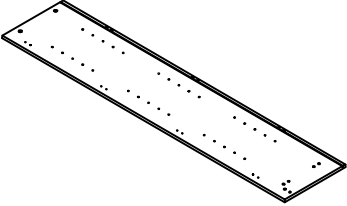
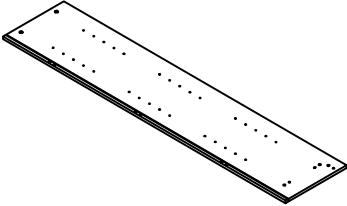
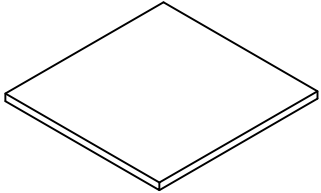
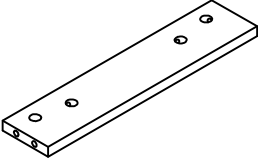


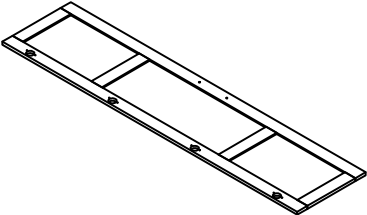

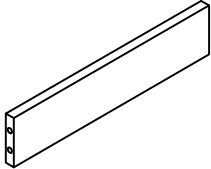

A  24PCS	B  24PCS	C 8*40  9PCS	D 3.5*14  16PCS	E  4PCS	F  1PCS	G 4*18  2PCS	H  8PCS	I 3*12  10PCS	J  10PCS
--	---	--	---	---	--	--	--	---	---


1  400*385 1PS	2  368*385 1PS	3  1785*385 1PS	4  1785*385 1PS	5  365*335 2PS
6  386*80 1PS	7  1720*400 1PS	8  386*80 1PS	9  1700*378 1PS	

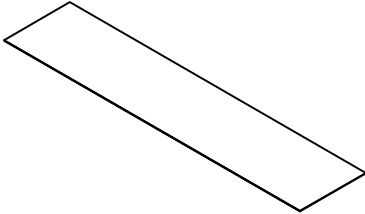


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

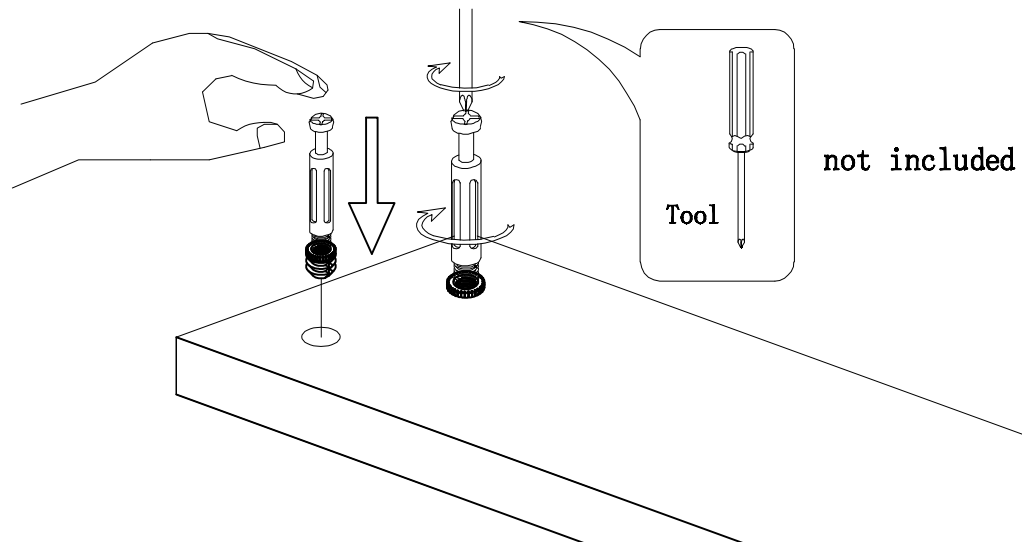






II

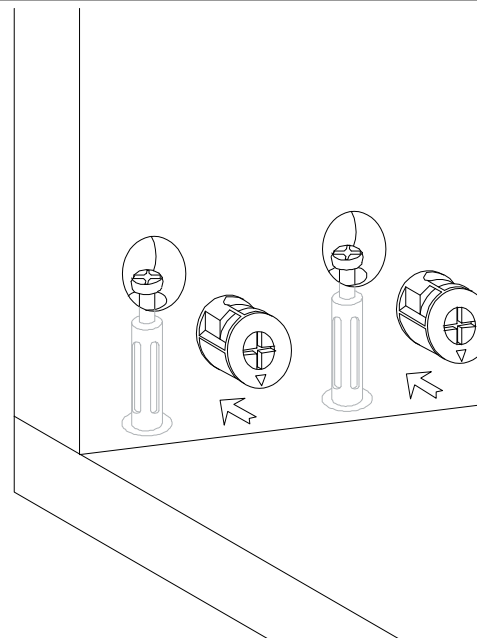

III

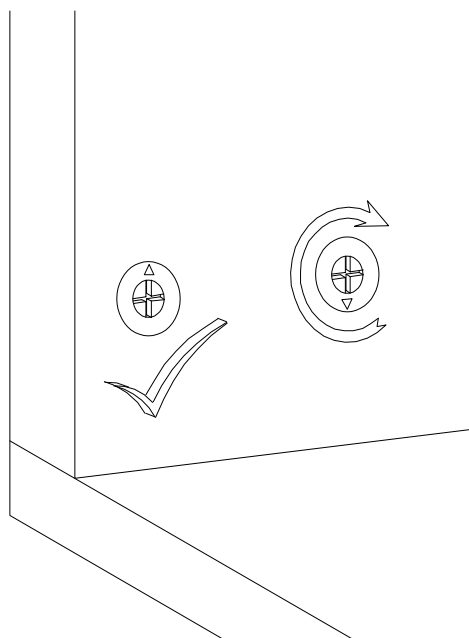

①

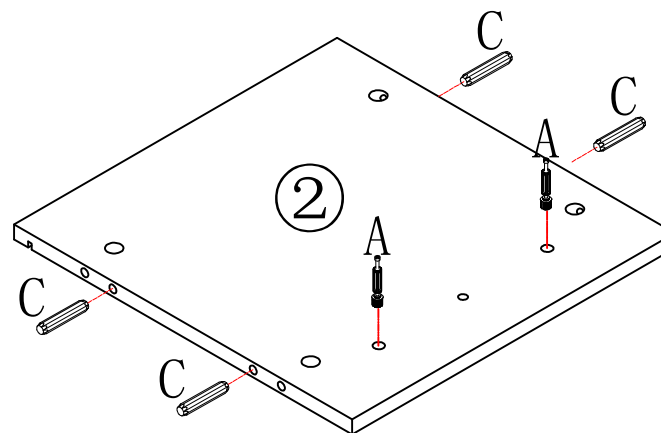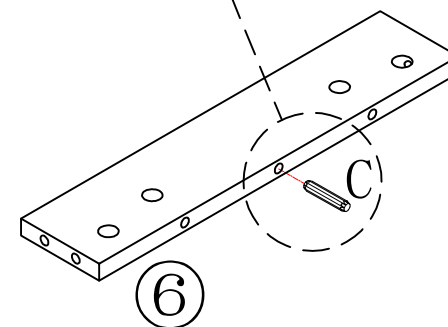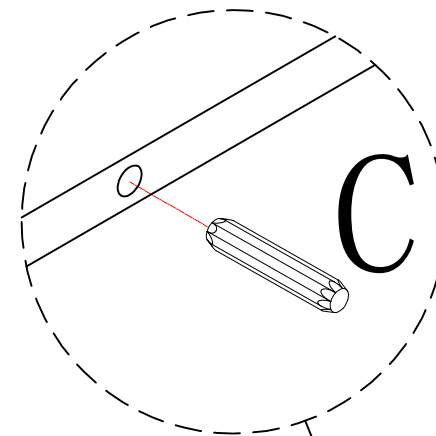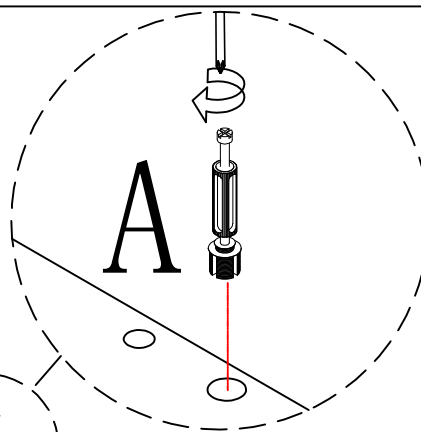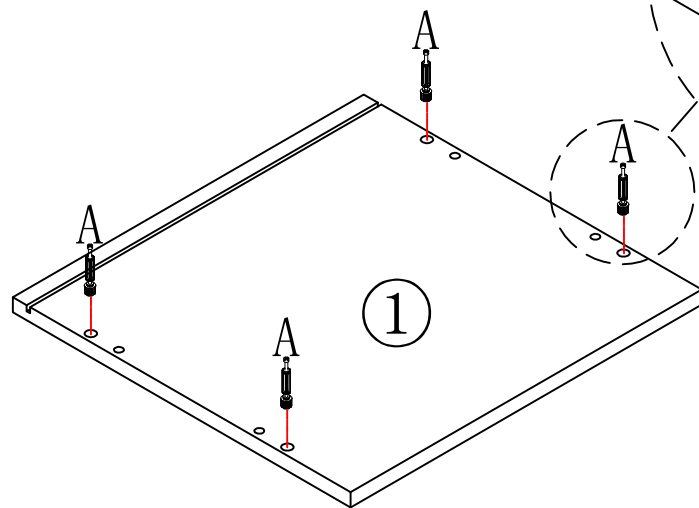


A*6



C*5

put A on board ① ②
put C on board ⑥

2

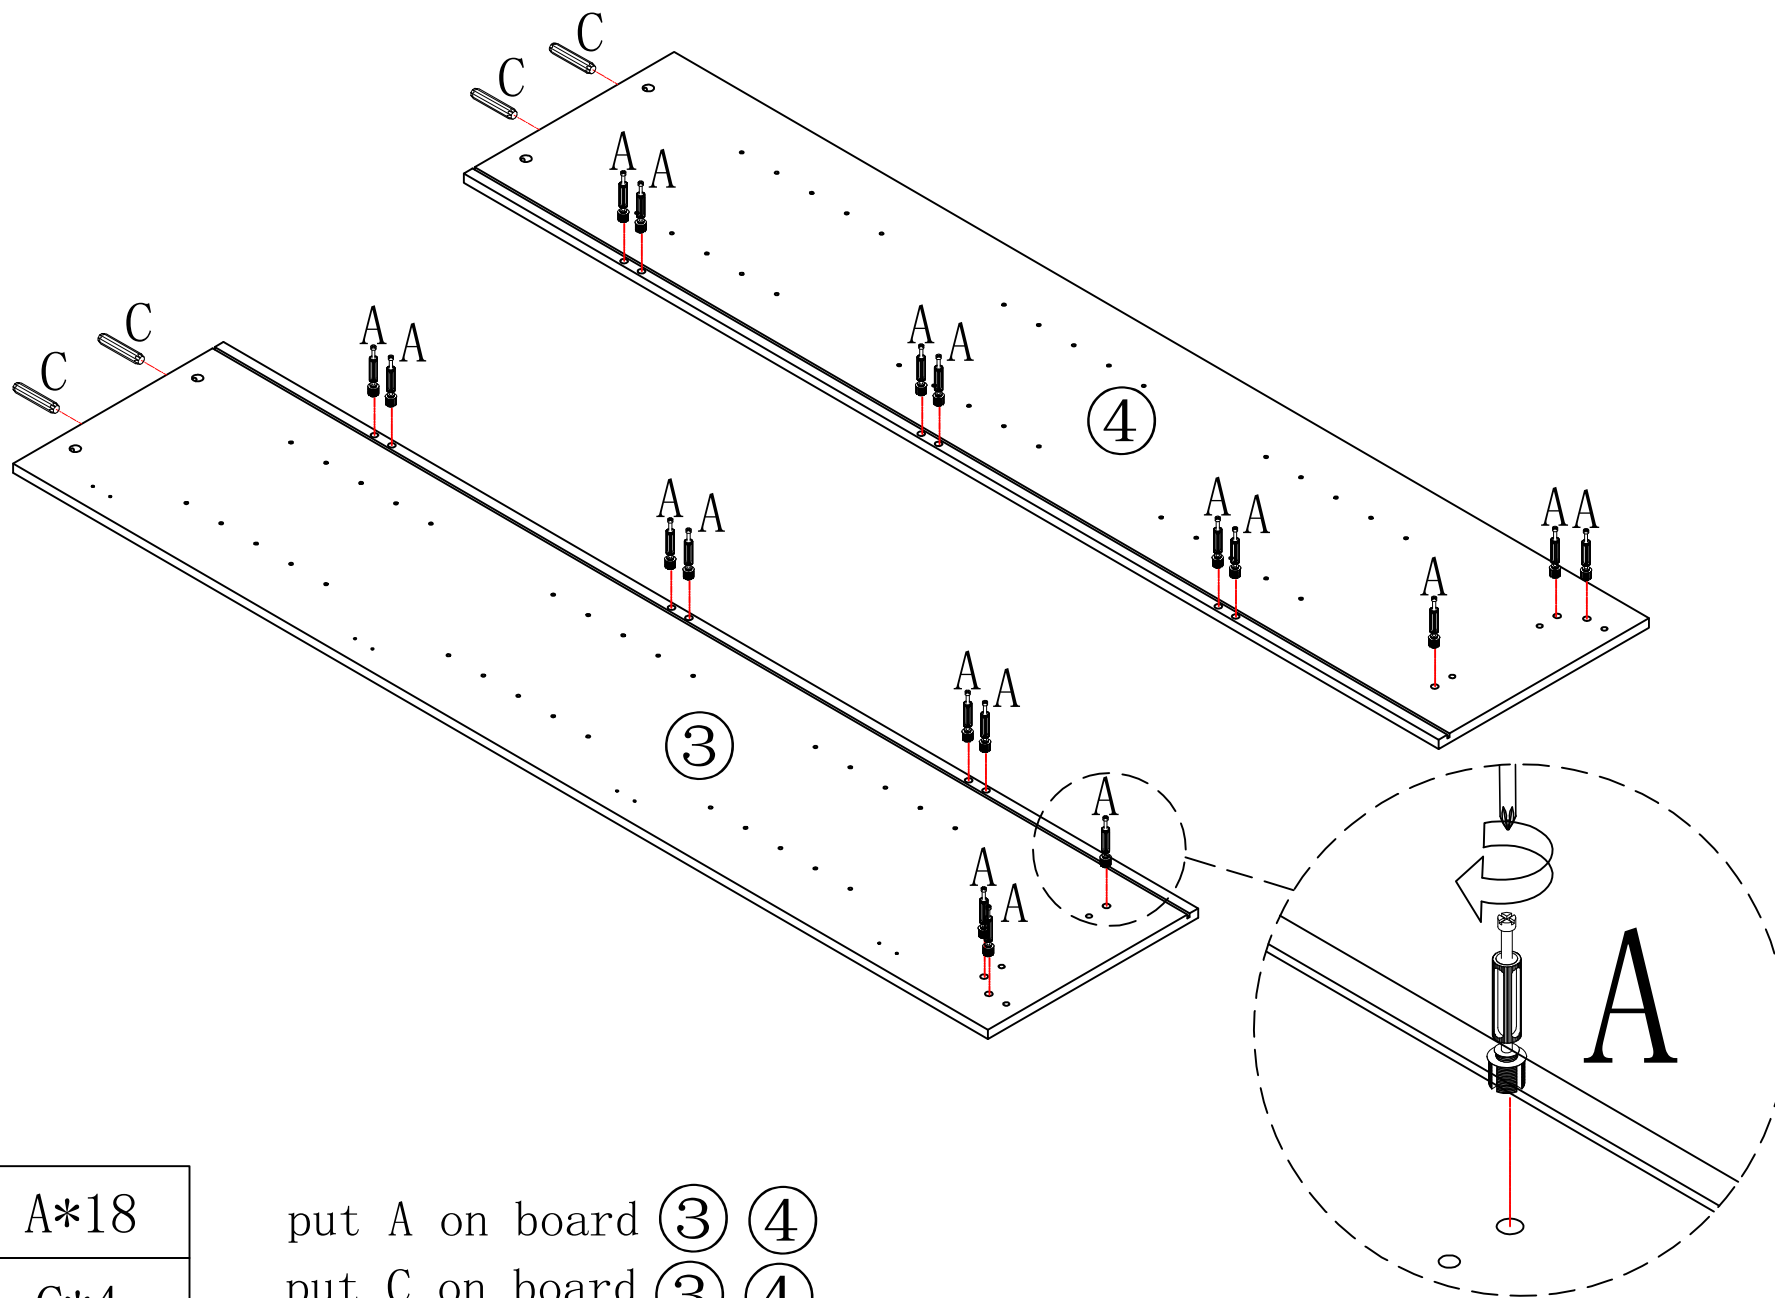

A*18


put A on board ③ ④



C*4



put C on board ③ ④

3

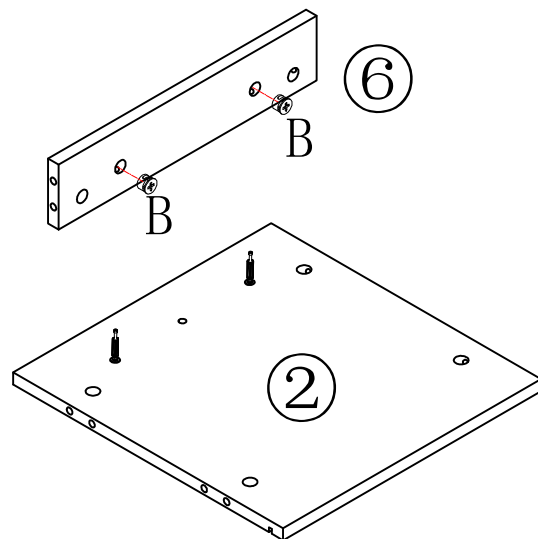

6

Make sure the arrow on the screw align to the hole on the side

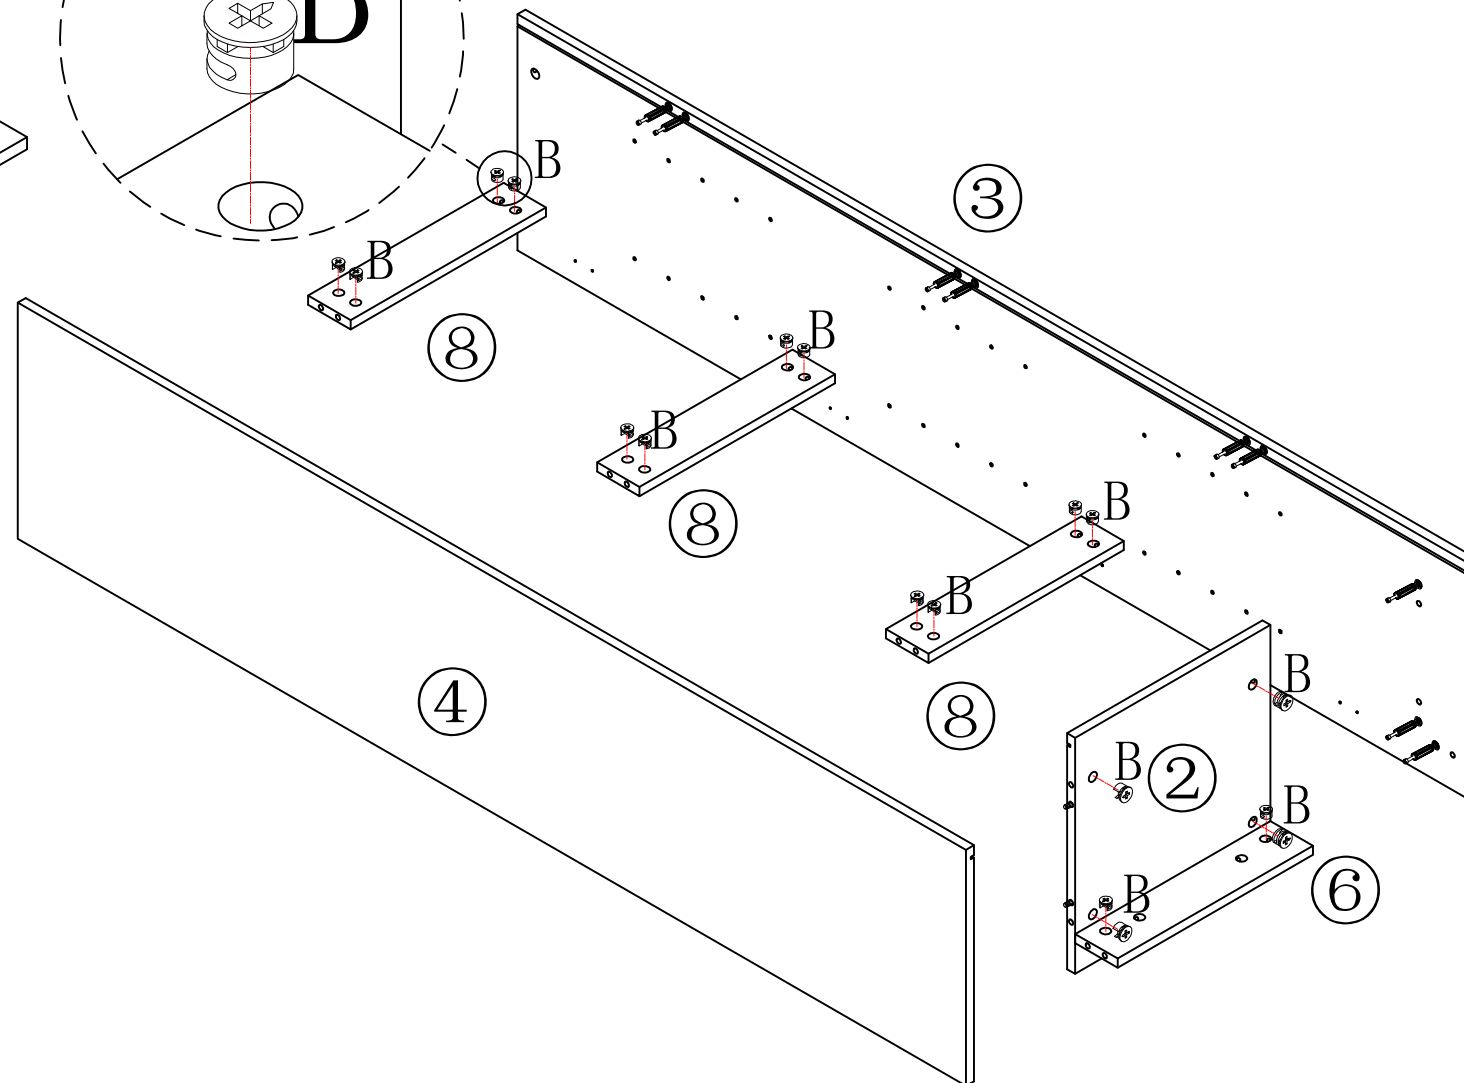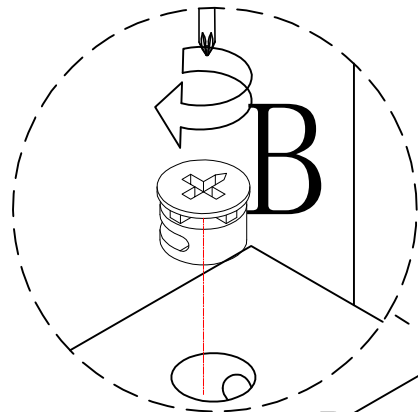

8

8

8

3

2

6


4



B*20

put B on board 2 6 8

④

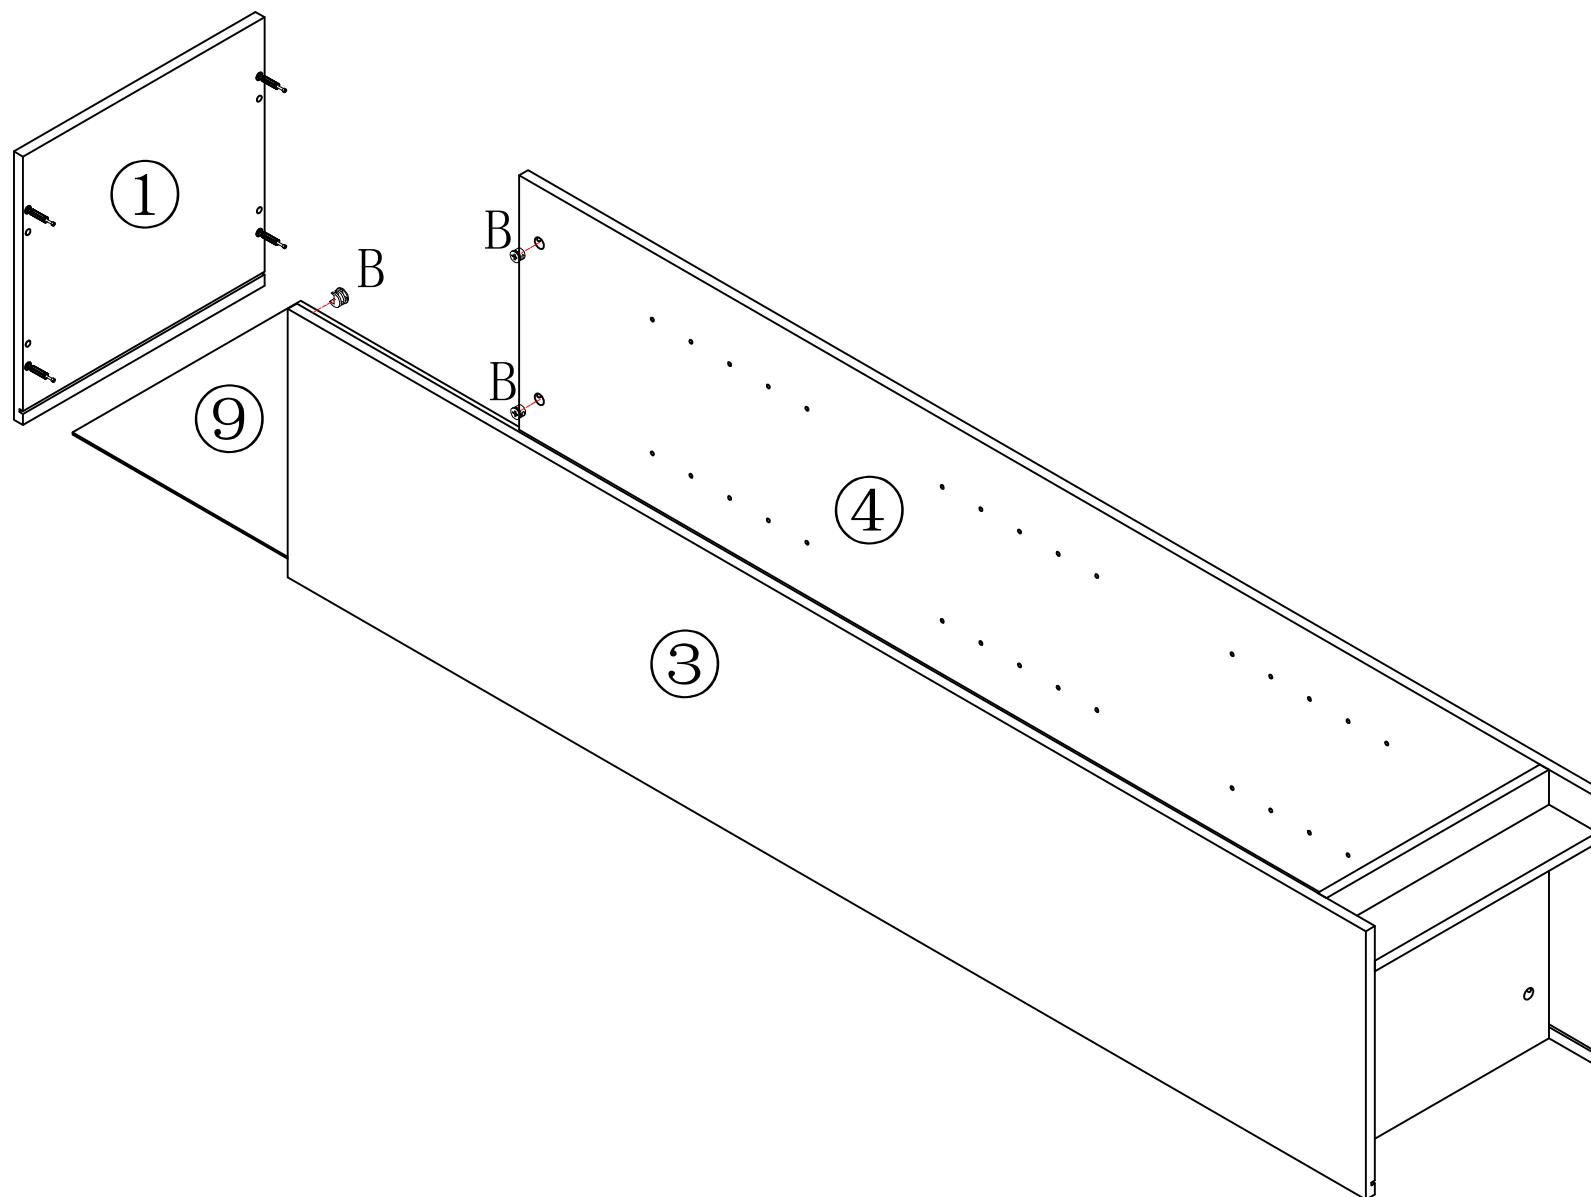



put B on board ③ ④




B*4

5

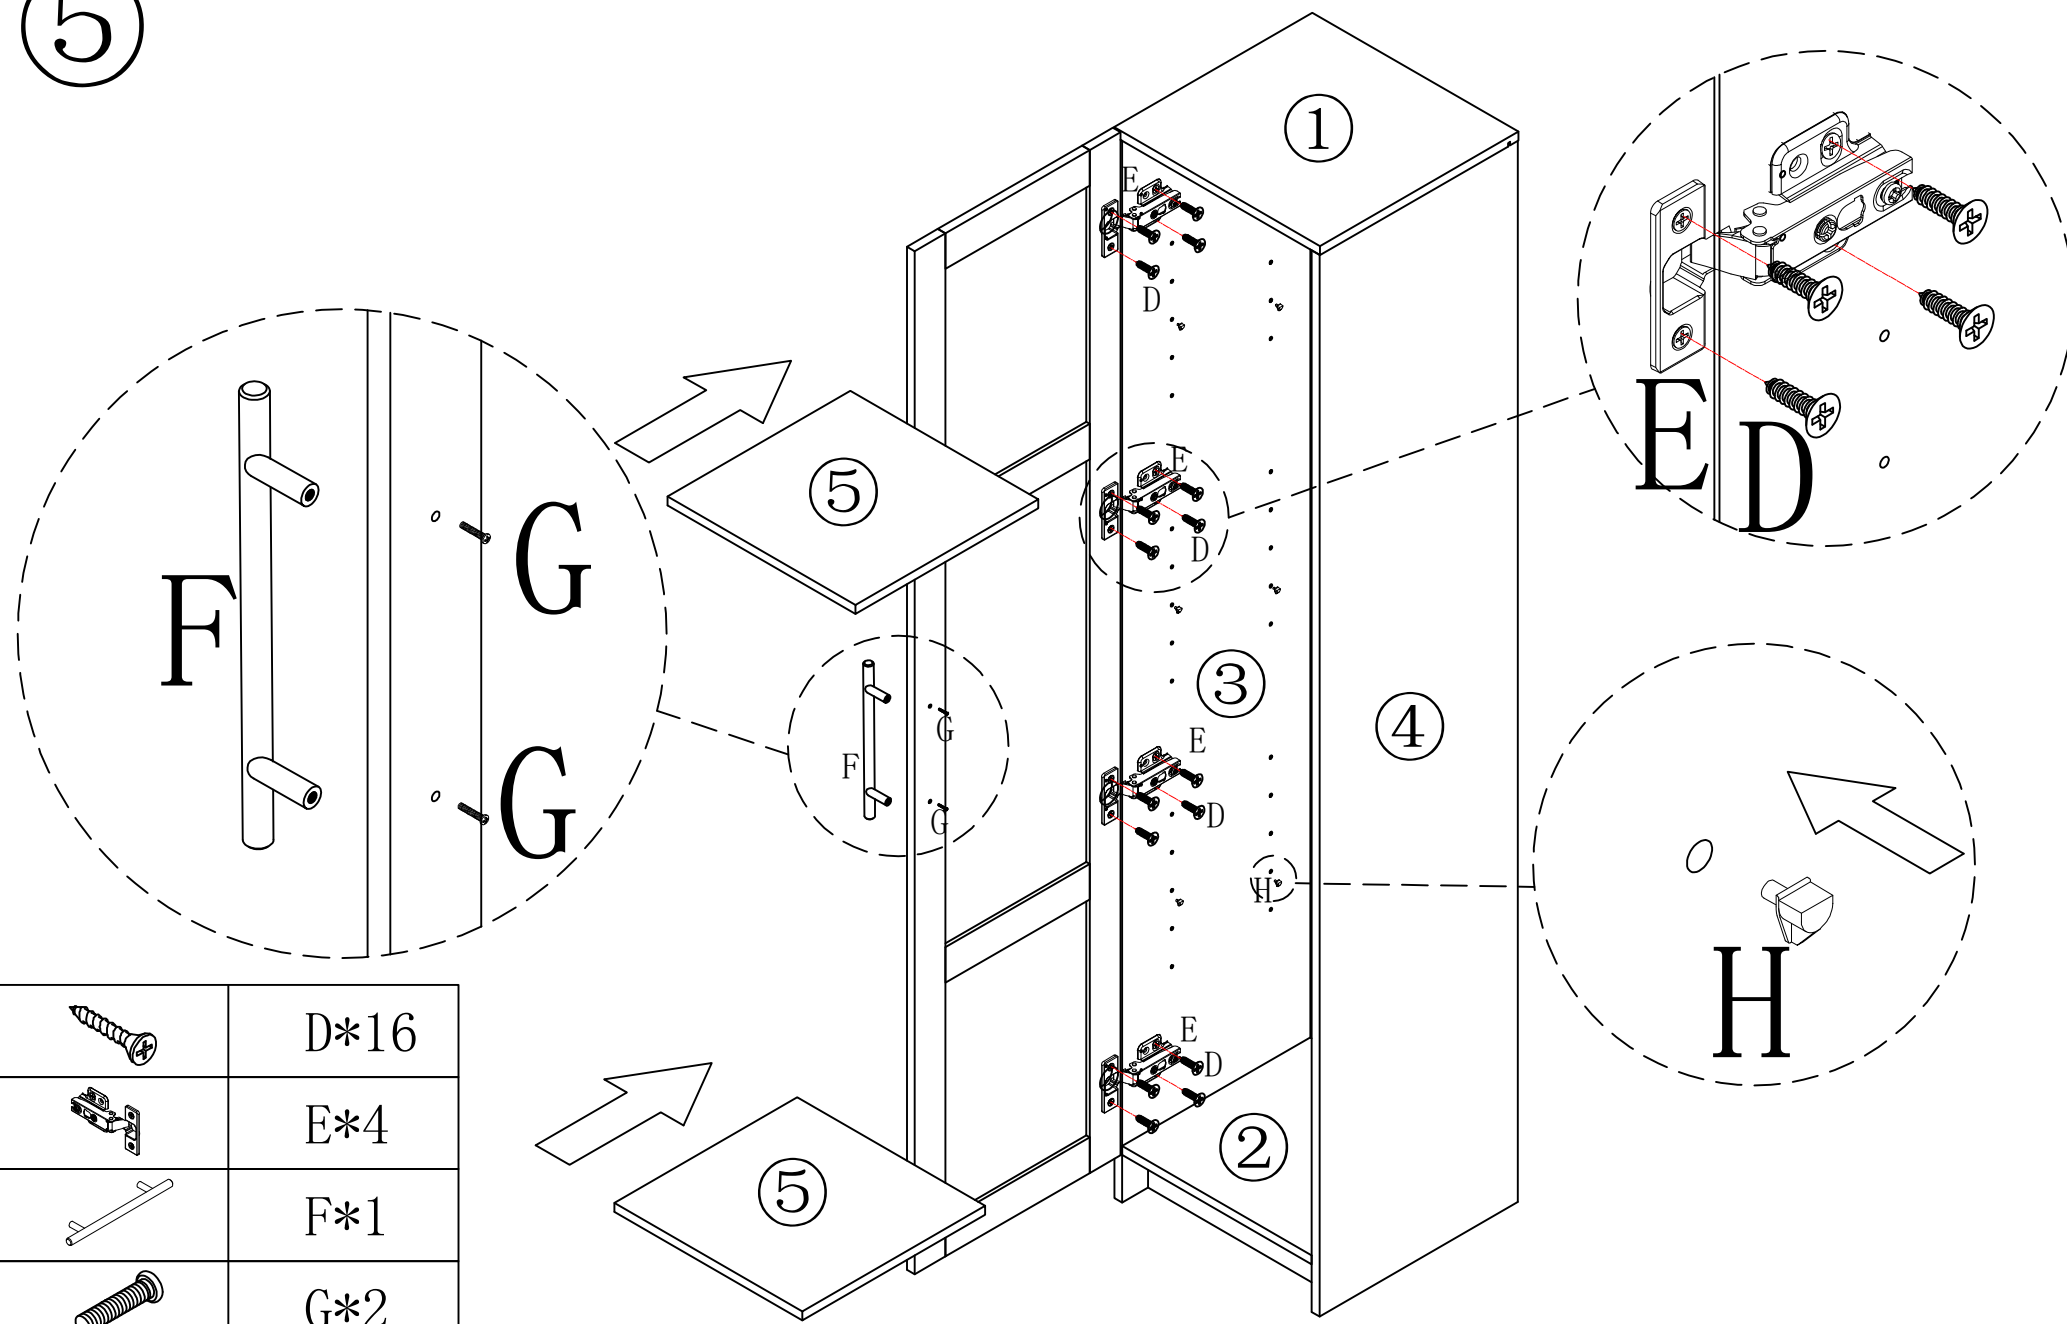

	D*16
	E*4
	F*1
	G*2
	H*8

⑥

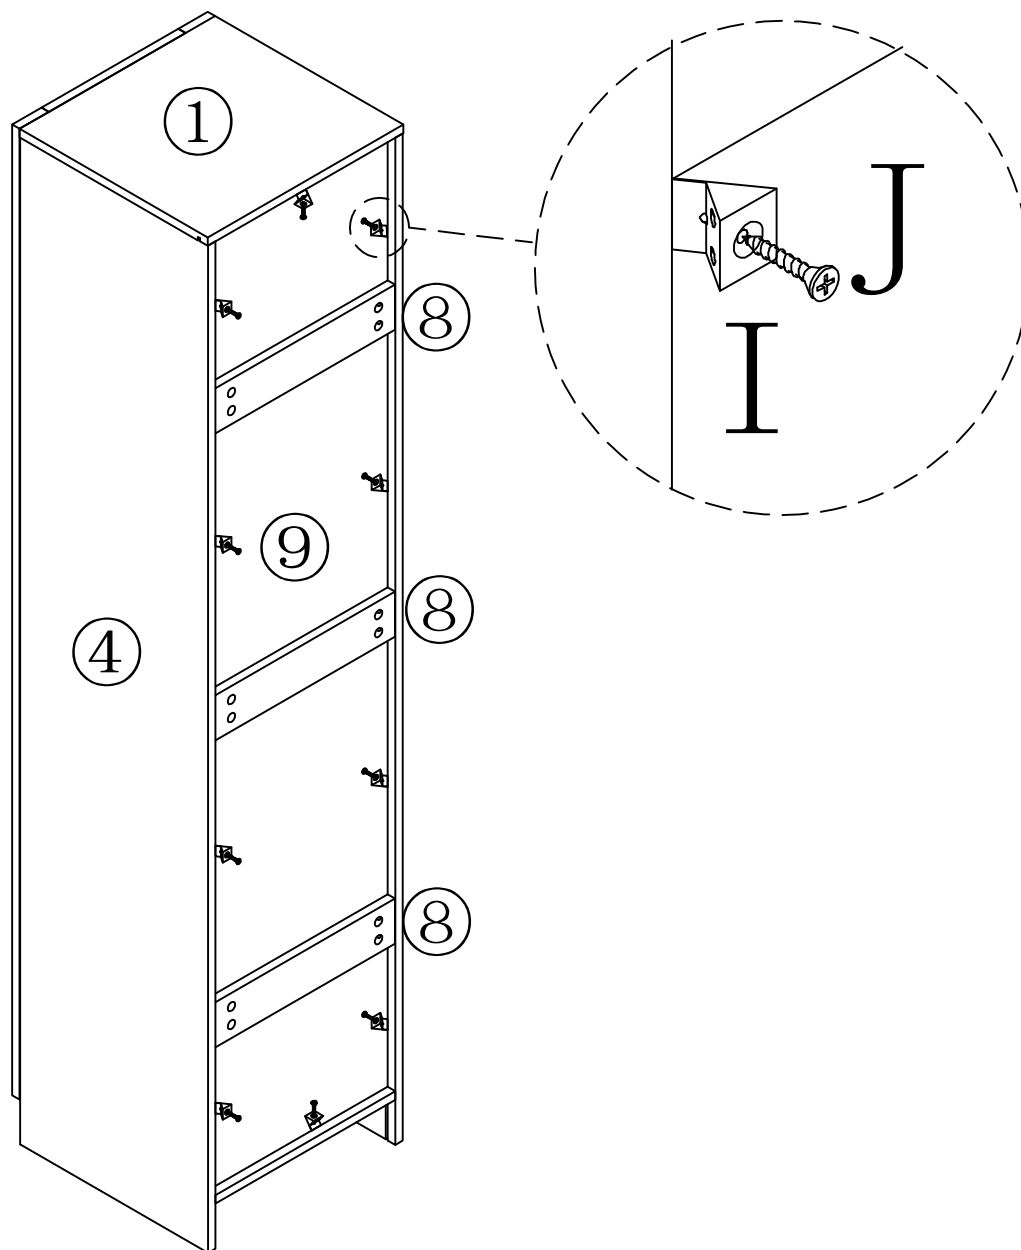


I*10



J*10

7

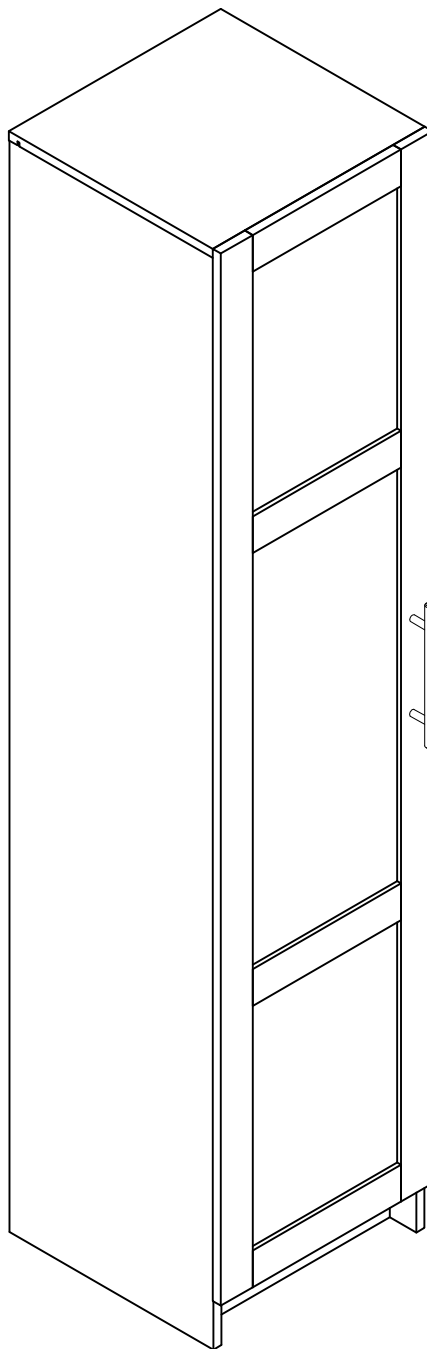

END