




Installation instructions

Furniture 5683 Lower cabinet closed Rosario White

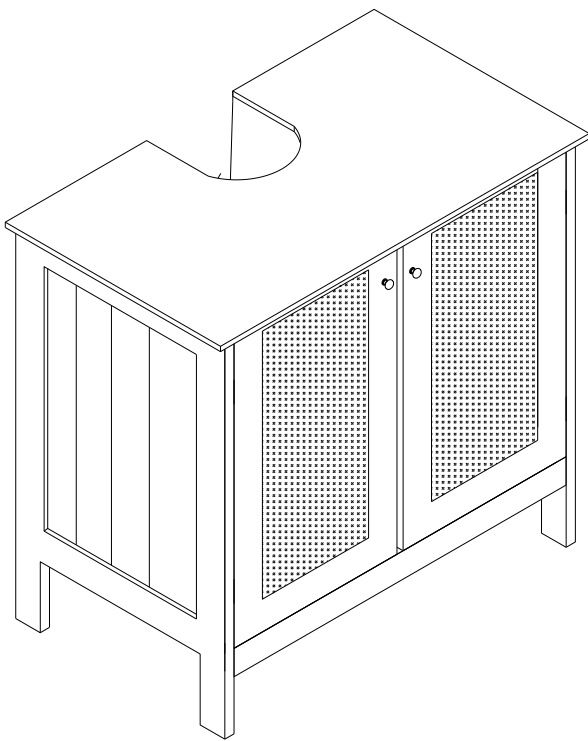


Furniture 5688 Lower cabinet closed Riad White

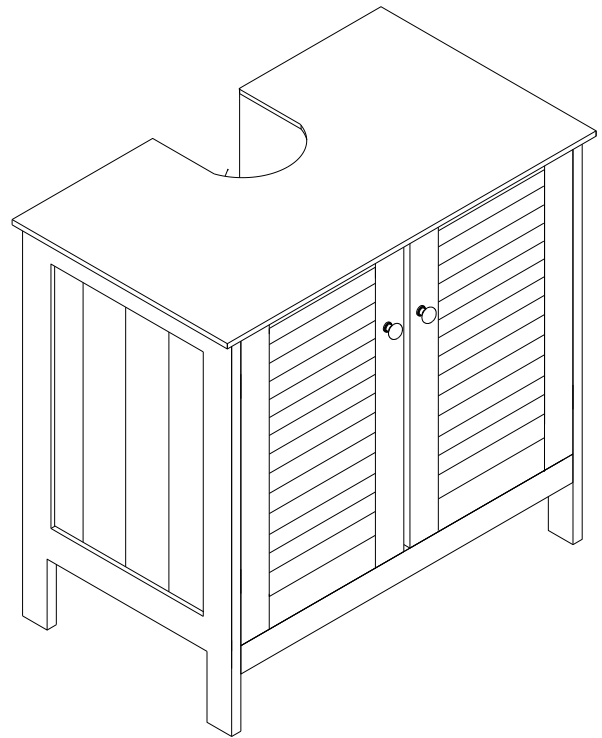

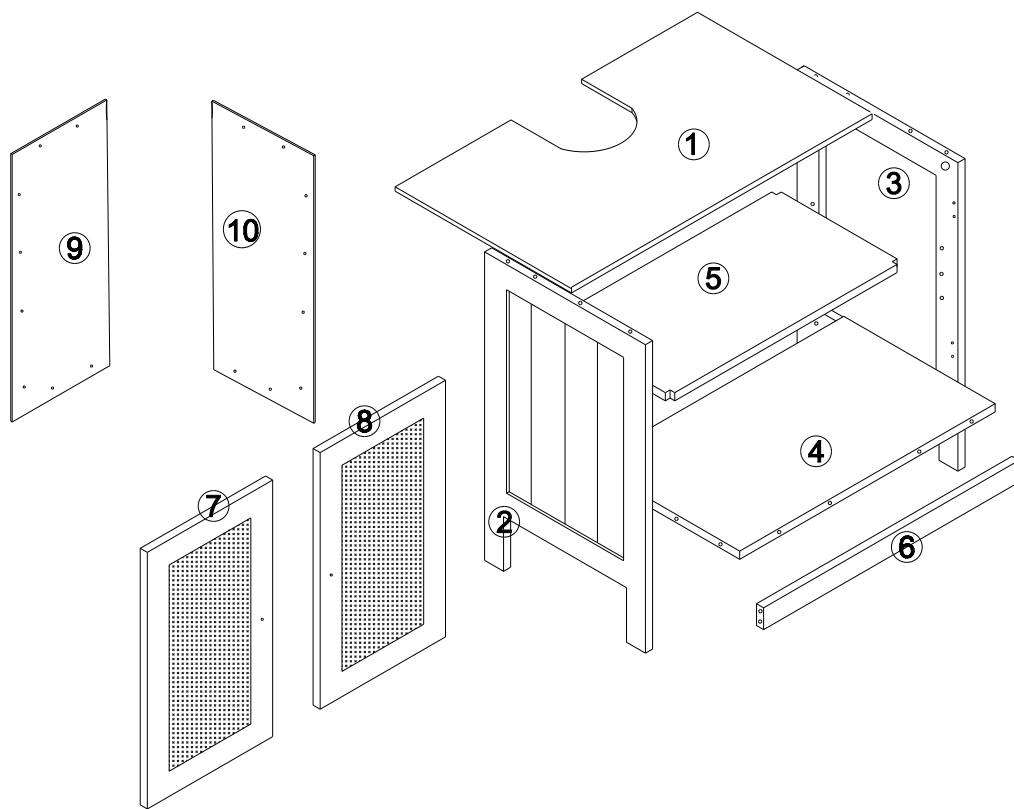

Ax10



Bx1



Cx2



Dx10



Ex14



Fx16



Gx16



Hx4



Ix2




Jx2



Kx2



Lx2




Mx4



Nx4




Ox10

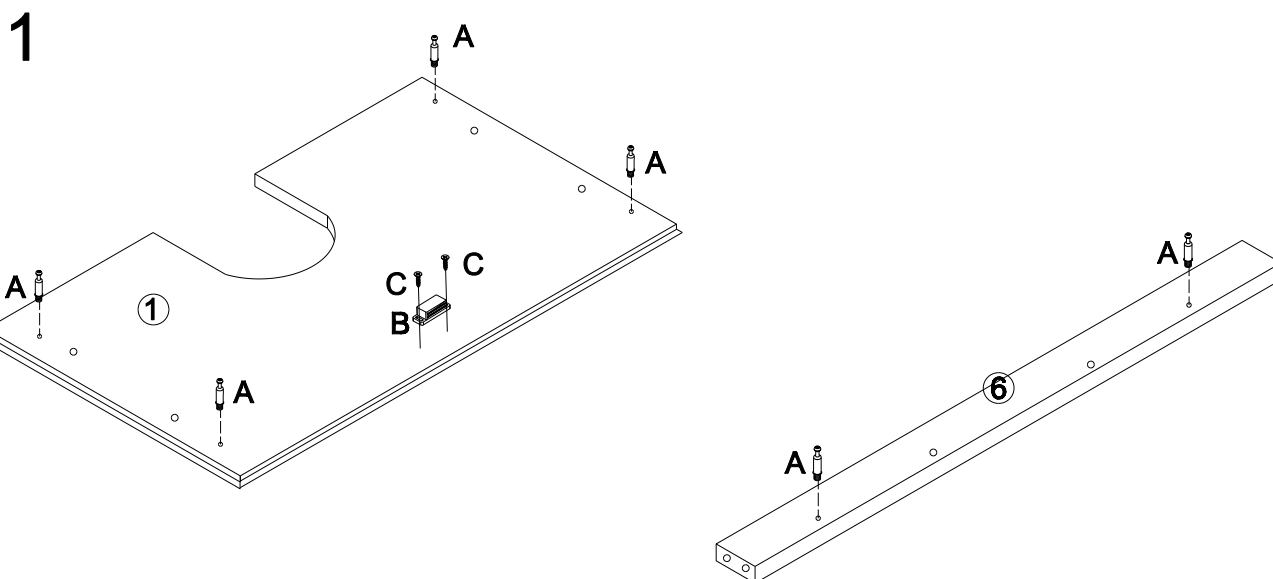


2


Furniture 5683
Furniture 5688

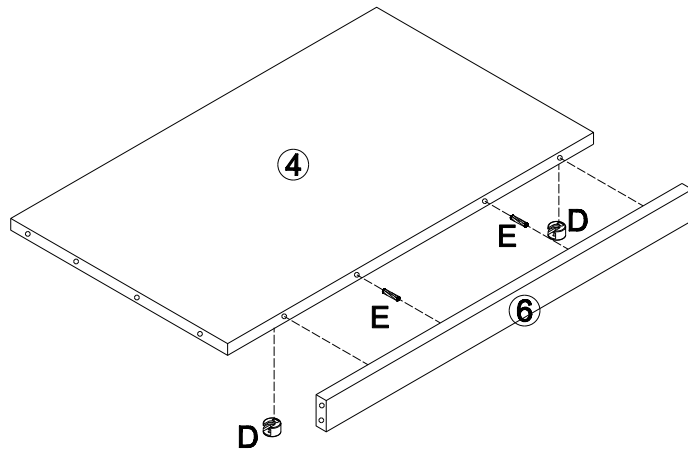

3

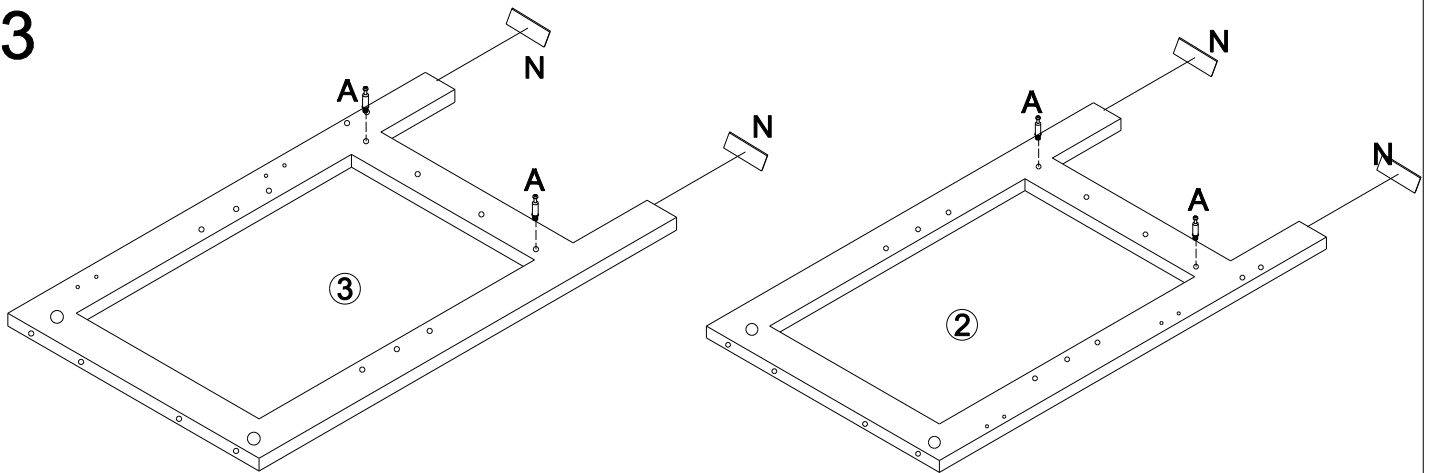


4

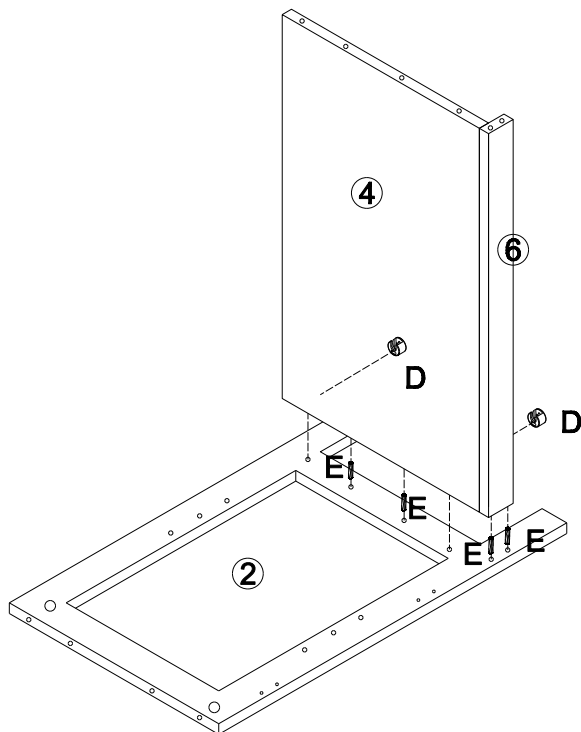


5

Furniture 5683
Furniture 5688

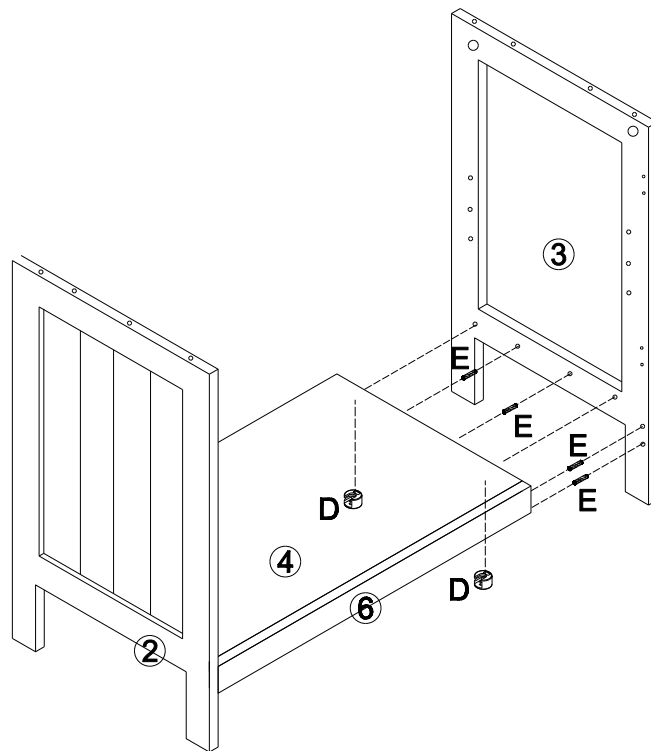


6

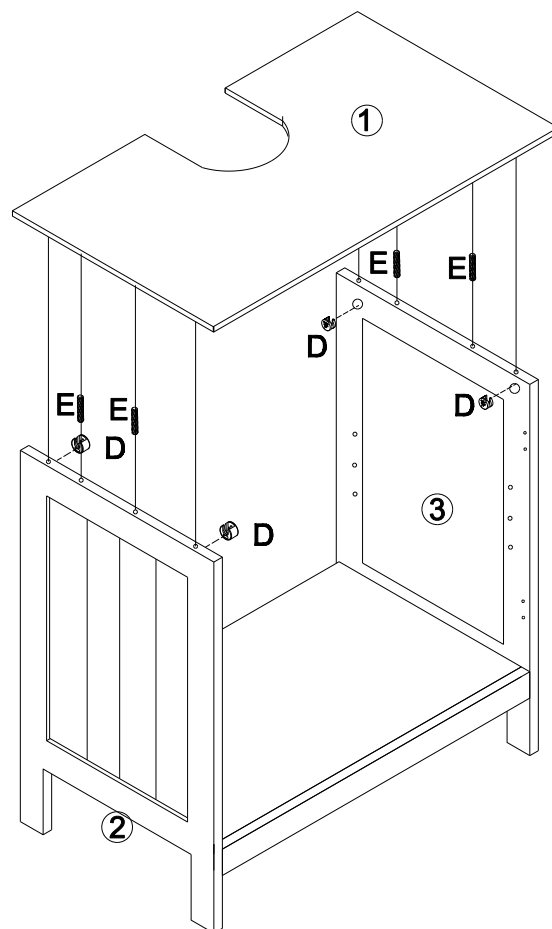

7


Furniture 5683



Furniture 5688

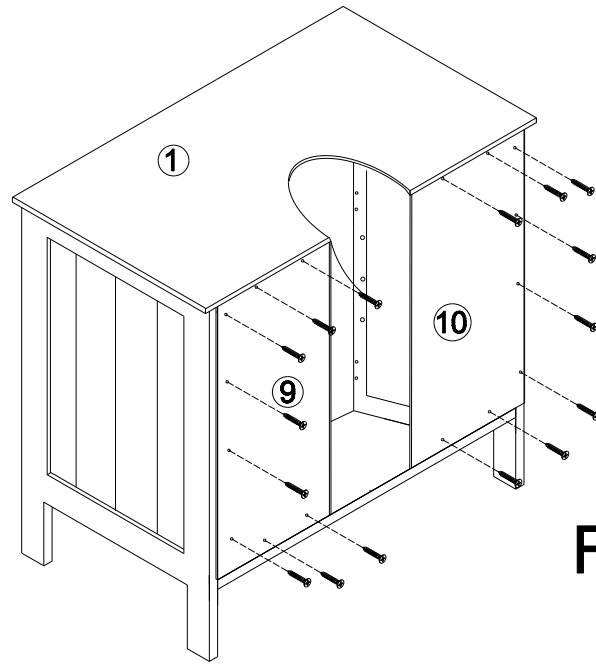

Fx16

8

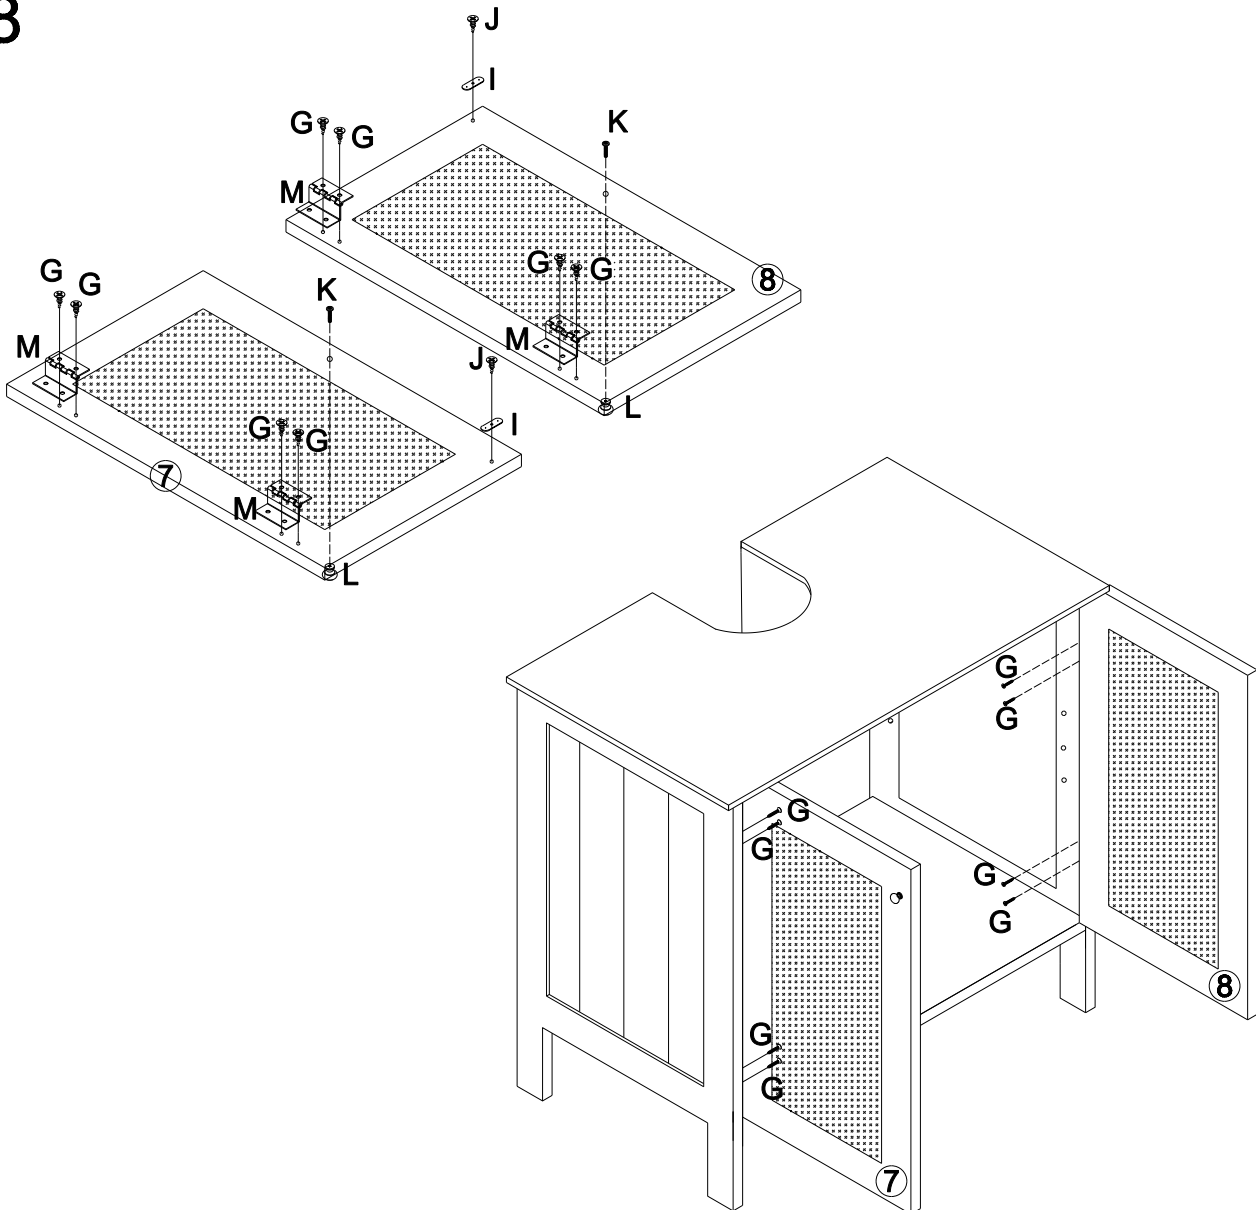

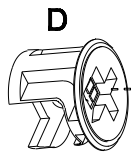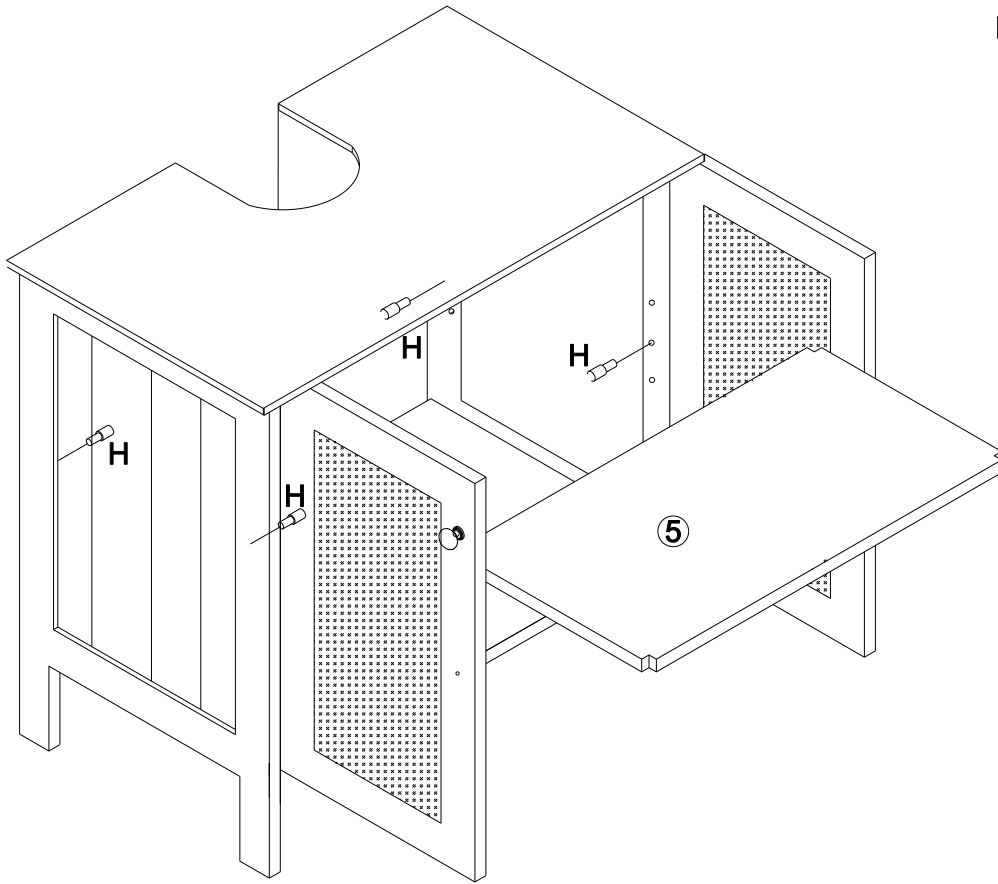

O

images\im057589856.jpg