
Assembly Instructions

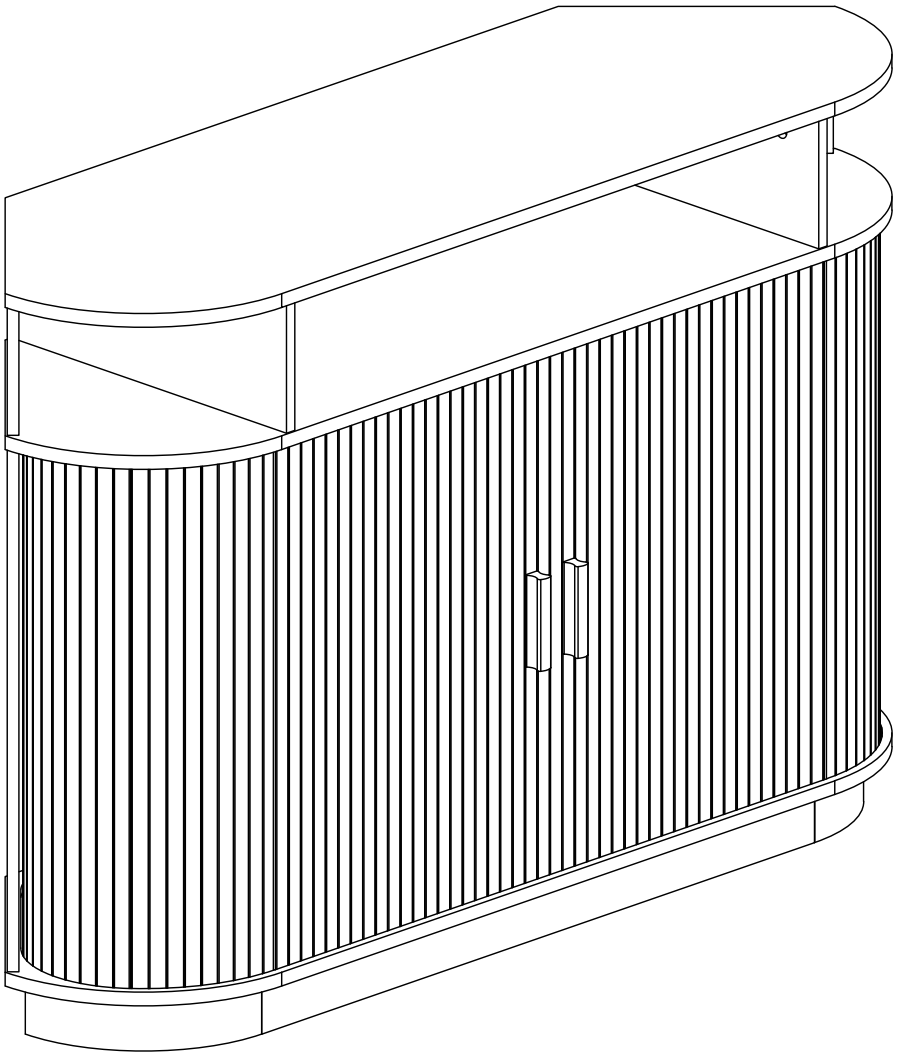


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

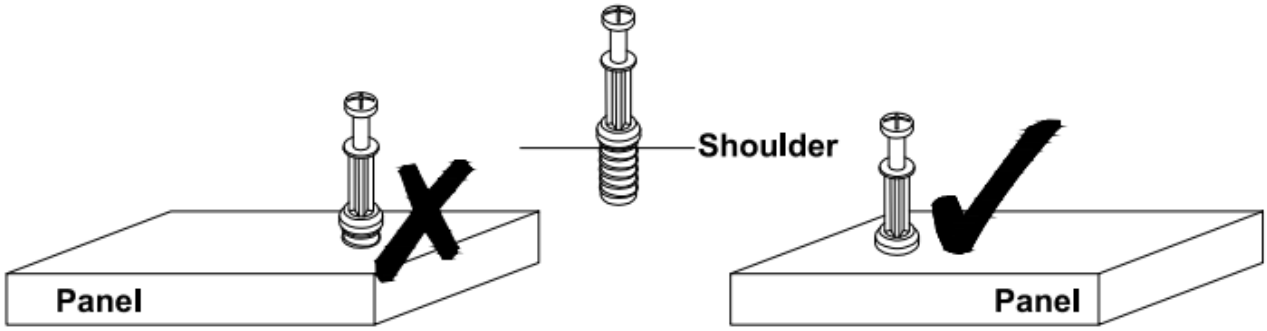


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

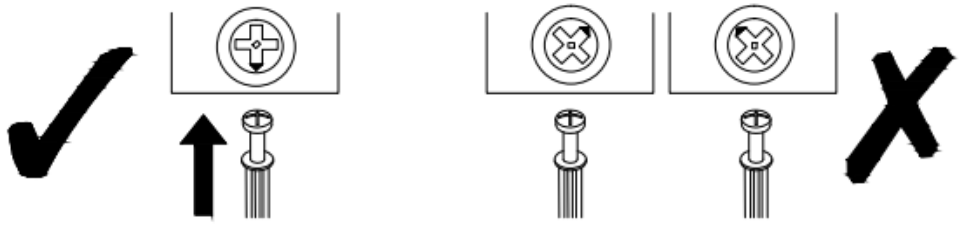


















When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

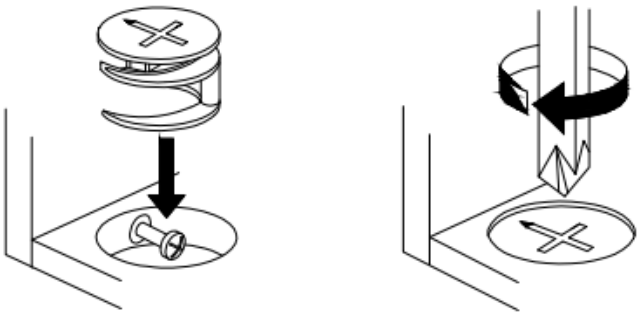


Turn cam lock clockwise to tighten.


Part List

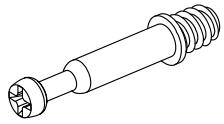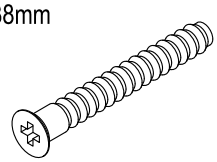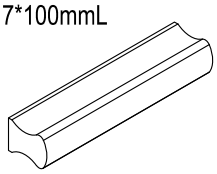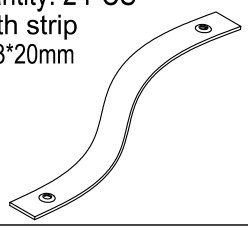No. A Quantity: 30+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 30+1 PCS Cam ø15x9.5mm 	No. C Quantity: 30+1 PCS Sticker ø20mm 	No. D Quantity: 48+2 PCS Dowel ø6x30mm 
No. E Quantity: 16+1 PCS Screw ø3.5x12mm 	No. F Quantity: 12+1 PCS Screw ø3x16mm 	No. G Quantity: 4+1 PCS Bolt M4x12mm 	No. H Quantity: 16+1 PCS Screw ø5x38mm 
No. I Quantity: 4 PCS ø5x16mm 	No. J Quantity: 2 PCS Iron Plate 19x19*18mm/90° 	No. K Quantity: 4 PCS Iron Plate 19x19*18mm/135° 	No. L Quantity: 2 PCS Iron Plate 36x16mm 
No. M Quantity: 12 PCS plastic buckle 15*15*10mm 	No. N Quantity: 2 PCS Handle 23*17*100mmL 		
No. O Quantity: 2 PCS plastic plug Ø8*40 	No. P Quantity: 2 PCS Screw Ø4*38 	No. Q Quantity: 2 PCS Screw ø4x16mm 	No. R Quantity: 2 PCS Cloth strip L193*20mm 


Product structure

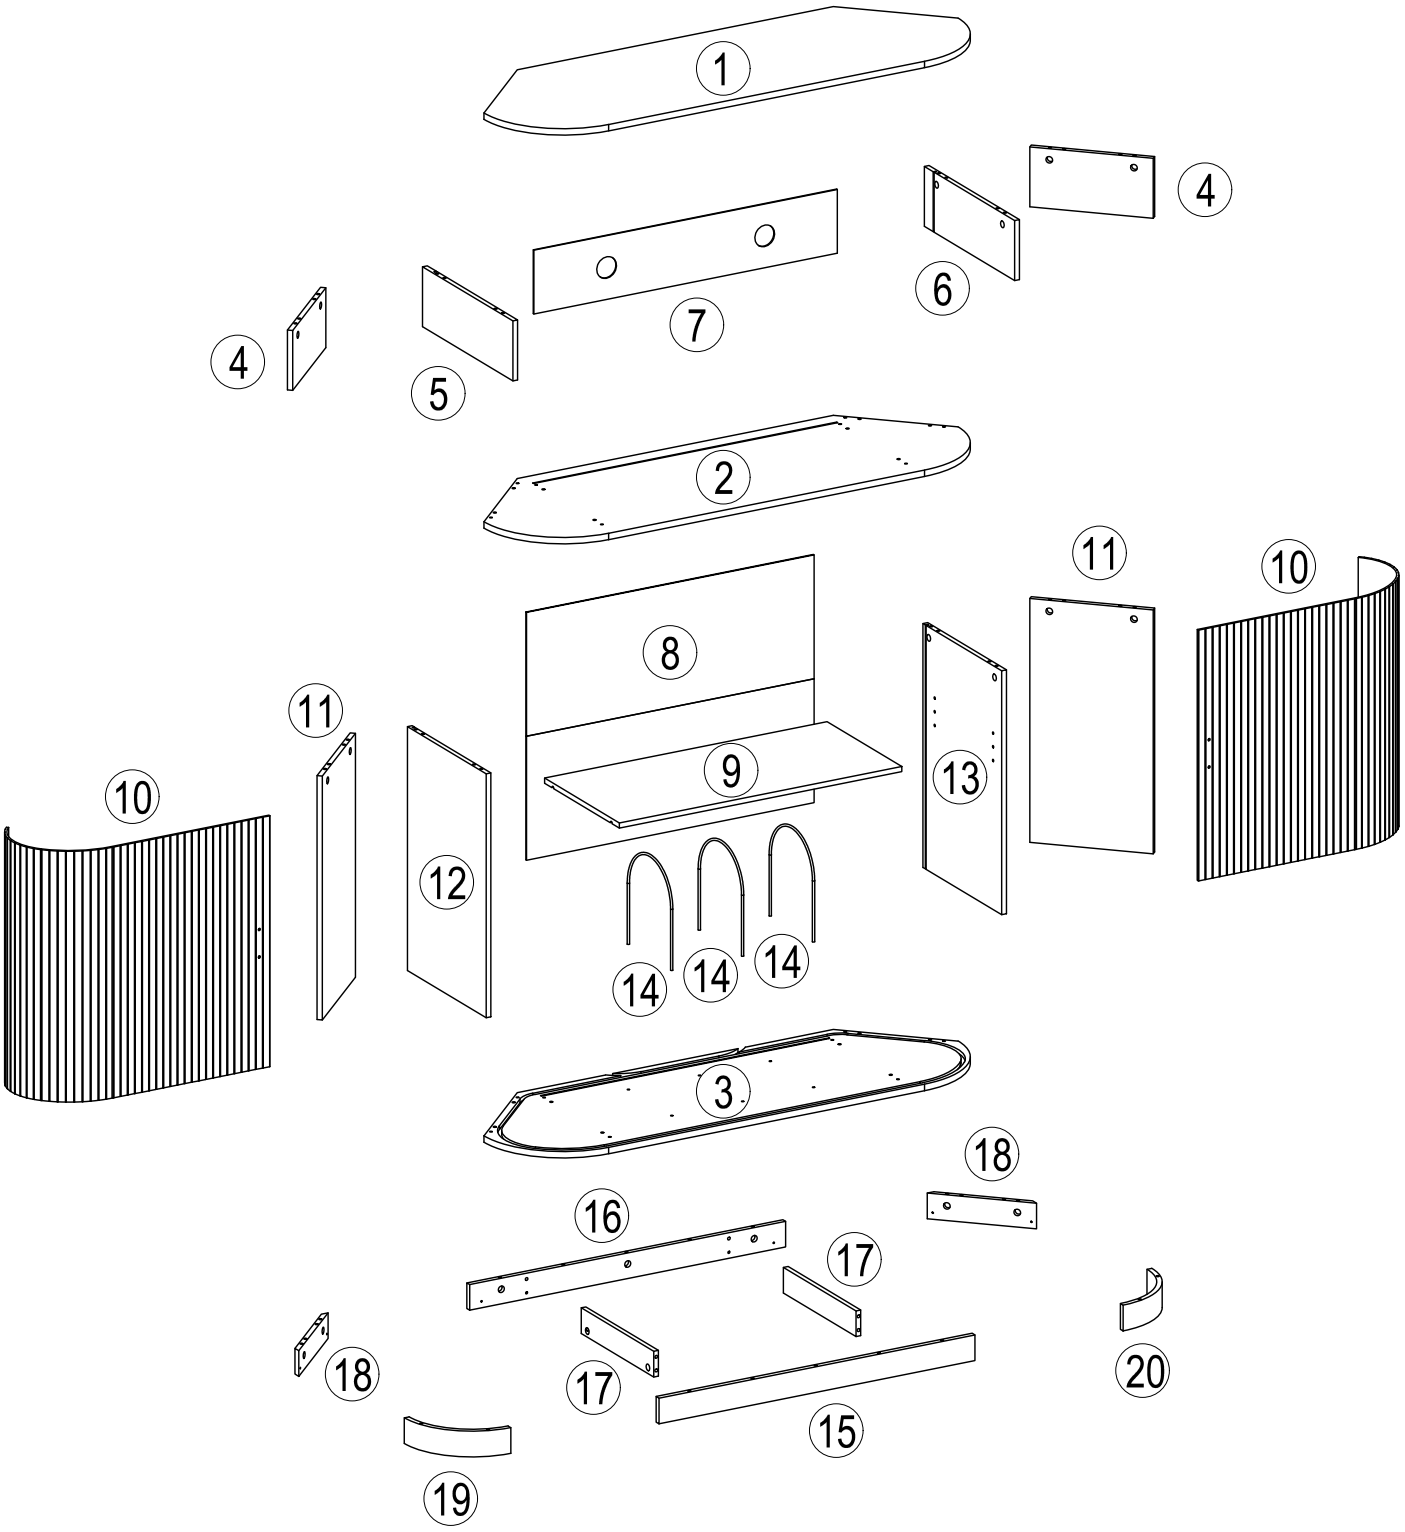





STEP 1

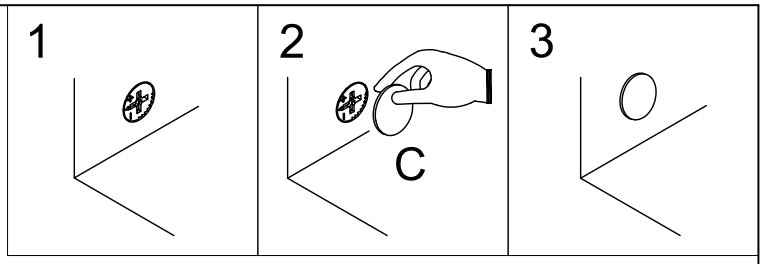


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

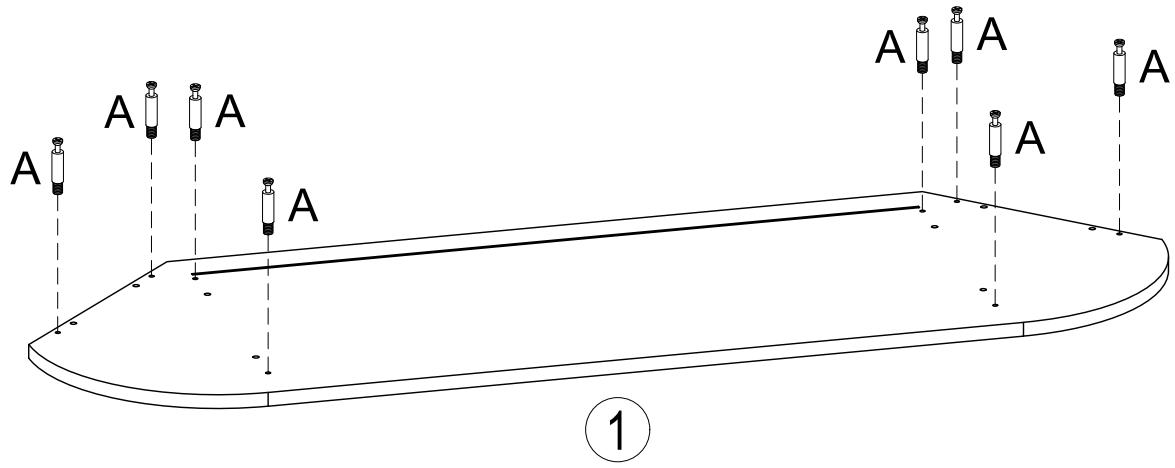

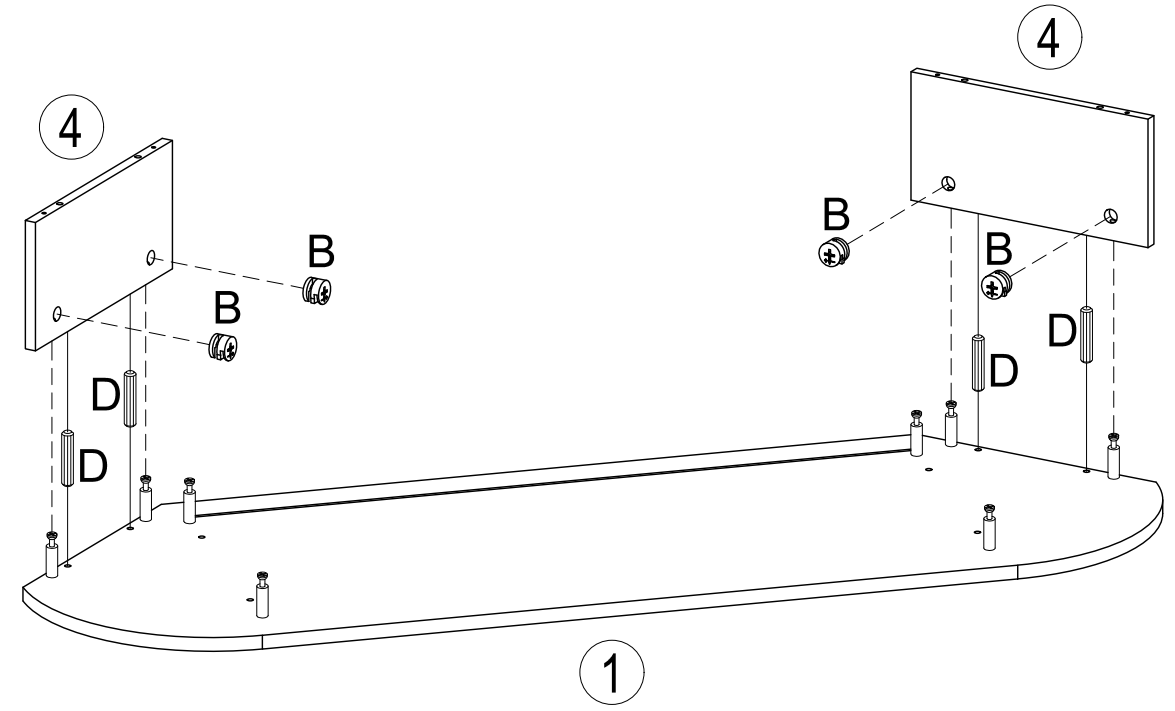


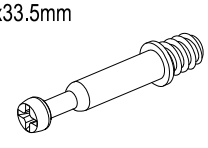No. A	No. B	No. C	No. D
Quantity: 8 PCS Cam Bolt ø6x33.5mm	Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm
			

STEP 2

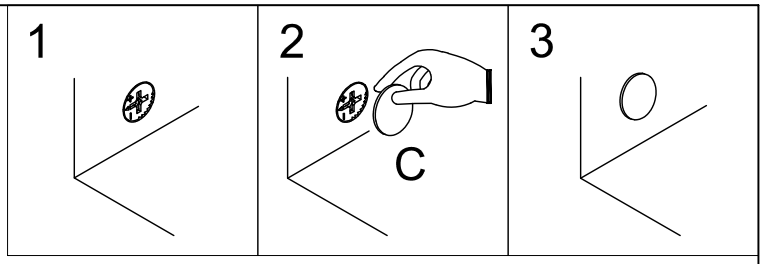


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

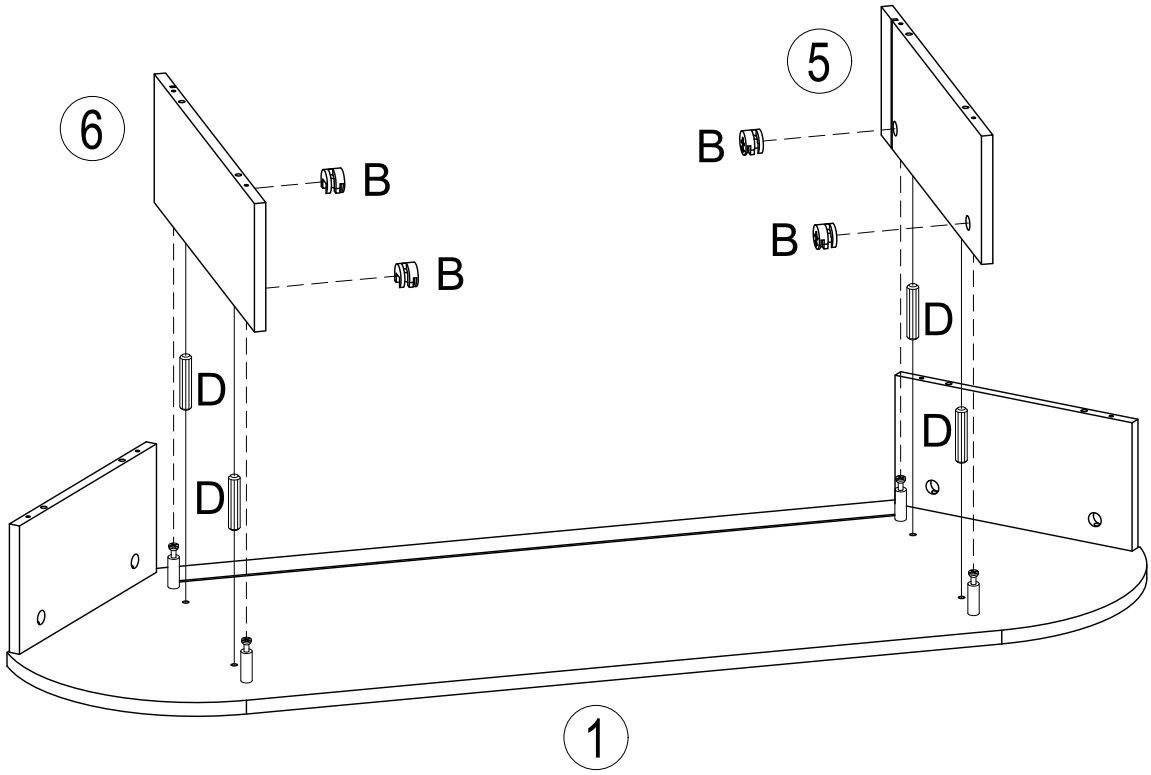


No. B	No. C	No. D
Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm


STEP 3

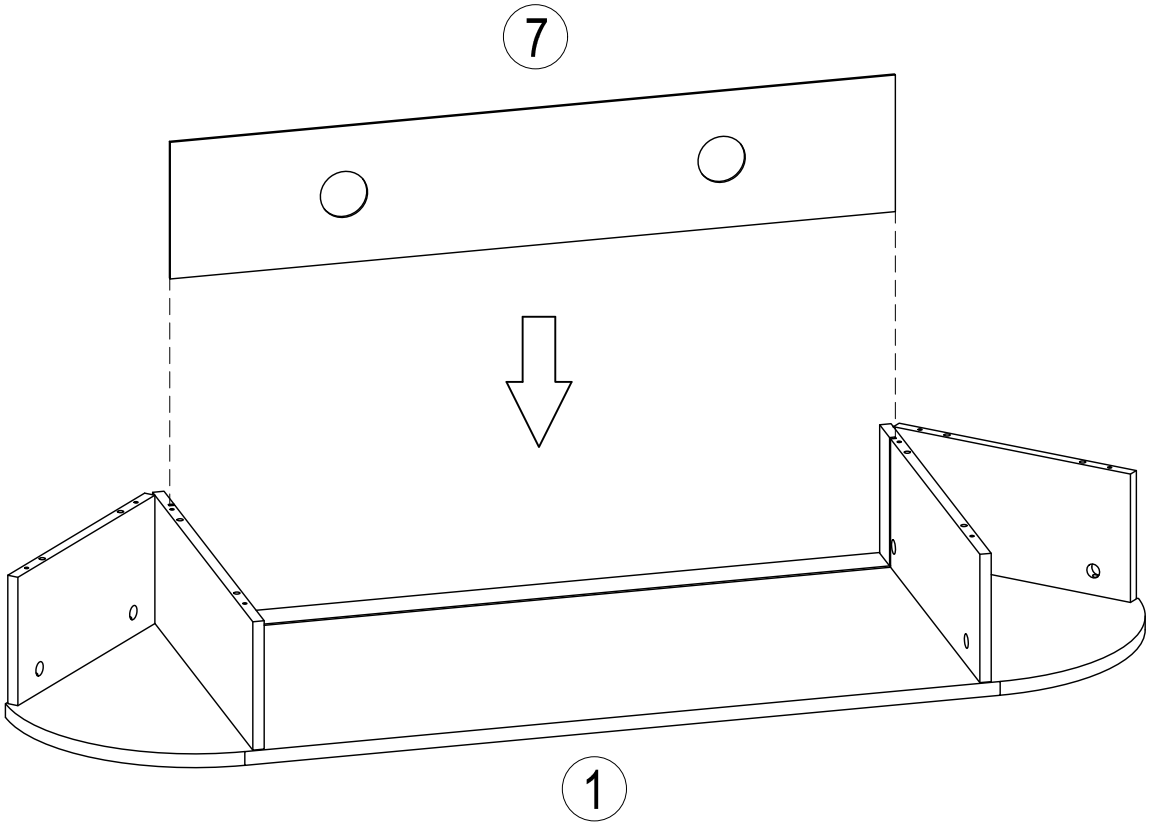


STEP 4

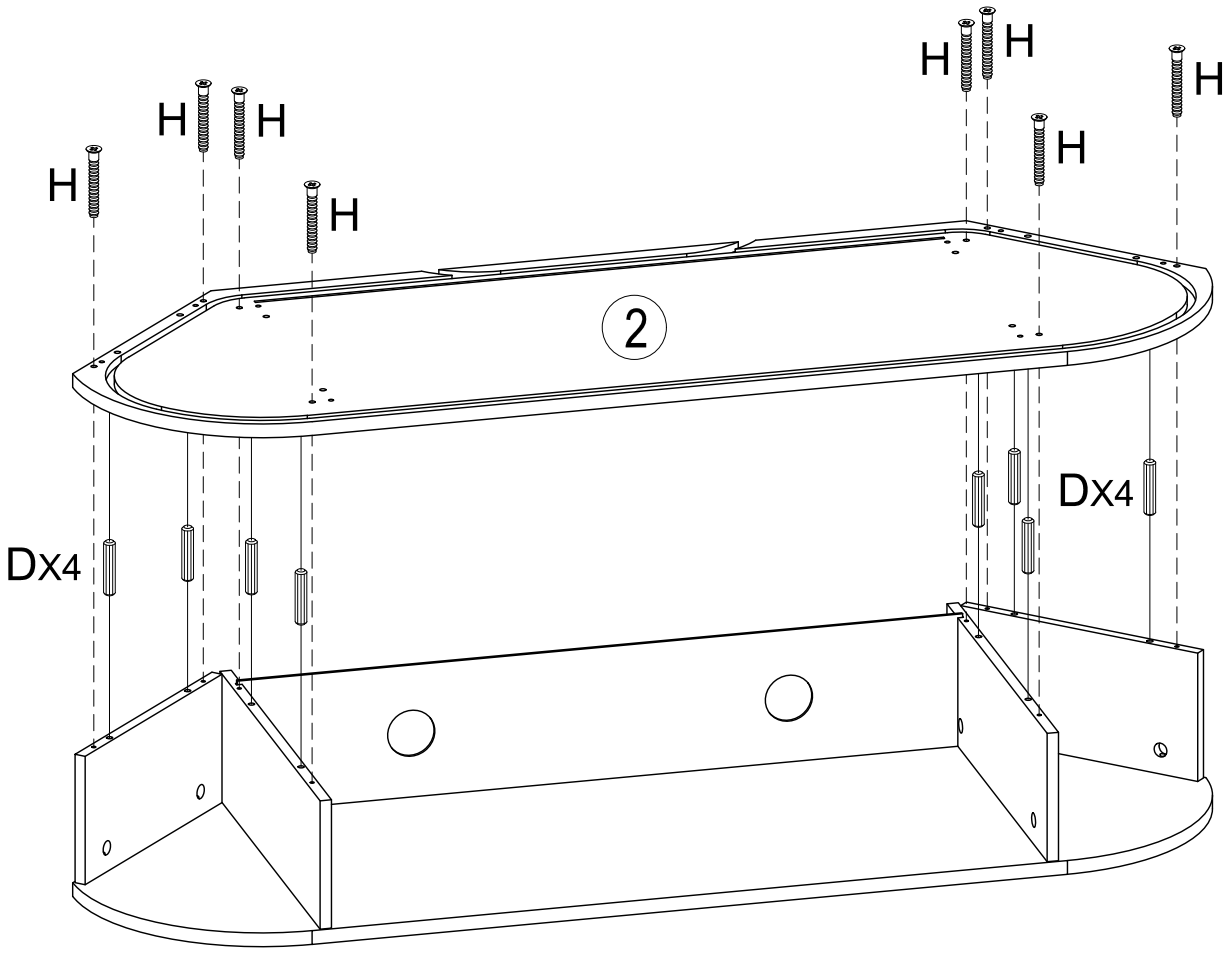


No. D	No. H
Quantity: 8 PCS Dowel ø6x30mm	Quantity: 8 PCS Screw ø5x38mm




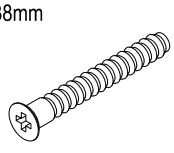


STEP 5

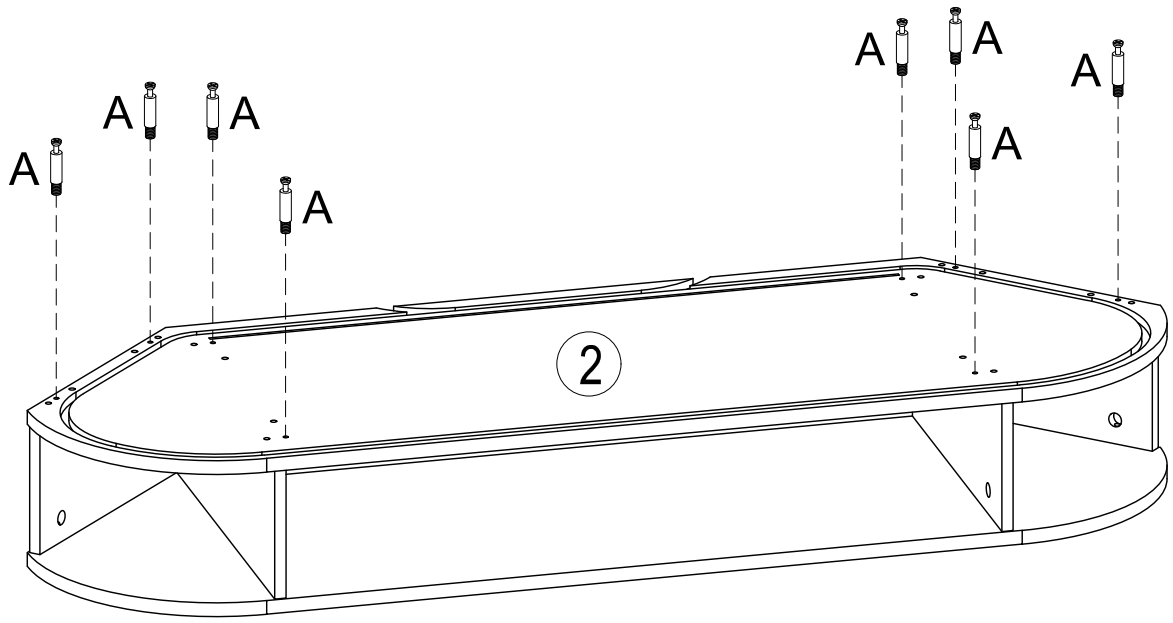


No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm

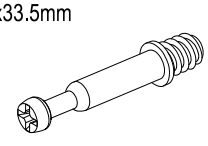

STEP 6

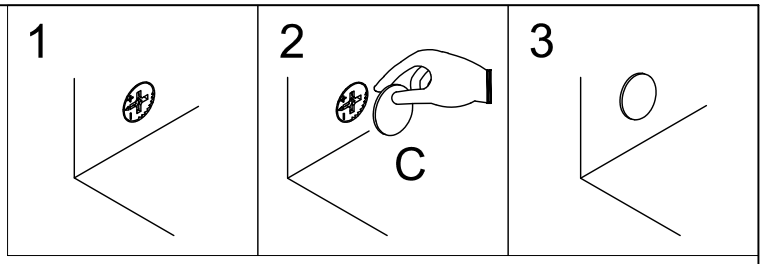


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

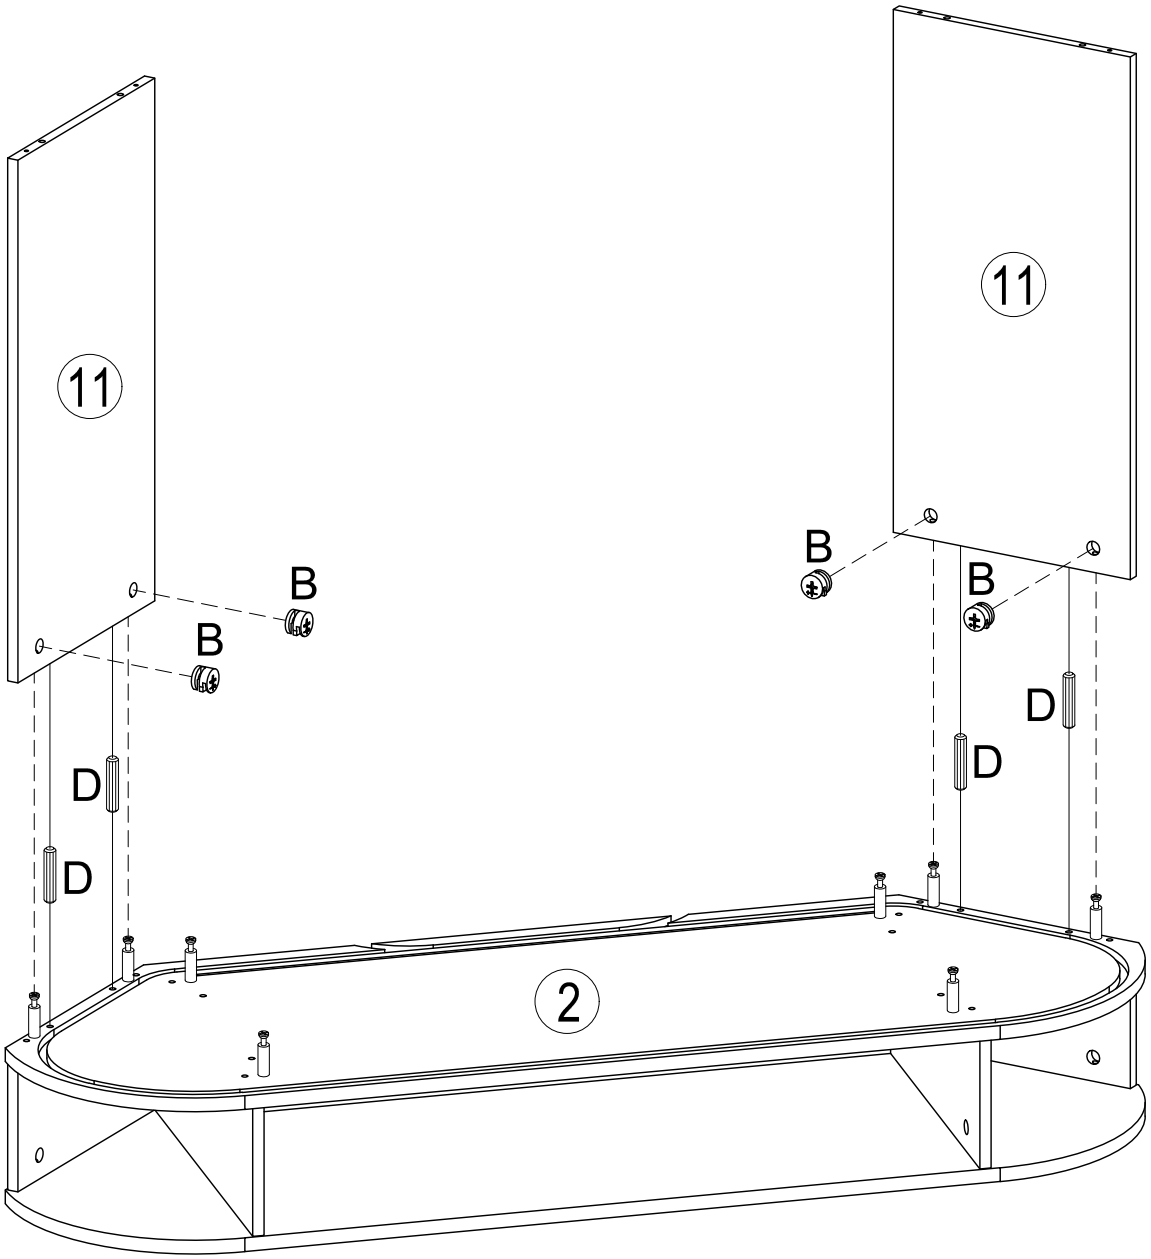


No. B	No. C	No. D
Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm

STEP 7

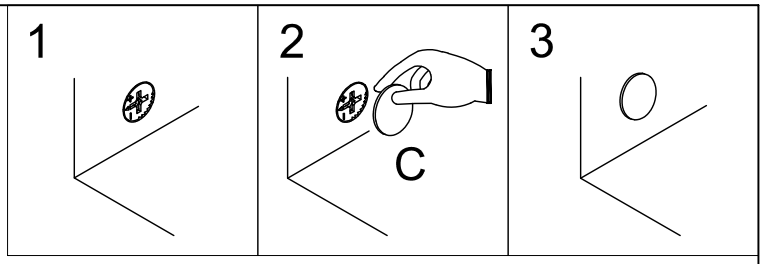


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

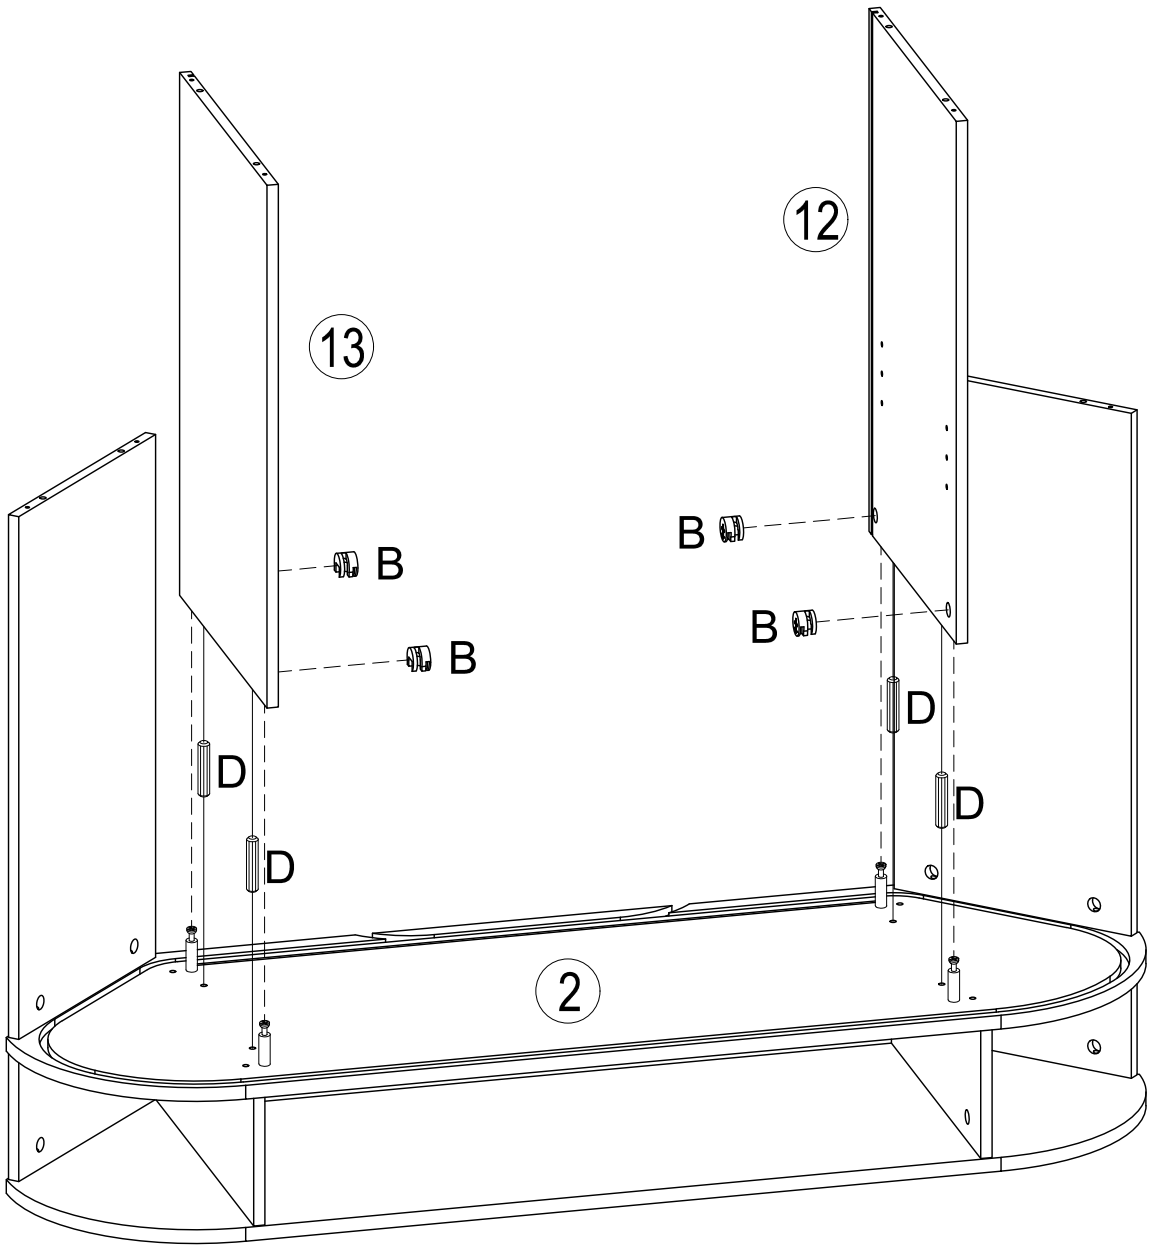


No. B	No. C	No. D
Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm


STEP 8

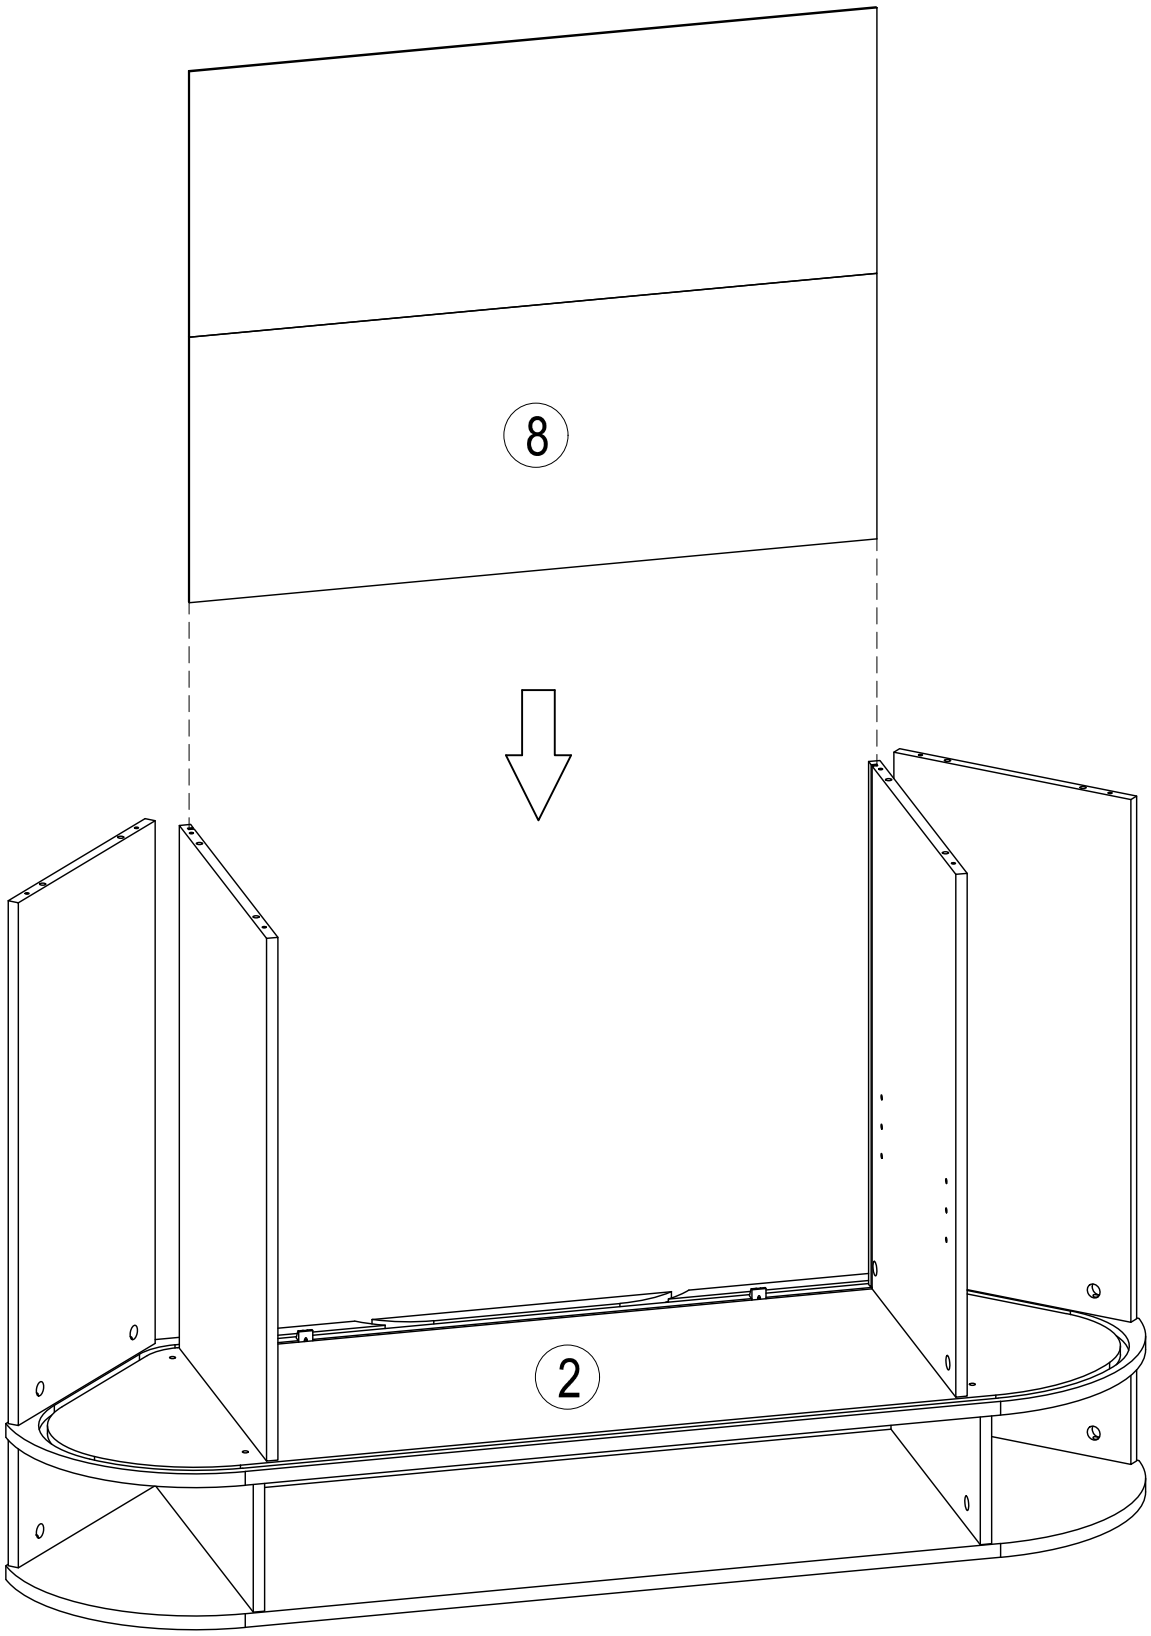


STEP 9

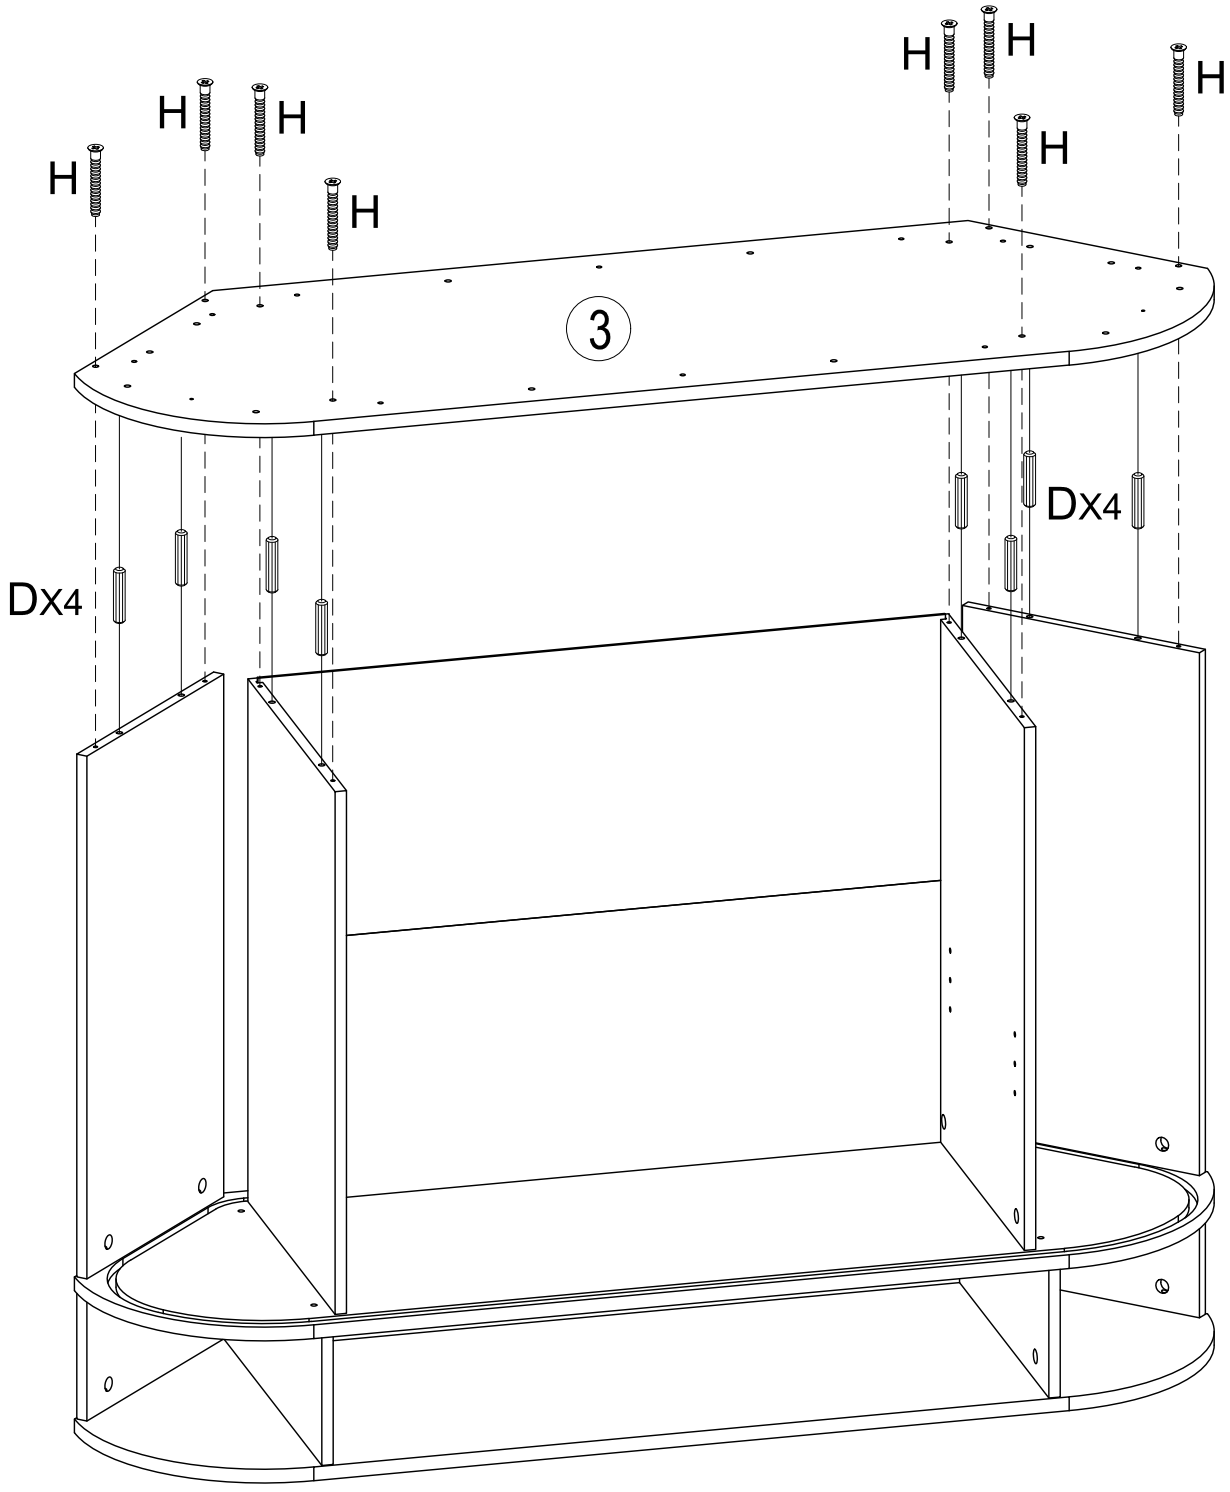


No. D	No. H
Quantity: 8 PCS Dowel ø6x30mm	Quantity: 8 PCS Screw ø5x38mm




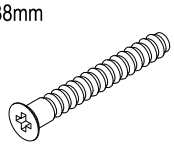


STEP 10

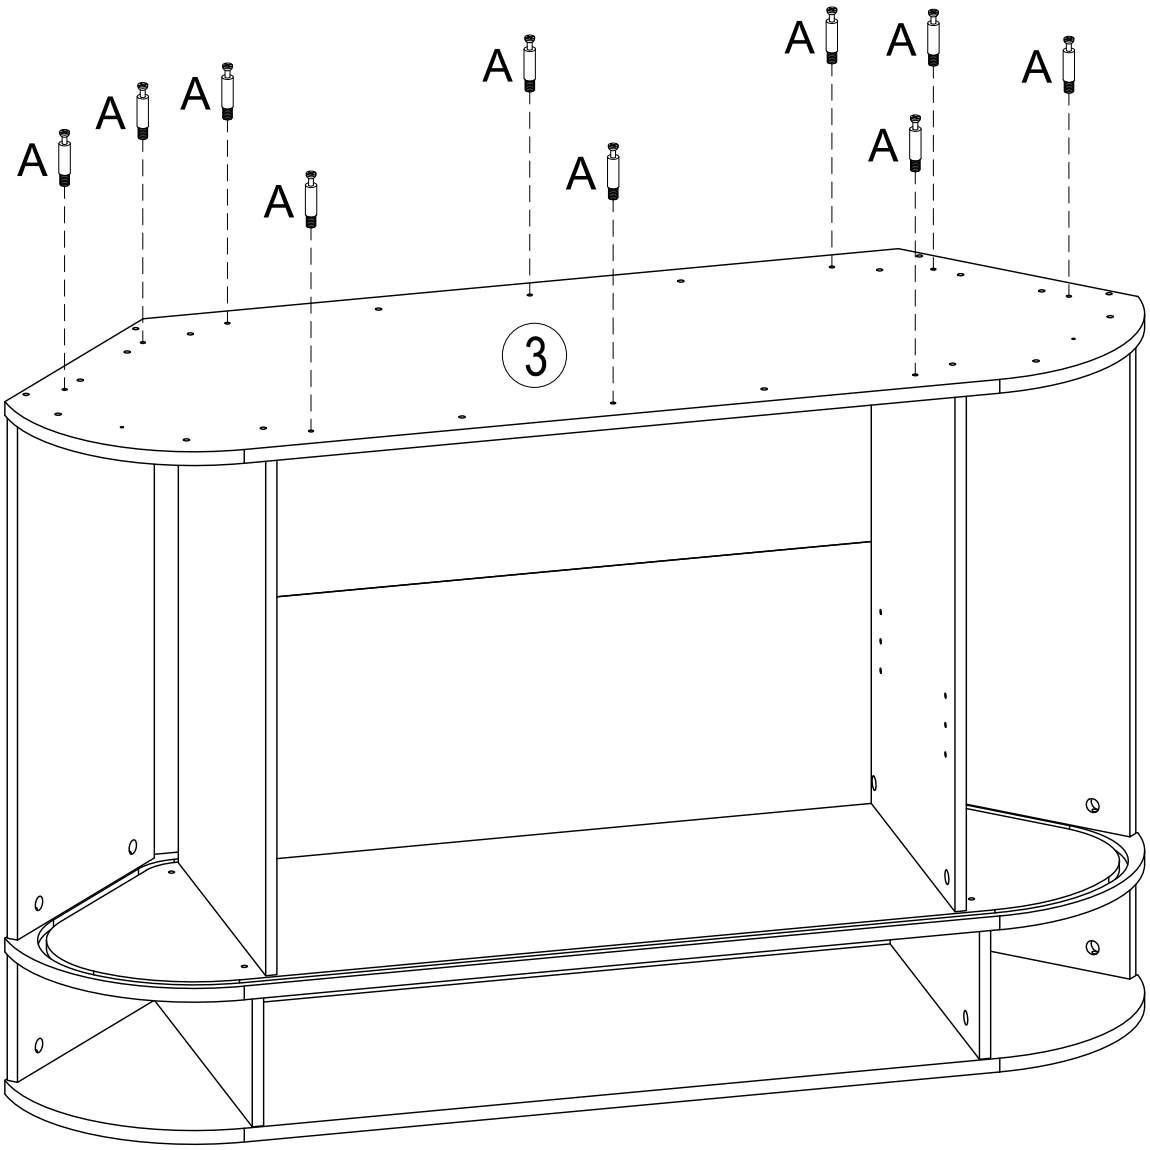


No. A
Quantity: 10 PCS
Cam Bolt
ø6x33.5mm

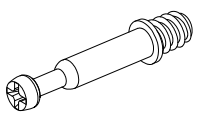




STEP 11

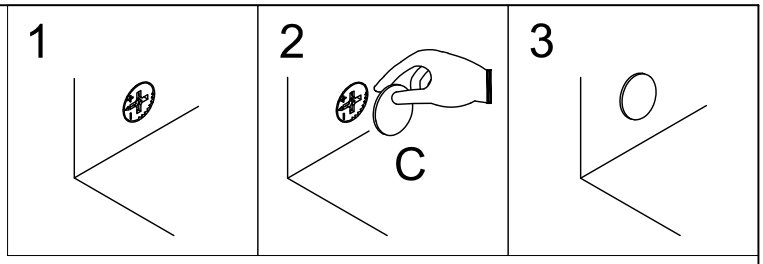


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

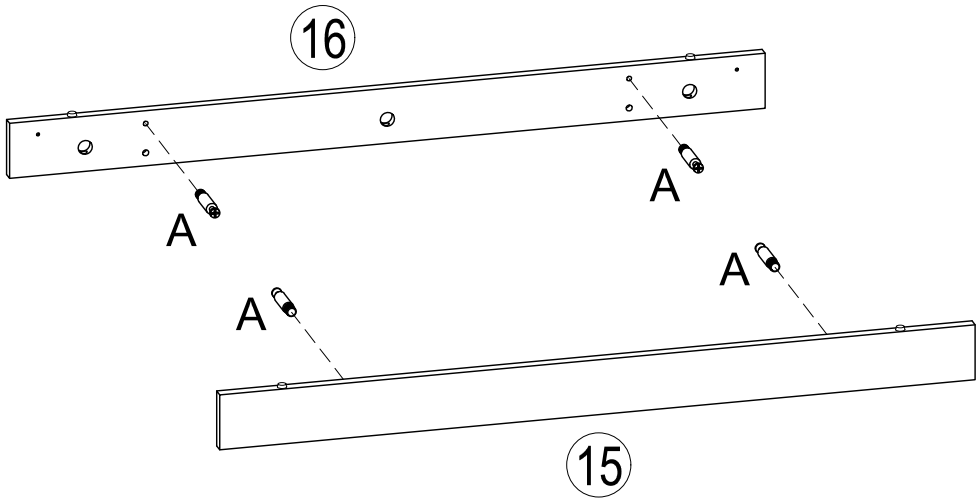

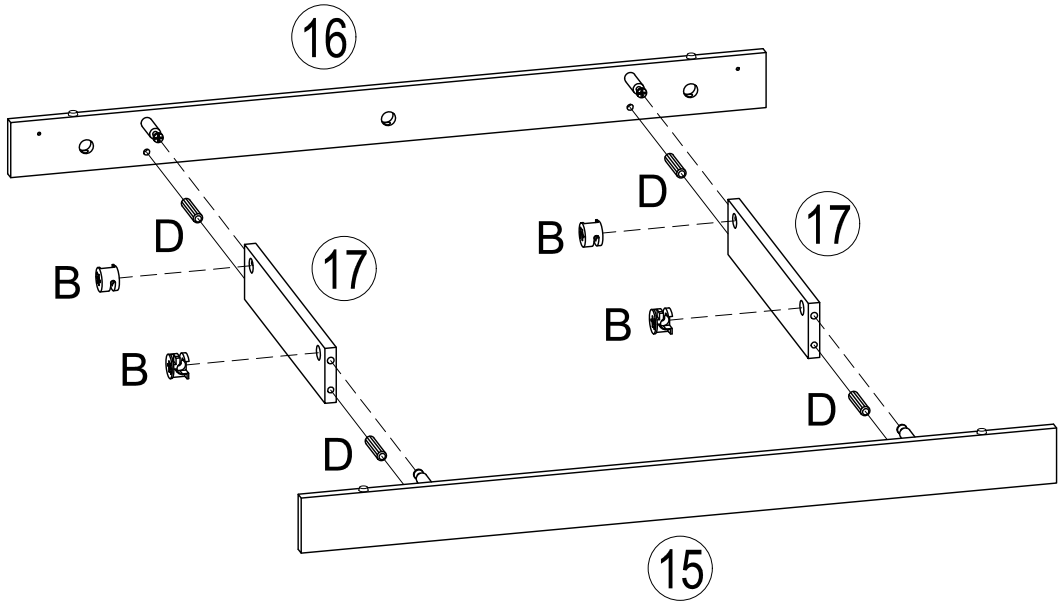


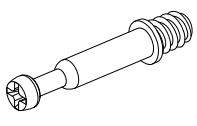No. A	No. B	No. C	No. D
Quantity: 4 PCS Cam Bolt ø6x33.5mm	Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm
			

STEP 12

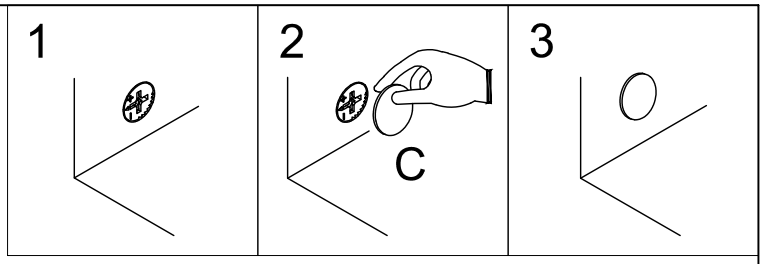


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

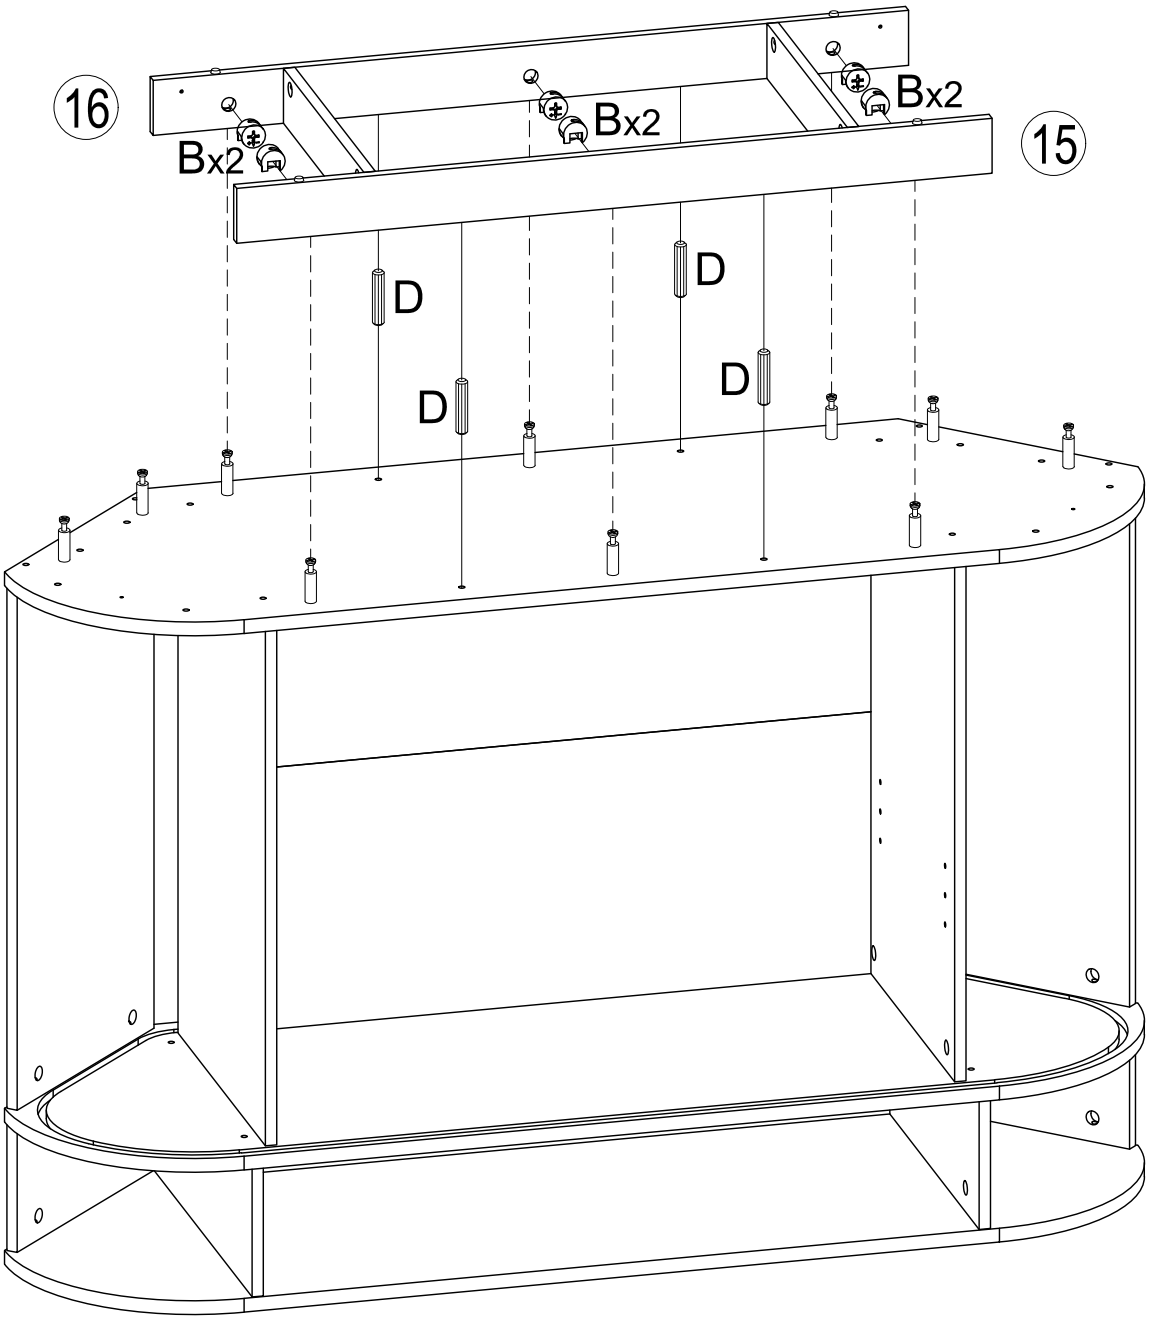


No. B	No. C	No. D
Quantity: 6 PCS Cam ø15x9.5mm	Quantity: 6 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm


STEP 13

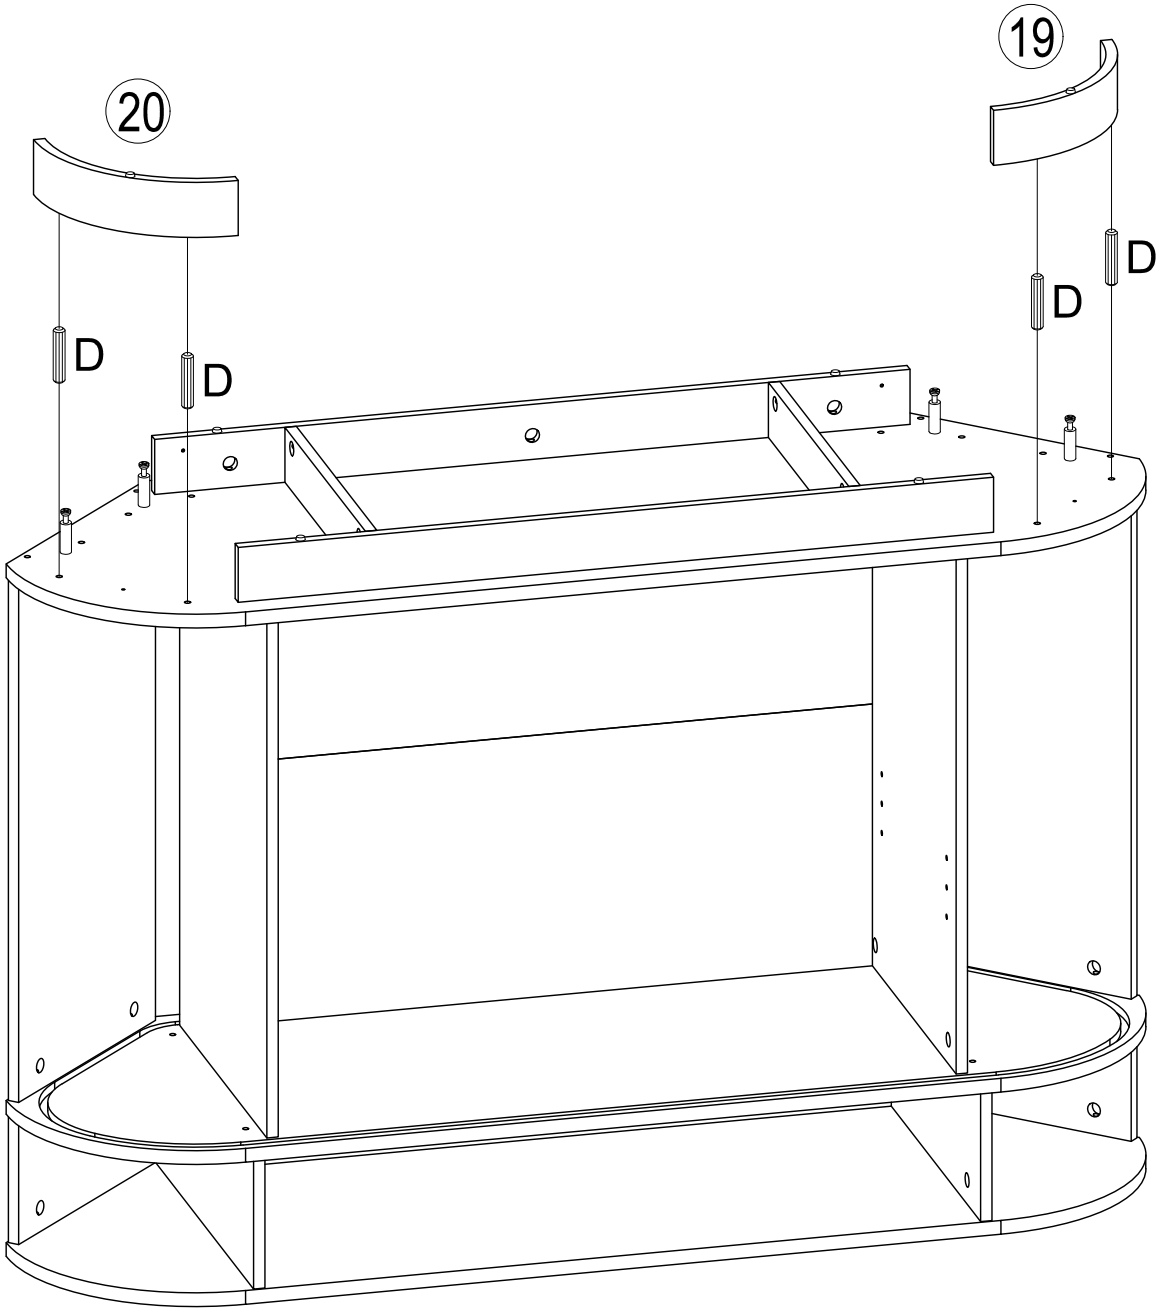


No. D
Quantity: 4 PCS
Dowel
ø6x30mm



STEP 14

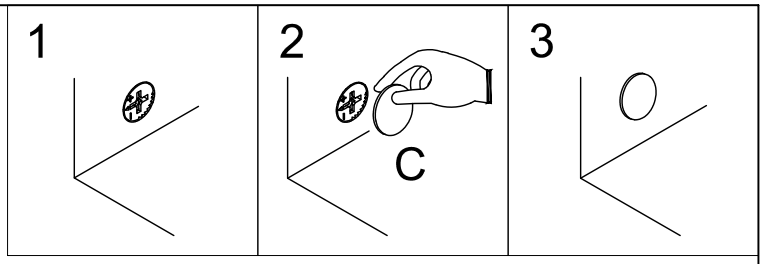



C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)


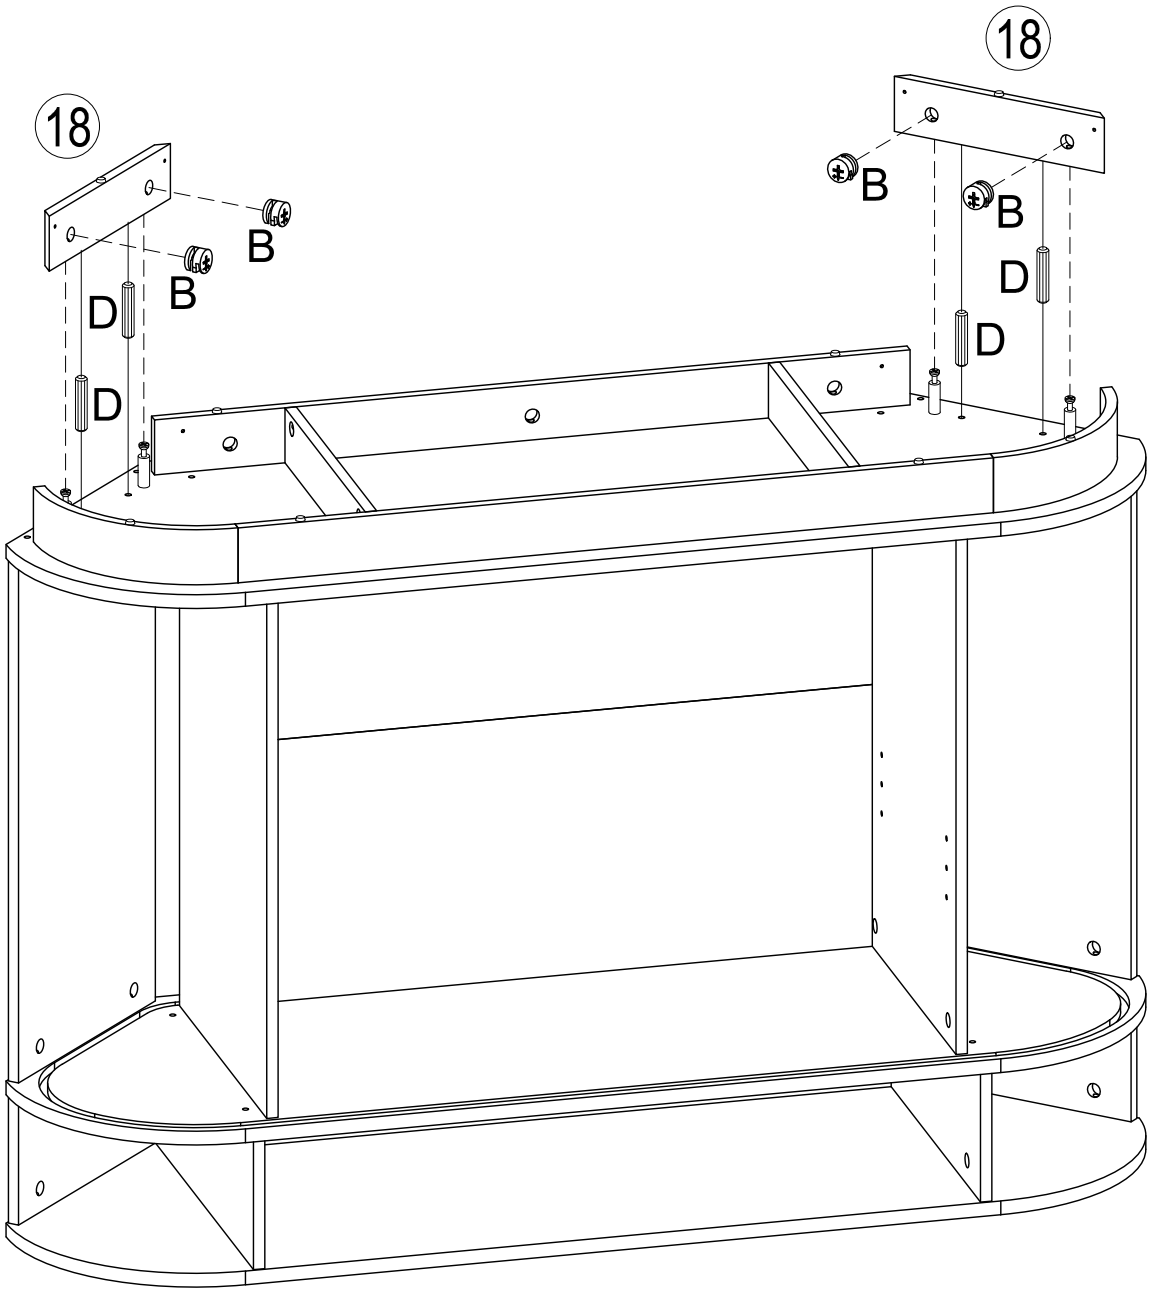


No. B	No. C	No. D
Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm


STEP 15

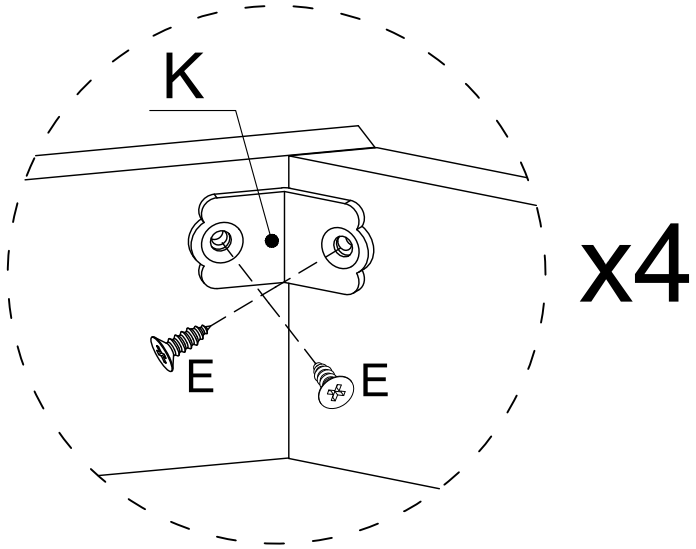

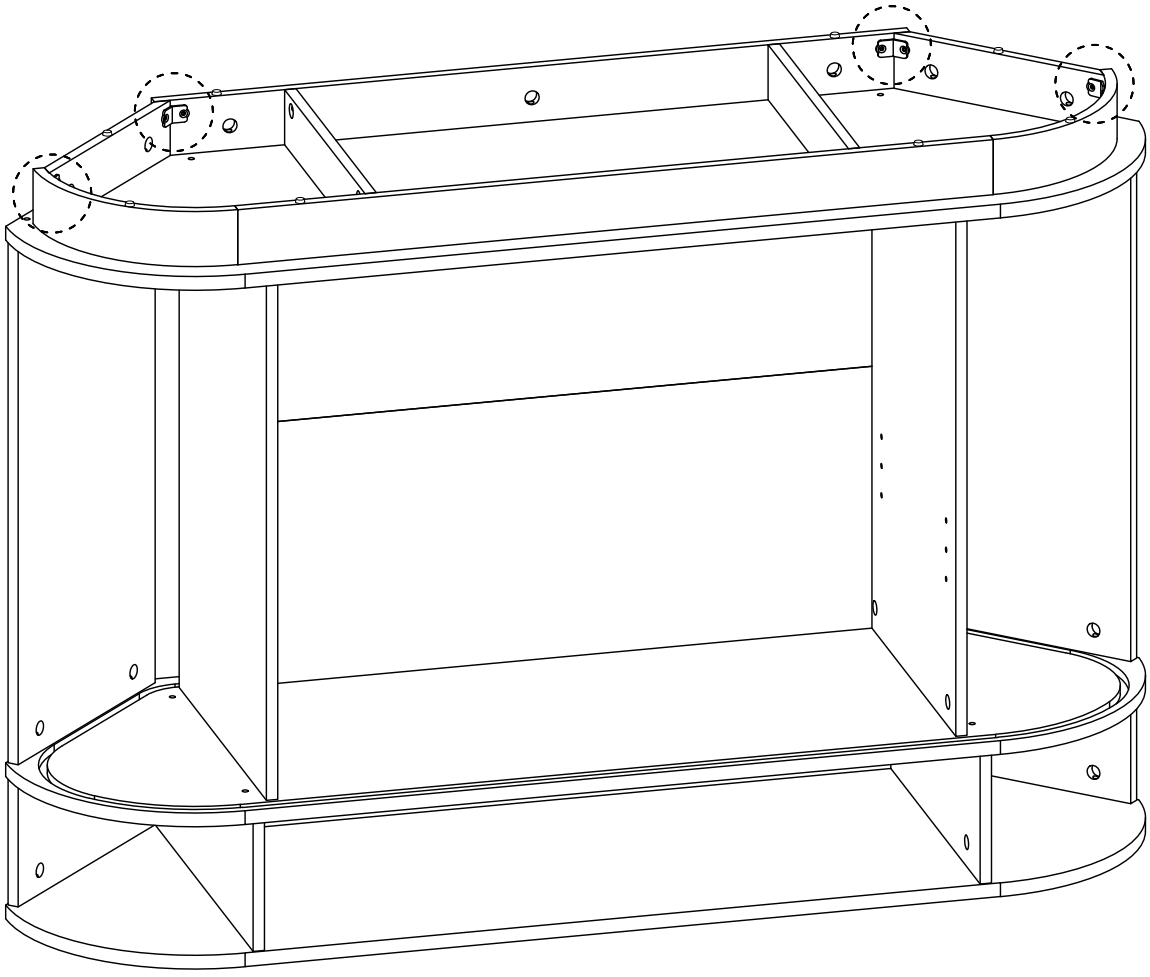


No. E	No. K
Quantity: 8 PCS	Quantity: 4 PCS
Screw	Iron Plate
ø3.5x12mm	19x19*18mm/135°
	


STEP 16



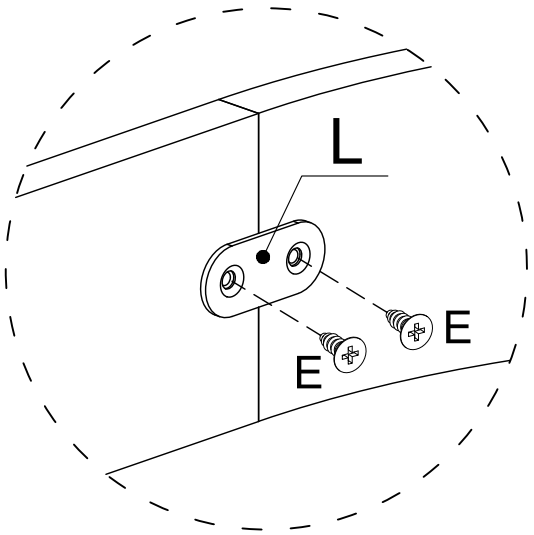


x2

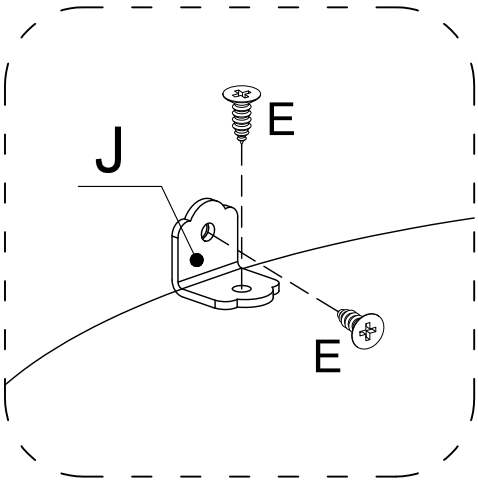


x2

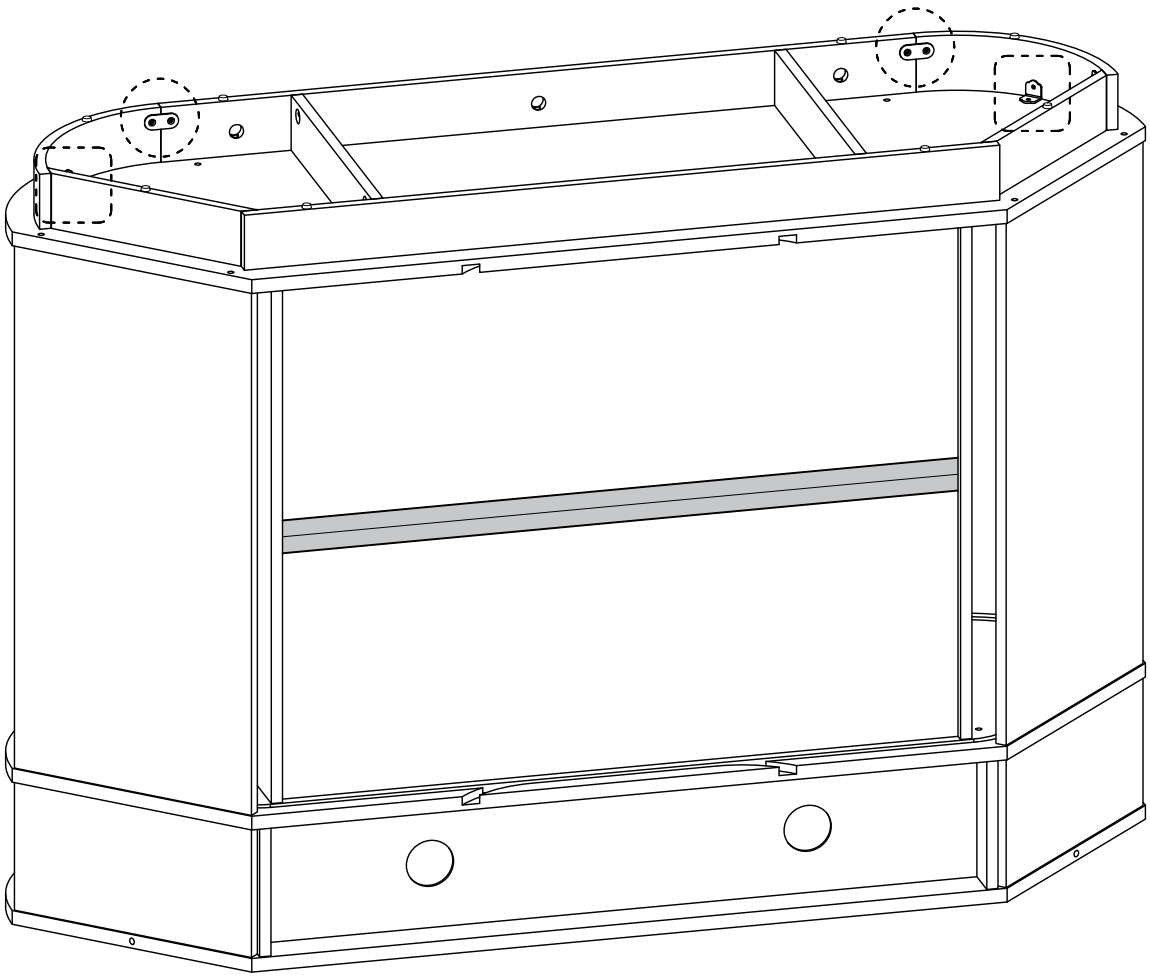



No. E	No. J	No. L
Quantity: 8 PCS Screw ø3.5x12mm	Quantity: 2 PCS Iron Plate 19x19*18mm/90°	Quantity: 2 PCS Iron Plate 36x16mm
		

STEP 17

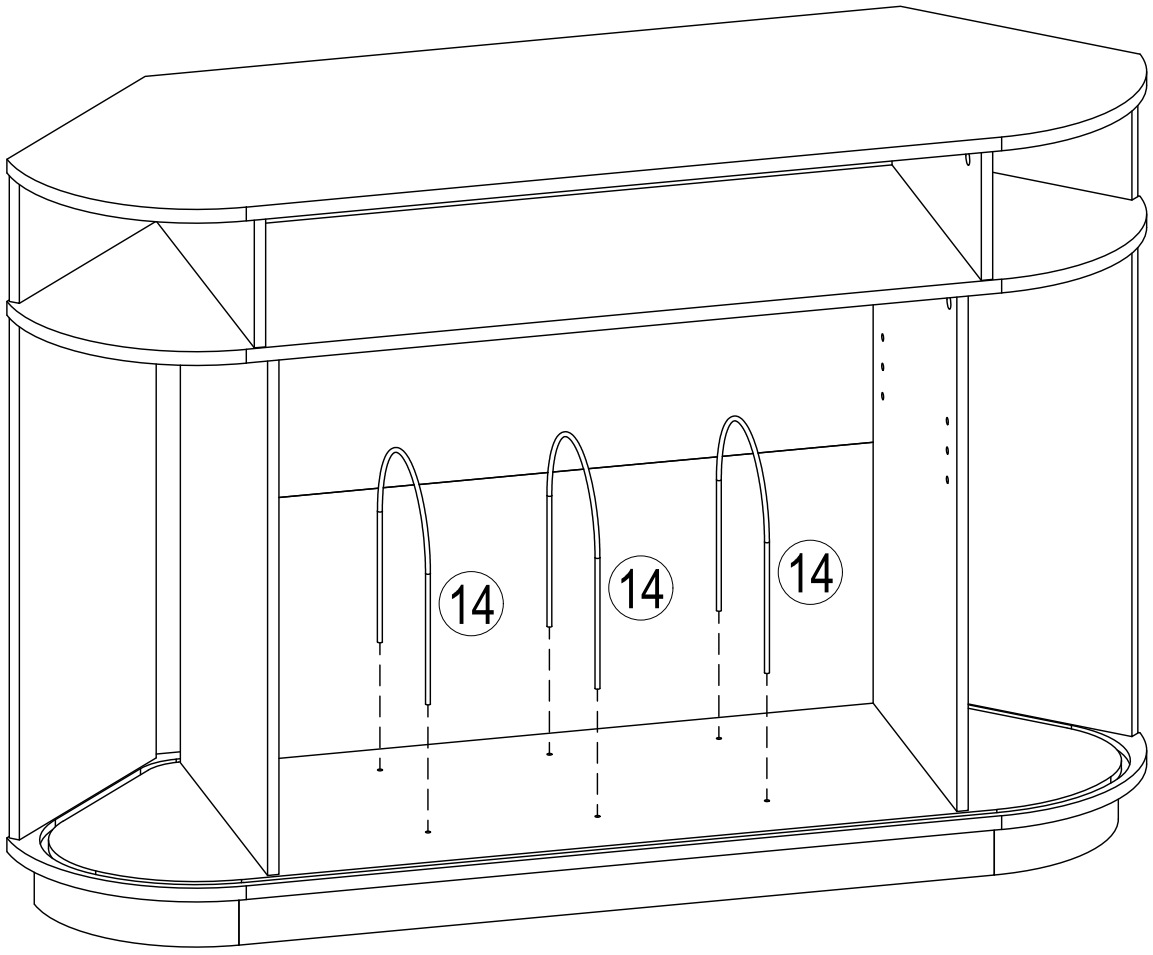


STEP 18

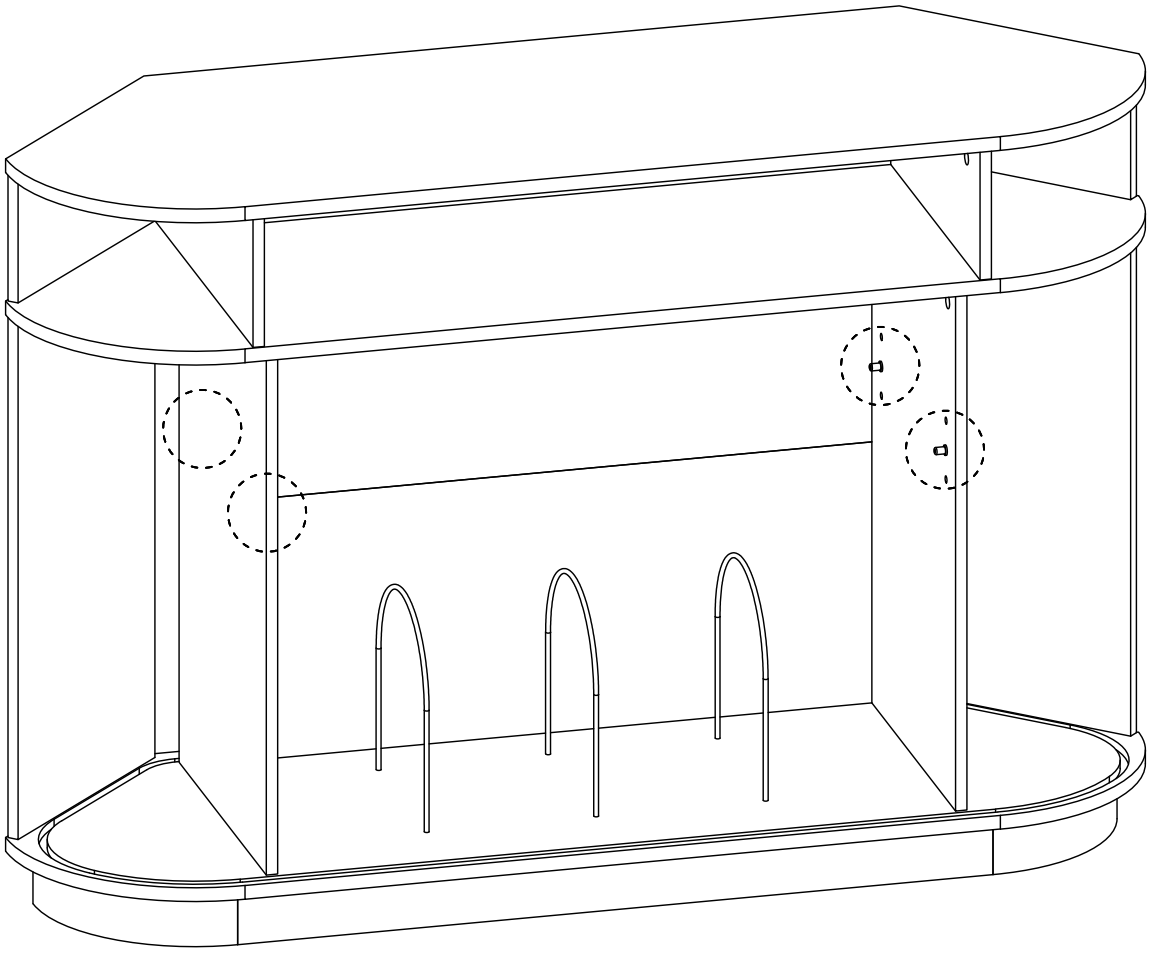


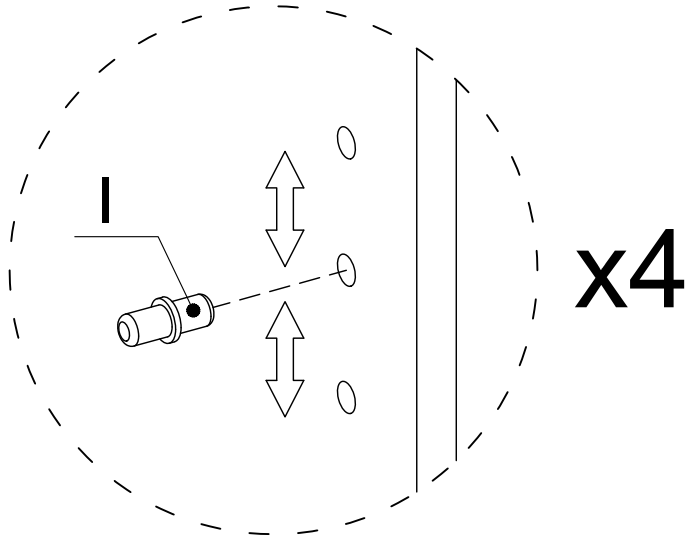


No. I
Quantity: 4 PCS
ø5x16mm




STEP 19

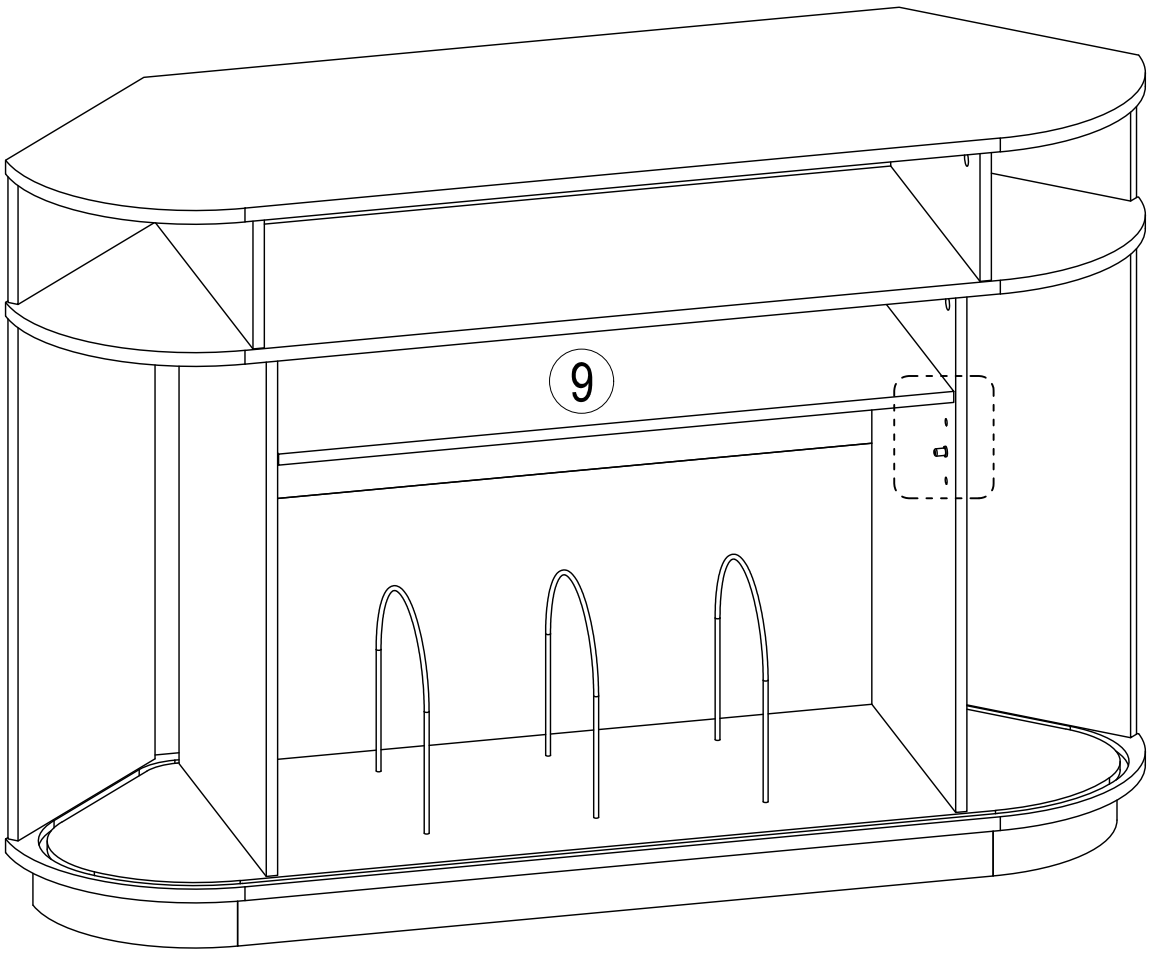


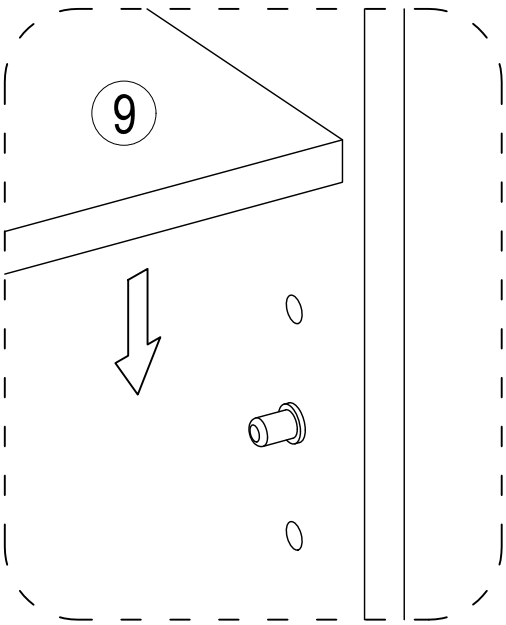


STEP 20

Please Note: To ensure greater product stability,
parts M and F must be installed according to the instructions.
Failure to install them will cause the product to wobble.

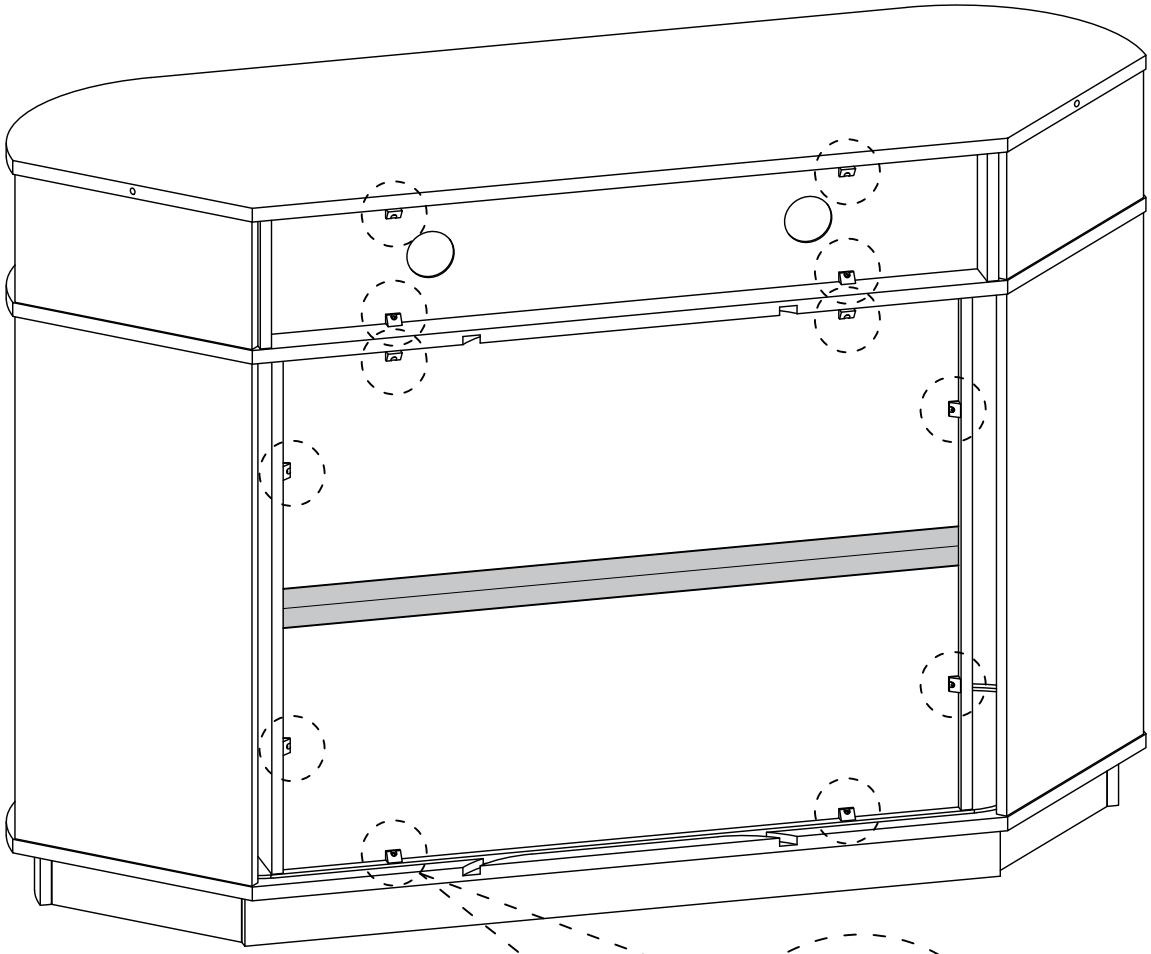


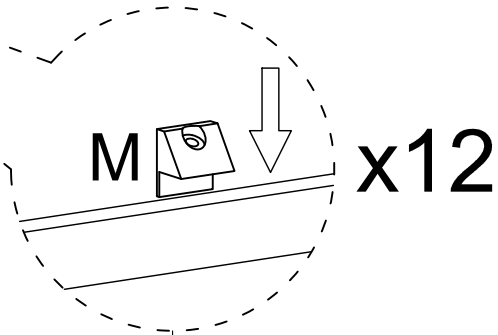

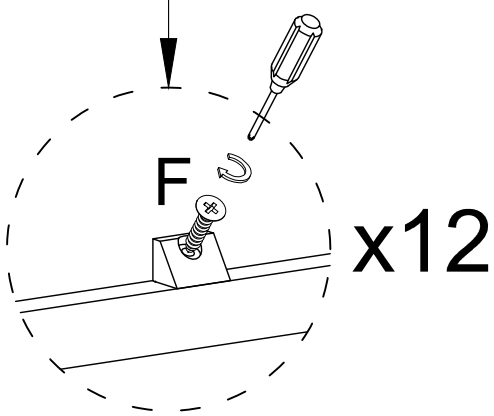


No. F	No. M
Quantity: 12 PCS Screw ø3x16mm	Quantity: 12 PCS plastic buckle 15*15*10


STEP 21

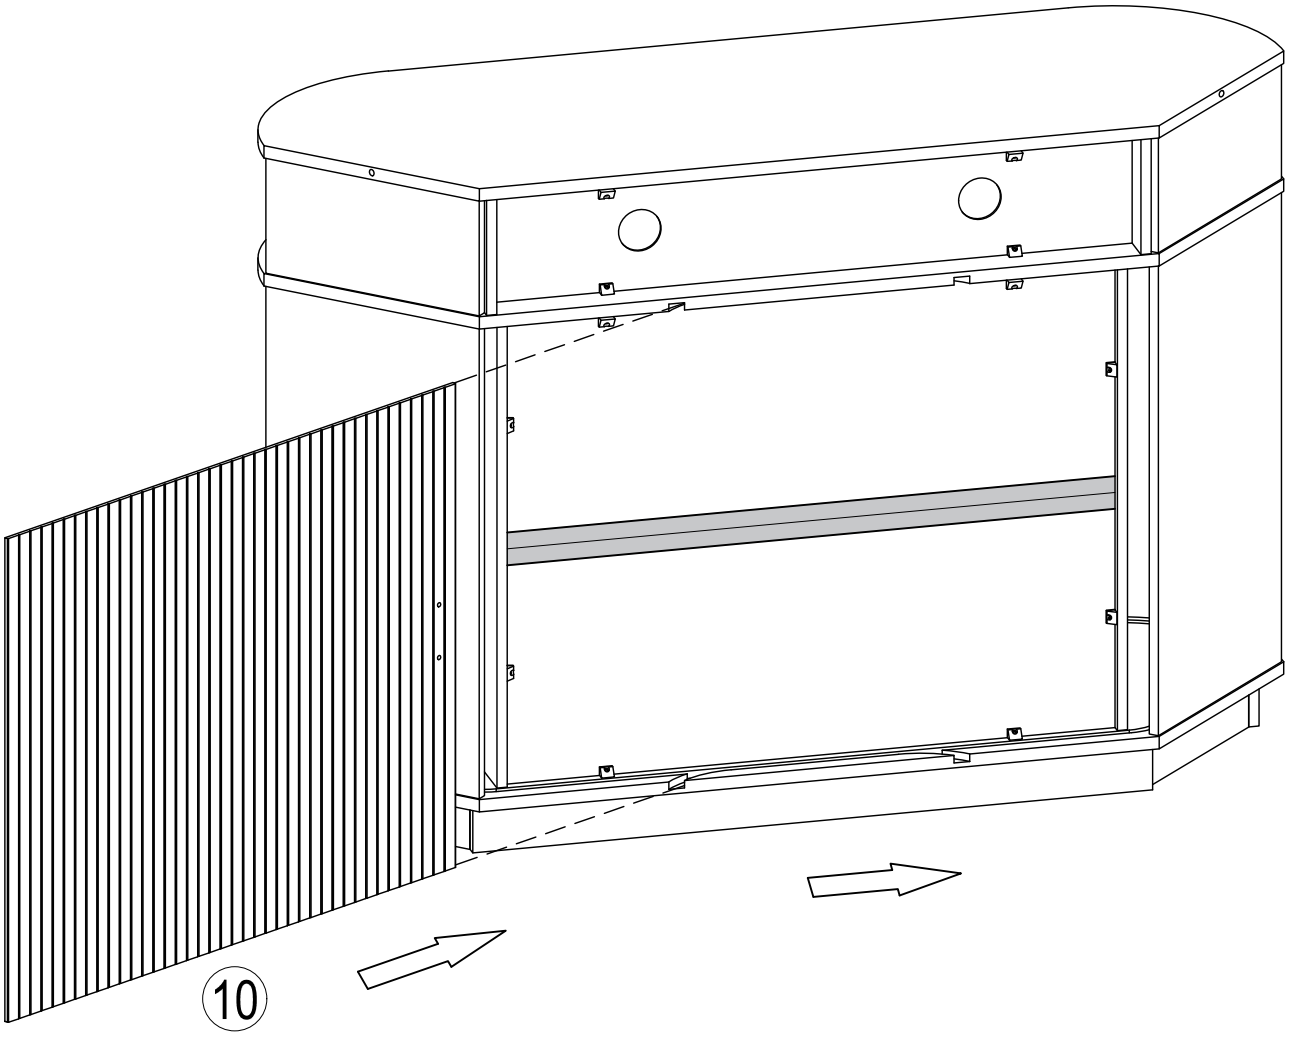


STEP 22

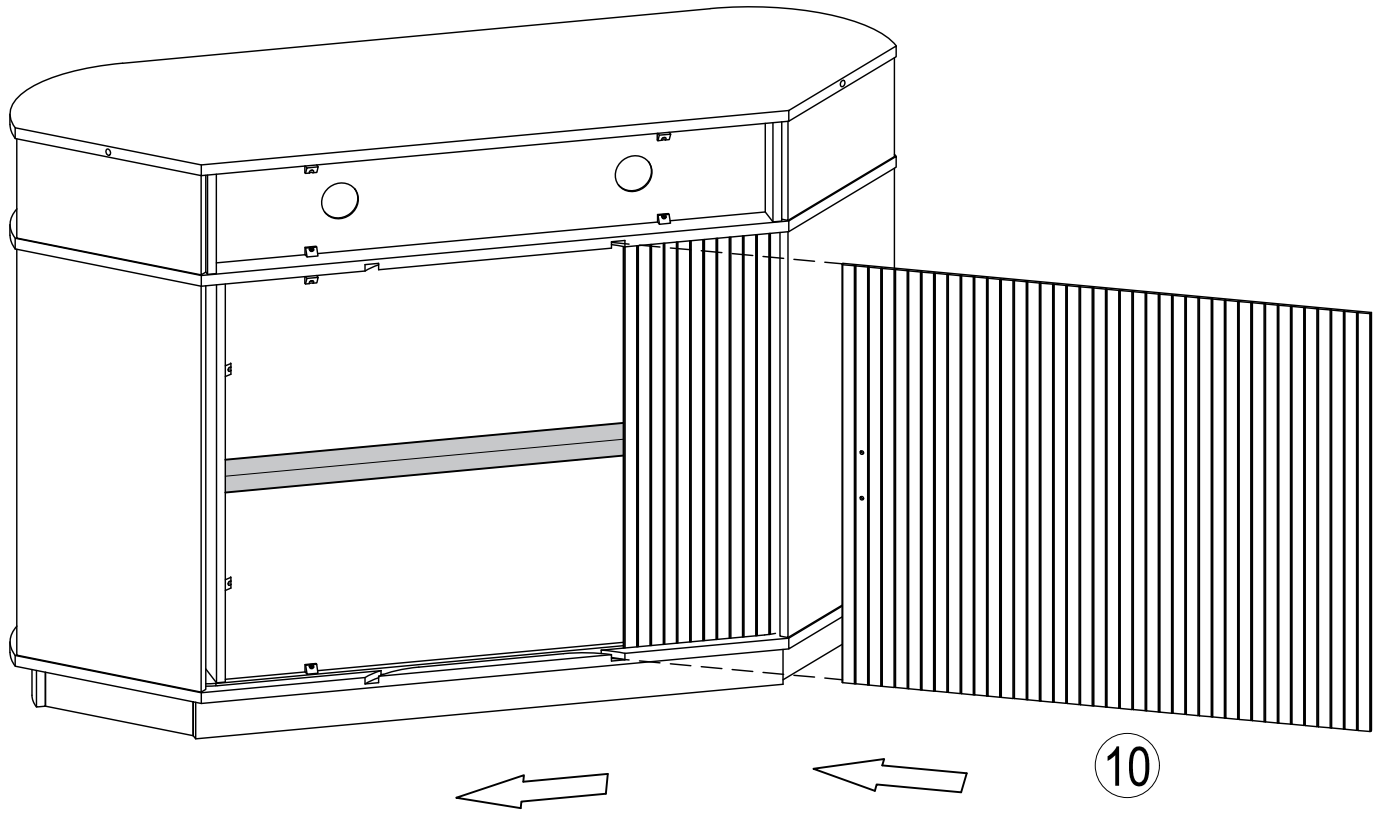


STEP 23

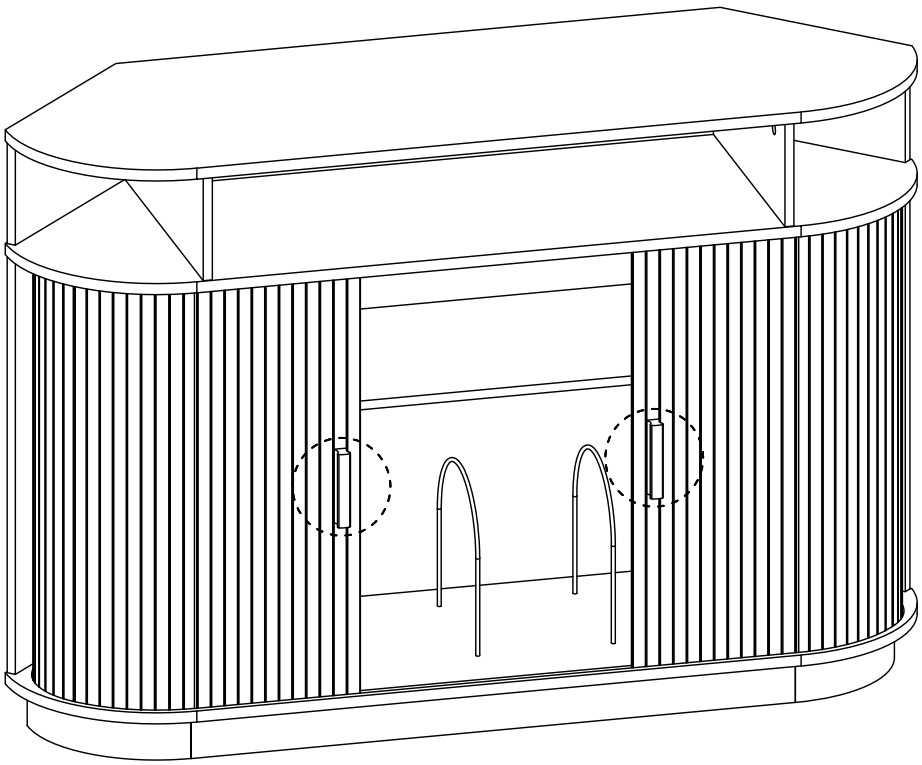

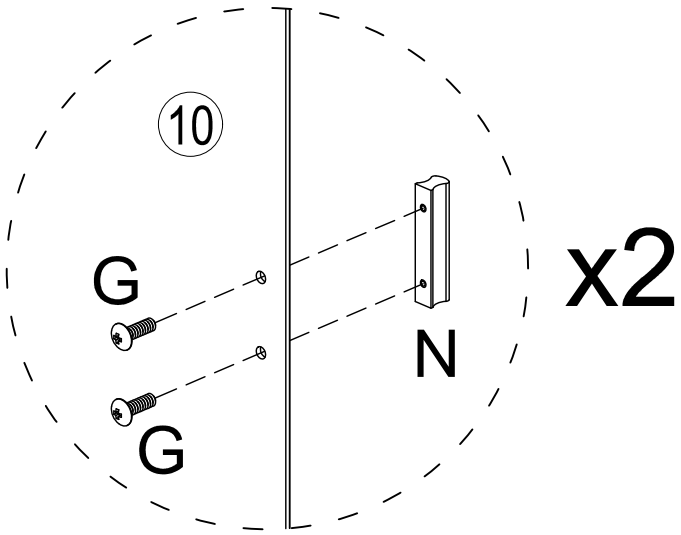



No. G	No. N
Quantity: 4 PCS Bolt M4x12mm	Quantity: 2 PCS Handle 23*17*100mmL

STEP 24

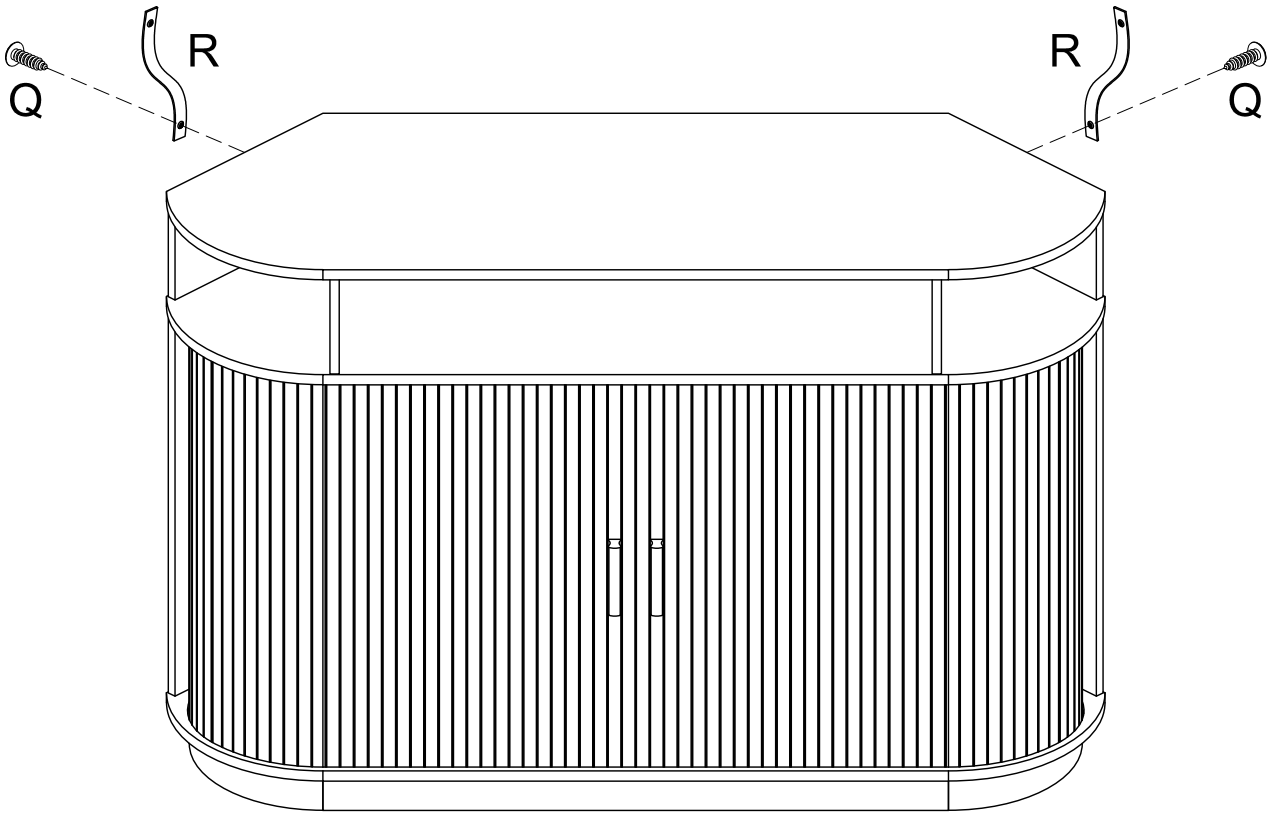



No. Q	No. R
Quantity: 2 PCS Screw ø4x16mm	Quantity: 2 PCS Cloth strip L193*20mm




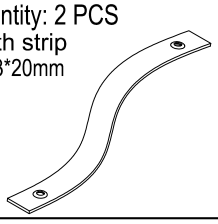

STEP 25

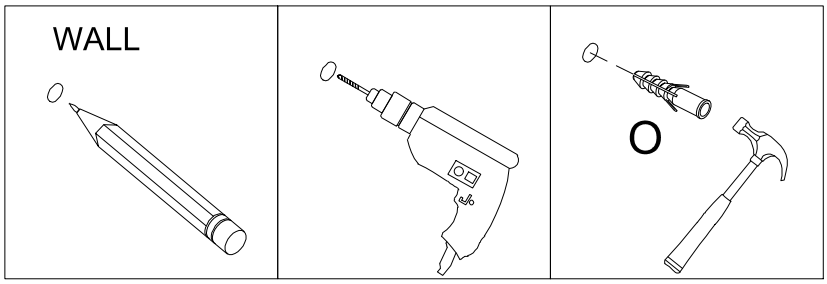

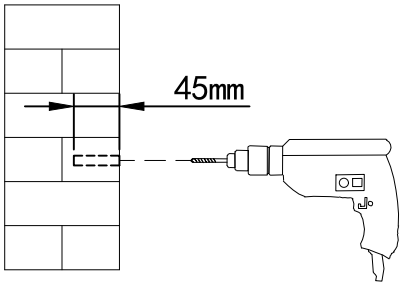

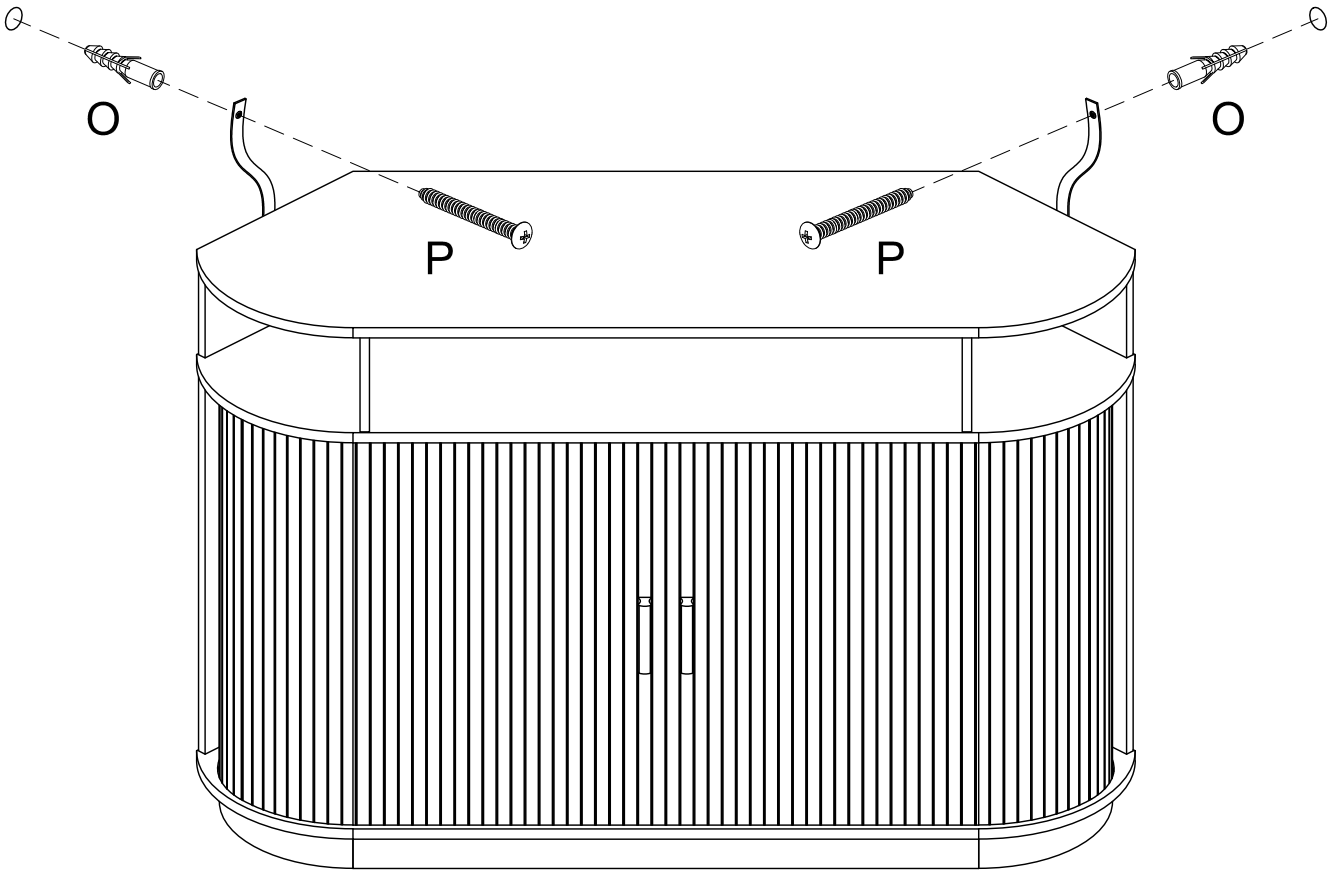

No. O	No. P
Quantity: 2 PCS plastic plug Ø8*40	Quantity: 2 PCS Screw Ø4*38
