


ASSEMBLY INSTRUCTIONS


Tall Bookcase

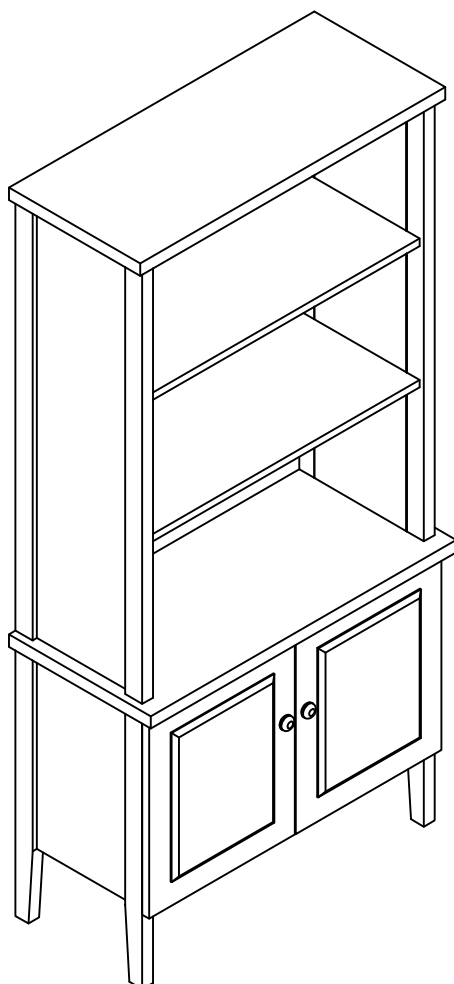


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


Part list :




A1. Top Side panel(L&R) Qty: 2

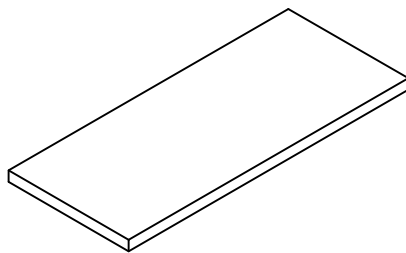


A2. Top Panel Qty: 1

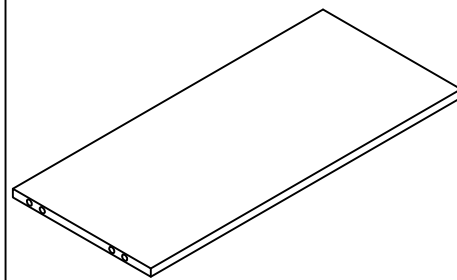


A3. Top Shelf Qty: 2

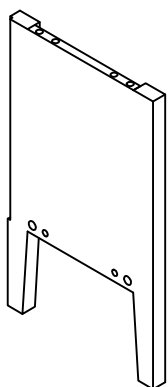


A4. Low side panel(L&R) Qty:2

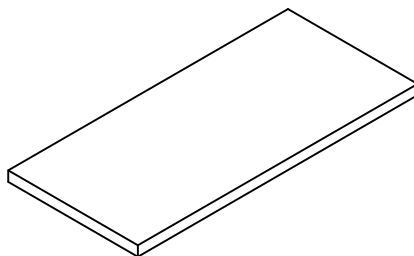


A5. Divider Panel Qty: 1

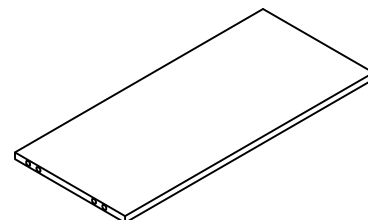


A6. Bottom Panel Qty: 1

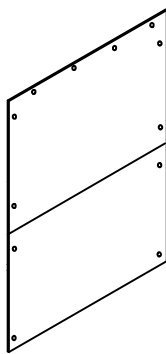


A7. Top Back Panel Qty: 1

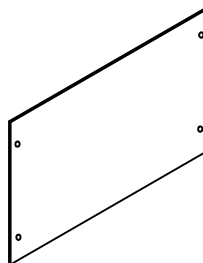


A8. Middle Back Panel Qty: 1

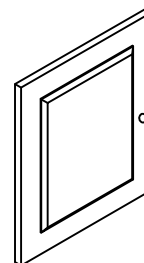

A9. Door Qty: 2

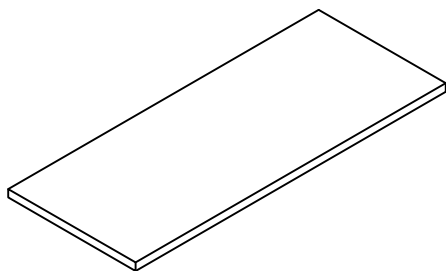







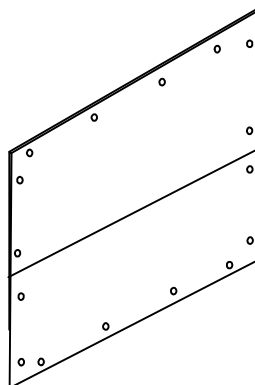



A10. Low shelf Qty: 1



A11. Low Back Panel Qty: 1

Hardware list :

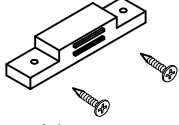 B1. Camlock Qty: 20	 B2. Wood Dowel Qty: 12	 B3. Screw Qty: 32
 B4. Knob with bolt Qty: 2	 B5. Wood Dowel Qty: 4	 B6. Metal plate with screw Qty: 2
 B7. Hinge with screw Qty: 4	 B8. Shelf support Qty: 4	 B9. Magnet with screw Qty: 1
 B10. Glue Qty: 1		





Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


To use Dowels:

1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.


To use Cam Locks:

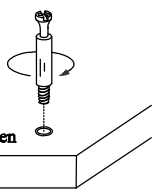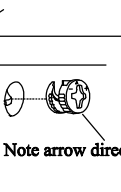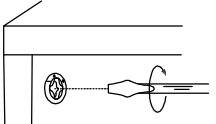1. Insert Cam Pin until snug  Do not over-tighten	2. Set boards together 	3. Insert Cam Lock  Note arrow direction	4. Turn Cam Lock clockwise (half a turn)  if it won't turn halfway, back out the Cam Pin $\frac{1}{4}$ turn and try Cam Lock again.
---	--	---	---


Assembly instructions

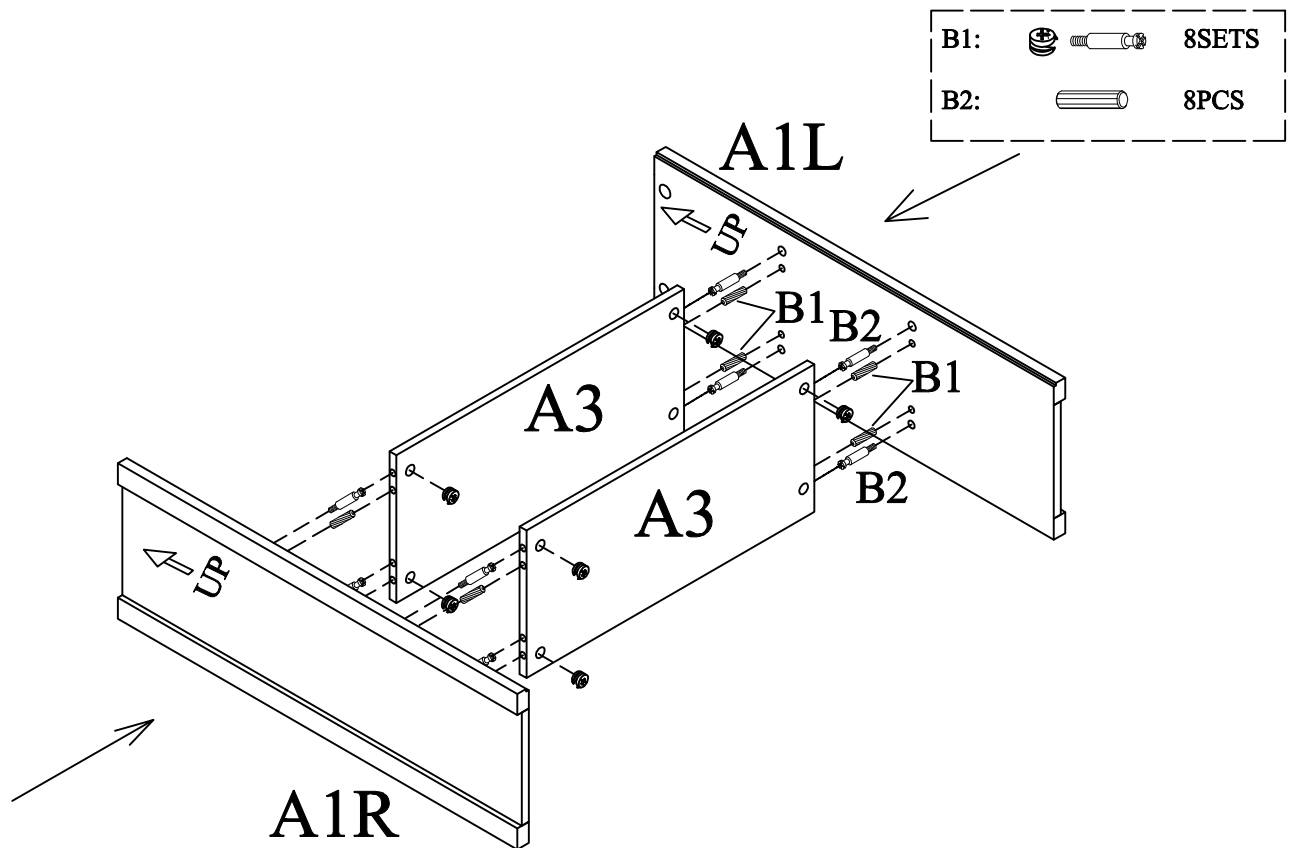

Step 1: Assemble Top Side Panel A1L to Top Shelves A3 using Camlocks B1 and Wood Dowels B2.
 Step 2: Repeat Step 1 to assemble Top Side Panel A1R.

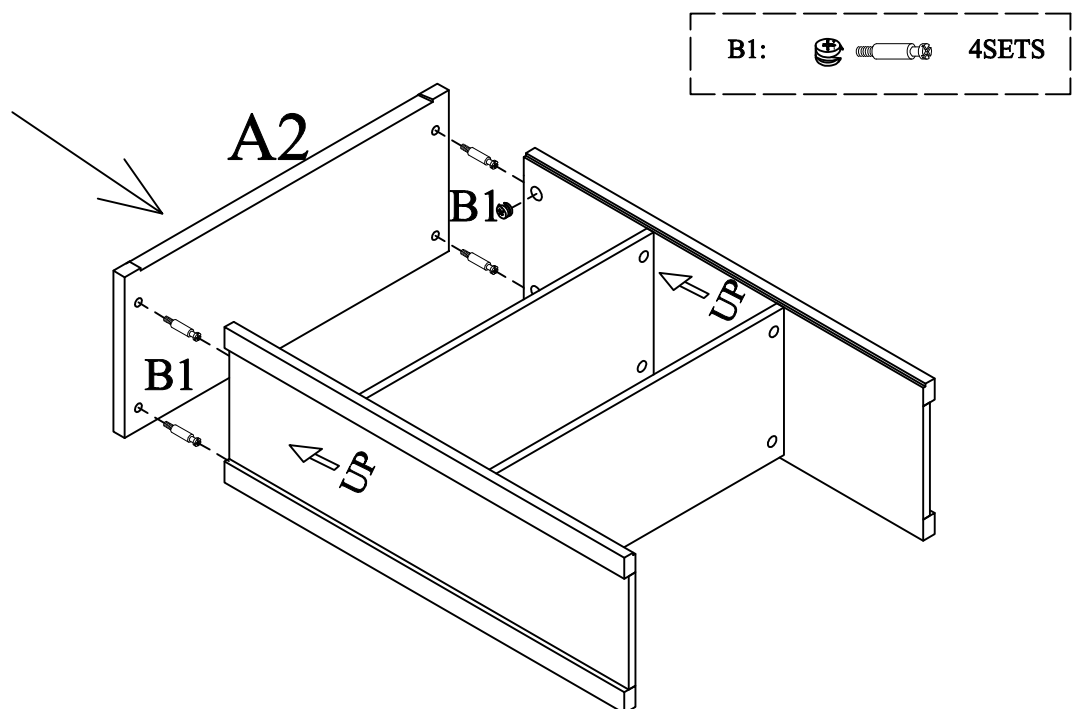


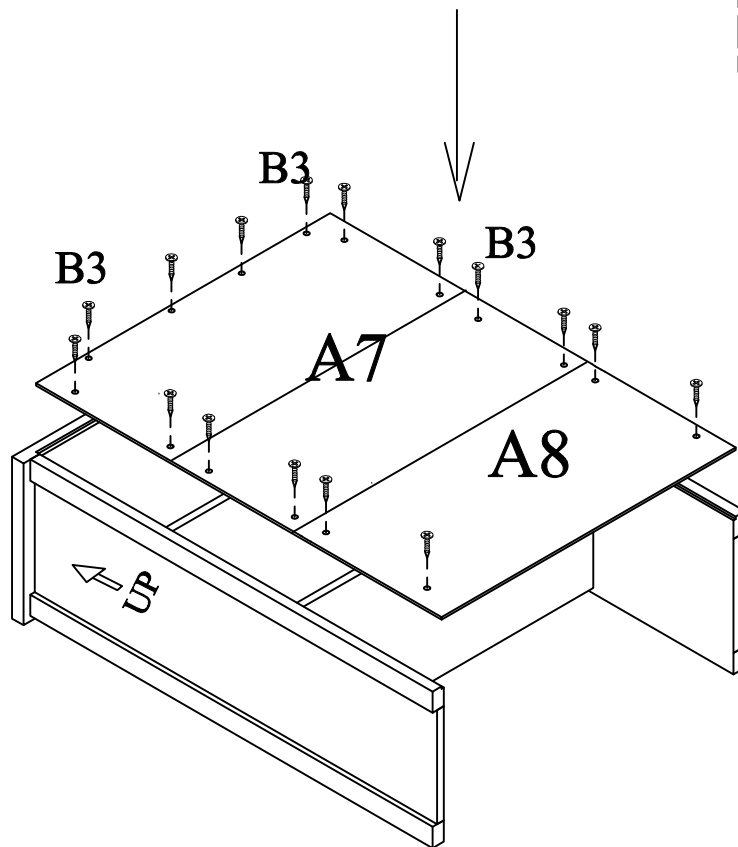

Step 3: Assemble Top Panel A2 to Top Side Panels A1(L&R) using Camlocks B1.




B3:		16PCS
-----	---	-------

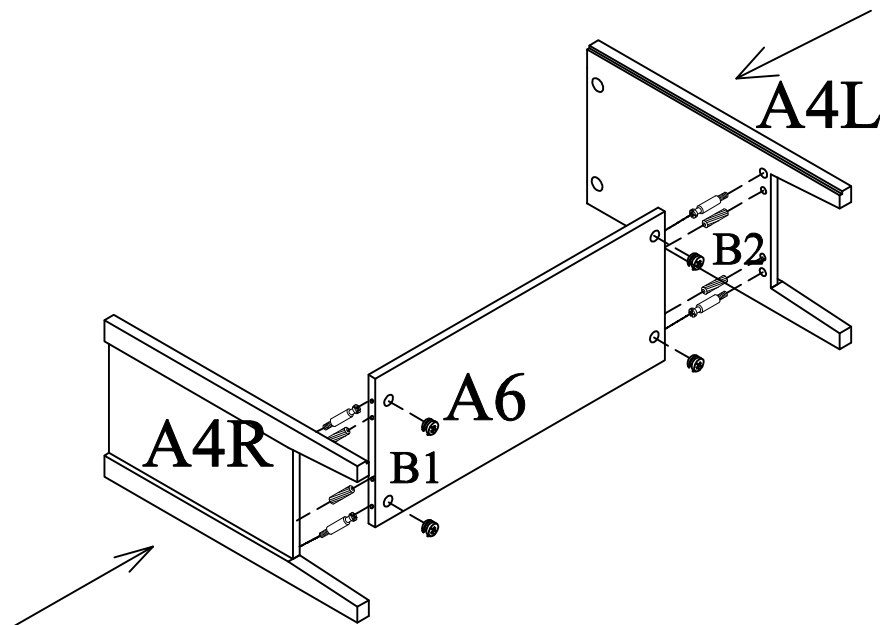Step 4: Attach Top Back Panel A7 and Middle Back Panel A8 to this unit using Screws B3.




B1:		4SETS
B2:		4PCS

Step 5: Assemble Low Side Panel A4L to Bottom Panel A6 using Camlocks B1 and Wood Dowels B2.
Step 6: Repeat Step 5 to assemble Low Side Panel A4R.

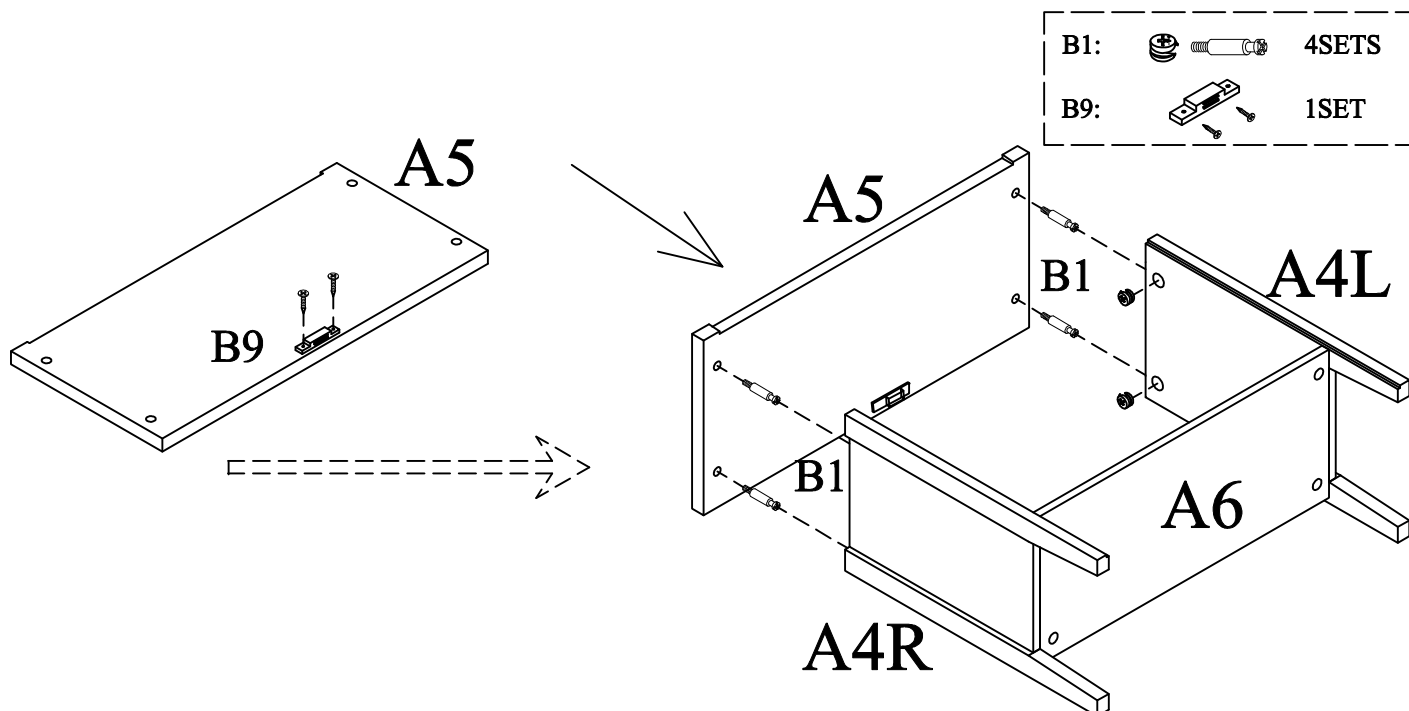




Step 7: Attach Magnet B9 to the bottom of Divider Panel A5 by included screws.

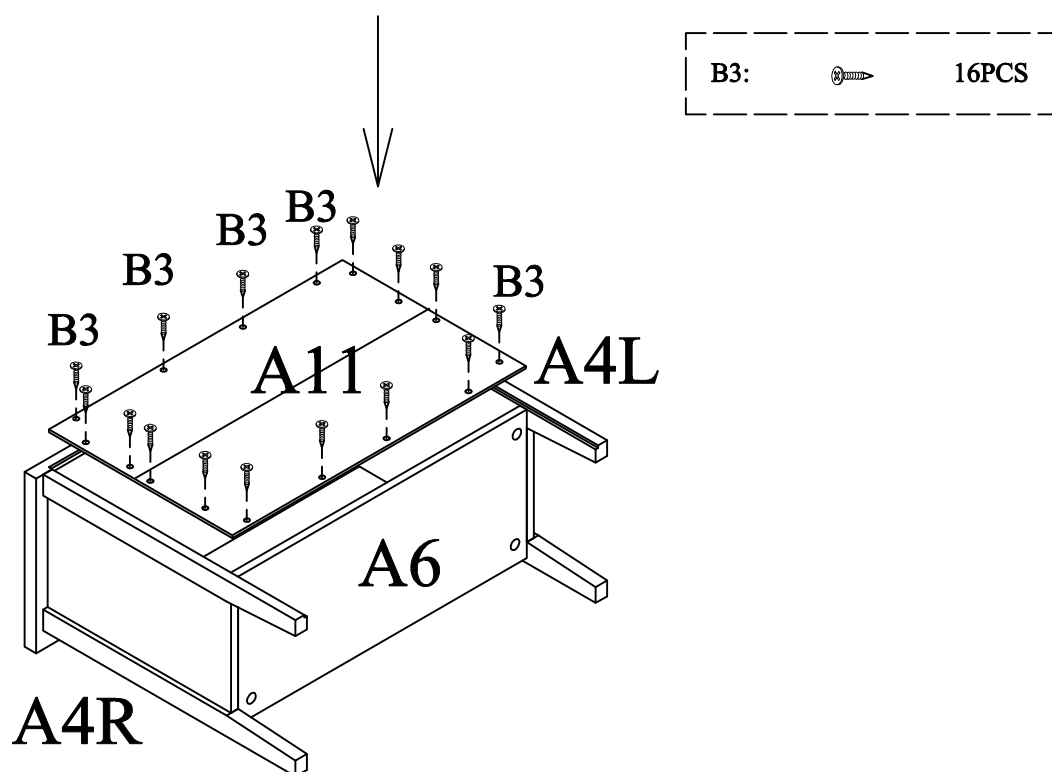Step 8: Assemble Divider Panel A5 to Low Side Panels A4(L&R) using Camlocks B1.

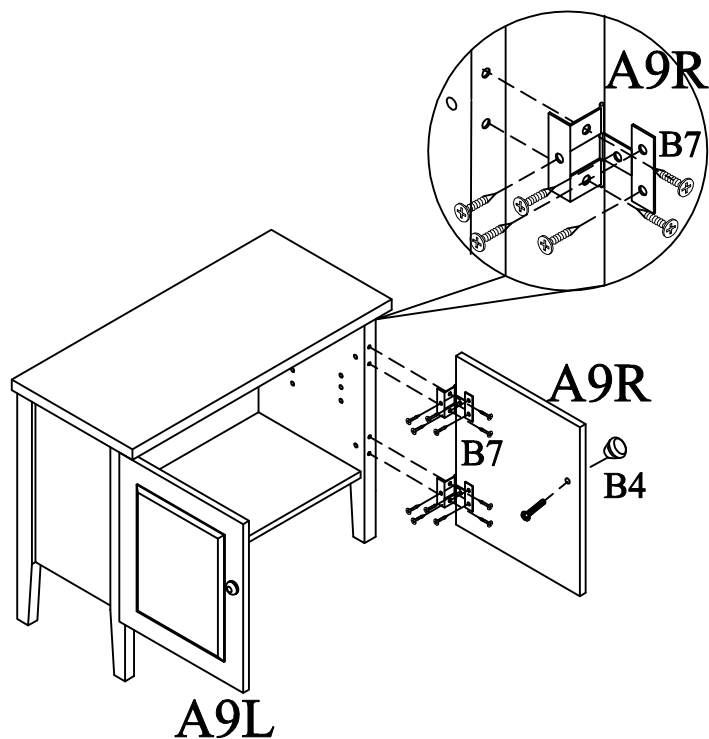

Step 9: Attach Low Back Panel A11 to Low Side Panels A4(L&R) ,Bottom Panel A6 and Divider Panel A5 by screws B3.




B7:		4SETS
B4:		2SETS


Step 10: Attach Knobs B4 to Doors A9(R&L) using included bolts.

Step 11: Attach Hinges B7 to Door A9R by included screws.



Step 12: Assemble Door A9R to Low Side Panel A4R by screwing assembled Hinges B7 using included screws.


Step 13: Repeat Step 11&12 to assemble Door A9L.

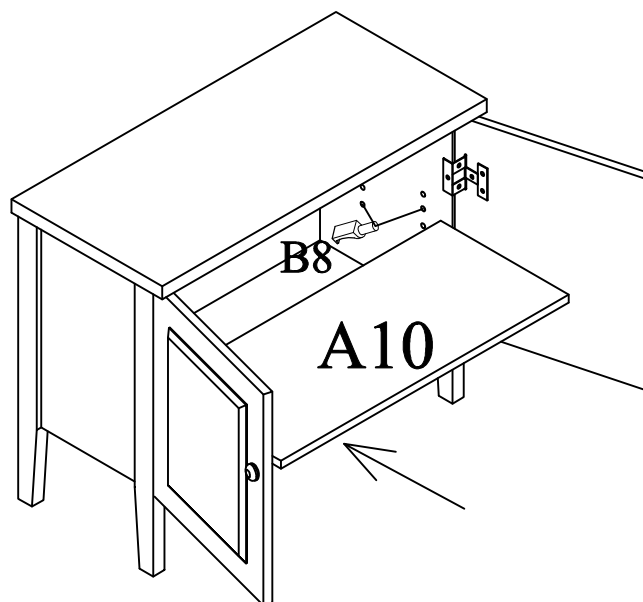

B8:		4PCS
-----	---	------

Step 14: Insert Shelf Supports B8 into holes on Low Side Panels A4(L&R), then put Low Shelf A10 onto Shelf Supports B8.

B5:		4PCS
B6:		2SETS

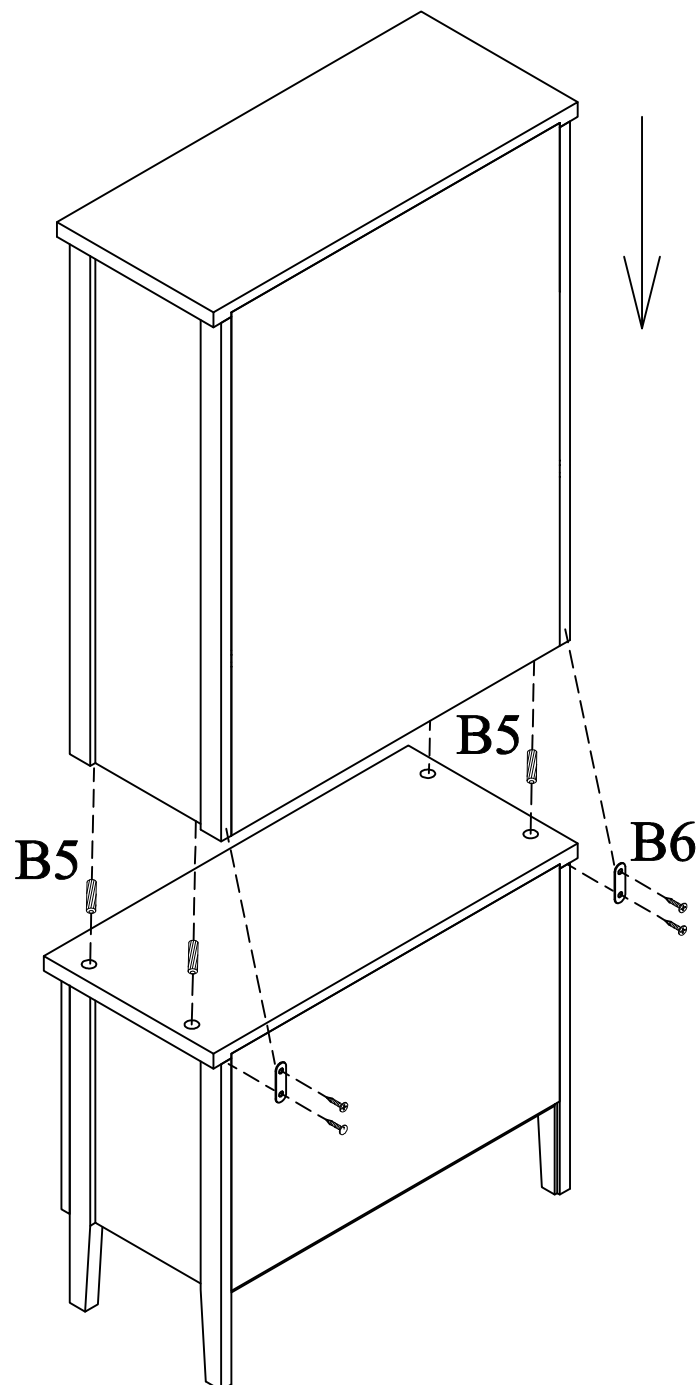

Step 15: Assemble the top part to the low part by Wood Dowels B5 and Metal Plates B6 with included screws.

NOTE: Maximum load capacity of each shelf is 20 LBS.