











# ASSEMBLY INSTRUCTION

020-637 Anna Arm Chair

## HARDWARE LIST


A		Long Bolt	Ø5/16"*3-1/8"	4 PCS
B		Short Bolt	Ø5/16"*1-3/4"	3 PCS
C		Nut	Ø5/16"	4 PCS
D		Lock Washer	Ø5/16"	11 PCS
E		Large Flat Washer	Ø5/16"*19D	11 PCS
F		Small Bolt	Ø1/4"*1-3/4"	2 PCS
G		Small Lock Washer	Ø1/4"	2 PCS
H		Allen key	100*50*4mm	1 PC
I		Spanner Wrench	12MM	1 PC
K		Wood Plug	Ø13*10 mm	2 PCS

## PART LIST

1	Chair Back	1 PC
2	Seat Frame	1 PC
3	Front Leg	2 PCS
4	Left Arm	1 PC
5	Right Arm	1 PC


## IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

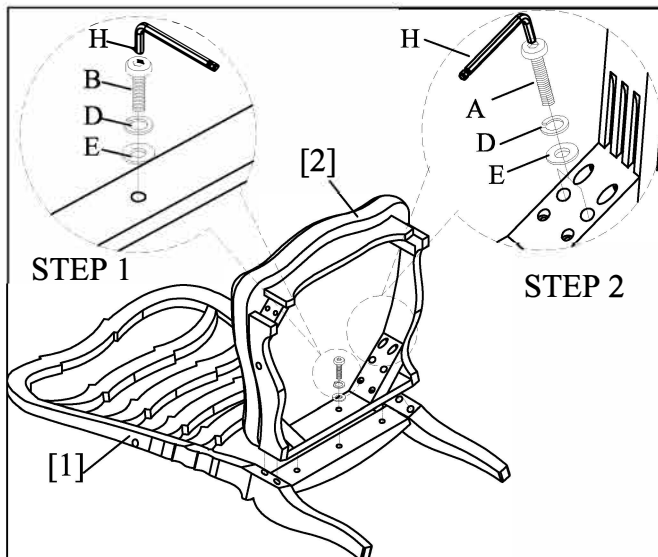

**STEP 1.** Place chair back (1) on a clean & padded surface then attach seat frame (2) to the chair back using bolt (B), lock washer (D), flat washer (E), and tighten with allen key (H). Important: Do not over-tighten.

**STEP 2.** Attach back assembly to the seat frame (2) using bolt (A), lock washer (D), flat washer (E), and tighten with allen key (H). Important: Do not over-tighten.

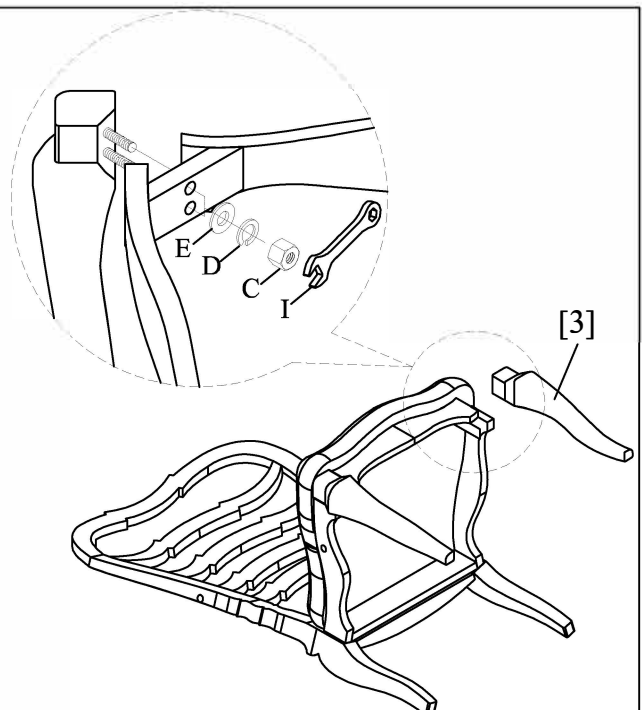

**STEP 3.** Attach the front leg (3) to the seat frame (2) using nut (C), lock washer (D), flat washer (E), and tighten with Spanner Wrench (I). Important: Do not over-tighten.

MADE IN VIETNAM

