

Shower Door Installation Instruction

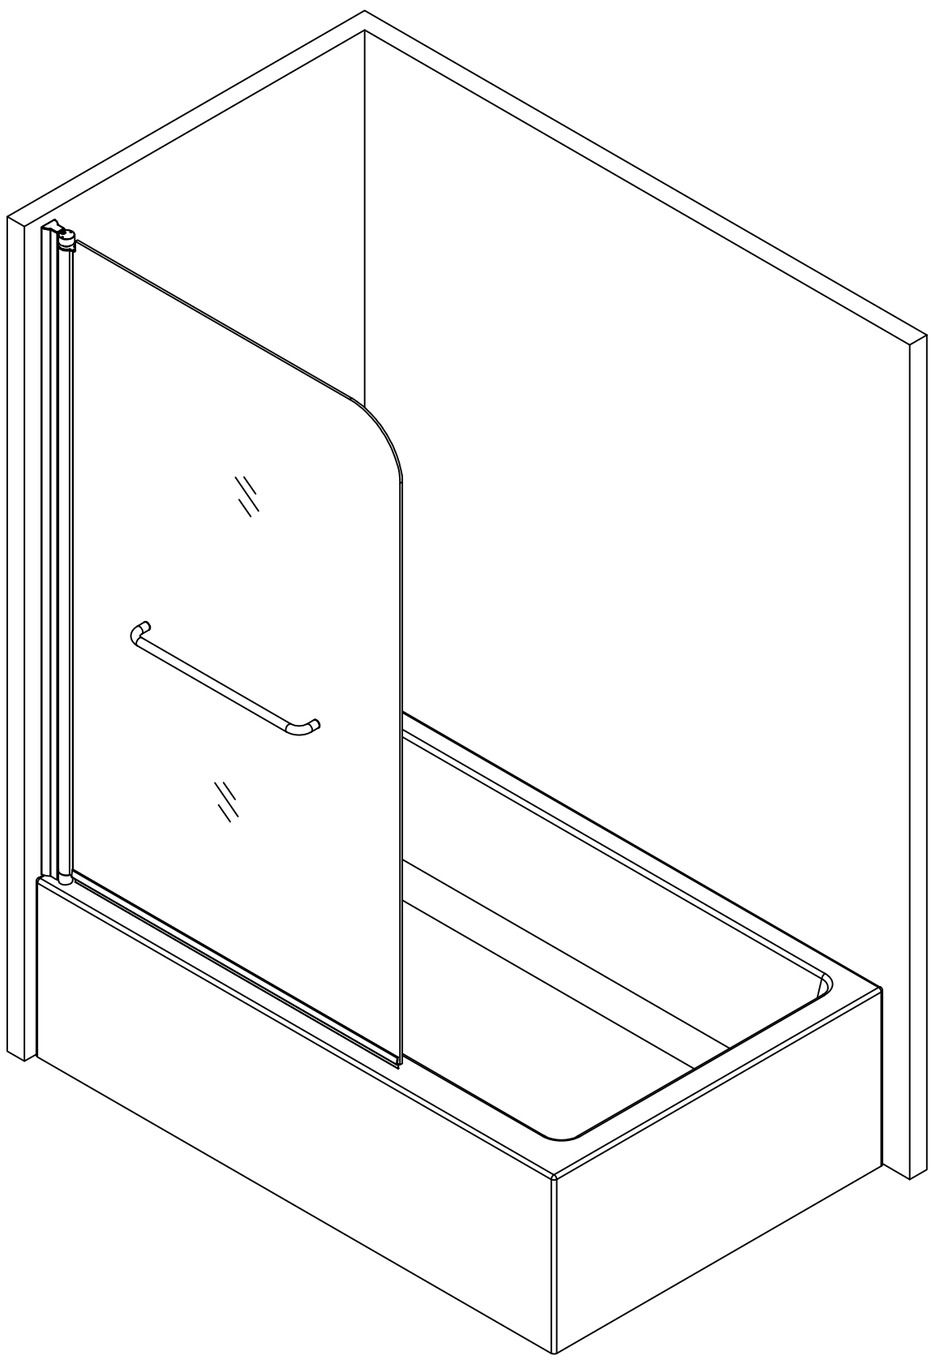

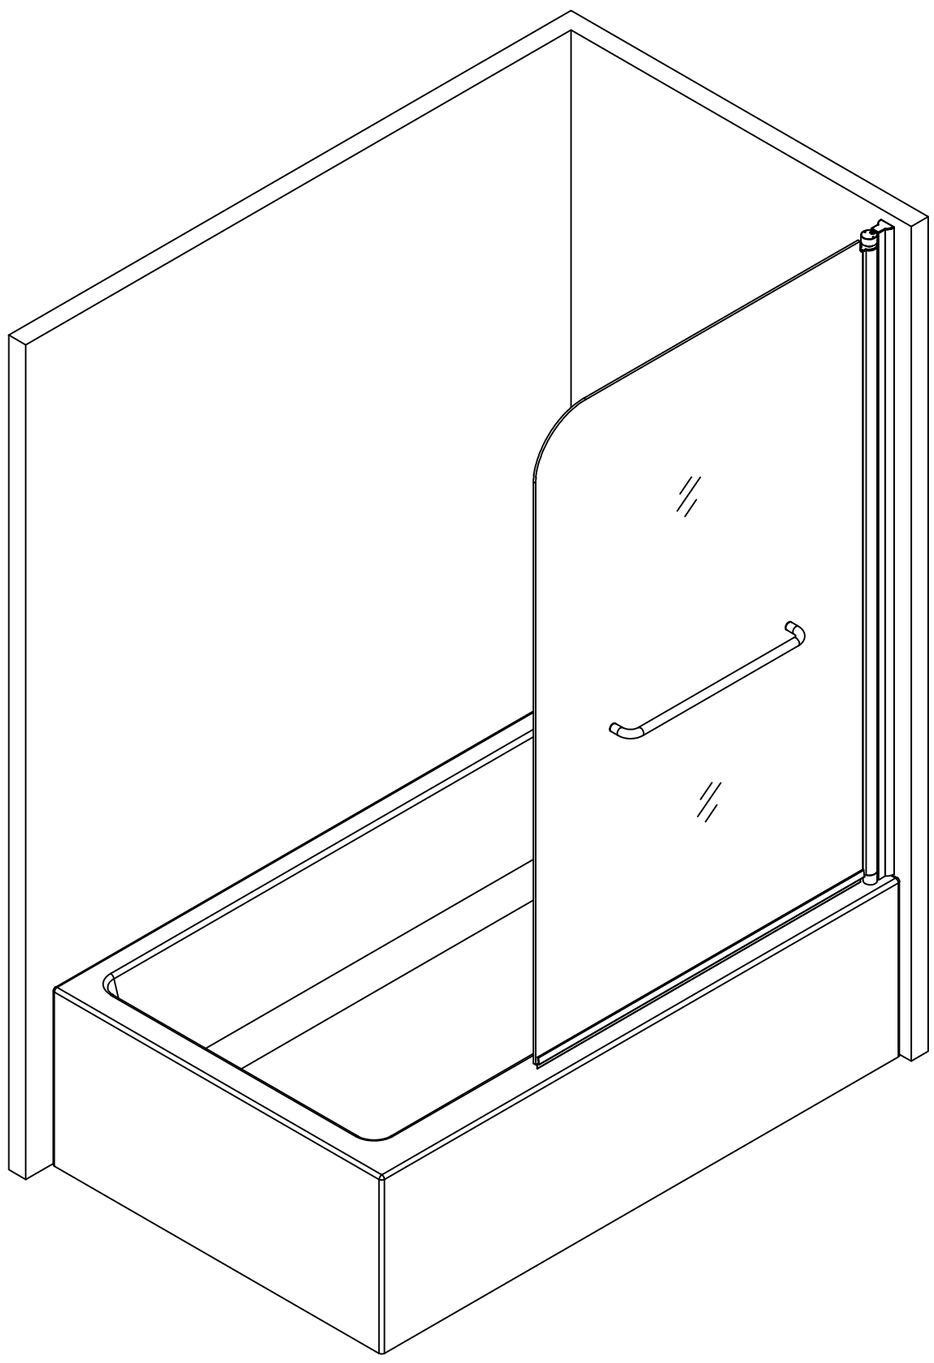

Reversible for a left or right door installation.

Please do not return the product to the store.
Contact us with any questions.


Model Specific Preparation

REQUIRED:


Verify tub deck and walls with a level.

3/8” (10mm) Out-of-Plumb Adjustment within the Wall Profile.

Threshold must be level.

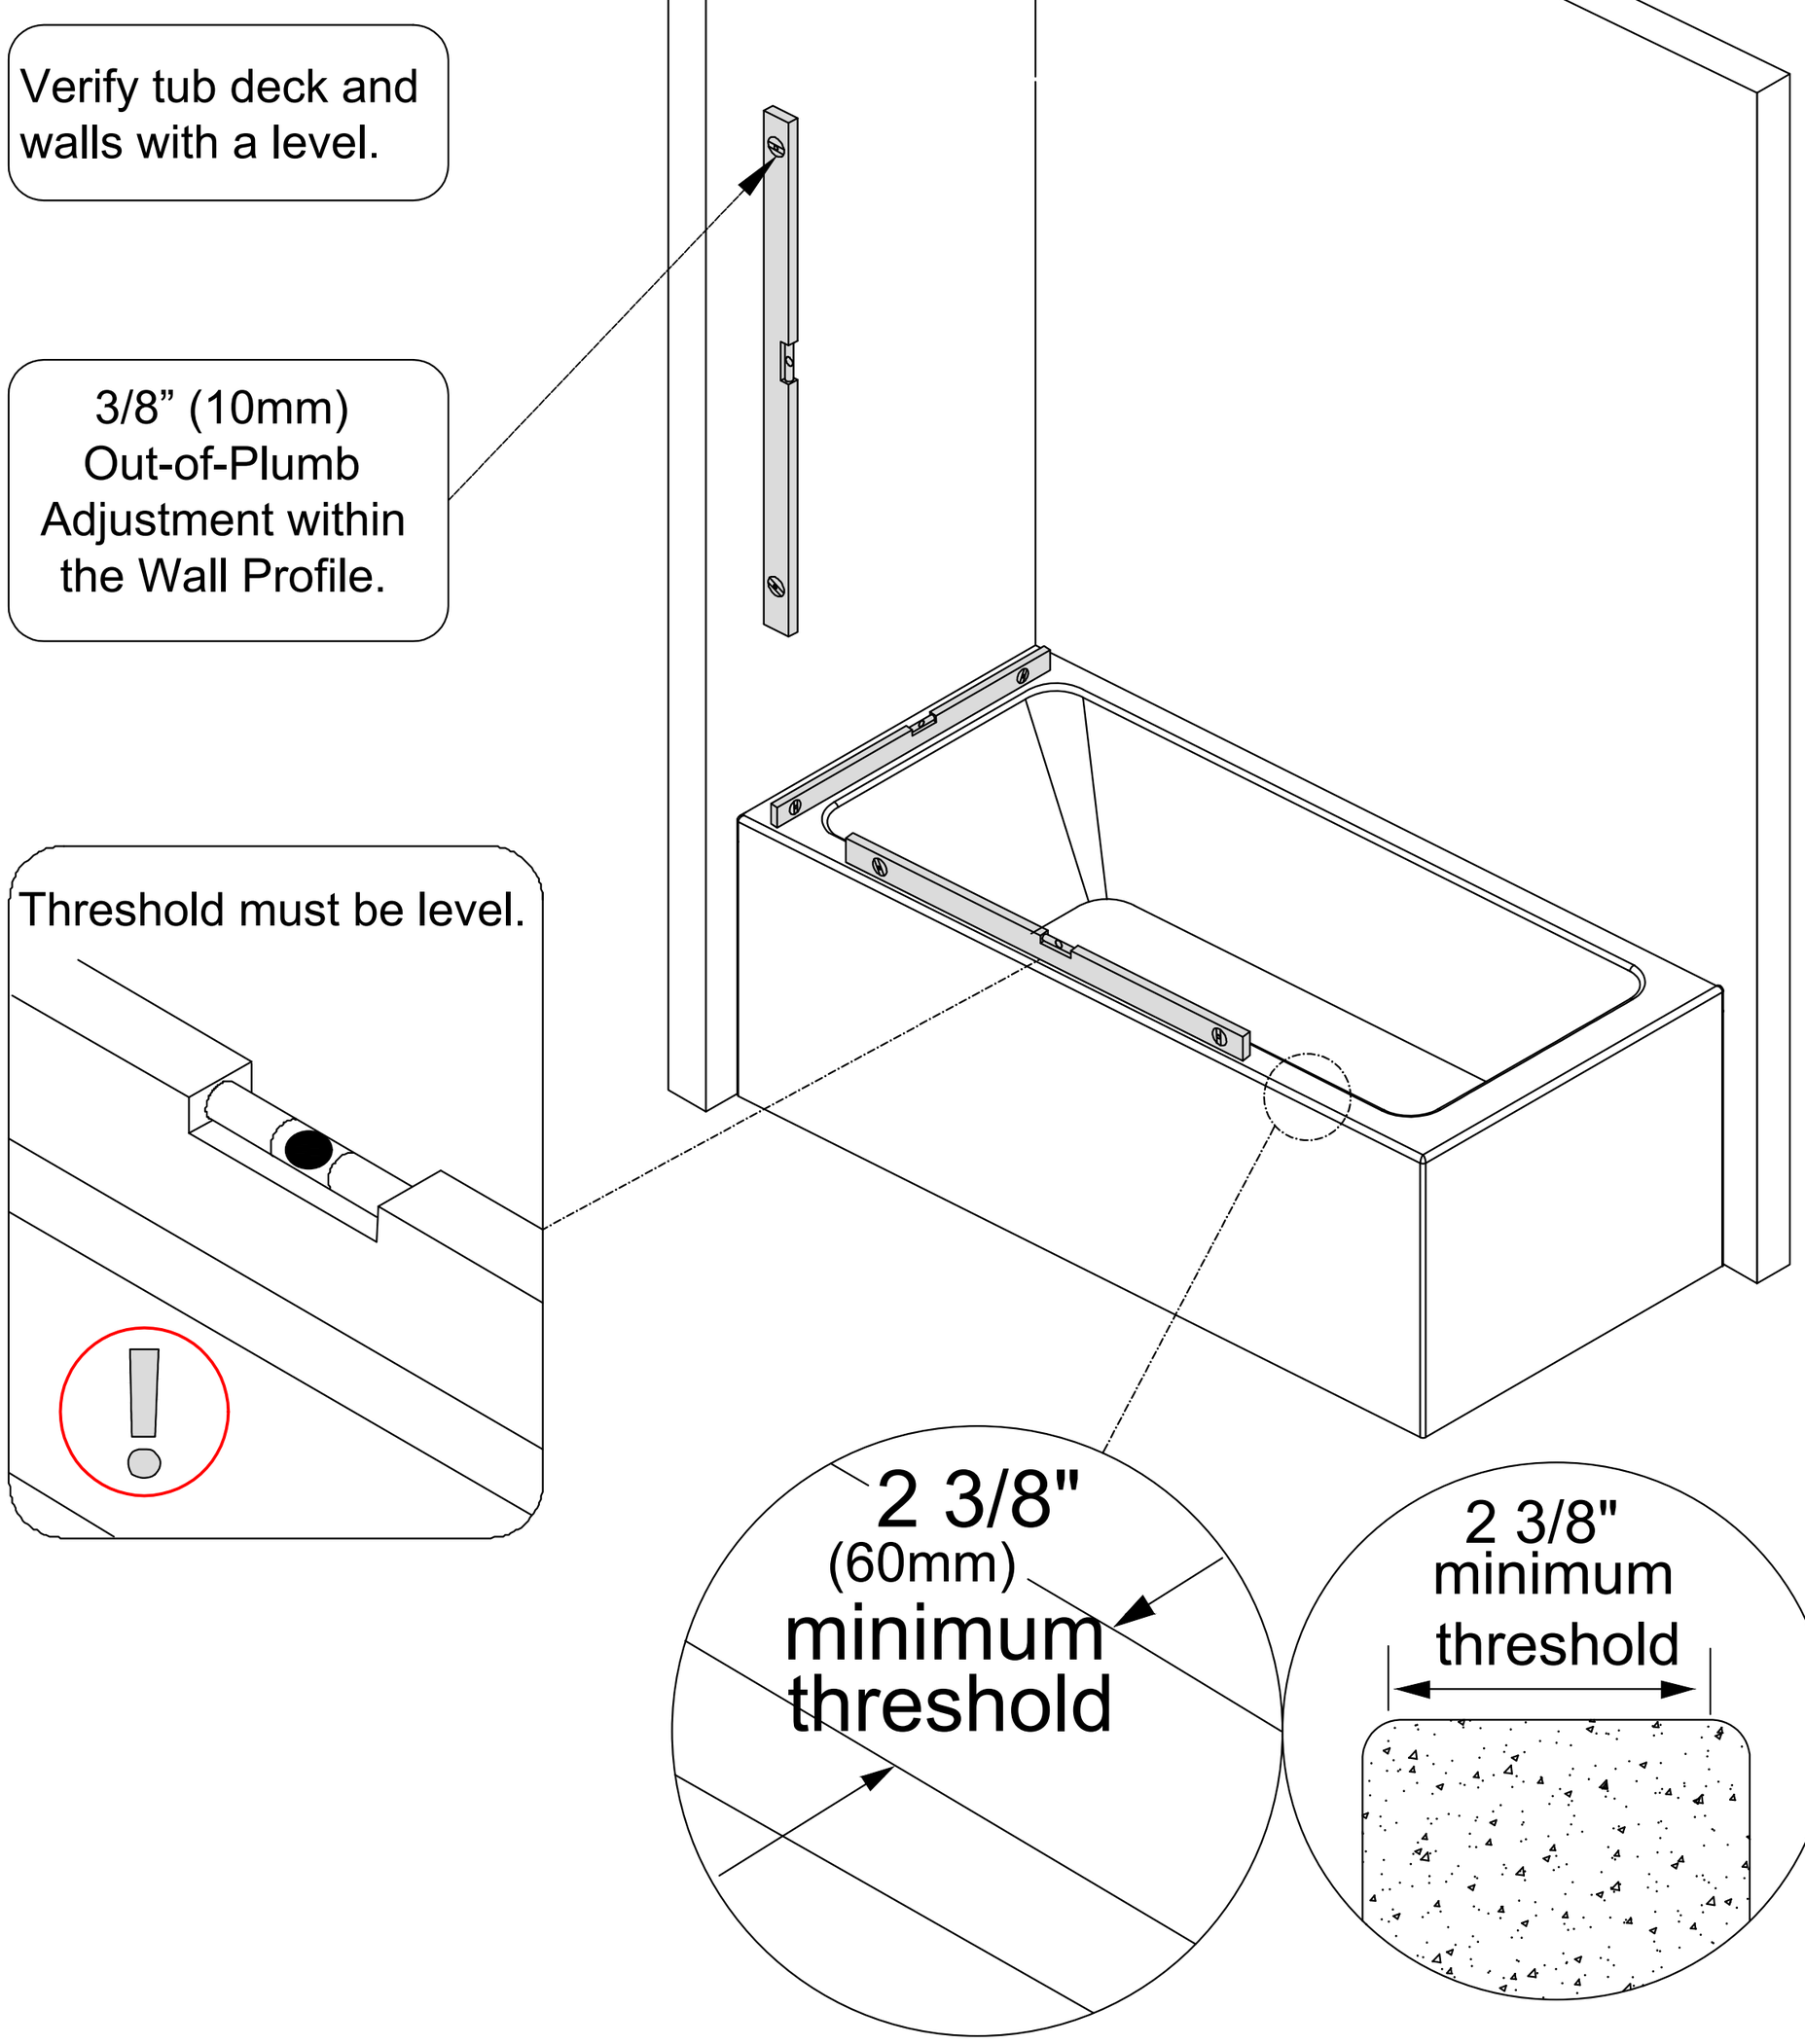

PACKAGE CONTENT

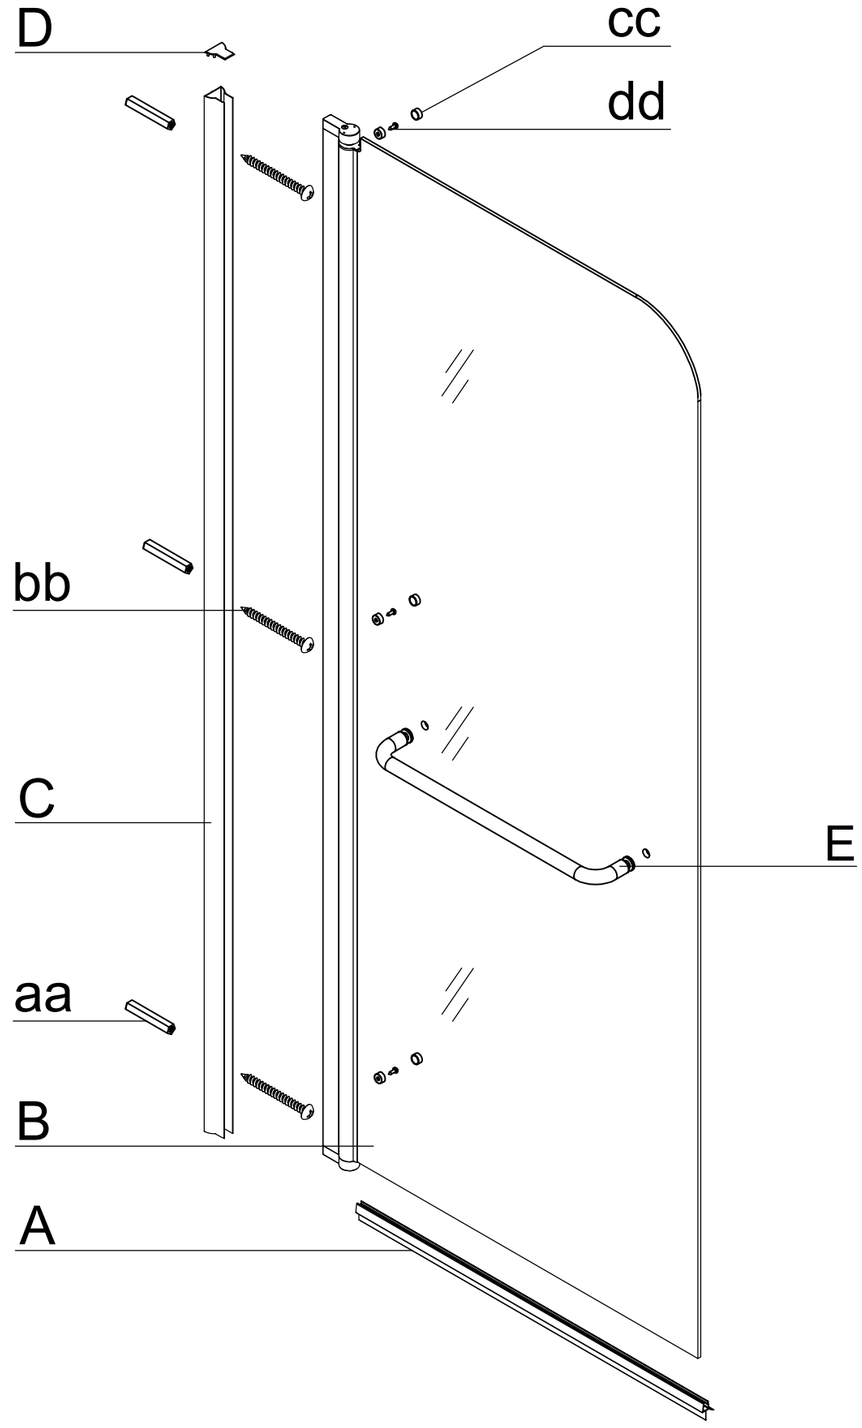

PACKAGE CONTENT

PART#	DESCRIPTION	QTY
A	Bottom Anti-Water Strip	1
B	Door panel	1
C	Wall Jamb	1
D	Top Cover Cap	1
E	Handle	1


NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.


Hotline : + 1 302 336 8180

PACKAGE CONTENT


A
x1

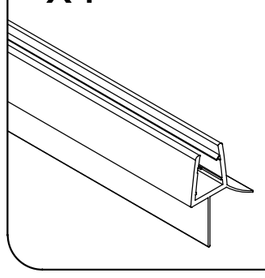


B
x1

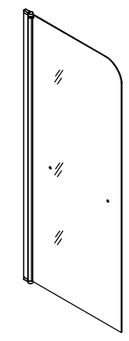


C
x1



D
x1

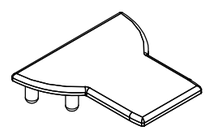


E
x1

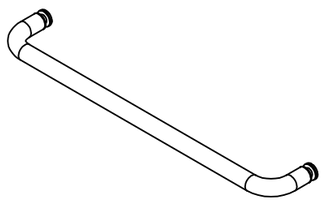


HARDWARE CONTENT

aa

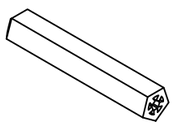


Wall anchor
Ø6x38mm
4 pcs

bb

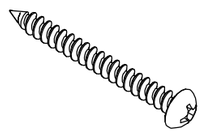


Screw
ST4*30
4 pcs

cc

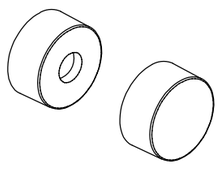

Fitting
4 pcs

dd



Screw
ST4*10
4 pcs

Additional spare parts are included.


NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.

Hotline : + 1 302 336 8180

TOOLS REQUIRED


Drill Bits

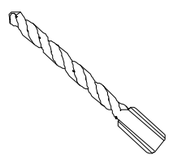

Ø1/8”(3mm) /Ø1/4” (6mm) and Ø5/16”(8mm) dia.

HSS


Screw Driver

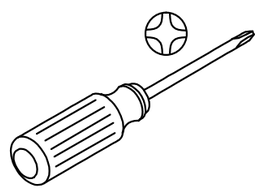


Drill




Level

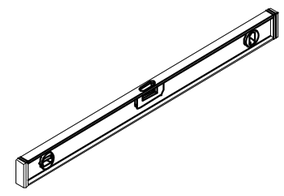


Silicone

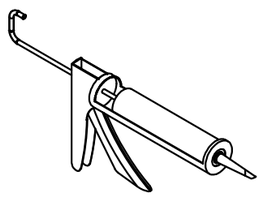


Measuring Tape

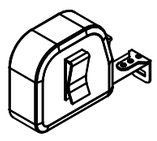


Soft Head Hammer

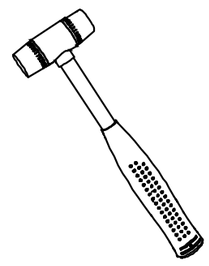


Pencil



Knife

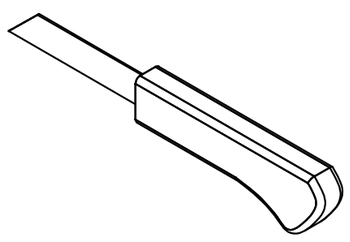


Sealant

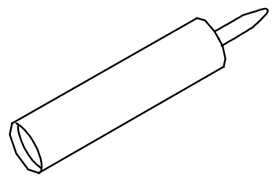

MASONRY DRILL BIT FOR TILE Ø6mm



Safety Glasses

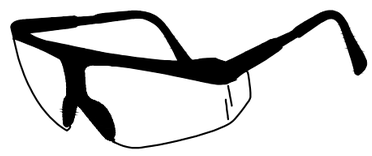

Glove

Carpenter's Squarer


SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation,protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!
- Keep this installation manual for future reference.


NOTE: Two people should perform this installaton.

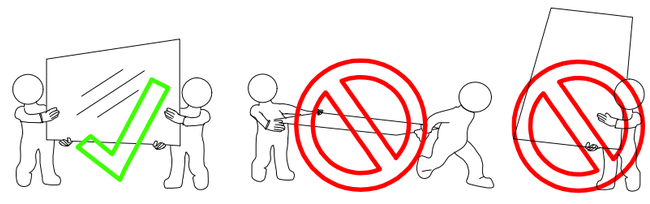


Model Dimensions


NOTE

This model is reversible for right or left-hand door installation. The left-hand door installation is shown throughout this manual. For the right-hand door installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.

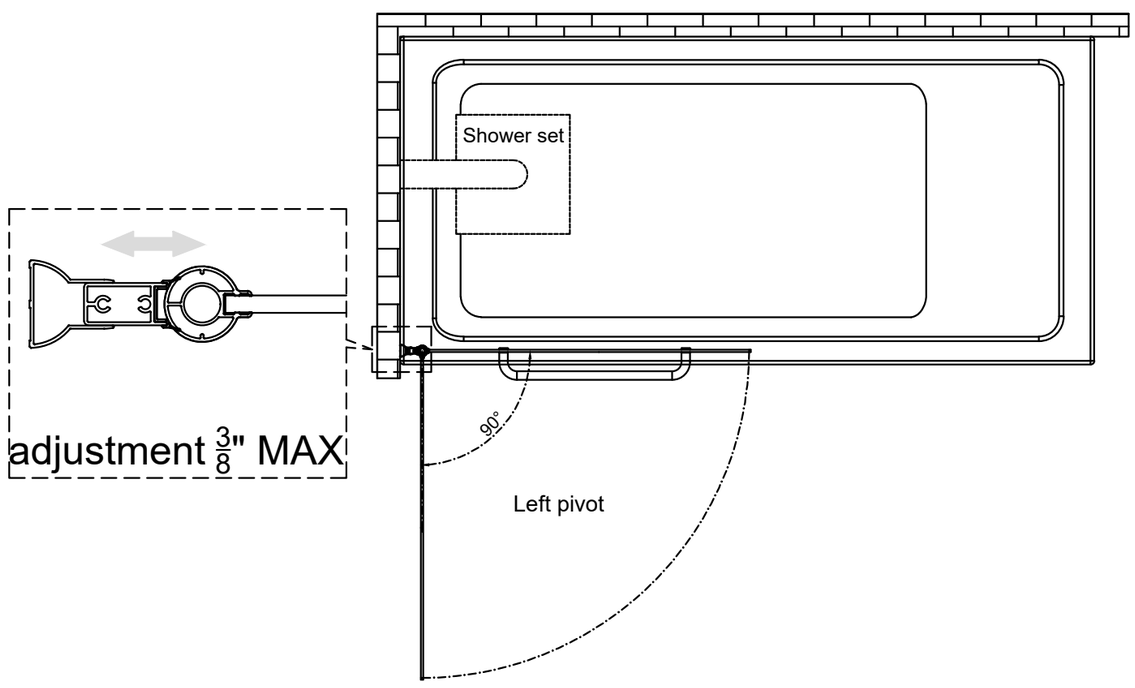

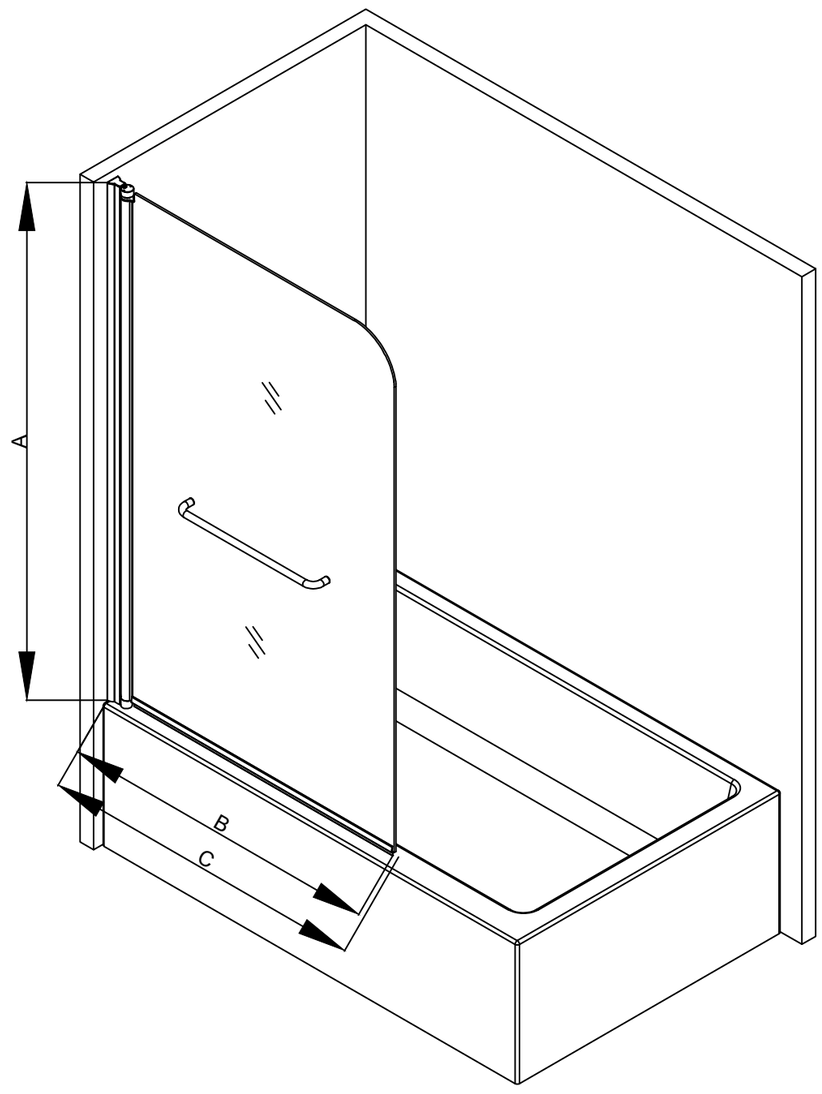

A Product Height	B Model width	C Installation width
58"	34"	34" ~34 3/8"

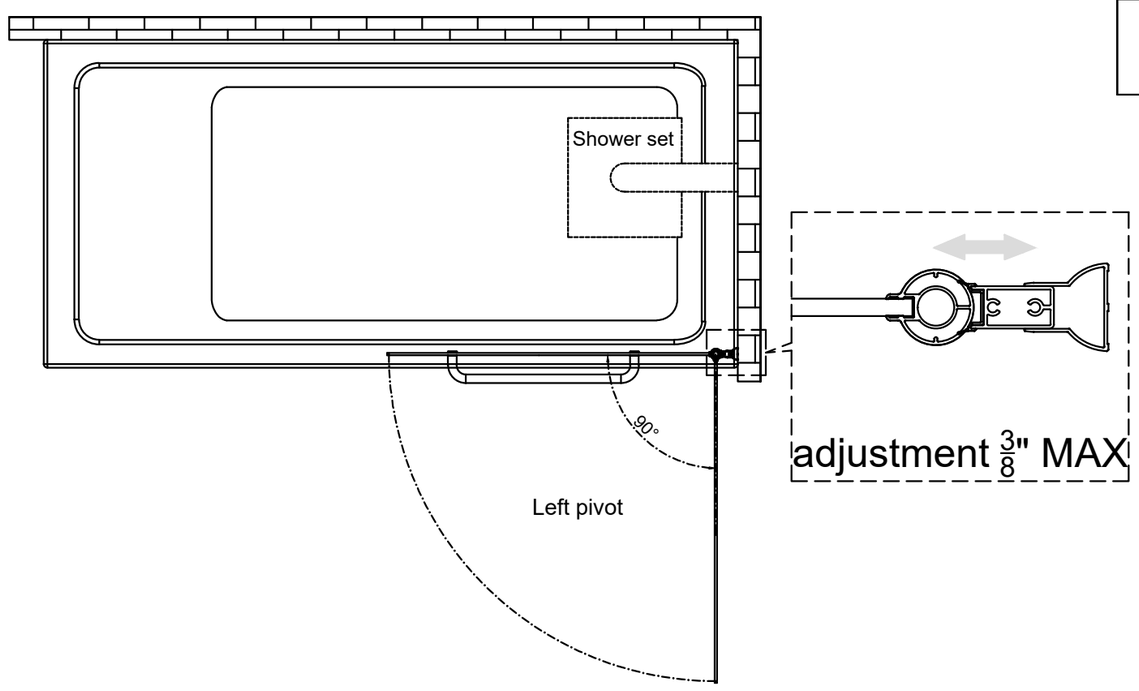

1-1 **Wall Jamb(C)** Installation

NOTE

Confirm the **Wall Jamb(C)** is plumb with a level before marking the location of the holes for drilling.

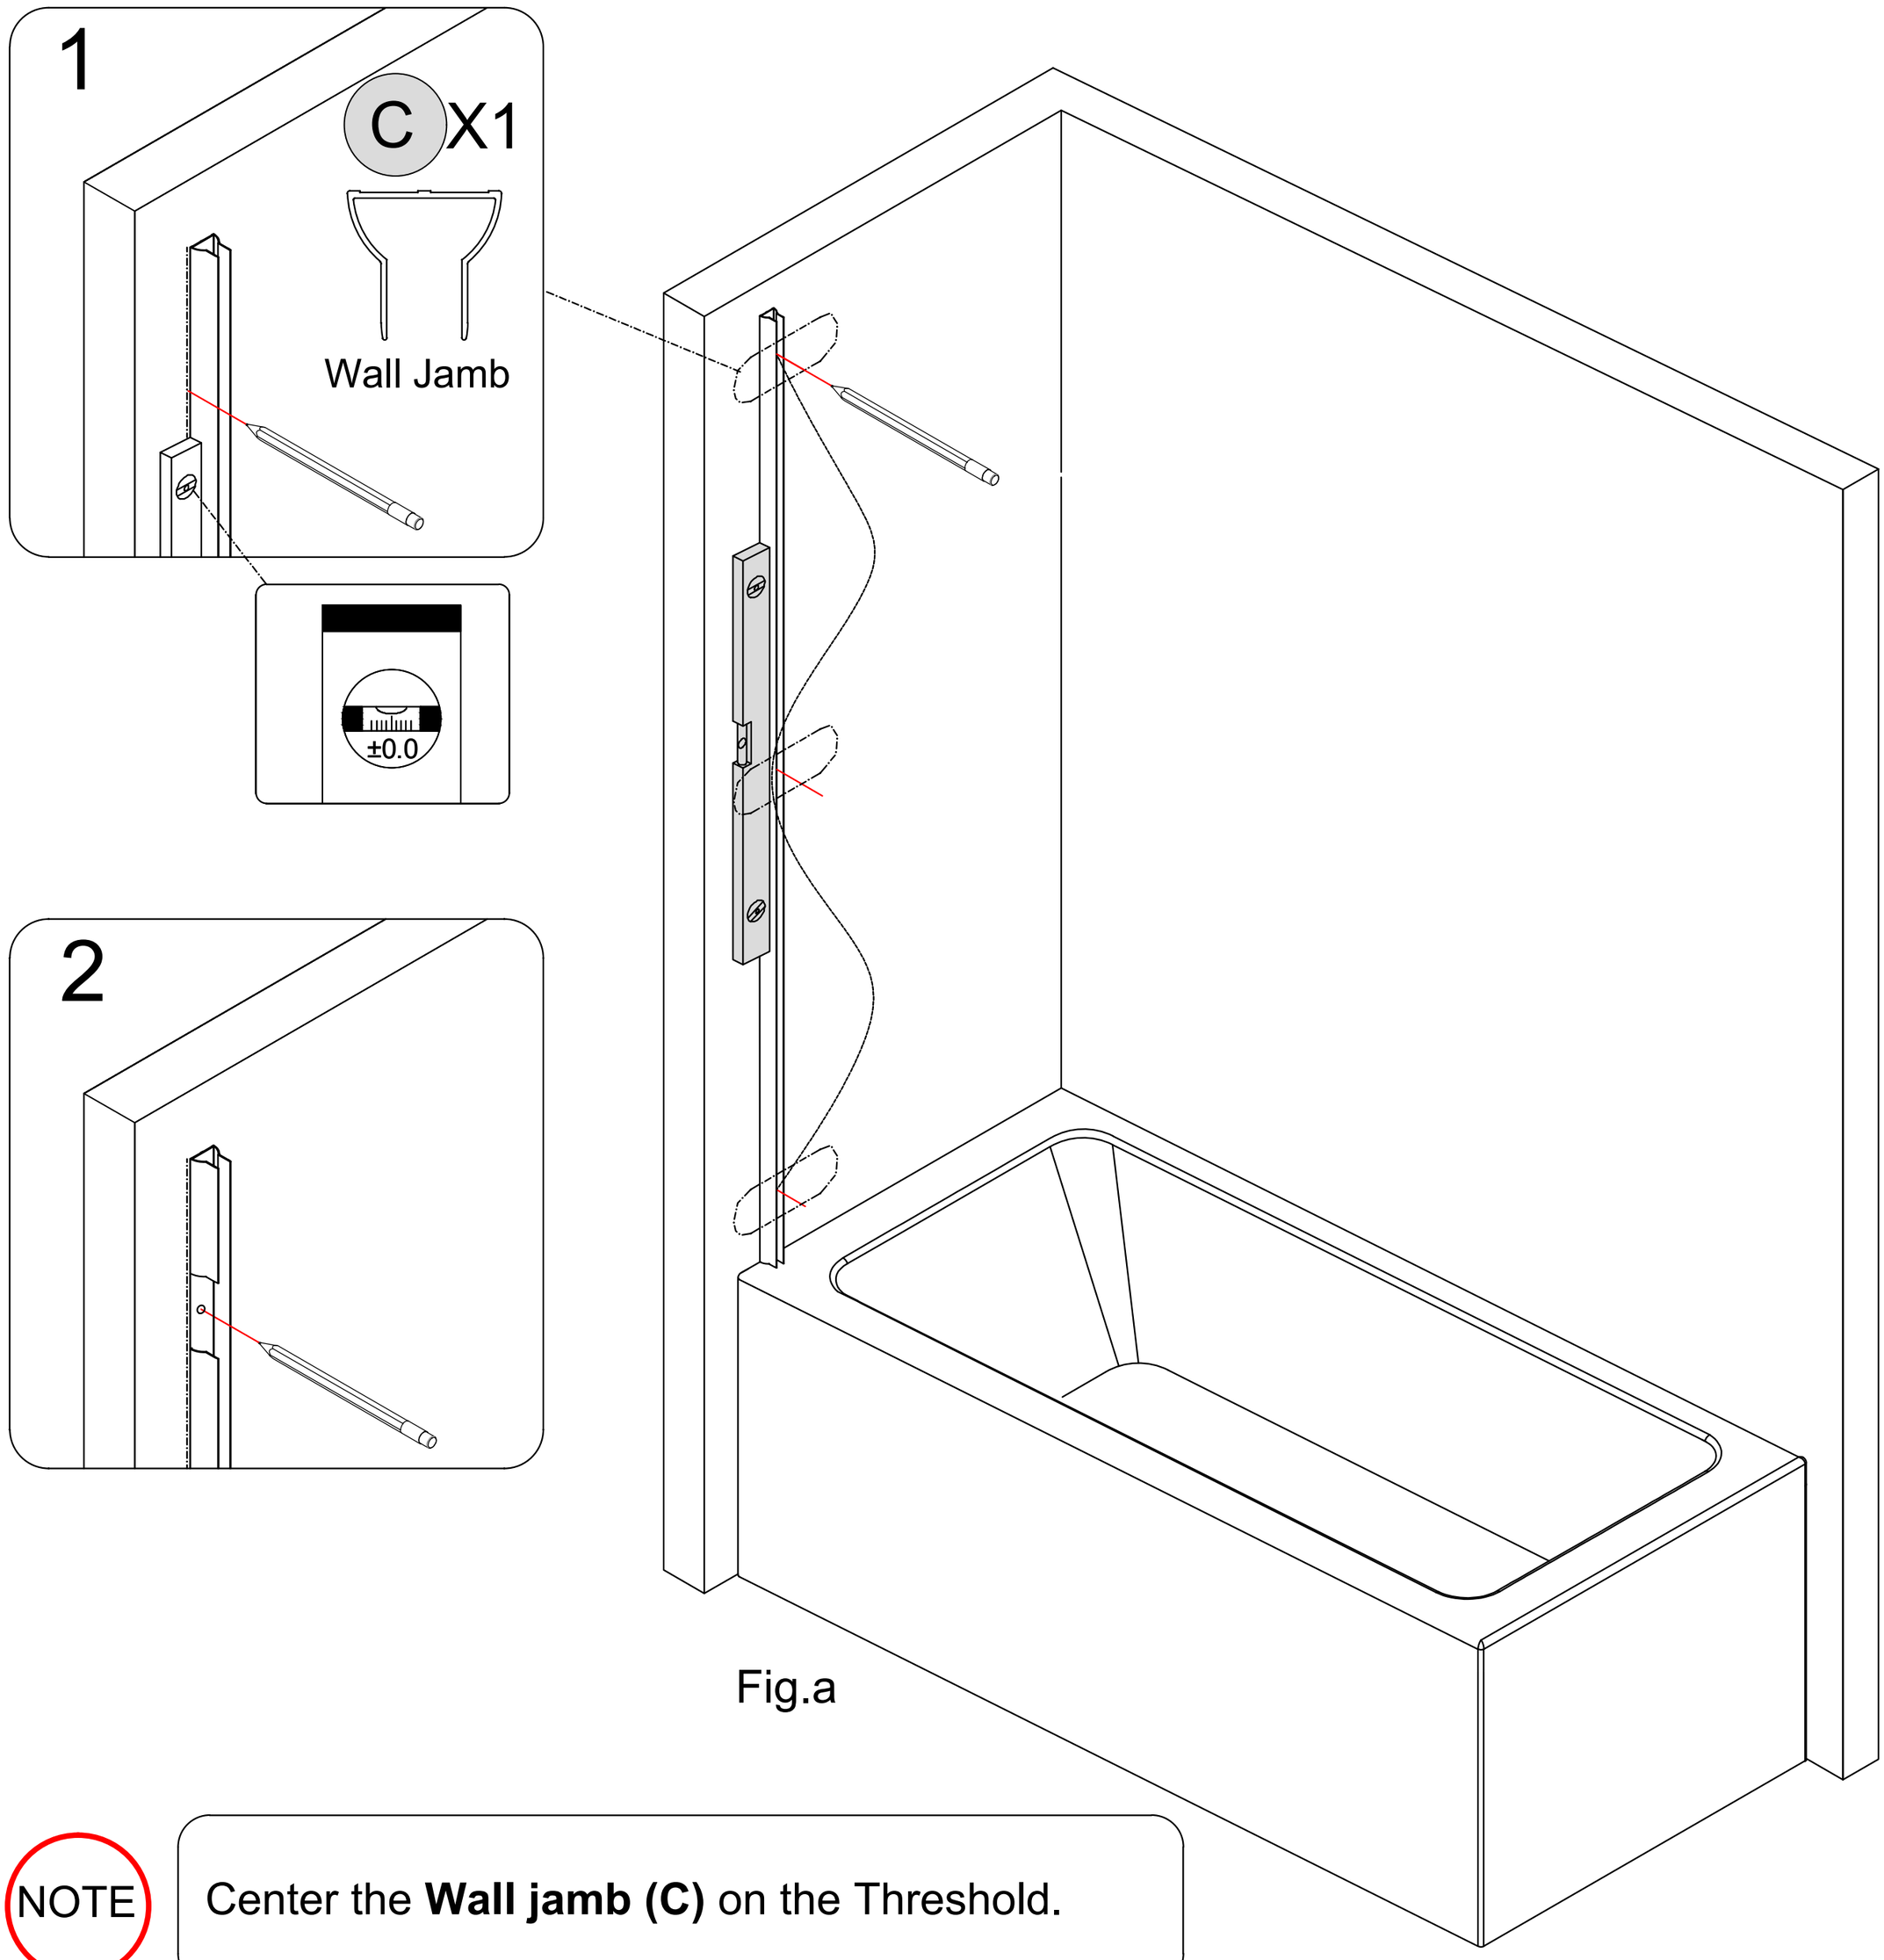


Fig.a

NOTE

Center the **Wall jamb (C)** on the Threshold.

1-2 **Wall Jamb(C)** Installation

Fig.a

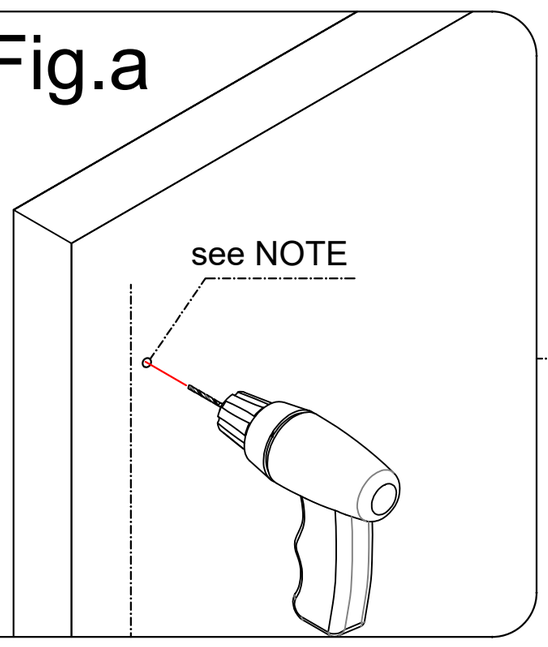


Fig.b

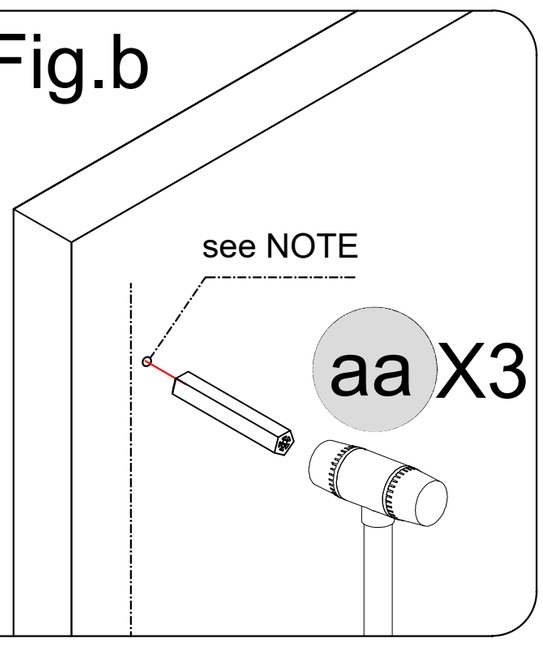


Fig.c



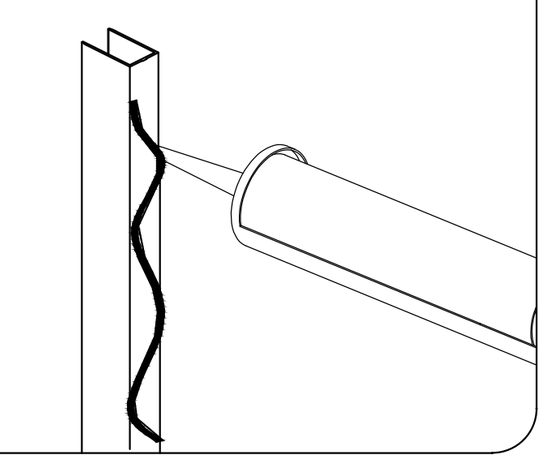


Fig.d

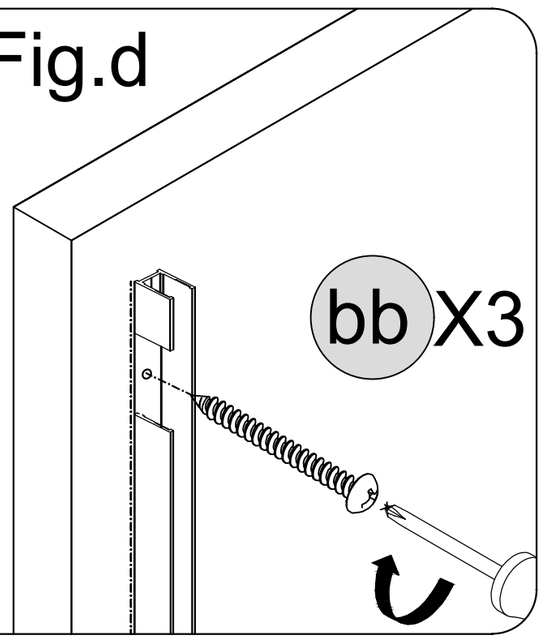

NOTE

1.Drill the holes as Fig.a and Fig.b;
2.Apply silicone into the groove along the entire length of the **Wall Jamb(C)** as Fig c;
3.Attach the **Wall Jamb(C)** to the wall as Fig d.

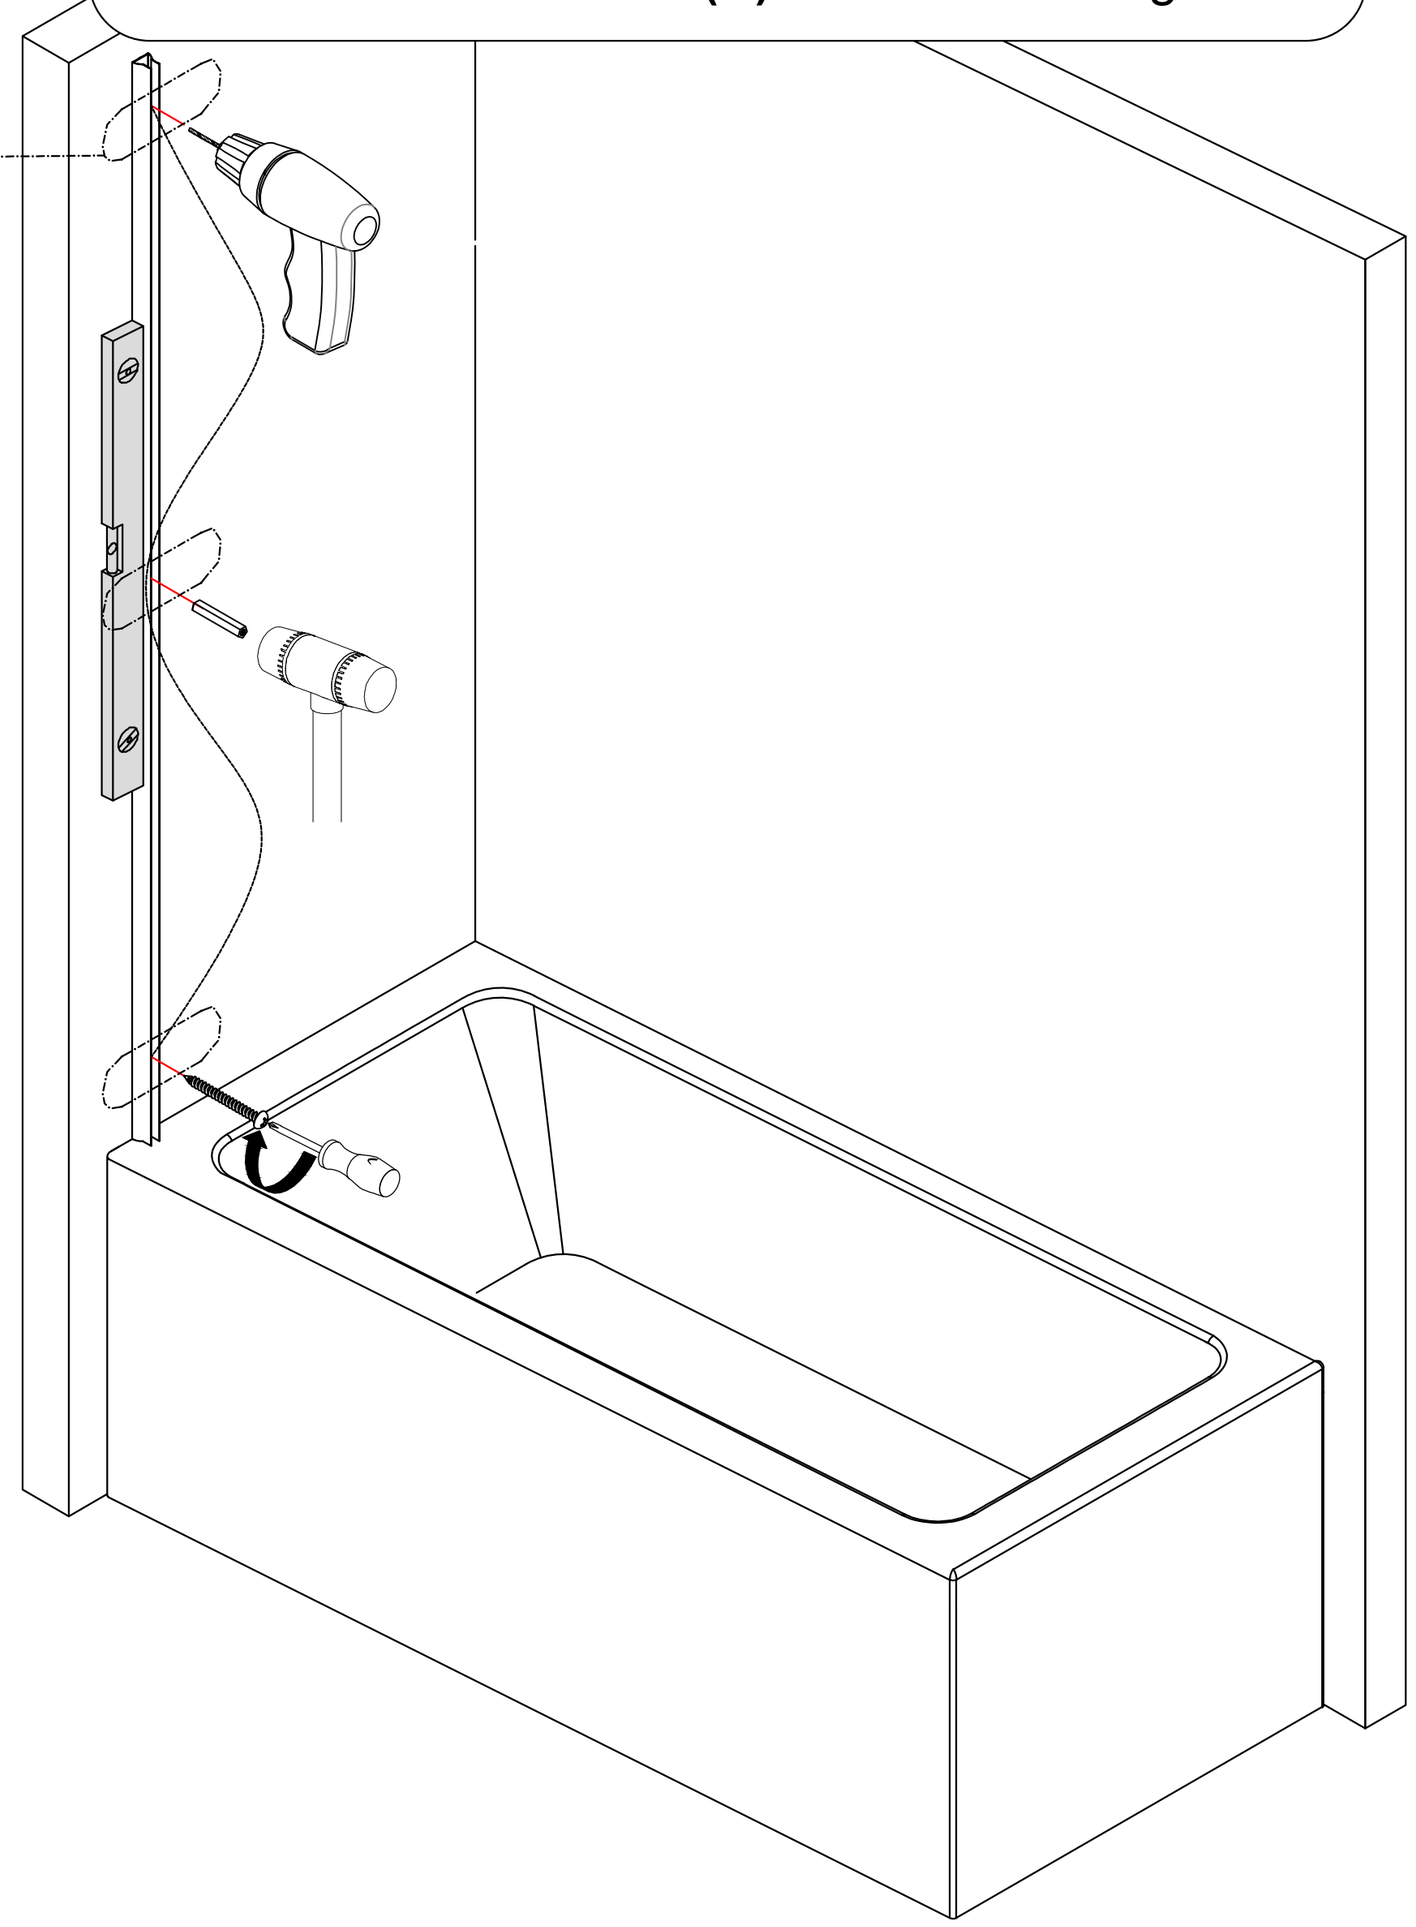


NOTE


- If a Stud is presented behind the wall:
drill a Ø1/8”(3mm) pilot hole into the stud and use the ST4.0 x 30mm **Pan Head Screws (bb)**
OR
- If No Stud is presented behind the wall:
drill a Ø1/4”(6mm) hole and insert the **Wall Anchors (aa)** and use the ST4.0 x 30mm **Pan Head Screws (bb)**.

2 **Door panel(B)** Installation

NOTE

The **Door panel(B)** Profiles can be adjusted up to 3/8” within the **Wall Jamb(C)** for overall width or to correct for out-of-plumb conditions within the model size. Screw them together after making final adjustments.

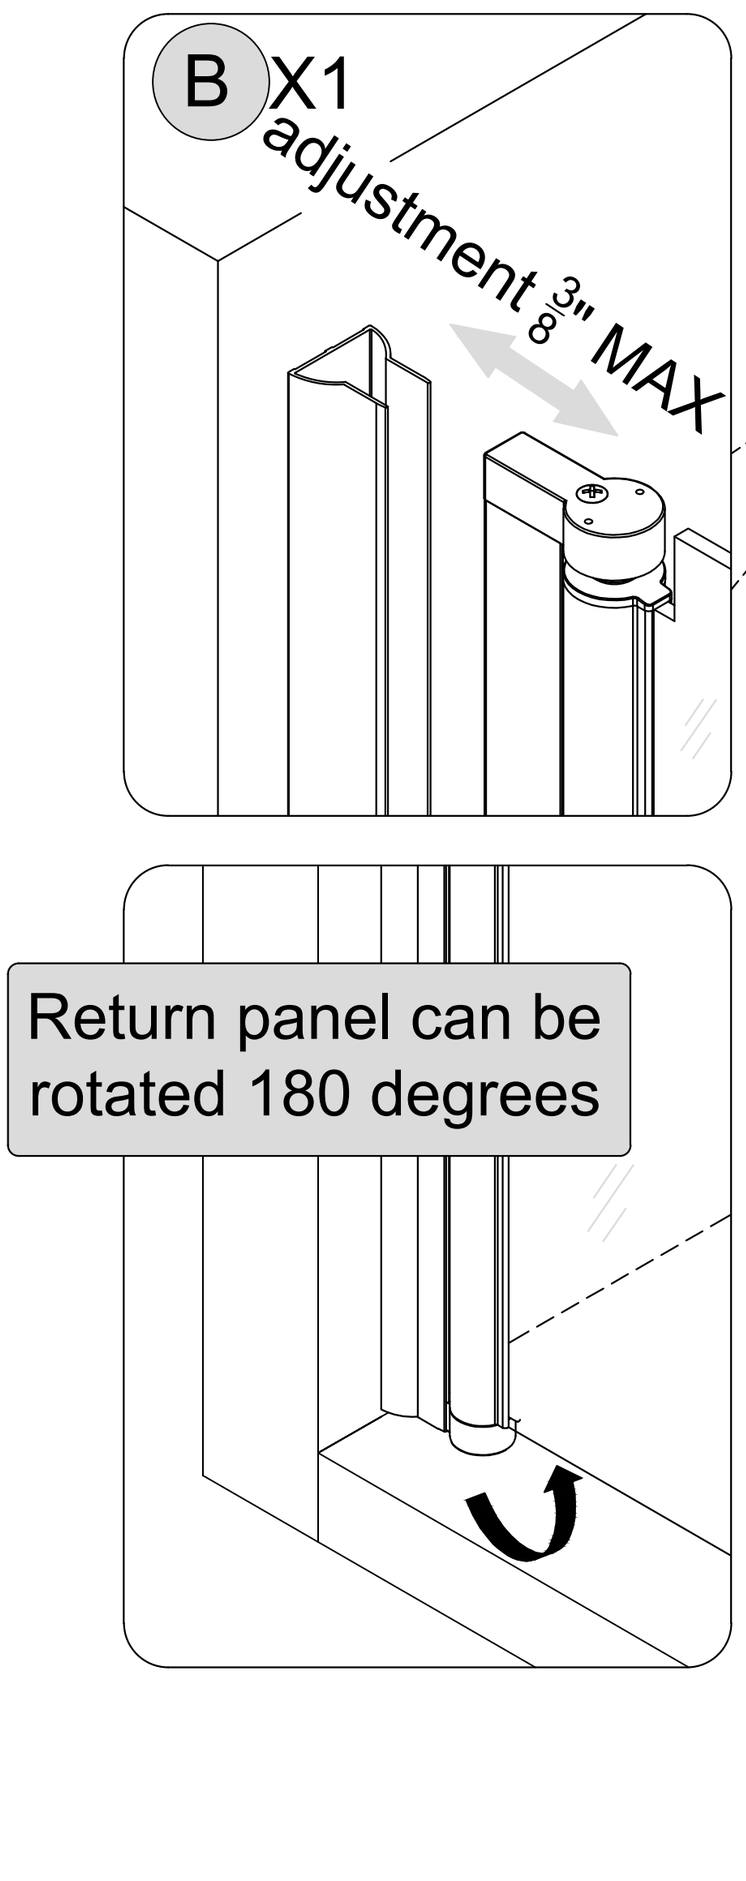


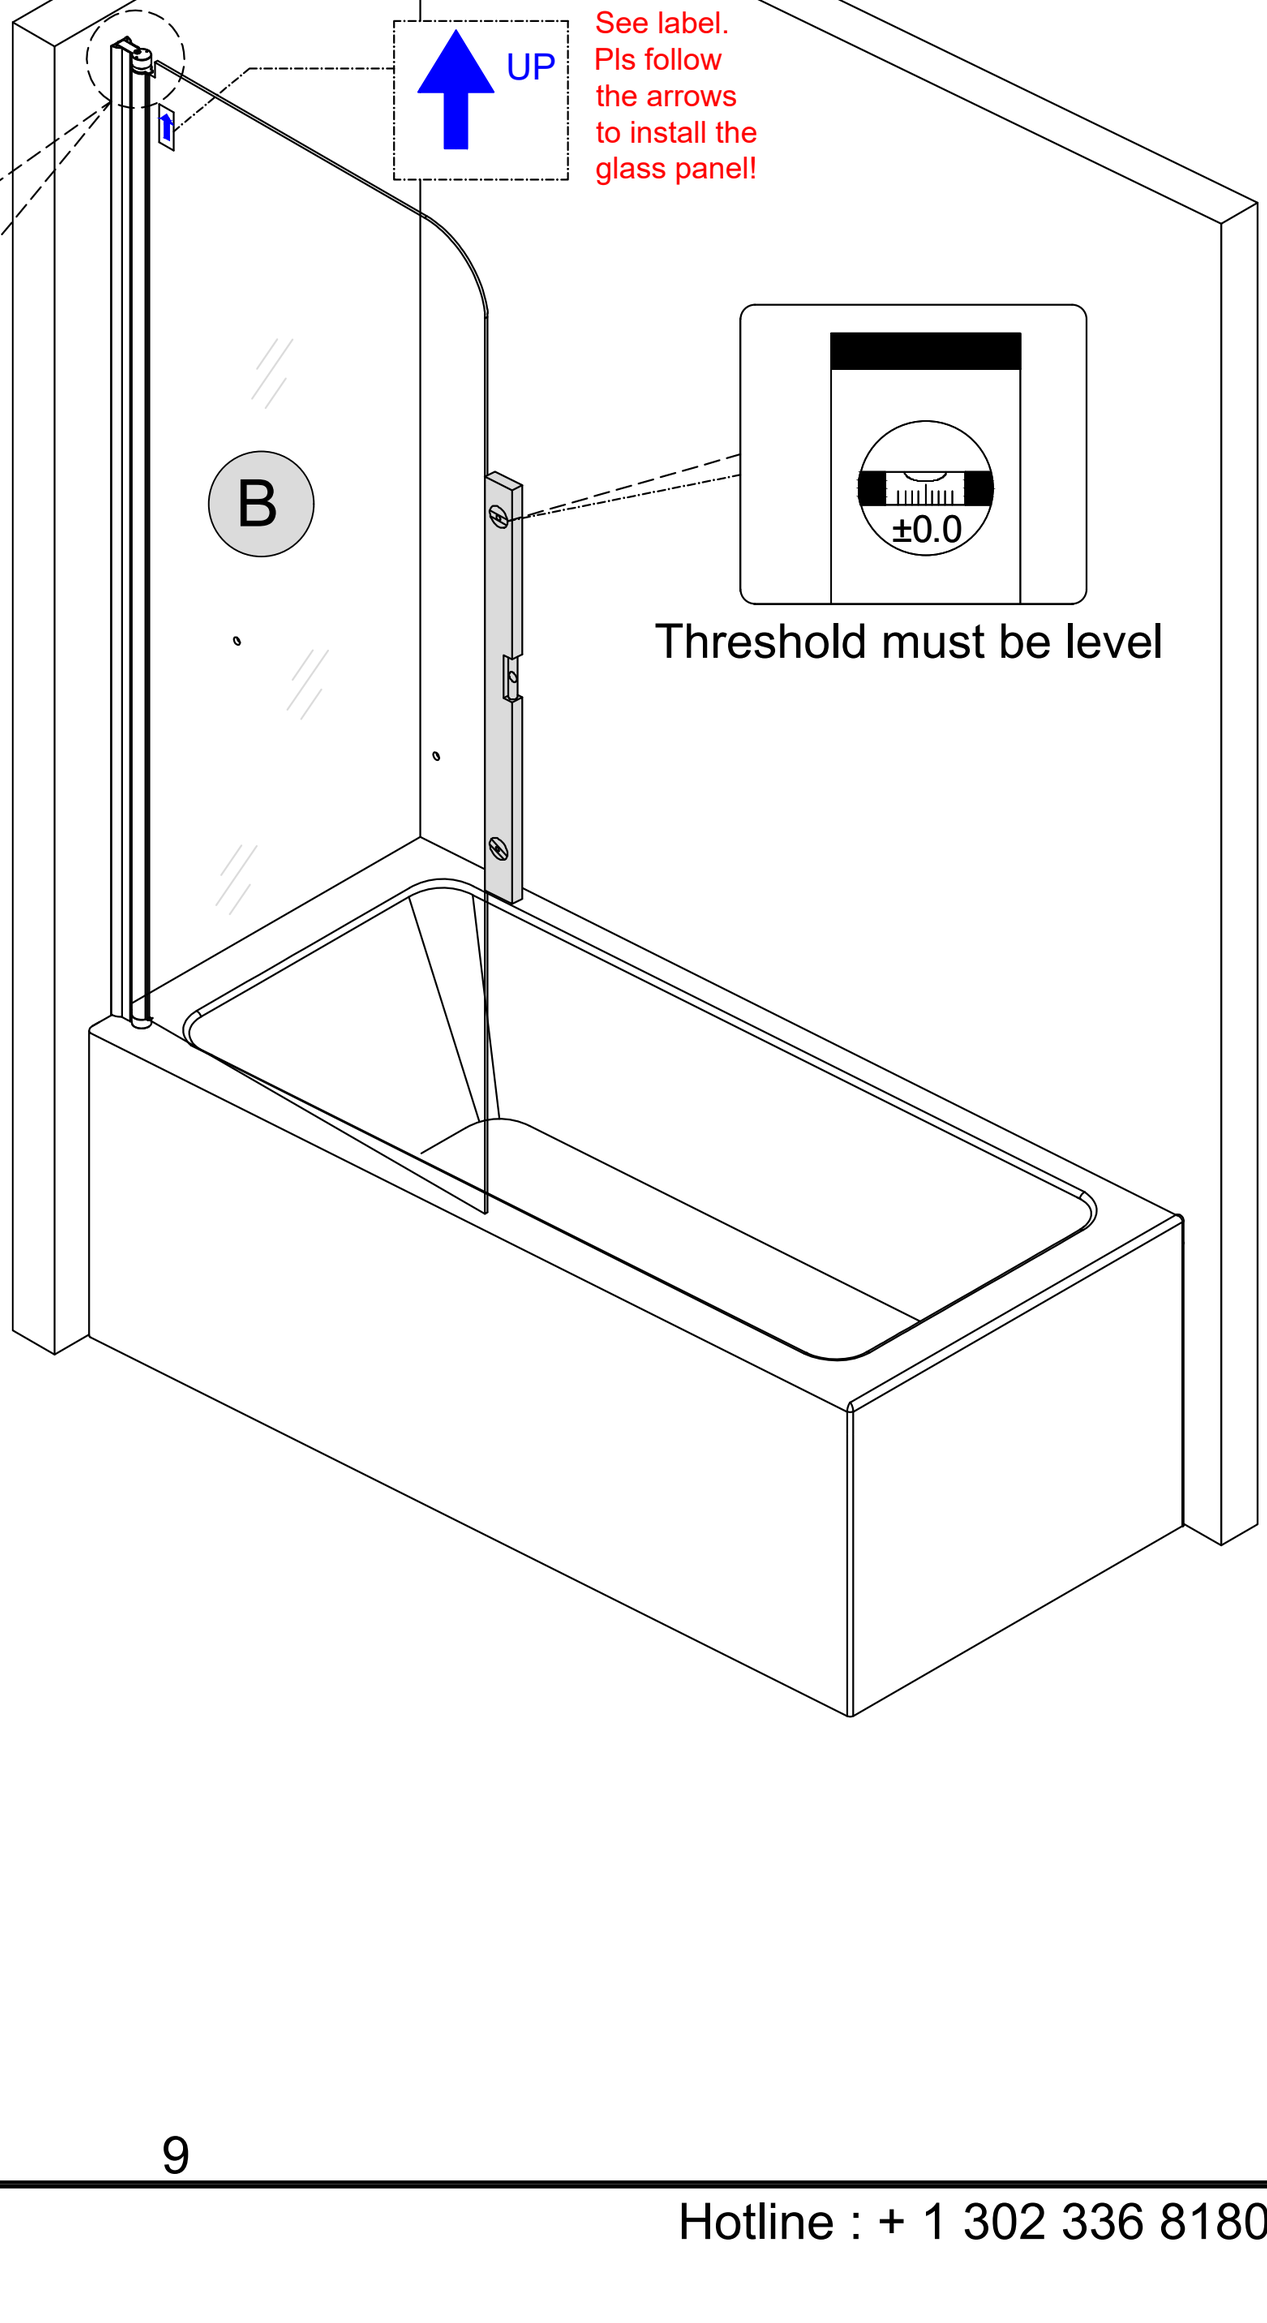


3 Fasten the **Door panel(B)**


NOTE


After final adjustments, drill Ø1/8” holes in the **Wall Jamb (C)**. Drill only through the first layer of the Door panel Profile and install the **ST4.0x10mm Pan Head Screws (dd)** using the **Decorative Covers and Washers (cc)**

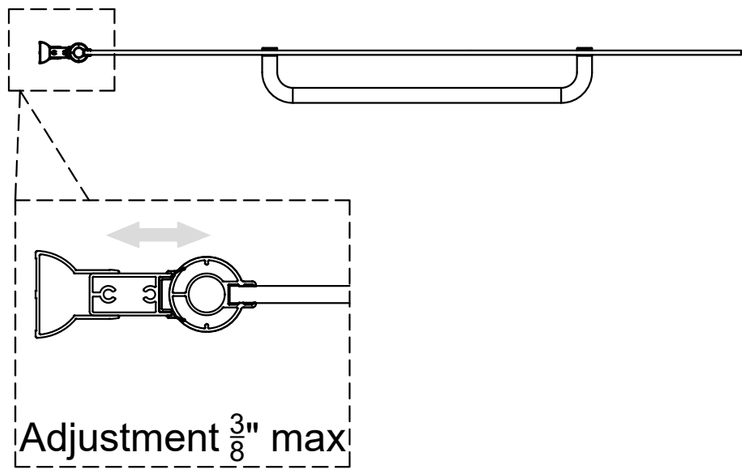

Inside View

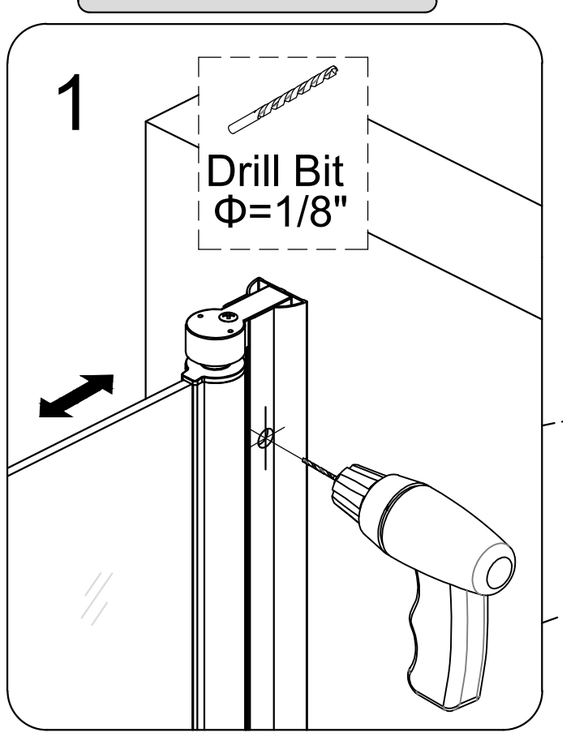

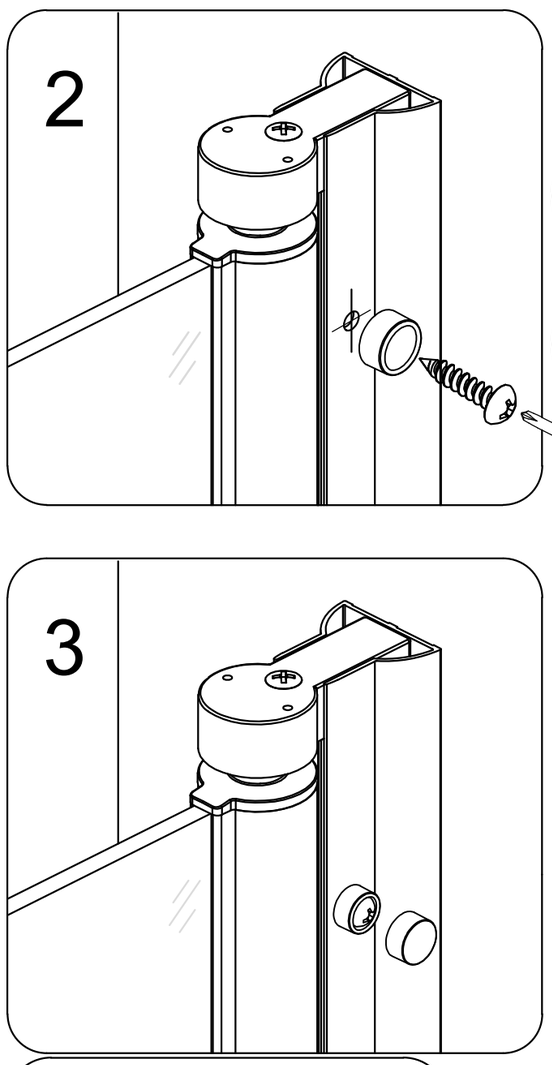


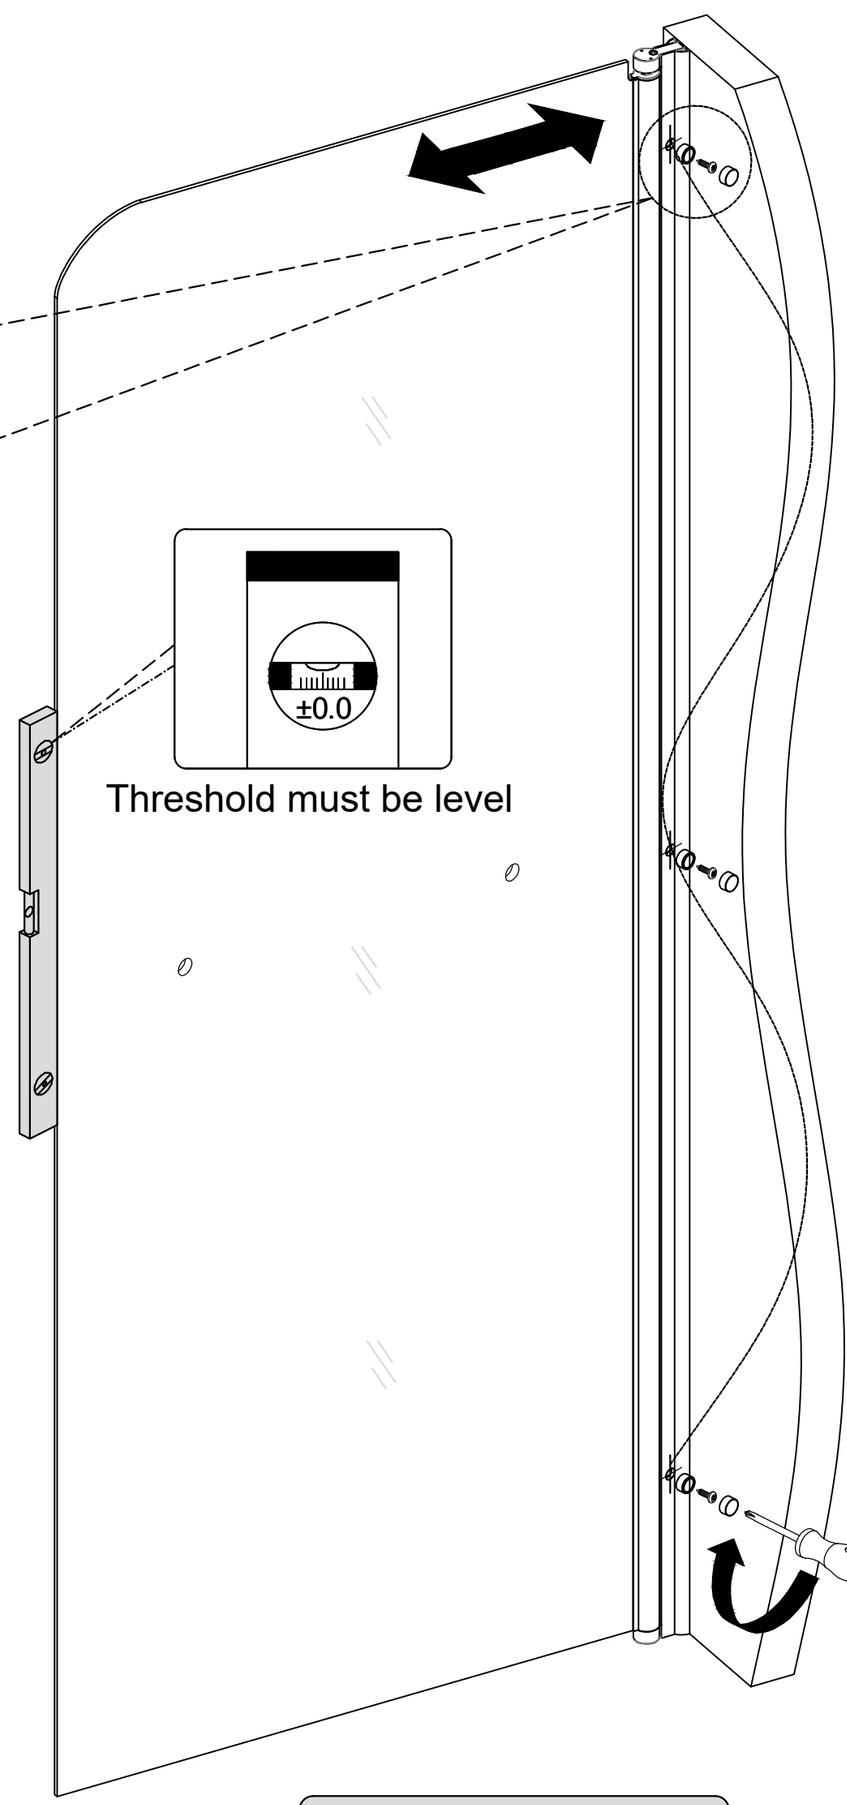


Inside View

NOTE

Include the washers when installing the **ST4.0×10mm Pan Head Screws (dd)** and **Decorative Caps (cc)** .

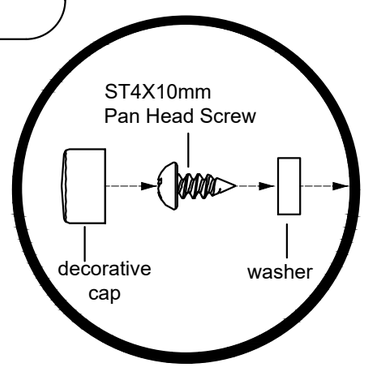


4 **Handle(E)** Installation

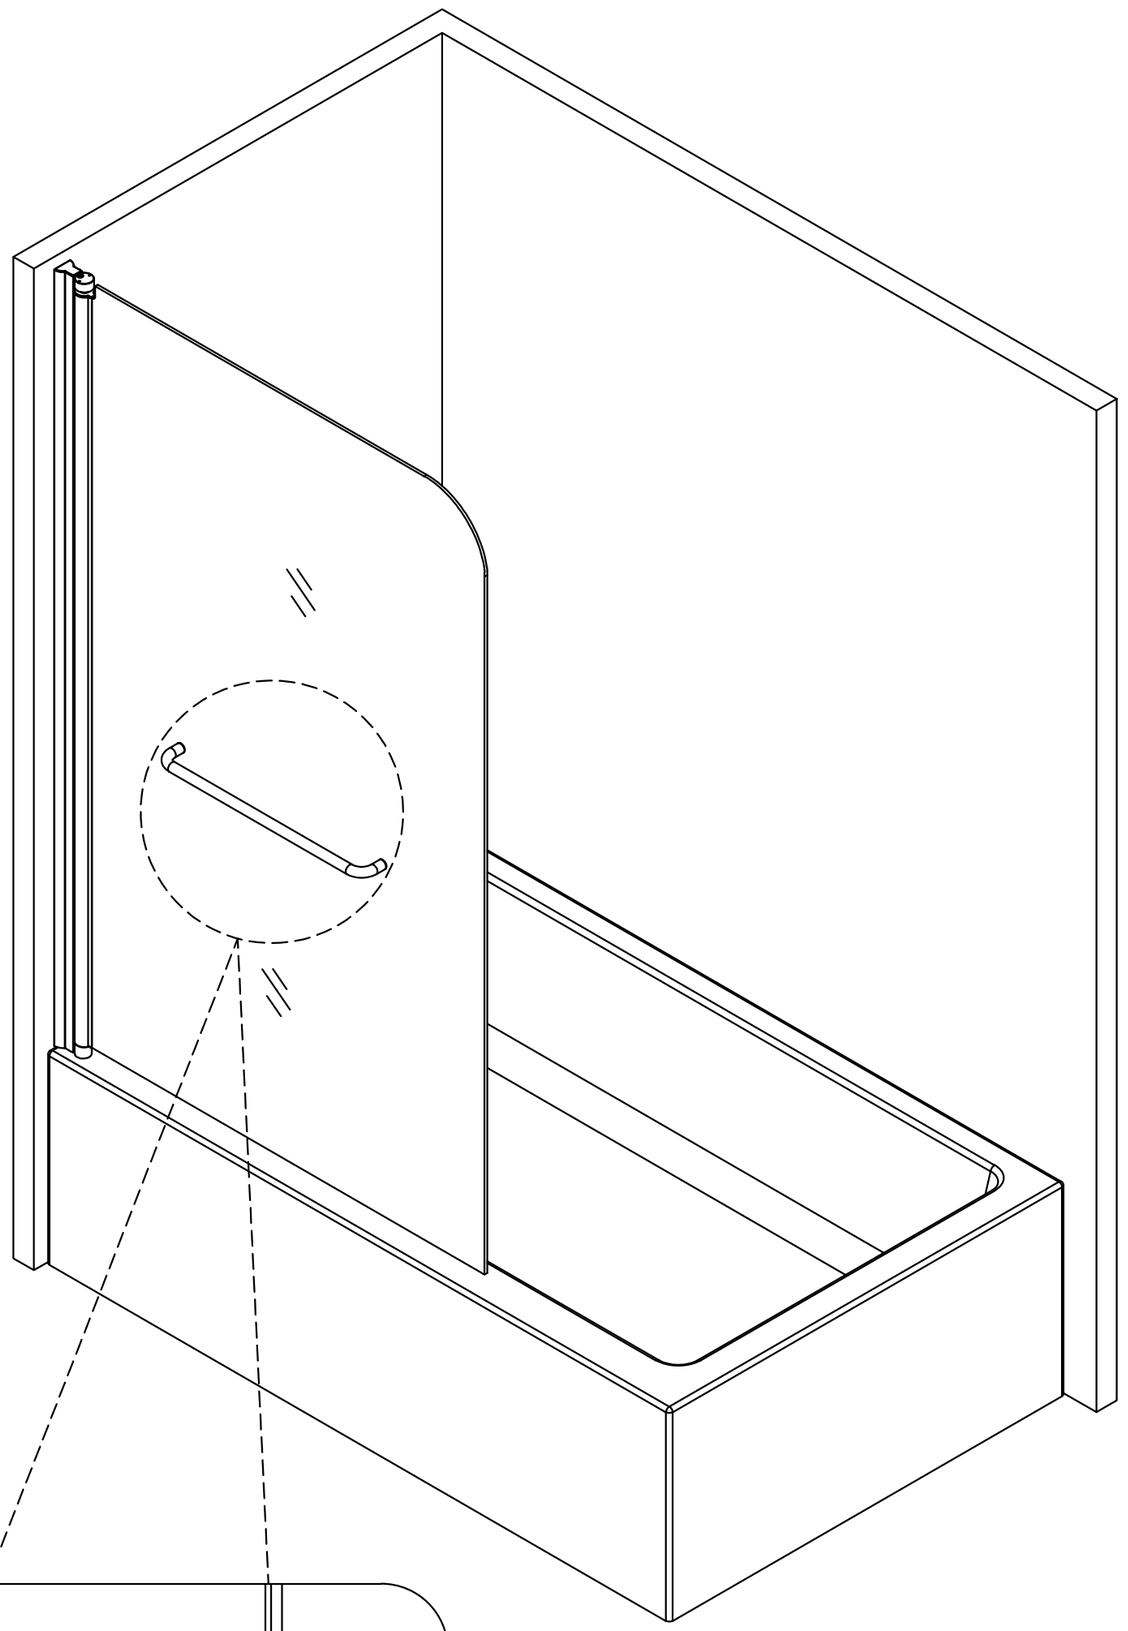


NOTE

Attach the **Handle (E)** to the **Door Panel (B)** . Be sure to use all of the supplied rubber gaskets to protect the glass.

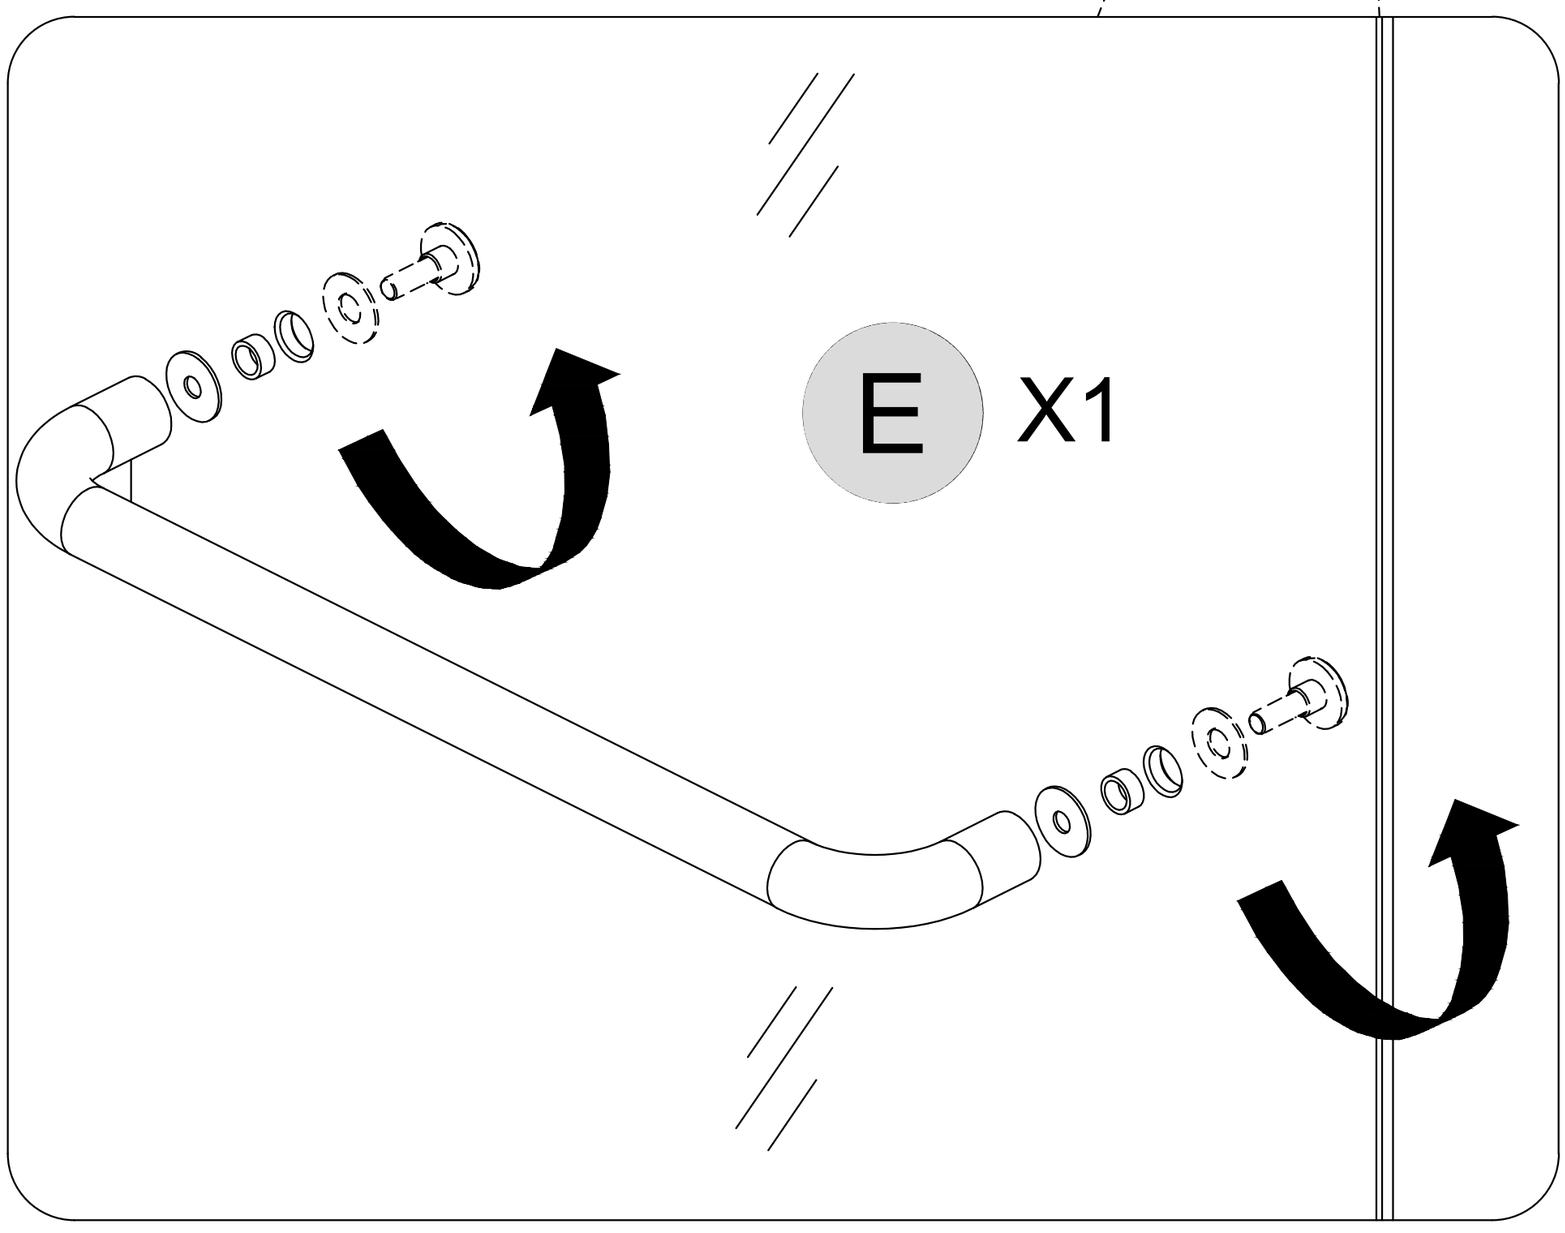

5 **Top Cover Cap (D)&Bottom Anti-water Strip (A)** Installation

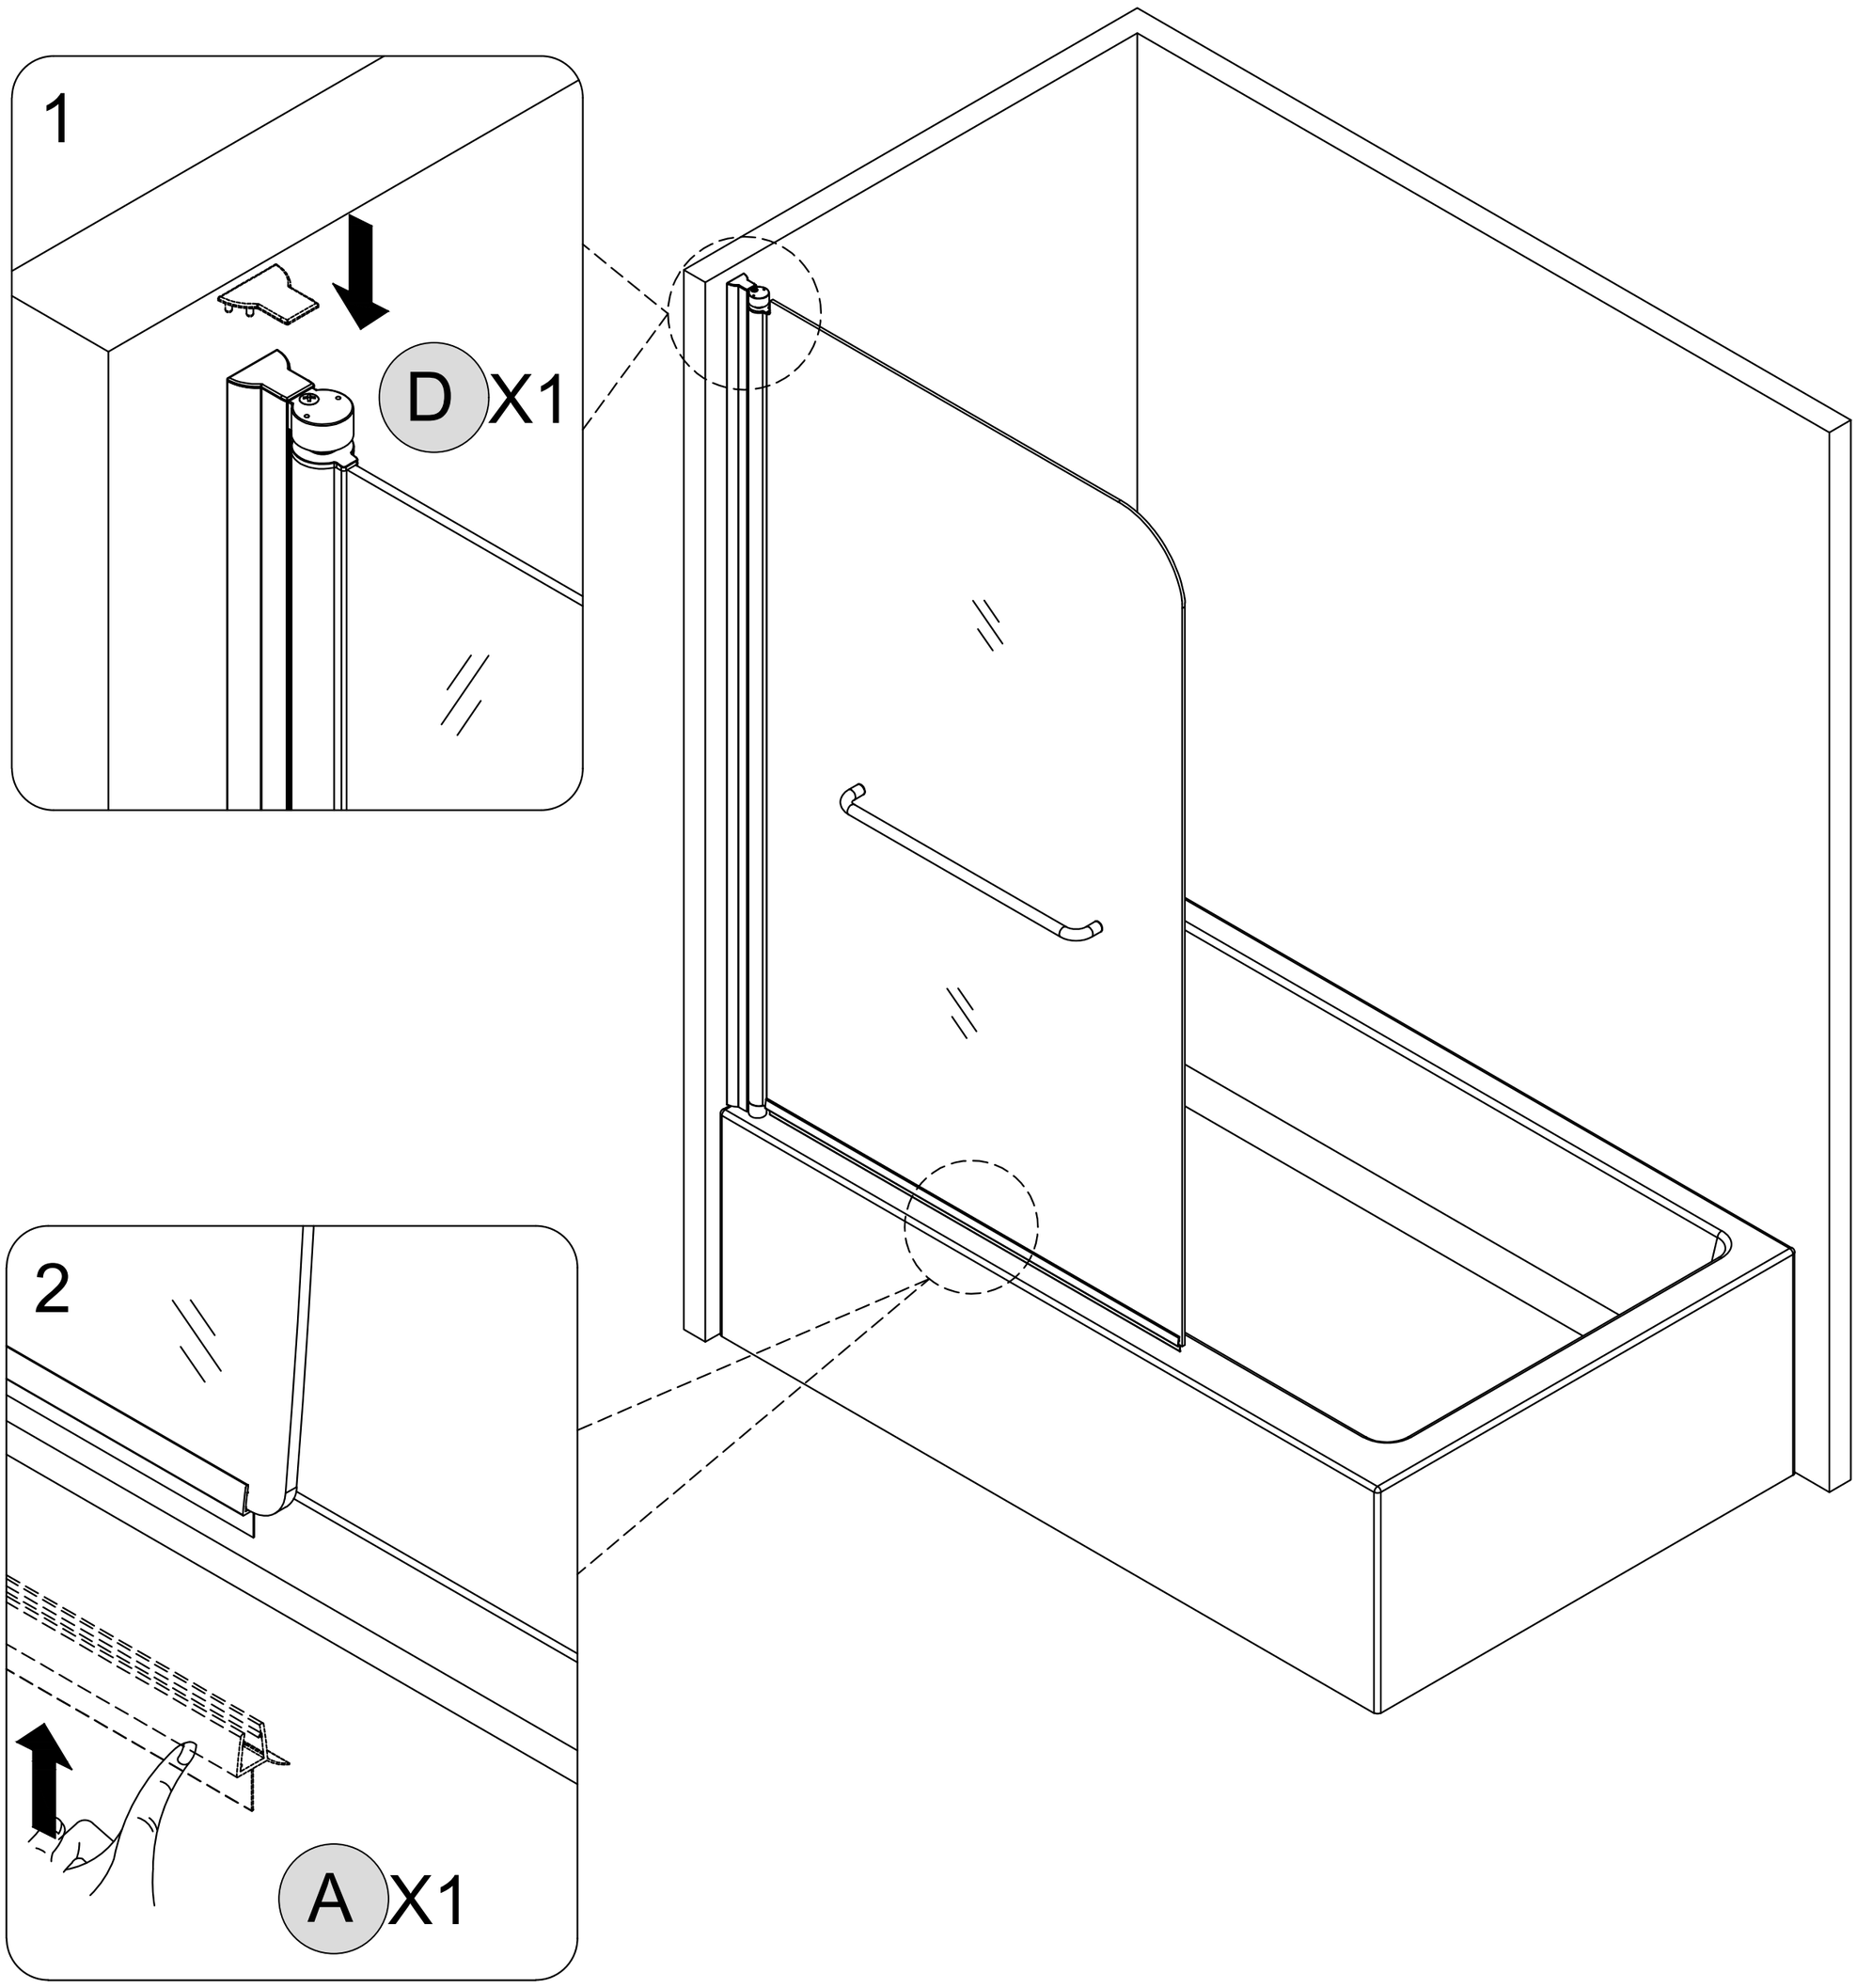

NOTE

Attach the **Bottom Anti-water Strip (A)** to **Door panel**（**B**）.

6 SEALING

NOTE


The surfaces need to be clean and free of debris before applying silicone.

NOTE

Ensure that the Shower door closes tightly and opens smoothly.

Apply a good quality silicone sealant along the Wall Jamb(C)

Allow 24 hours for the silicone to cure before using the shower.

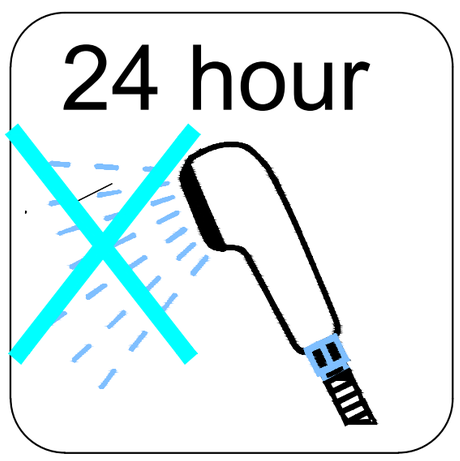

Apply Silicone Sealant,(not supplied).

