

INSTALLATION INSTRUCTION

 Since most installations are on solid walls, drywall anchor kits are not included by default. If your wall is drywall, please contact us and we will be happy to assist.

Dimension: 80.8×96.1×15.7inch

Notice:













1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

Support:

Thank you for your purchase. We hope you enjoy this item, thoughtfully designed by our team.

Please note that this product is a ready-to-assemble item and includes multiple panels and hardware components. While every effort is made to ensure all parts arrive in perfect condition, in rare cases, some components may be missing or panels may be damaged during transit.



















If you discover any missing or damaged parts, please email us before initiating a return. Our customer service team will be happy to assist you and provide replacement parts as needed. Thank you for your understanding.

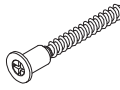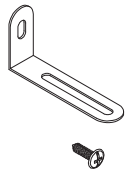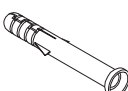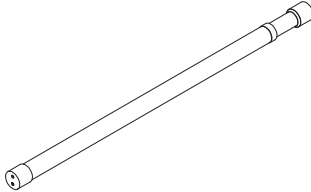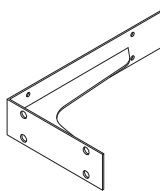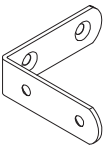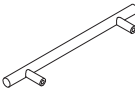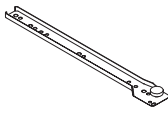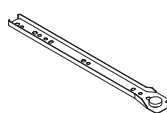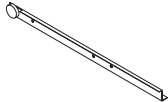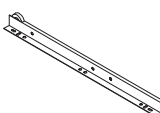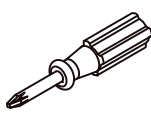
		 Ø6*30	 M5*40	 M3*12	
A×12	B×22	C×10	D×32	E×36	F×4
 M3.5*30	 Ø20				 M3.5*10
G×12	H×54	I×8	J×6	K×10	L×1
 M4*35			 O1×2pcs	 O2×8pcs	 M3.5*12 O3×8pcs
M×19	N×3		O×3		
	 M4*10	 M3.5*12			
P×12	Q×3	R×36	CL×3	CR×3	DL×3
					
DR×3	TOOL				


5PCS

Spare parts for Pre-inserted Nuts, which are used for fastening "A" screw in case of missing inserting nuts by workers.


Accessories List

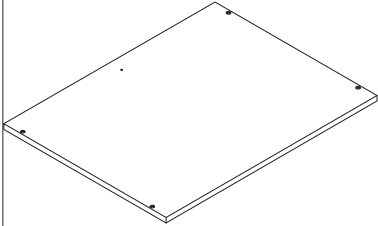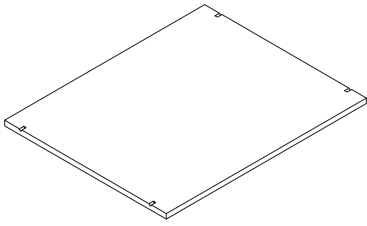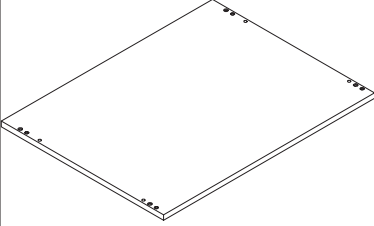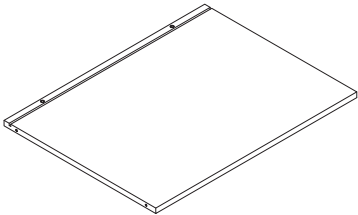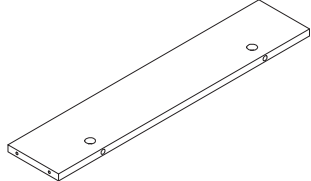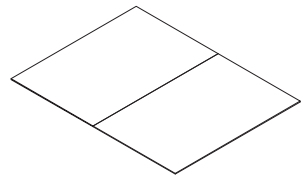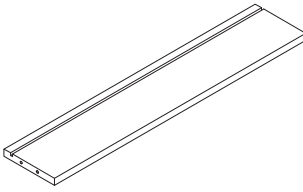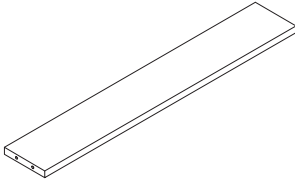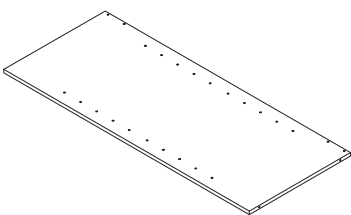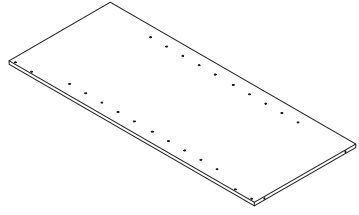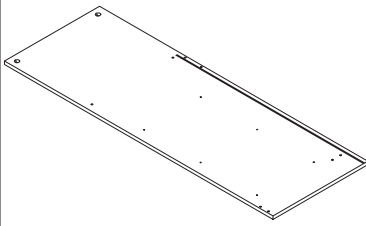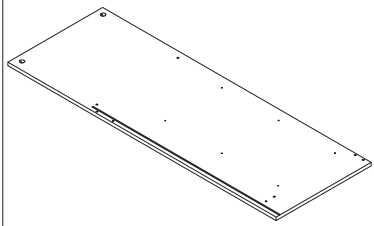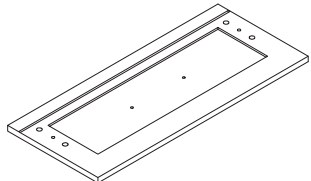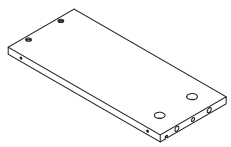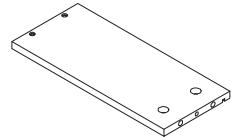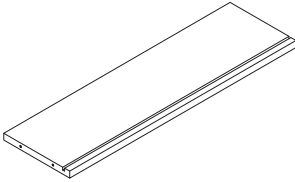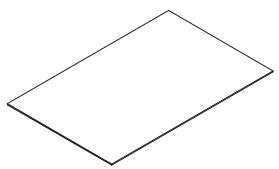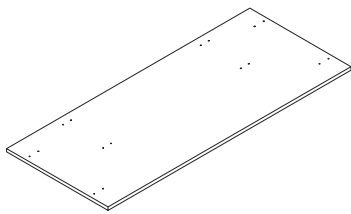① 	②  2 PCS	③ 	④ 
⑤  3 PCS	⑥ 	⑦ 	⑧ 
⑨ 	⑩ 	⑪ 	⑫ 
⑬  3 PCS	⑭  3 PCS	⑮  3 PCS	⑯  3 PCS
⑰  3 PCS	⑱  3 PCS		

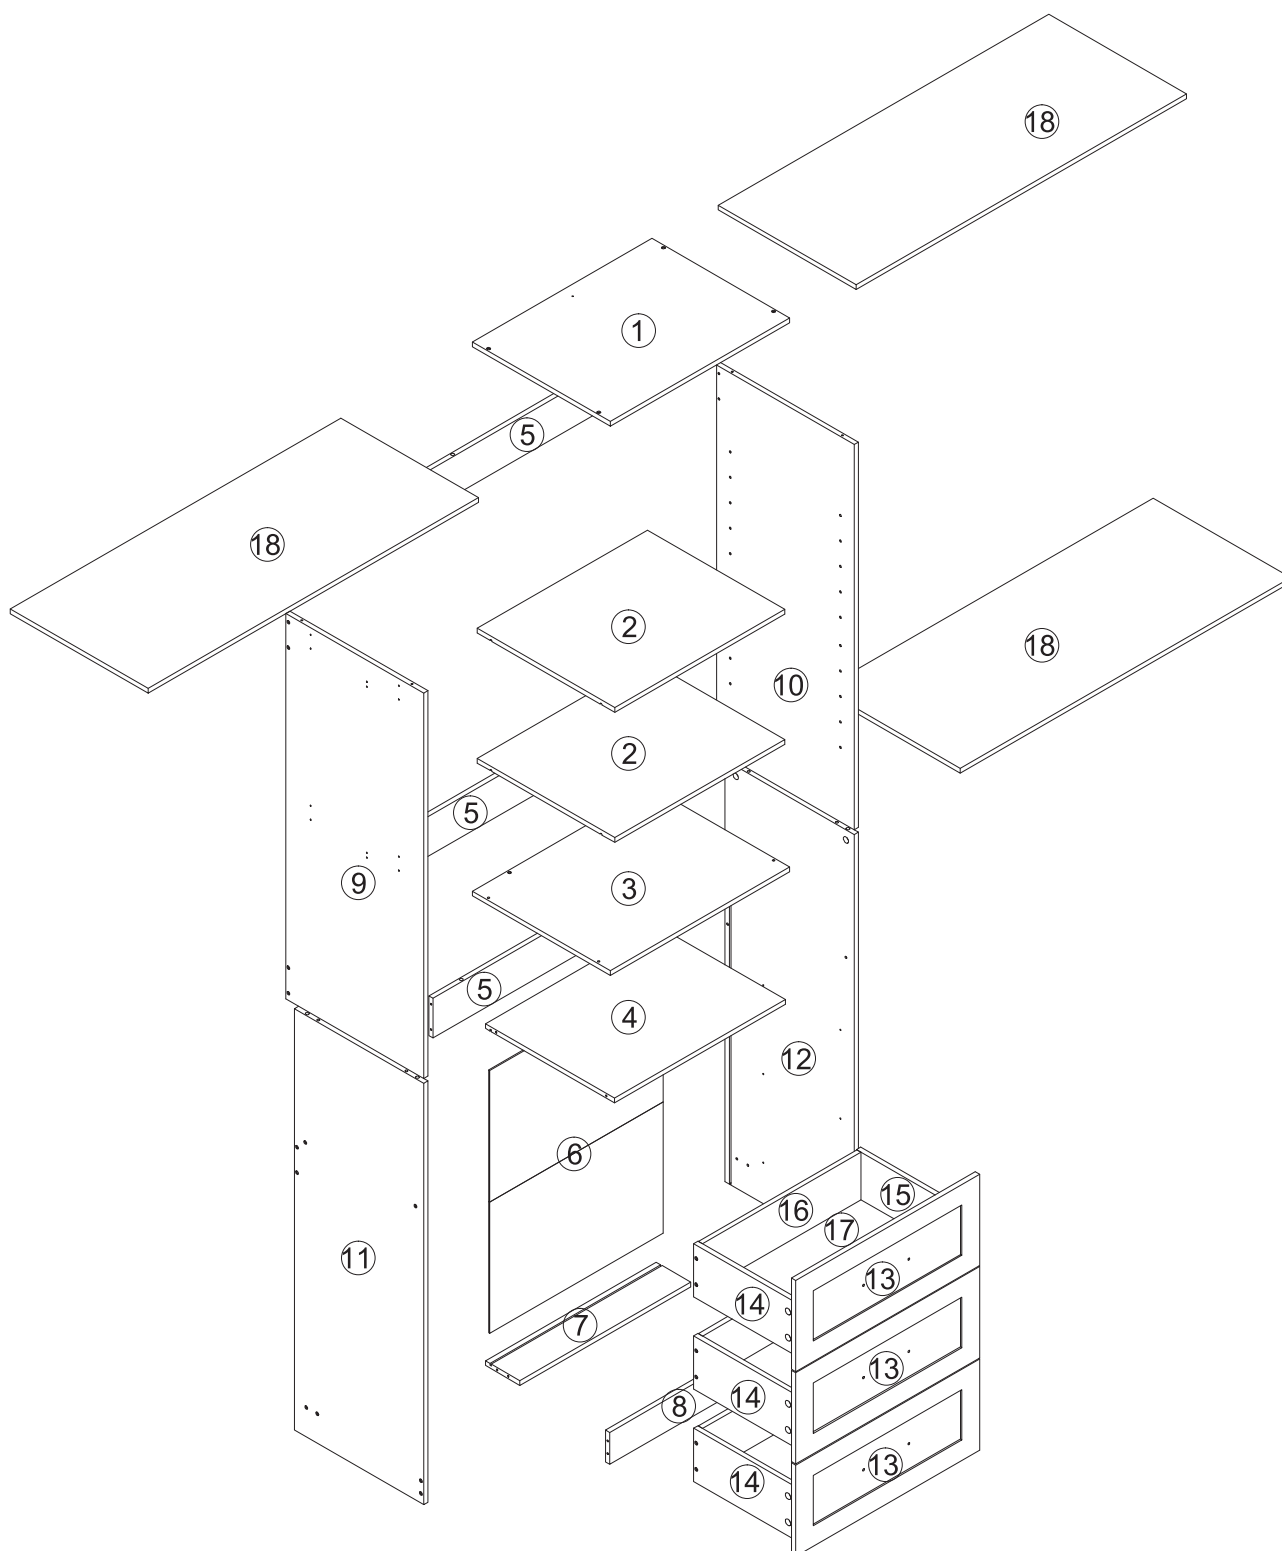


Explosive View


Cam Lock Fastening System

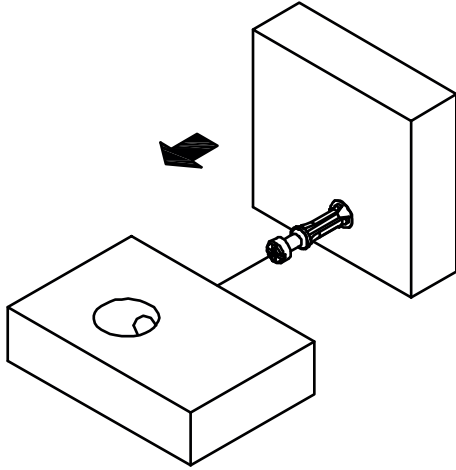

1. Connect the two boards -Insert the long screw "A" into the holes on the other board.

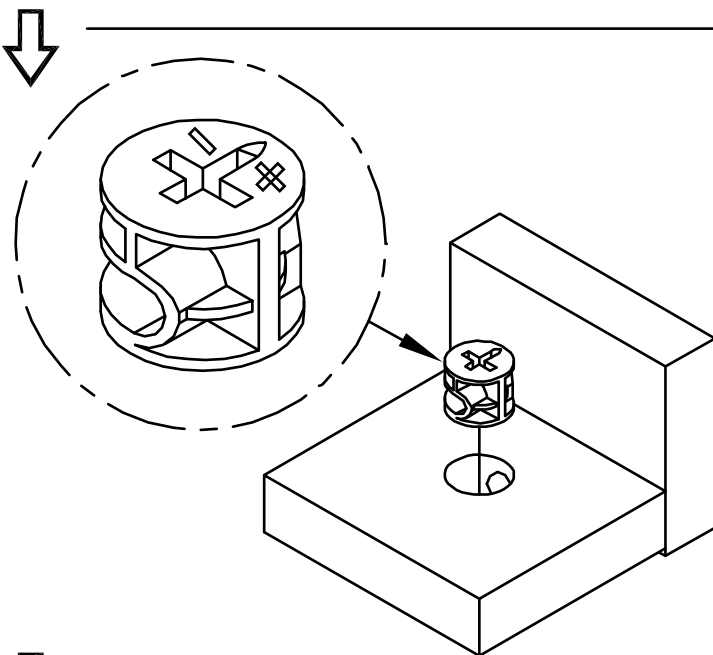


2. You can see the triangle "△" between "△" on hardware "B", insert the "B" as the image shows, please kindly note the direction of "△".

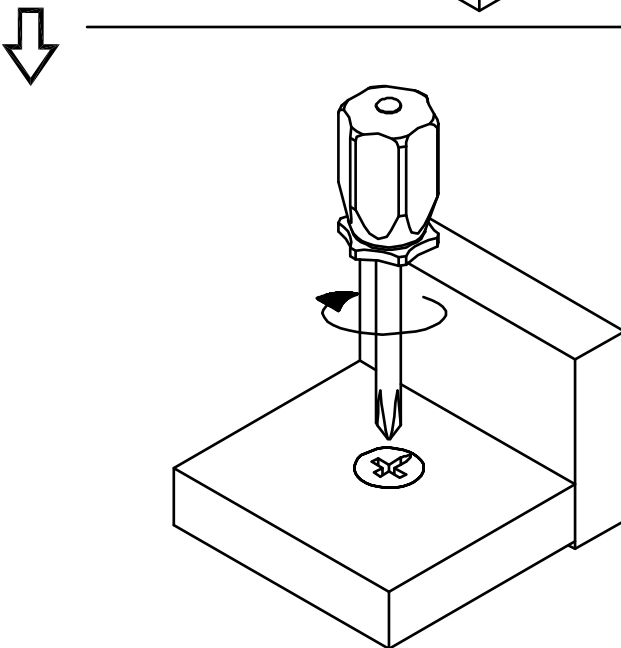

3. Use the tool to lock it.

1

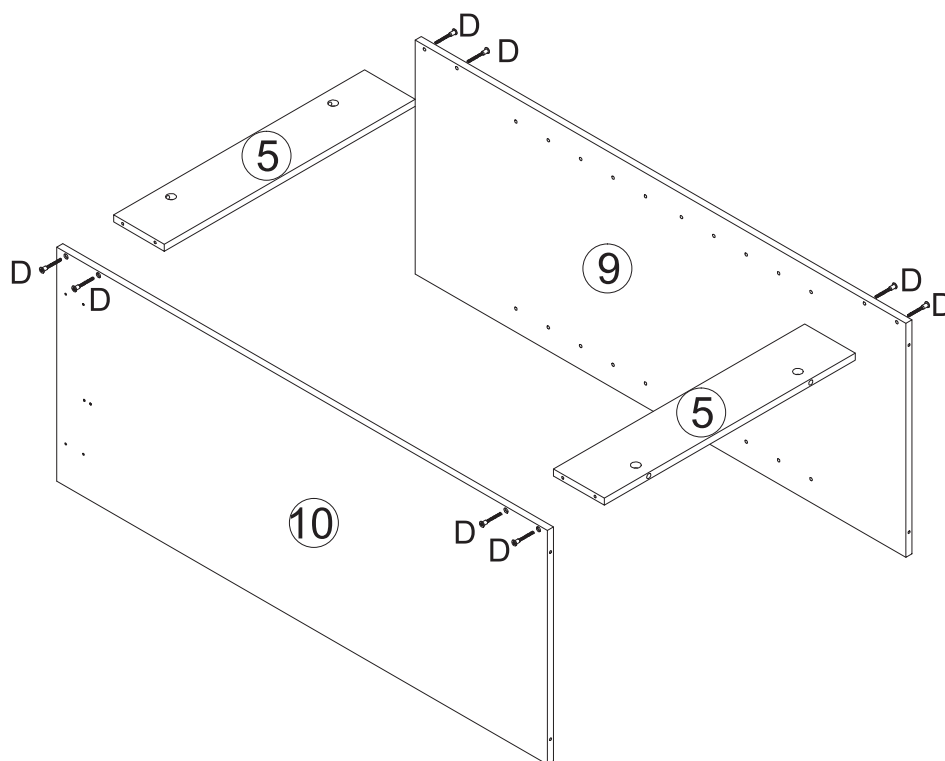
**D**

M5*40



8PCS

2

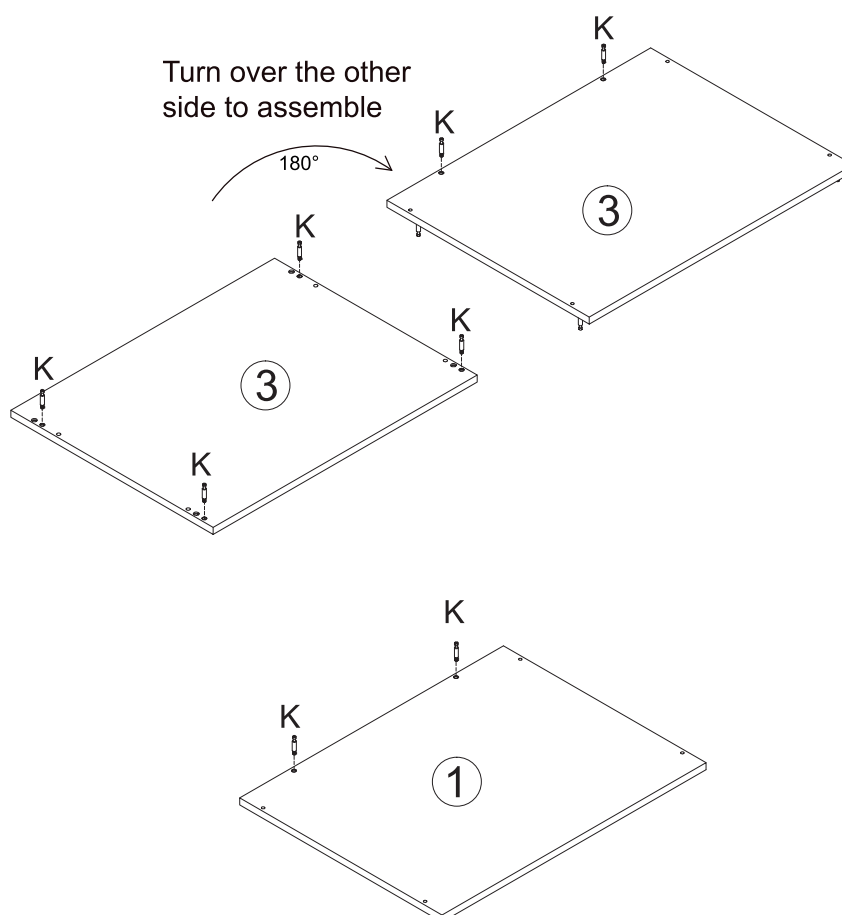
**K**

8PCS

3

B

4PCS

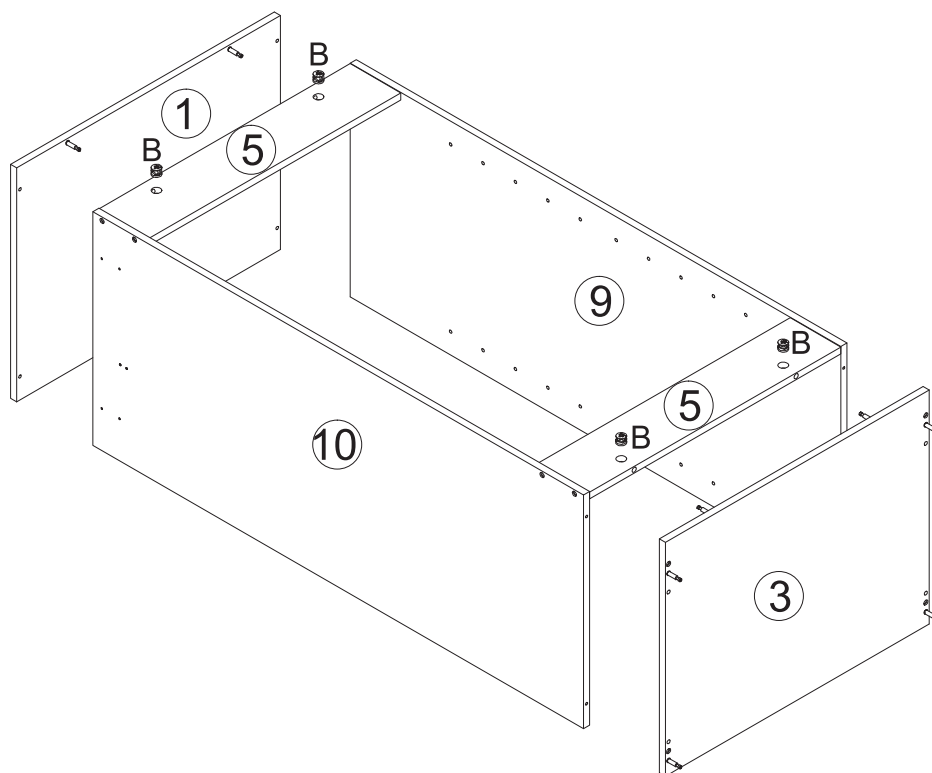


4

D

M5*40




8PCS

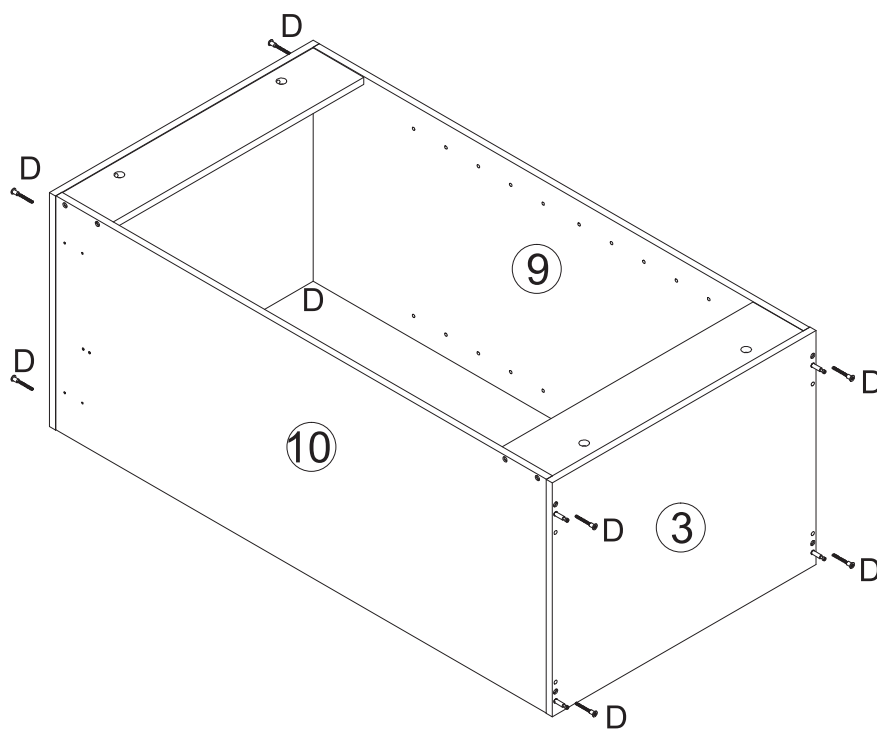

5

K


2PCS

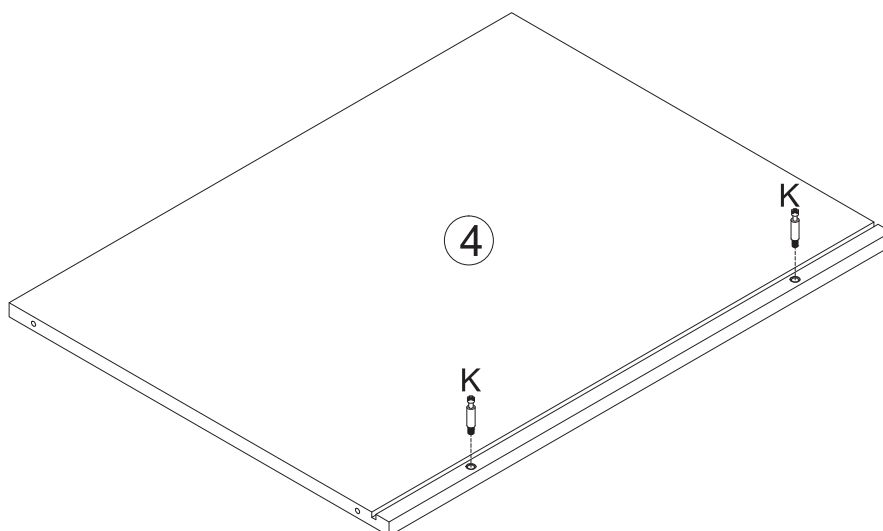



6

B

2PCS

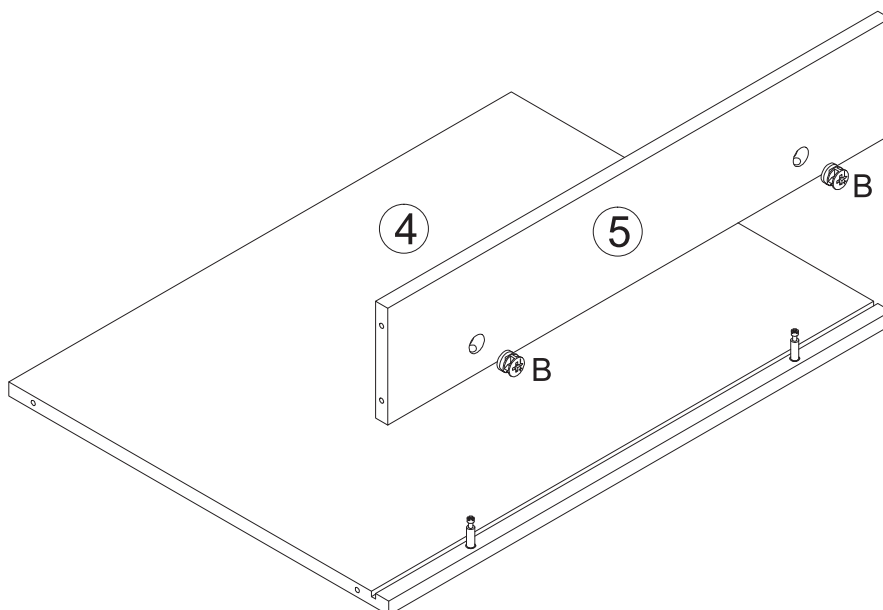

7

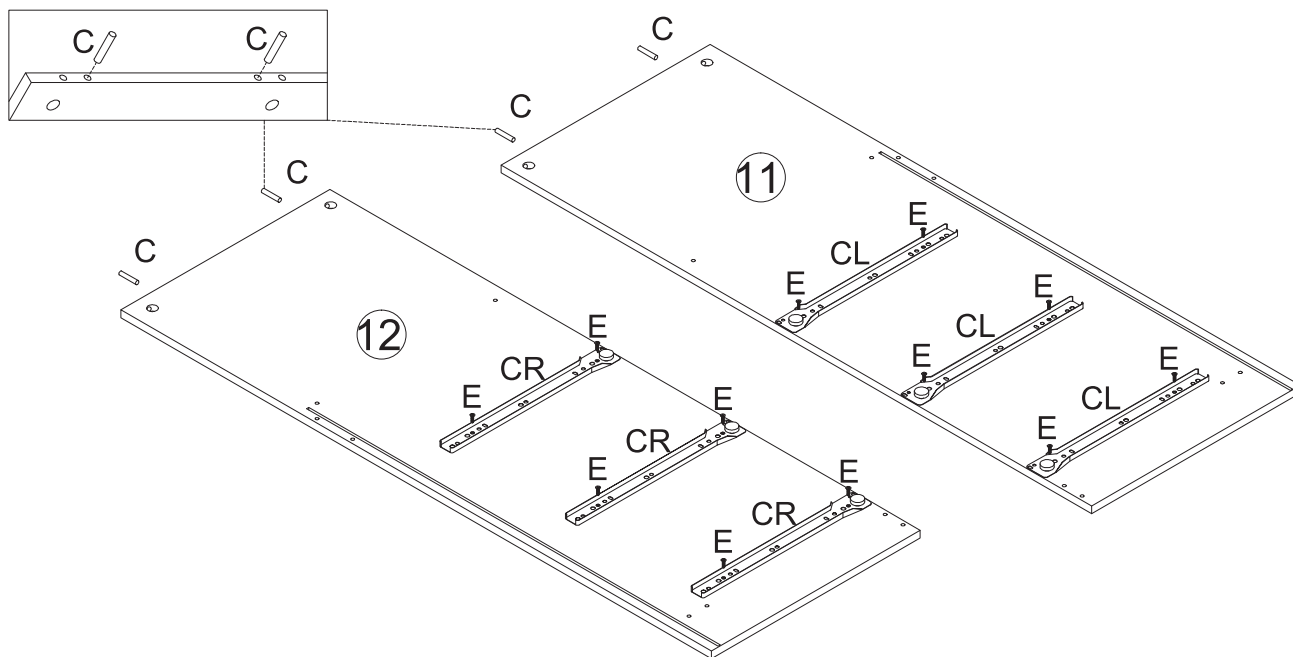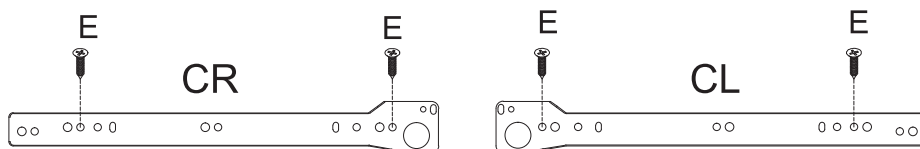

C Ø6*30




4PCS

E M3*12



12PCS

CL




3PCS

CR



3PCS

8

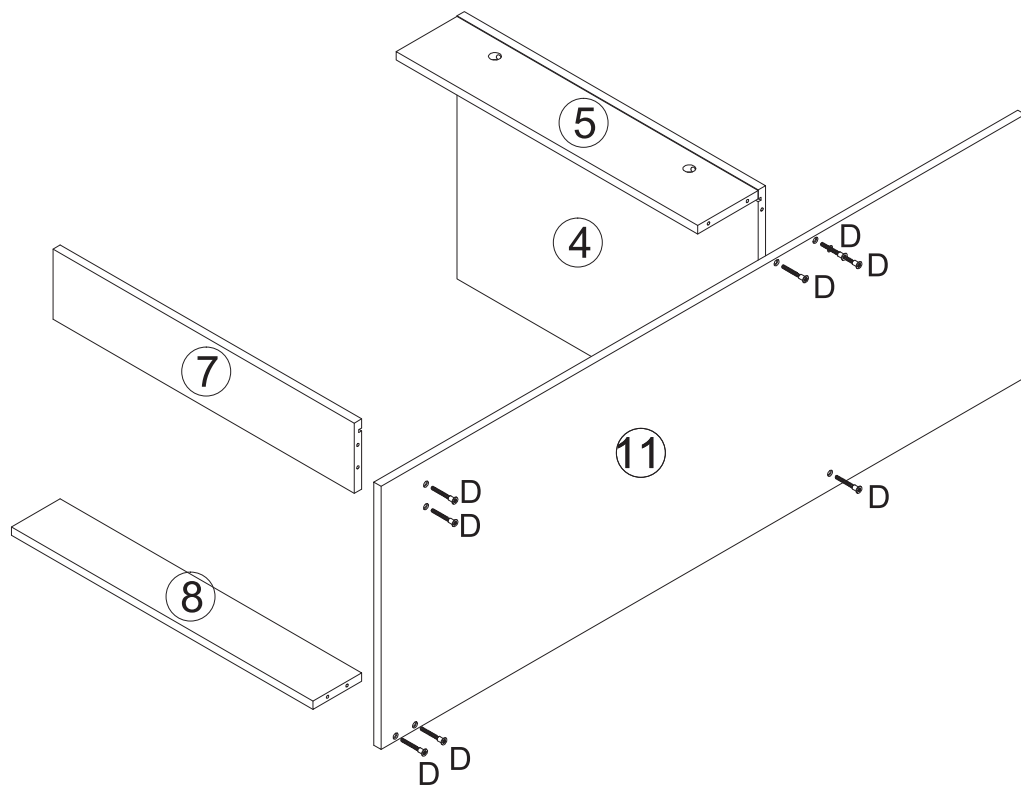


D

M5*40




8PCS

9

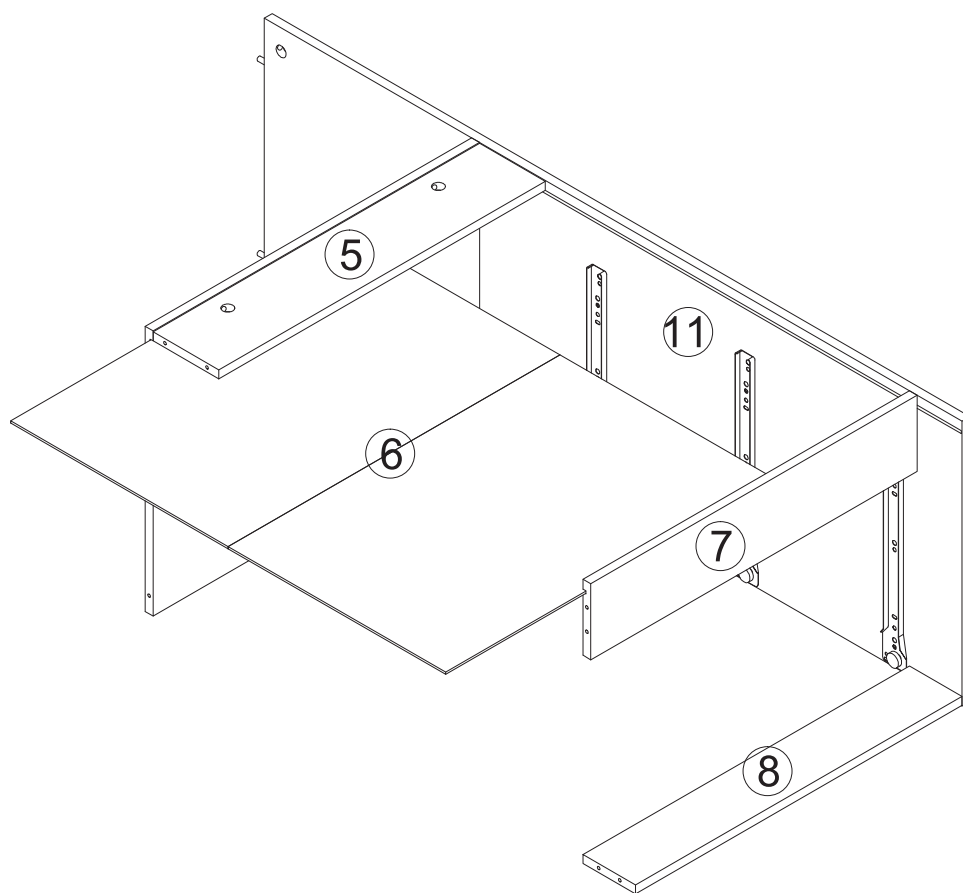

10

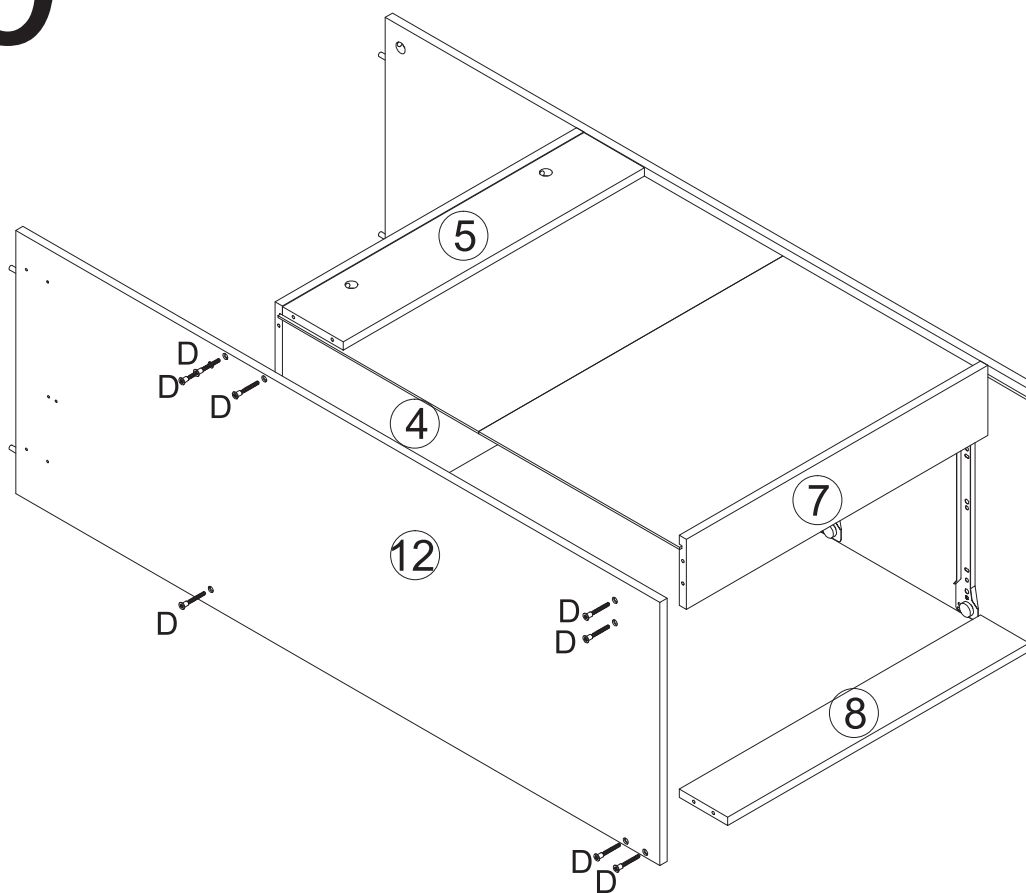

D

M5*40




8PCS

11



B




4PCS

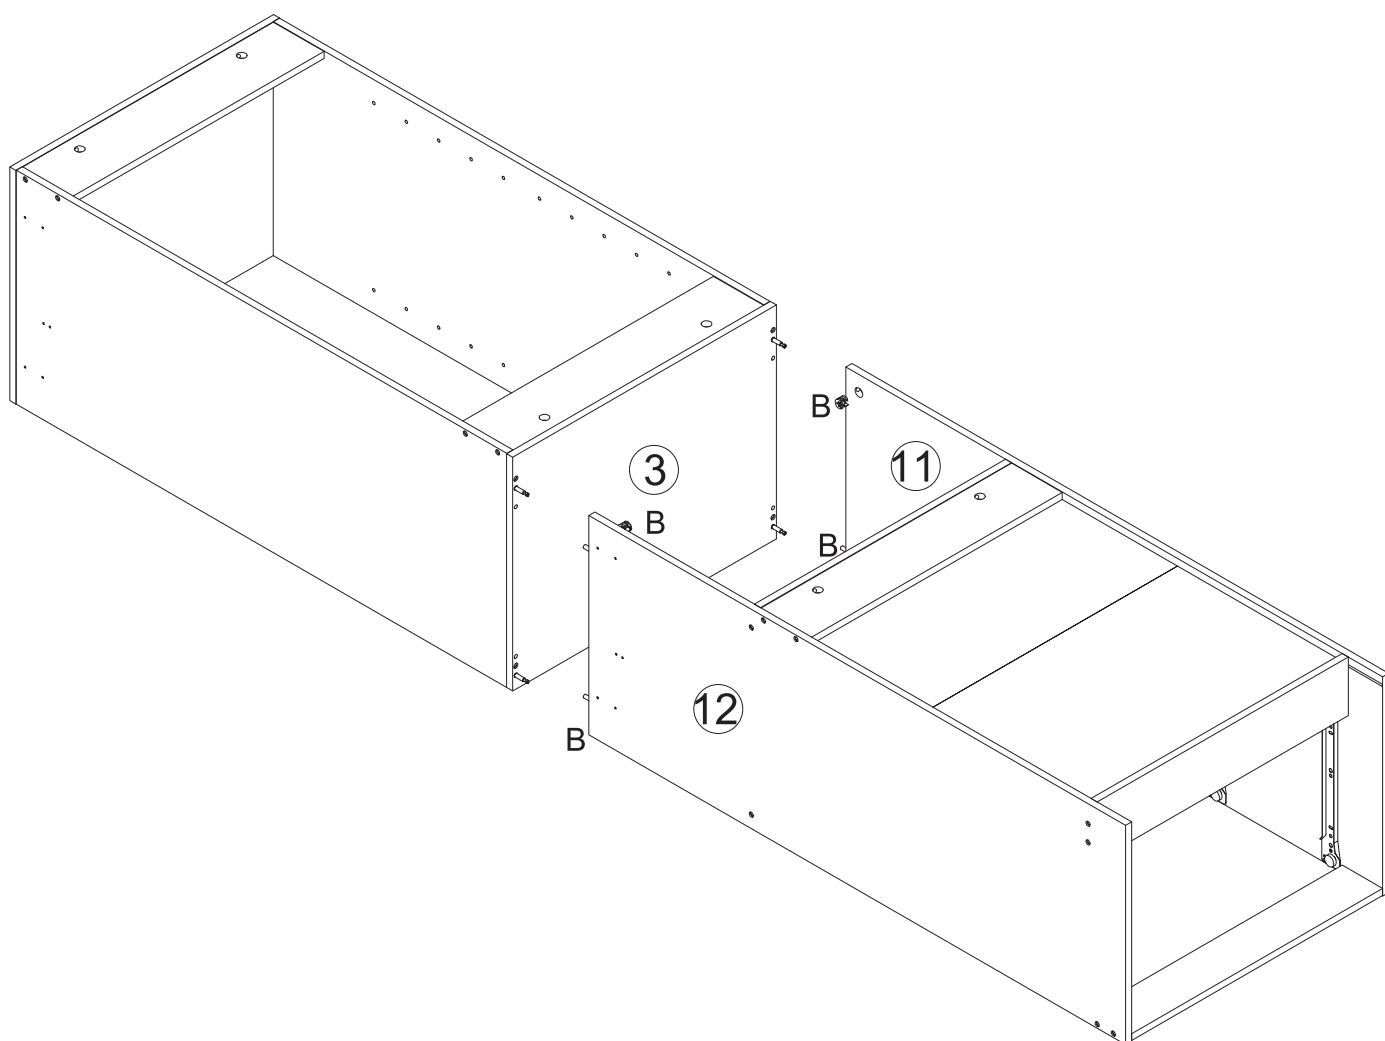

12

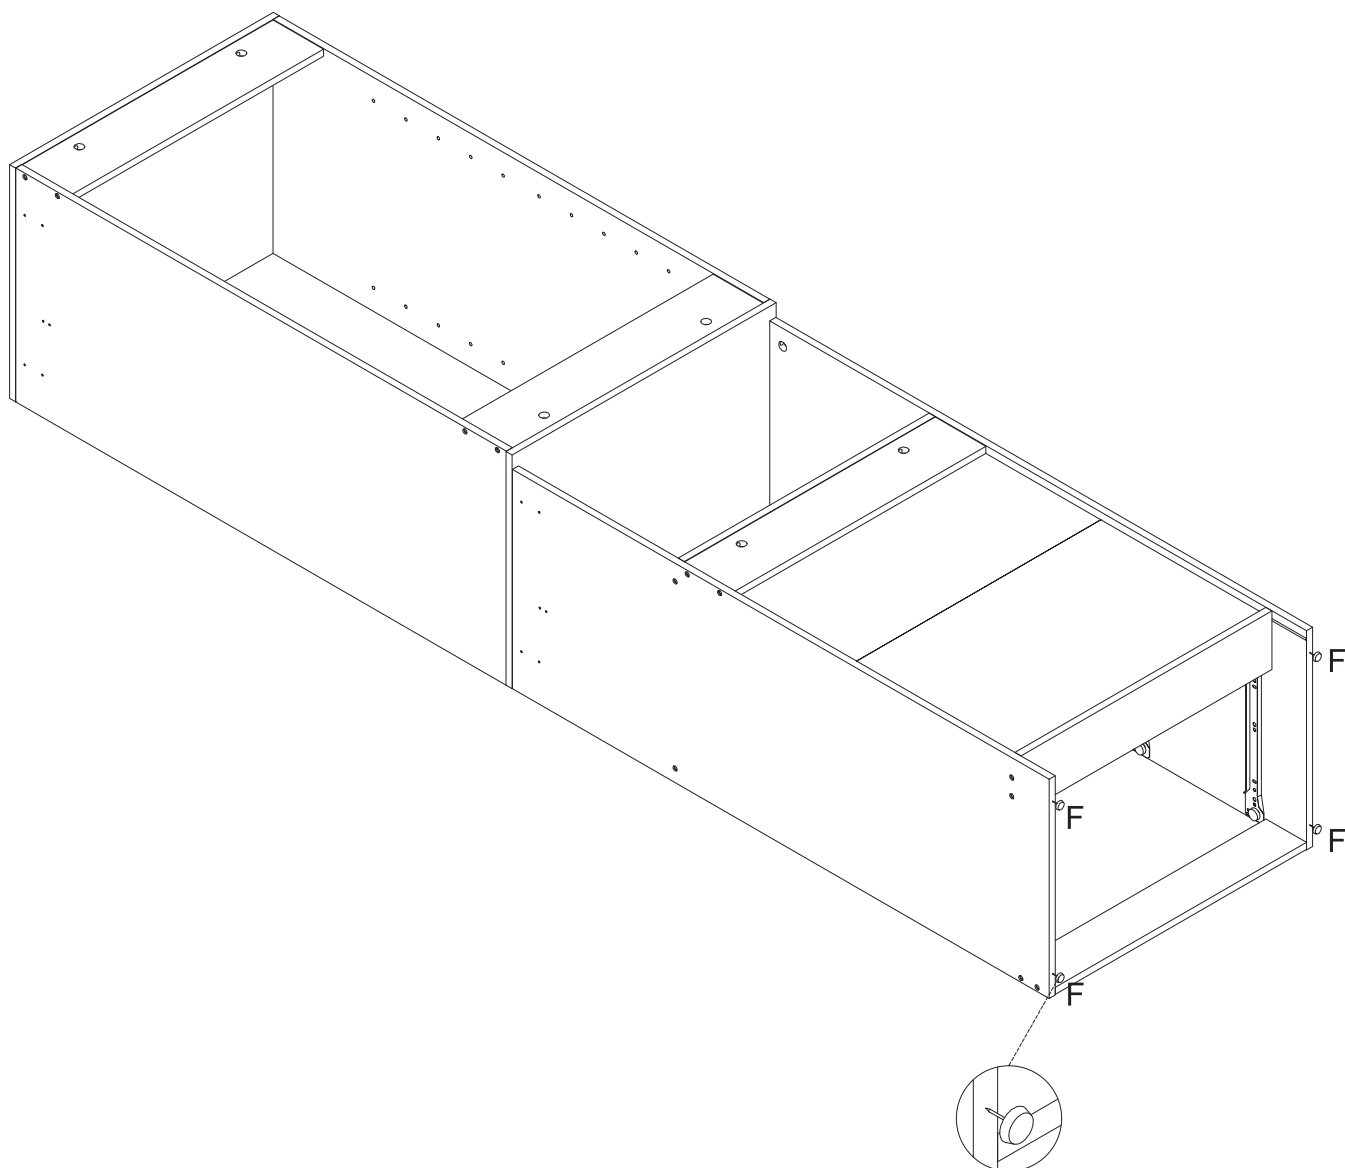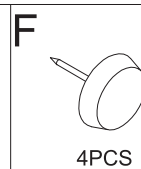

13

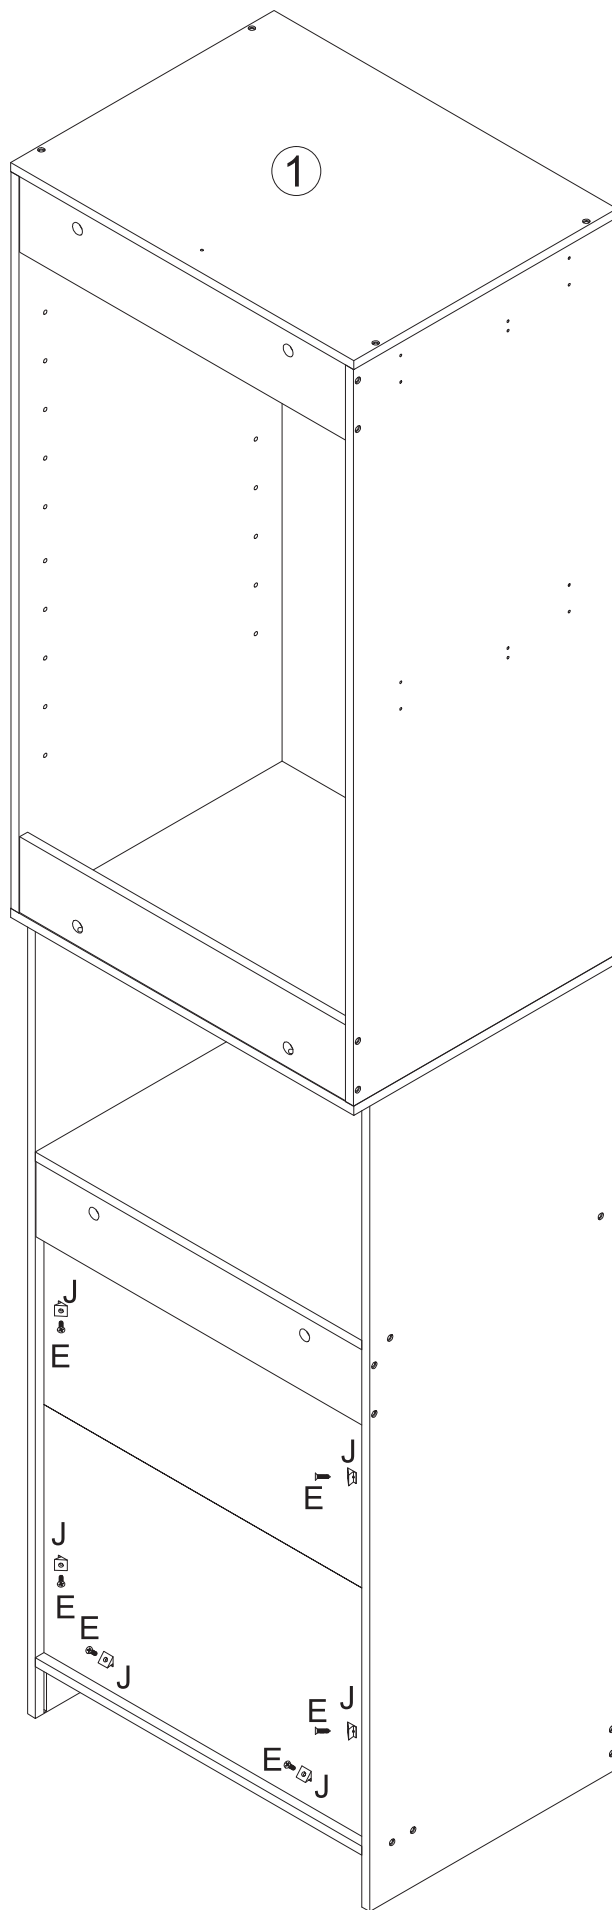

E

M3*12






6PCS

J







6PCS



14

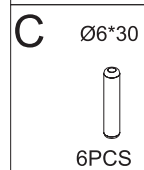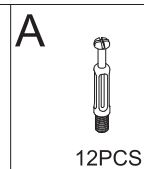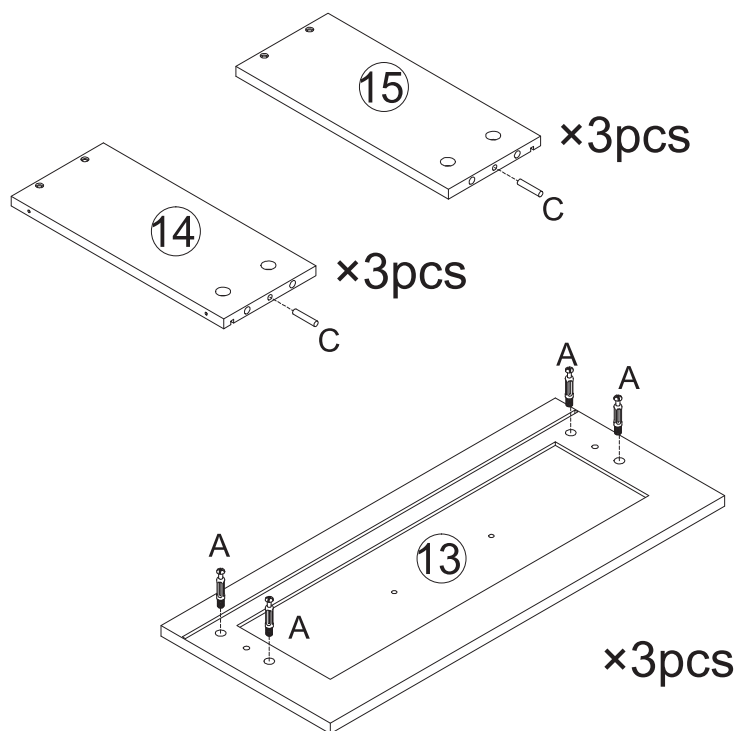


15

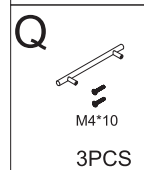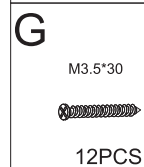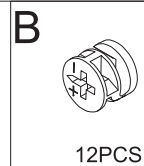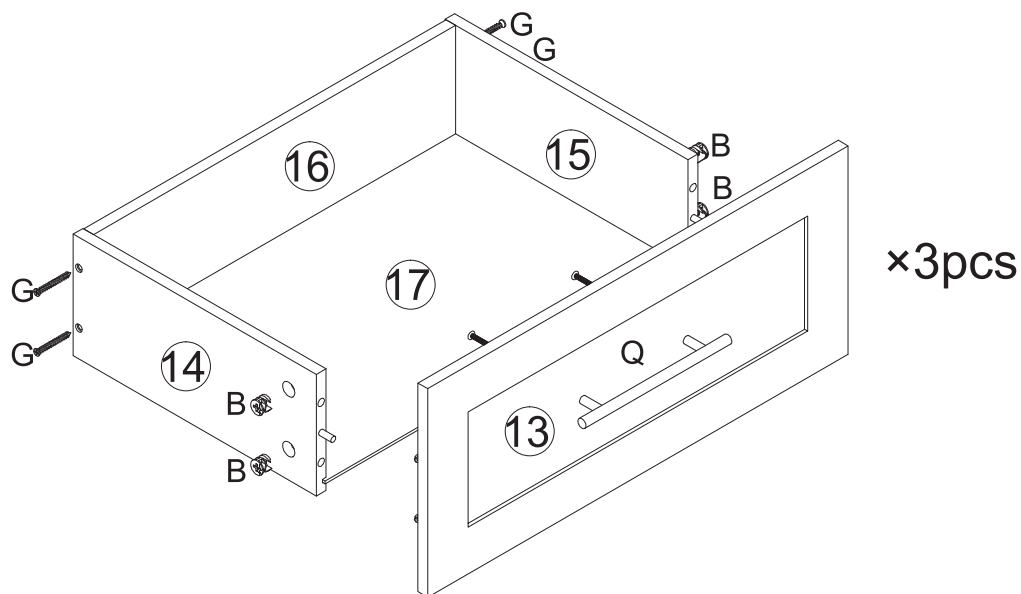

16

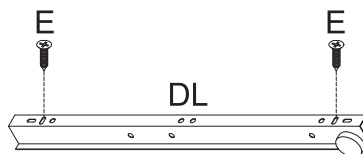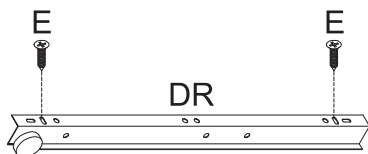

E	M3*12
	12PCS
DL	3PCS
DR	3PCS

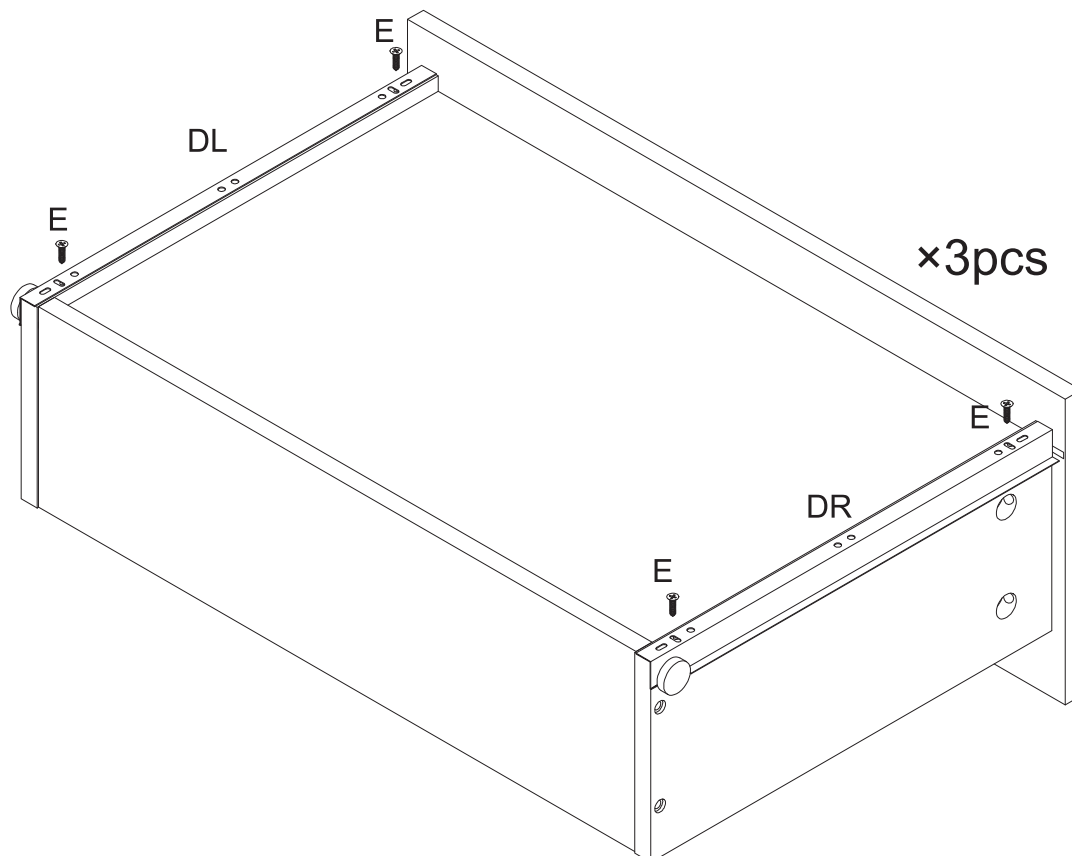


17

H



Ø20



54PCS

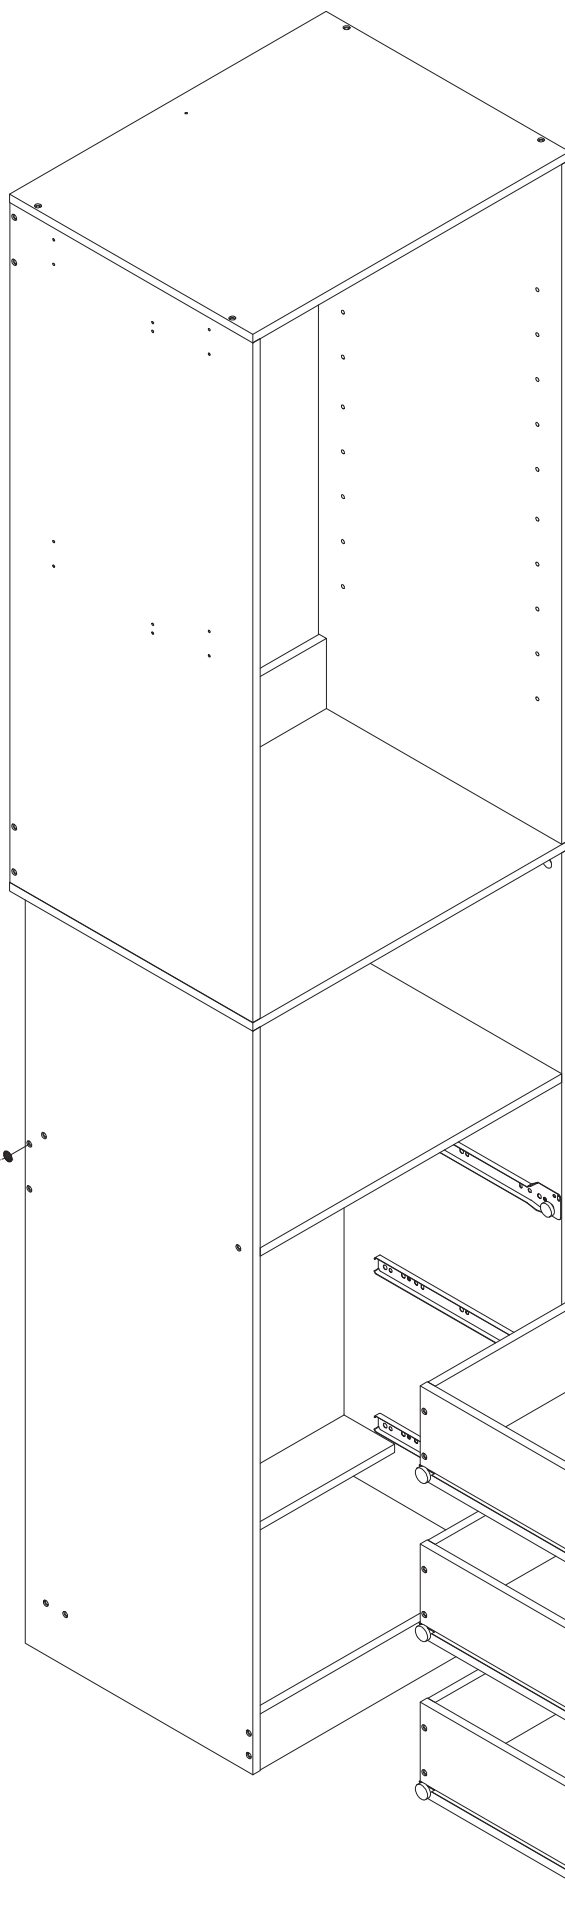

Insert the drawers obliquely

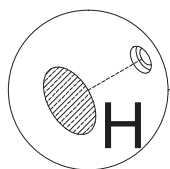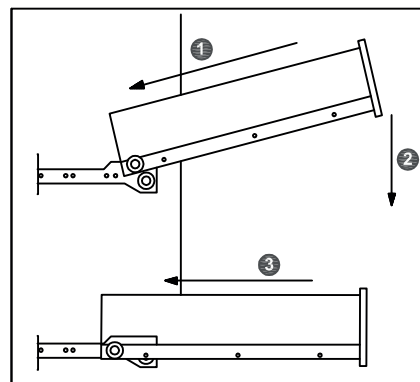


Adding O stickers to all the cam bolts makes it look perfect.


18





8PCS

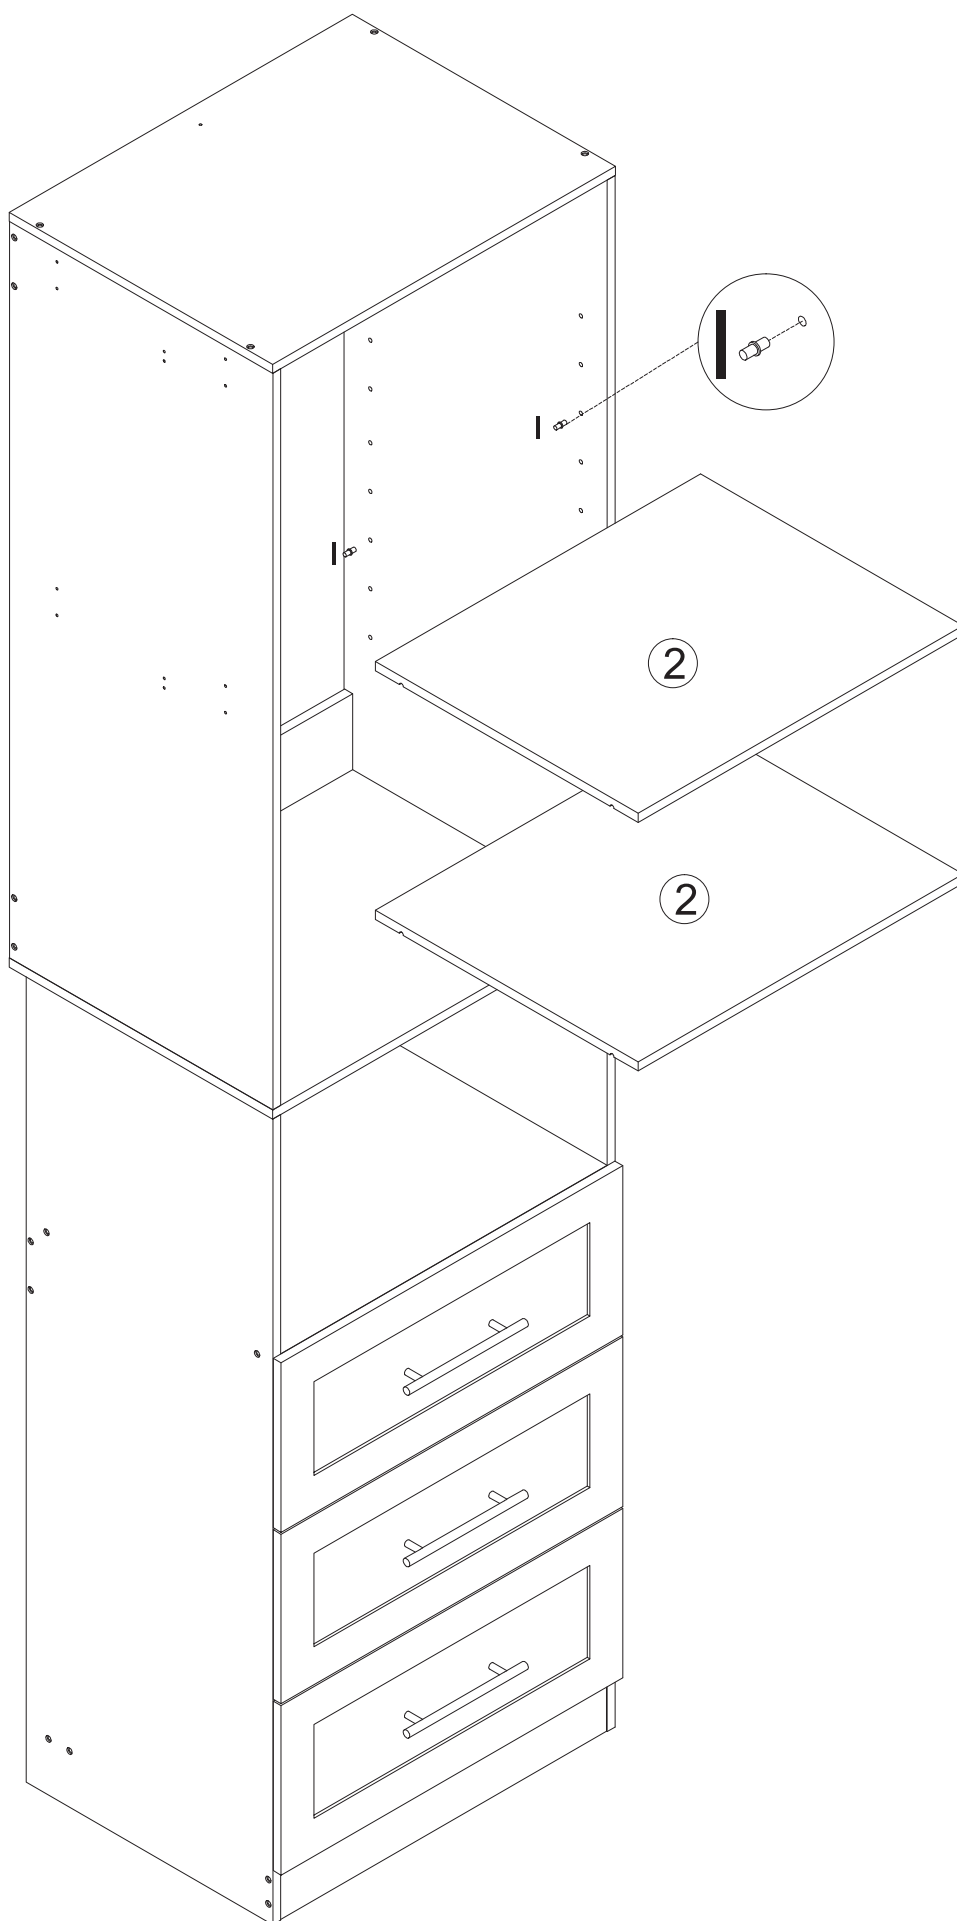


19

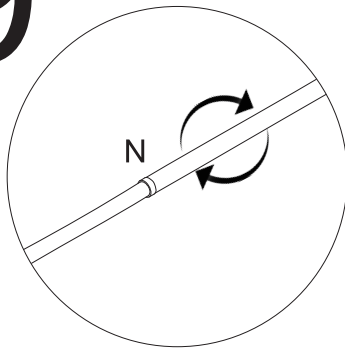

Rotate the rod clockwise to secure it, and rotate it counterclockwise to loosen it.

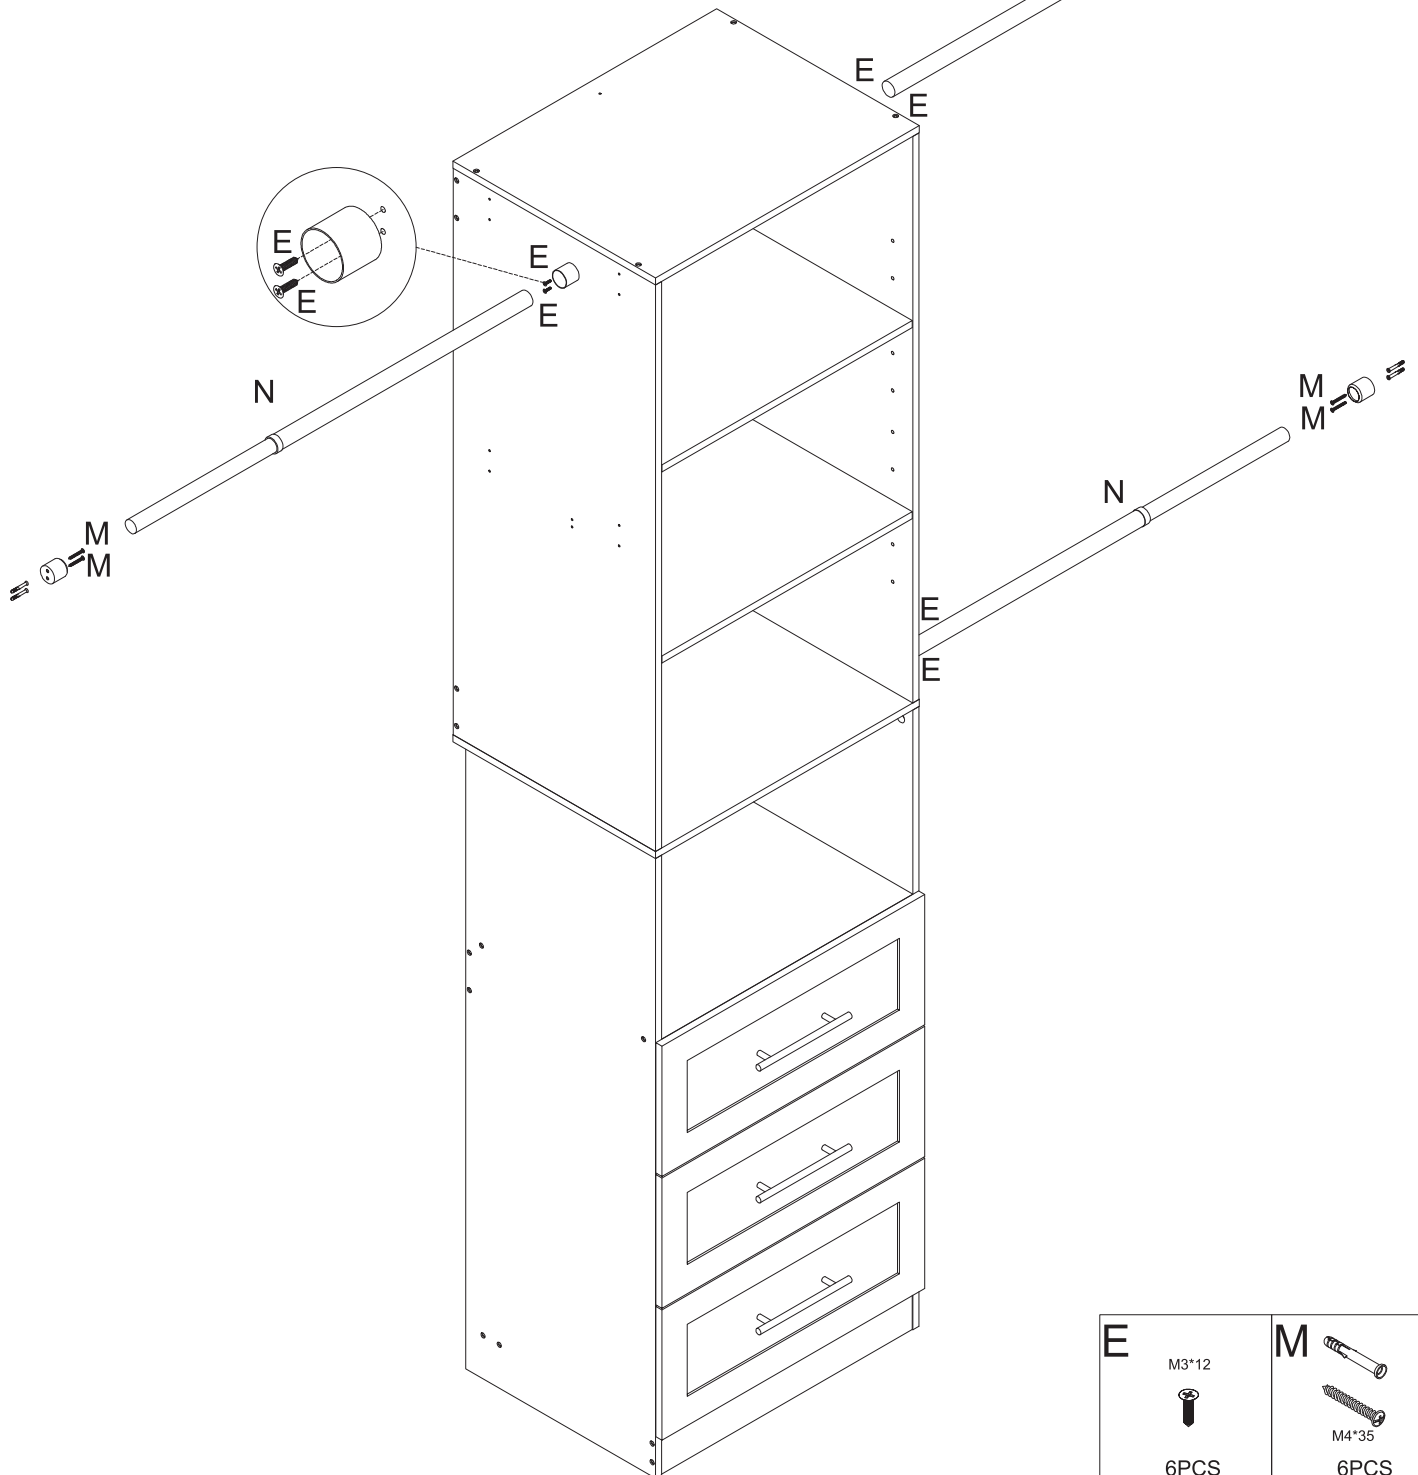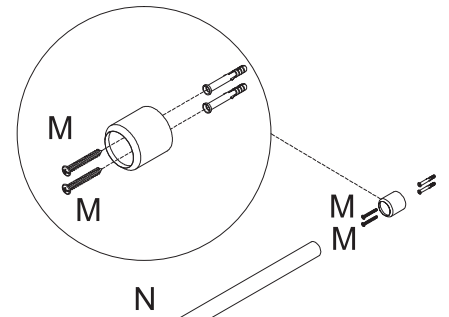


IMPORTANT: When using the adjustable closet rod, do not extend it to its maximum length. Always keep an overlap of at least 2.5 - 3.9 inches; otherwise, its load-bearing capacity will be reduced.

E  M3*12 6PCS	M   M4*35 6PCS
N  3PCS	


20

Before installing No.18 board, please measure the width of the closet space. This will help you cut the panel to the right size for a perfect fit.

R	M3.5*12  24PCS
O1	 6PCS
O3	M3.5*12  24PCS
P	 12PCS

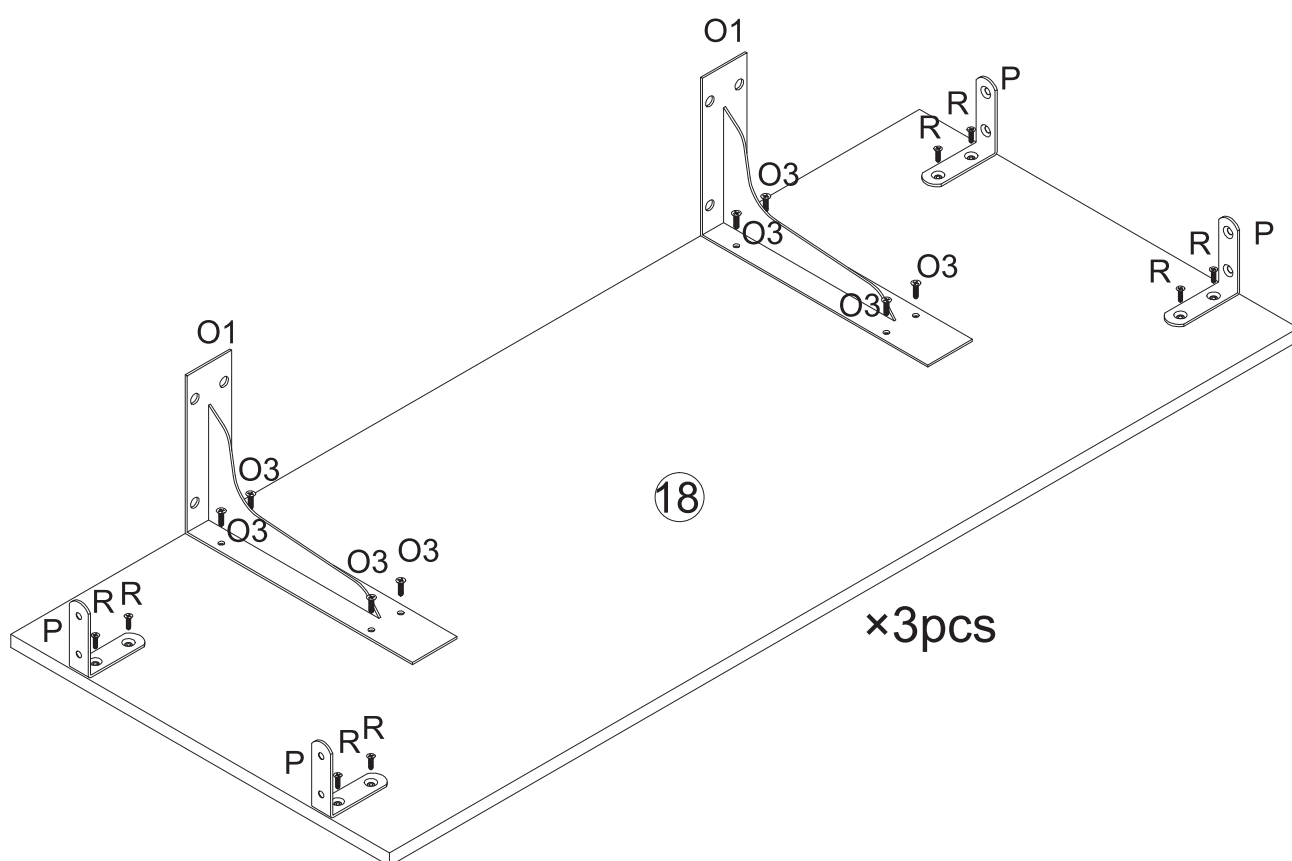

21

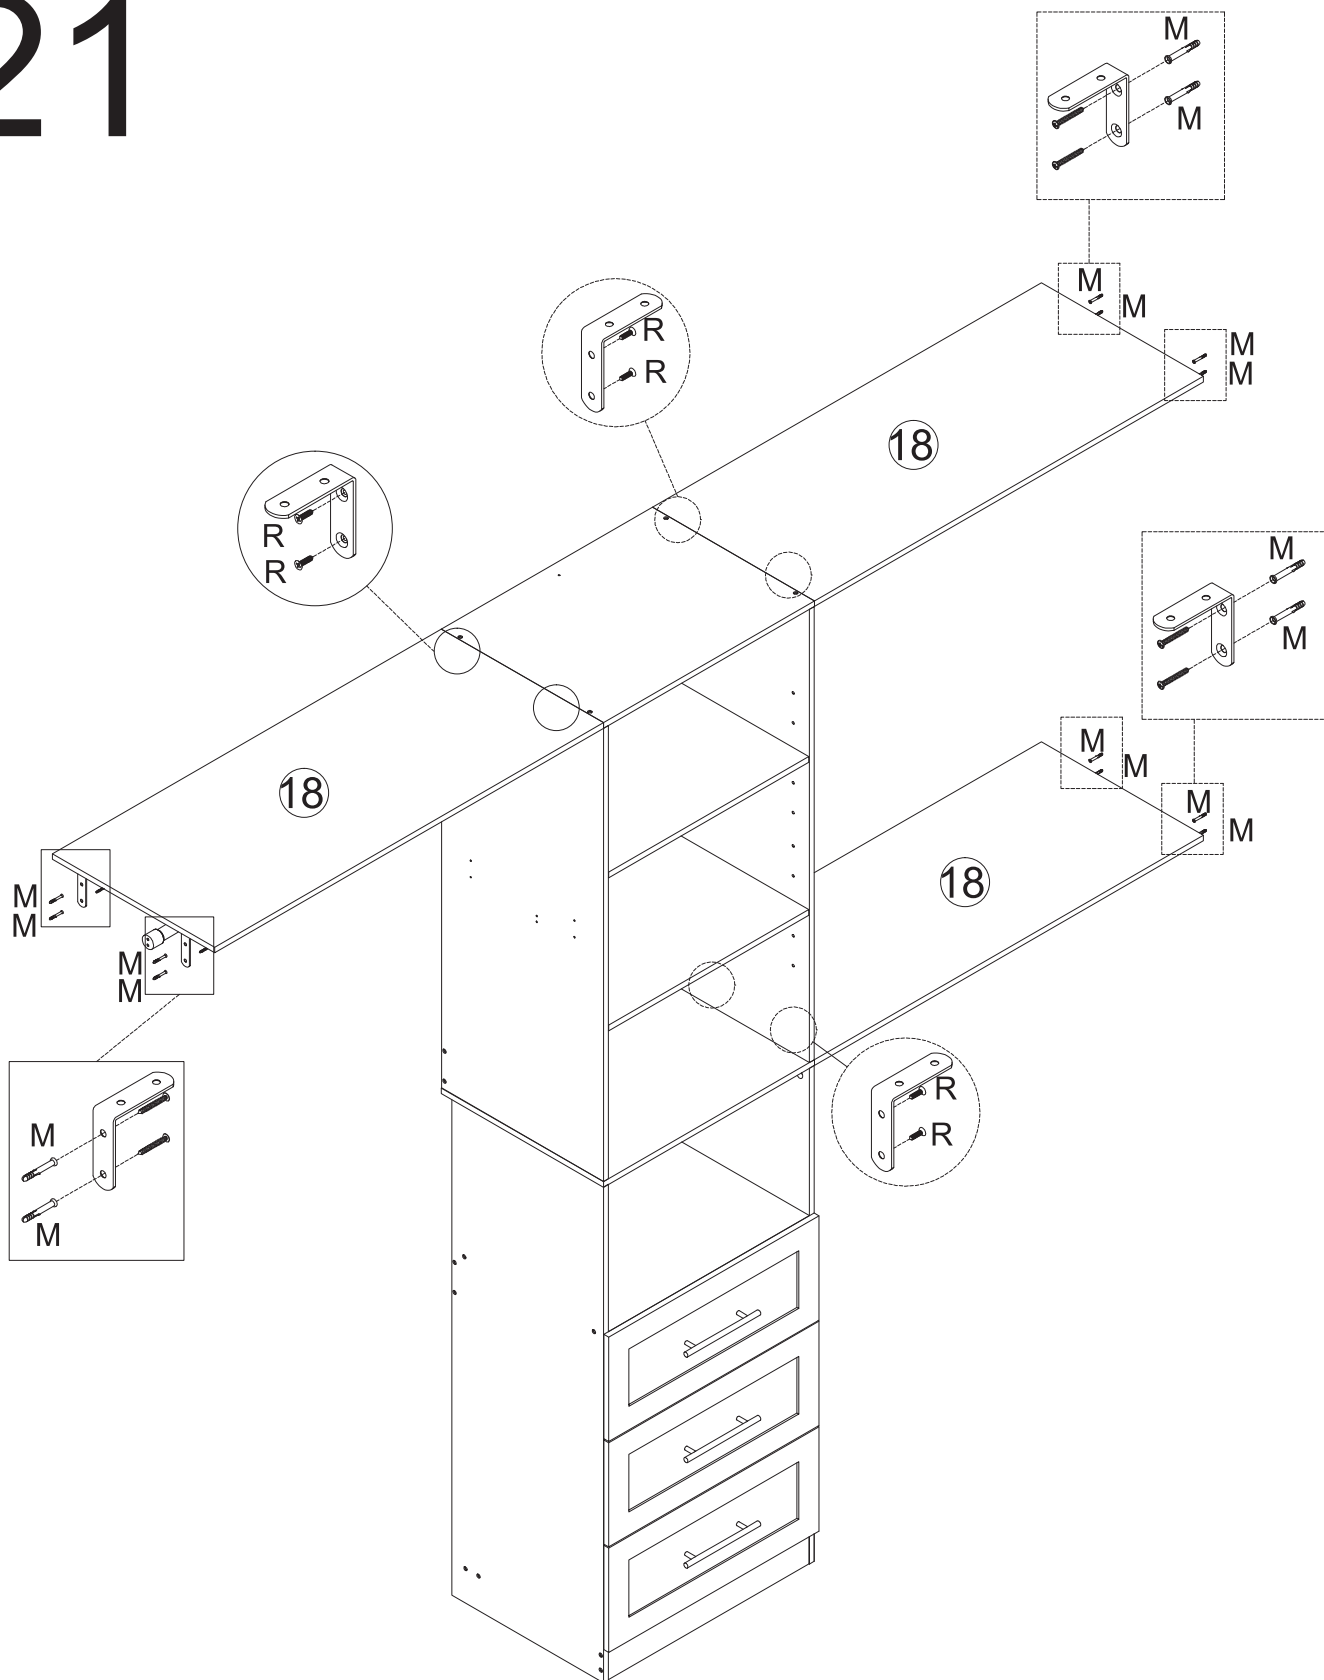



R	M3.5*12
	
12PCS	
M	
	M4*35
12PCS	

22


O2




24PCS

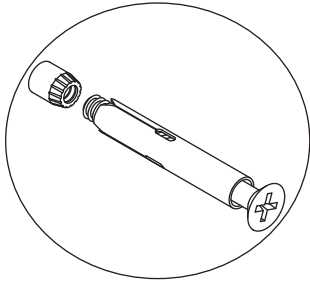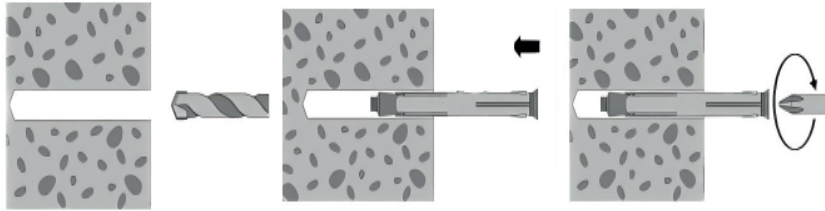


Before installation, please ensure that the O2 is tightened in this direction.

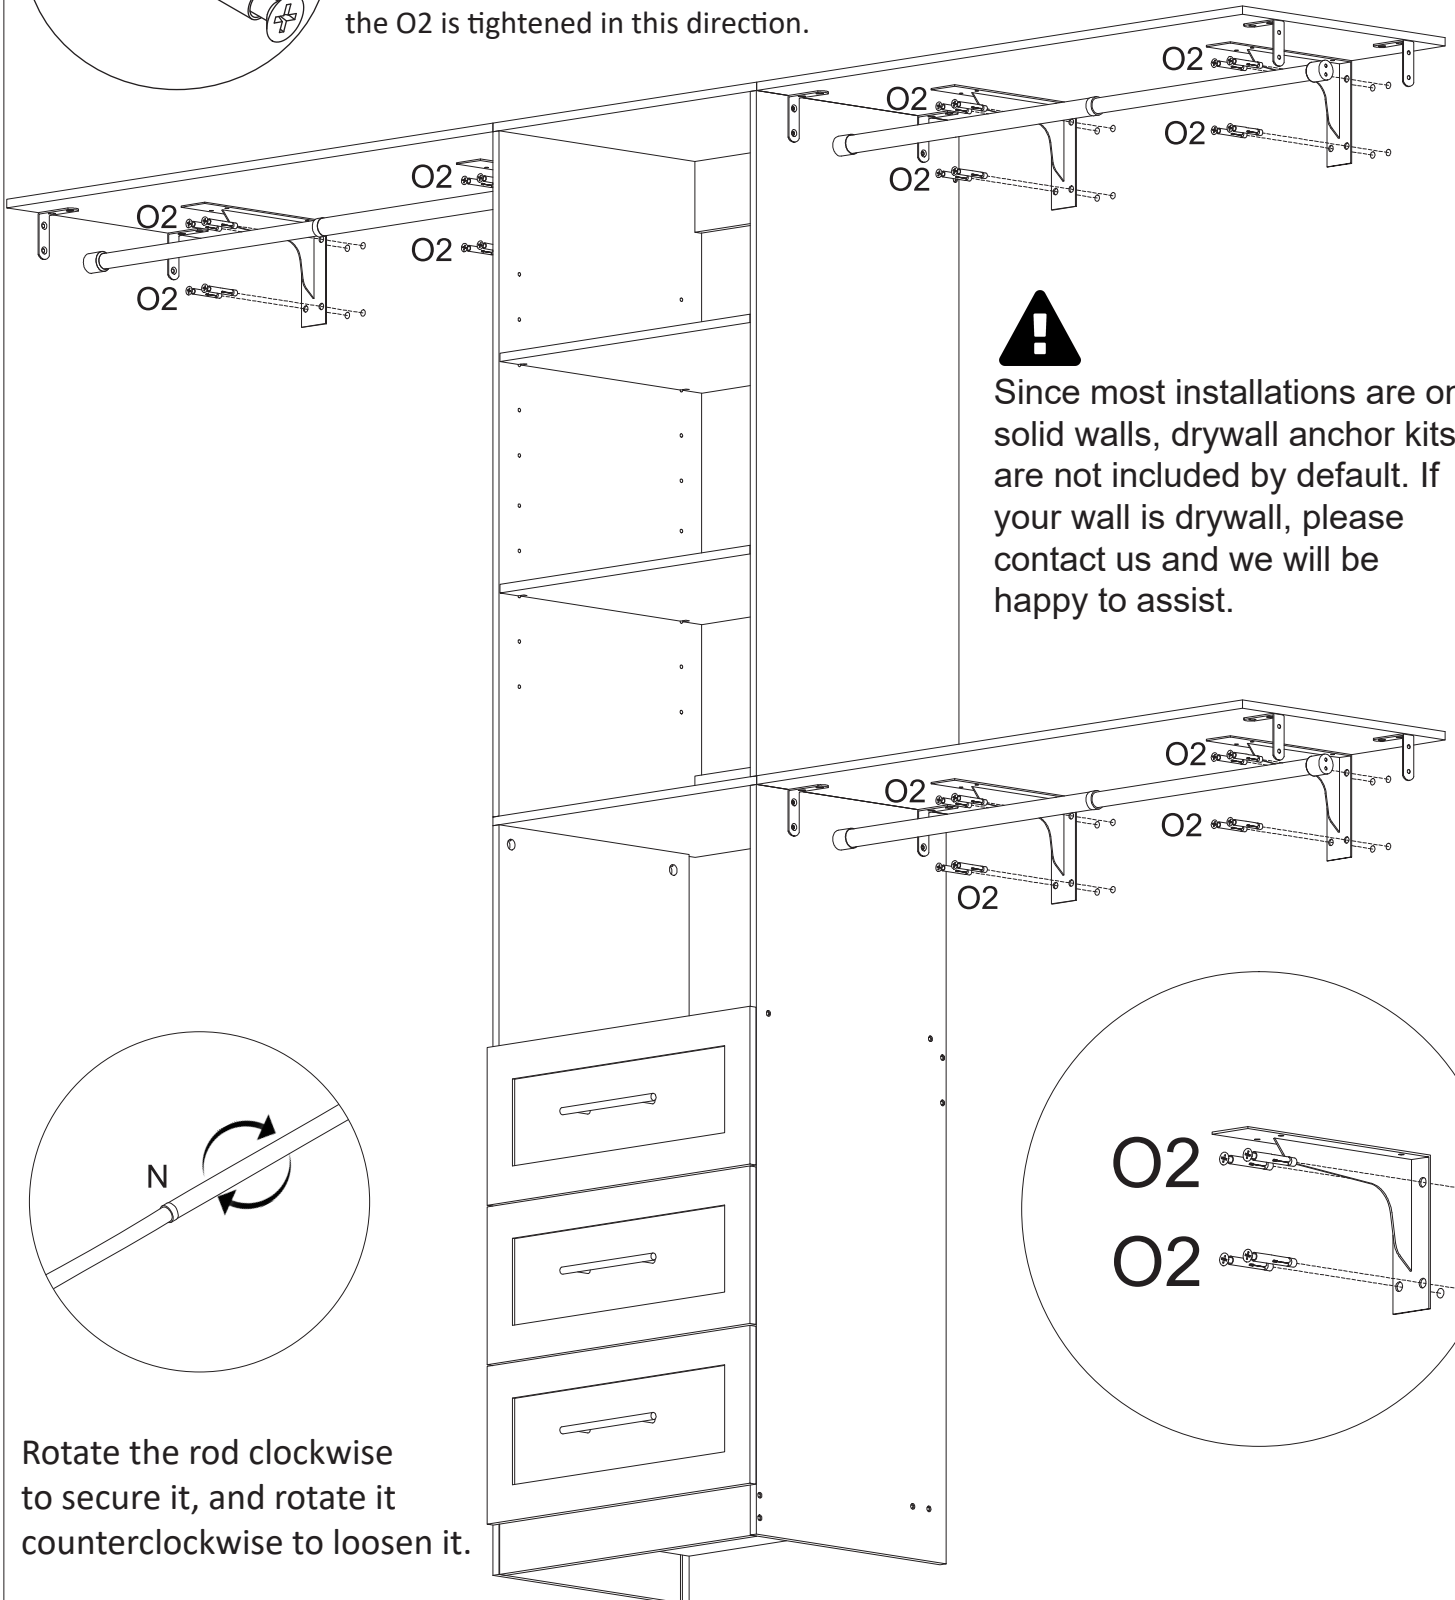

Since most installations are on solid walls, drywall anchor kits are not included by default. If your wall is drywall, please contact us and we will be happy to assist.

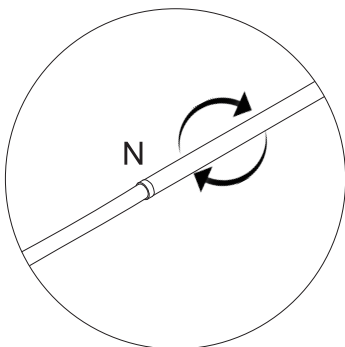

Rotate the rod clockwise to secure it, and rotate it counterclockwise to loosen it.

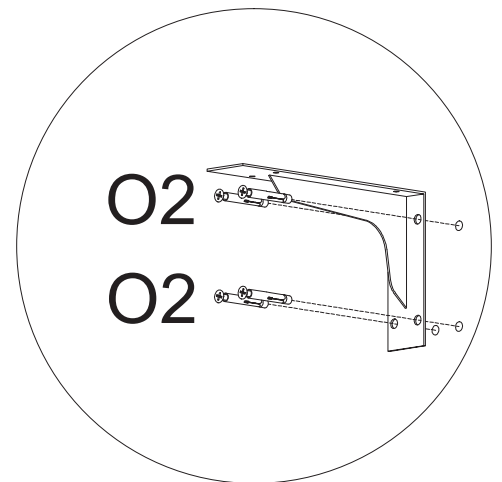

23



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

