SDQ Lighting

ASSEMBLY AND INSTALLATION INSTRUCTIONS


Item No: PD37618BG&PD37624BG

WARNING:TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.


NOTES:

1. Before installing,consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.
3. Always switch off the electricity supply and allow to cool for 10 minutes before changing the light bulbs.

PENDANT LAMP

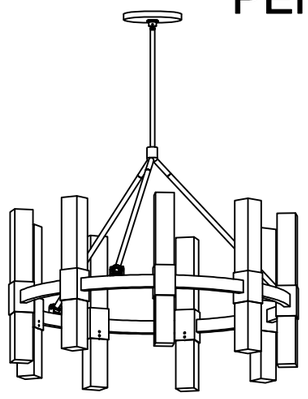

PD37618BG

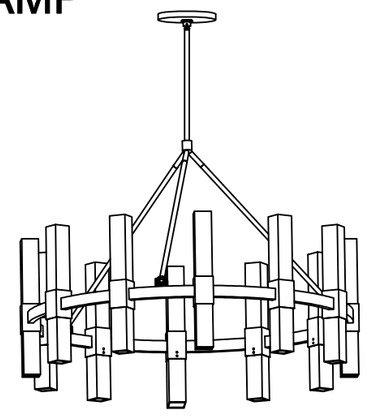

PD37624BG

TOOLS REQUIRED




Flathead Screwdriver




Phillips Screwdriver



Ladder



Wire Strippers



Pliers



Electrical Tape



Wire Cutters



Safety Glasses

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.When the lamp is not installed finish,please don't throw away the package,so as not to leave the parts in the package.


PART LIST AND HARDWARE LIST


PIECE	DESCRIPTION
A	Mounting bracket
B	Green ground screw
C	Outlet box screw
D	Wire Nut
E	Canopy
F	Swivel joint
G	Loop Ring
H	6" tube
I	12" tube
J	Trident

PIECE	DESCRIPTION
K	Tube
L	Fixtuer body
M	Long crystal
N	Short crystal
O	Set screw
P	Steel cable buckle
Q	Steel cable buckle
R	Wrench
S	Countersunk screw

INSTALLATION

1. Pass wire through the tube(K),trident frame(J) 12" tube (I),6"tube(H),loop ring(G),Swivel joint (F), canopy(E),mounting bracket(A).
2. Attach the tube(K) to the Flxture bdoy(L) with countersunk screw(S)by using the phillips screwdriver.Attach the tube (K) to Trident(J) , and lock the 6" tube (H) and 12"tube (I) in turn. Attach the swivel joint (F) to 6" tube(H).Wrap thesteel wirerope around the beam and lock it with the steel cable buckle(P) and (Q).
3. Attach the supply circuit ground wire (green or bare copper wire) to the the fixture ground wire, black to (black) and white to (white).
4. Attach the canopy (E) to mounting bracket (A) with loop ring(G).
5. Attach the mounting bracket (A) to the junction box with outlet box screw (C).
6. Install the 40W MAX T8 Bulbs (not included) into socket.
7. Fix the short crystal(N) to the fixture body(L) with set screw(O) by using the wrench (R)
8. Insert the long crystal (M) into the lamp body (L).

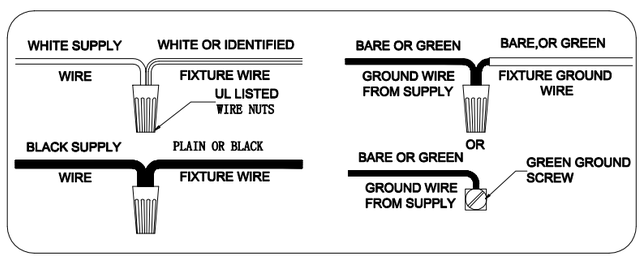

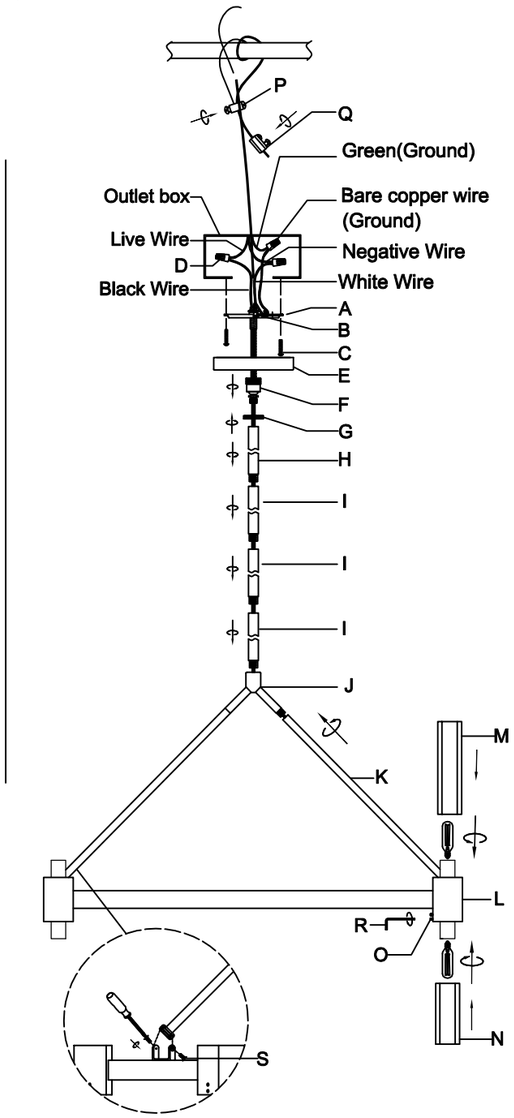

Thank you for purchasing a SDQ lighting product !
Need assistance with parts or assembly? Please call customer service at: 972-880-7868
Or visit us on-line at:WWW.SDQLIGHTING.COM or E-mail to:cs@sunwisehome.net