
8 DRAWER DRESSER RECALL INSTRUCTIONS & ASSEMBLY GUIDE


Purpose: This retrofit kit is provided to reduce the risk of tip-over. Please follow these instructions carefully to install the counterweight blocks.

Parts List (included in kit):

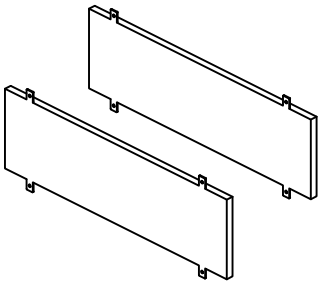


- 2 x Counterweight blocks (approx. 27 lbs each)

- 8 x Screws (fasteners)

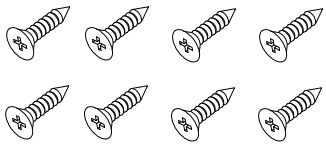

- 1 x 2-in-1 screwdriver (Phillips/flathead)

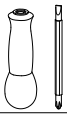


Additional Notes
Installation requires only basic household tools (screwdriver).

Estimated installation time: approximately 10-15 minutes.

If you have any questions during installation, please contact us

STEP 1

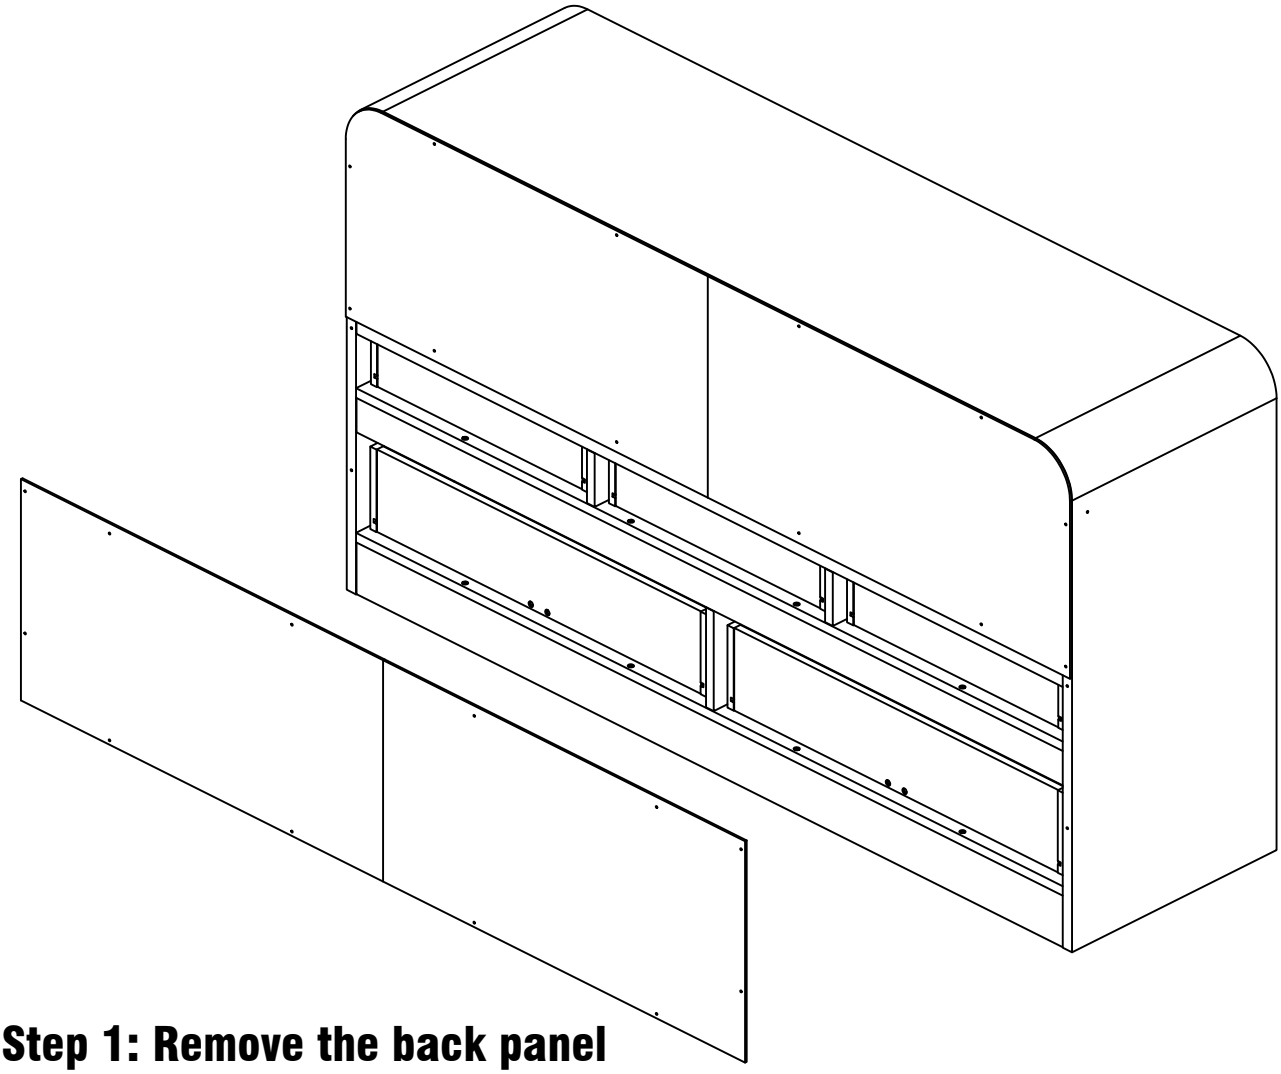


Step 1: Remove the back panel

Remove the screws securing the back panel and carefully detach the panel from the dresser.

Keep these screws — you will need them to reattach the back panel in Step 4.

STEP 2


Note: Each weight block weighs approximately 27 lbs. Use a second person to help with lifting and positioning.

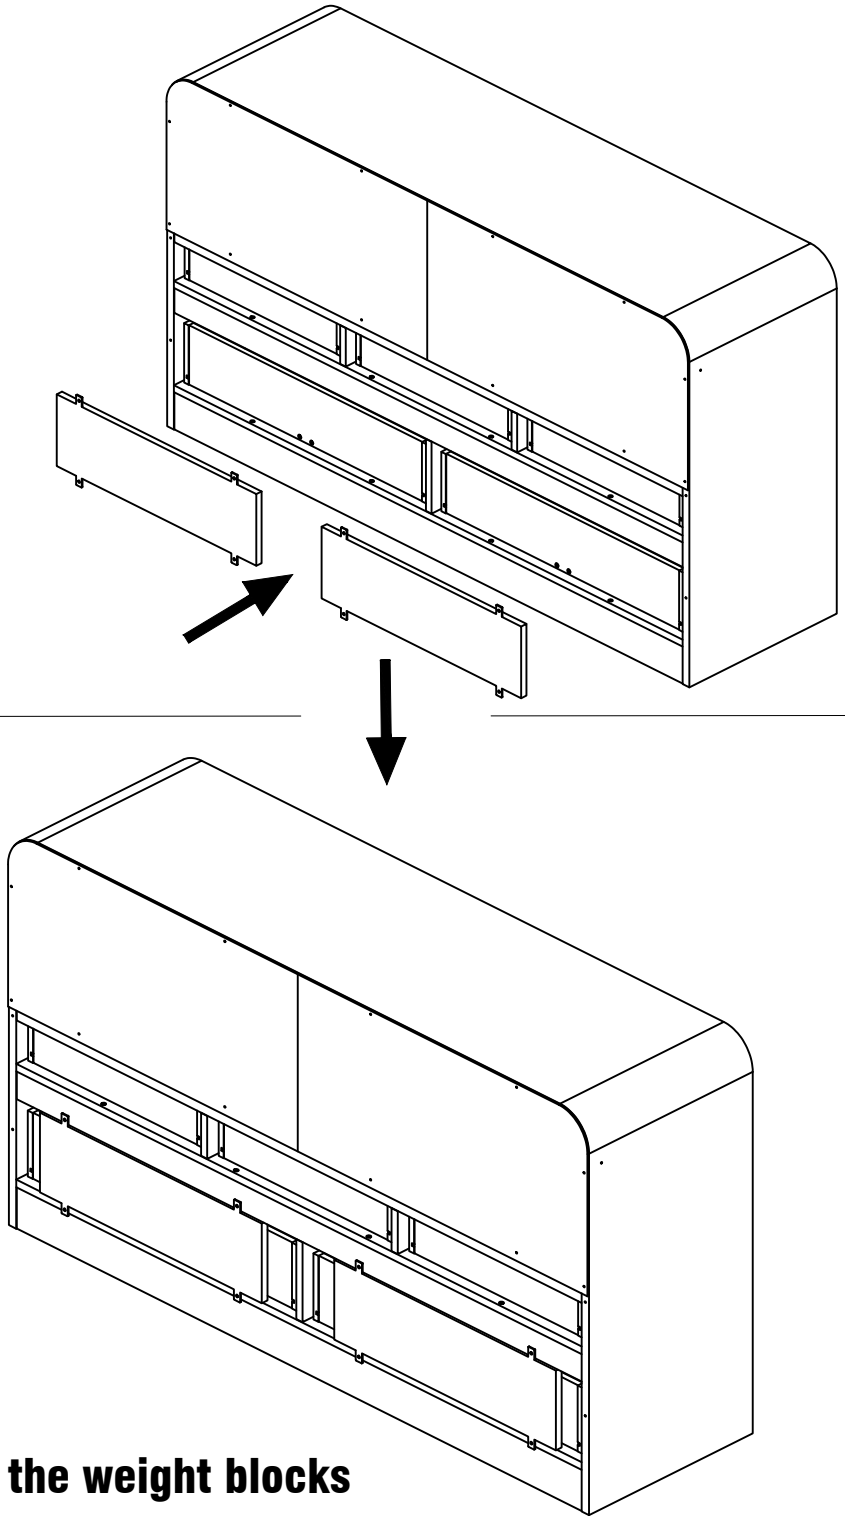

Step 2: Place the weight blocks

Place the two weight blocks into position at the bottom of the cabinet as shown in the illustration.


STEP 3

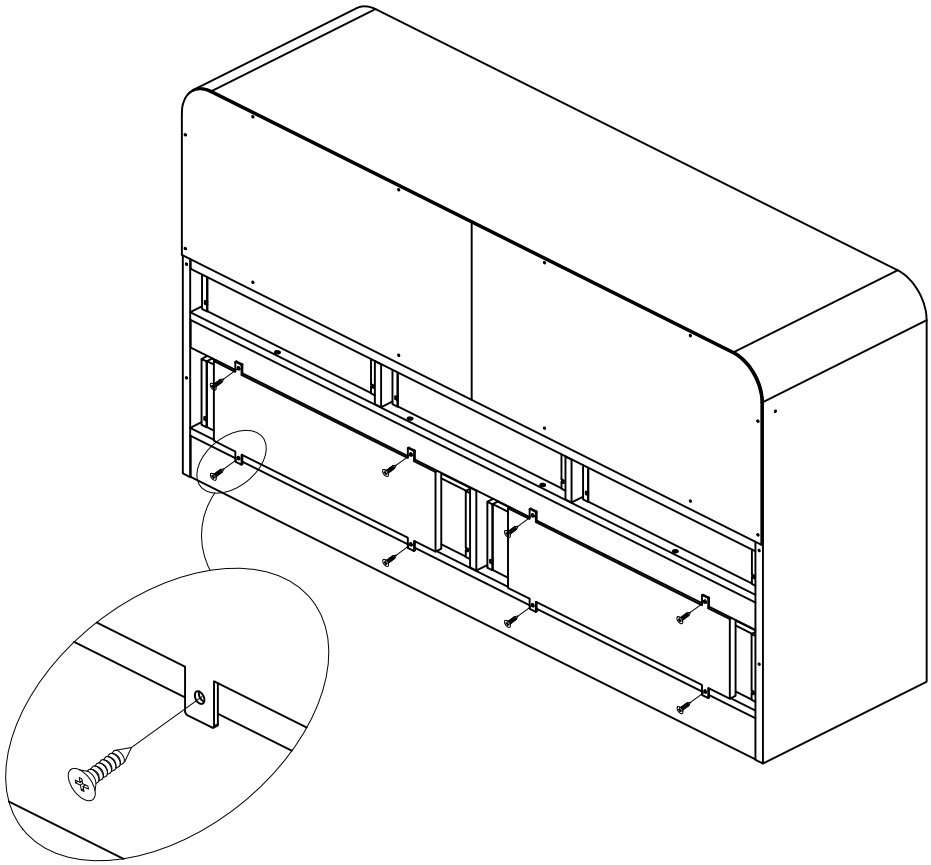

Step 3: Secure the weight blocks

Secure each weight block to the position shown using the screws provided. Tighten firmly.

STEP 4

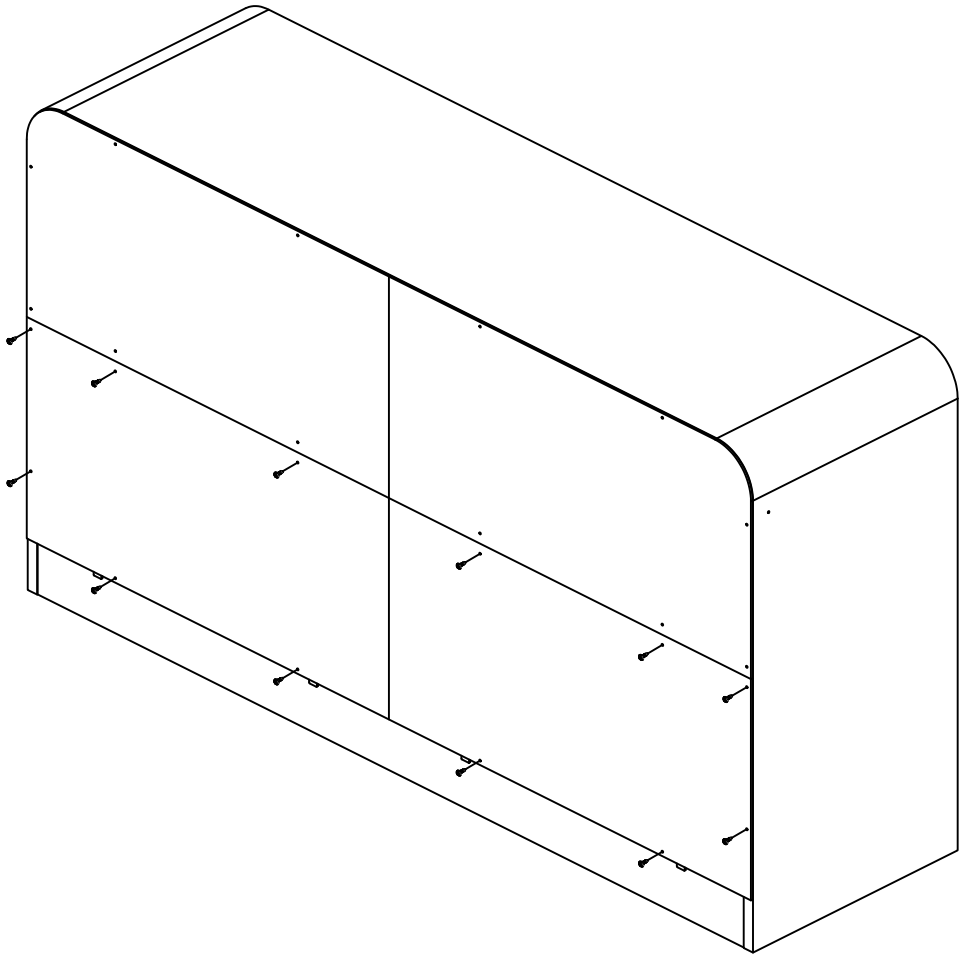

Step 4: Reattach the back panel

Once both weight blocks are securely installed, reattach the back panel and tighten all screws.

Important Warning

WARNING: Both weight blocks must be installed to ensure safety. Failure to install both blocks may result in the dresser remaining unstable and posing a tip-over hazard.