



# ASSEMBLY INSTRUCTION

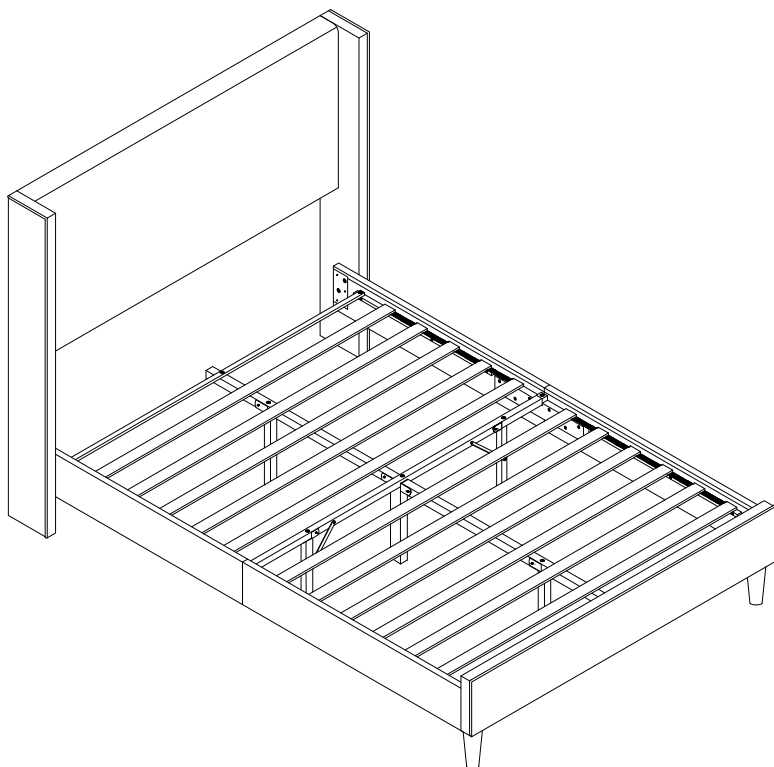


Please TEAR OFF this shrink film from side!  
DO NOT USE CUTTER!

## IMPORTANT NOTE


1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

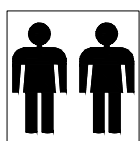


Minimum two  
person assembly

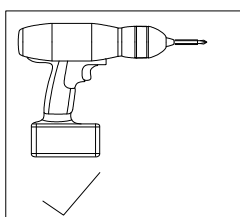


# PART LIST

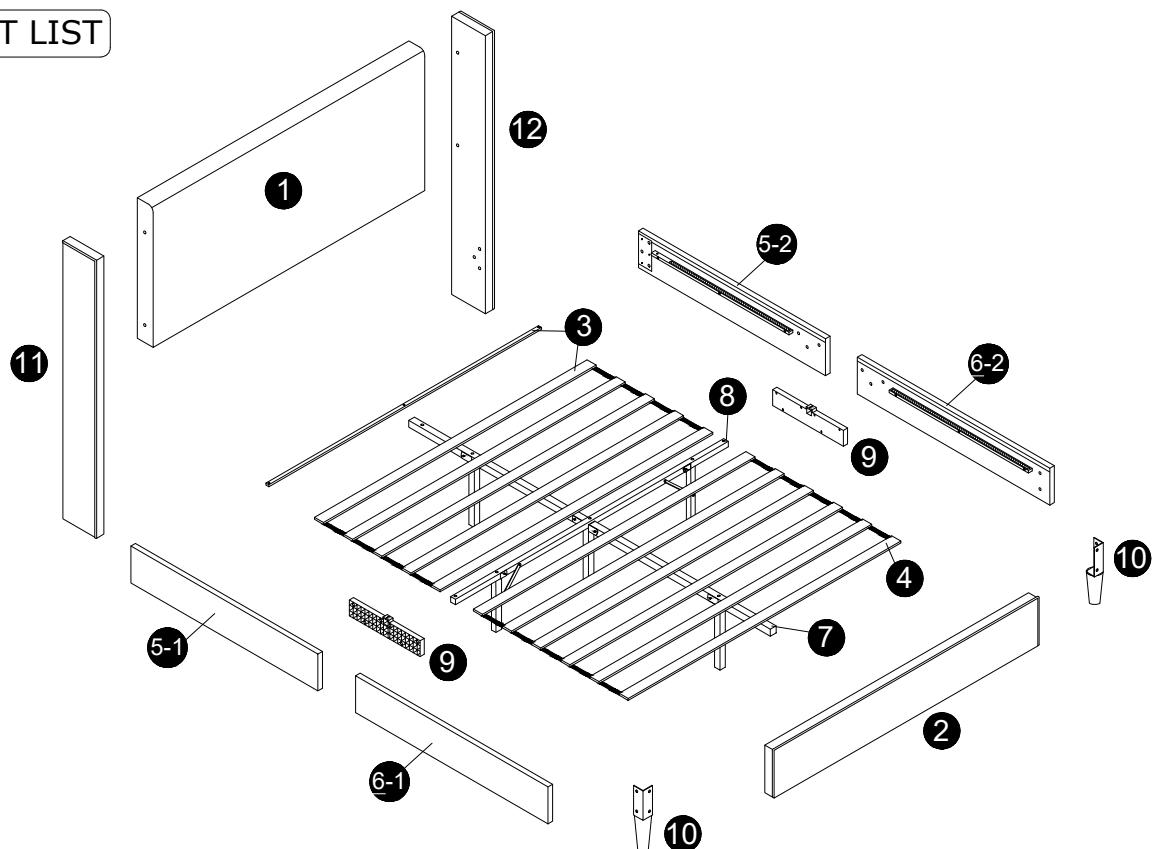


1 x 1pc

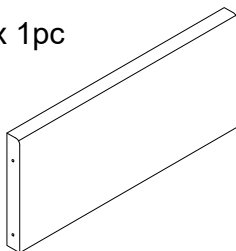


2 x 1pc

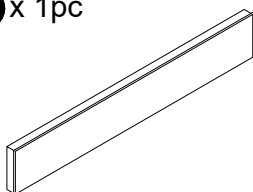


3 x 1pc

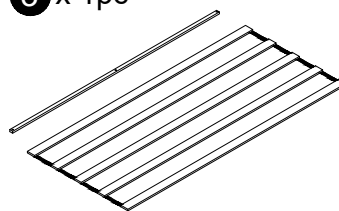


4 x 1pc

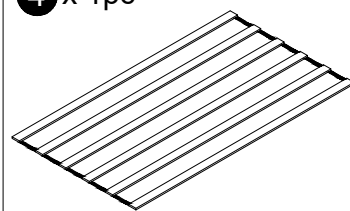


5-1 x 1pc

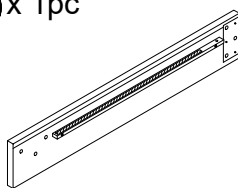


5-2 x 1pc

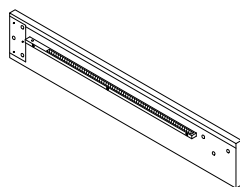


6-1 x 1pc

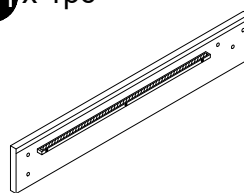


6-2 x 1pc

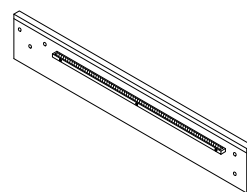


7 x 1pc

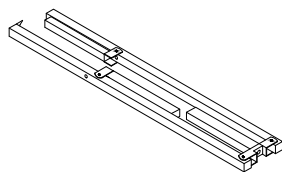

8 x 1pc

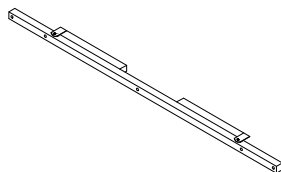

9 x 2pcs

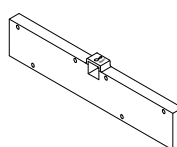

10 x 2pcs



11 x 1pc



12 x 1pc



## HARDWARE LIST



H1 M5 x 1pc



H2 M8x20mm x 9pcs



H3 M8x50mm x 2pcs



H4 M8x40mm x 29pcs



H5 M8 x 26pcs






H6 M8x17mm x 31pcs




H7 M8x22mm x 10pcs




H8 M8x60mm x 1pc

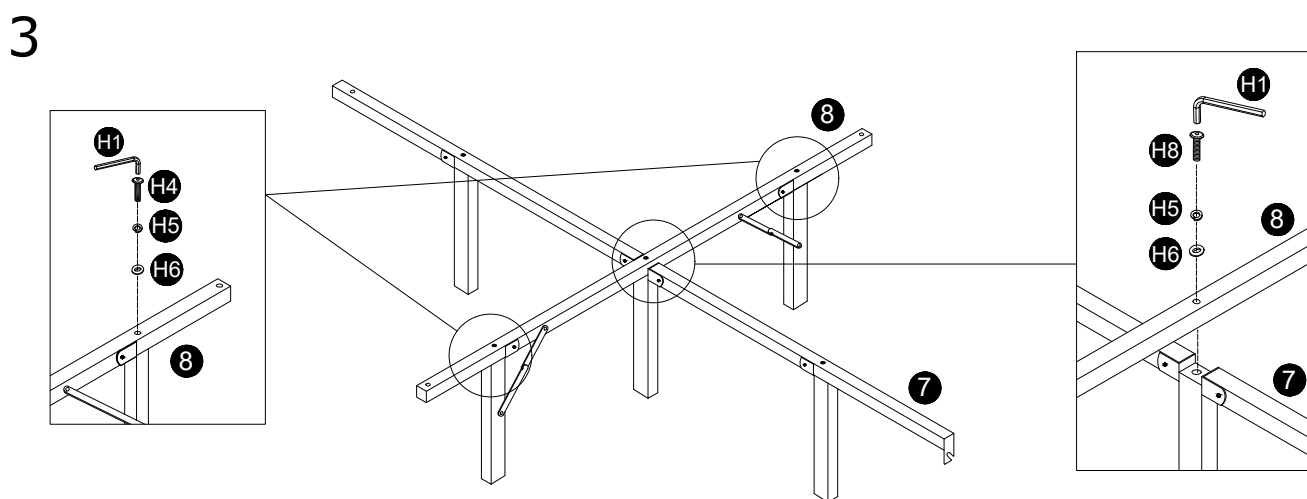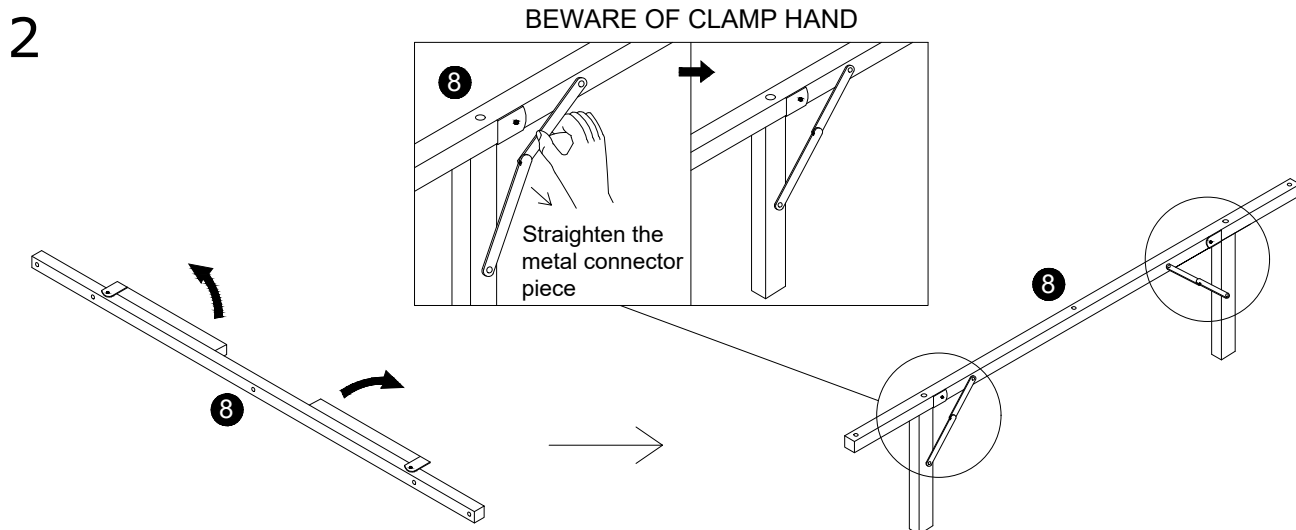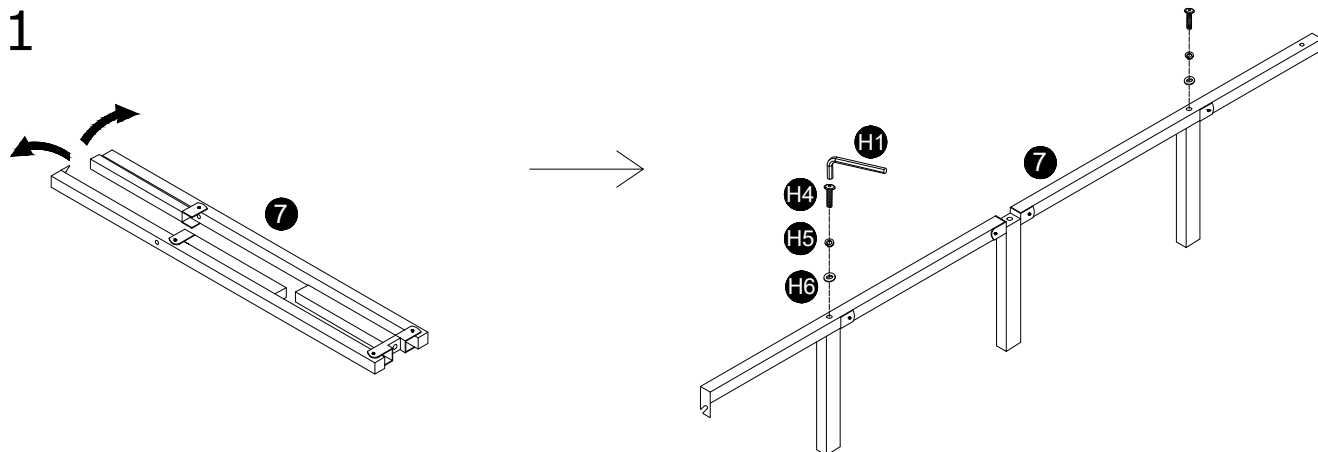




- 4** Important: Please pay attention to the installation direction of part 9.  
The arrow on top of part 9 should point towards the side rail.  
Do not install it in the wrong direction.

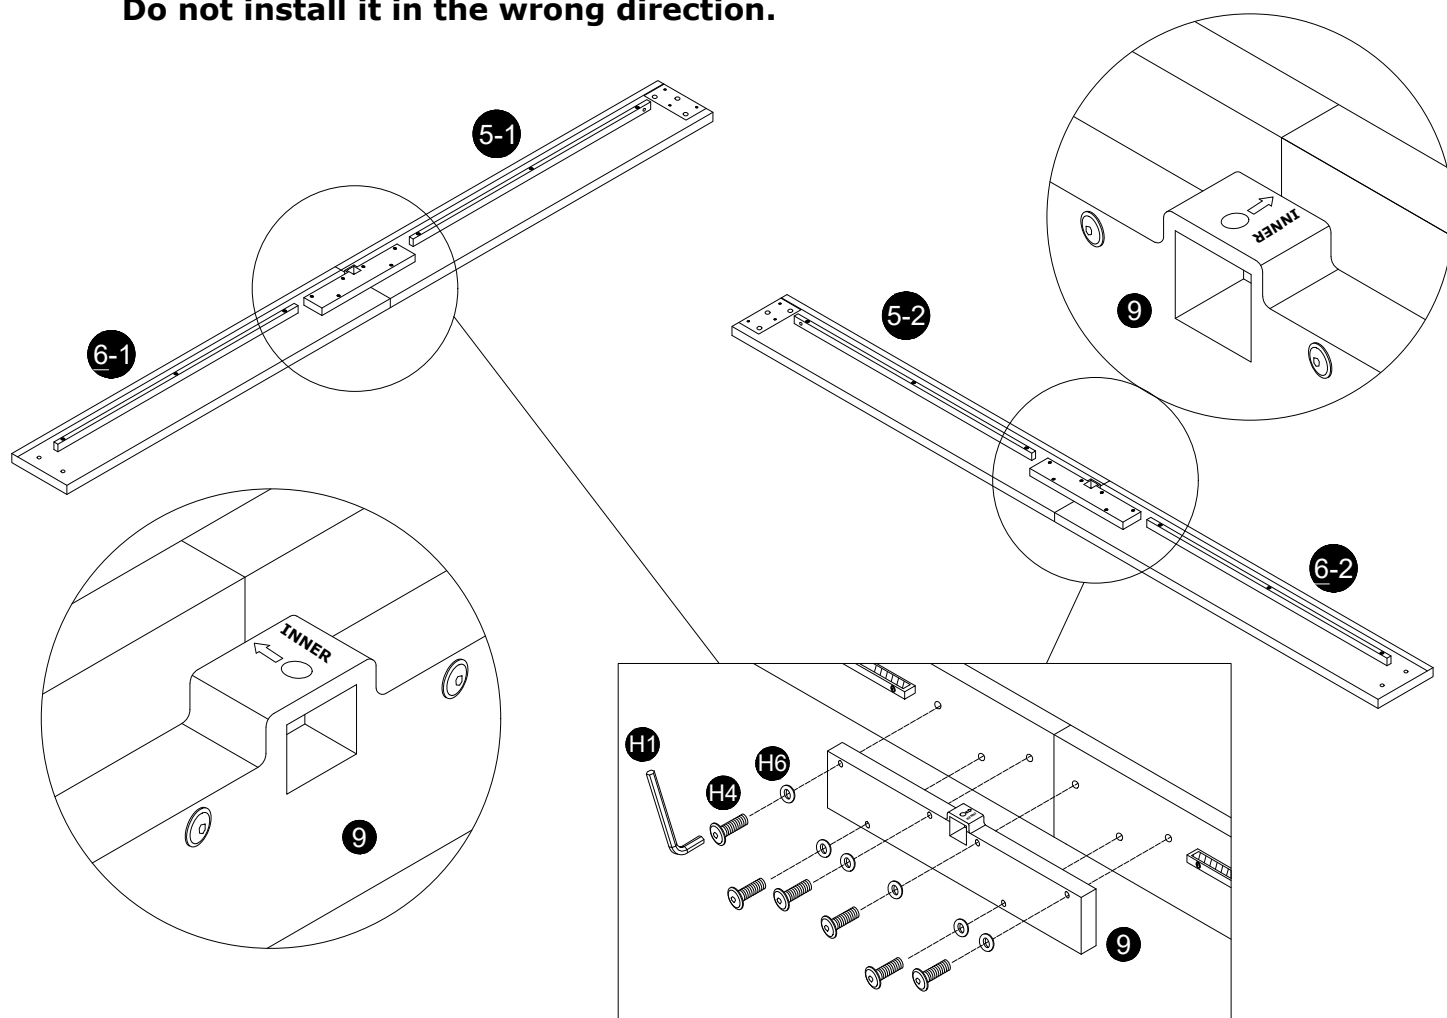

**5**





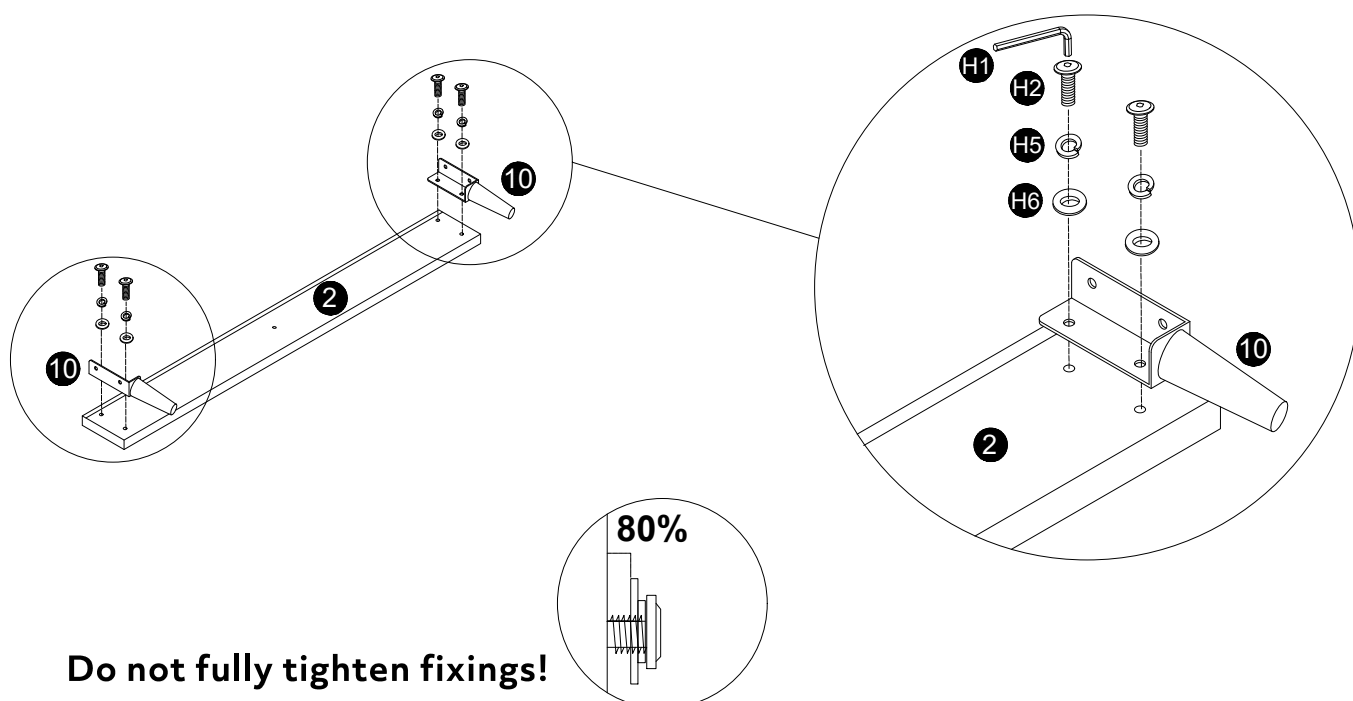


6

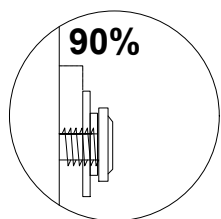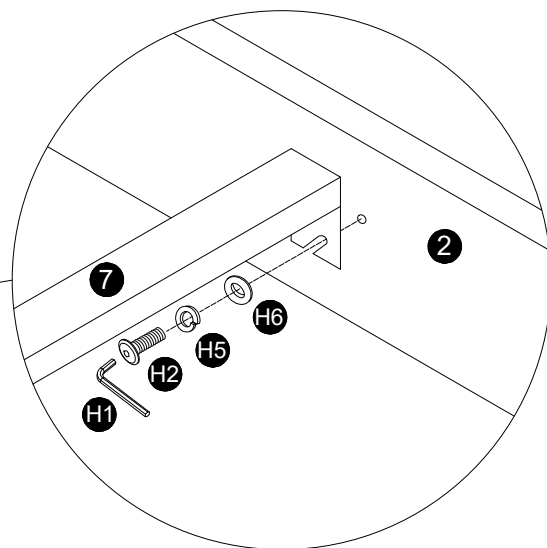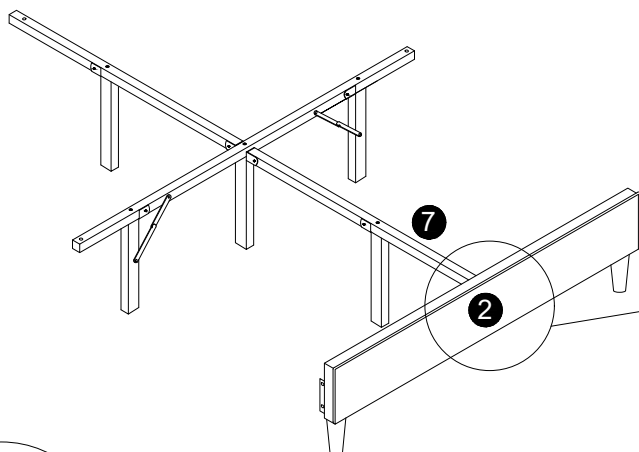


**Do not fully tighten fixings!**

7

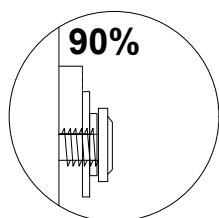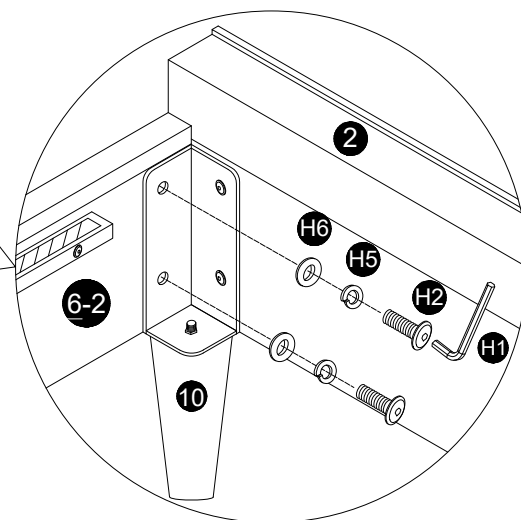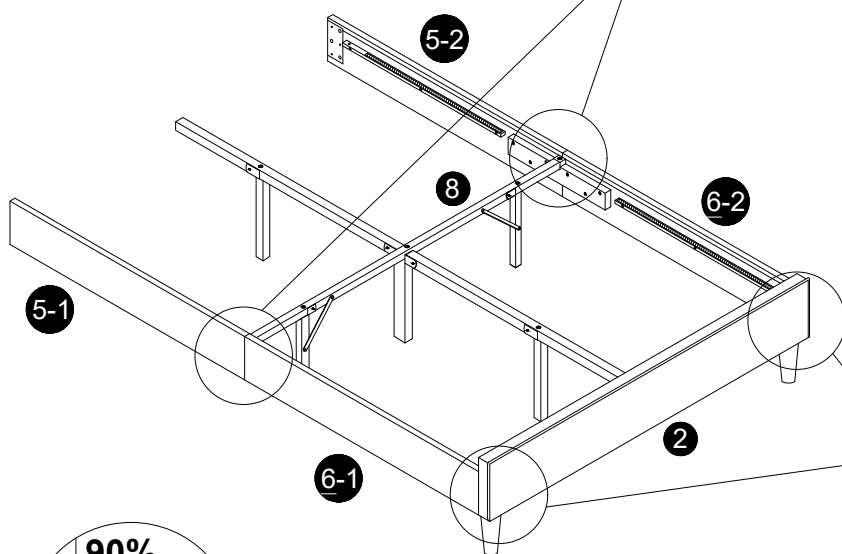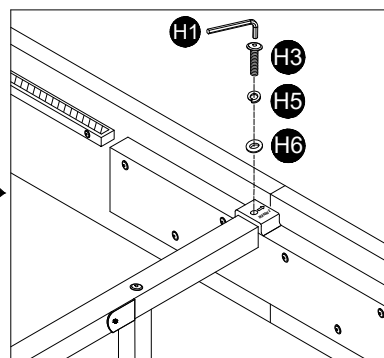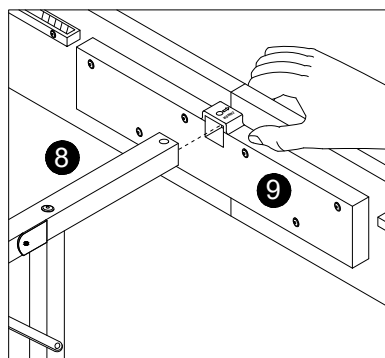


**Do not fully tighten fixings!**


8

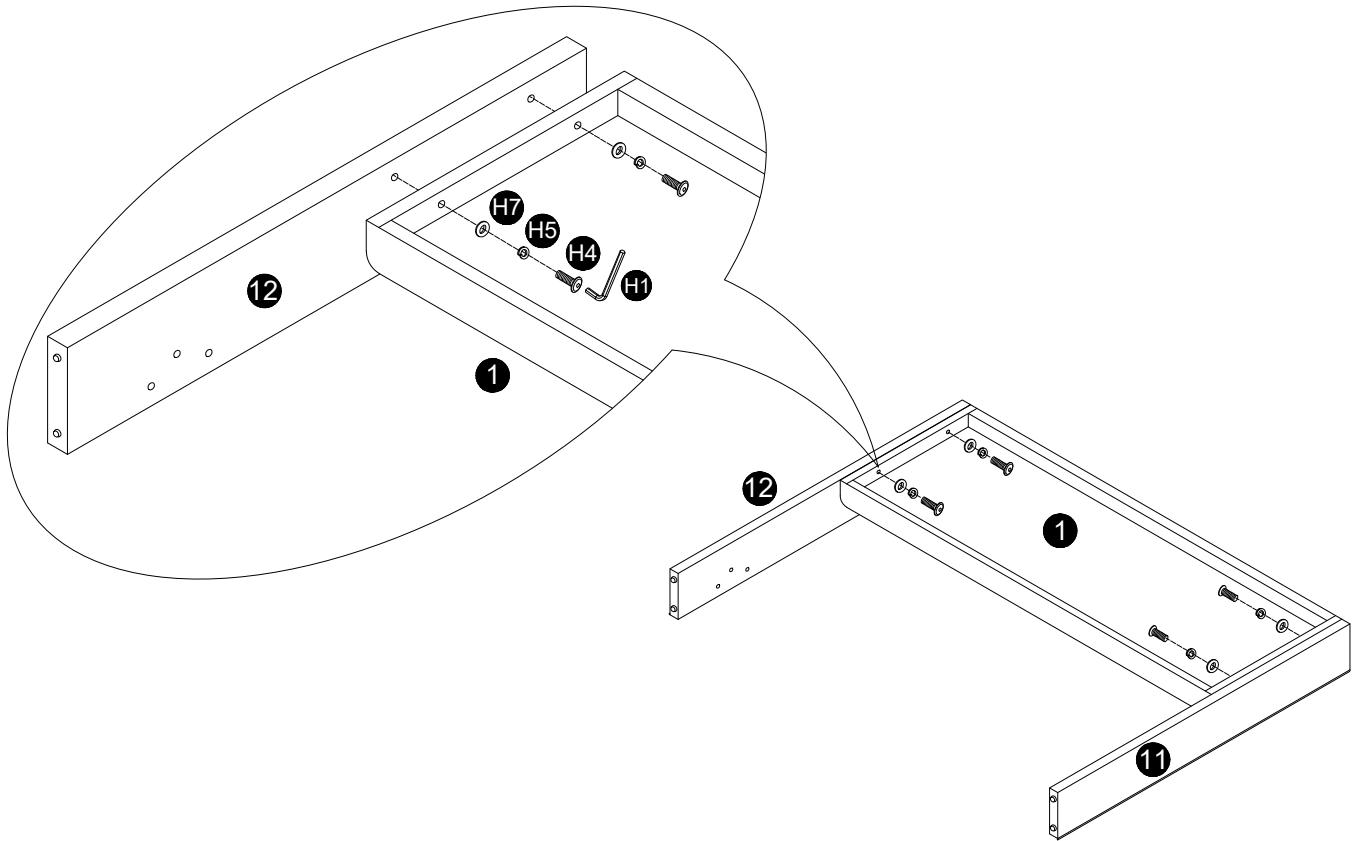


9

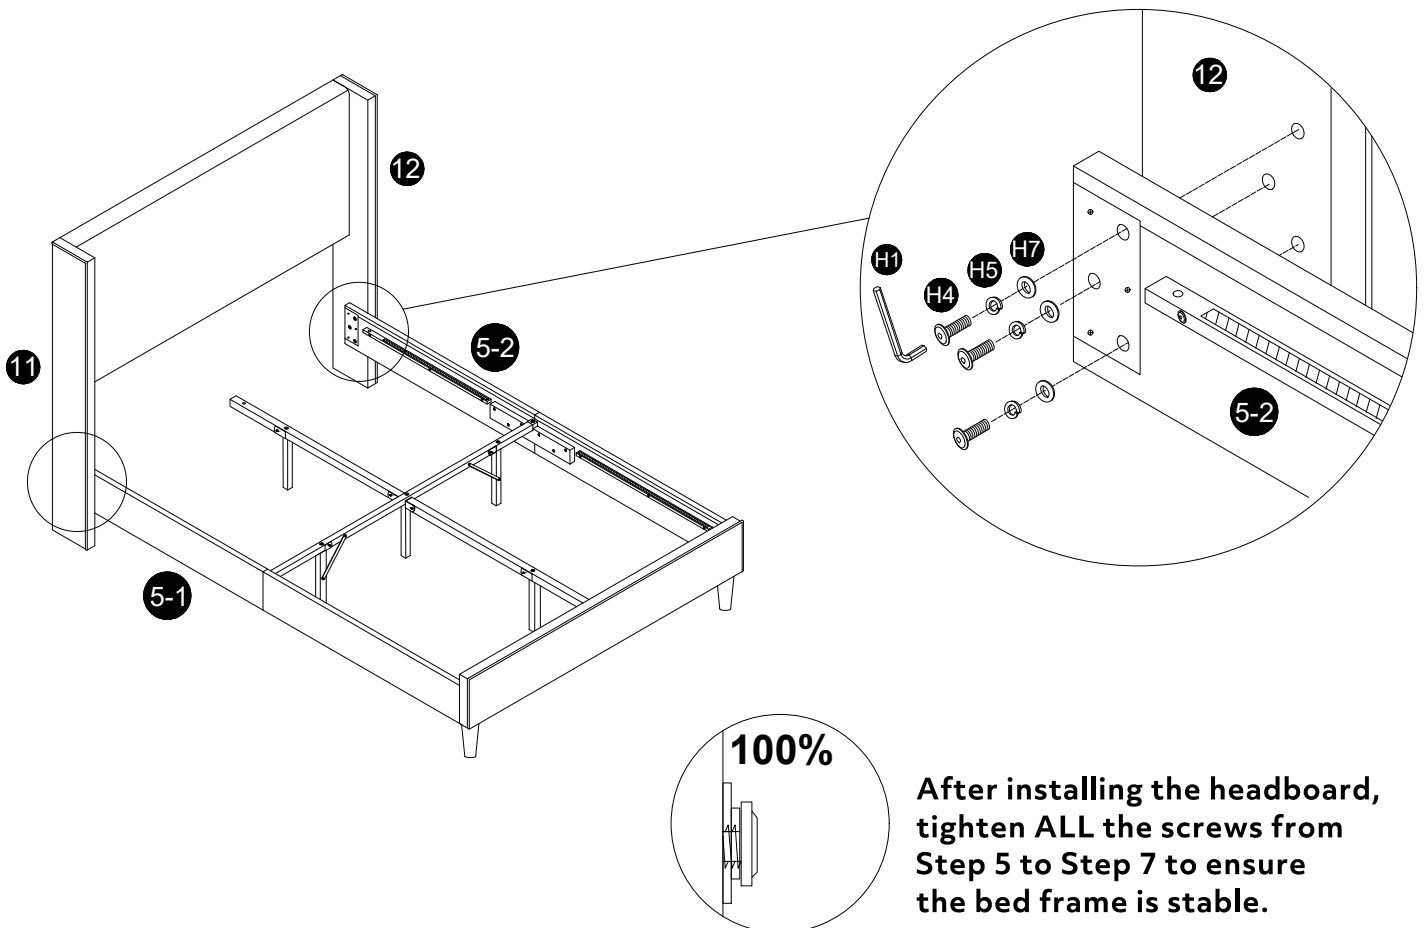

10

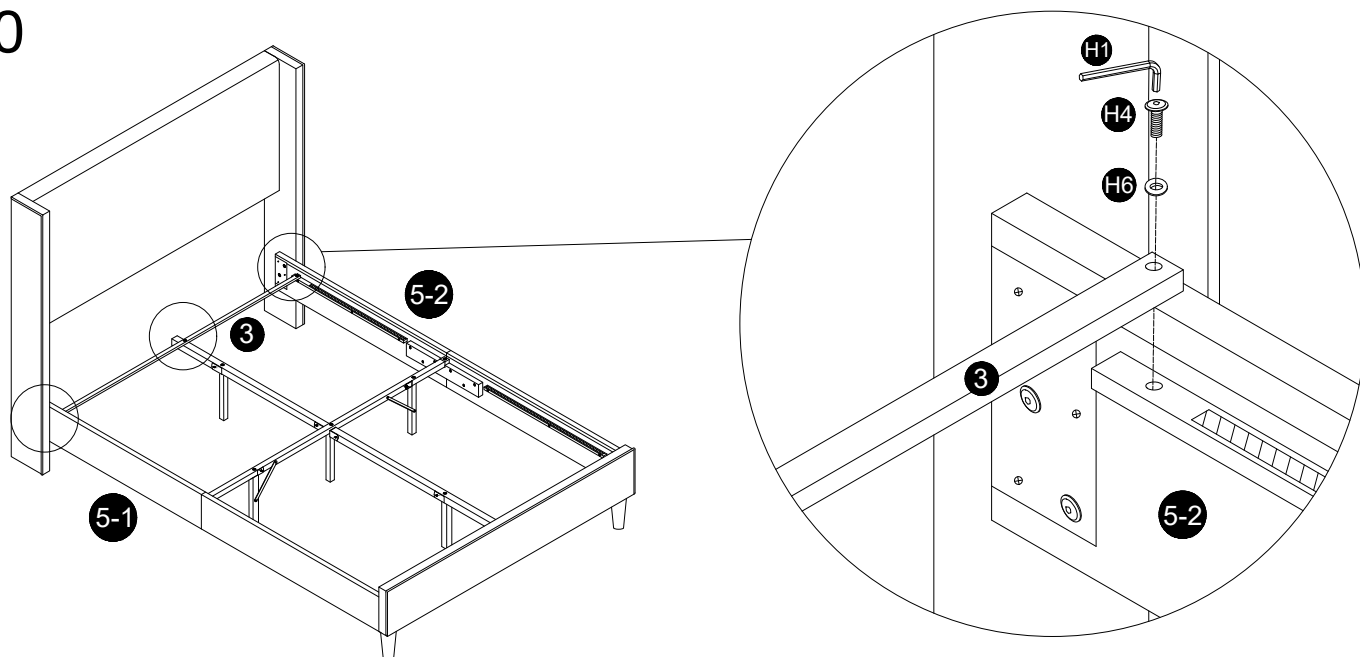

11

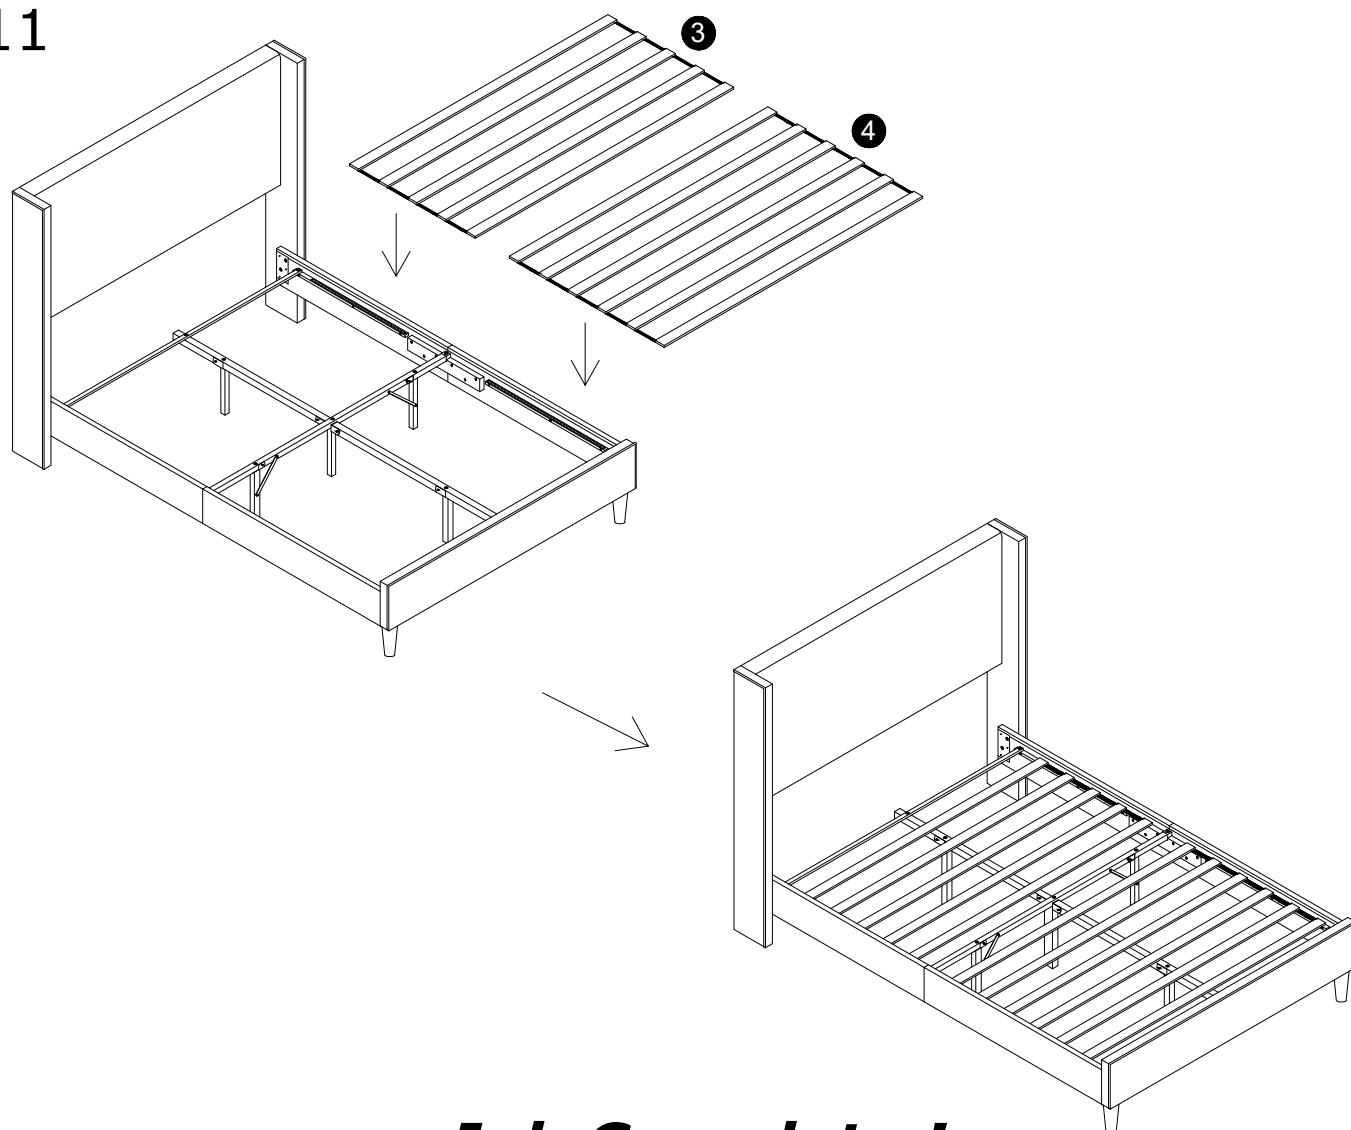

**Job Complete !**

*In the interest of our environment please dispose of all packaging thoughtfully.*