


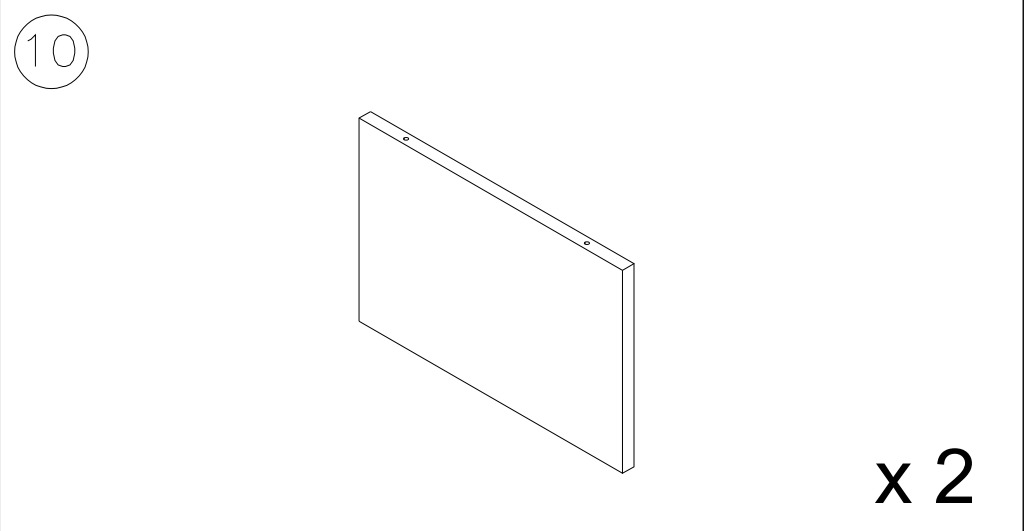
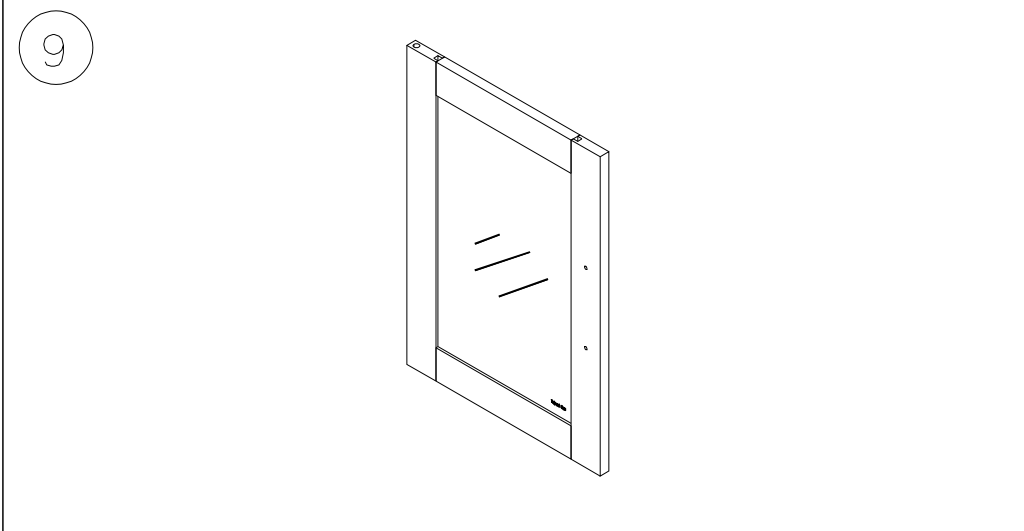
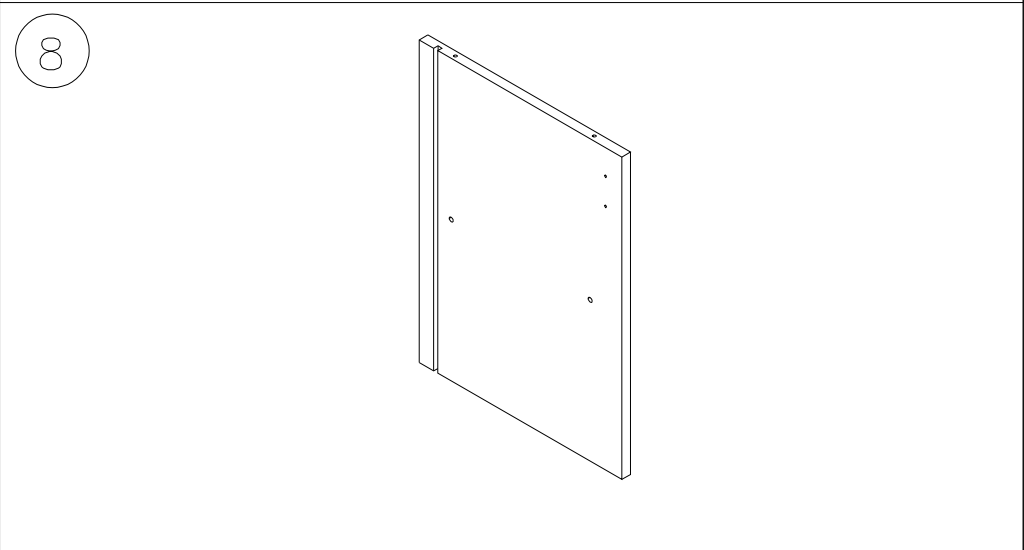
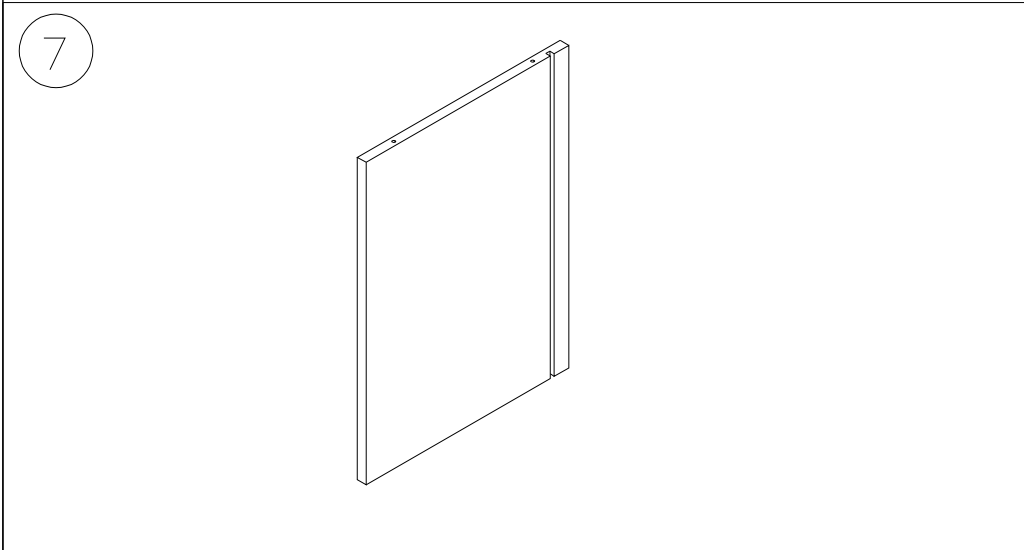
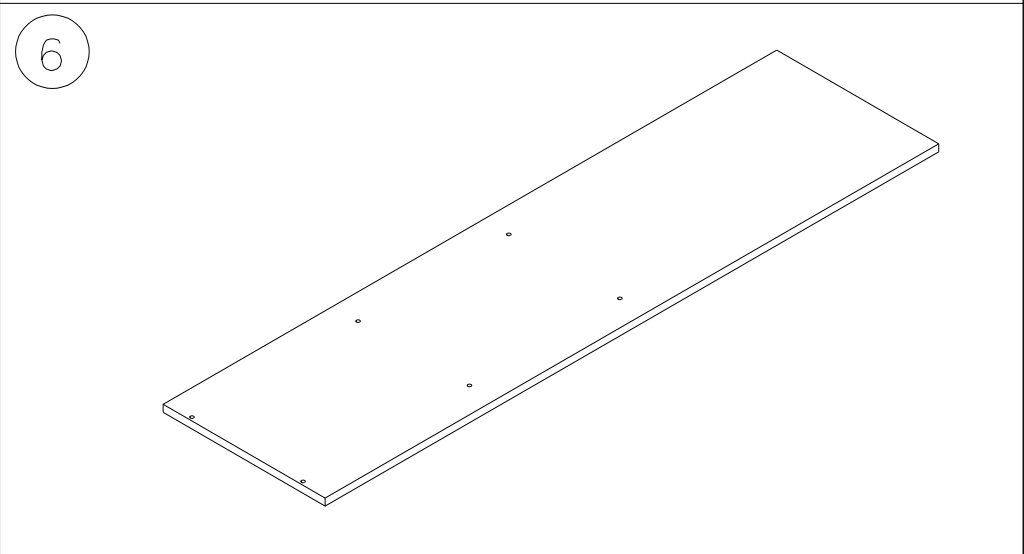
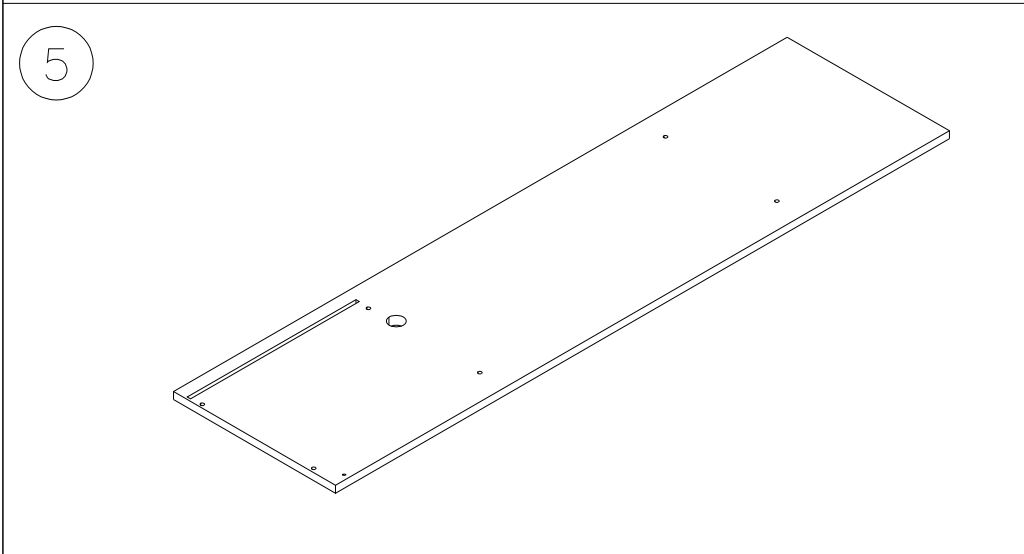
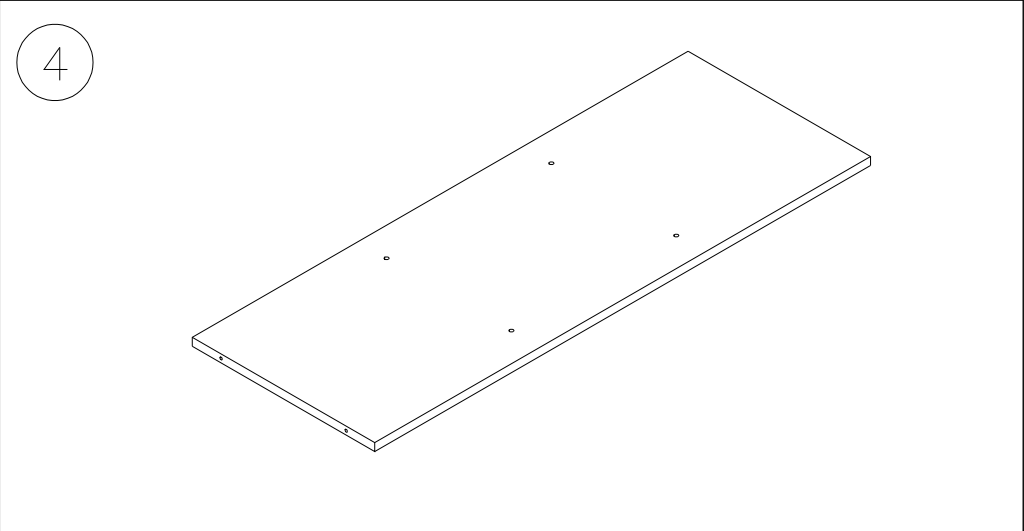
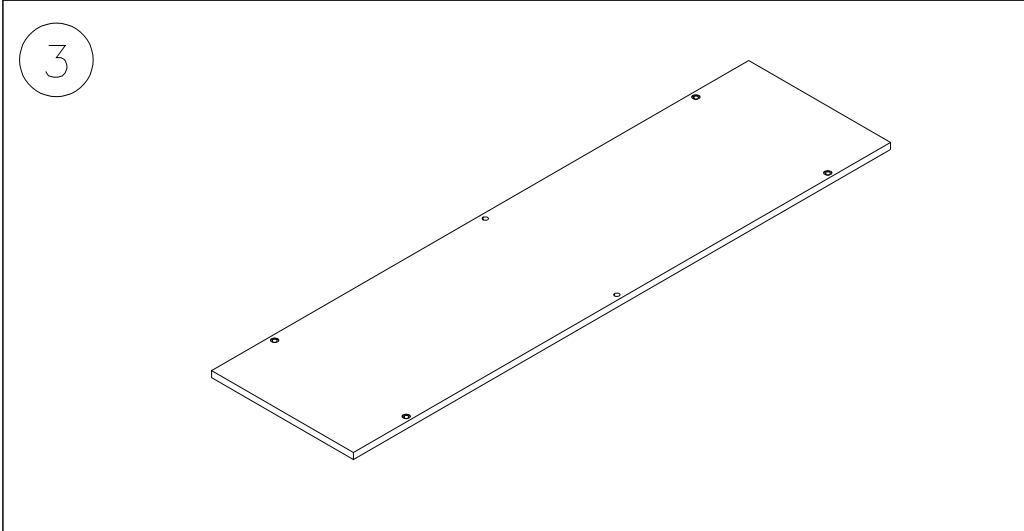
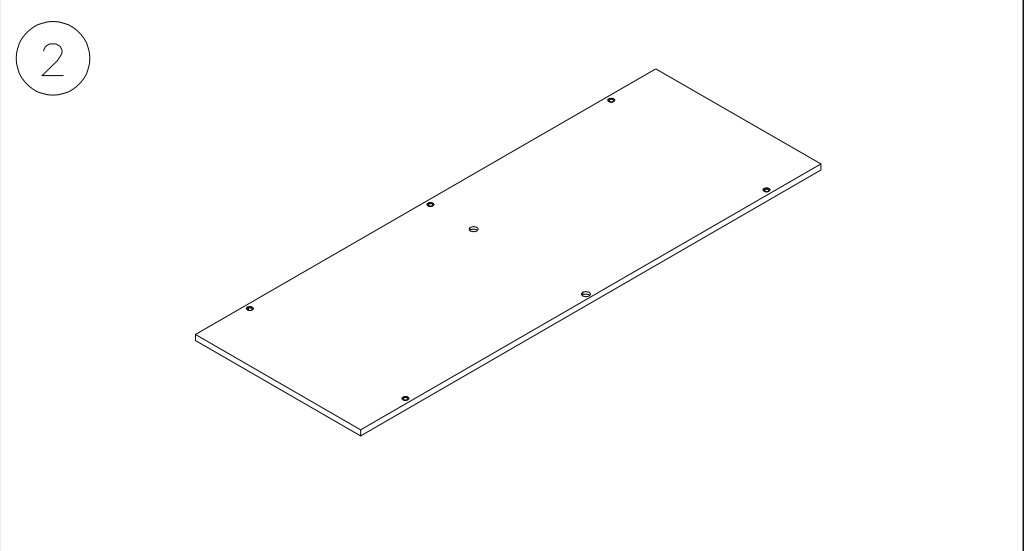
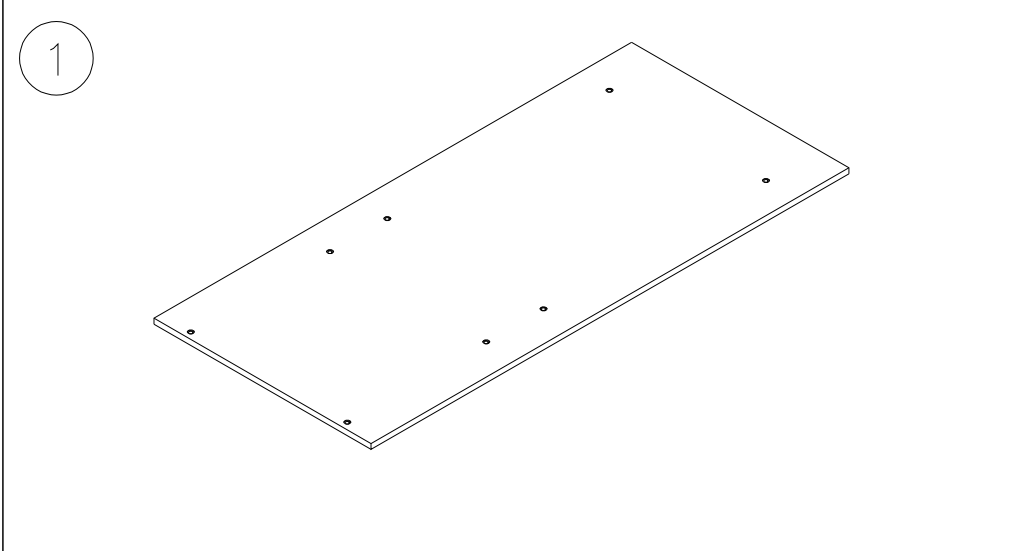
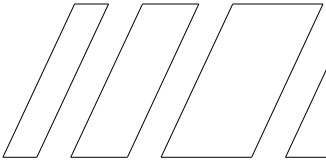
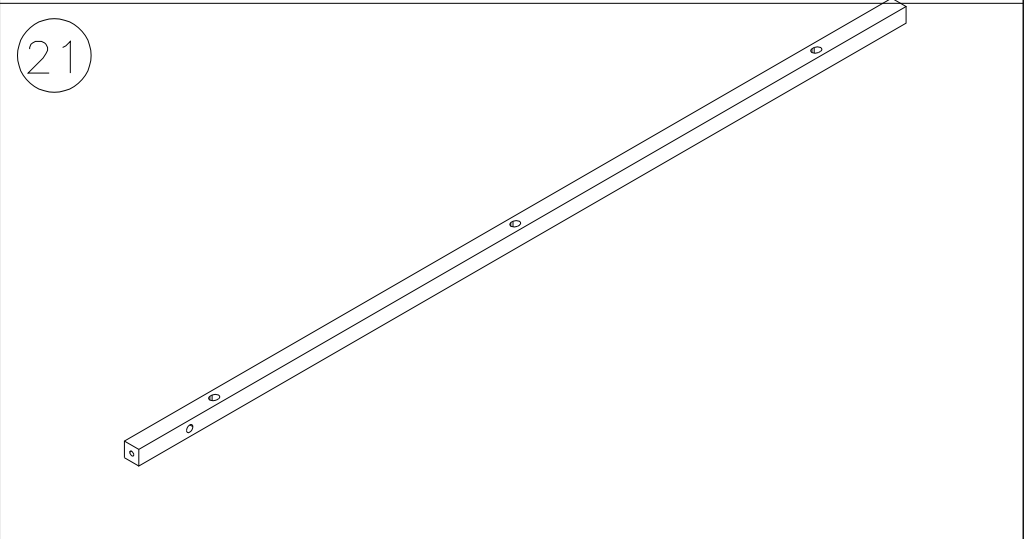
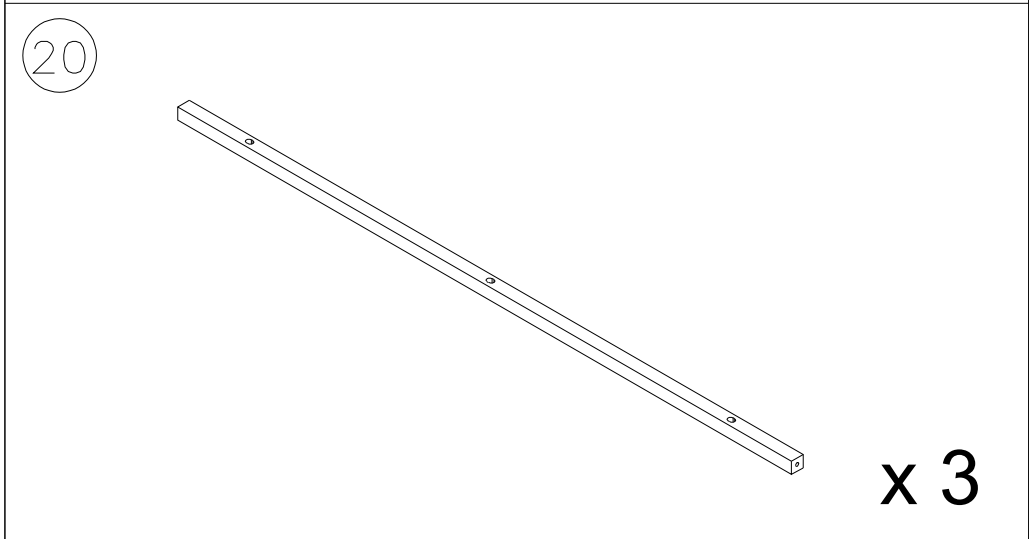
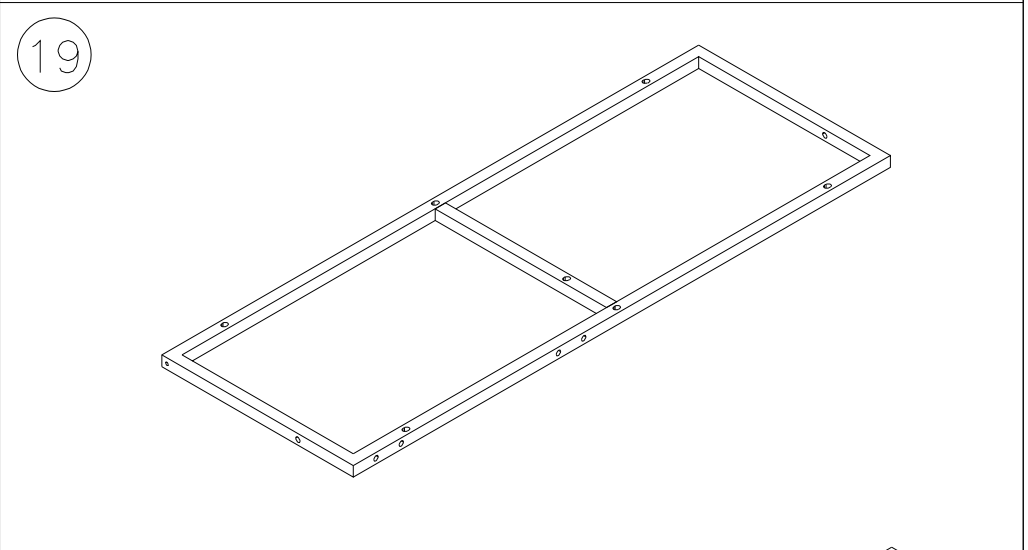
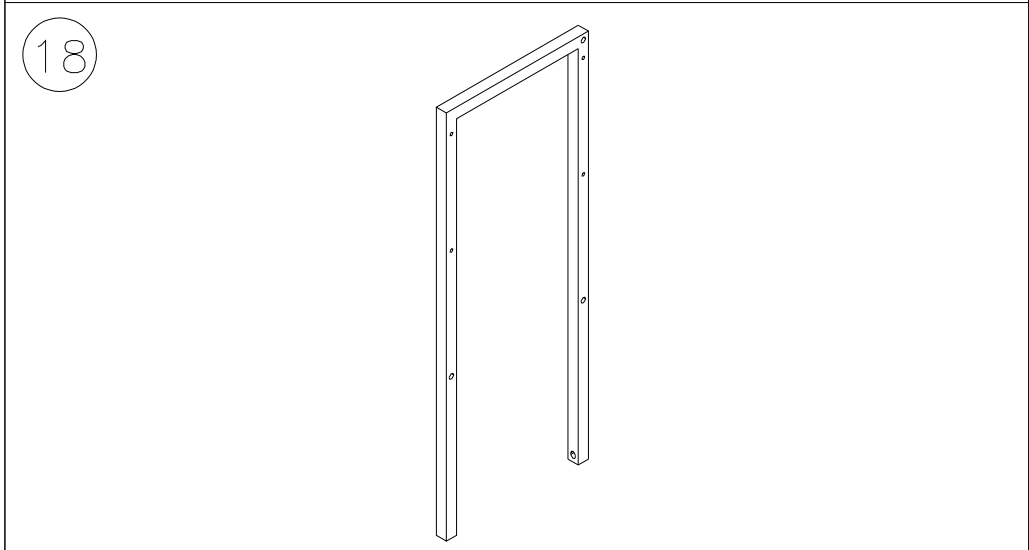
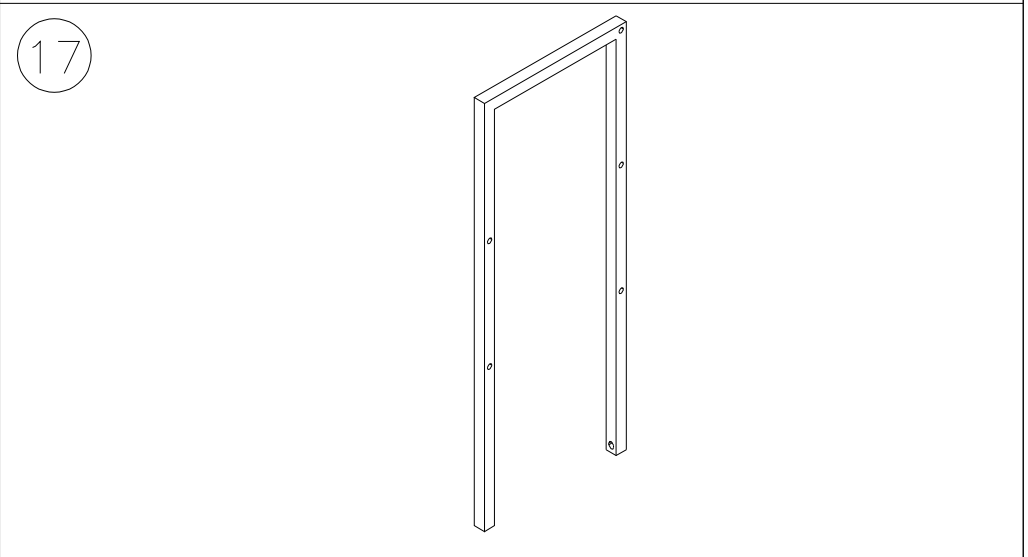
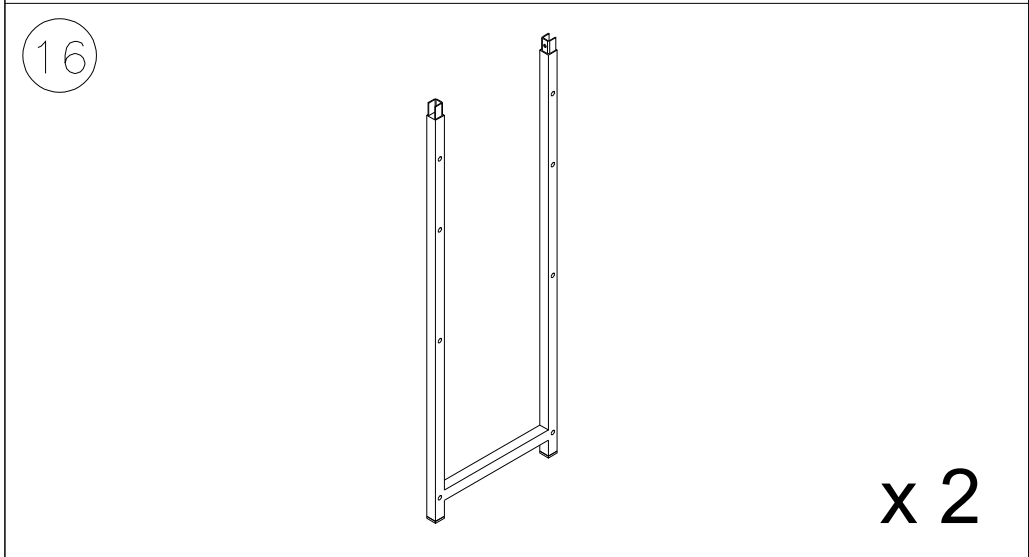
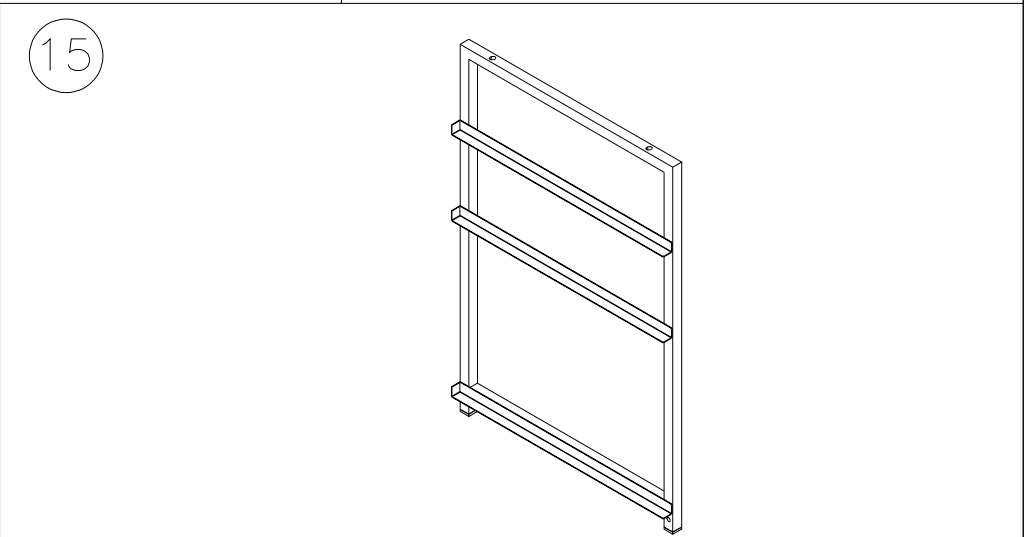
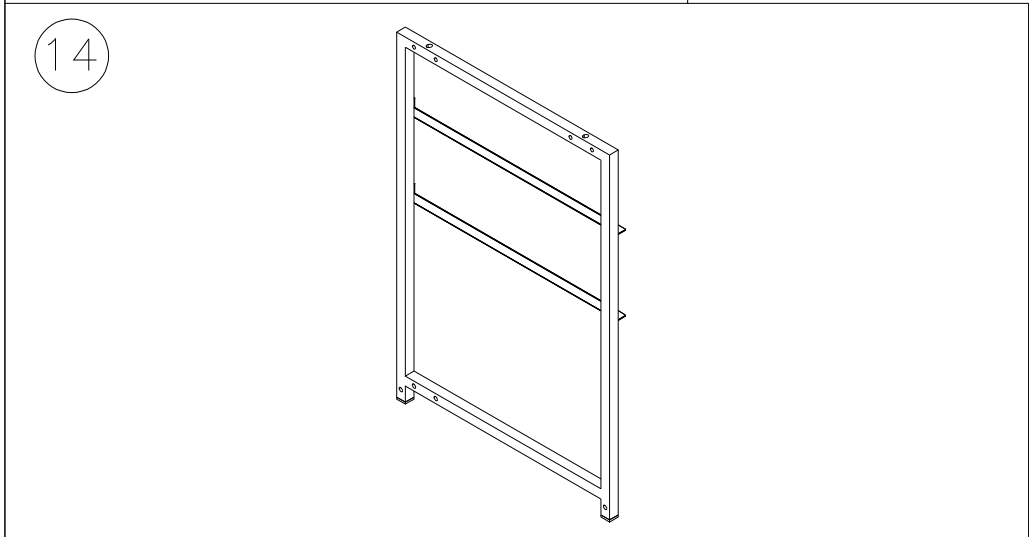
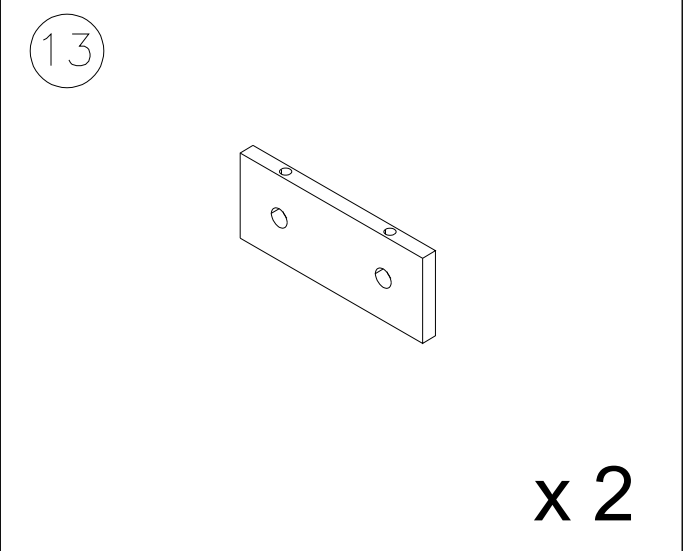
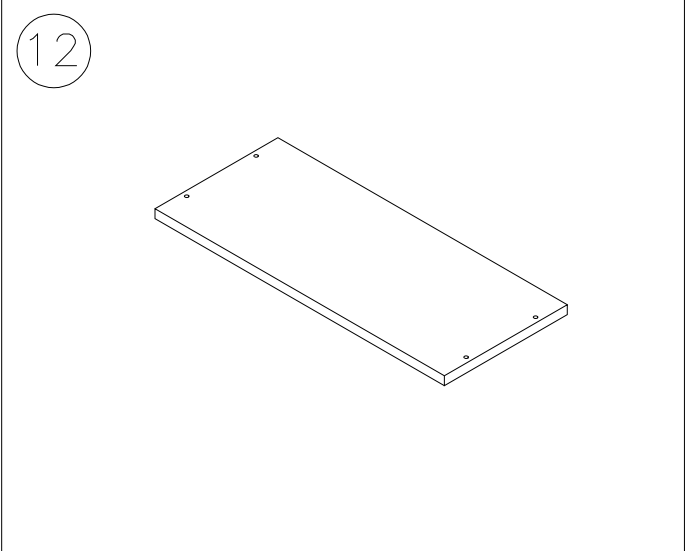


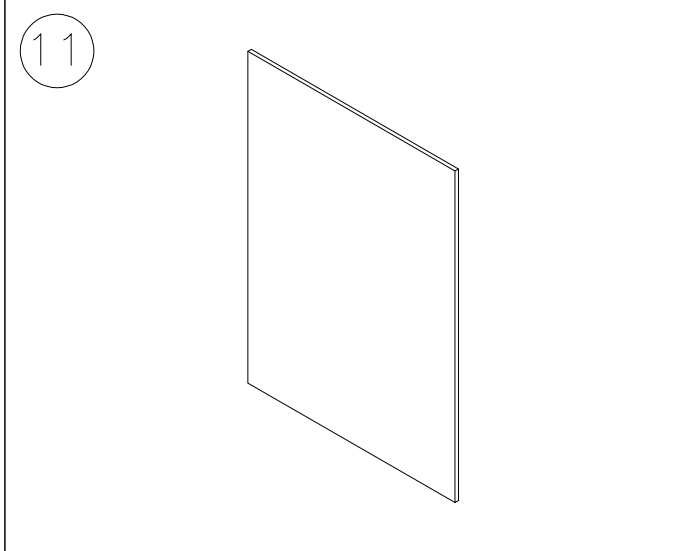


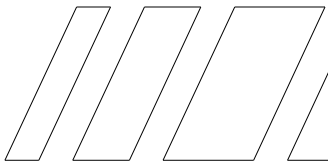

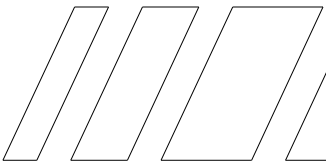


20 Press and hold the black small accessory at the bottom of the door panel and push it inward to align with the hole

K	M M3.5X14
1 SET	2 PCS

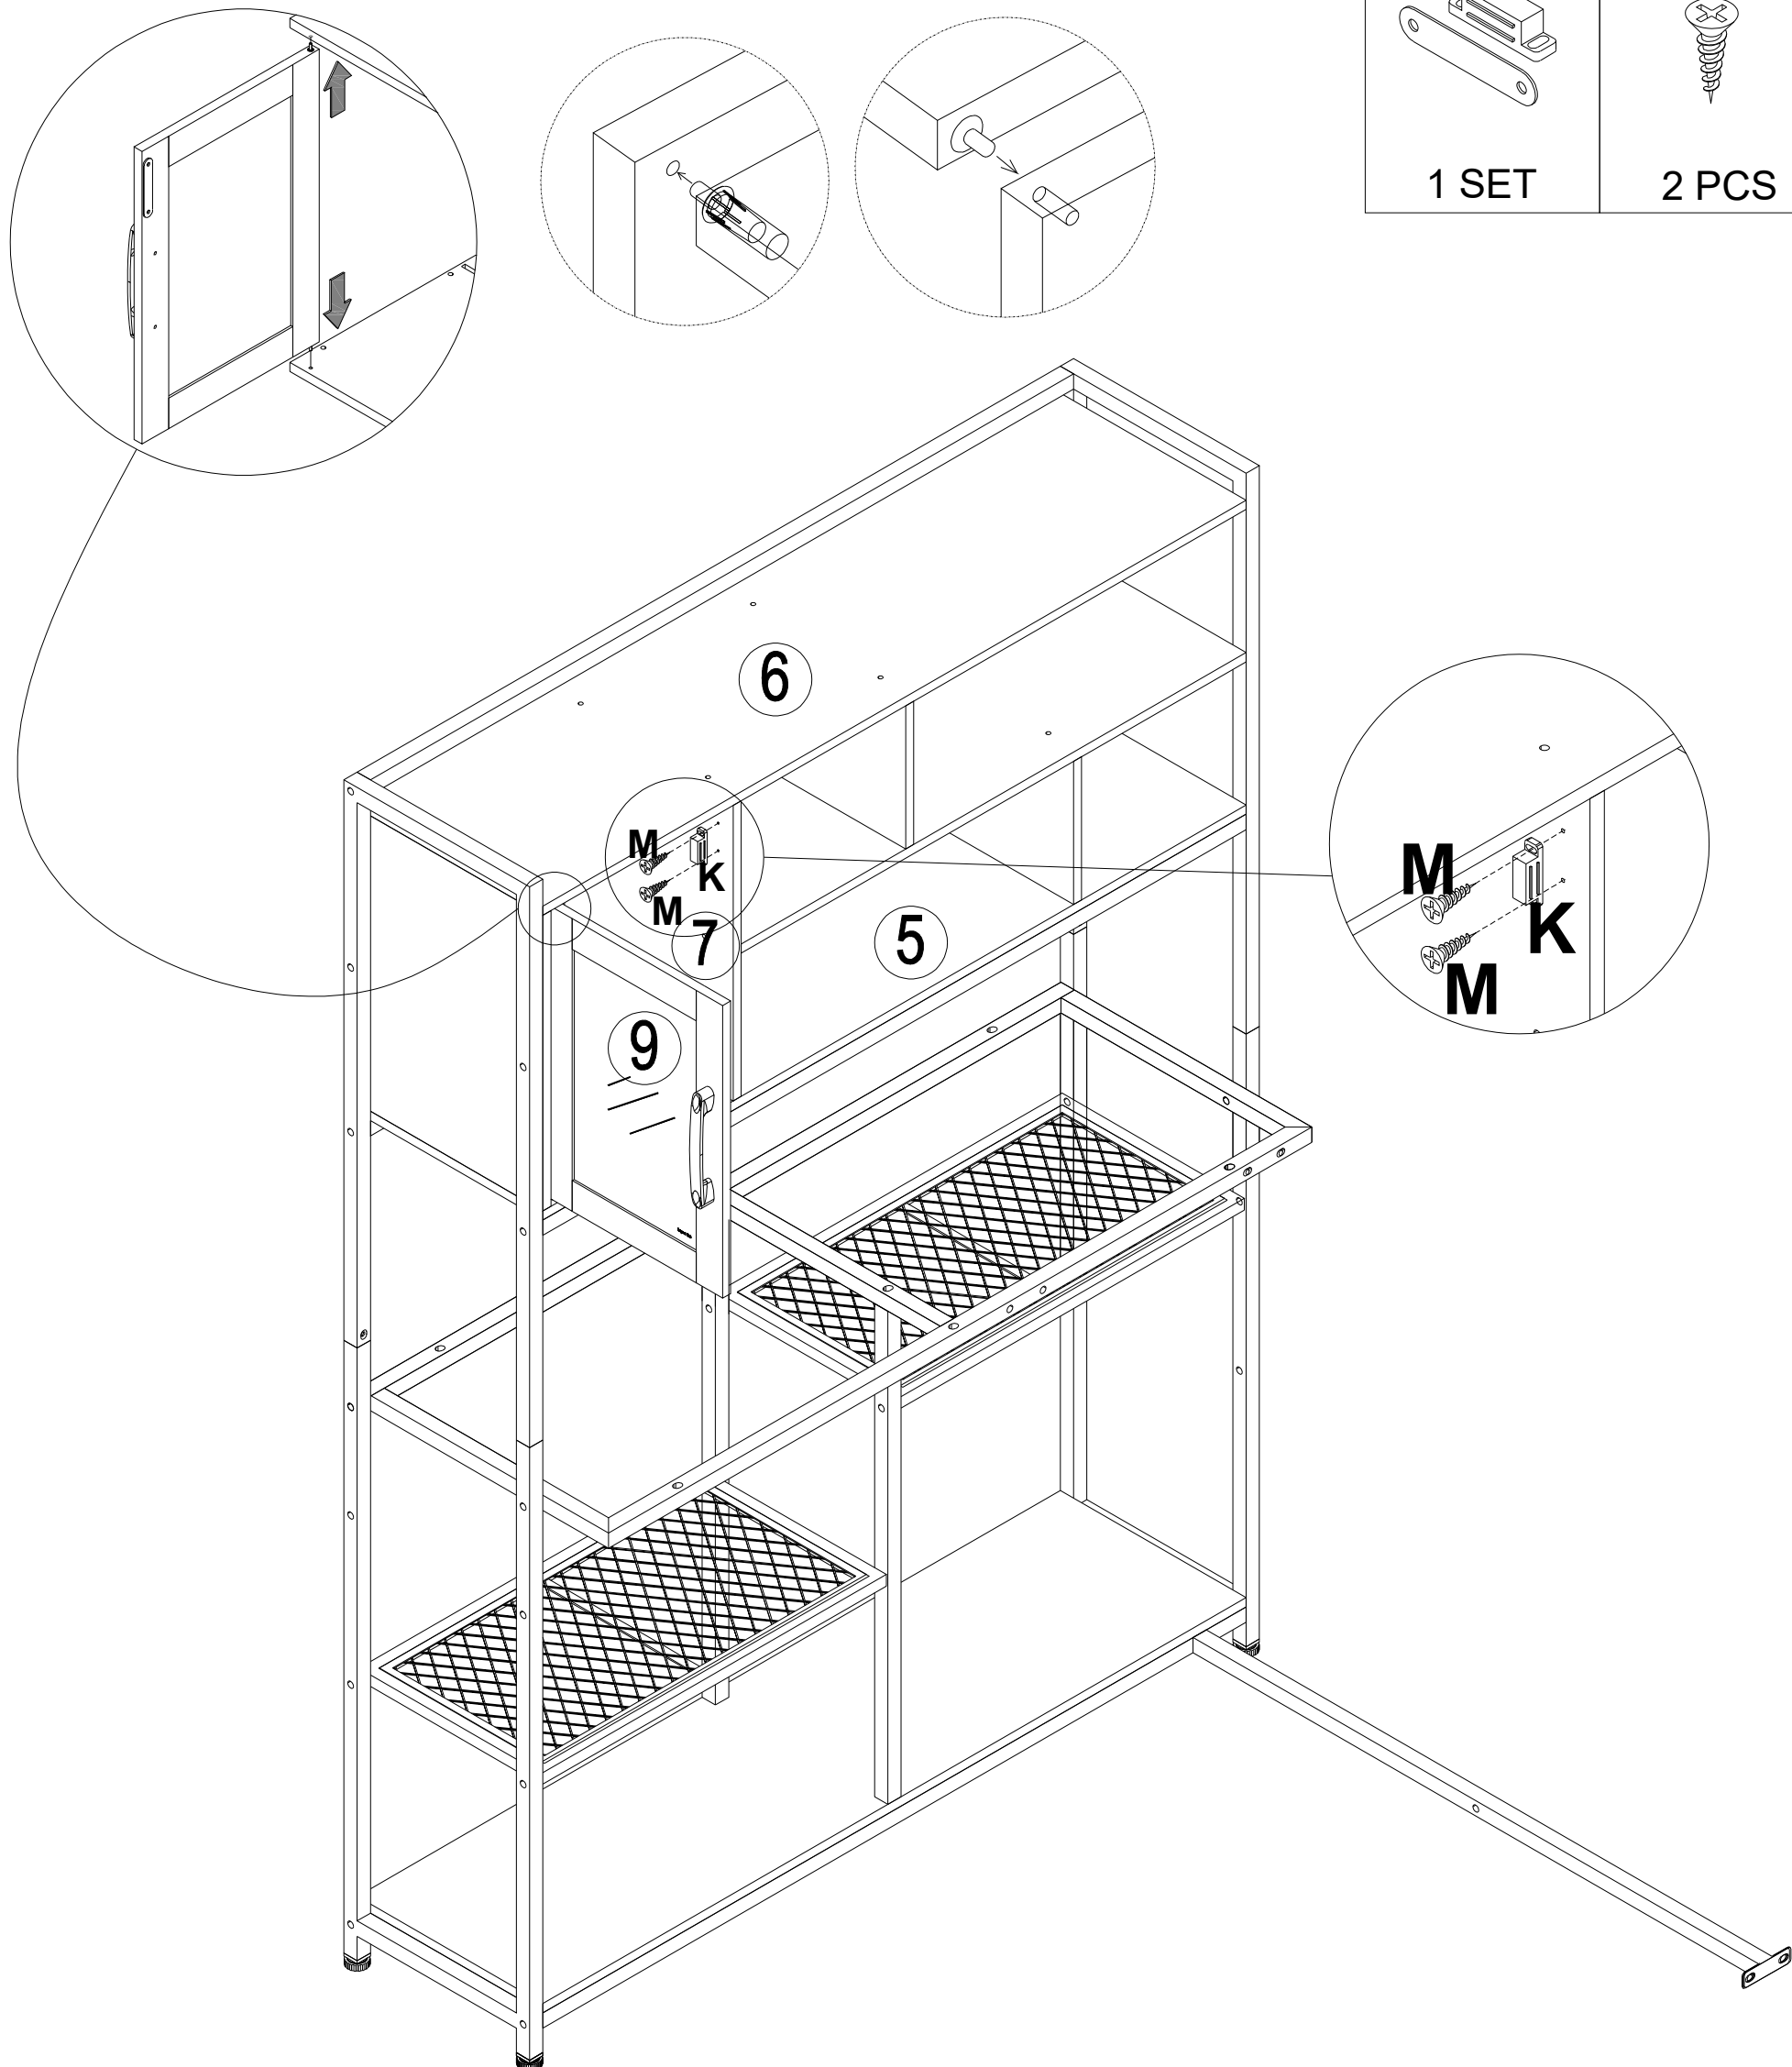


21

B M6X40




4 PCS

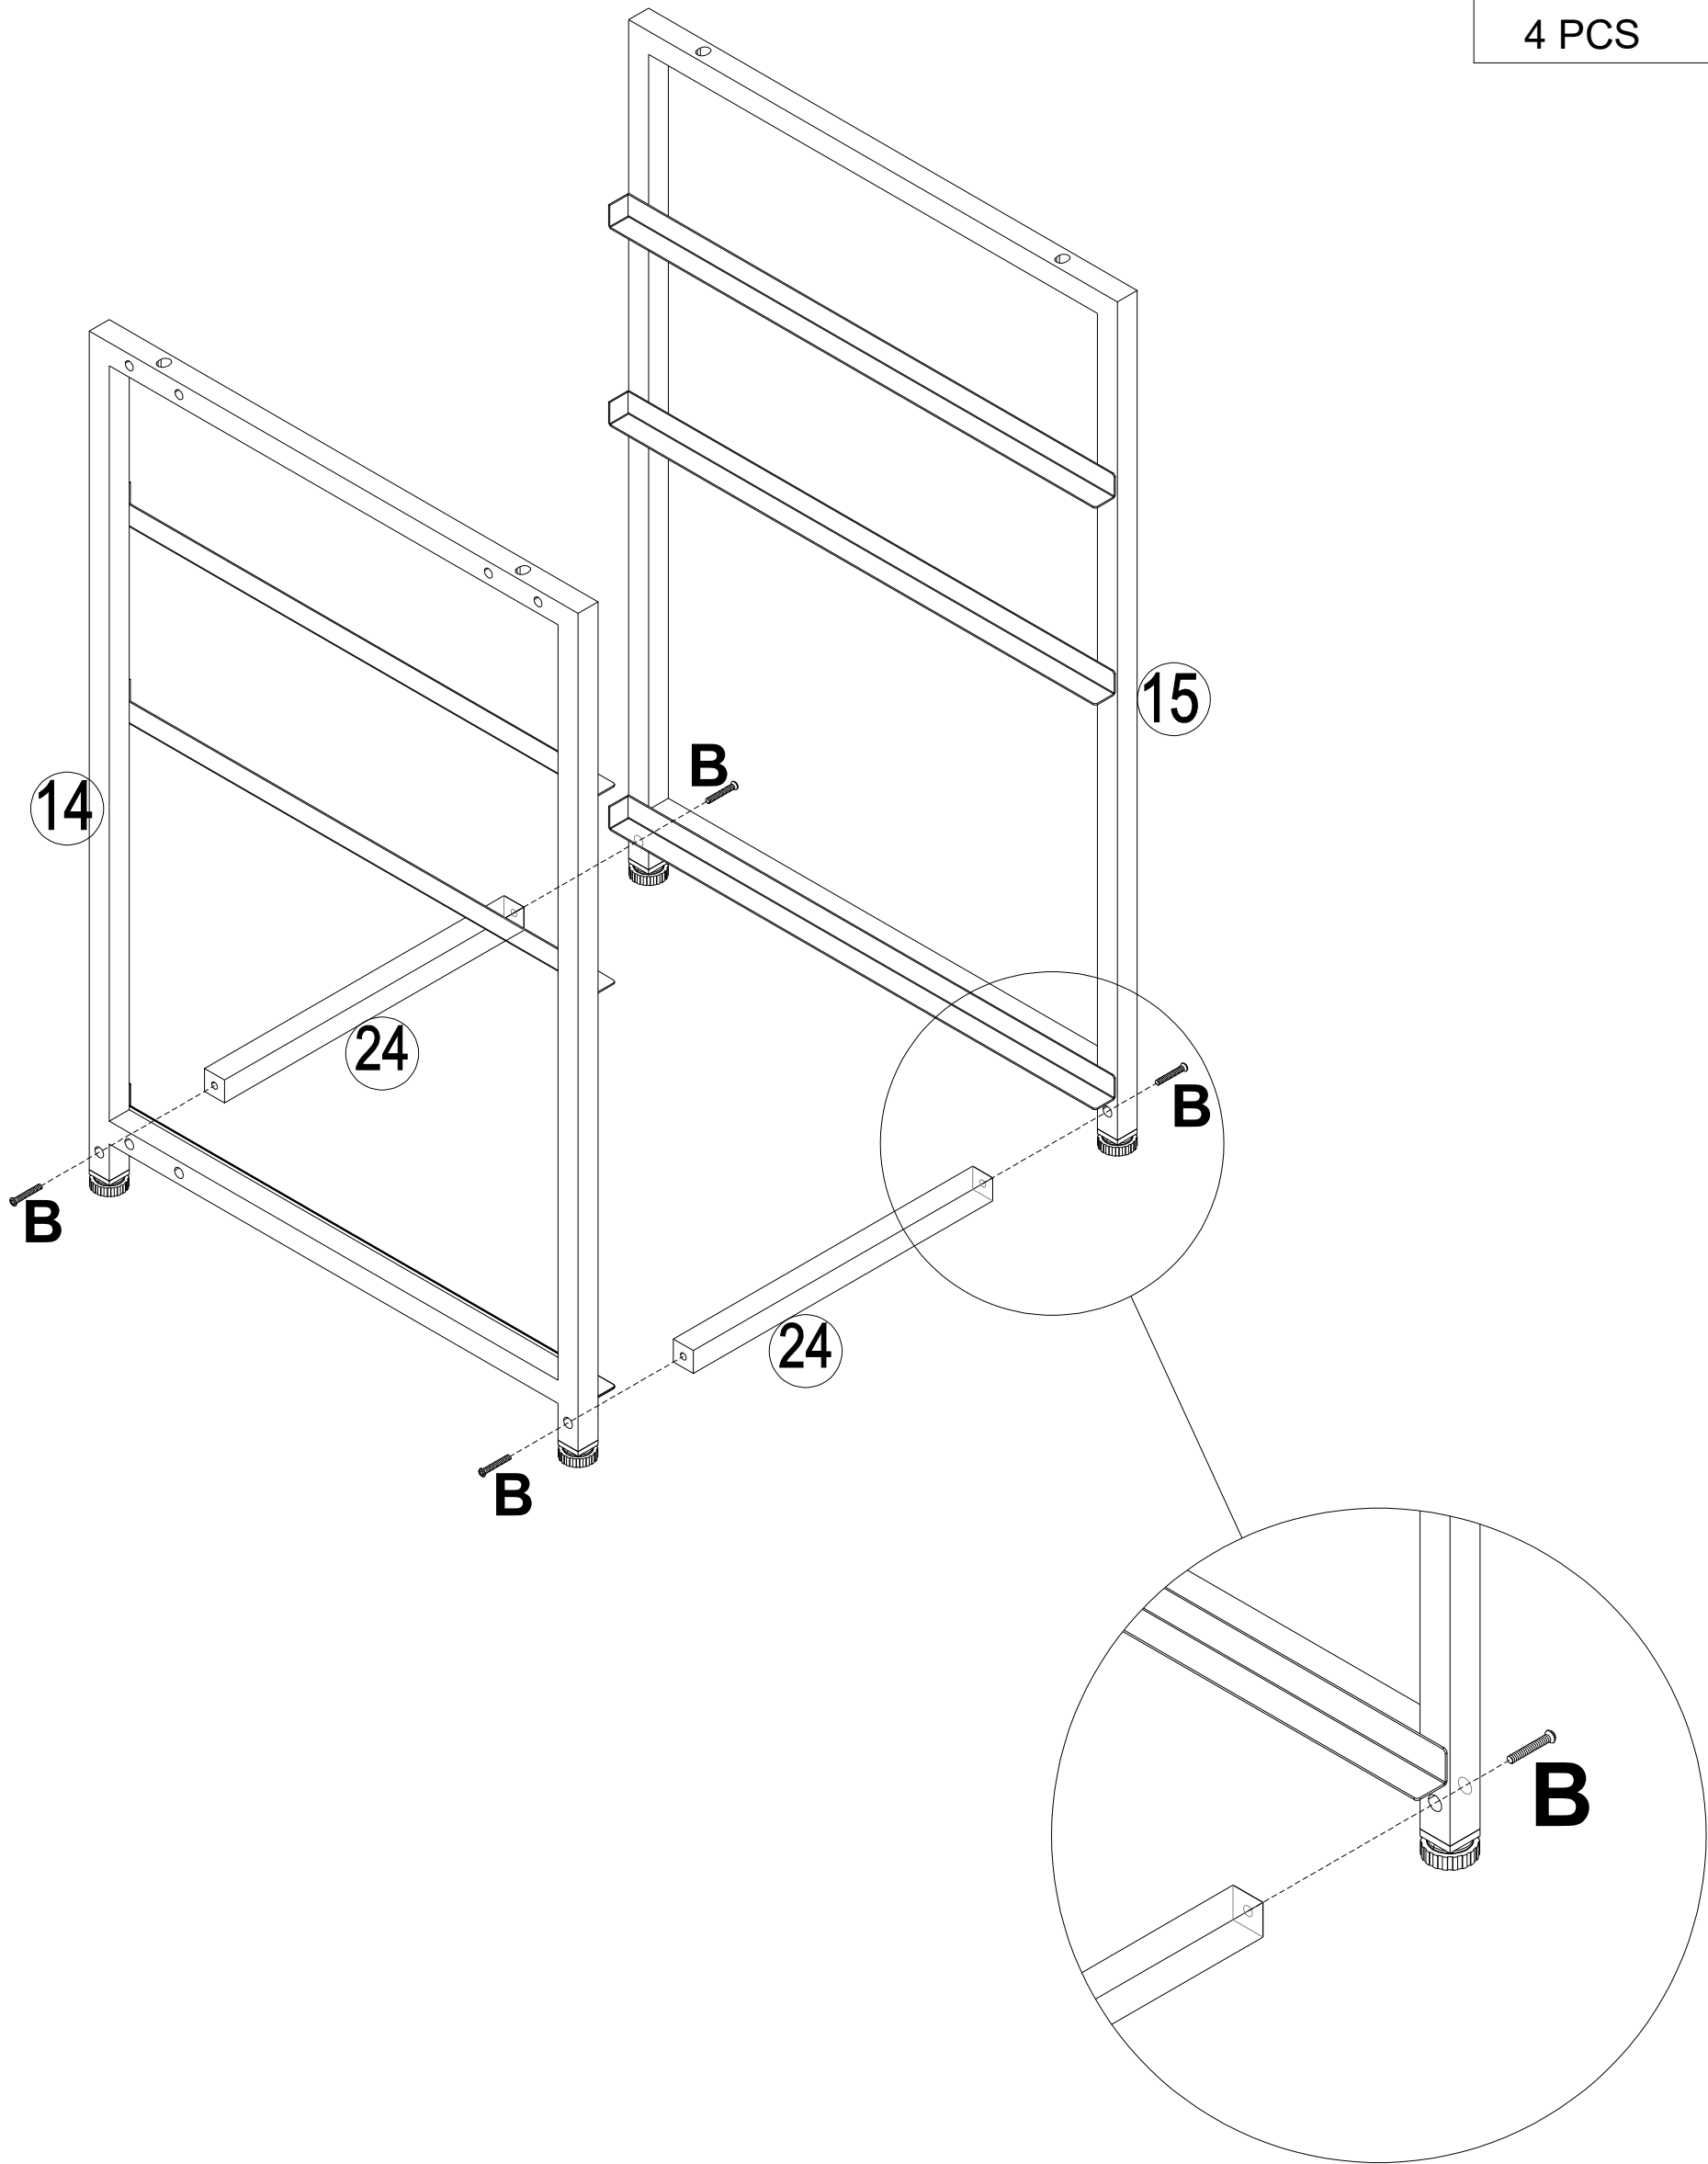

22

F M6X12



2 PCS

