
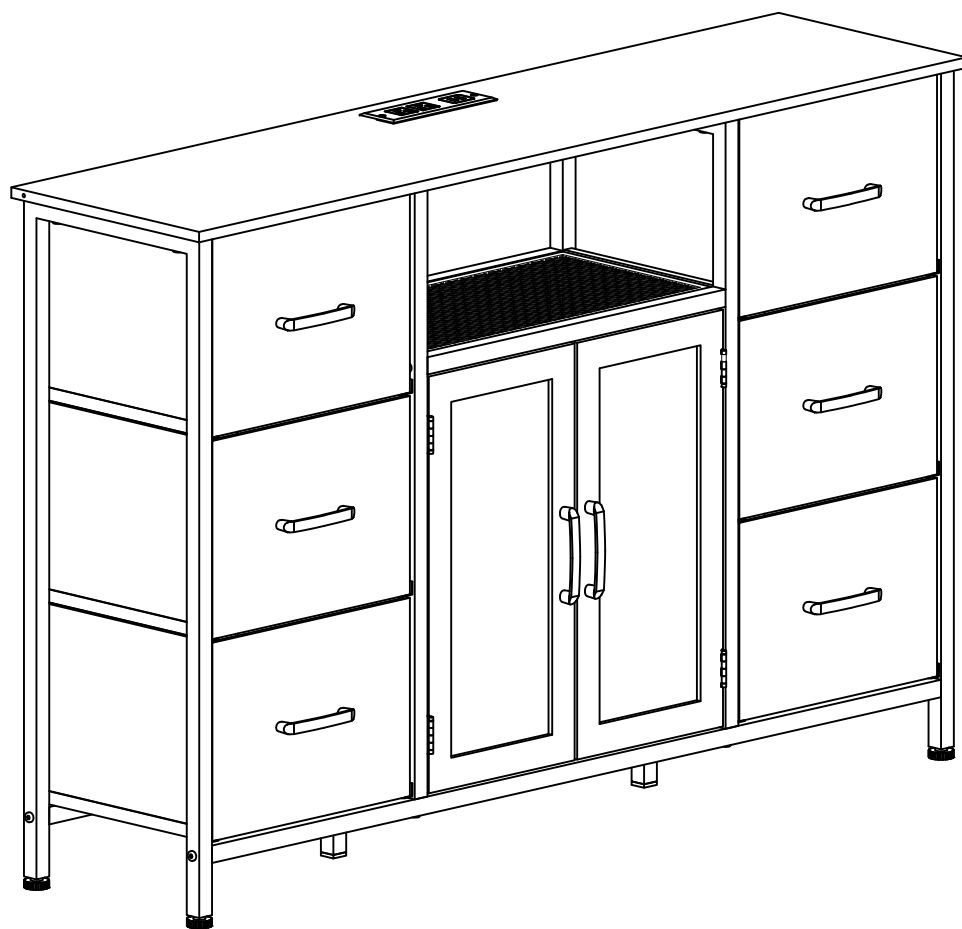
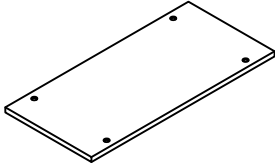
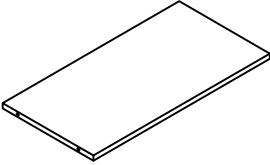
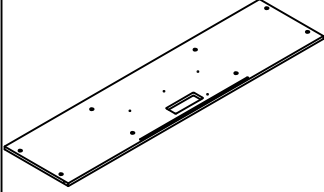
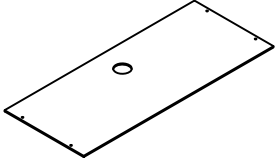
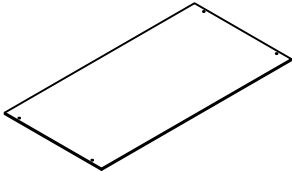
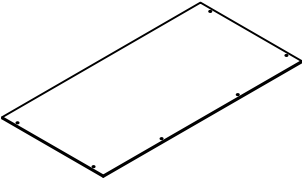
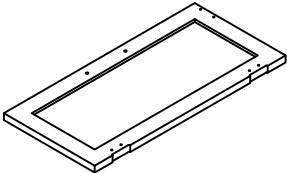






Assembly instructions for 6-drawer cabinet with double pull doors


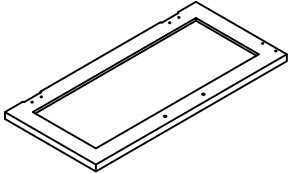


Parts List





NO.	①	②	③	④
Parts				
Qty	2	1	1	1




NO.	⑤	⑥	⑦	⑧
Parts				
Qty	1	1	1	1

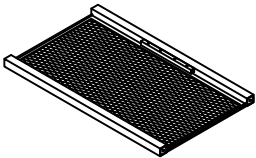

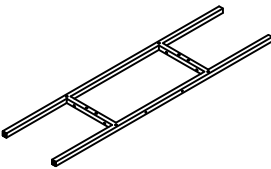
NO.	⑨	⑩	⑪	⑫
Parts				
Qty	1	1	1	1

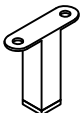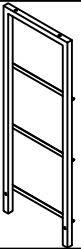NO.	⑬	⑭	⑮	
Parts				
Qty	2	1	1	

Parts List

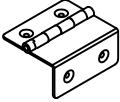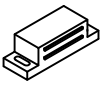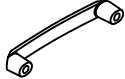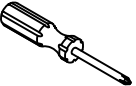
NO.	A	B	C	I	N	P	O	T
Parts								
Qty	4	2	2	4+1	16+1	8	26+1	1

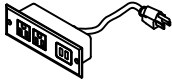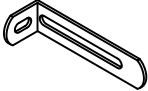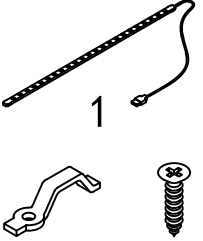NO.	U2	K	Q	J	V2	V	W
Parts							
Qty	1	16+1	12+1	4	2	2	4+2 4+2

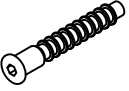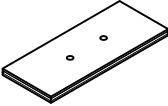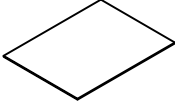
NO.	R	L	M	S	Y	Y2	
Parts							
Qty	4+1	4+1	12+1	1	6	6	

For assistance in assembling or questions on parts, please email us at jizeservice@126.com

STEP 1

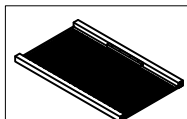


⑨ *1PC

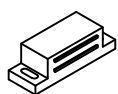

B*2PCS




O*4PCS

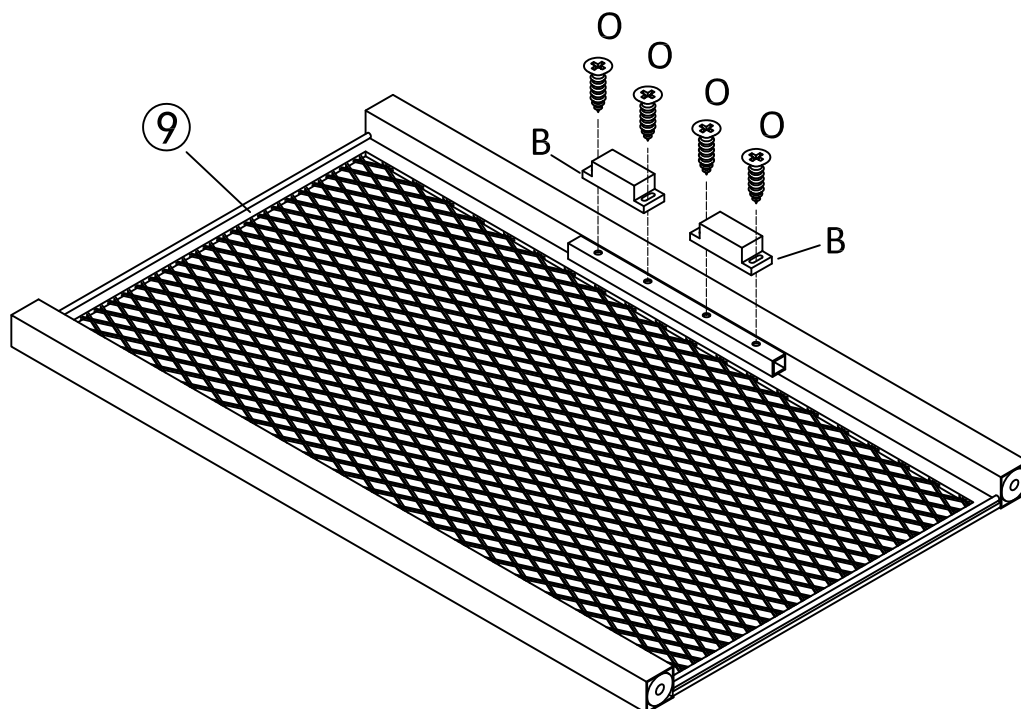

Attach magnet B to grid frame ⑨ and tighten with screw O

STEP 2

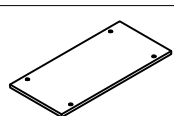


① *1PC



⑪ *1PC





Q*4PCS

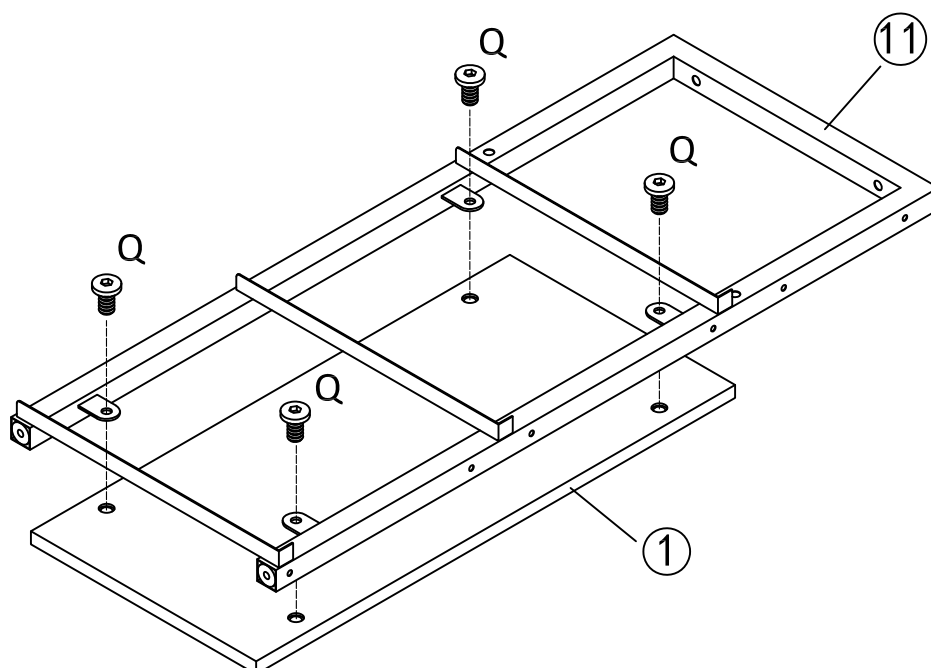

Attach the ① plate to the ⑪ iron frame and tighten it with screw Q.



STEP 3

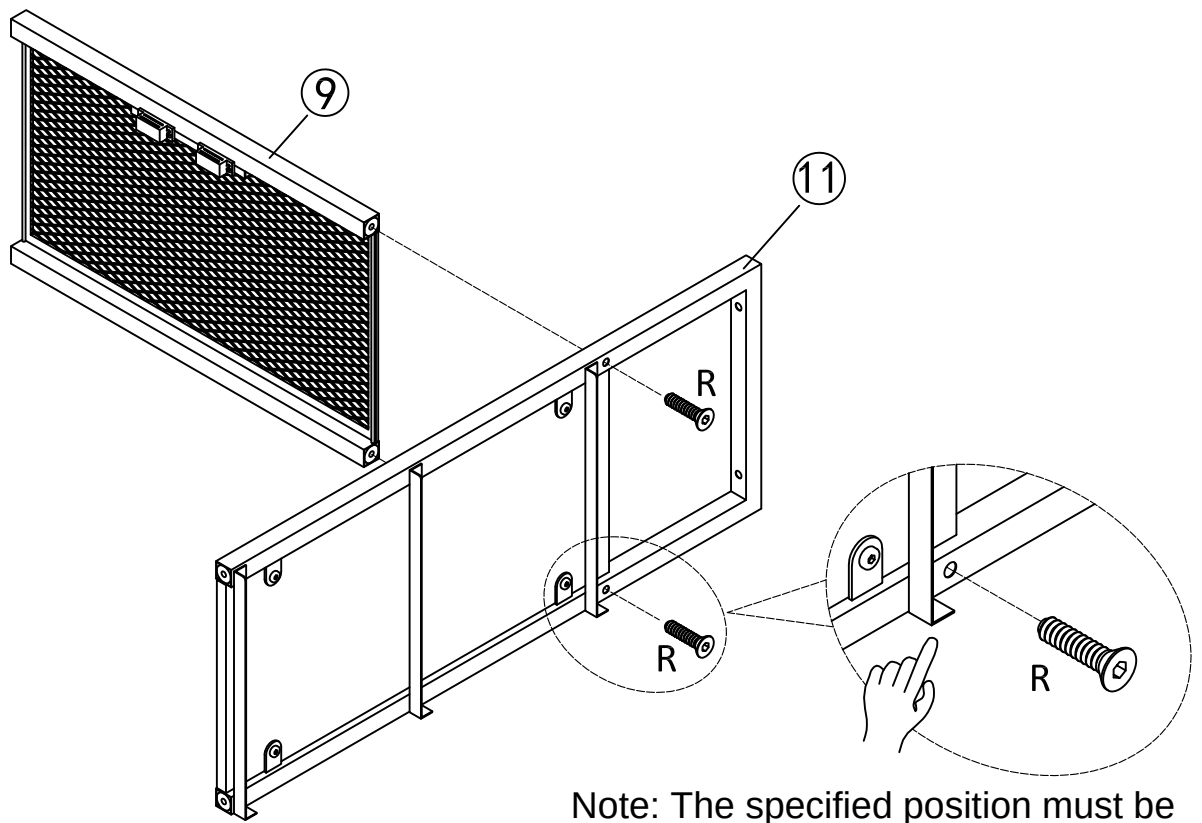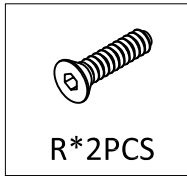

Note: The specified position must be towards the back



Attach the grid frame ⑨ and the ⑪ iron frame together and tighten with screw R

STEP 4

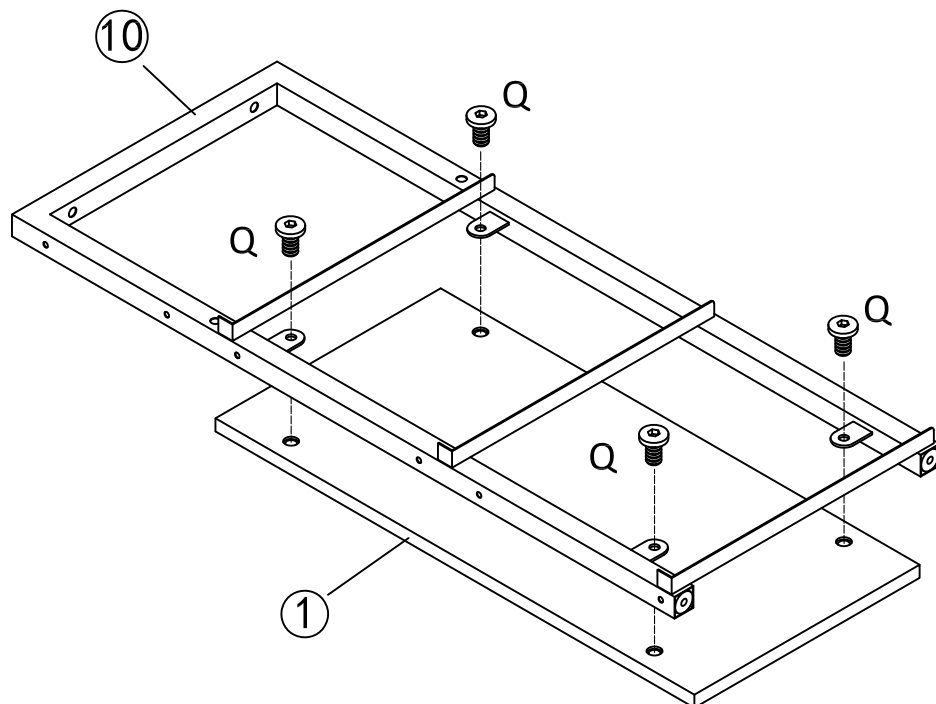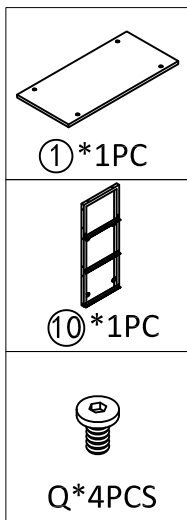

Attach the ① plate to the ⑩ iron frame and tighten it with screw Q.



STEP 5

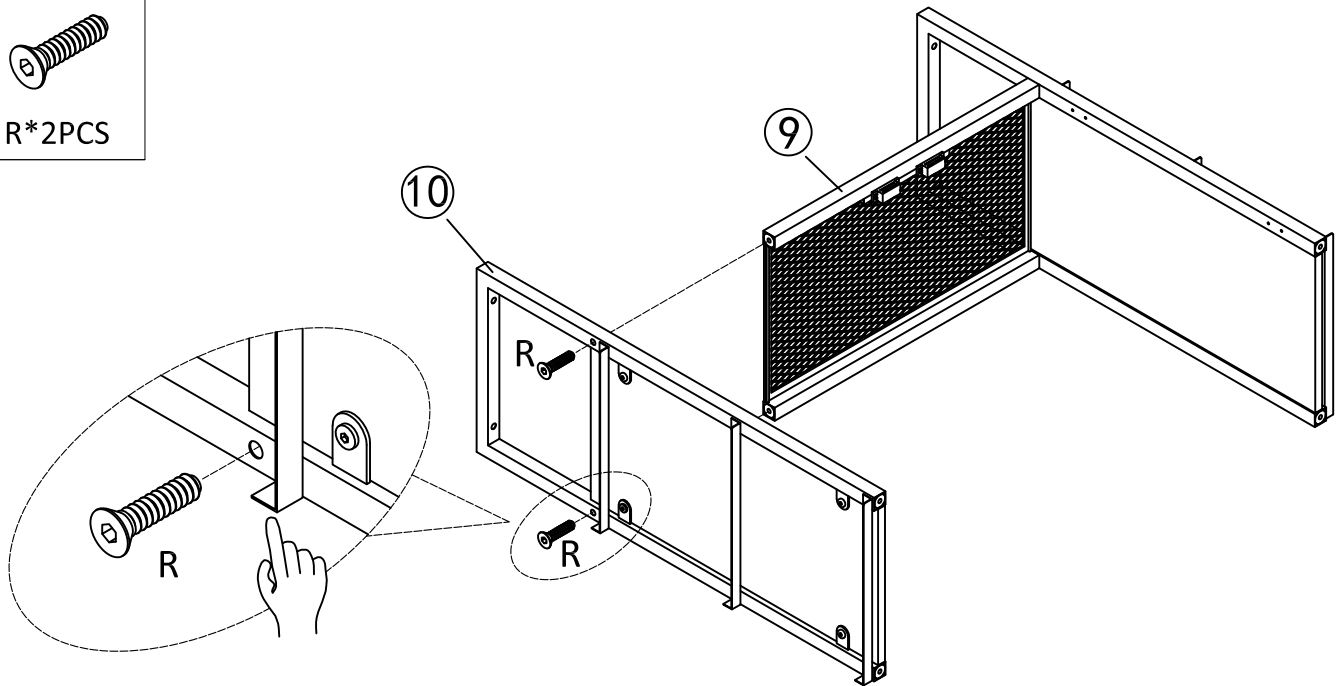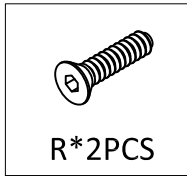

Note: The specified position must be towards the back



Attach ⑩ iron frame and ⑨ grid frame together and tighten with screw R

STEP 6

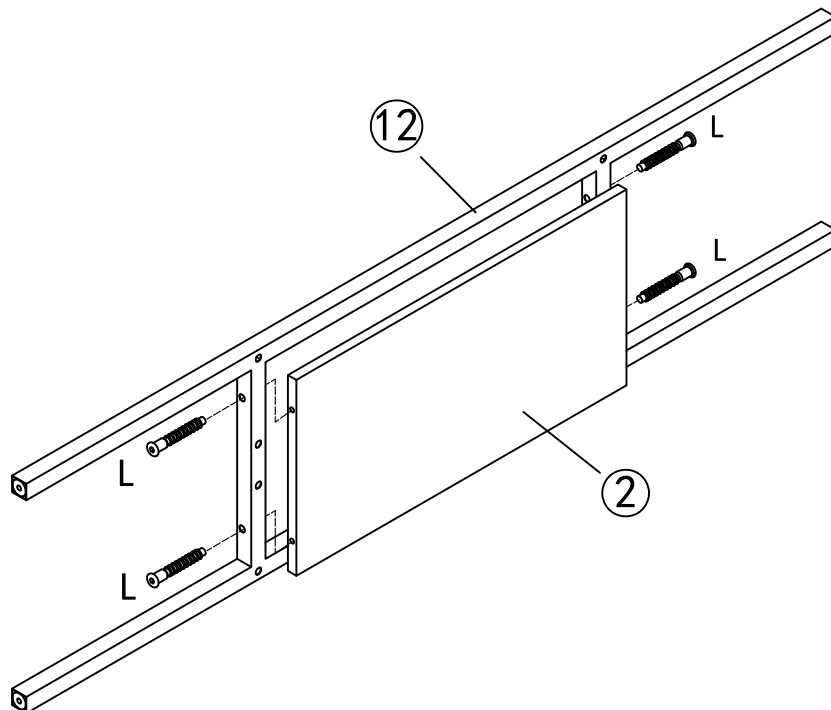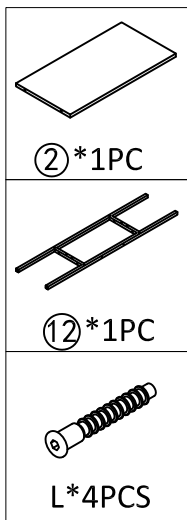

Attach ② plate and ⑫ iron frame together and tighten with screw L.



STEP 7

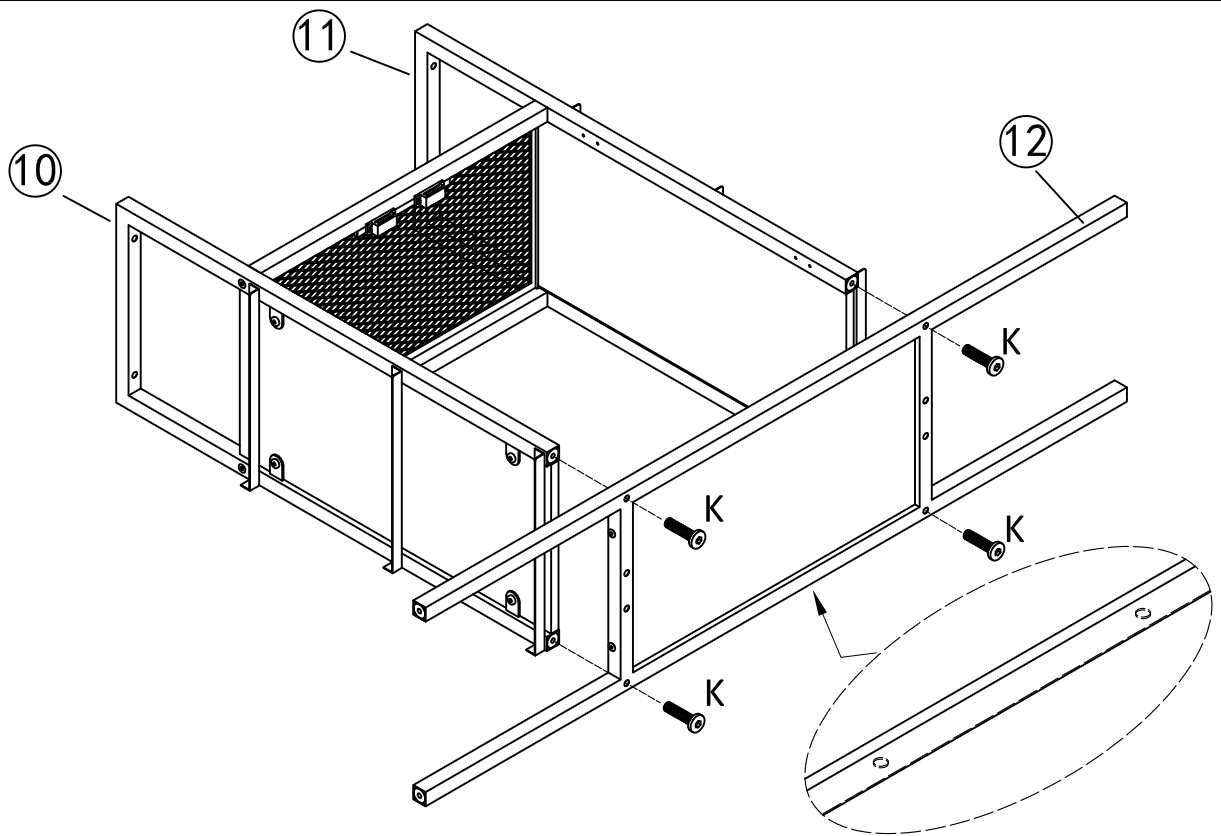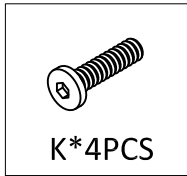

Note: The side with the pre-drilled holes must be facing back as shown in the magnifying glass.



Attach the ⑫ iron frame to the ⑩ and ⑪ iron frames and tighten them with screw K.

STEP 8

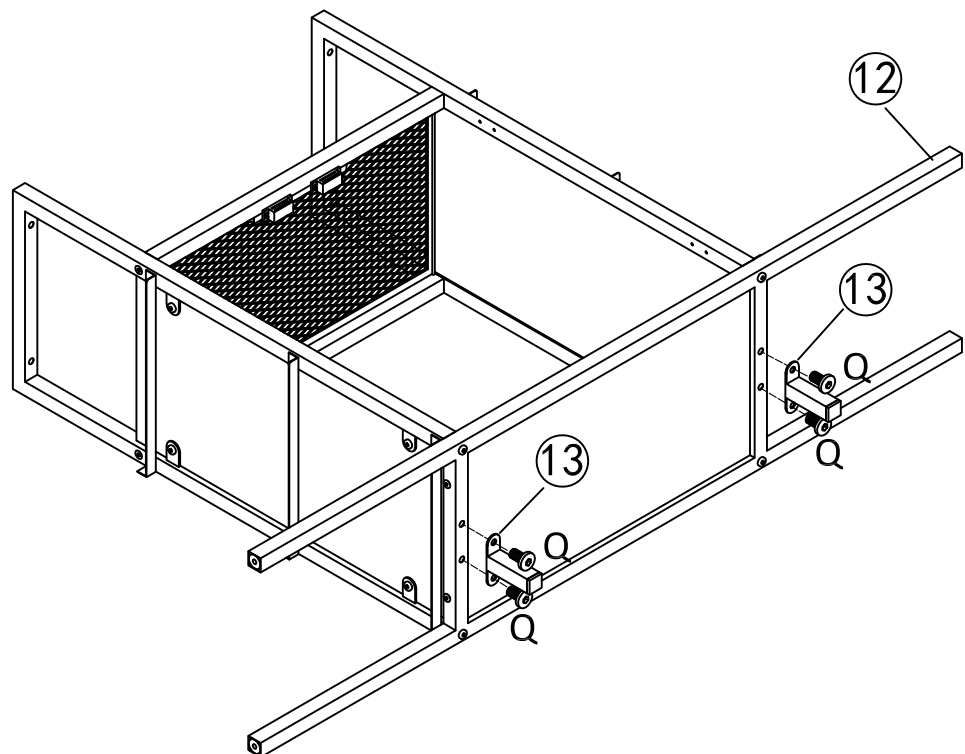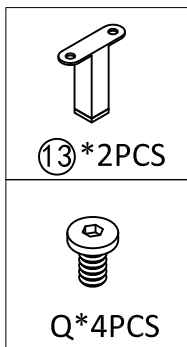

Attach the ⑬ legs to the ⑫ iron frame.



STEP 9

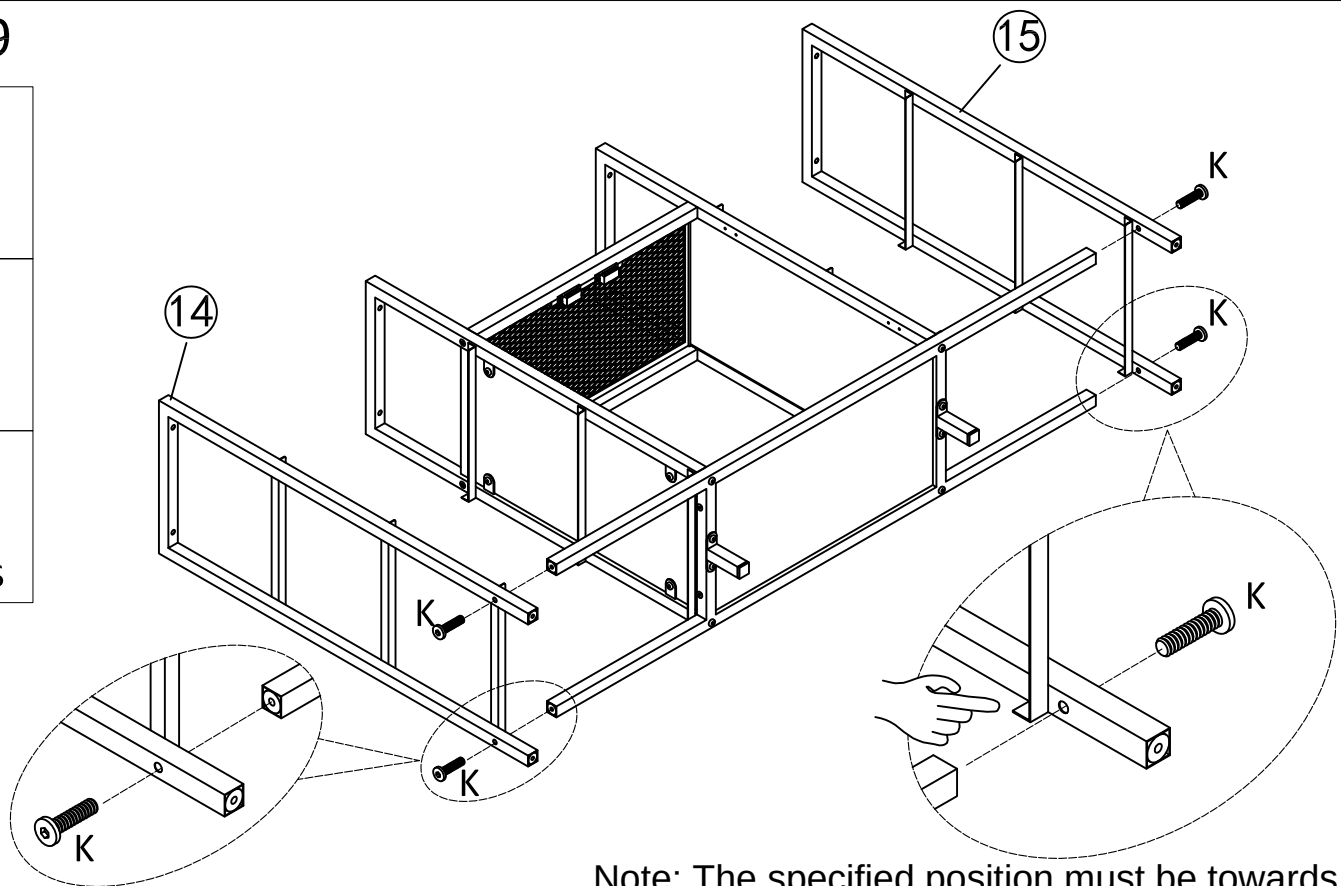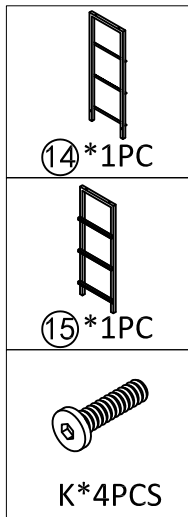

Note: The specified position must be towards the back

Attach the ⑭ and ⑮ iron frames on each side as indicated in the diagram, and tighten with screws k



STEP 10

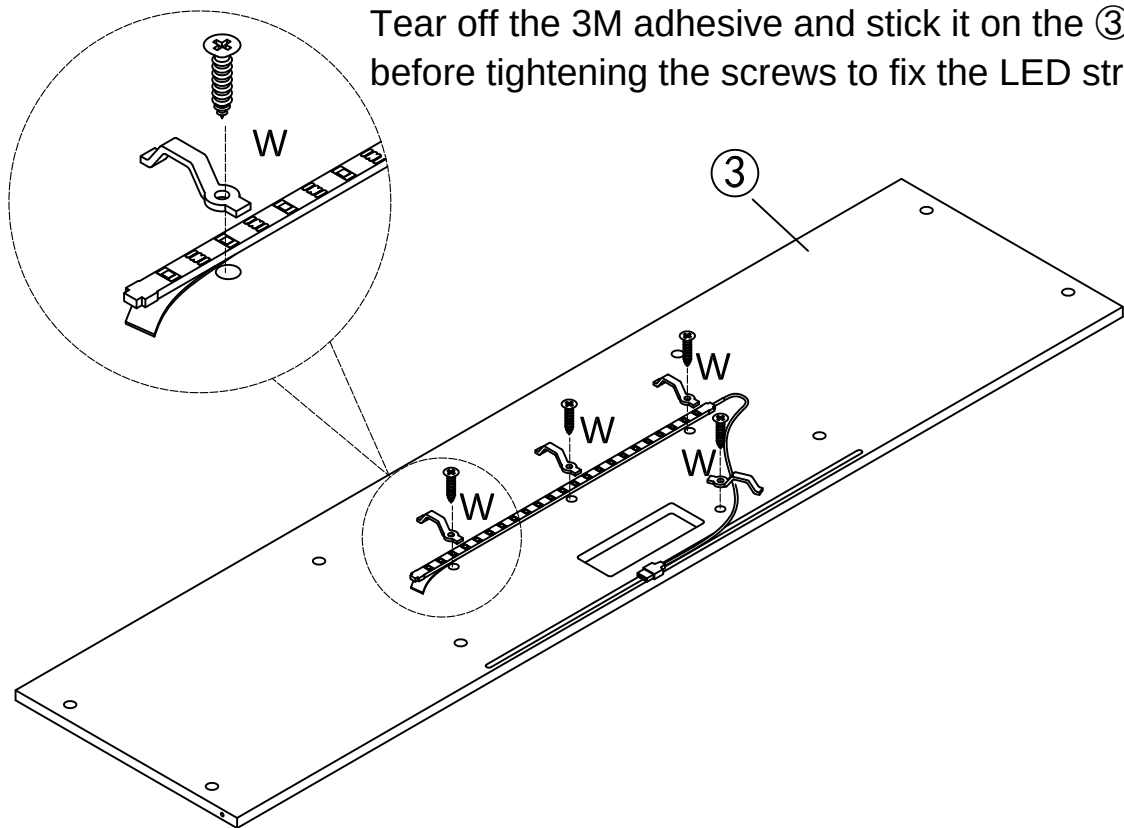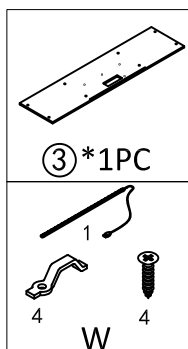

Tear off the 3M adhesive and stick it on the ③ plate before tightening the screws to fix the LED string lights.



Mount the LED string W on the ③ plate and tighten it with the screws in the parts kit W.

STEP 11

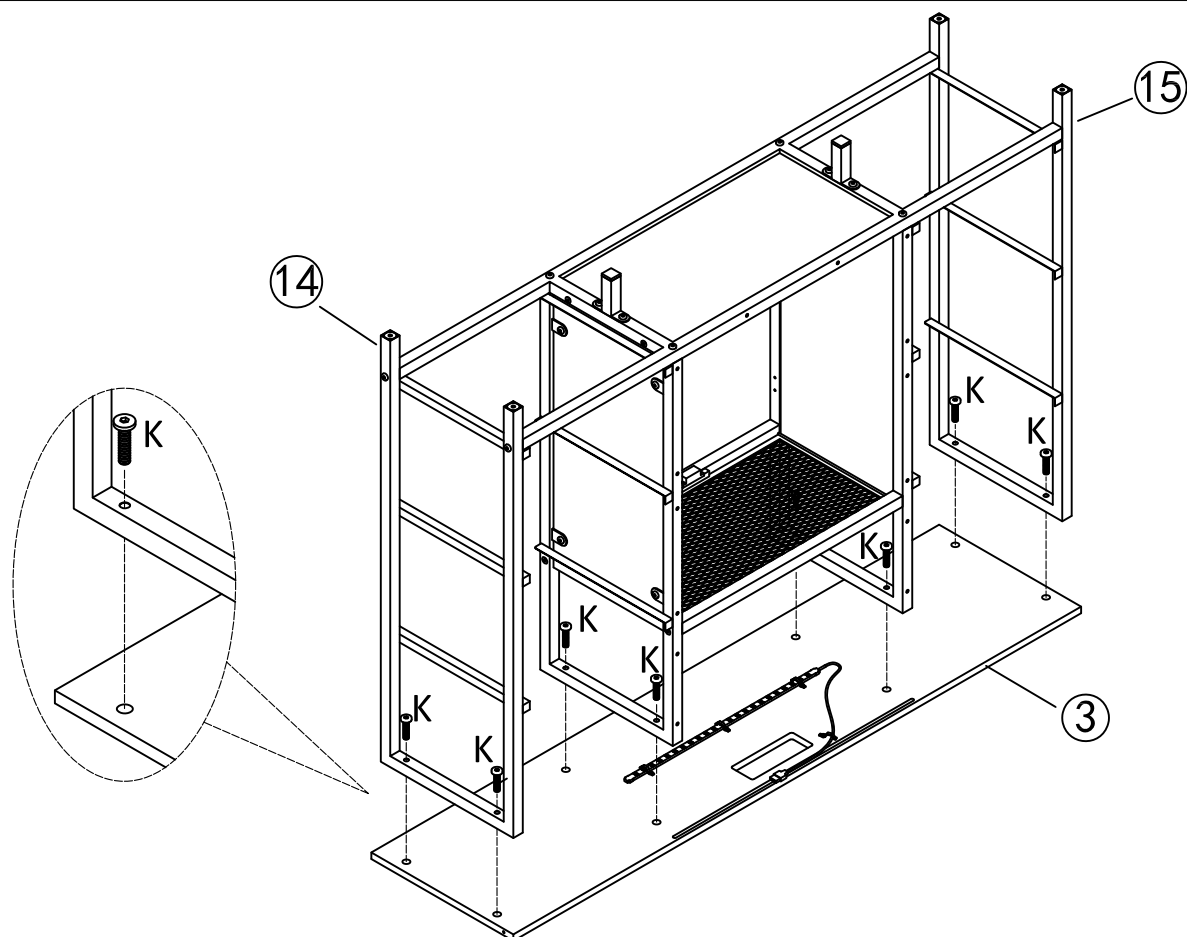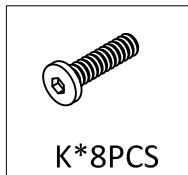



Attach step 9 and step 10 together and tighten with screw K

STEP 12

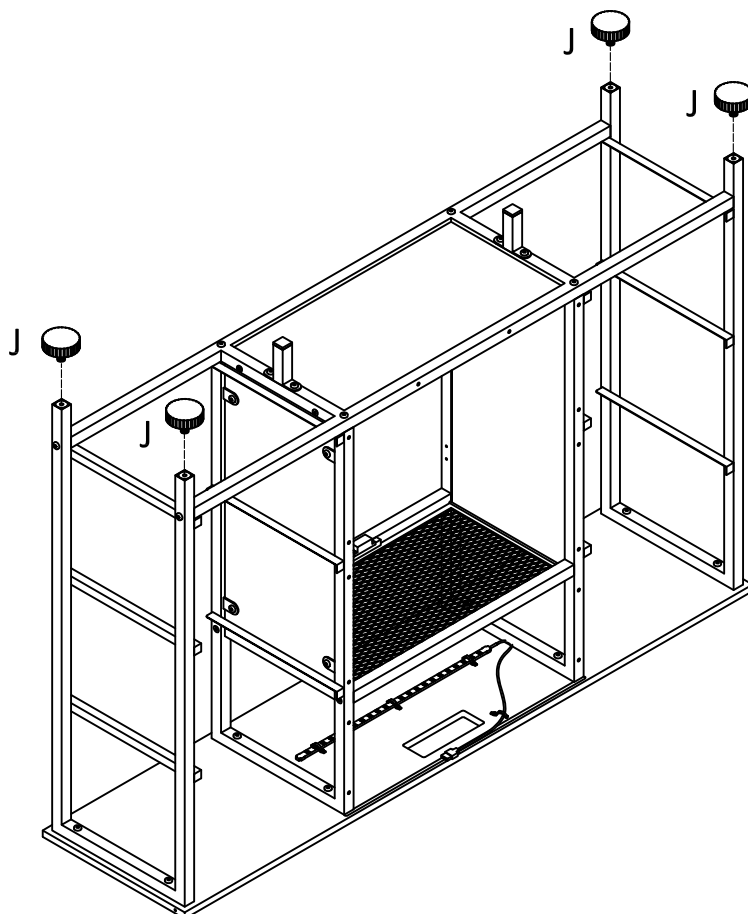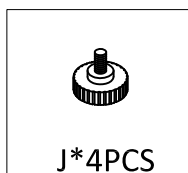



Attach the adjusting foot J in step 11

STEP 13

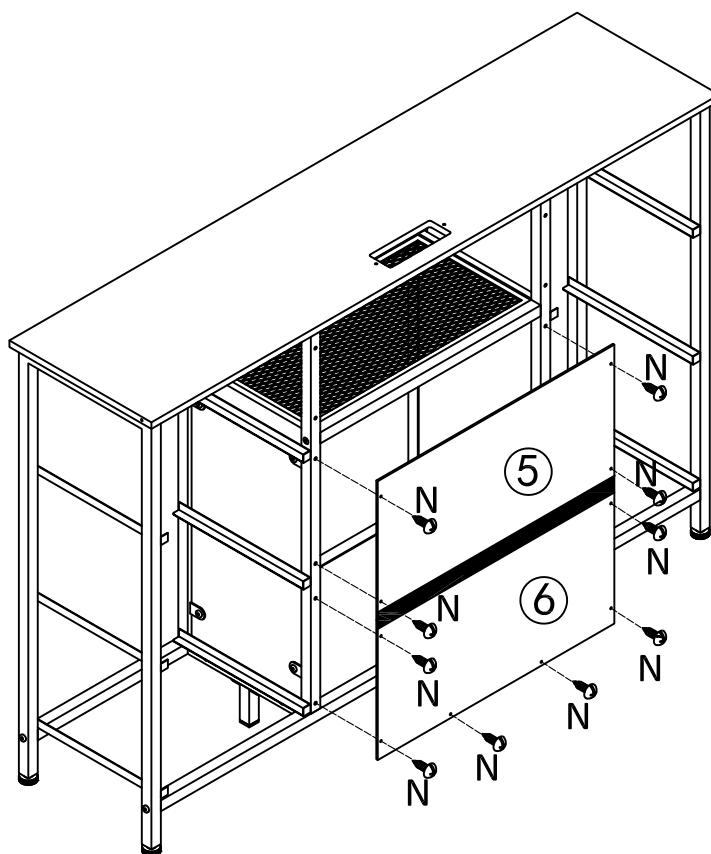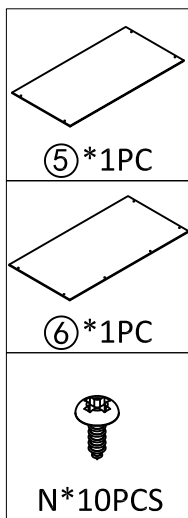



Attach the glued ⑤ and ⑥ plates to step 12 and tighten with screws N

STEP 14

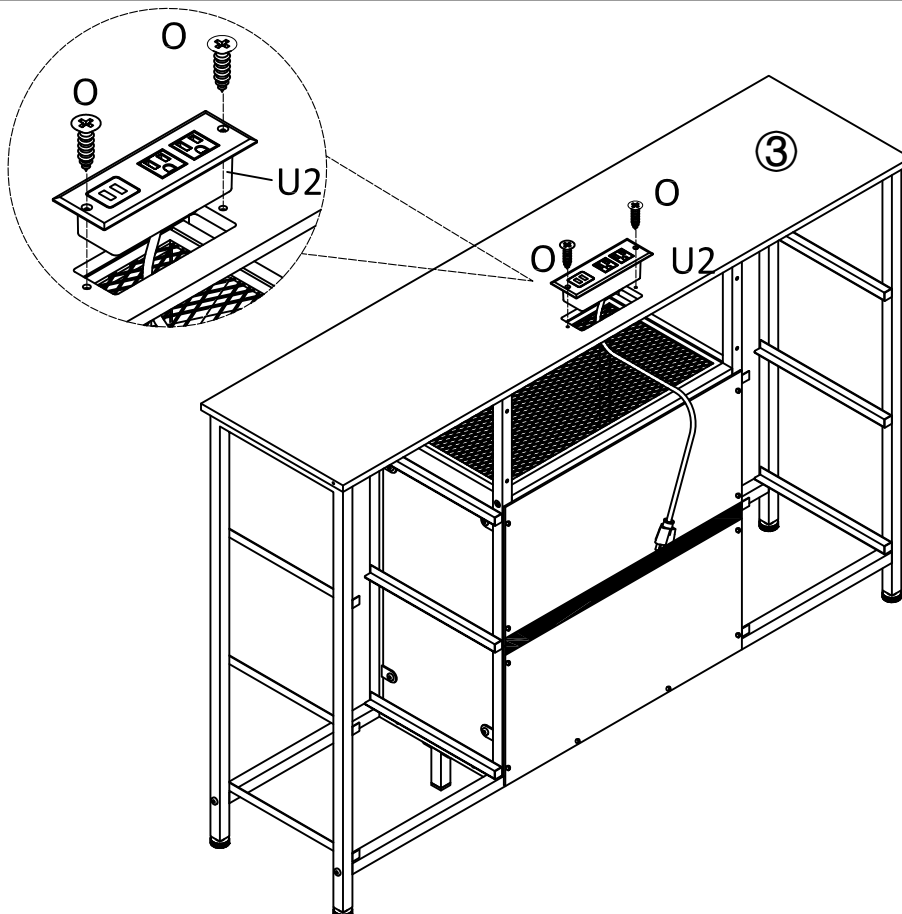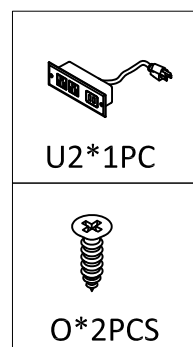



Put the socket U2 into the ③ plate and tighten it with screw O.

STEP 15

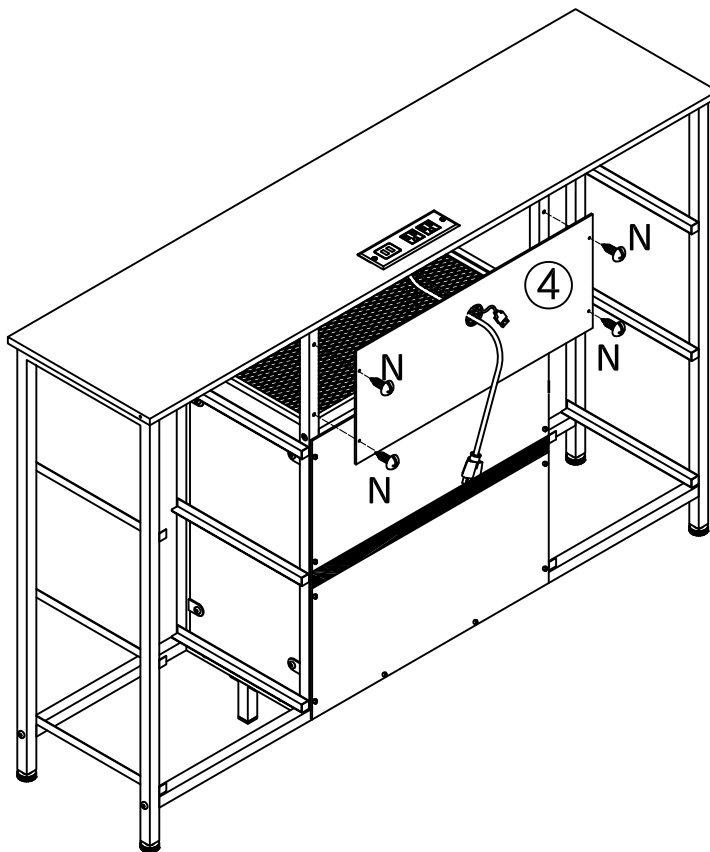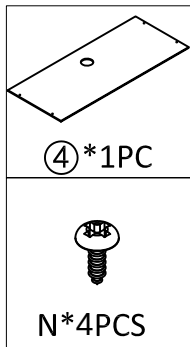


Attach plate ④ to step 14 and tighten with screws N

STEP 16

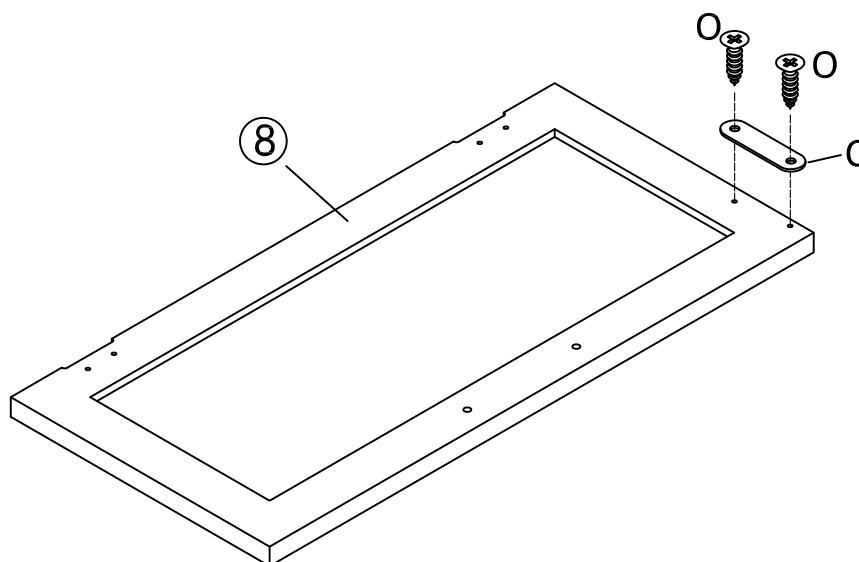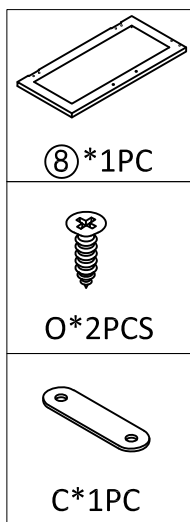

Attach iron plate C to plate ⑧ and tighten with screws O


STEP 17

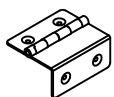

A*2PCS




O*4PCS

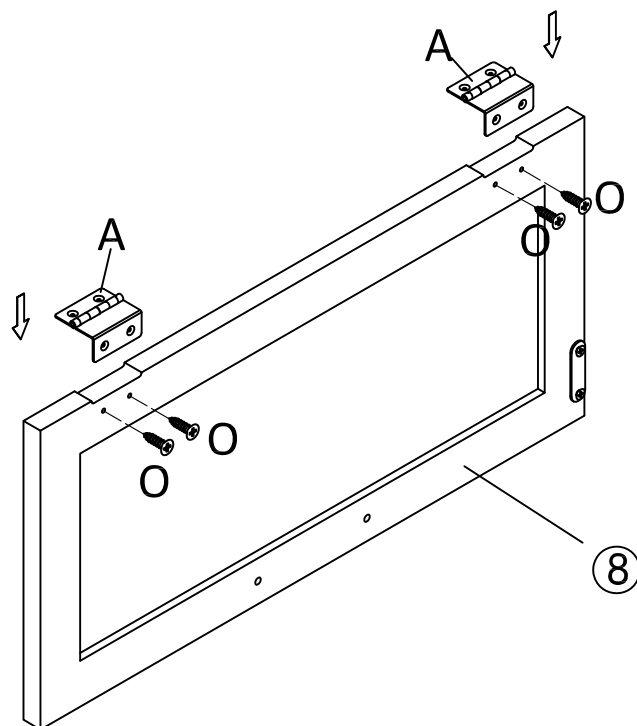

Attach hinge A to plate ⑧ and tighten with screws O.


STEP 18

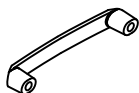

P*1PC





I*2PCS

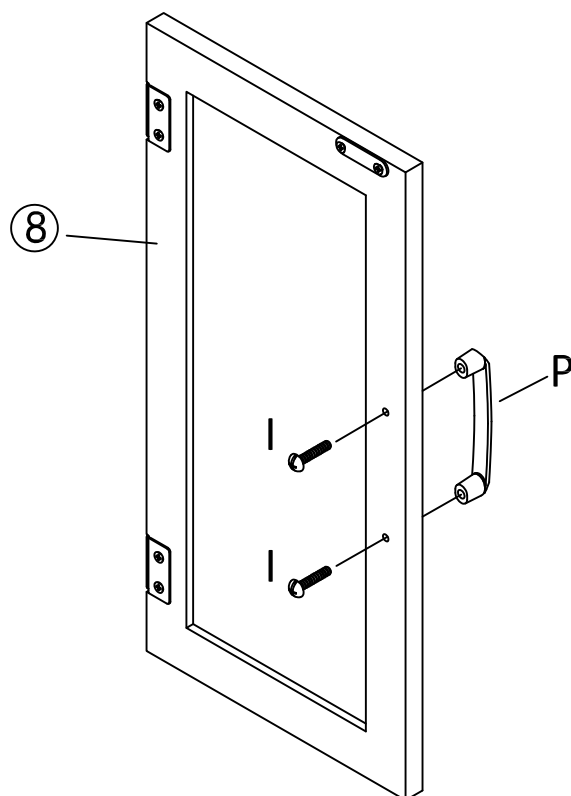


Attach door handle P to plate ⑧ and tighten with screw I.

STEP 19

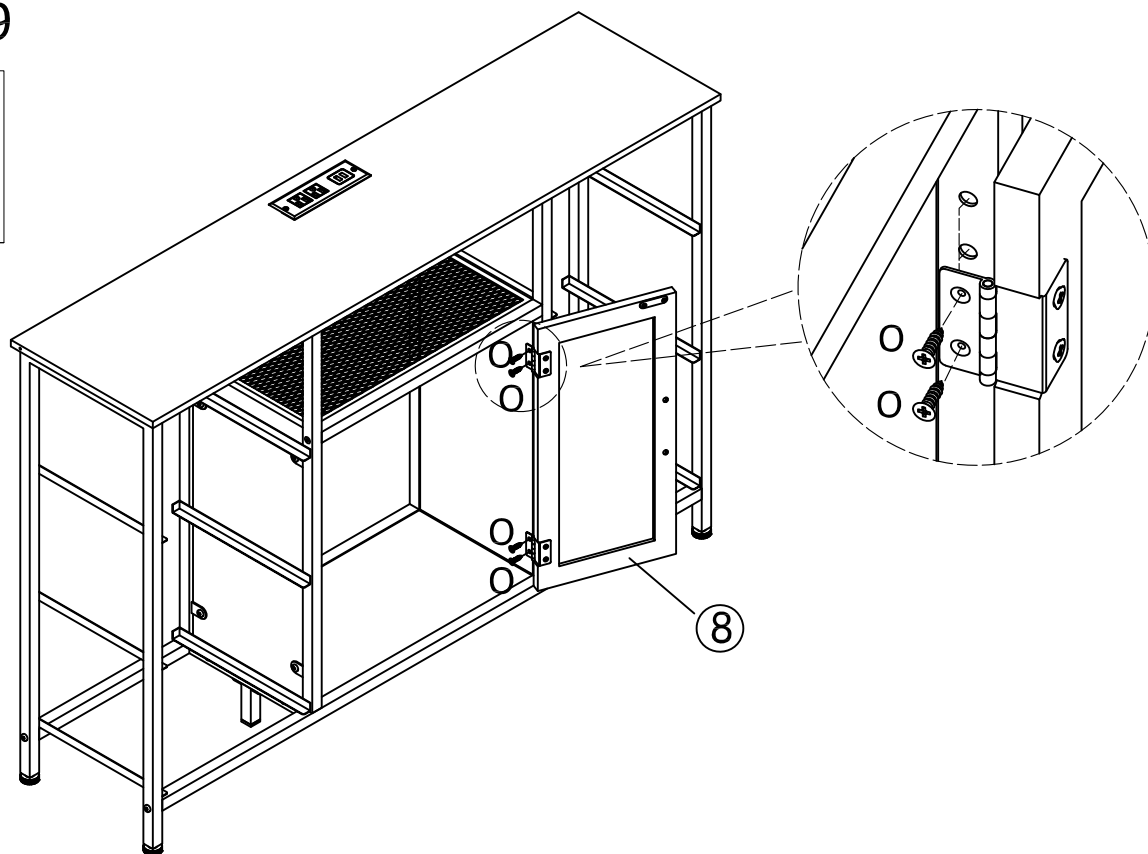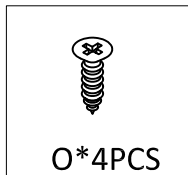

Attach the ⑧ door plate to the iron frame and tighten it with screws O.


STEP 20

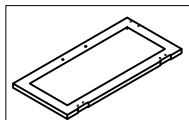


⑦*1PC



O*2PCS

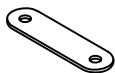


C*1PC

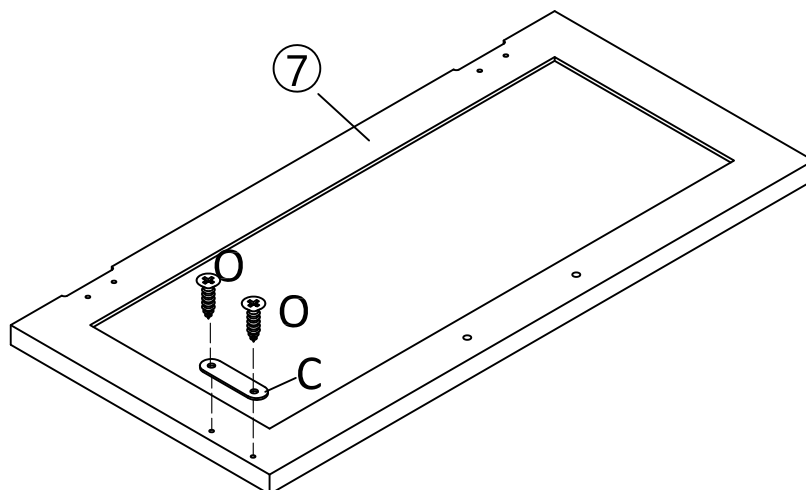

Attach iron plate C to plate ⑦ and tighten with screws O


STEP 21

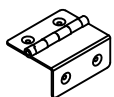

A*2PCS




O*4PCS

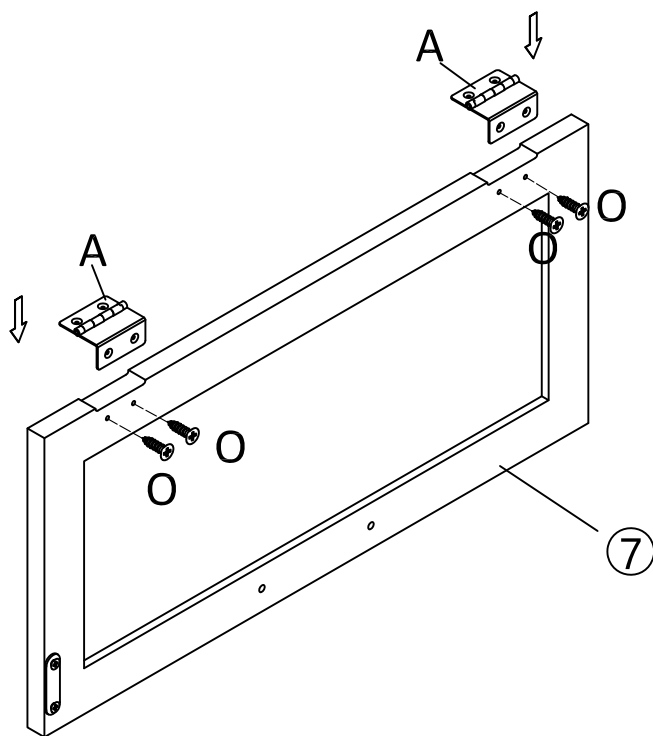

Attach hinge A to plate ⑦ and tighten with screws O.


STEP 22

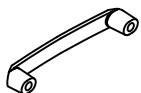

P*1PC






I*2PCS

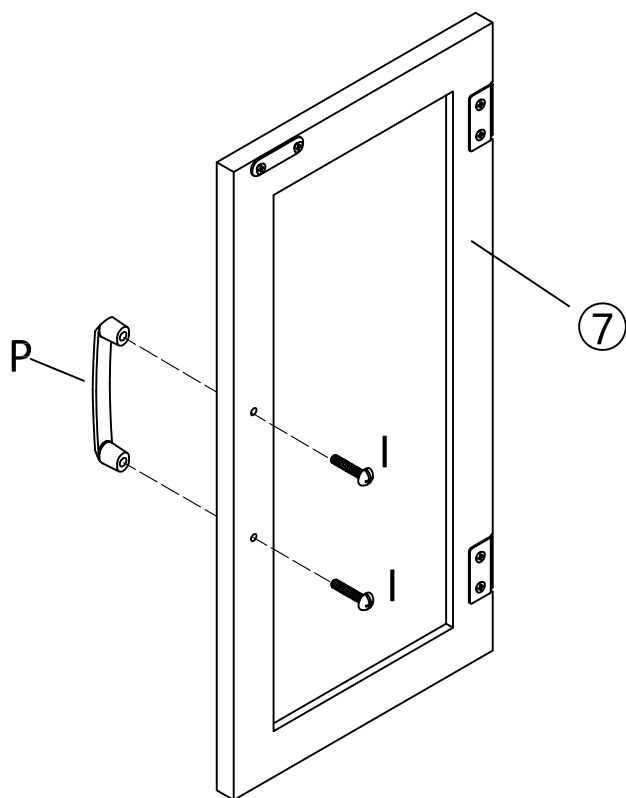




Attach door handle P to plate ⑦ and tighten with screw I.

STEP 23

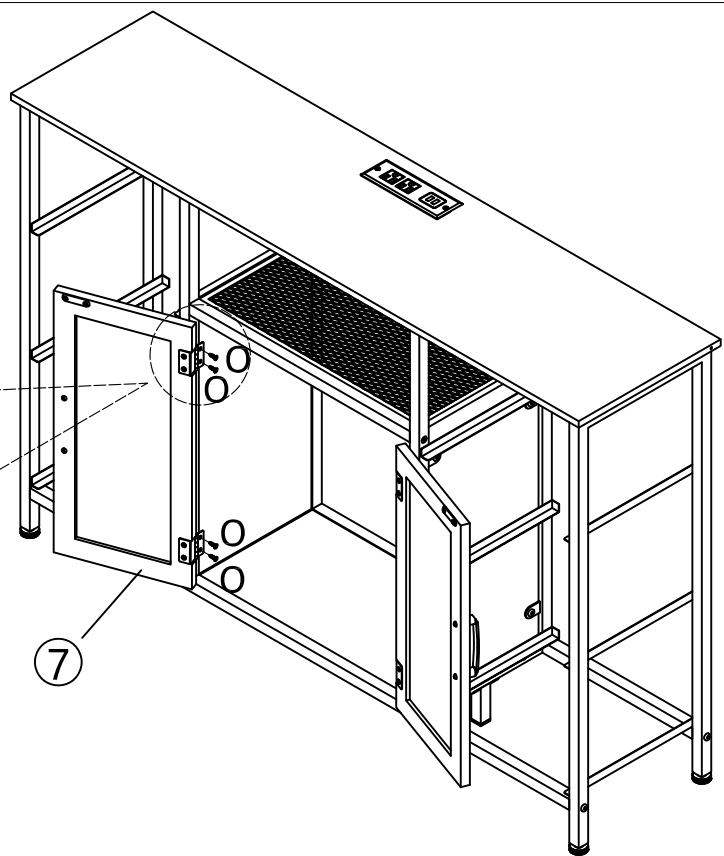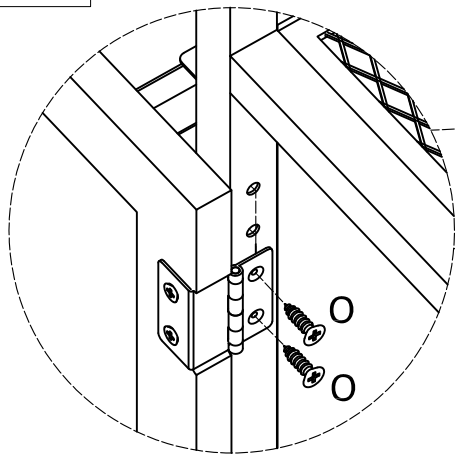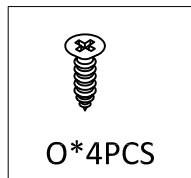



Attach the ⑦ door plate to the iron frame and tighten it with screws O.

STEP 24

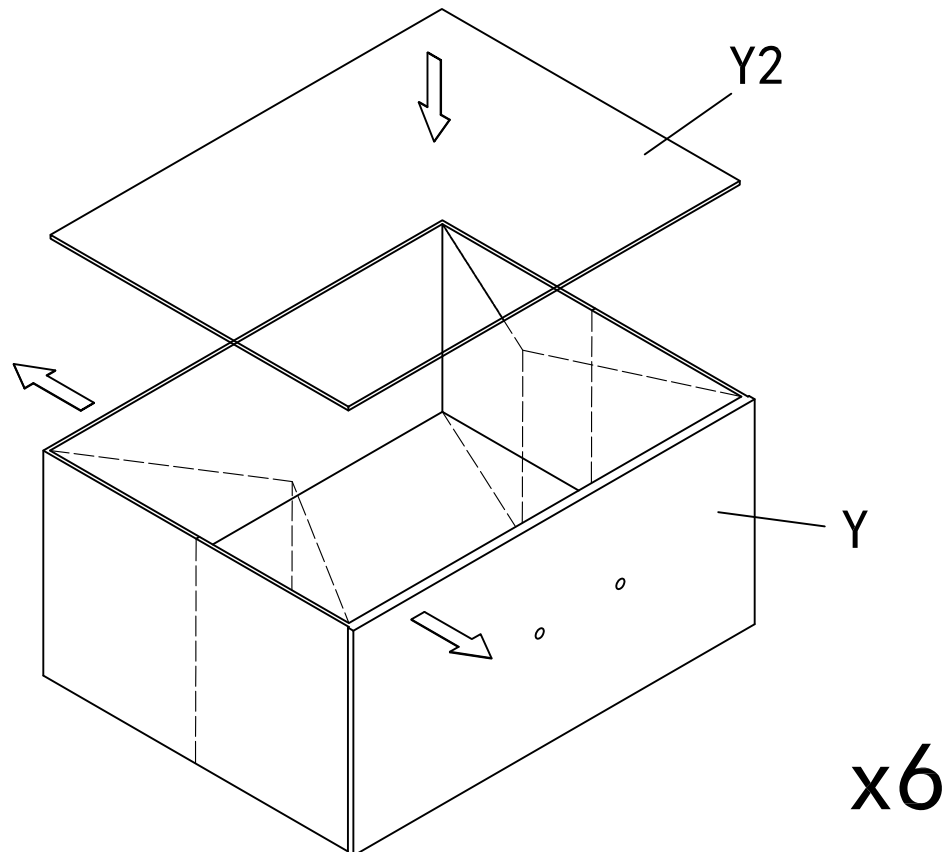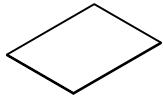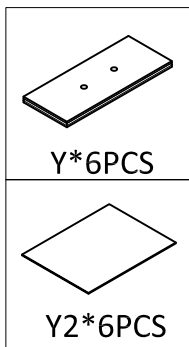

Open the fabric drawer Y and put in the base plate Y2


STEP 25

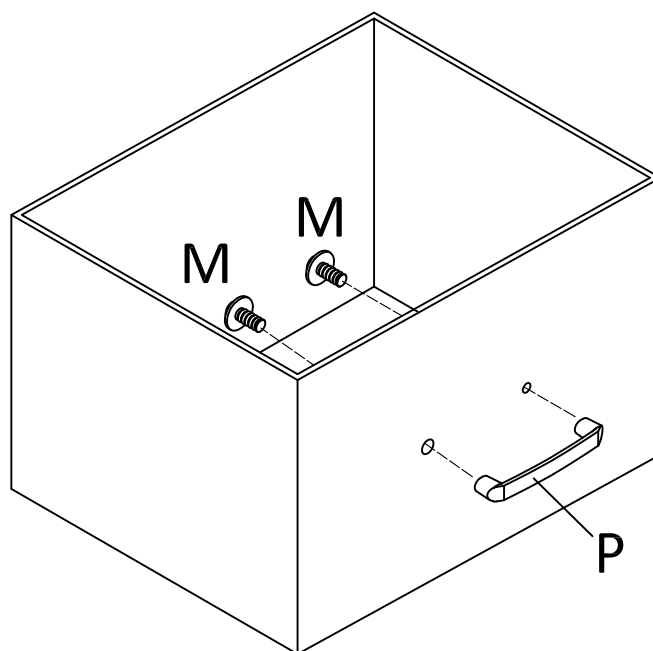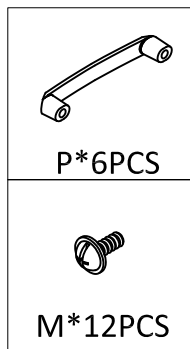

x6



Attach the drawer handle P to the fabric drawer Y and tighten with screw M

STEP 26

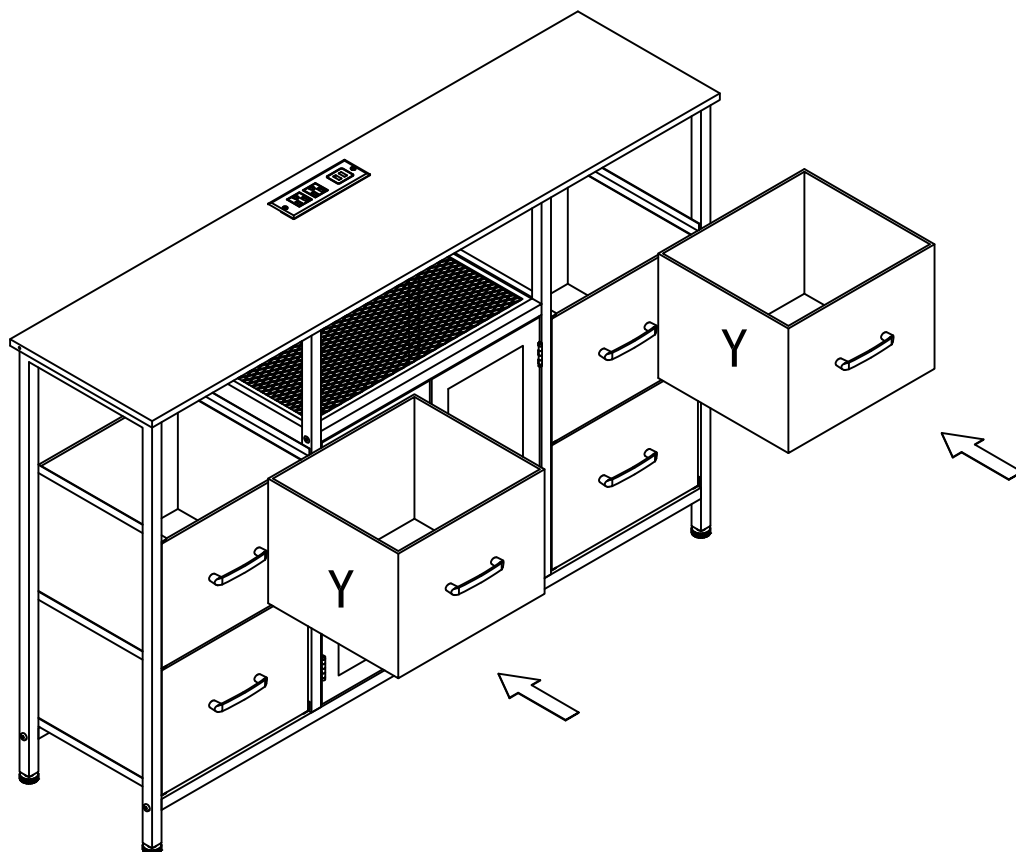



Place the drawer Y on the chest of drawers

STEP 27

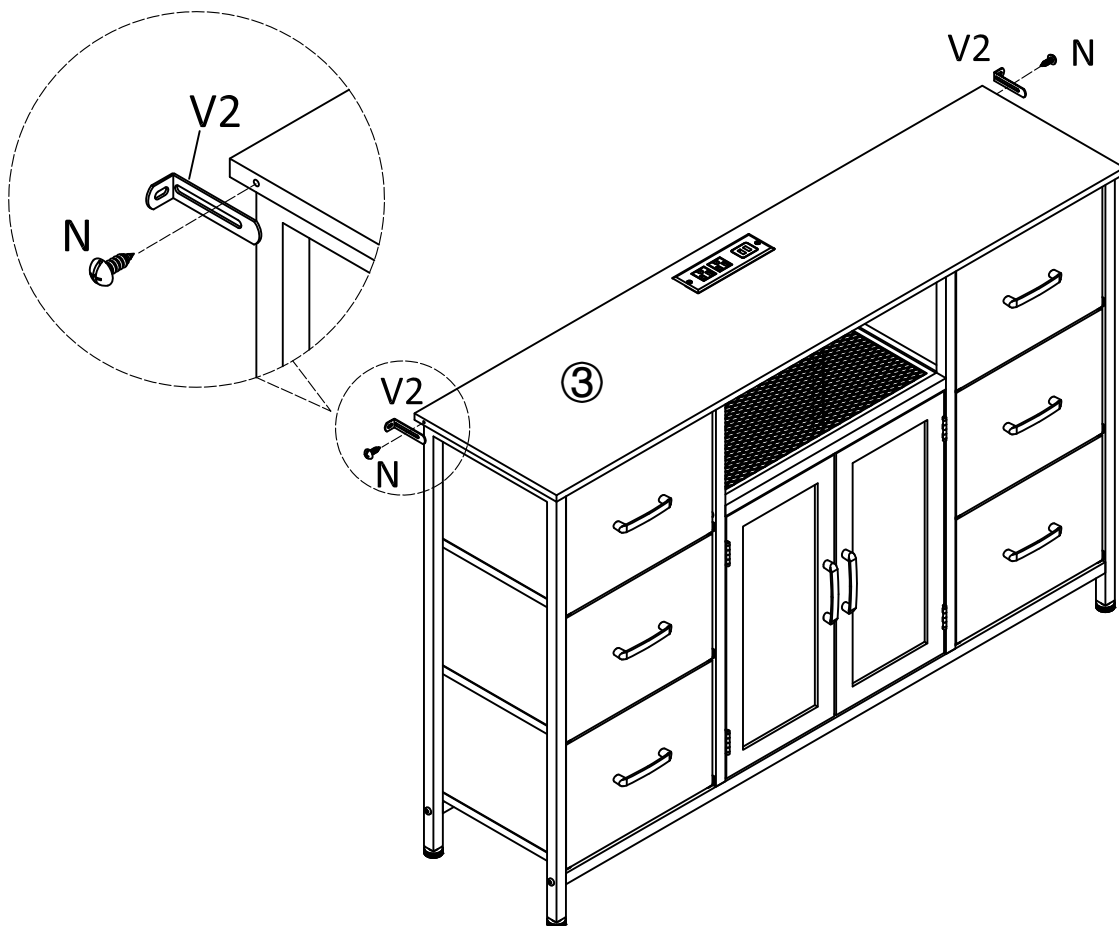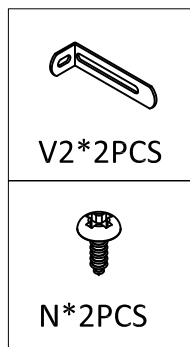

Attach anti-tipping part V2 to both sides of plate ③ and tighten with screws N.

STEP 28

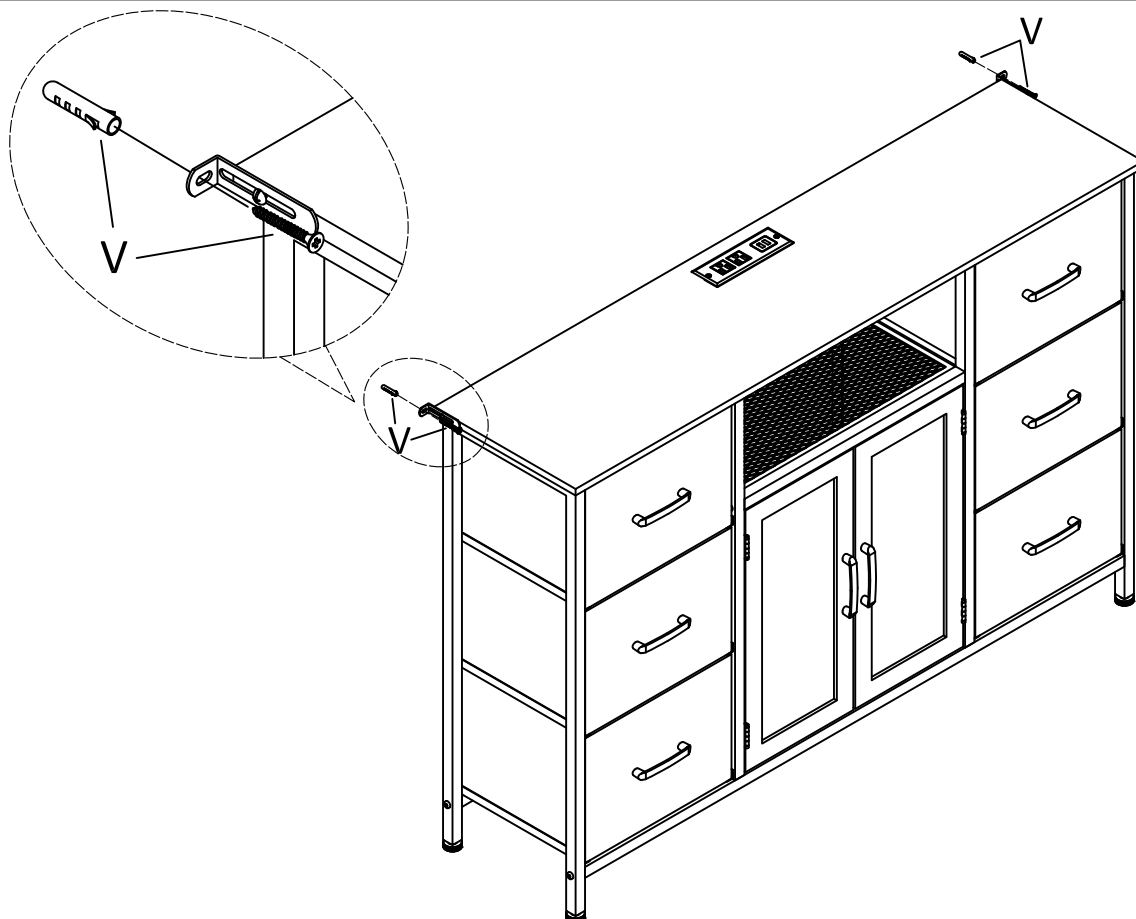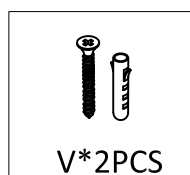

Secure the drawer to the wall and tighten it with expanding adhesive pellets and screws V