


ASSEMBLY INSTRUCTIONS

DGWD-V1


FTLFST-6040

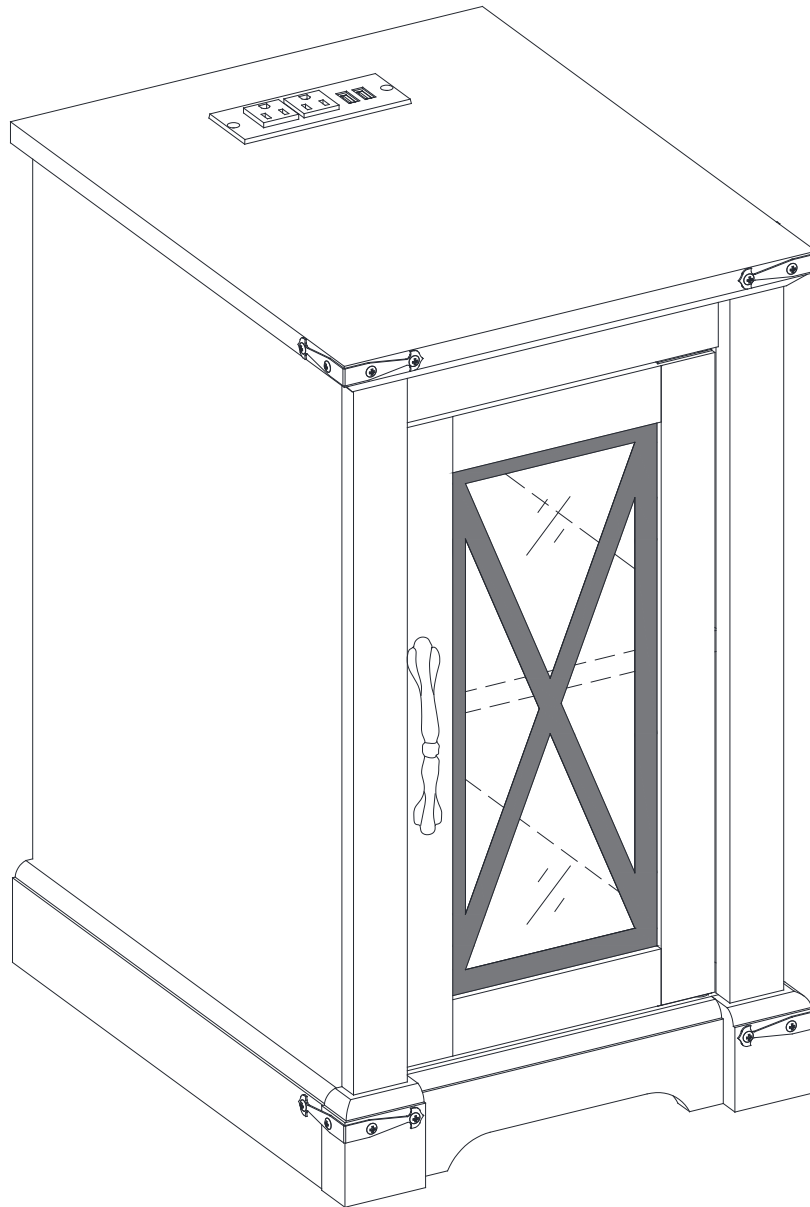


SIDE TABLE


Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

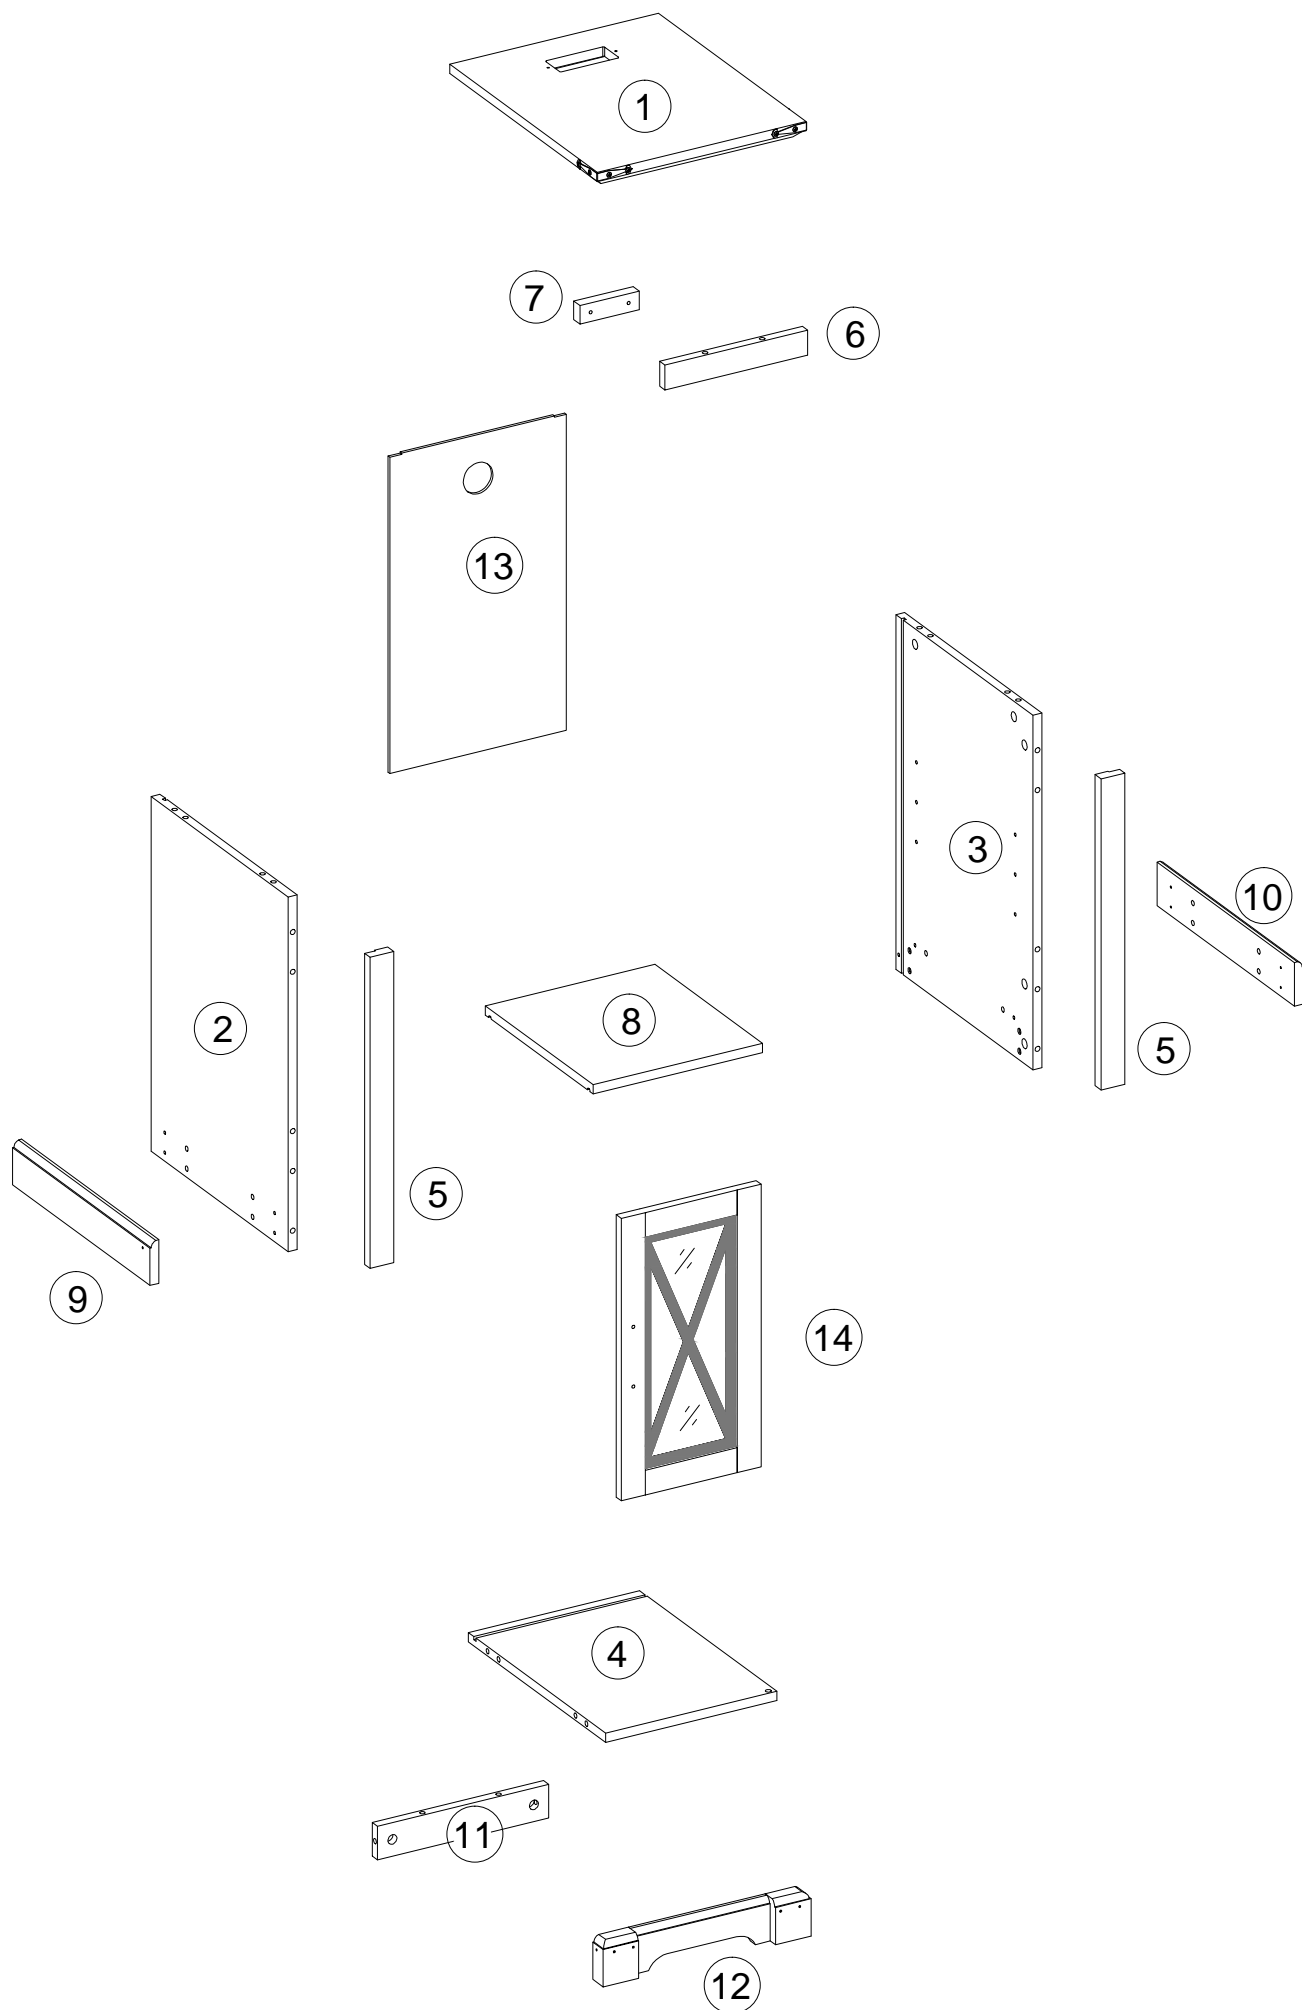





① x1

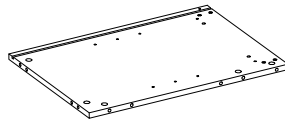

② x1

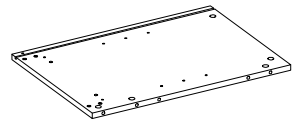

③ x1



④ x1




⑤ x2



⑥ x1



⑦ x1



⑧ x1




⑨ x1



⑩ x1



⑪ x1








⑫ x1







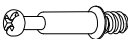





⑬ x1

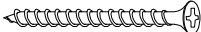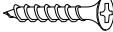





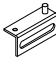


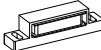


⑭ x1




A	x16	B	x16	C	x16	D	x8	E	x16
									
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø8x20mm		Ø30mm	

F	x2	G	x10	H	x1	I	x2	J	x4
									
Ø4x44mm		Ø4x25mm		M4x57mm		M6x12mm		Ø5x16mm	

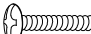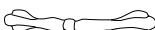
K	x2	L	x1	M	x1	N	x1	O	x1
									
Ø12x8mm		40x15.5mm		40x15.5mm		30x22mm			

P	x2	Q	x9	R	x2	S	x1	T	x4
									
Ø3x15mm		Ø3x12mm				58x20x20mm			


U	x4	V	x2	W	x1	Y	x1	Z	x8
									
Ø3x17mm		Ø4x19mm						Ø3.5x12mm	

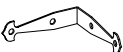AA	x1	BB	x2	CC	x2
					
		Ø3.5x12mm		59x59x14mm	


1



① x1



② x1




③ x1











⑤ x2



⑫ x1



A x16

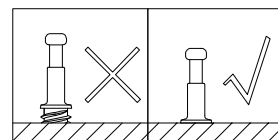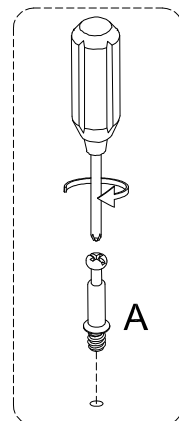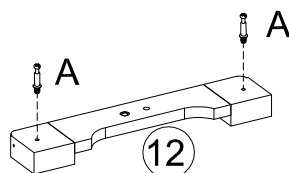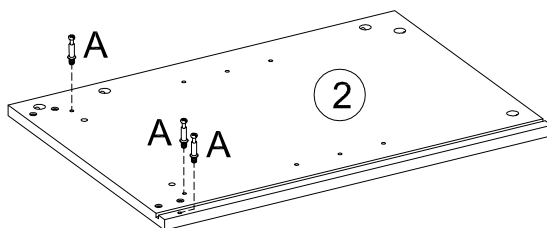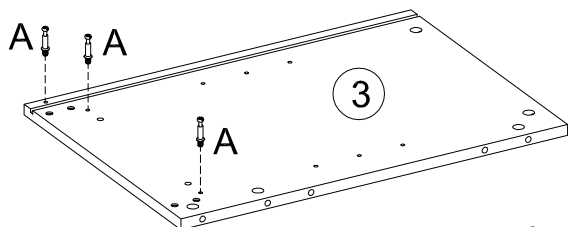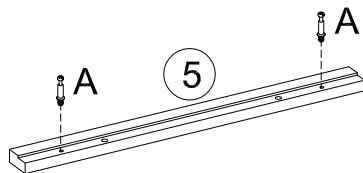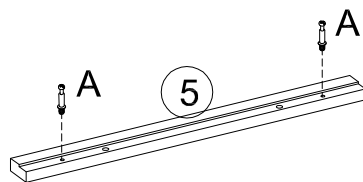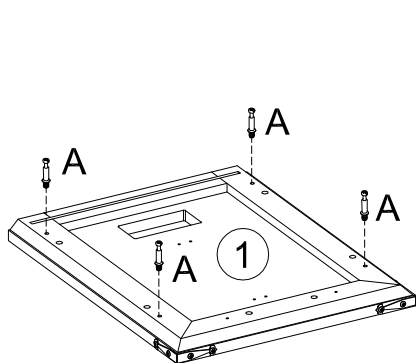

2



⑥ x1





⑦ x1




G x2


Pay attention to the orientation of the hole.

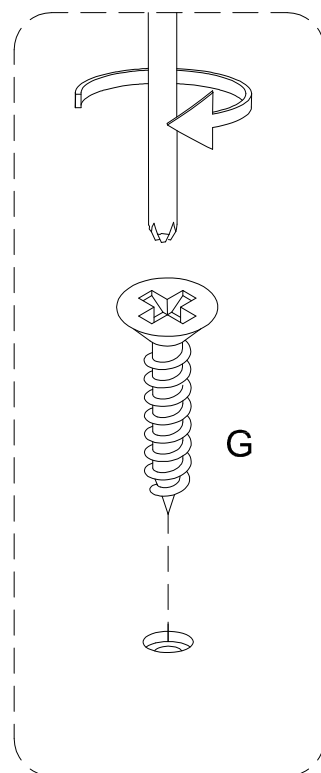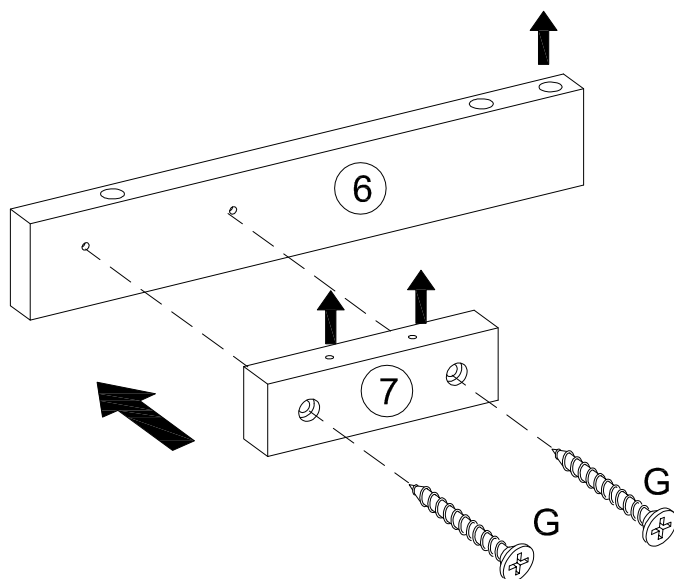

3



① x1



⑥ x1





① C x2




① F x2

Please pay attention to the installation direction of ⑦.

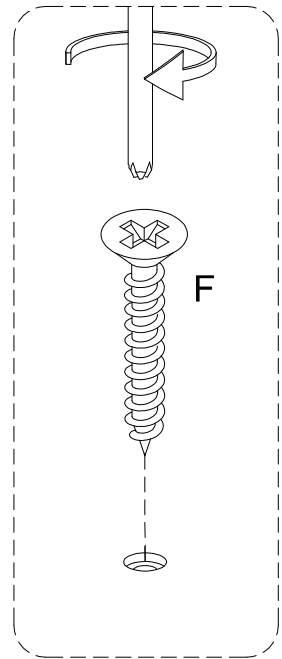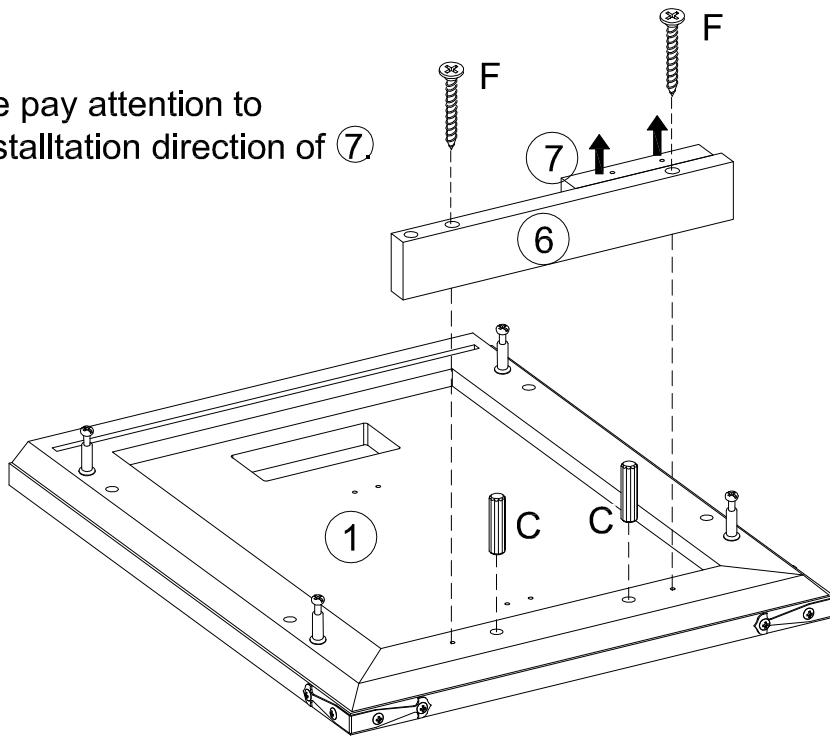



4



① O x1




① P x2

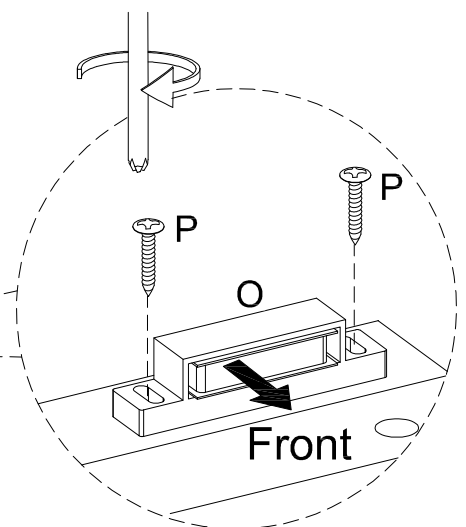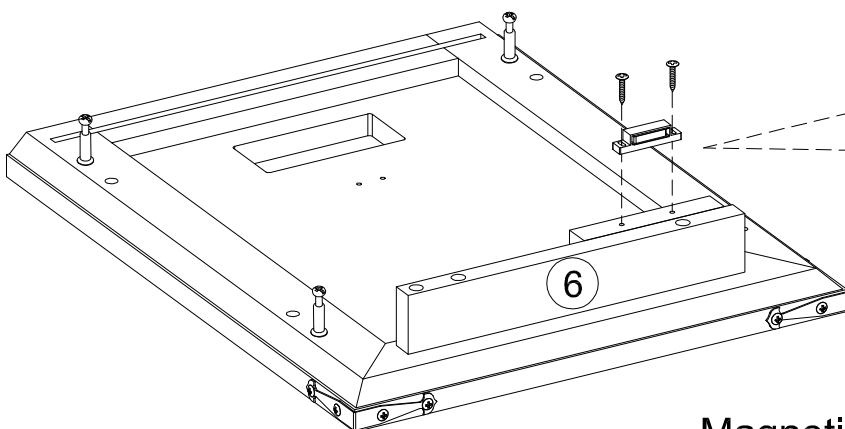


Magnetic catch should face outwards.





5

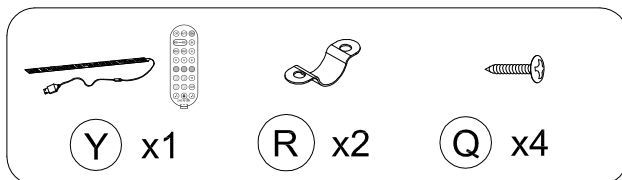

Remove the tape




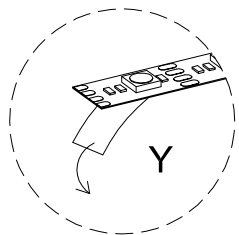


Press

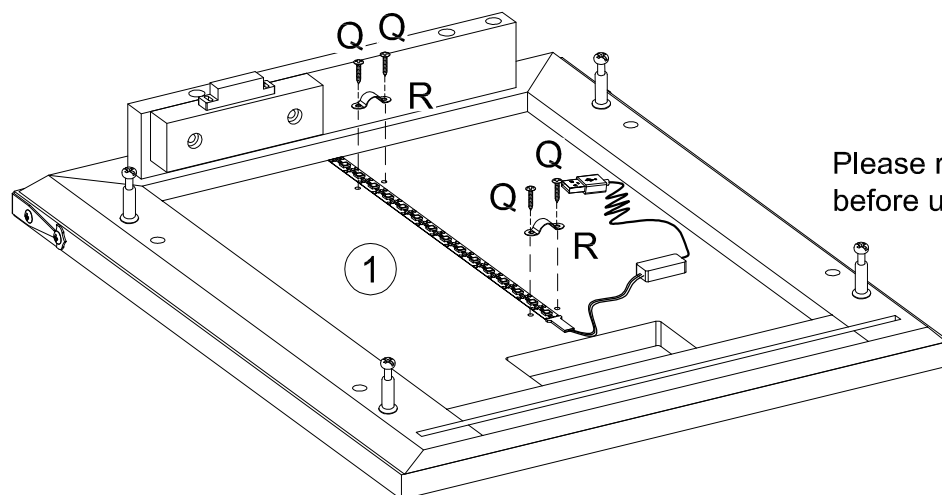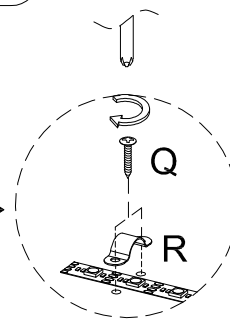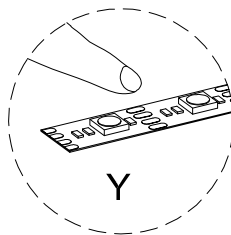


Please remove the plastic film here before using the remote control.

6

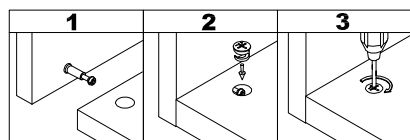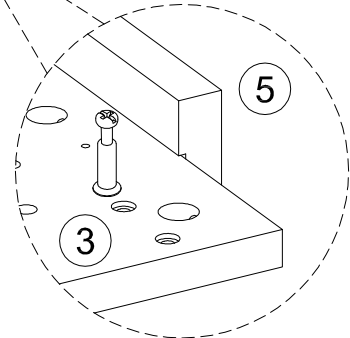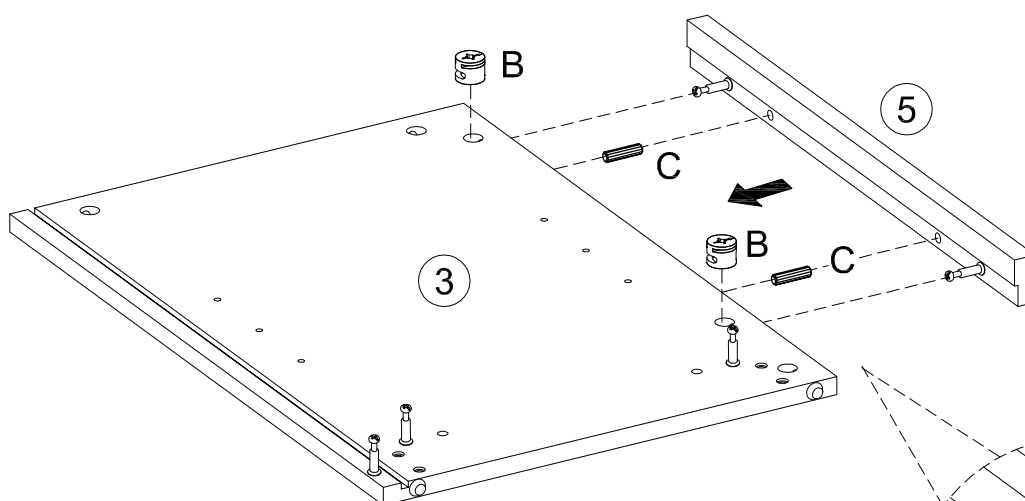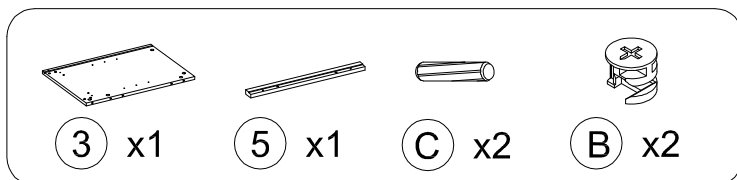

7



② x1




⑤ x1



③ C x2



③ B x2

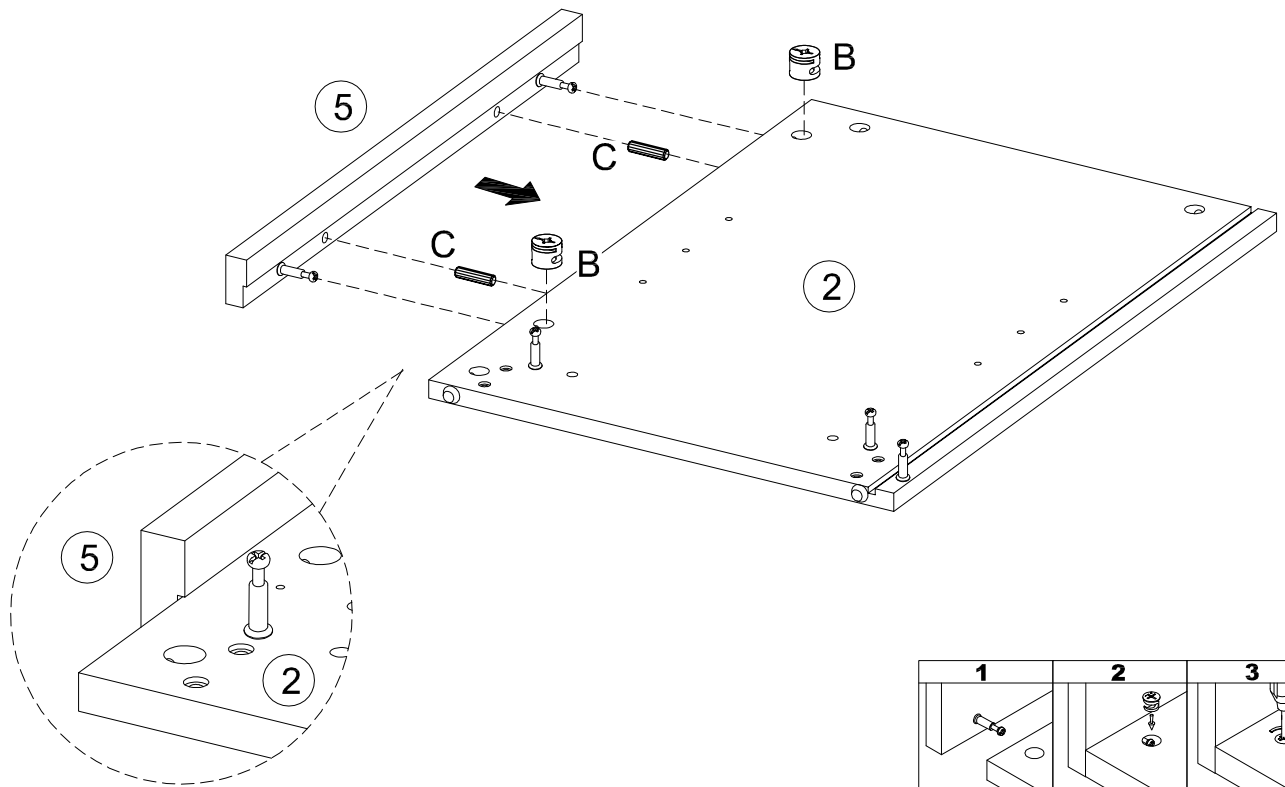

8




⑩ x1



③ D x4






③ G x4

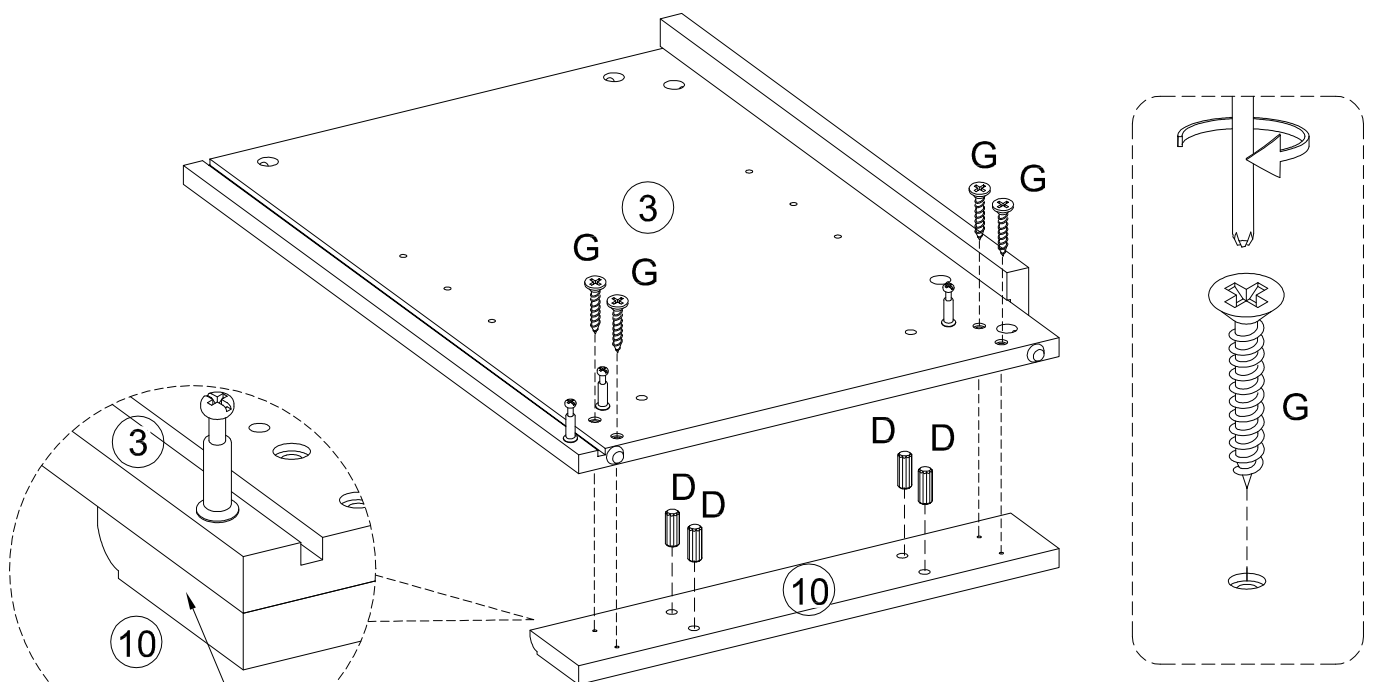

Finished edge



The curved side should match the direction in the diagram.

9

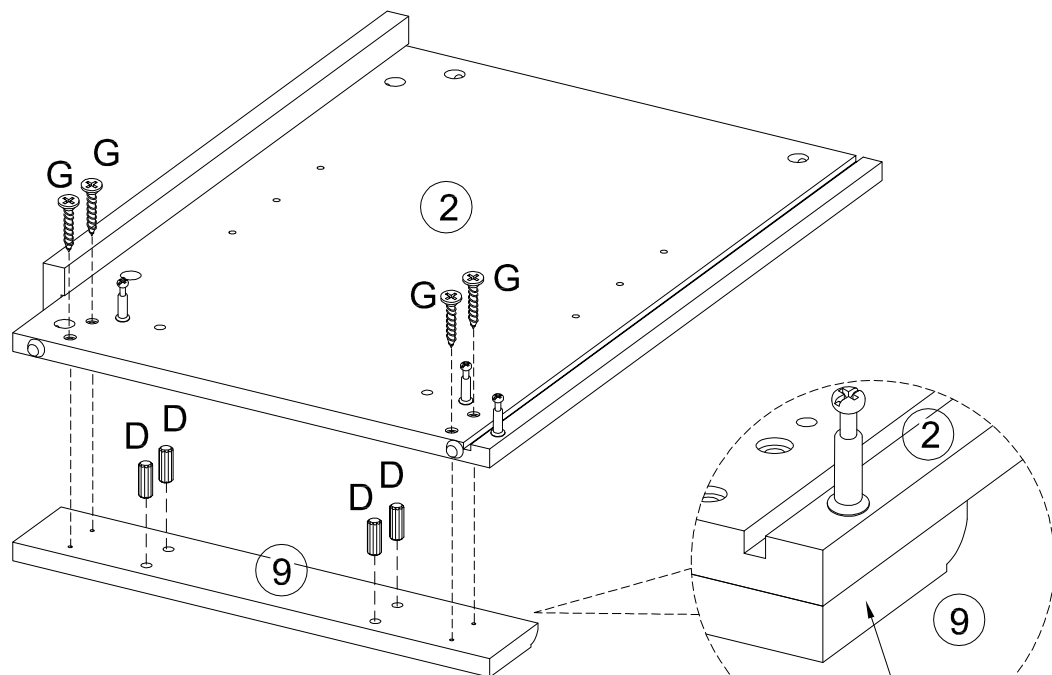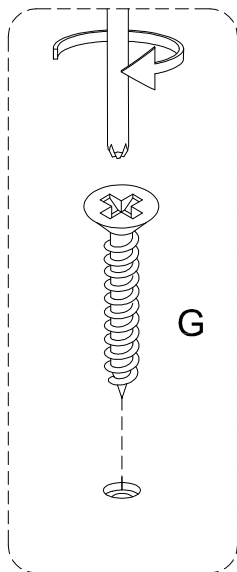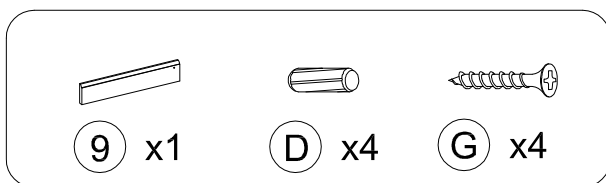

The curved side should match the direction in the diagram.

10

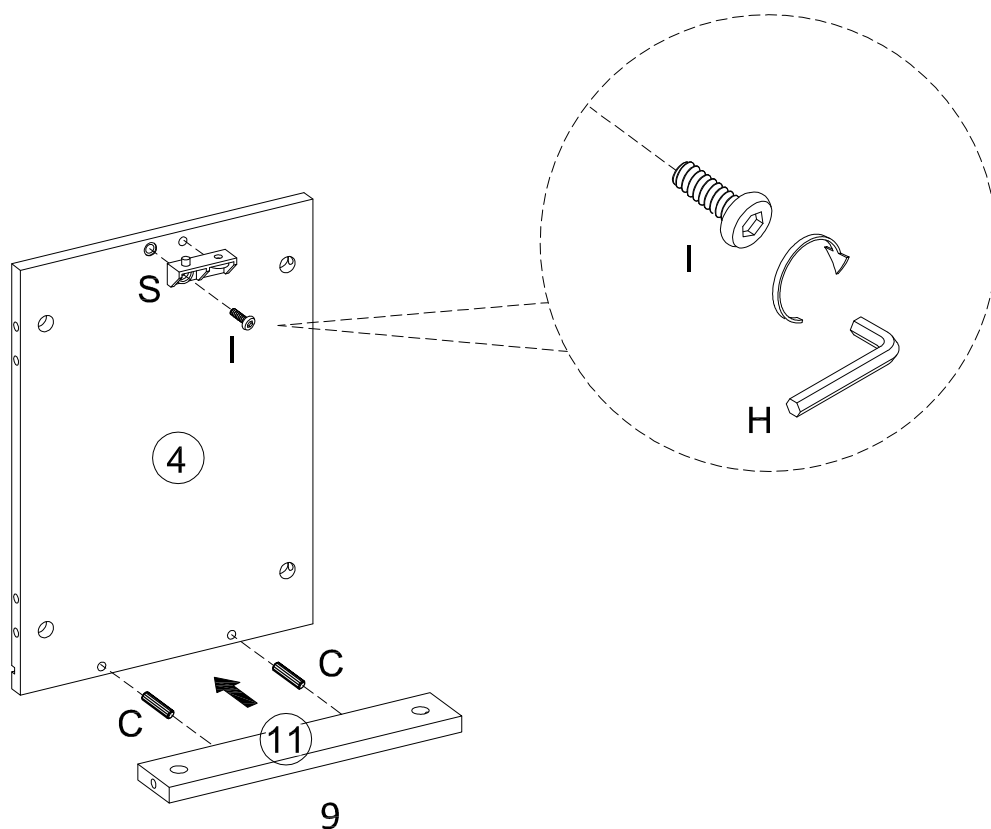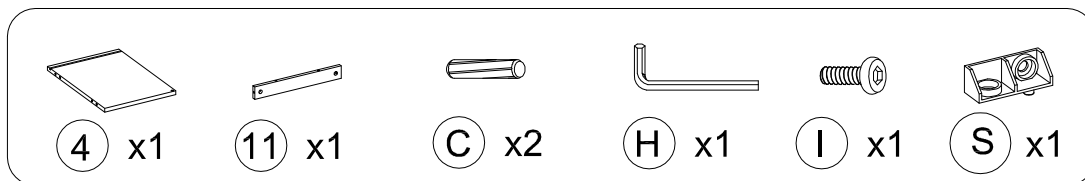



11



(C) x2



(B) x3

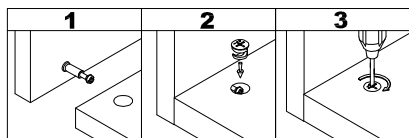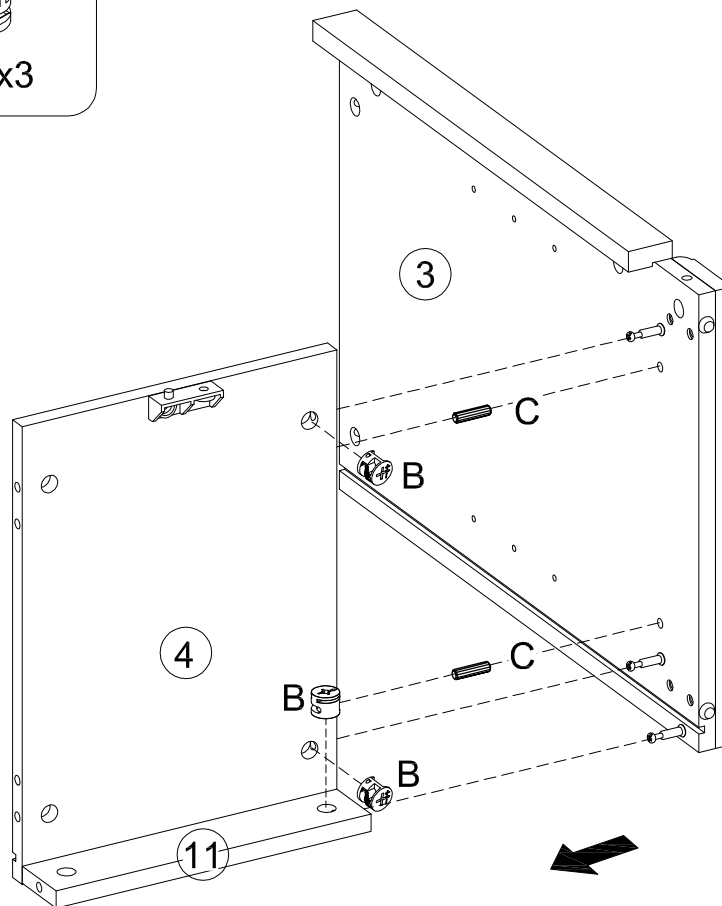



12



(C) x2



(B) x3

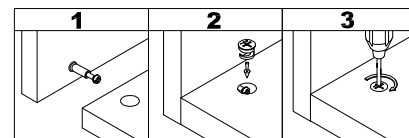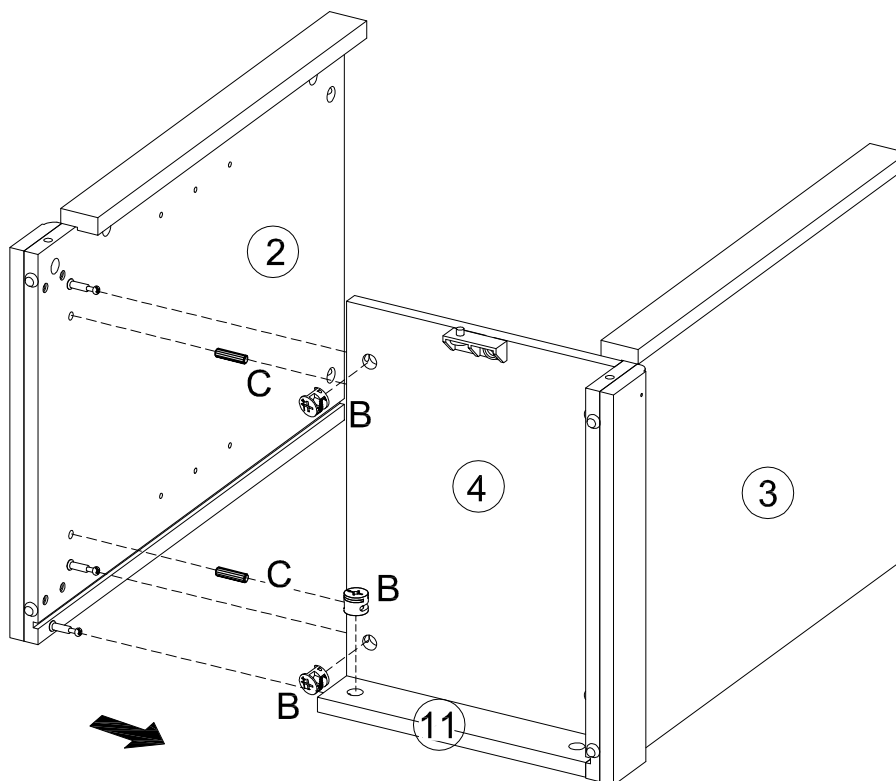

13



(12) x1





(B) x2



(I) x1



(H) x1

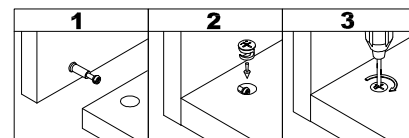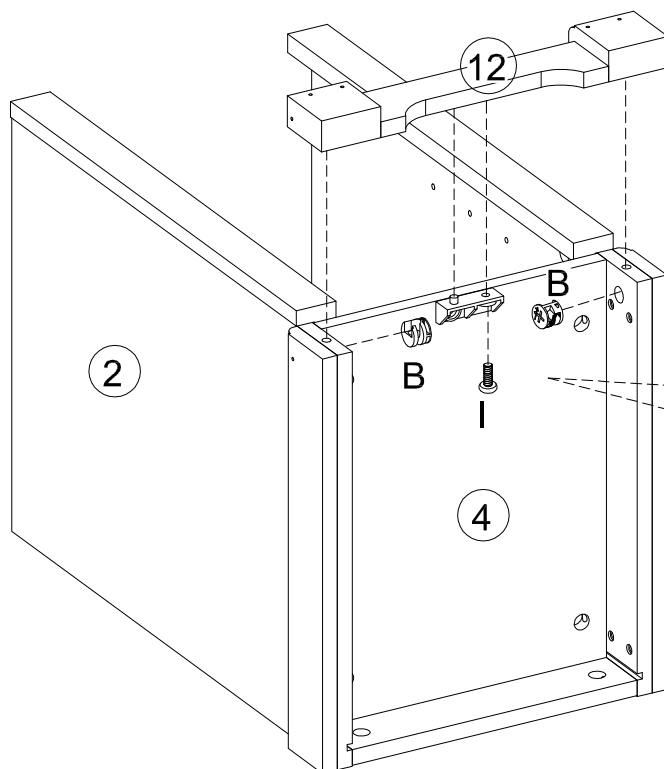



14




(Z) x8




(CC) x2

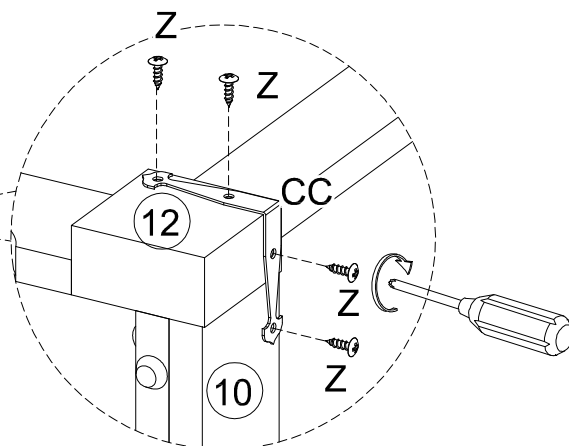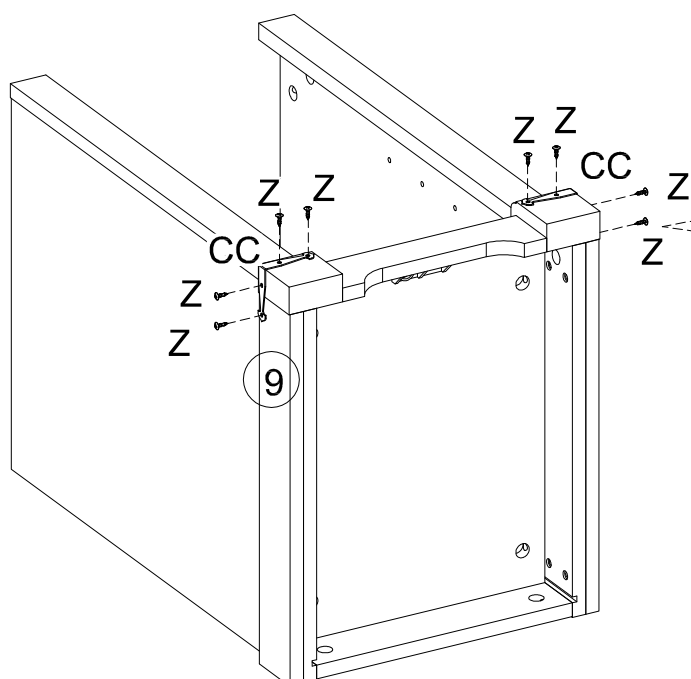



15

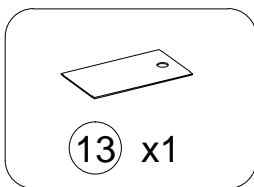

Pay attention to the orientation of the hole.

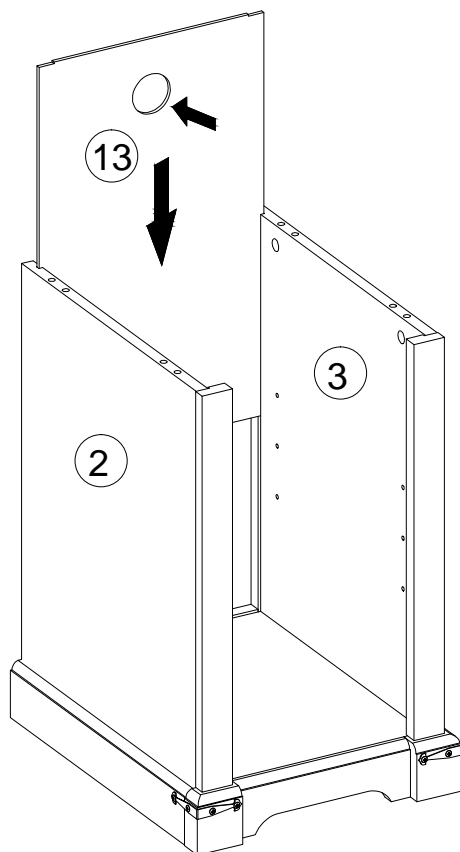

16

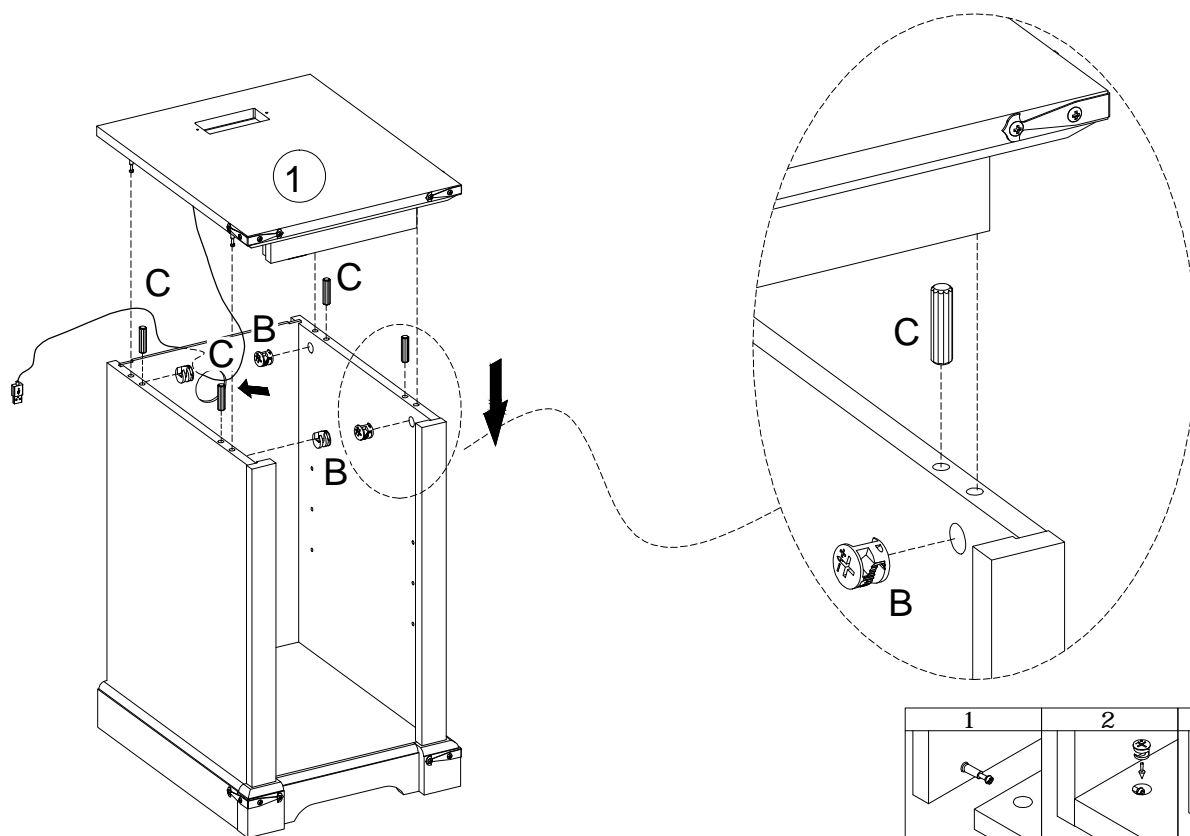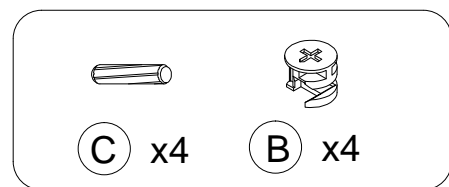





17




(T) x4



(U) x4

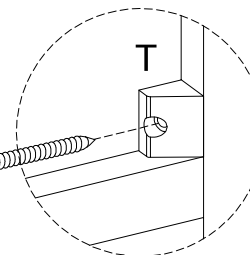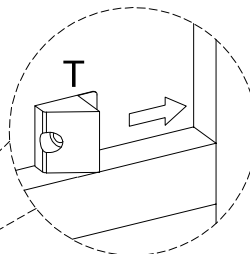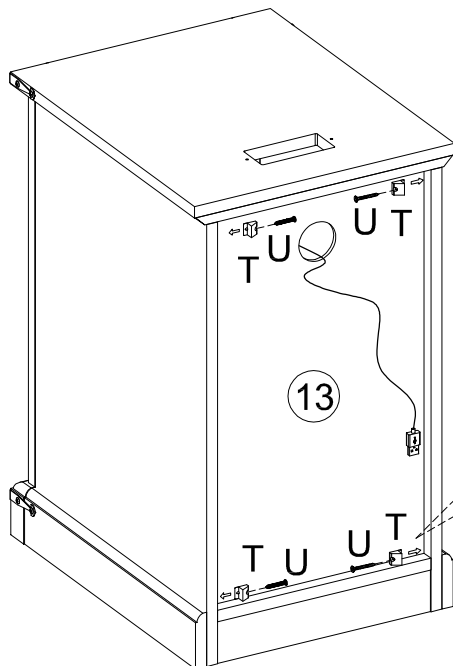




18



(8) x1



(J) x4

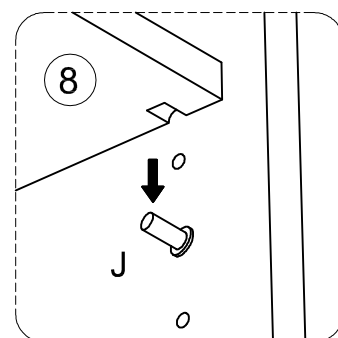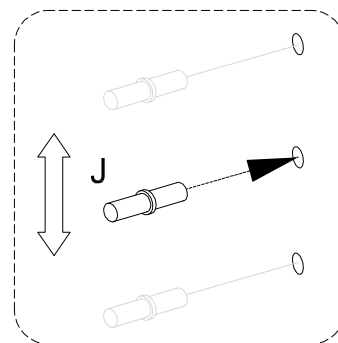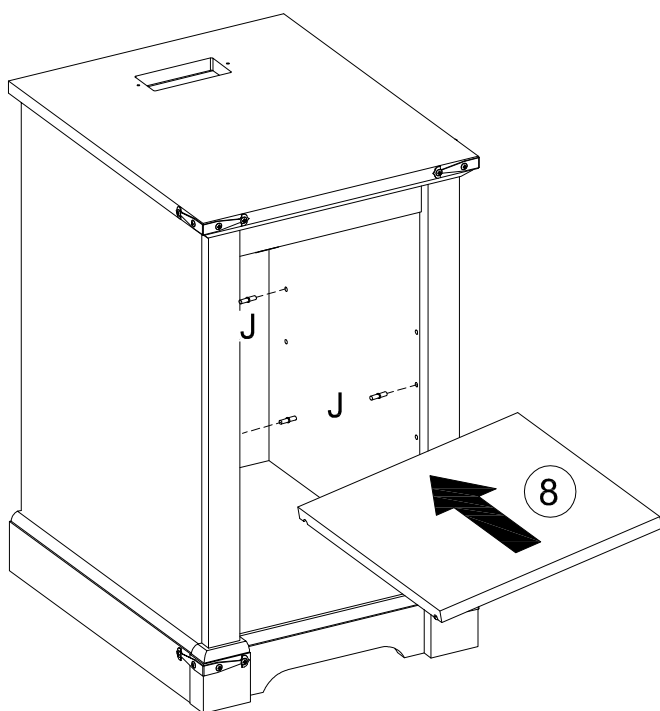

19



14 x1



M x1



N x1




Q x3



V x2




W x1

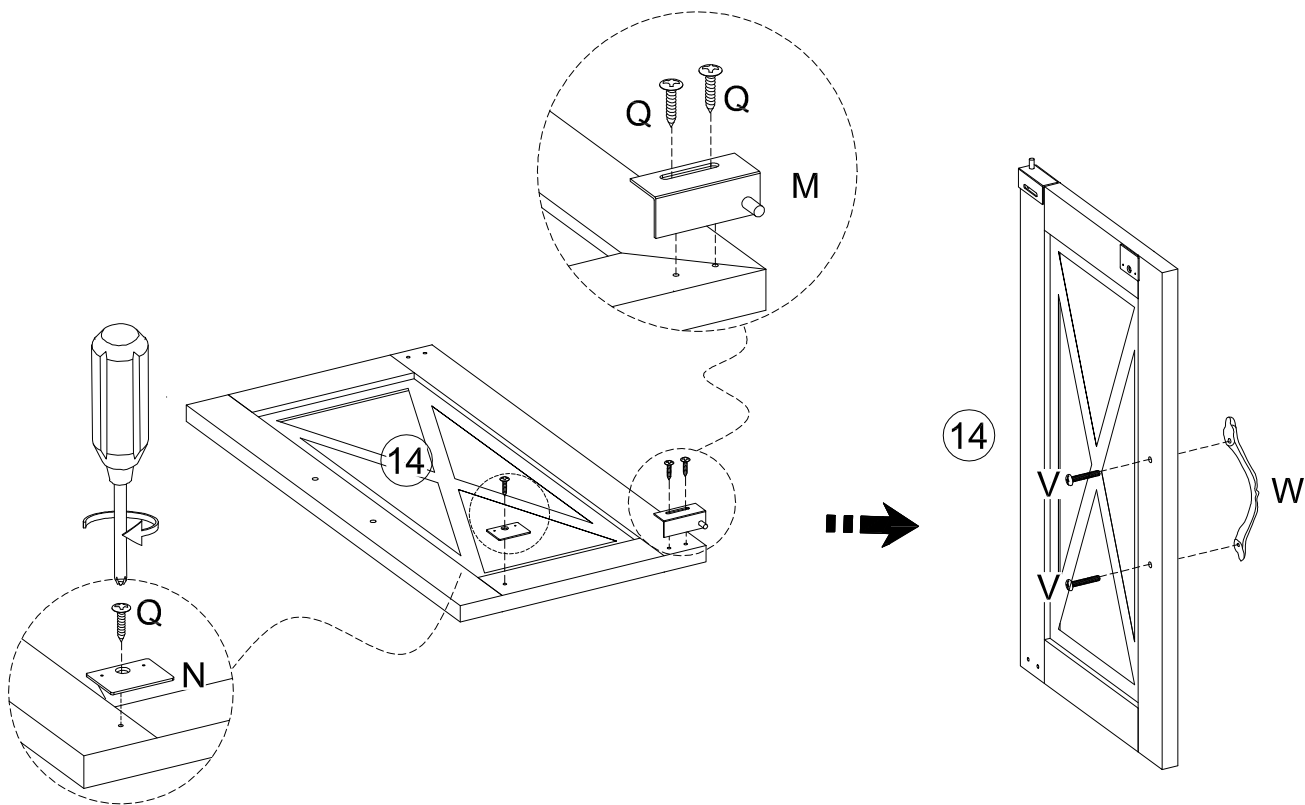

20








K x2

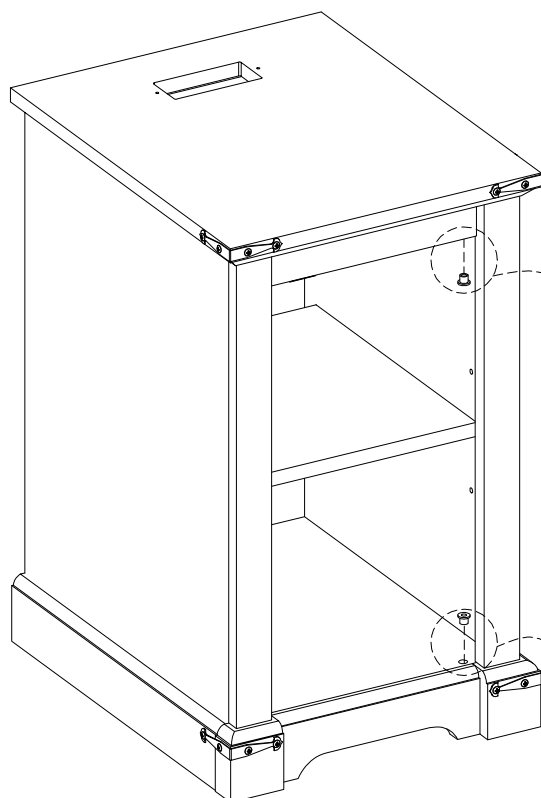



14

21

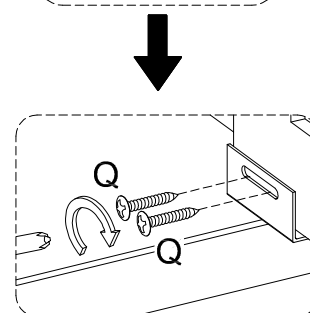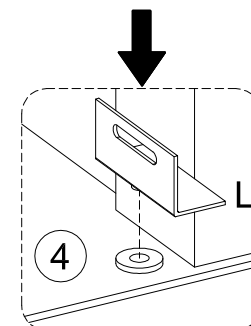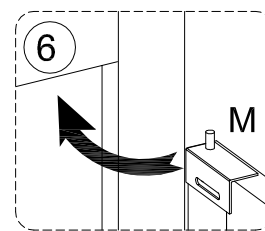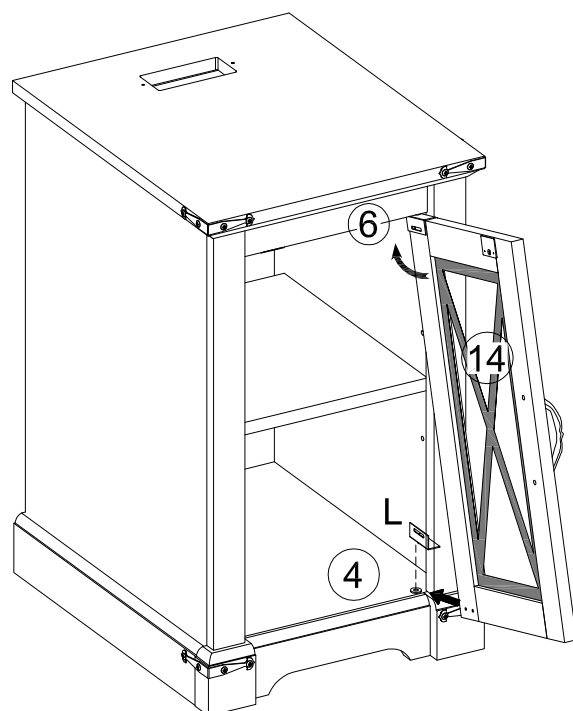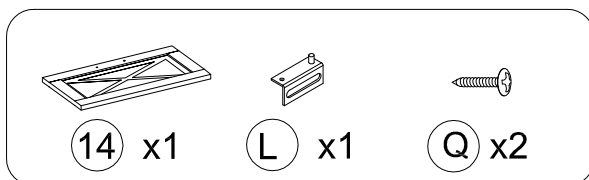


First, attach the upper end of door 14, then secure the lower end. Insert M into the slot, insert L and lock L with Q.

22

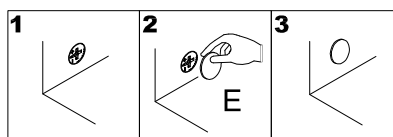
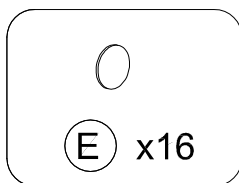


.Stick stickers (E) on cam locks (B).

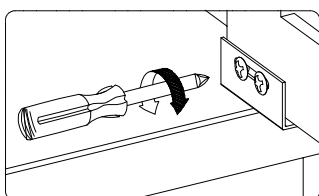


. To adjust side ways.

Loosen screws(Q) and adjust door, then tighten screws(Q).


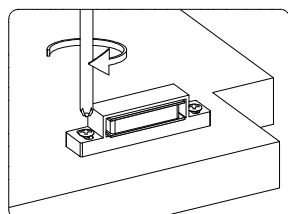
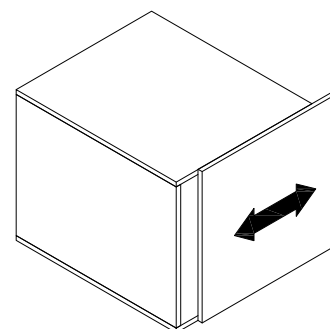


. To adjust depth.

Loosen screws(P) and adjust Magnetic catch(O), then tighten screws(P).

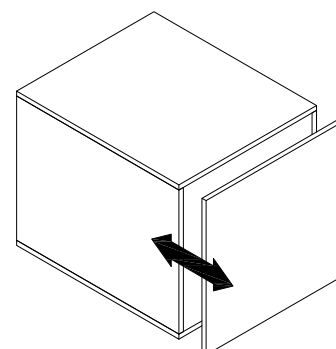

23

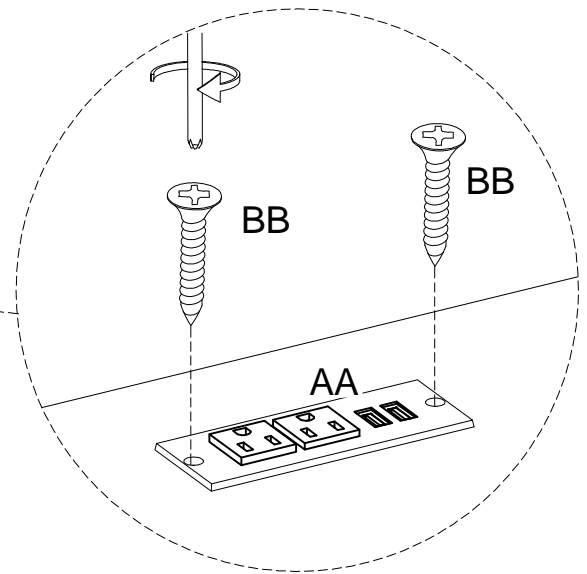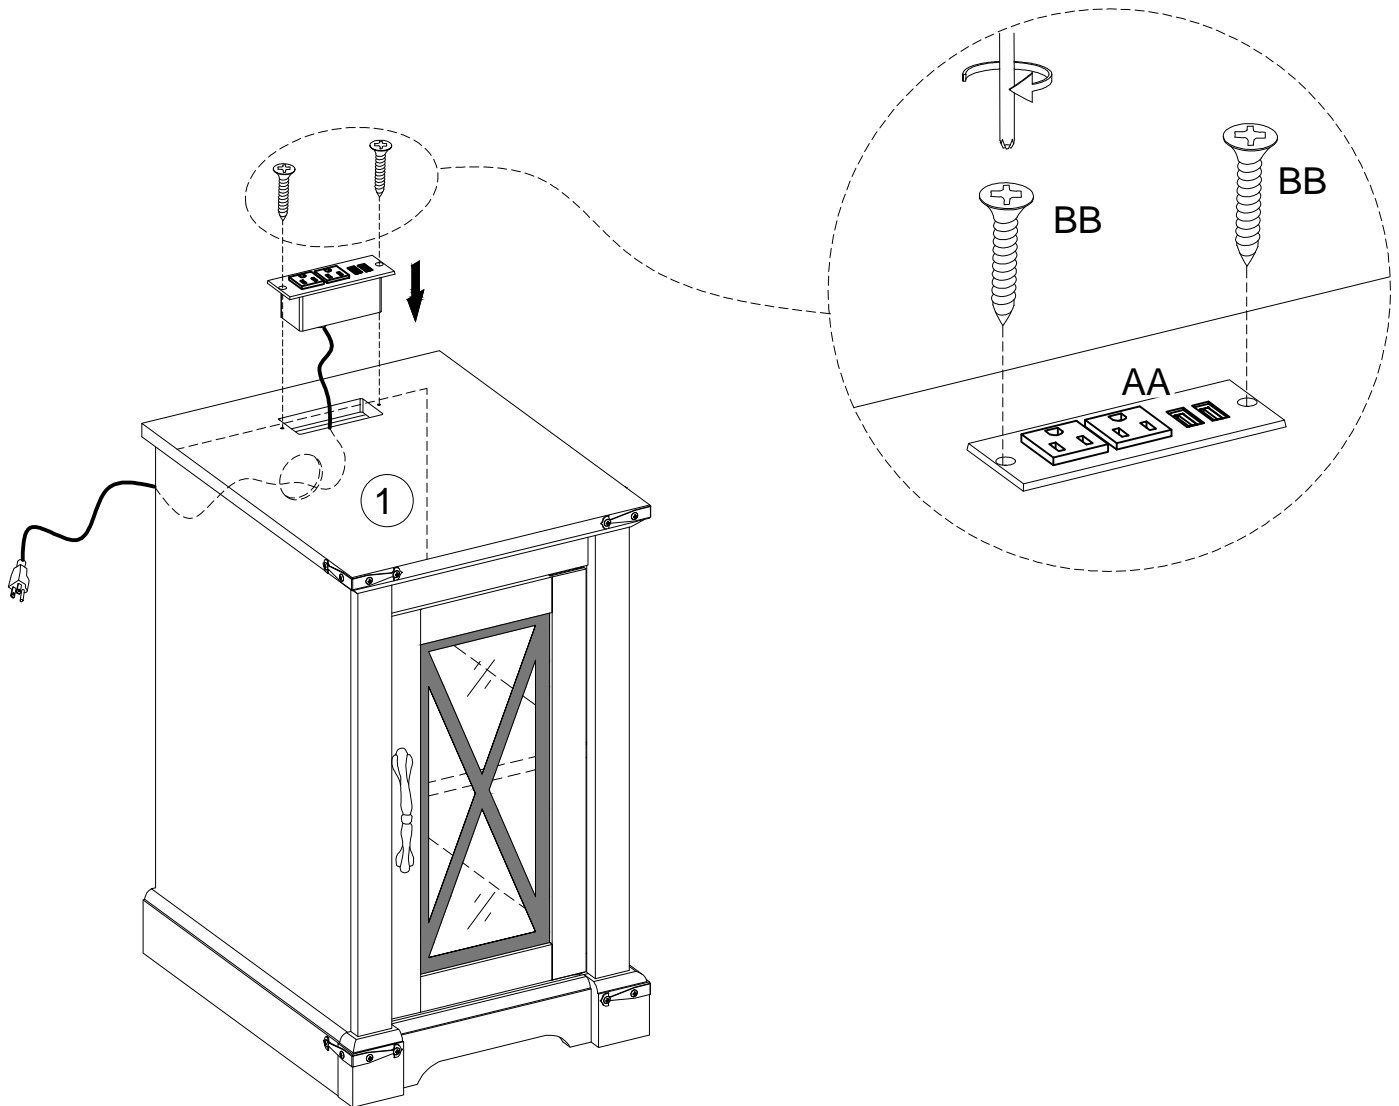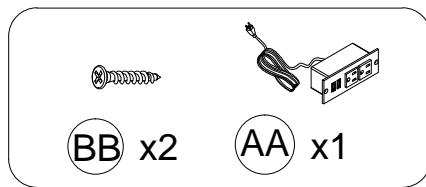

Installation Completed