
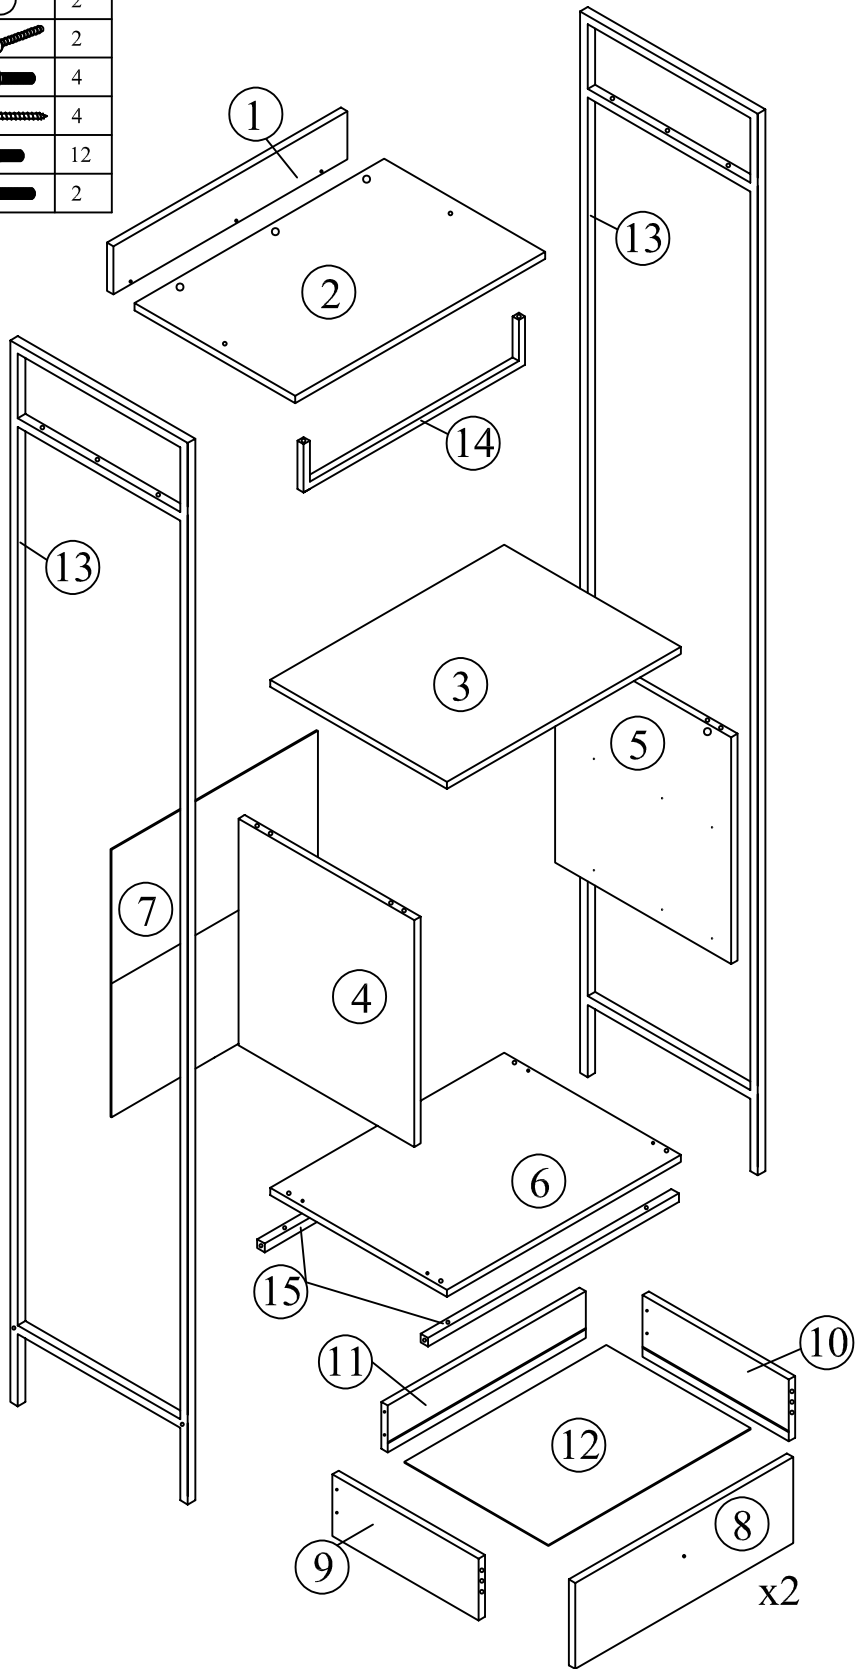


Assembly Instructions


Model : RZ 1016F-CR

Part List		QTY
1	Top Support Panel	1
2	Top Clothing Panel	1
3	Top Panel	1
4	Left Side Panel	1
5	Right Side Panel	1
6	Bottom Panel	1
7	Back Panel	1
8	Drawer Front Panel	2
9	Drawer Left Side Panel	2
10	Drawer Right Side Panel	2
11	Drawer Back Panel	2
12	Drawer Bottom Panel	2
13	Metal Legs	2
14	Clothing Hanger	1
15	Metal Support	2


Hardware		QTY
A	Allen Key M4 	1
B	Wood Dowel M8 x 25mm 	16
C	Mini Fix Bolt 	11
D	Mini Fix Housing 	11
E	Mini Fix Cap 	11
F	CSK Screw M4x50mm 	8
G	CSK Screw M3.5x16mm 	24
H	Drawer Slide 	2 SET
I	Nail 	16
J	Handle 	2
K	Handle Screw M4x25mm 	2
L	JCBC Screw M6x50 + M6 Flat Washer 	4
M	JCBC W Screw M6x40 	4
N	JCBC M6 x 30 	12
O	JCBC M6 x 50 	2

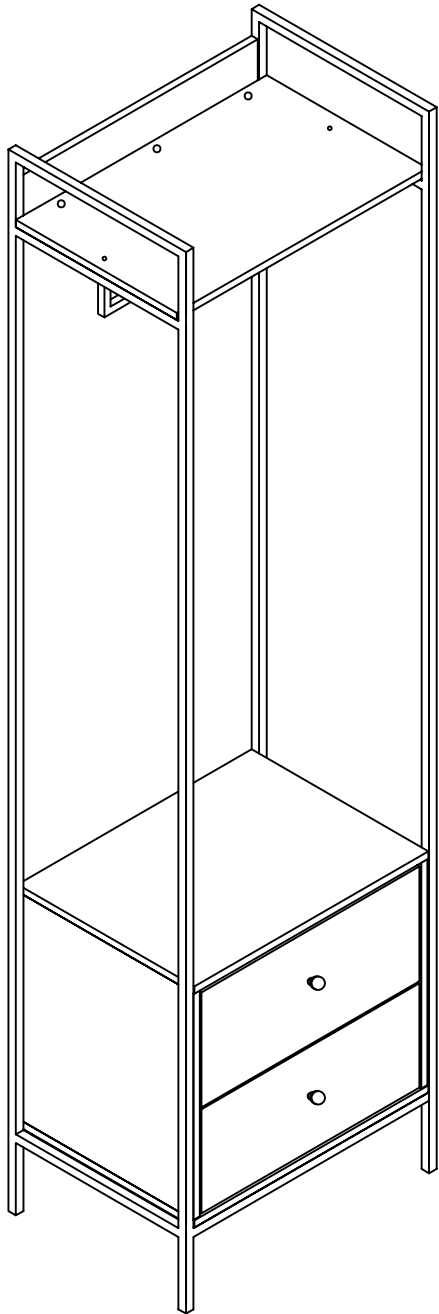


Step 1

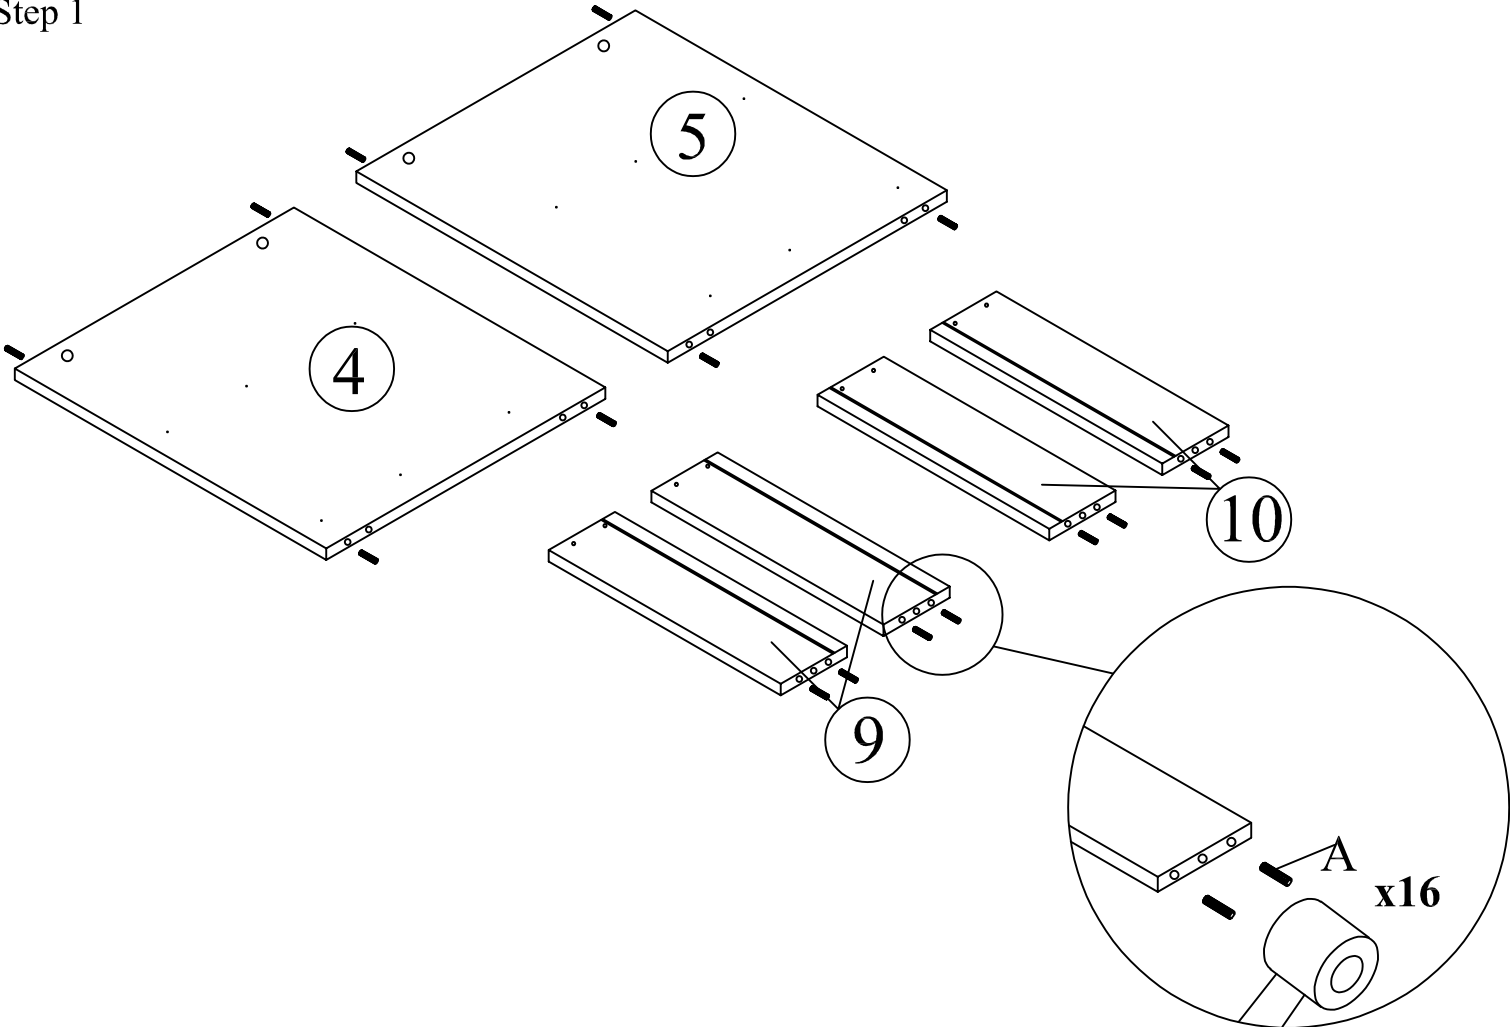


Step 2

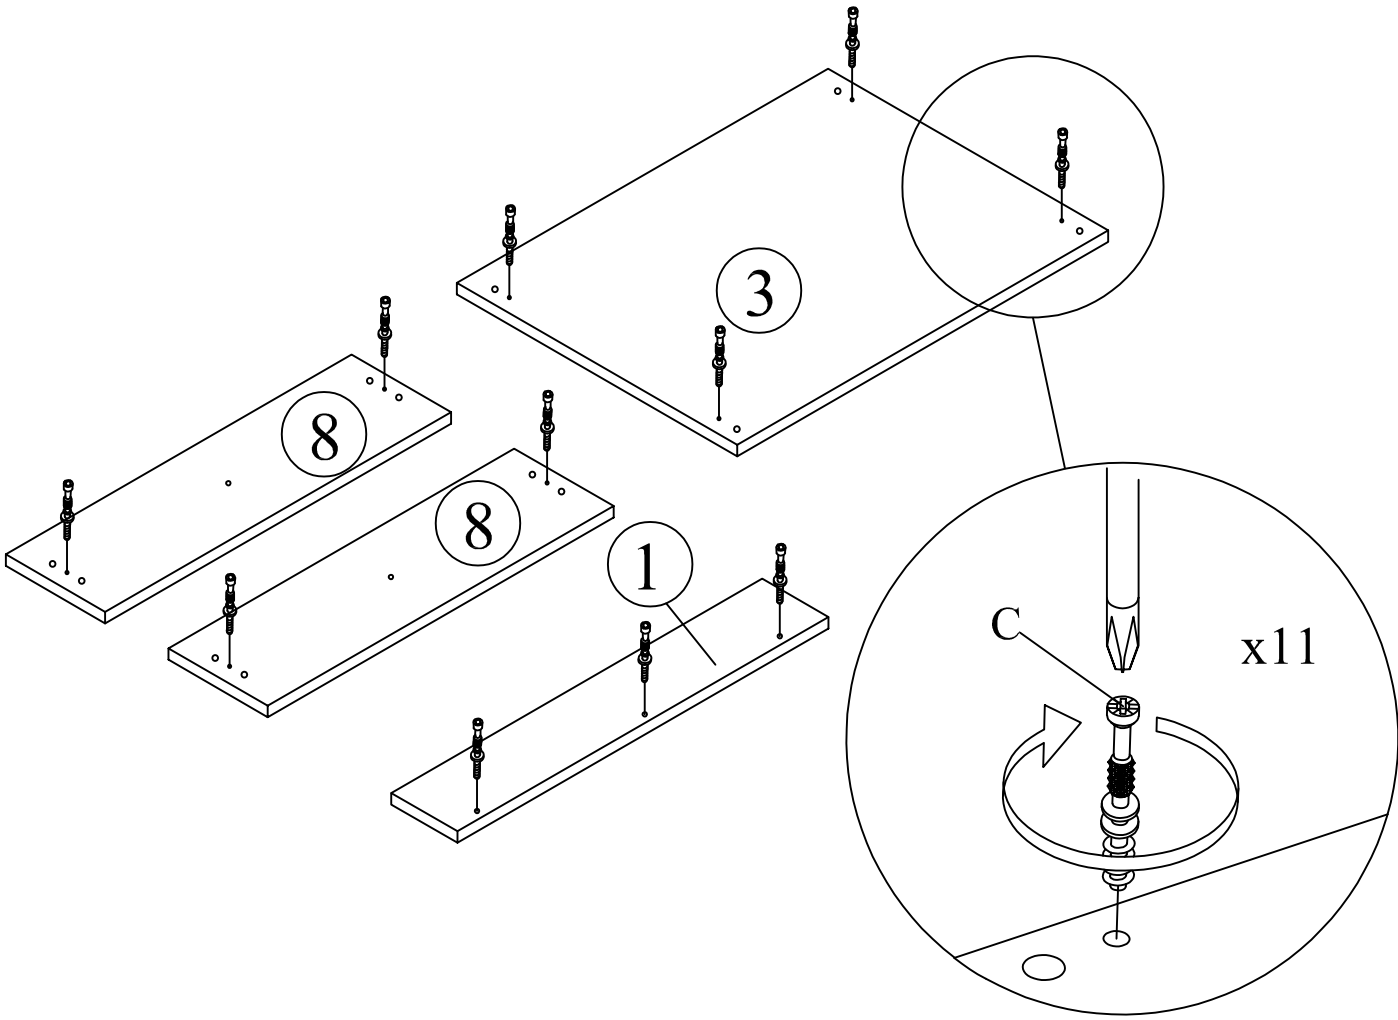

Step 3

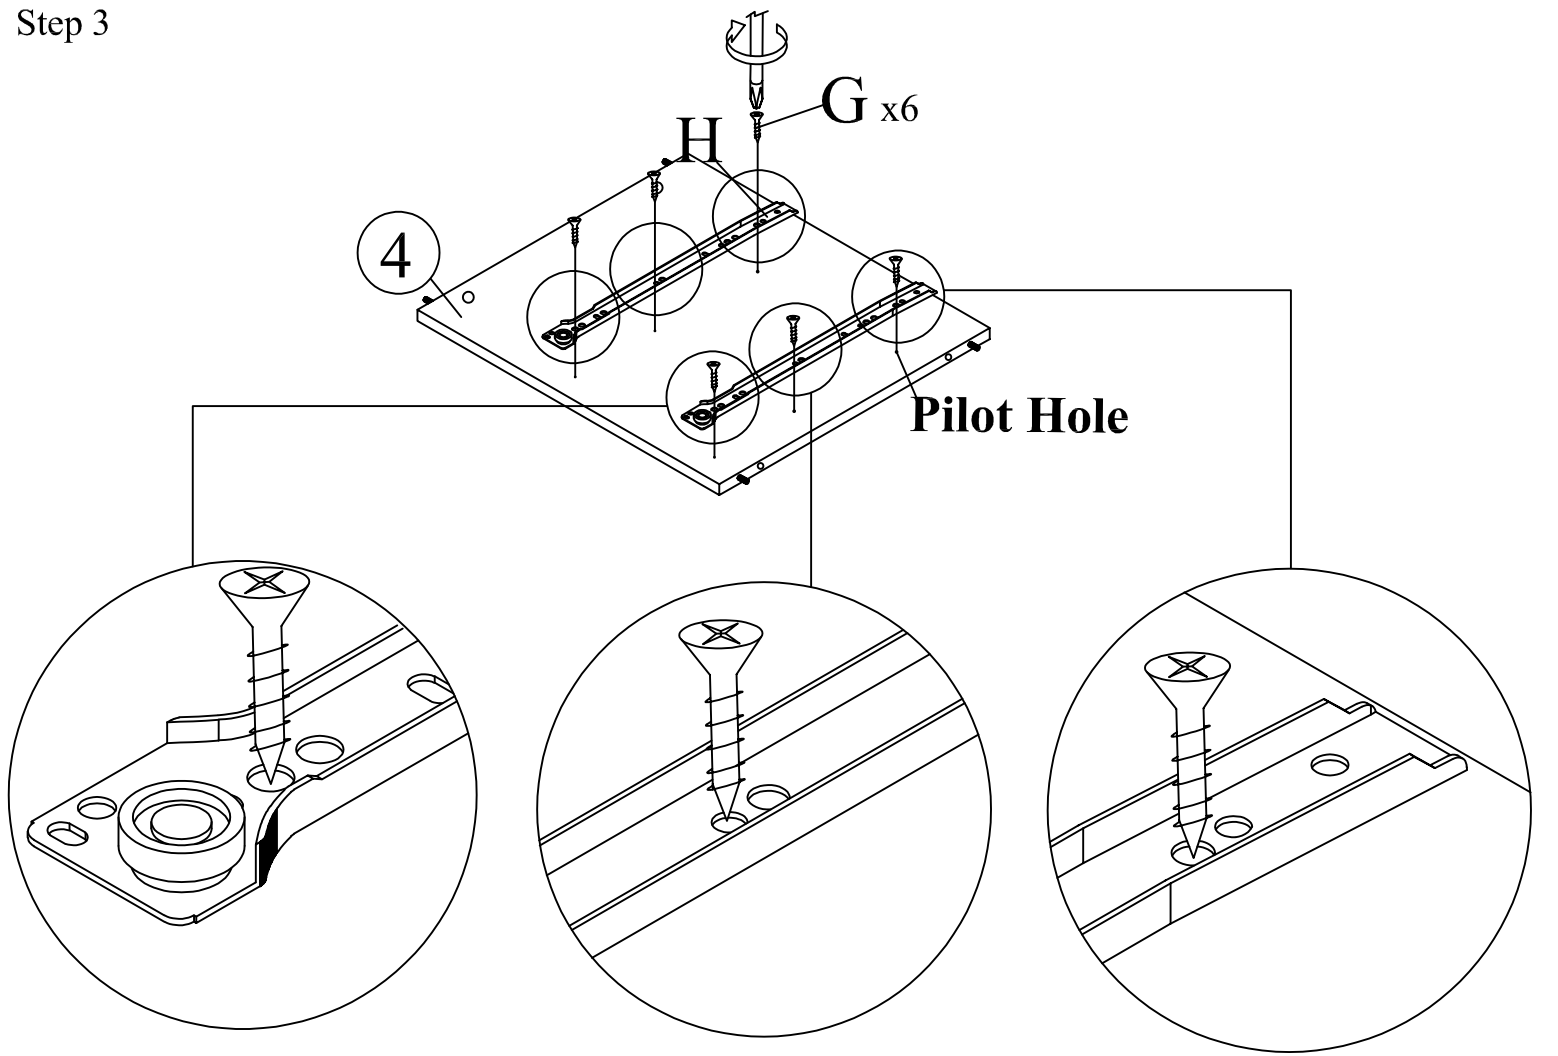

Step 4

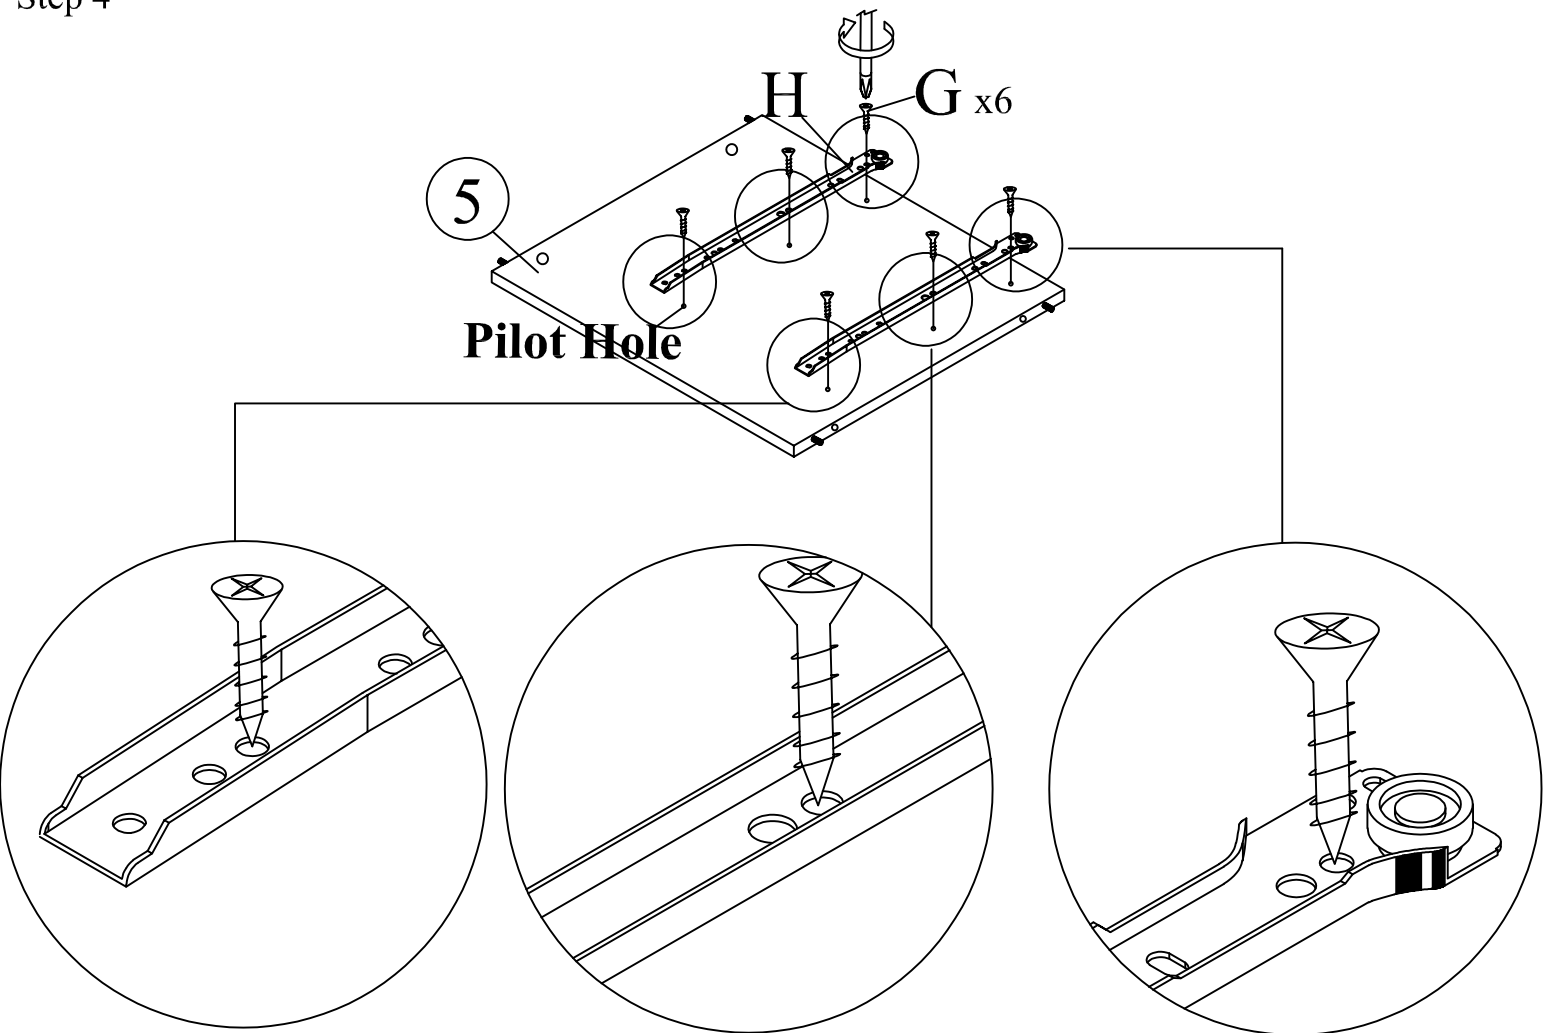


Step 5

BACK VIEW


This is how a mini fix works...



The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

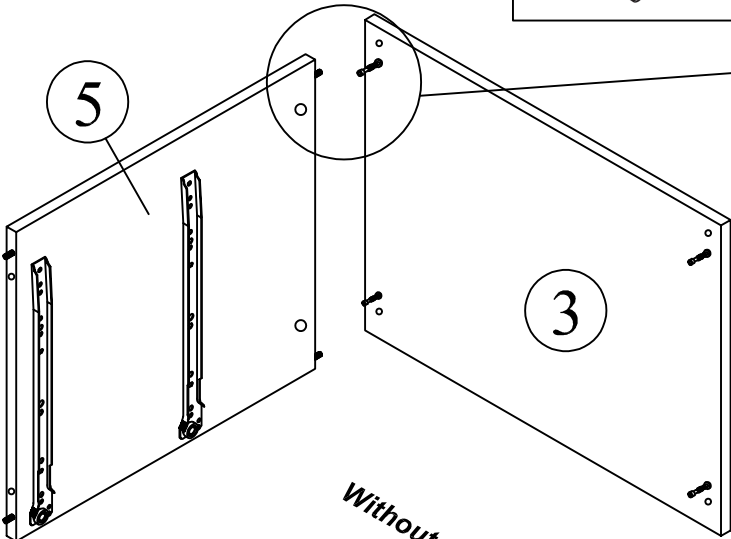

Without edging / veneer facing upwards

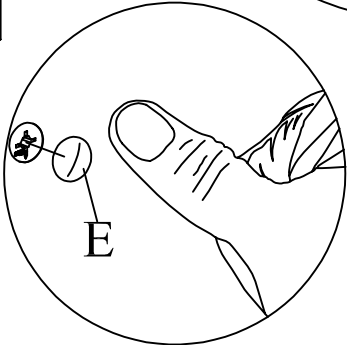

**Attach Minifix Cap as shown.*


Step 6

BACK VIEW


This is how a mini fix works...



The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

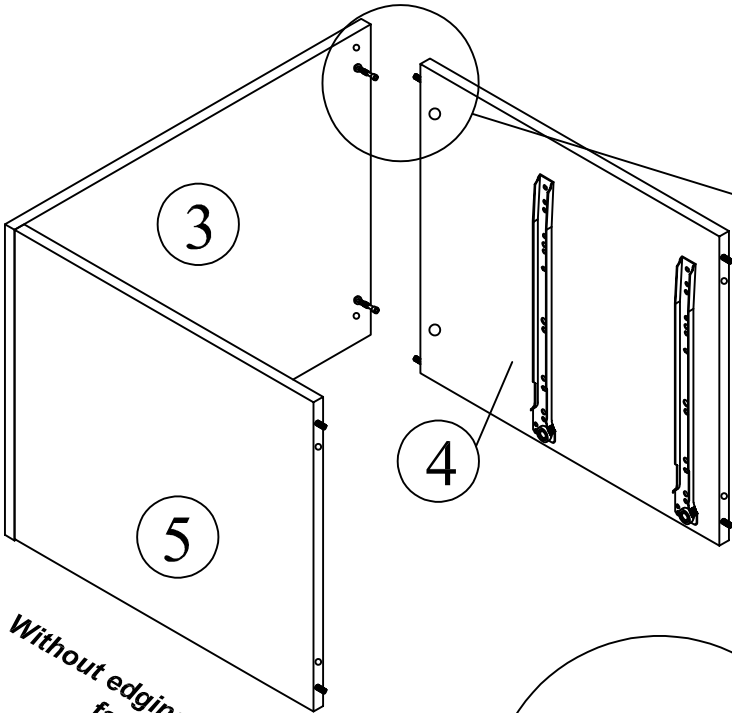


Without edging / veneer facing upwards

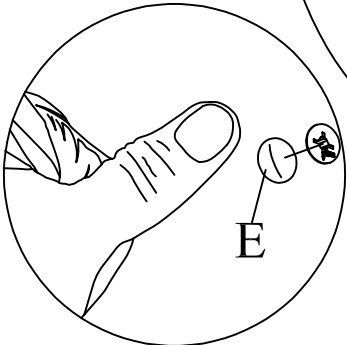


**Attach Minifix Cap as shown.*

Step 7

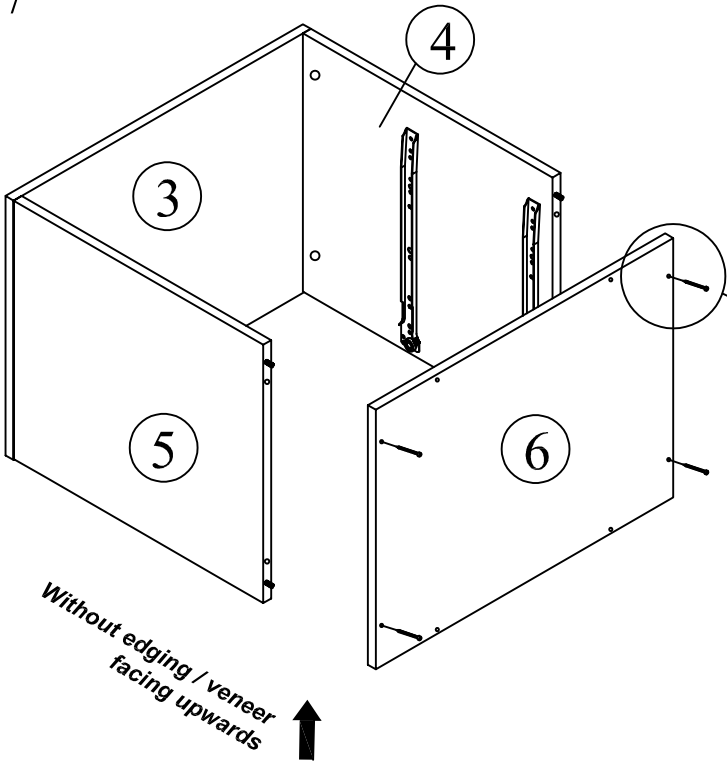


BACK VIEW


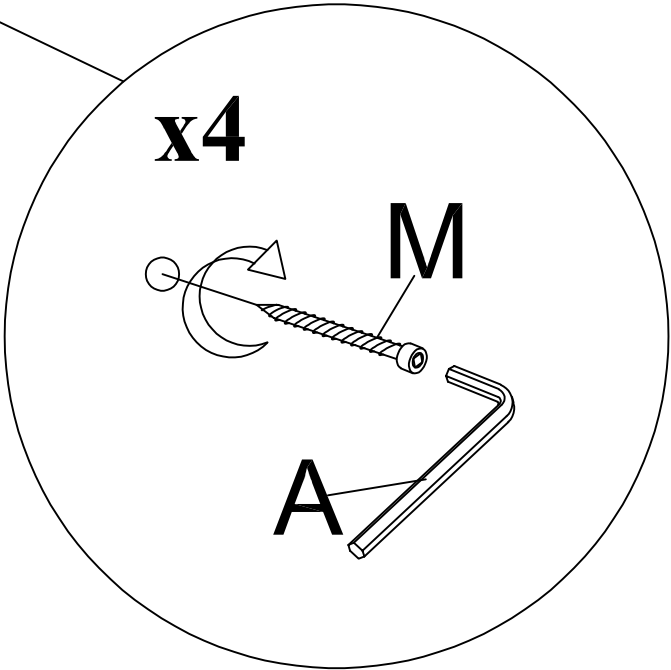


Step 8


BACK VIEW

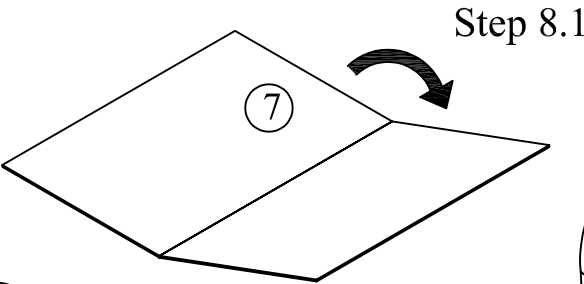

Step 8.2

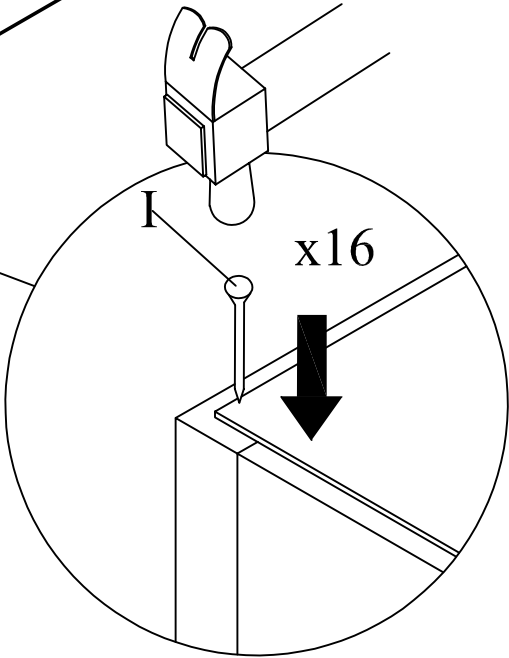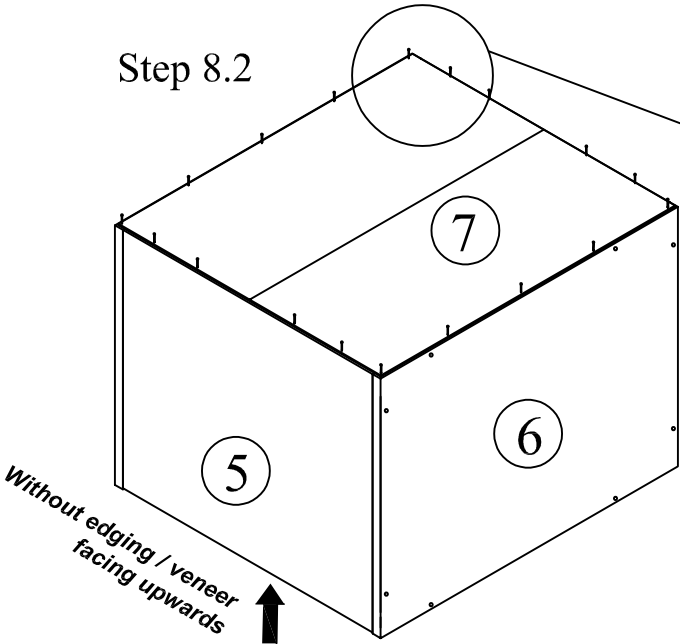


Step 9

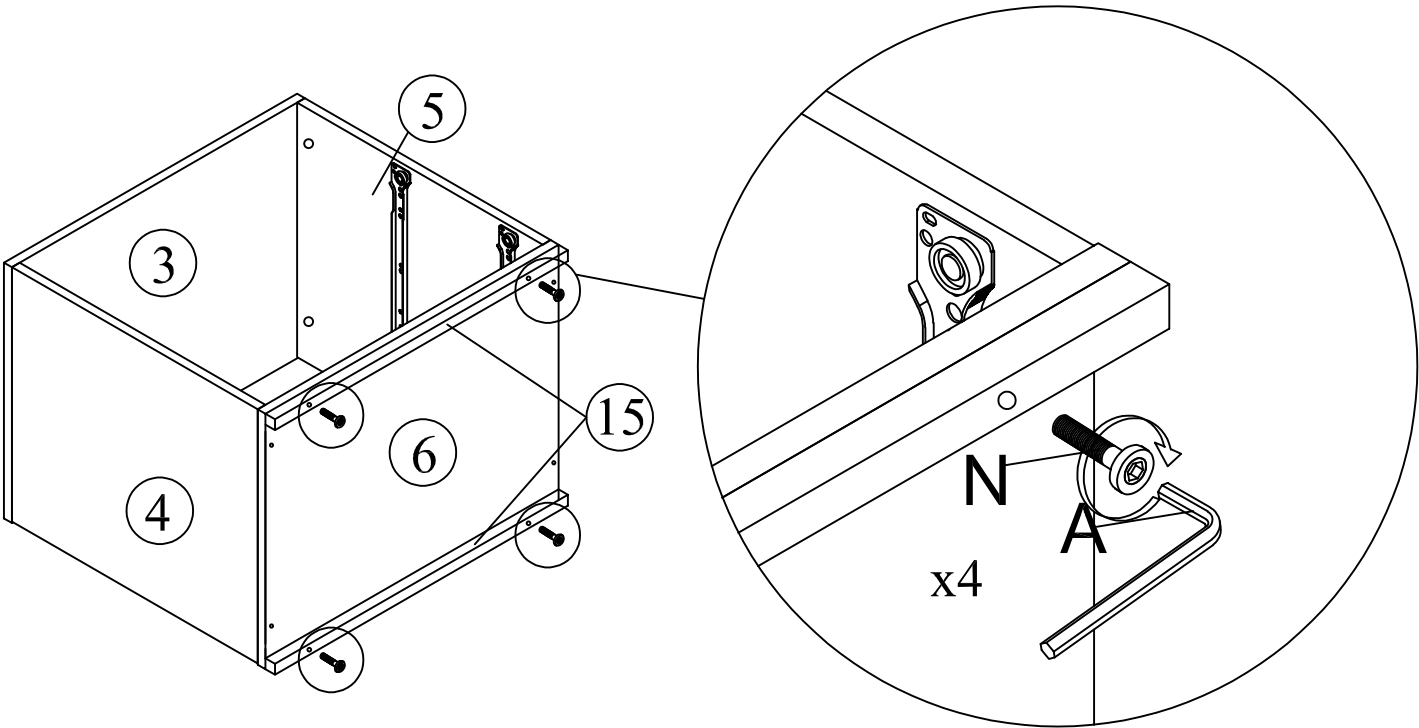


Step 10

This is how a mini fix works...

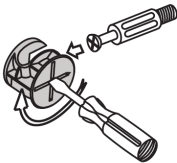


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

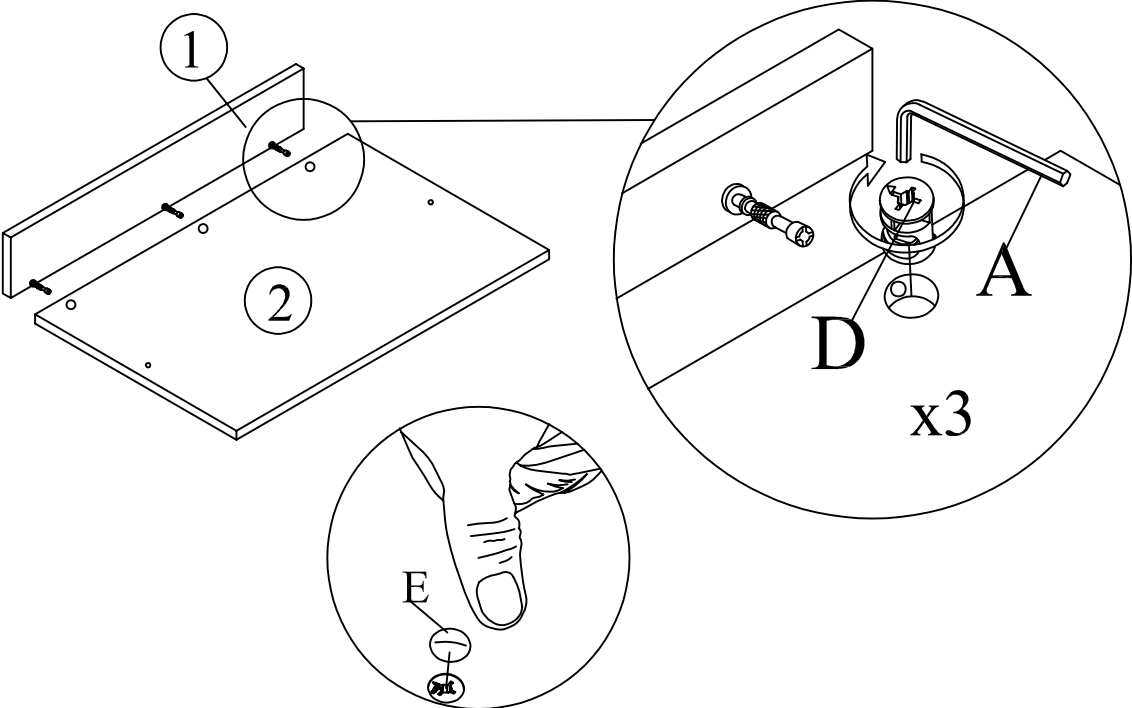


**Attach Minifix Cap as shown.*

Step 11

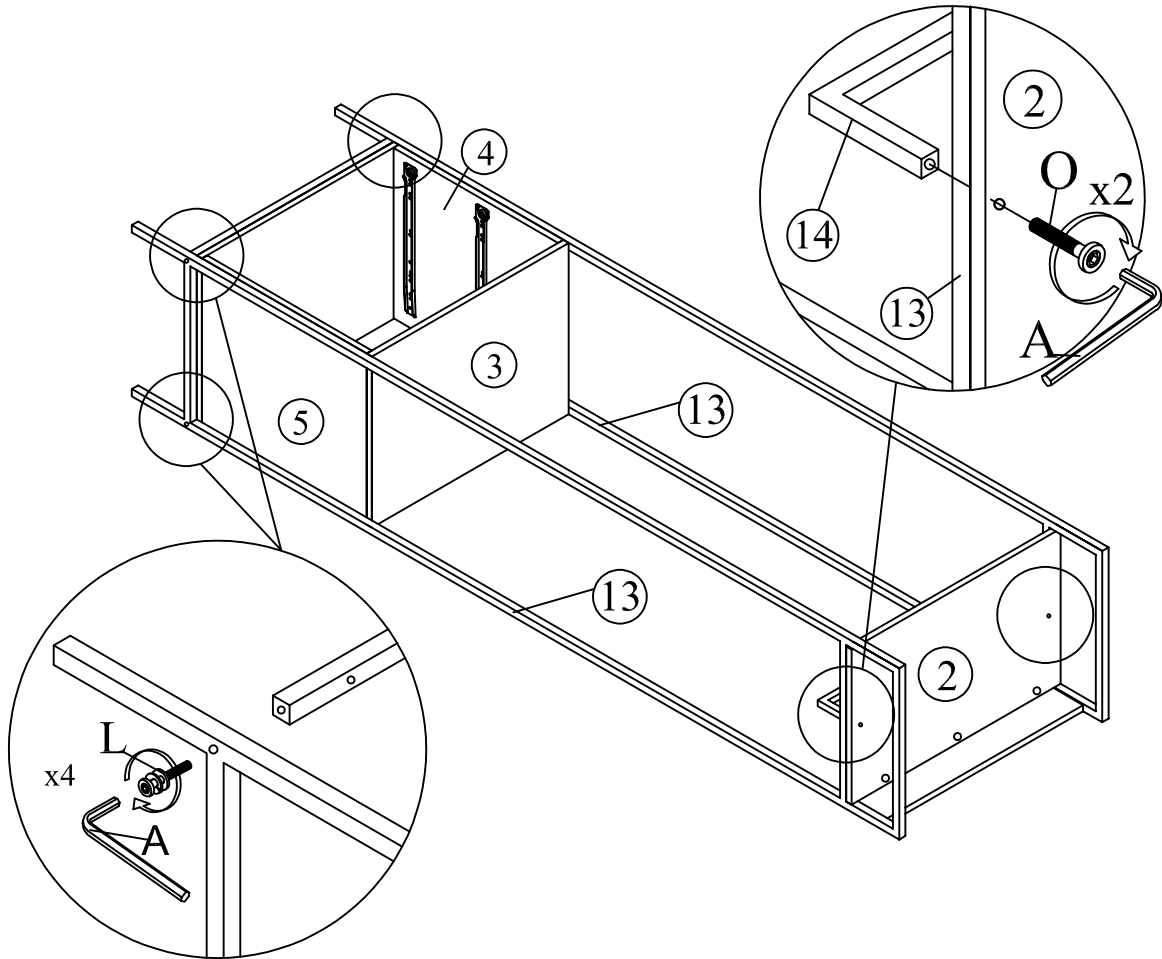


Step 12

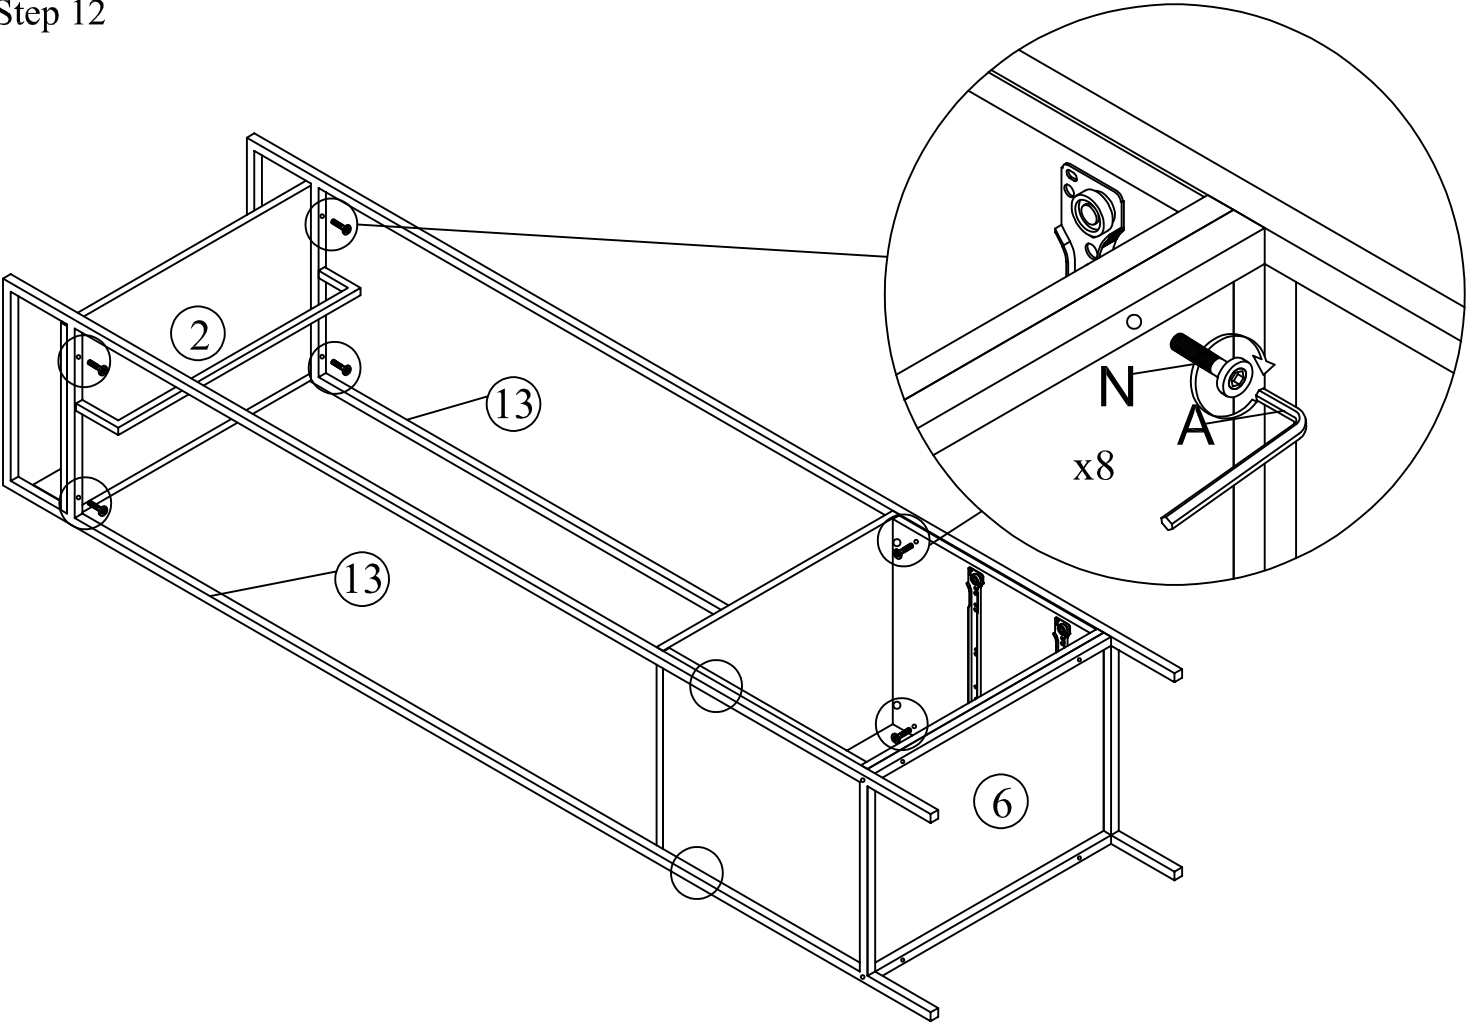


Step 13

Step 13.1

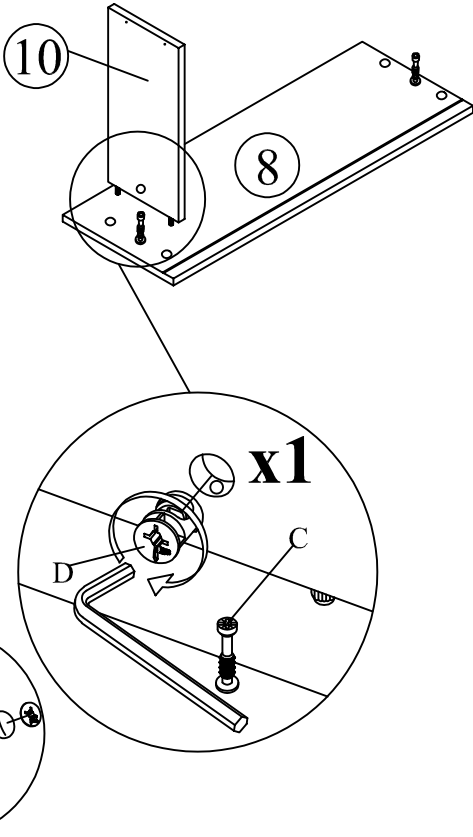


This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

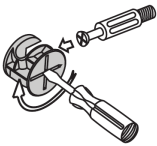


x2

Step 13.2

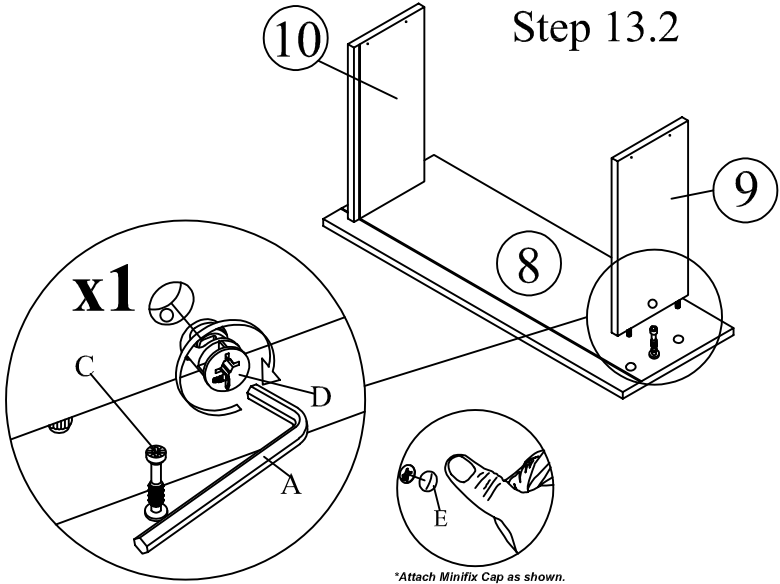


Step 14

Step 14.1



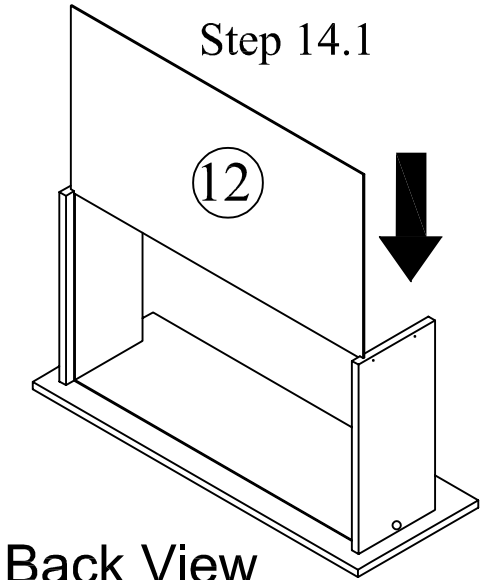


Back View

Step 14.2

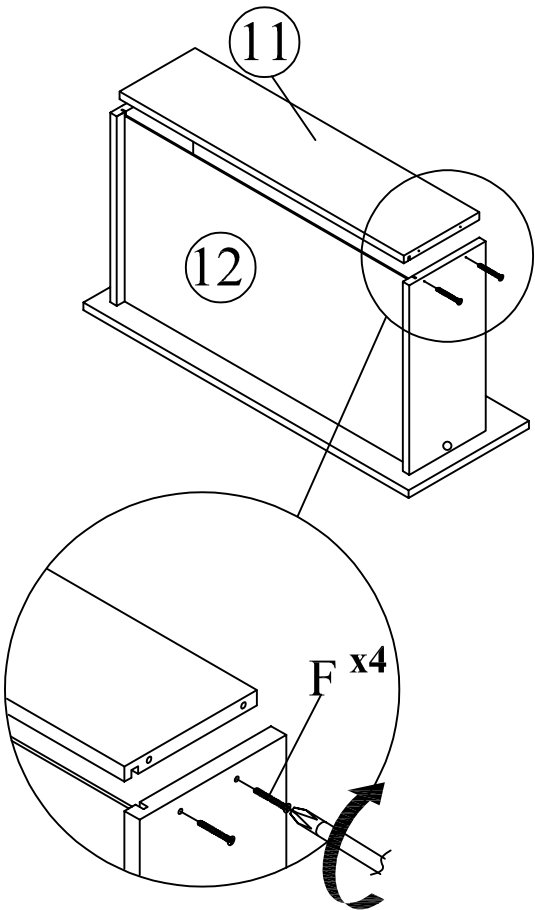

x2

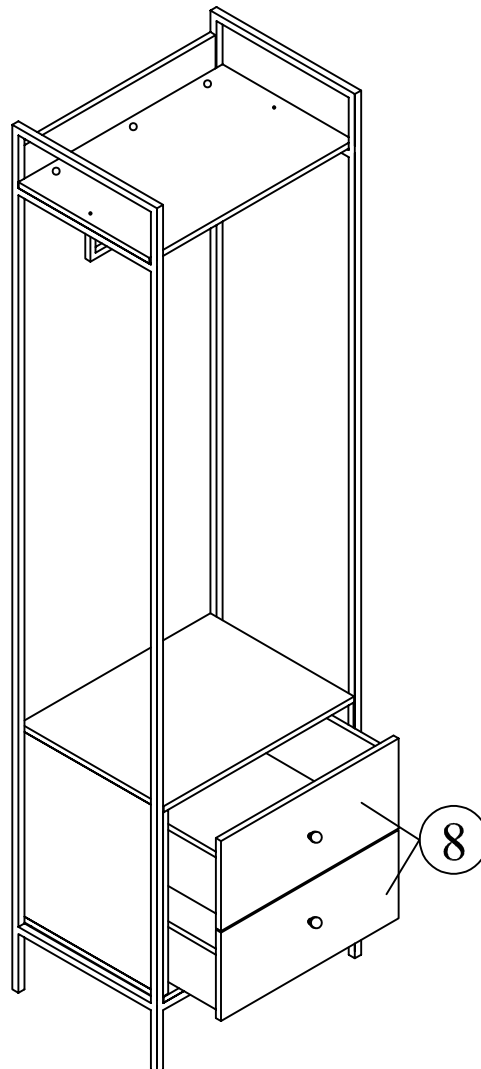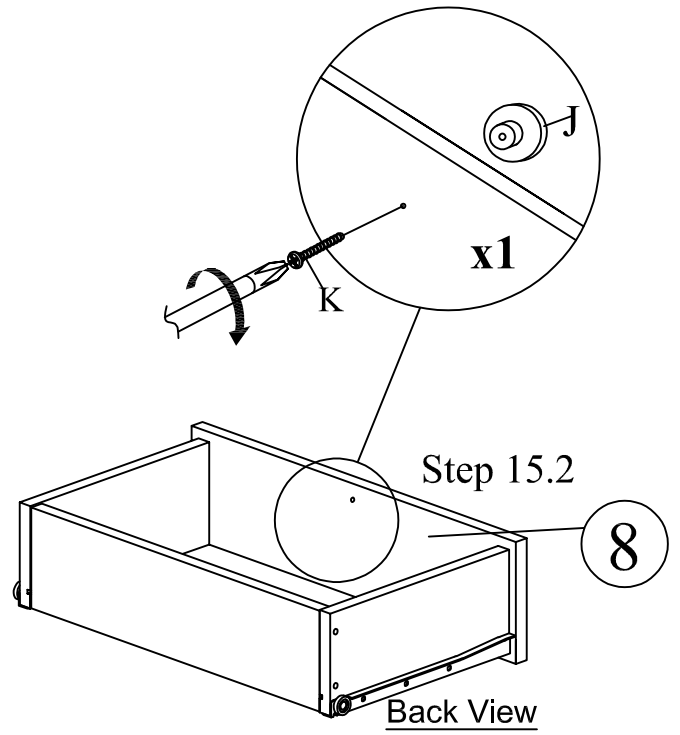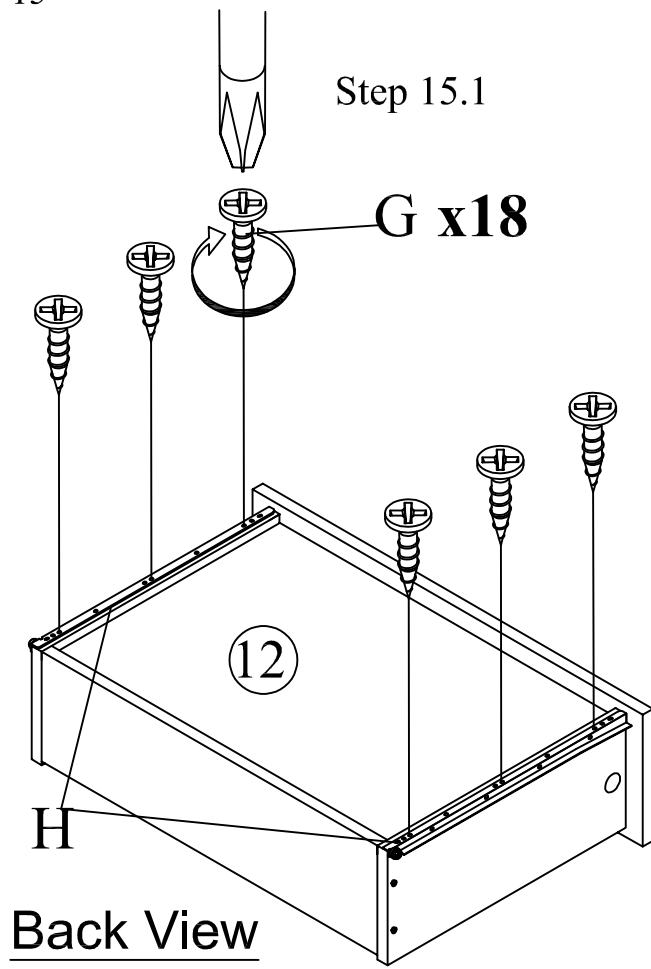


Anti -
Tipping

(A)



CSK Screw
M3.5x16mm
1PC

(B)



CSK Screw
M4x50mm
1PC

(C)





L BRACKET
2PCS




(D)






CABLE TIE
1PC

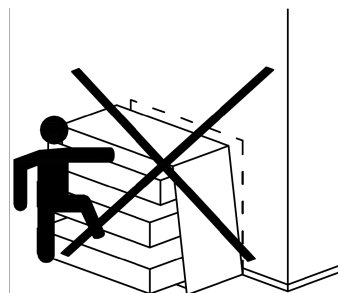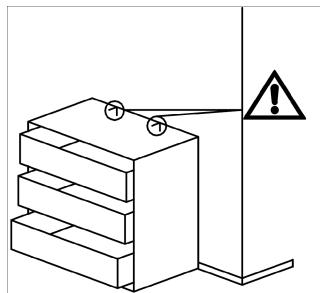

BACK VIEW

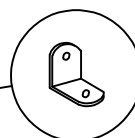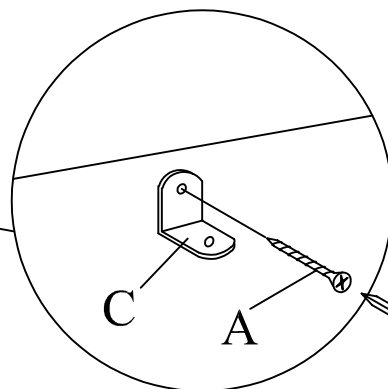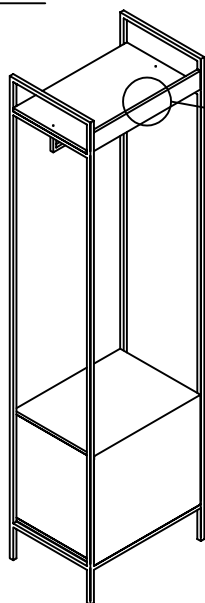

WALL

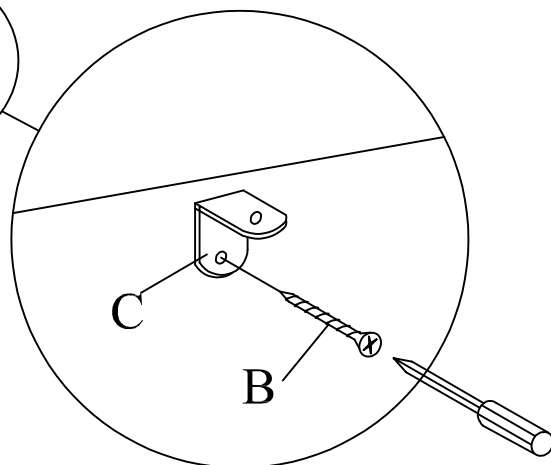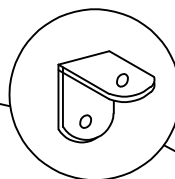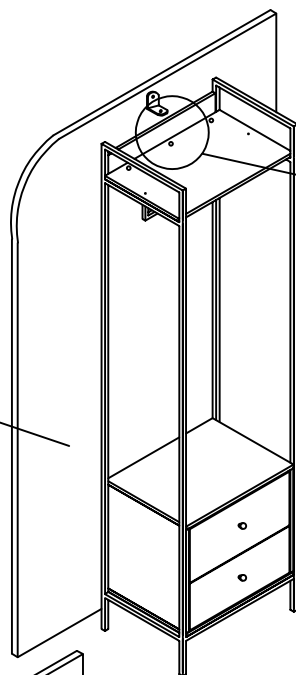

WALL

