

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

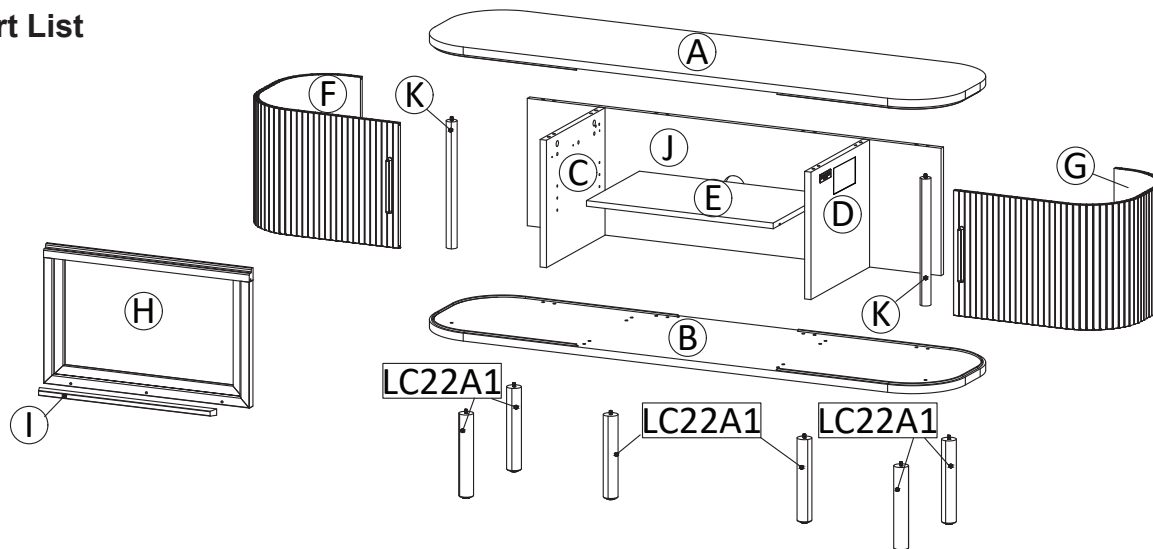

Product Dimensions: 59"Wx15"Dx24"H

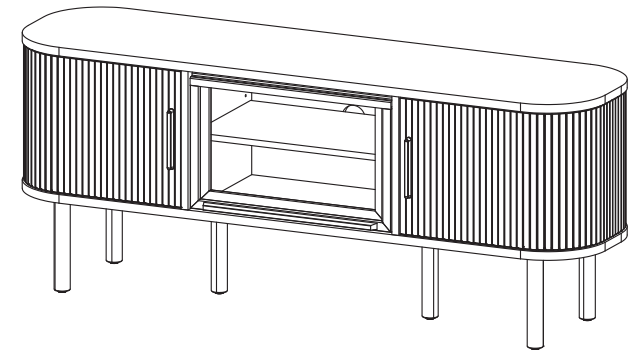


















WARNING :

WEIGHT CAPACITY: 84 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

<div>HW1x8</div> <div></div> <div>Ø 6 x 35 mm</div>	<div>HW2x8</div> <div></div> <div>Ø 15 mm</div>	<div>HW3x16</div> <div></div> <div>Ø 8 x 30 mm</div>	<div>HW4x8</div> <div></div> <div>M 7 x 50 mm</div>	<div>HW5x2</div> <div></div> <div>M 6 x 30 mm</div>
<div>HW6x40</div> <div></div> <div>M 4.5 x 12.5 mm</div>	<div>HW7x4</div> <div></div> <div>M 4 x 16 mm</div>	<div>HW8x3</div> <div></div> <div>M 3.5 x 25 mm</div>	<div>HW9x4</div> <div></div> <div></div>	<div>HW10x2</div> <div></div> <div></div>
<div>HW11x4</div> <div></div> <div></div>	<div>HW12x2</div> <div></div> <div></div>	<div>HW13x2</div> <div></div> <div></div>	<div>HW14x2</div> <div></div> <div></div>	<div>HW15x2</div> <div></div> <div></div>
<div>HW PM3x2</div> <div></div> <div></div>	<div>HW PM2x6</div> <div></div> <div></div>			

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Center Board Left	1
D	Center Board Right	1
E	Adjustable Shelf	1
F	Door Left	1
G	Door Right	1
H	Frame Door	1
I	Handle	1
J	Back Board	1
K	Pillar	2
LC22A1	Leg	6

Piece	Description	Qty
HW1	Cambolt	8
HW2	CamLock	8
HW3	Dowel	16
HW4	Screw M 7 x 50 mm	8
HW5	Screw M 6 x 30 mm	2
HW6	Screw M 4.5 x 12.5 mm	40
HW7	Screw M 4 x 16 mm	4
HW8	Screw M 3.5 x 25 mm	3
HW9	Shelf Pin	4
HW10	Allen Key	2
HW11	Stopper	4
HW12	Handle	2
HW13	Bumper	2
HW14	Hook	2
HW15	Rail	2
HW PM3	Mounting Plate	2
HW PM2	Mounting Plate	6

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

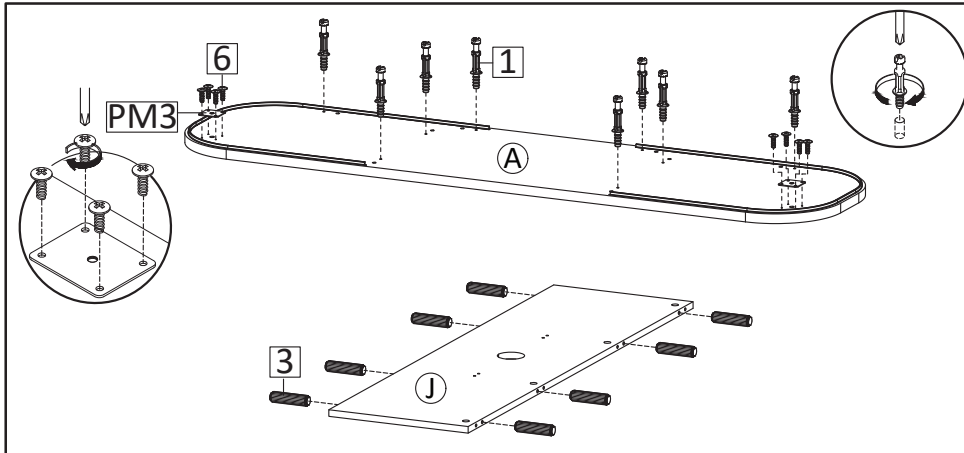


STEP1: Insert Cambolt (HW1) into Top Board (A) and attach Mounting Plate (HW PM3) secure with Screw M4.5x12.5mm (HW6) as figure. Insert Dowel (HW3) into Back Board (J).

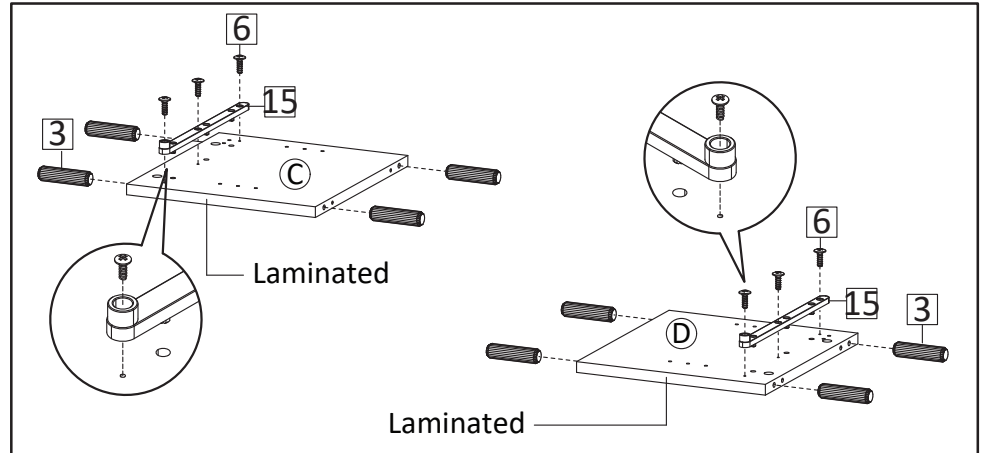

STEP2: Insert Dowel (HW3) into Center Boards (C&D). Continue with securing Rail (HW15) into position as the above image, using screw M4.5x12.5mm (HW6).

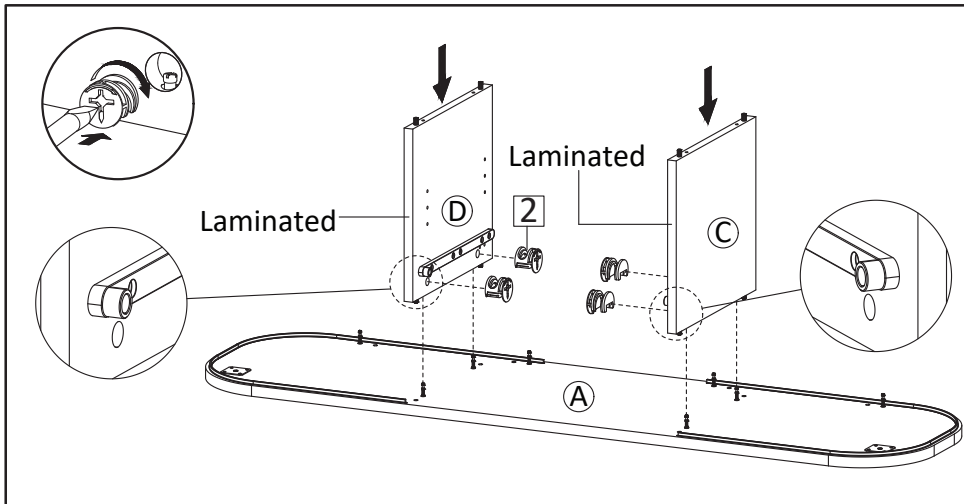

STEP3: Attach Center Boards (C&D) into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver.

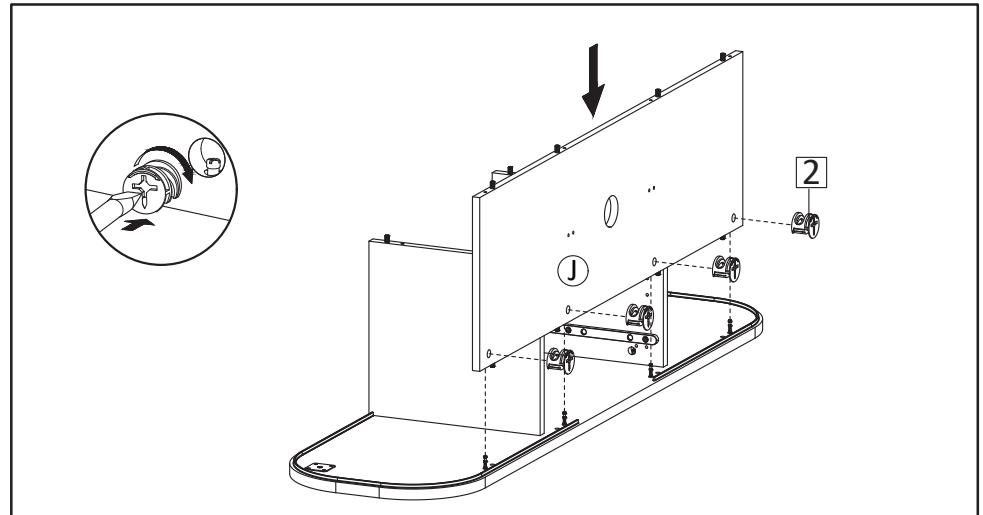

STEP4: Attach Back Board (J) into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

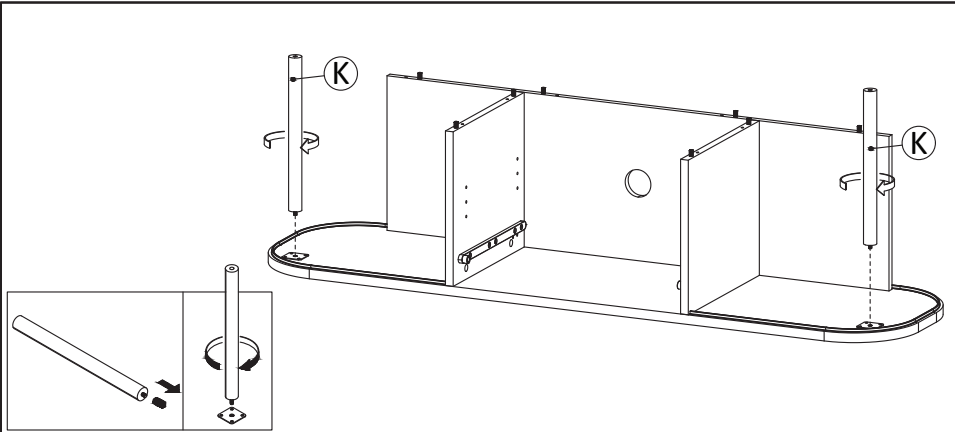


STEP5 : Install Pillar (K) into Top Board by rotating the pillar clockwise.

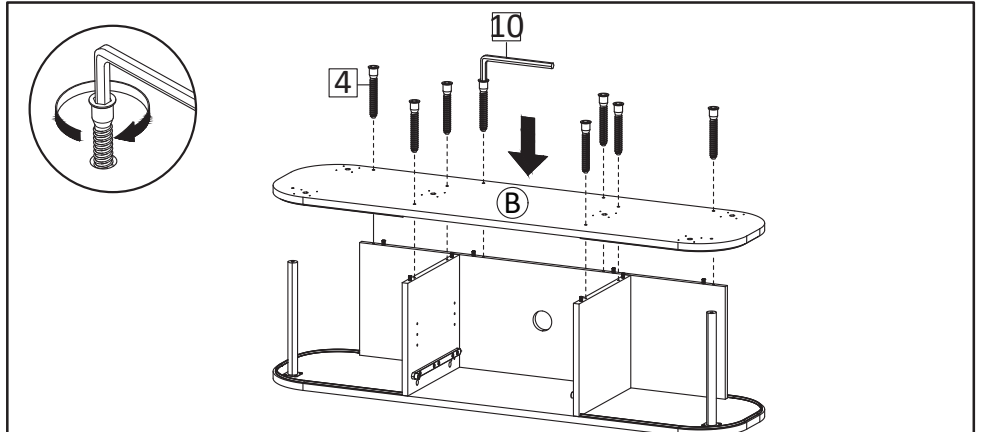

STEP6: Place Bottom Board (B), use Screw M7x50mm (HW4) to secure it to Backboard and Center Boards. Tighten screws using Allen Key (HW10).

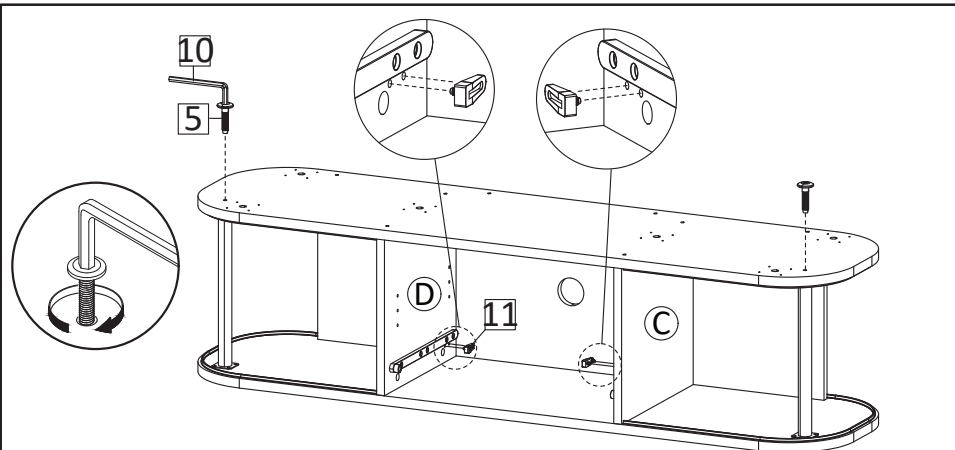

STEP7: Secure Bottom Board (B) to pillar using Screw M6x30mm (HW5), tighten screws using Allen Key (HW10) as figure. Install Stopper (HW11) into Center Boards as figure.

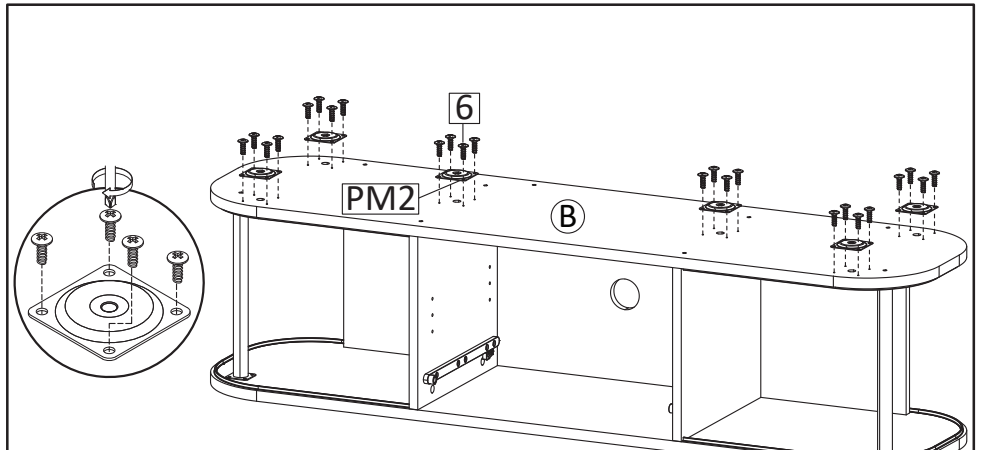

STEP8: Install Mounting Plate (HW PM2) into Bottom Board (B), secure with screw M4.5x12.5mm (HW6).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

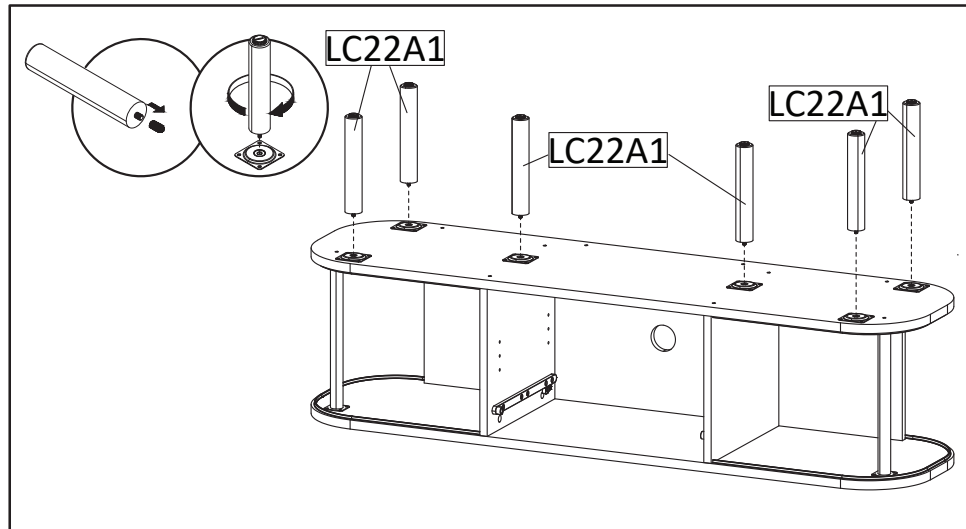


STEP9: Install Legs (LC22A1) into Mounting Plate, tighten by rotating the leg clockwise.

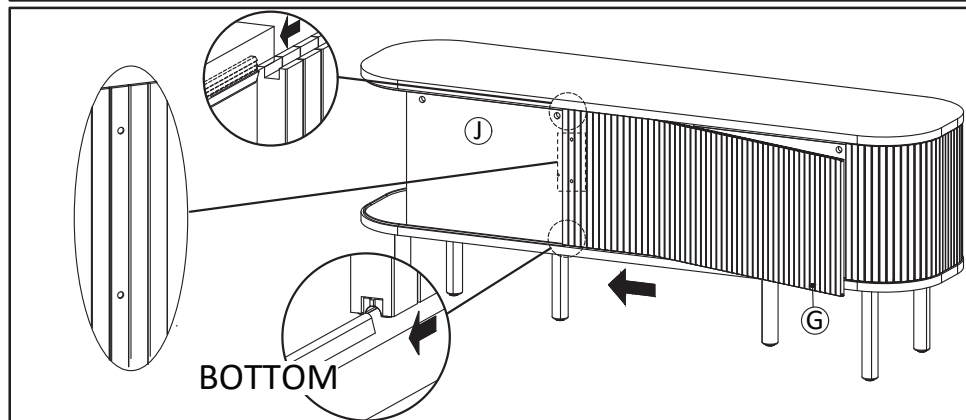

STEP11: Insert the Door Right (G) into the track. Carefully examine the tambour door. The side with plastic insert is placed at bottom track, while the side without plastic insert inside groove is for upper track. Slide the door to front until door completely closed.

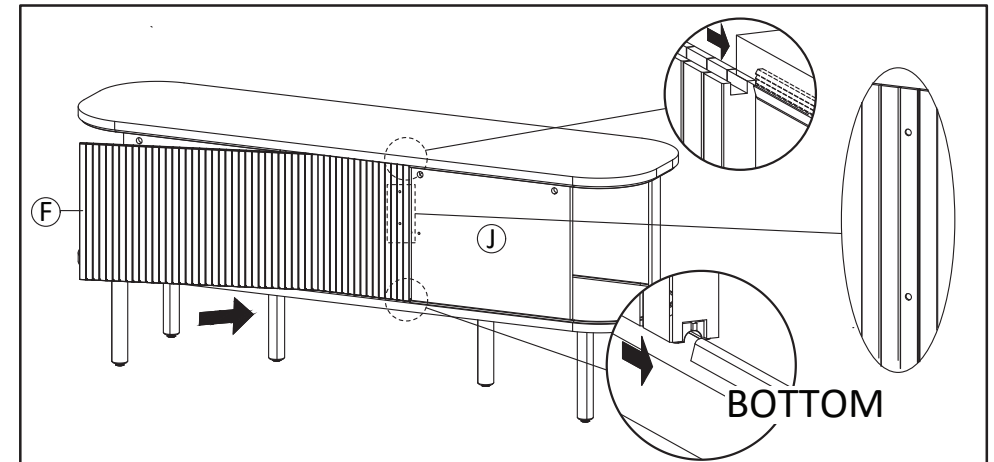


STEP10: Insert the Door Left (F) into the track. Carefully examine the tambour door. The side with plastic insert is placed at bottom track, while the side without plastic insert inside groove is for upper track. Slide the door to front until door completely closed.

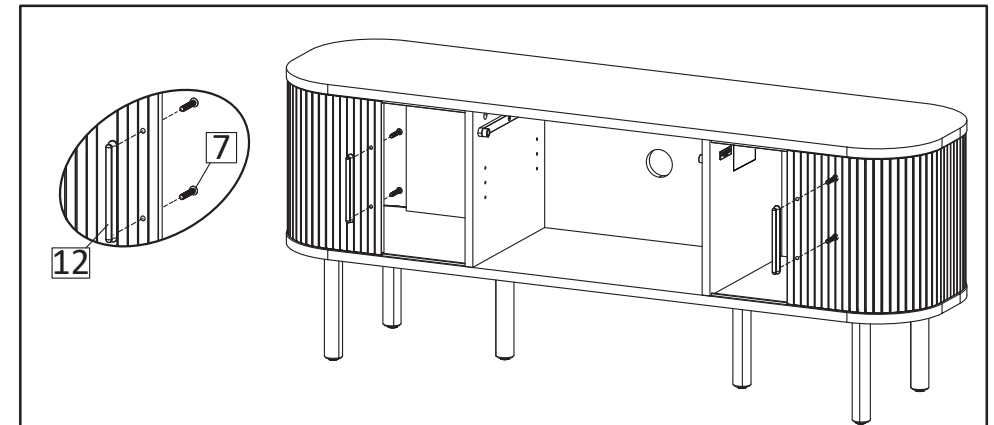


STEP12: Insert Handle (HW12) secure with Screw M4x16mm (HW7) into the holes on Doors (F&G) position as shown in the figure.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help.

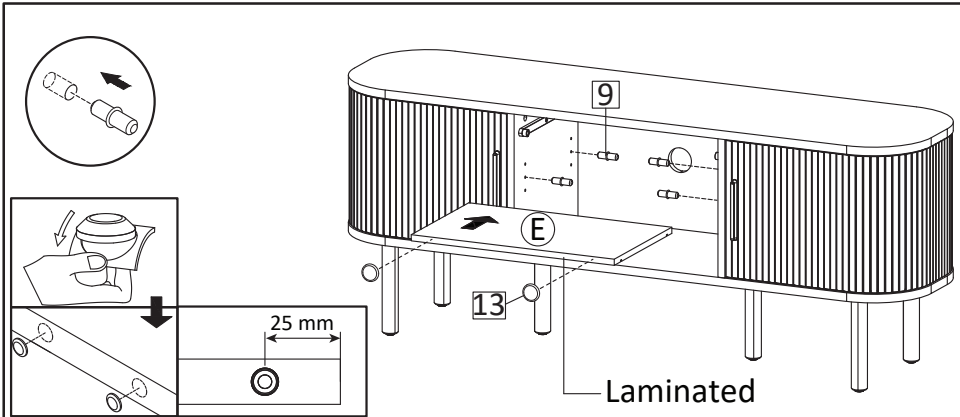


STEP13: Insert Shelf Pin (HW9) into the holes on Center Boards, on the desired level. Then place the Adjustable Shelf (E) onto shelf support with laminated edge facing front. Peel the back paper of Bumper (HW13) then 2 pcs on Adjustable Shelf (E) position as shown in the figure.

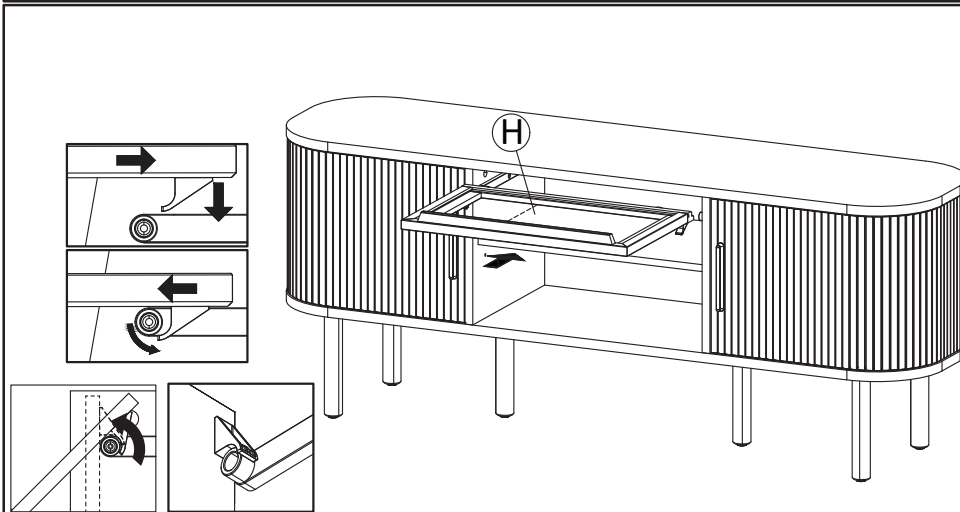

STEP15: Holding the side of the door frame, align the Hook rail wheel with the rail wheel. Once hooked place the door downward along the rail to close. To open the door, lift handle up and slide in the door frame.

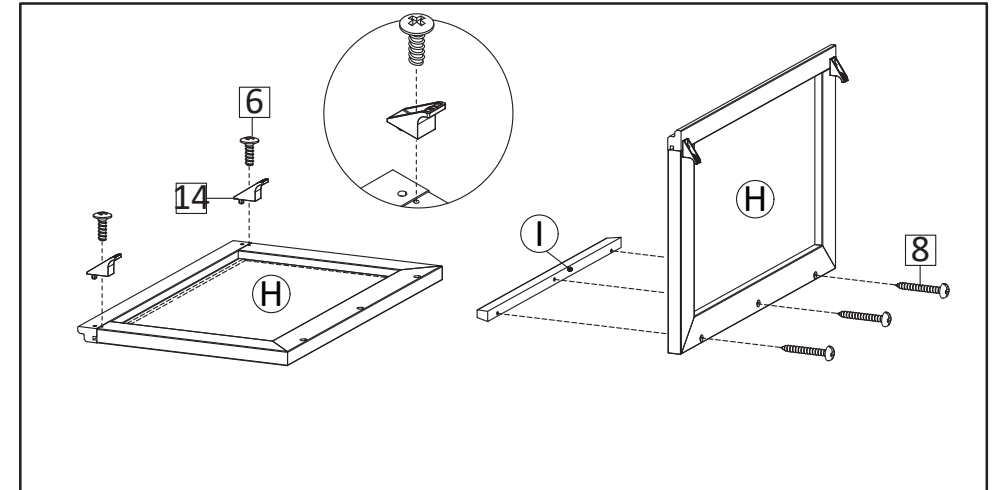


STEP14: Install Hook (HW14) and secure with screw M4.5x12.5mm (HW6). Continue with securing Handle (I) into position as the above image, using screw M3.5x25mm (HW8).

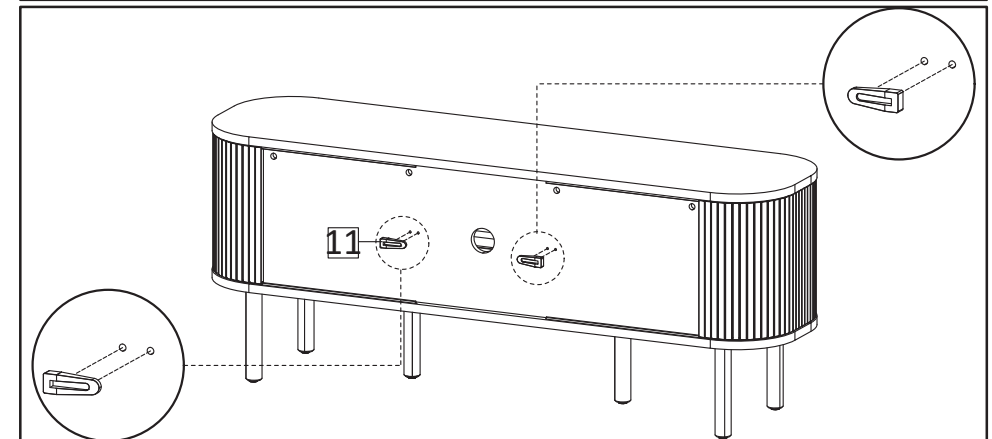


STEP16: Install Stopper (HW11) into Back Board as figure..

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help.

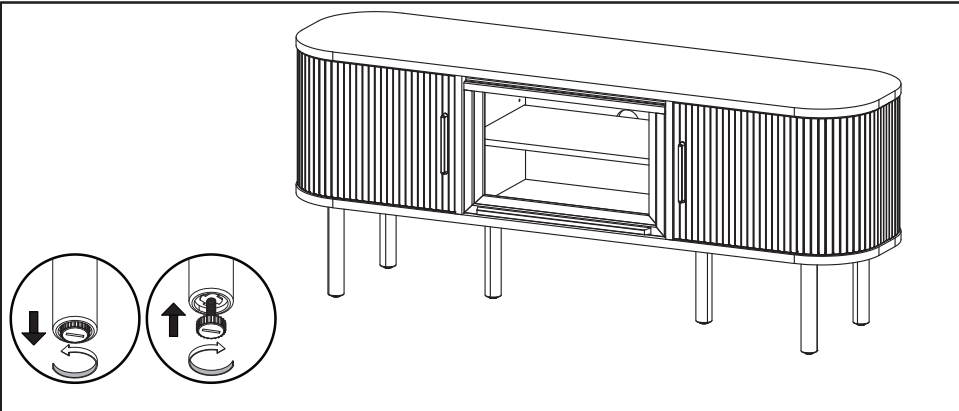

STEP17: Place your furniture on level floor. The legs come with adjustable leveler, adjust it as needed until your furniture stands steadily on the floor. Assembly is Complete.

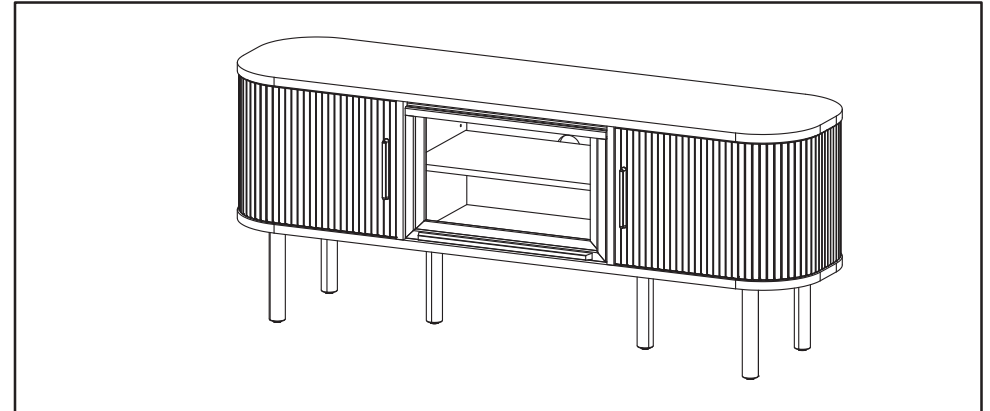

STEP18: Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

