


OCTAGON WORKSTATION W/ PEDESTAL

1514K, 1514KF, 1516K, 1516KF, 1614K, 1614KF, 1616K, & 1616KF SERIES
ASSEMBLY INSTRUCTIONS

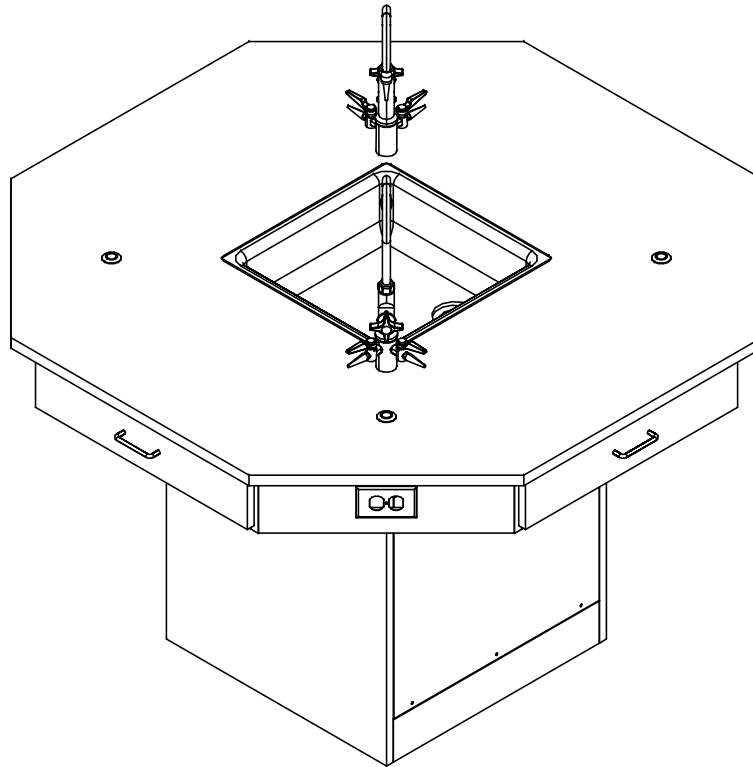

NOTE:

- MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES

CABINET SQUARENESS ± .0625
FRACTIONAL VALUES ± 1/32"
- ALL VALUES ± OVERALL -

A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.
REVISION LEVEL				

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	1 OF 8	REV A

TOOLS REQUIRED

CONTACT CEMENT

SCREW DRIVER

C-CLAMPS

SHIM STOCK (IF NEEDED)

ASSEMBLY COMPONENTS

ITEMS INCLUDED	PART #	PART DESCRIPTION	QTY
TOP	VARIES	TOP (STYLE VARIES), 1.00X56X56, BLK, (FIXTURE OR FLAT)	1
TOP	VARIES	TOP (STYLE VARIES), 1.00X62X62, BLK, (FIXTURE OR FLAT)	1
PEDESTAL	N/A	PEDESTAL - 24"W X 29"H X 24"D	1
PEDESTAL	N/A	PEDESTAL - 30"W X 29"H X 30"D	1
APRON ASSEMBLY	N/A	APRON ASSEMBLY (FACTORY ASSEMBLED)	1
SCREWS - ATTACHMENT BOARDS	100378	SCREW, #8.00X1 ¼ FLAT SQUARE HEAD	6
SILICONE	100711	SILICONE, SEALANT, CLEAR	1
RUBBER BASE MOLDING	100283	RUBBER BASE MOLDING (SOLD BY FOOT)	VARIES
STAINLESS STEEL CORNERS	100057	CORNERS-STAINLESS STEEL, BASE	4
SCREWS - BASE	100064	SCREW, #6X½ PTH SMS SS SCREW	16
ELECTRICAL BOX	100033	ELECTRICAL BOX 3.00X2X2.5 DEEP	4
ELECTRICAL OUTLET	100034	ELEC, OUTLET, GFI, 20A 125V, BLK	4
FIXTURE - FAUCET	100074-BKR	FIXTURE, L65-WSA-DIV (MULTI-SERVICE)	2
FIXTURE - SINK	100697	SINK, EPOXY L20, BLK	1
FIXTURE - SINK TRAP	100056	SINK TRAP, PLASTIC ADJUSTABLE	1
FIXTURE - SINK STOPPER	100112	SINK STOPPER 1 ½, BLK	1
FIXTURE - STRAINER	100055	SINK, OUTLET/STRAINER EPOXY, BLK	1
ROD SOCKETS	206505	ROD SOCKET ASSY, SOCKET, WASHER, NUT	4

NOTE:

- TOPS ARE EITHER PHENOLIC OR EPOXY.
- TOPS AND PEDESTALS VARY IN SIZE WITH STYLE OF WORKSTATION PURCHASED.
 - EX. 1510K/KF OR 1610K/KF
- **XX** INDICATES ITEMS USED ONLY FOR THE "K" SERIES.

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHESCABINET SQUARENESS ± .0625
FRACTIONAL VALUES ± 1/32"
- ALL VALUES ± OVERALL -


A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.
REVISION LEVEL				

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION

300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
TOOLS AND ASSEMBLY COMPONENTS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	2 OF 8	REV A

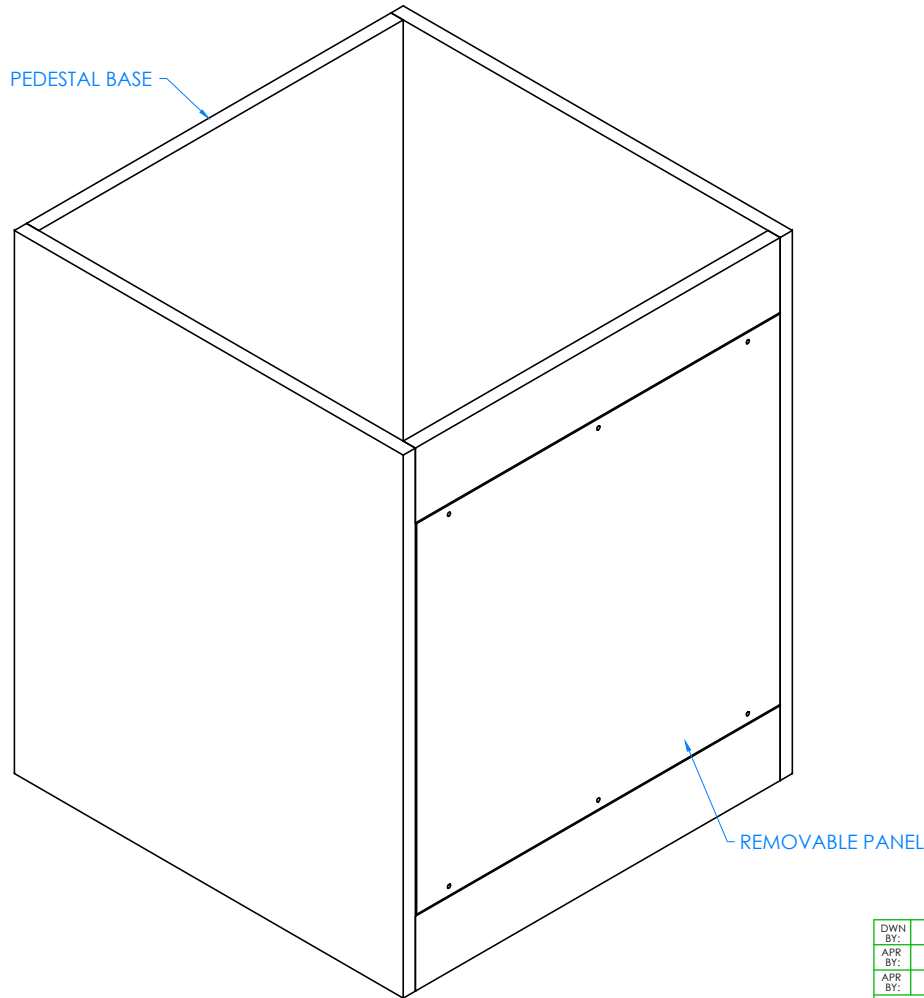

STEP 1:

- POSITION PEDESTAL BASE IN DESIRED LOCATION. IF YOU HAVE A "K" SERIES UNIT, PLACE BASE OVER UTILITY HOOKUPS.
- THERE IS A REMOVABLE PANEL ON ONE SIDE OF PEDESTAL THAT WILL ALLOW ACCESS TO THE UTILITIES IN FUTURE.
- LEVEL PEDESTAL.
- ATTACH TO FLOOR.

NOTE:

1.

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES

CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES $\pm$ OVERALL -

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION




300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS

A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.
REVISION LEVEL				

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	3 OF 8	REV A

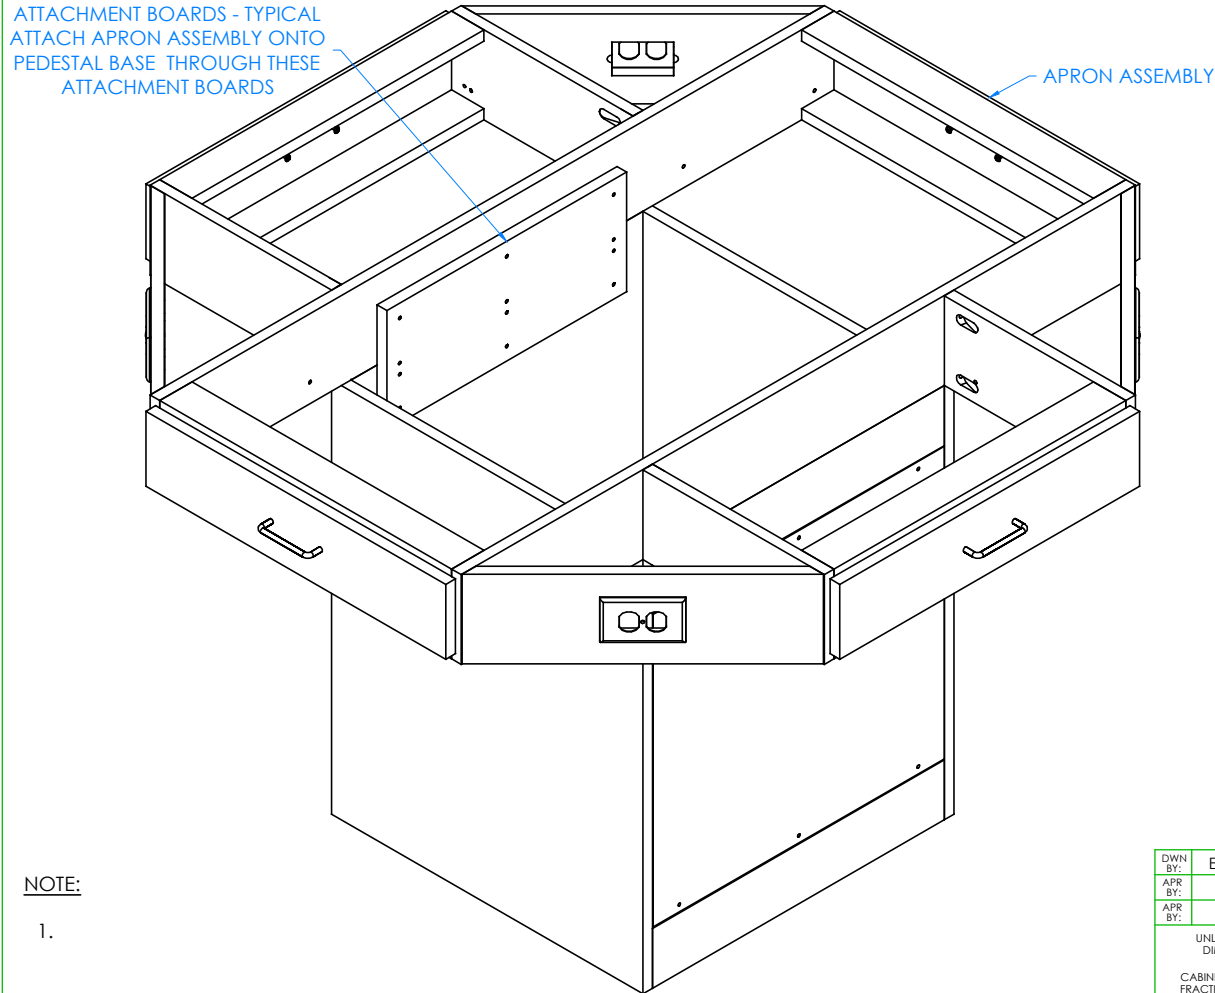

STEP 2:

- WITH HELP FROM ANOTHER PERSON, SET APRON ASSEMBLY ON PEDESTAL BASE WITH ATTACHMENT BOARDS SET INSIDE OF BASE.
- SCREW APRON ASSEMBLY ONTO PEDESTAL THROUGH ATTACHMENT BOARDS WITH HARDWARE PROVIDED.

NOTE:

1.

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES

CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES $\pm$ OVERALL -

A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.
REVISION LEVEL				


THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	4 OF 8	REV A

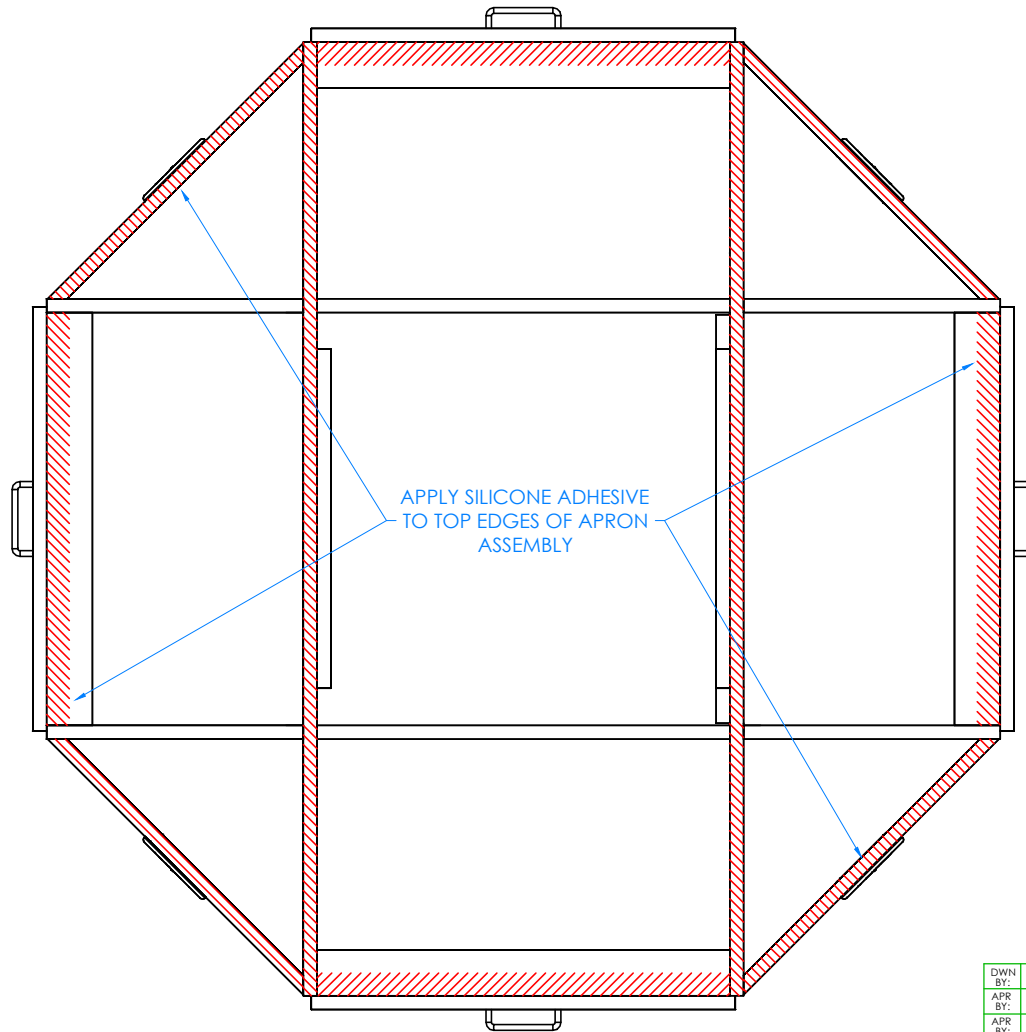

APPLY SILICONE ADHESIVE
TO TOP EDGES OF APRON
ASSEMBLY

STEP 3:

- APPLY SILICONE ADHESIVE TO TOP EDGES OF APRON ASSEMBLY.
- PLACE TOP ON UNIT WITH PROPER OVERHANG (CENTERED ON WORKSTATION).
- CLAMP ON TOP TO APRON ASSEMBLY TO REMOVE ANY WARP USING SHIMS AND C-CLAMPS, IF NEEDED, WHEN ALIGNING THE TOP (DO THIS BEFORE ADHESIVE ON EDGES SETS UP).
- LET CURE FOR 6-12 HOURS.

NOTE:

1.

TOP VIEW OF WORKSTATION SHOWN

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES

CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES $\pm$ OVERALL -

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS

A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.

REVISION LEVEL

DRAWING NUMBER:

OCTAGON WORKSTATION

SCALE:


NTS

SHEET:

5 OF 8

REVISION:

REV A

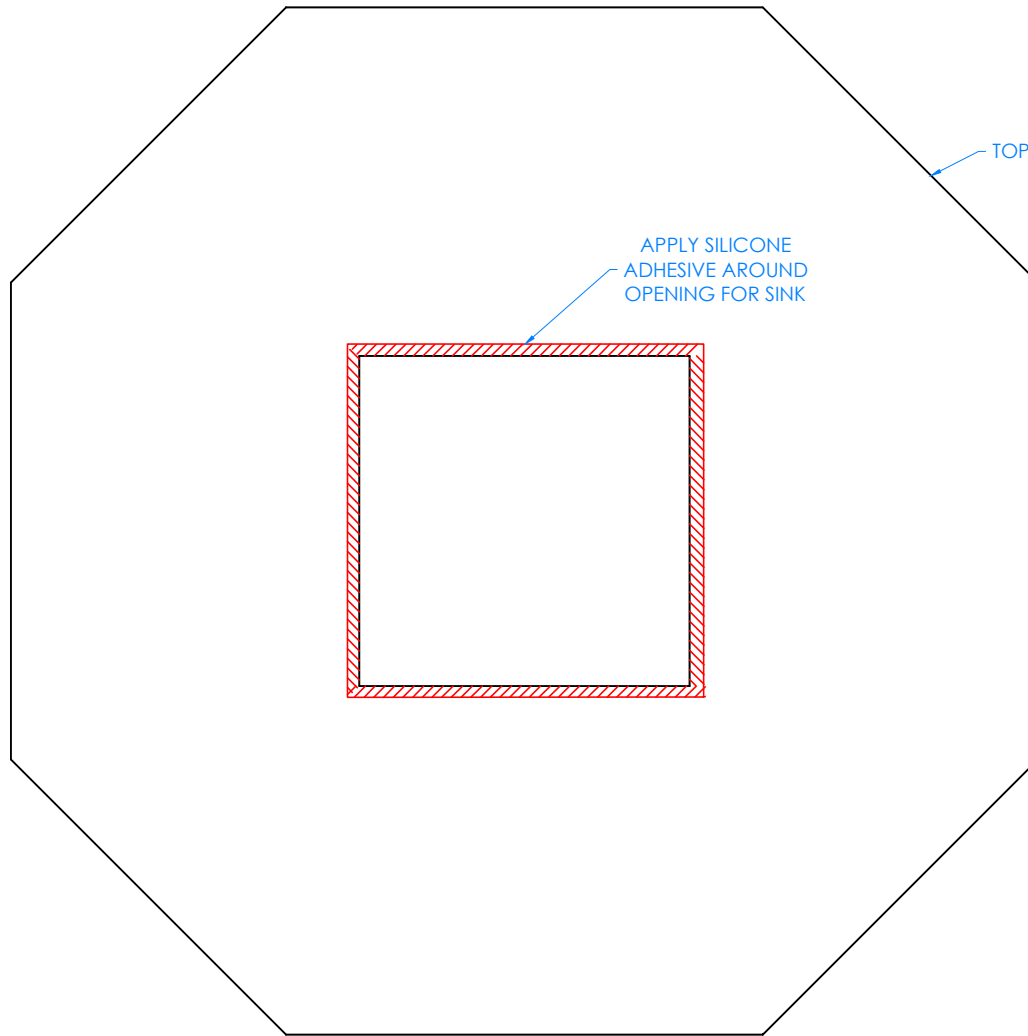

NOTE:

1.

STEP 4:

- IF YOU DO NOT HAVE A "K" SERIES UNIT, SKIP TO STEP 5.
- APPLY SILICONE ADHESIVE TO SINK OPENING ON TOP.
- LOWER SINK INTO OPENING.
- WIPE OFF ANY EXCESS CAULK AND ALLOW TO SET.
- LET CURE FOR 6-12 HOURS.

TOP VIEW OF WORKSTATION SHOWN

A	CREATED DRAWING	11/16/16	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.
REVISION LEVEL				

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	
UNLESS OTHERWISE SPECIFIED DIMENSION ARE IN INCHES			
CABINET SQUARENESS ± .0625 FRACTIONAL VALUES ± 1/32" - ALL VALUES ± OVERALL -			


THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
**OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS**

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	6 OF 8	REV A

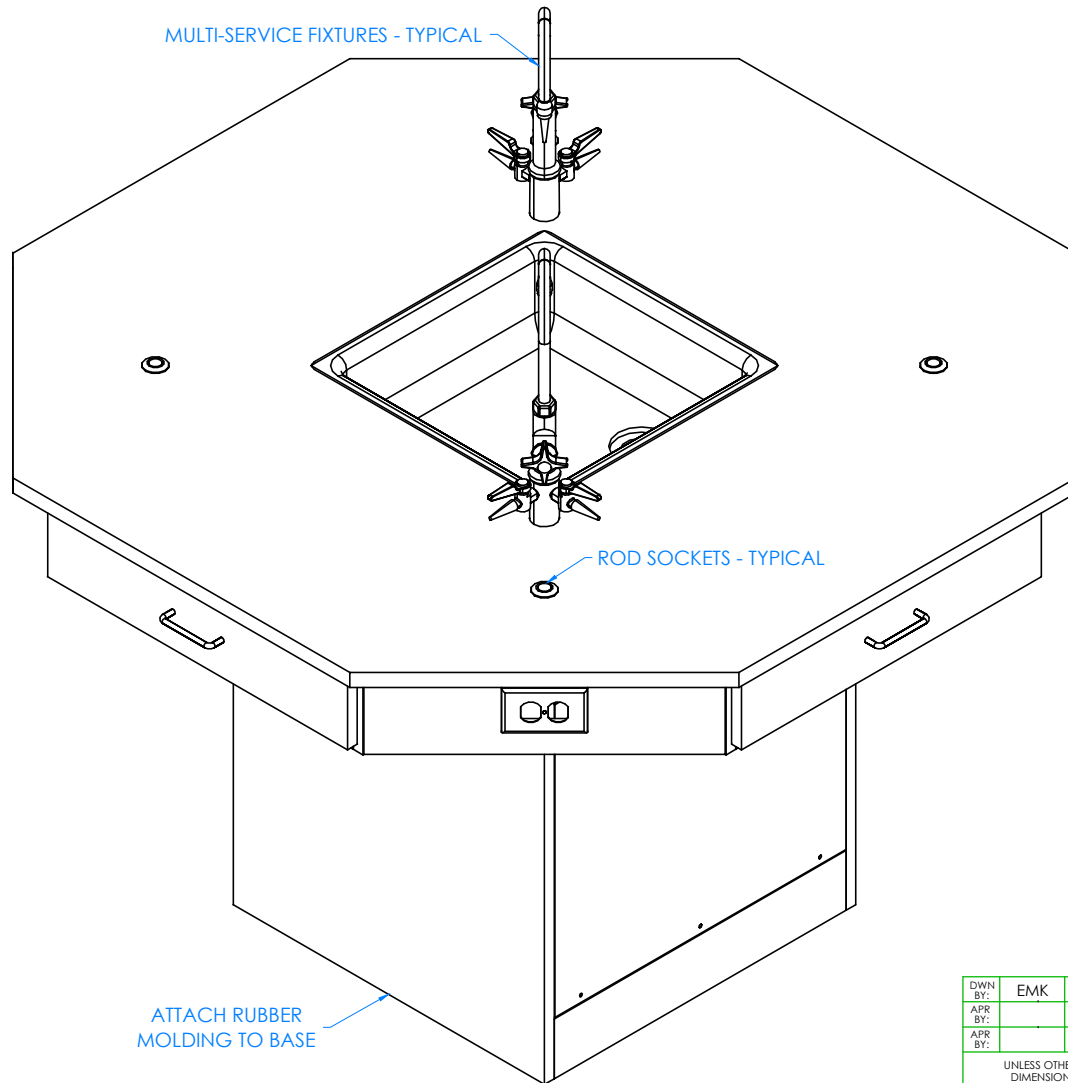

STEP 5:

- ATTACH RUBBER MOLDING TO BASE OF WORKSTATION USING CONTACT CEMENT.
- SCREW STAINLESS STEEL CORNER BRACKETS ON EACH CORNER OVER BASE MOLDING WITH HARDWARE PROVIDED.
- IF YOU HAVE A "K" SERIES UNIT, INSTALL MULTI-SERVICE FIXTURES IN HOLES PROVIDED ON TOP.
- INSERT ROD SOCKETS INTO PRE-DRILLED HOLES IN TOP.

NOTE:

1. ALL WATER, ELECTRICAL, AND GAS CONNECTIONS SHOULD BE PERFORMED BY A TRAINED PROFESSIONAL PER LOCAL CODE.

COMPLETE UNIT SHOWN

DWN BY:	EMK	DWN DATE:	11/16/16
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES

CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES $\pm$ OVERALL -

REV.	DESCRIPTION	DATE	NAME	ECN NO.
A	CREATED DRAWING	11/16/16	EMK	-
REVISION LEVEL				

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
OCTAGON WORKSTATION W/ PEDESTAL
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:	SCALE:	SHEET:	REVISION:
OCTAGON WORKSTATION	NTS	7 OF 8	REV A

TROUBLESHOOTING YOUR GFCI ELECTRICAL RECEPTACLE:

PLEASE NOTE: THROUGHOUT ANY OF THE FOLLOWING STEPS (PROCEDURES); IF YOU ARE NOT SURE YOU CAN DO THIS JOB SAFELY, AND COMPETENTLY, REFER THIS WORK TO QUALIFIED PROFESSIONAL!

If your unit comes equipped with a GFCI (Ground Fault Circuit Interrupter) electrical receptacle, and there is no power in the receptacle please consider/check the following:

- The extension cord (if being used) is working properly.
- The breaker hasn't been tripped, or turned off.

This type of GFCI has two testing-related buttons on it. One button is appropriately labeled "TEST", and the other button is labeled "RESET". To test the GFCI receptacle follow these steps:

- Plug in an appliance (lamp or night light) into the outlet. The light should now be on. Then press the "TEST" button on the GFCI. The GFCI "RESET" button should pop out, and the light should go out.
- If the "RESET" button pops out, but the light doesn't go out, the GFCI has been improperly wired. In this case please contact a certified professional. There may also be a problem with other wiring in the same circuit.
- If the "RESET" button doesn't pop out, the GFCI is defective, or malfunctioned, and should be replaced.
- If the GFCI is functioning properly, and the lamp goes out, press the "RESET" button to restore power to the outlet.

Conversely, if you have a GFI that has tripped (which is common) and it will not reset, you may have a wiring short in the circuit, a defective appliance on the circuit, or the GFI itself has become defective. To test a tripping GFCI follow these steps:

- Remove every appliance connected to the GFCI's circuit and reset it. If it doesn't reset there may either be a wiring fault behind a socket outlet, or your GFCI itself has become faulty.
- Make sure whatever you are plugging into the GFCI is dry and not damaged.
- Only plug in one item at a time. If you are plugging in a defective item it will cause the GFCI to trip, and that item therefore should be replaced.

If you are still having difficulty the easiest way to troubleshoot a GFI is to obtain a GFI tester, which is available at most hardware stores. It plugs into the GFI outlet, and will supply you with a "snapshot" of your connections, indicating wiring problems and/or the condition of the GFI. Another way to troubleshoot is to simply purchase a new GFI and install it.