


PORTABLE CARPORT

3X9 M
10X30 FT

SKU:E-YHPT2439-G037

ASSEMBLY INSTRUCTIONS

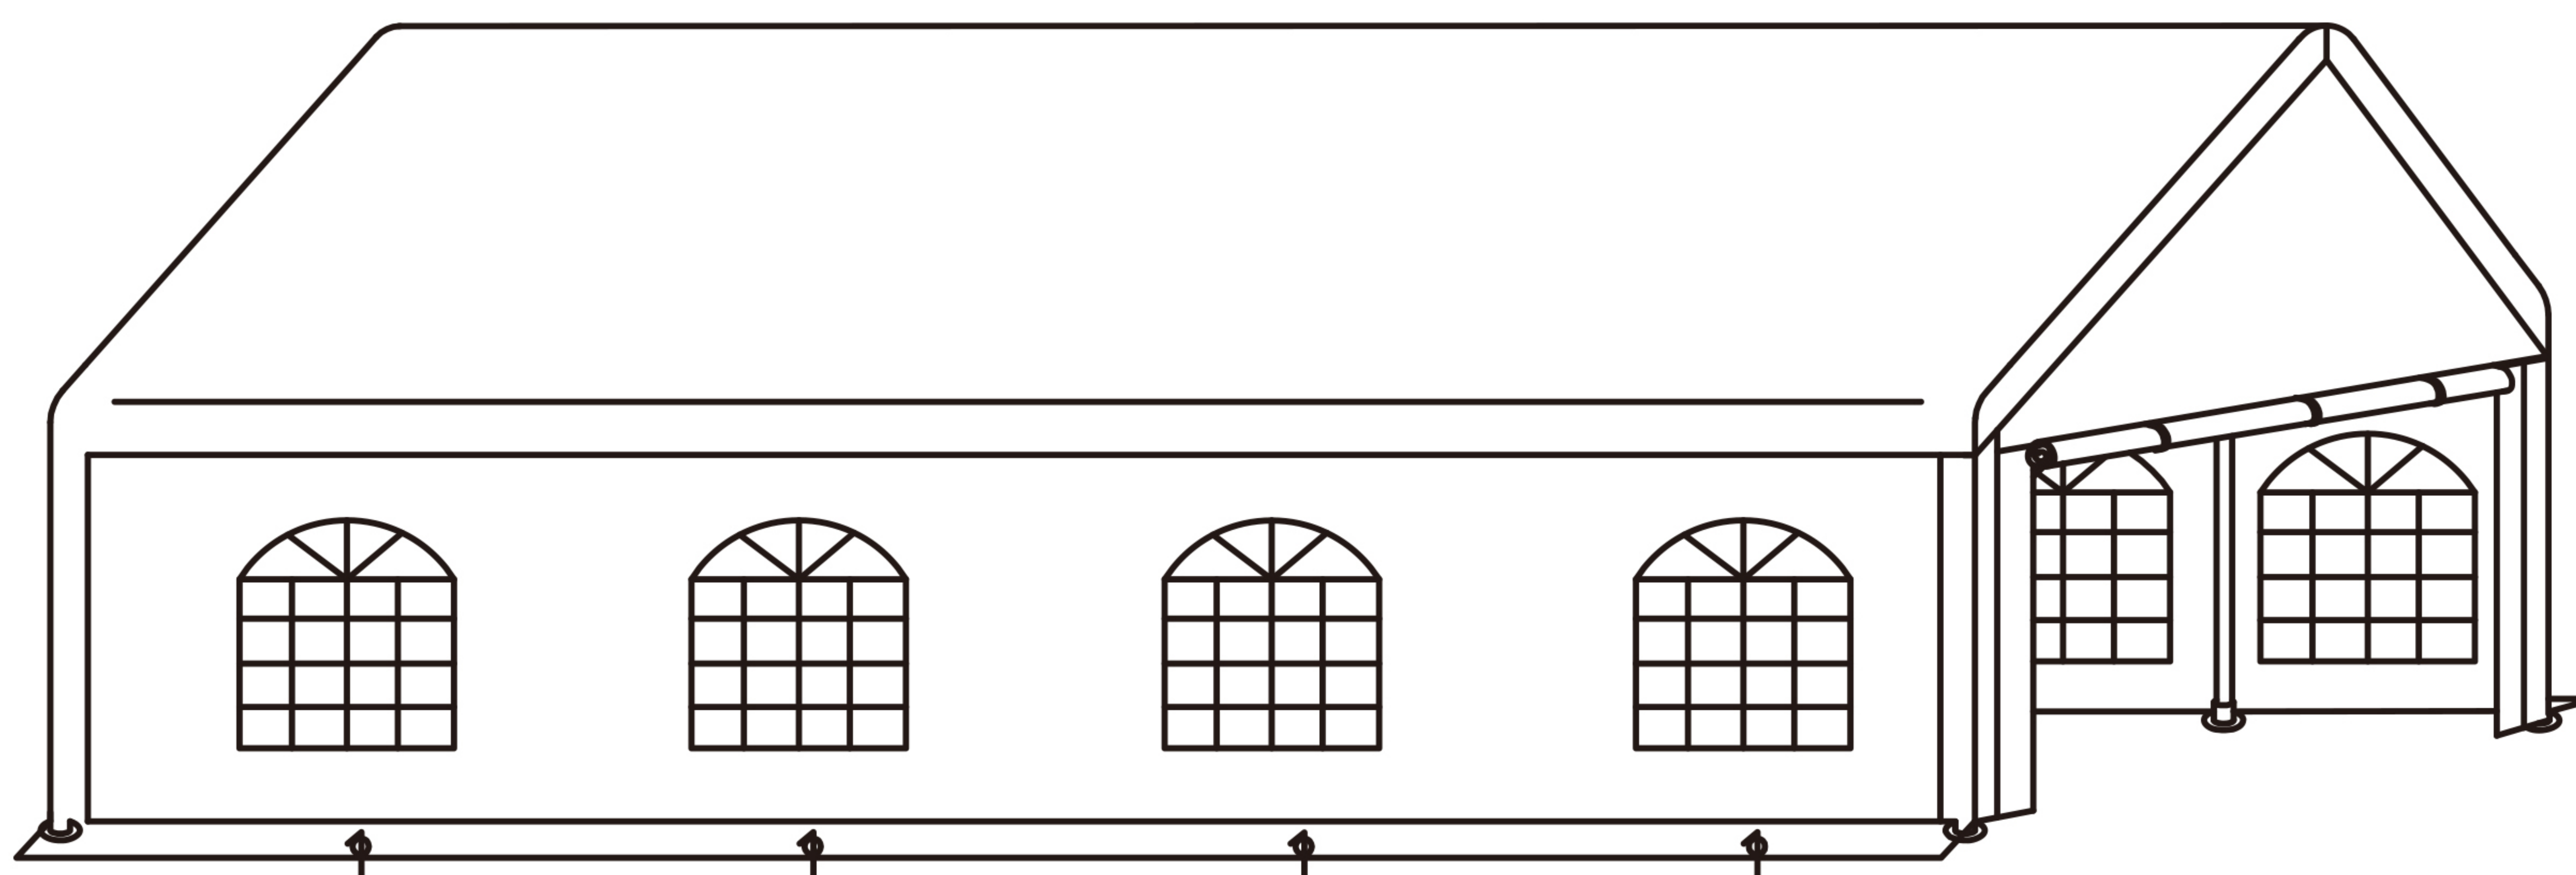


Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

TOOLS RECOMMENDED

*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.

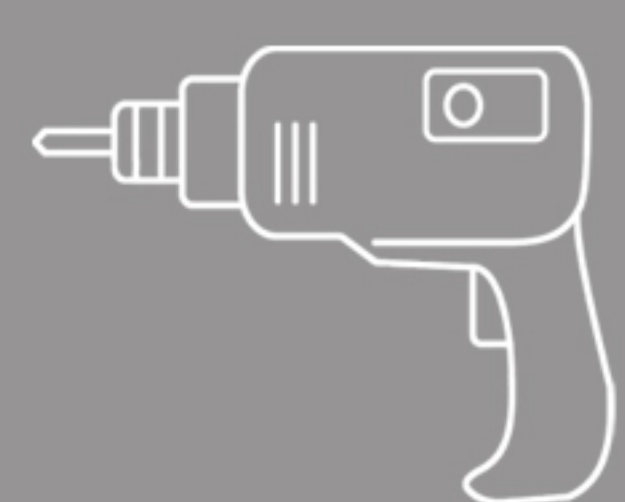

DRILL



RUBBER Mallet




STEPLADDER
(6.5Ft Or More)



SAFETY HAT




GLOVES

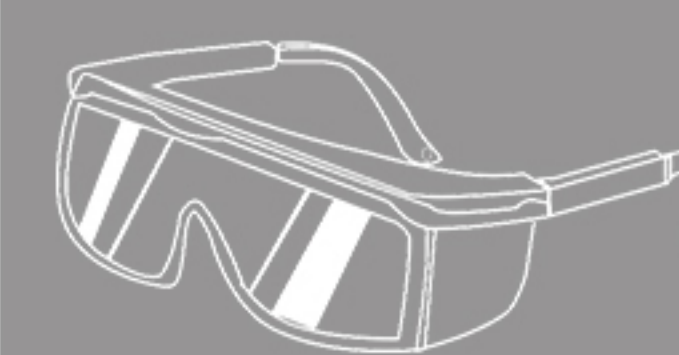

SAFETY GOGGLES



ATTENTIONS

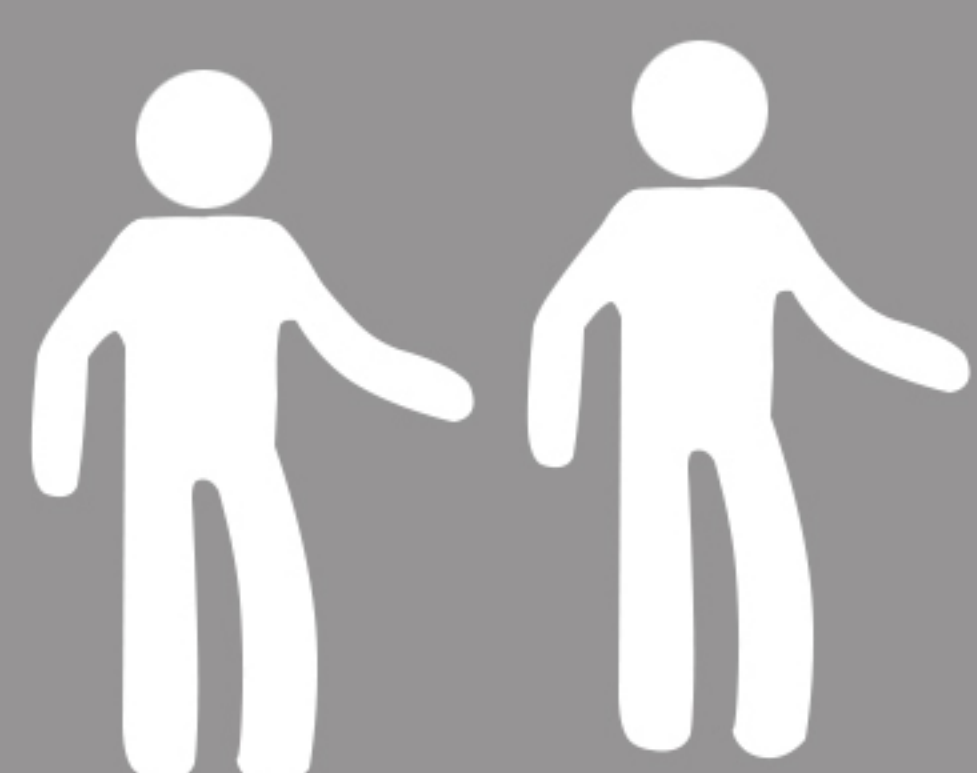

Two or more people
are required for
assembly



To better align the screws
for practical situations, do
not fully tighten screws
initially



Please reinforced the Gazebo
and do not use in heavy winds
or inclement weather



Make sure all screws are
tightened before use and
check all screws, buckles and
straps every 90 days



Since it is easy to lose many
small accessories during the
installation, please collect all the
the screw accessories before the
assembly is completed



Please clear the snow off the
roof in time for the heavy
snowfall and do not use it

ACCESSORY CATALOGUE








BOX 1

SKU:E-YHPT2439-G037-1


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		10	3		10
2		12			

BOX 2

SKU: E-YHPT2439-G037-2

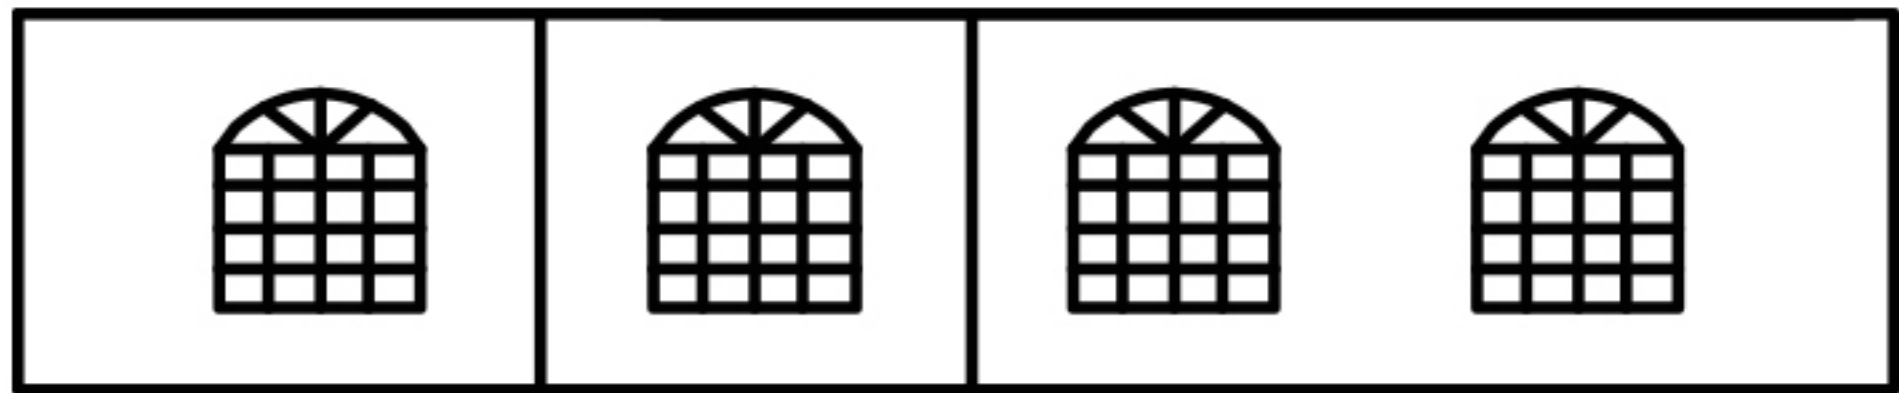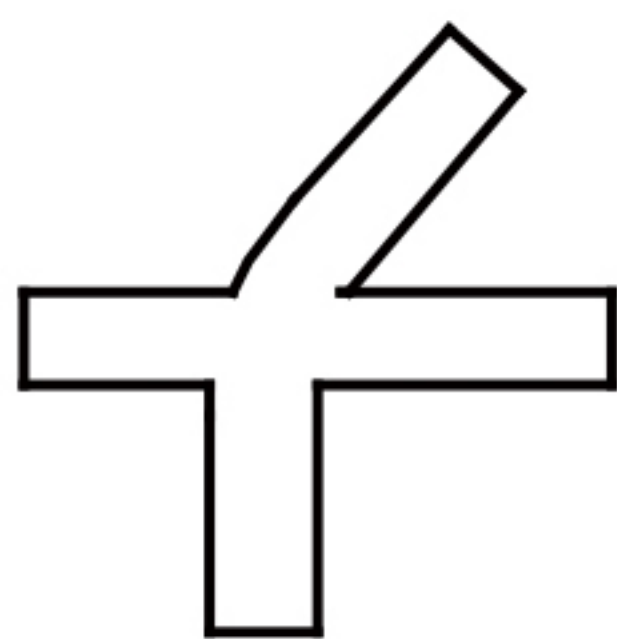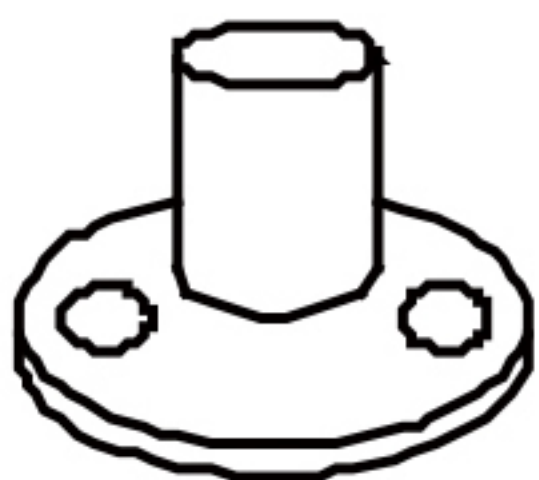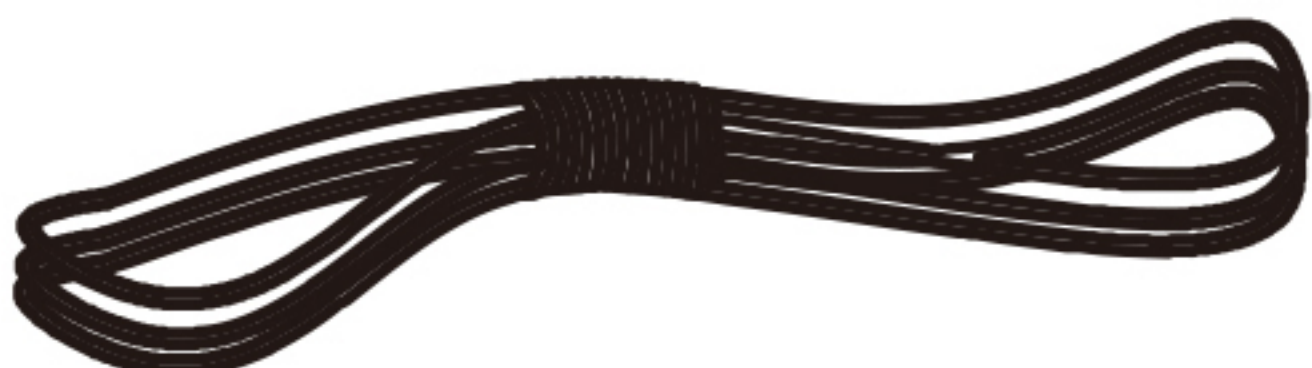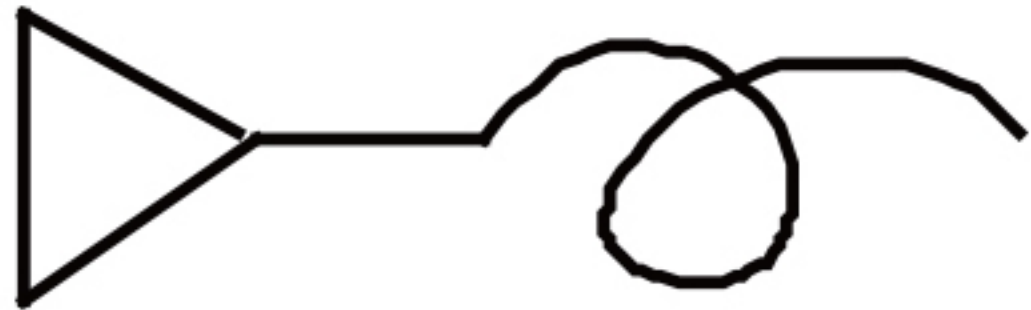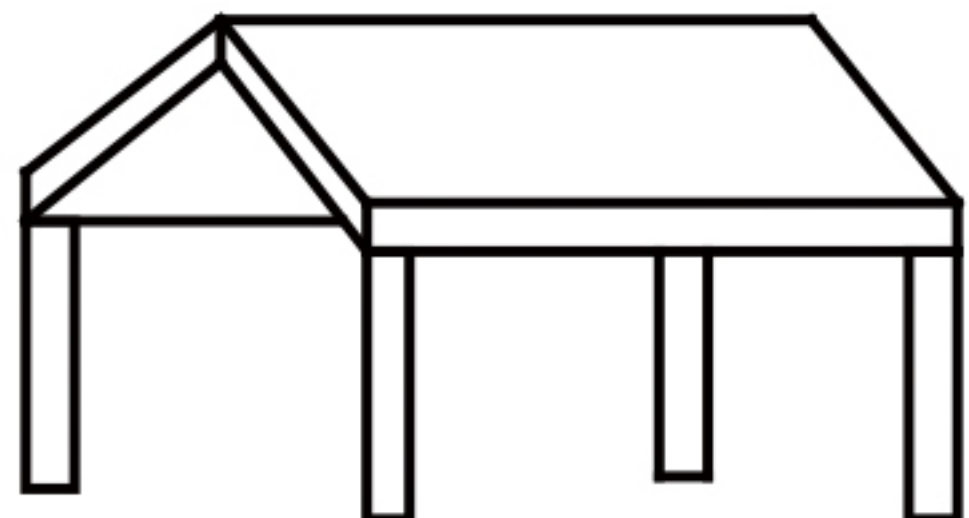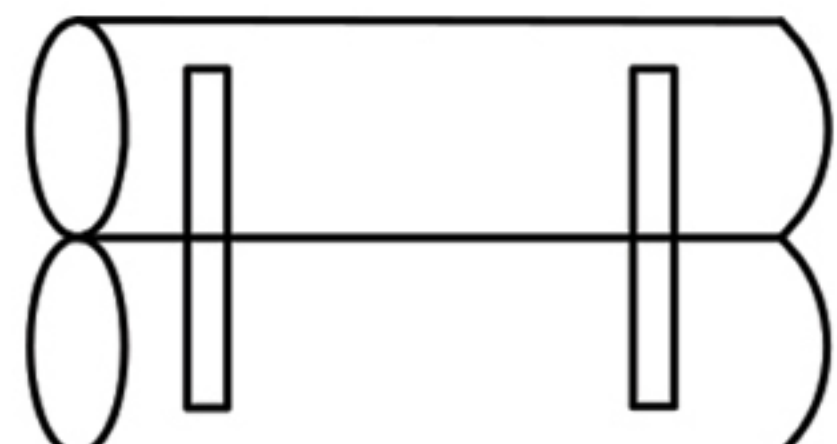Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		6	F		2
B		9	F1		2
C		10	G	 M8X50mm	10
D		4	H		4
D1	 ø4*150mm	18	I		64
E		1	 X4  X2 SANDBAG		

ACCESSORY CATALOGUE

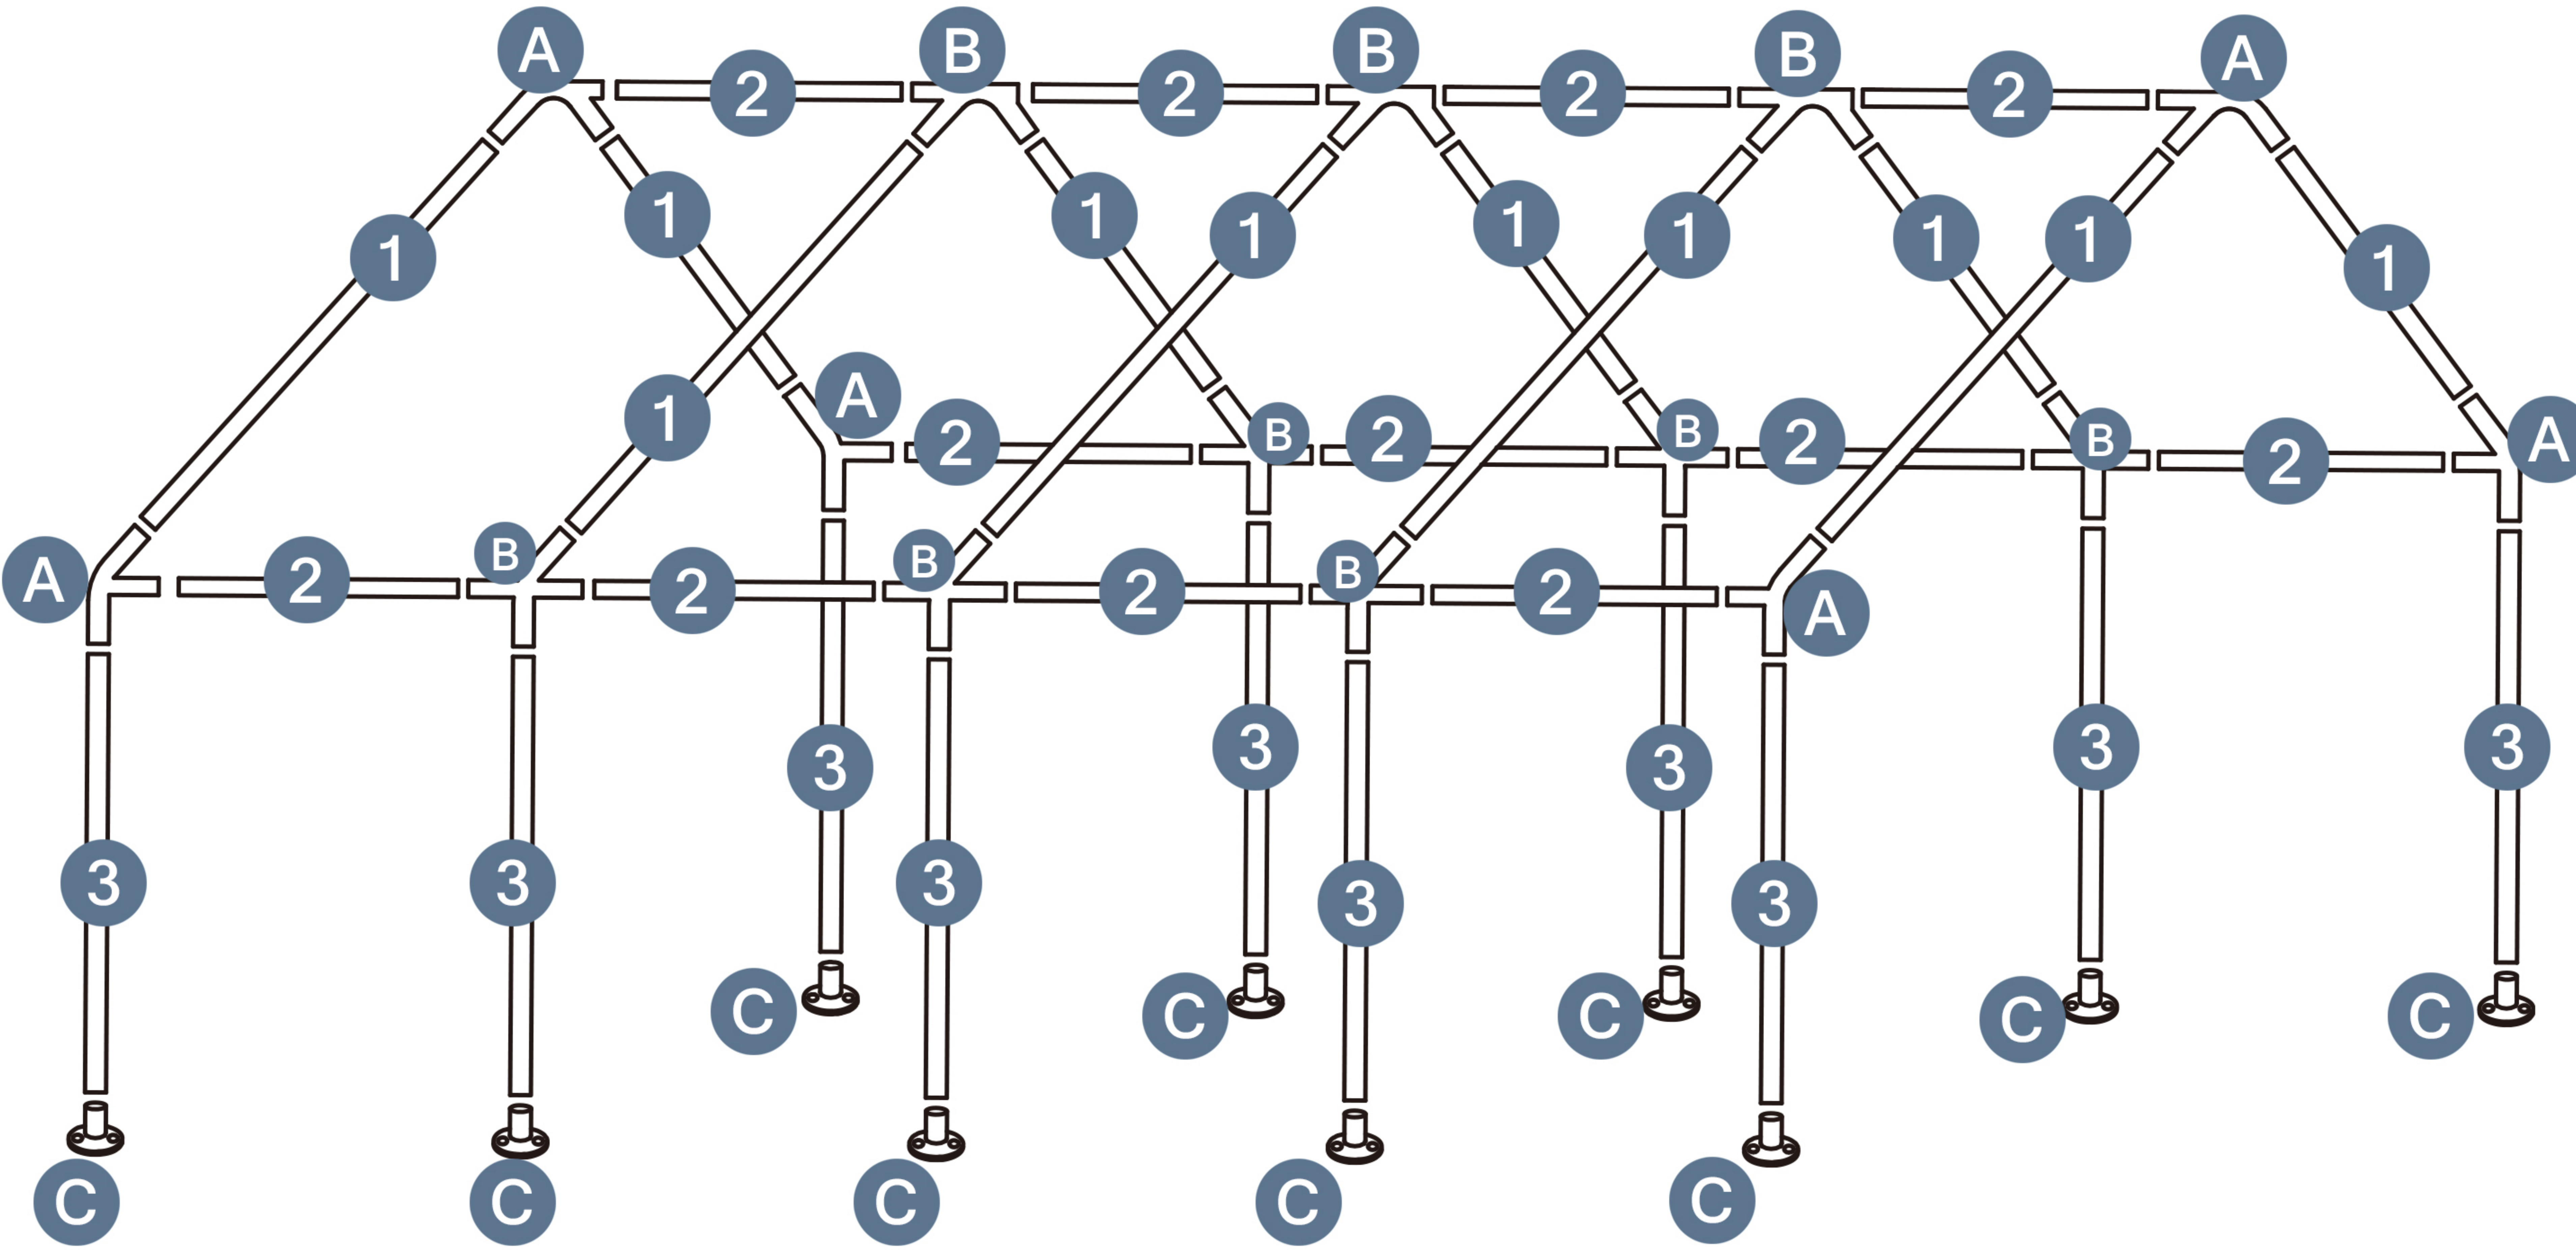

P1-1

STEP 1

Parts required



1 10pcs



2 12pcs





A 6pcs



B 9pcs


For convenience, please place each accessory according to the position shown in the figure, and then start to build.

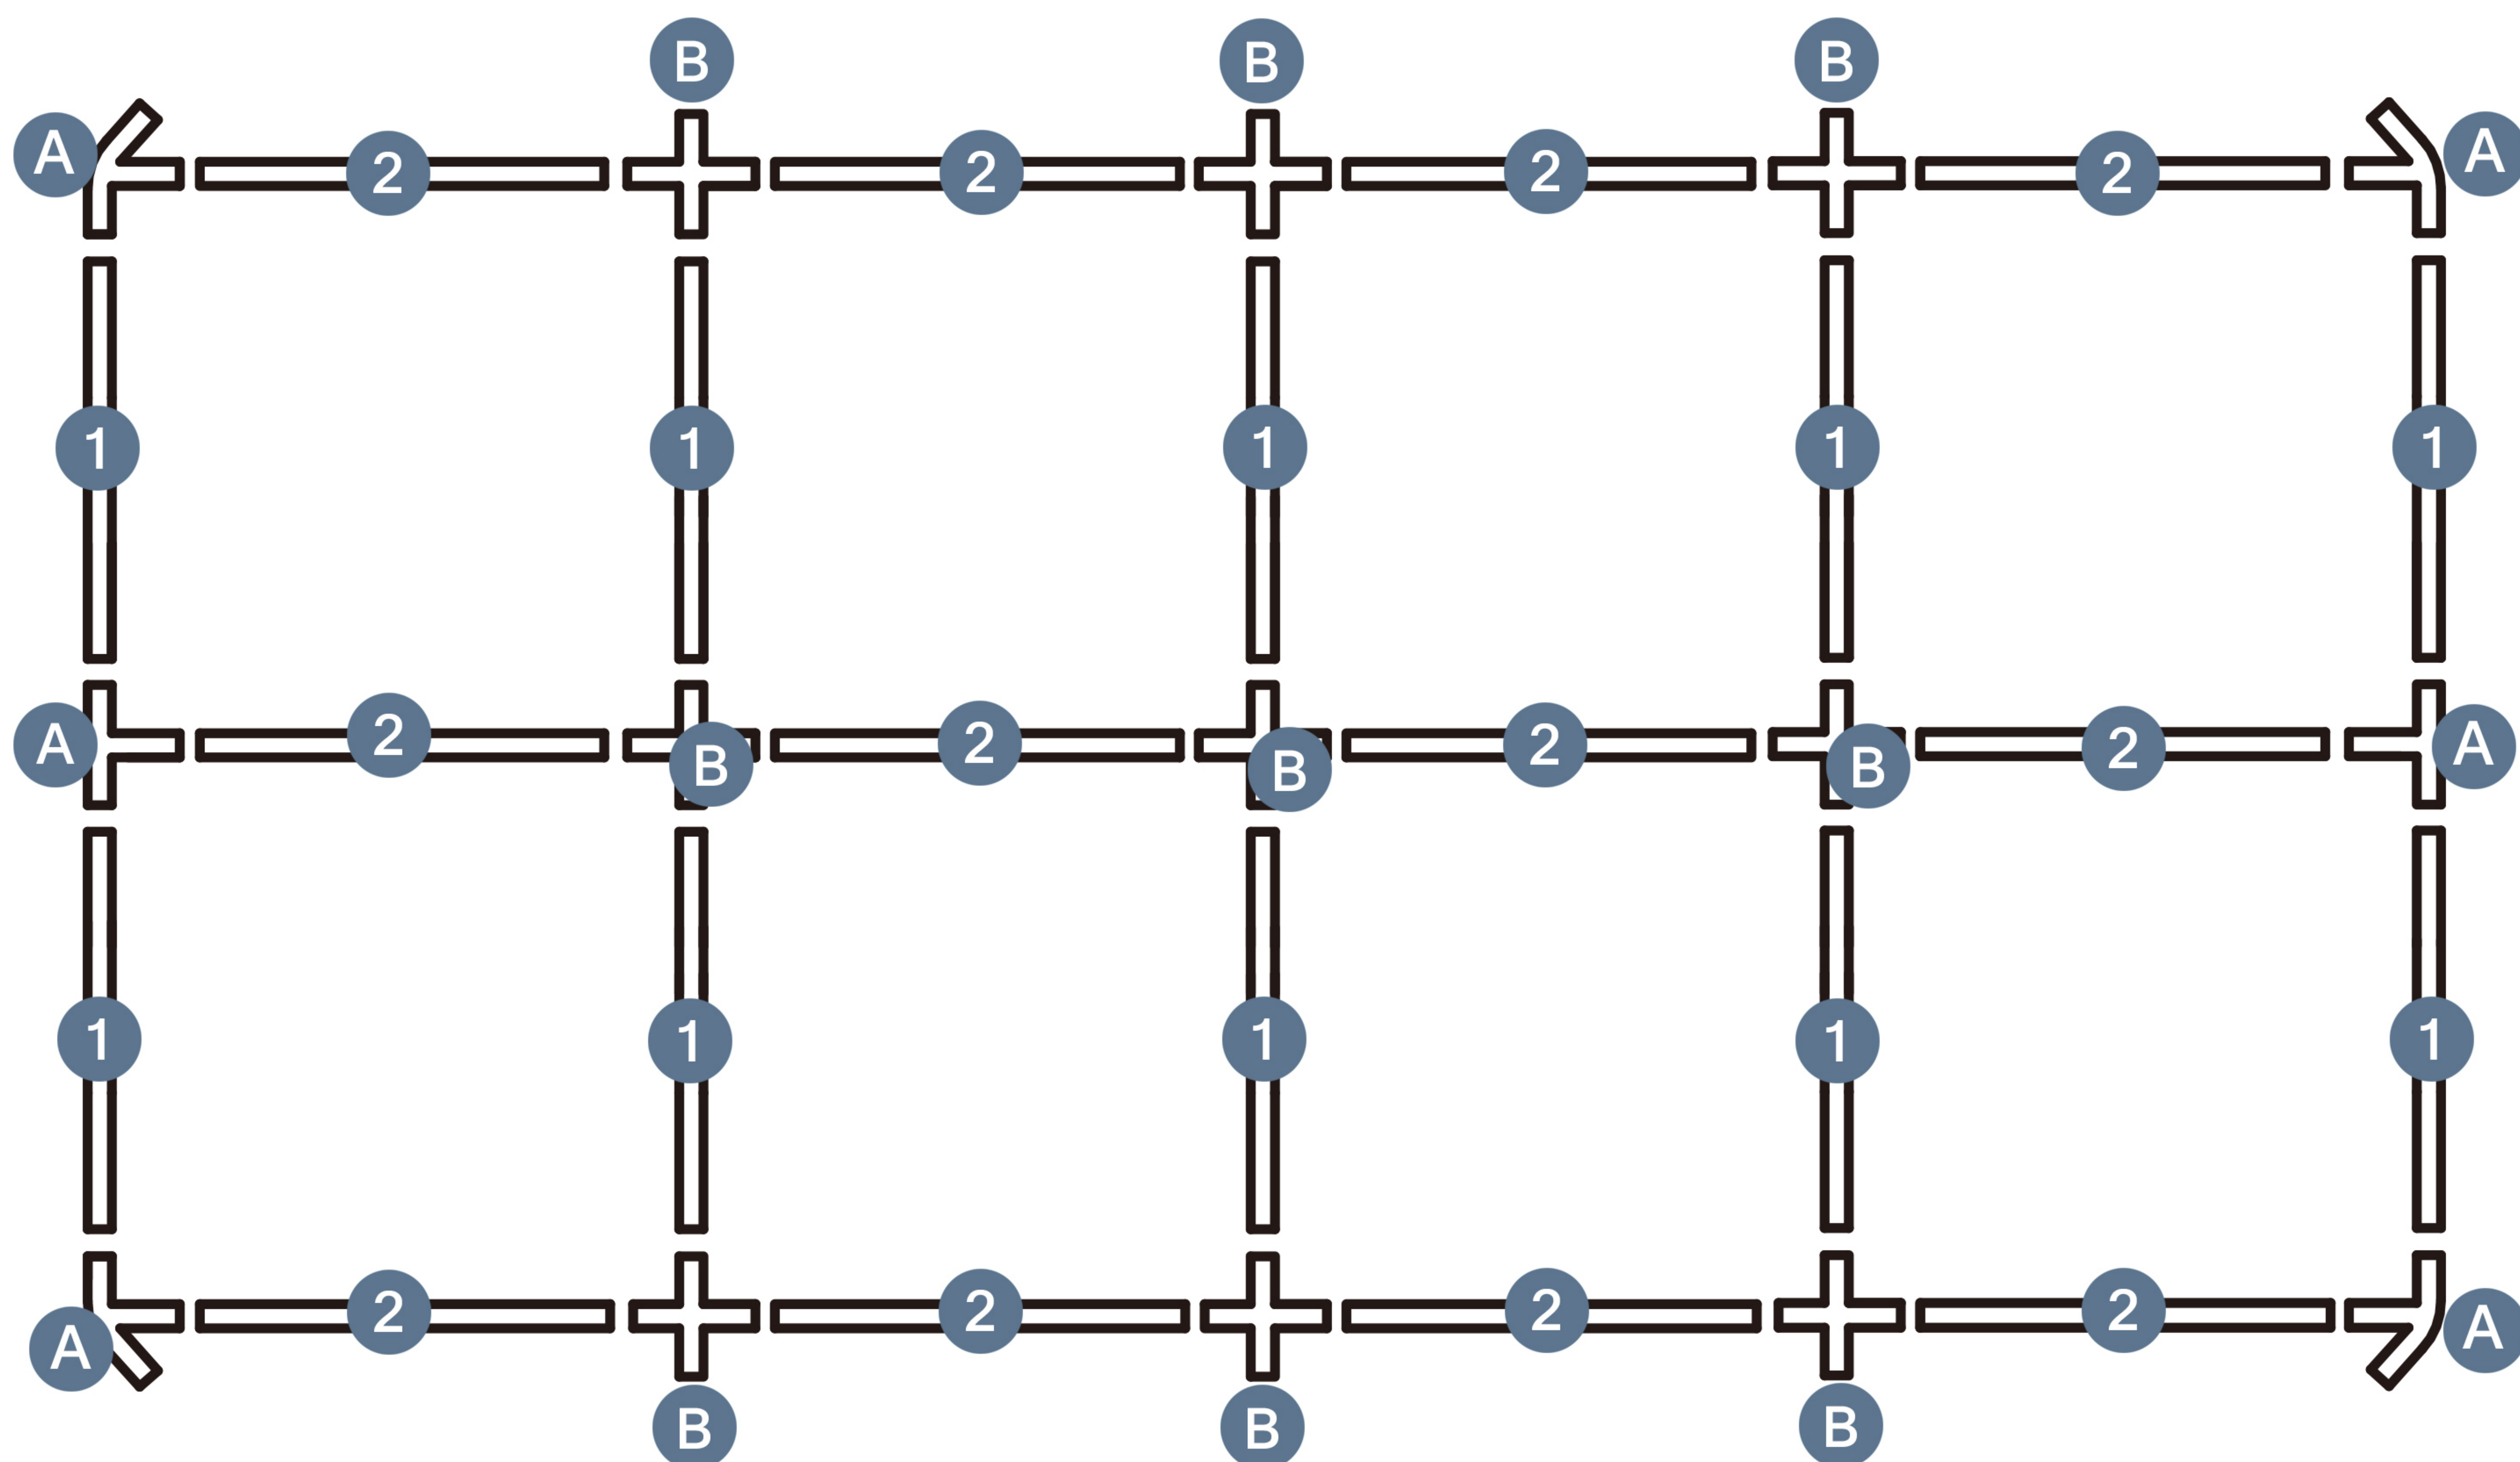

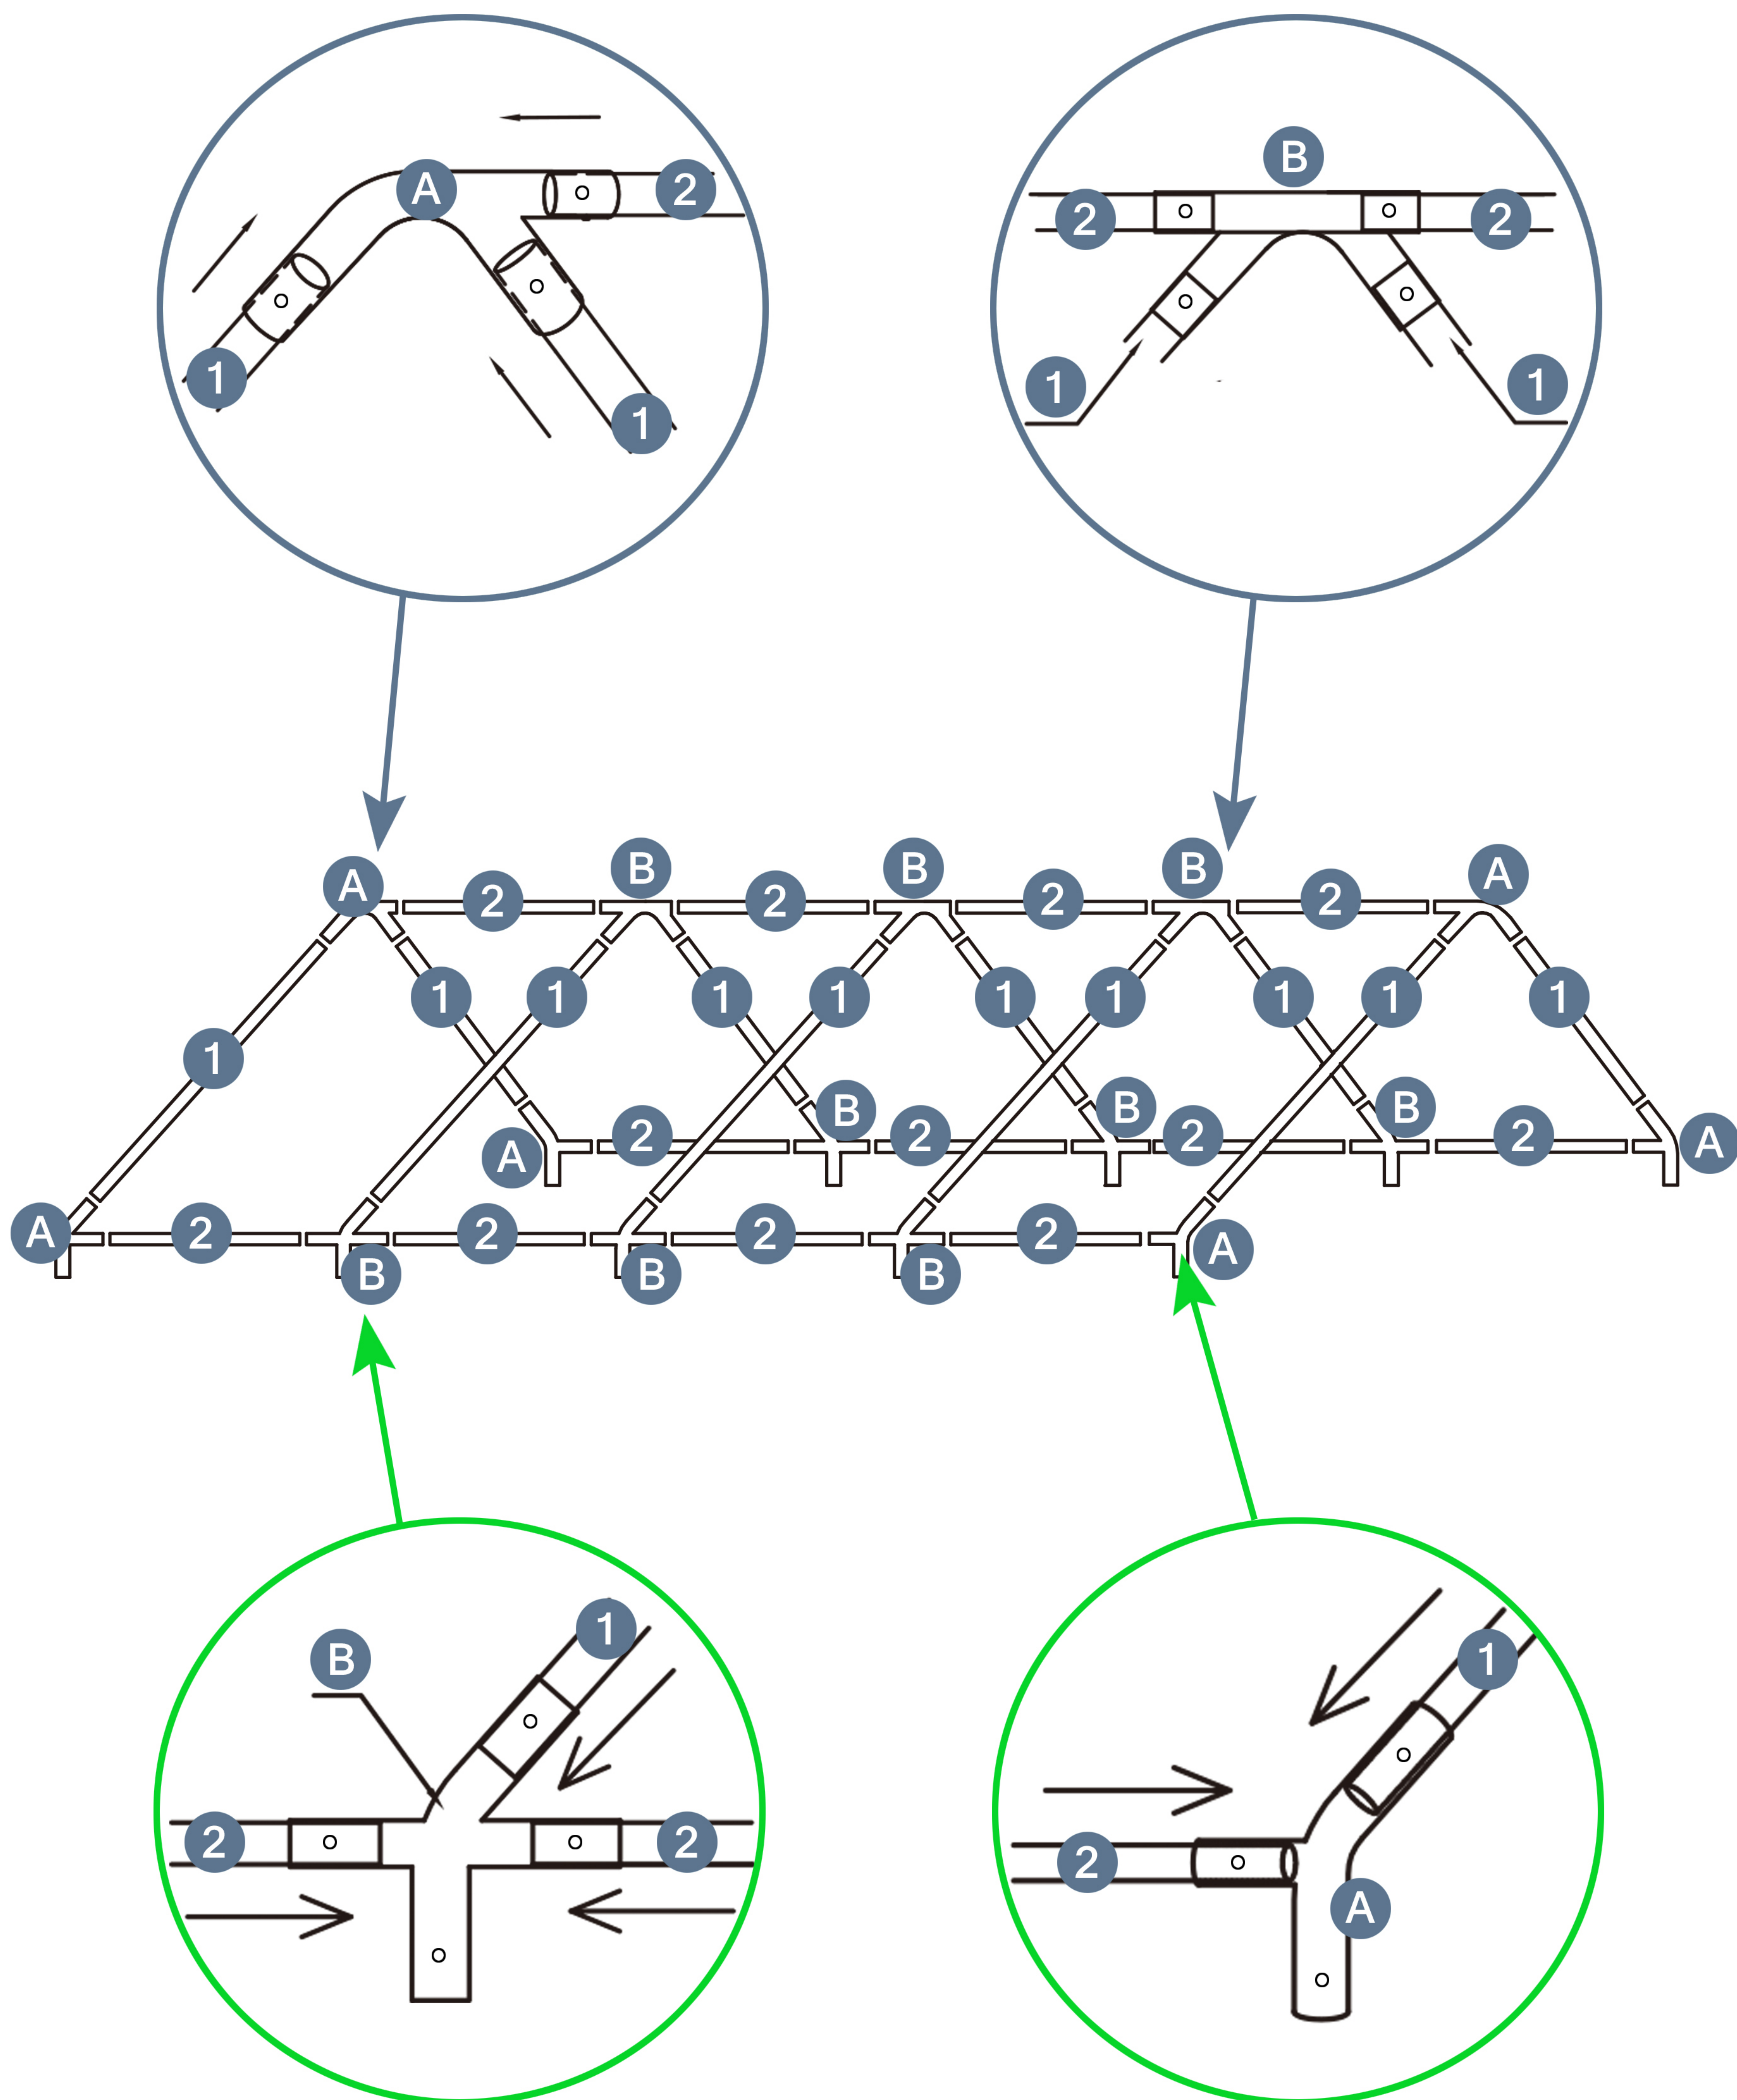


STEP2

Parts required

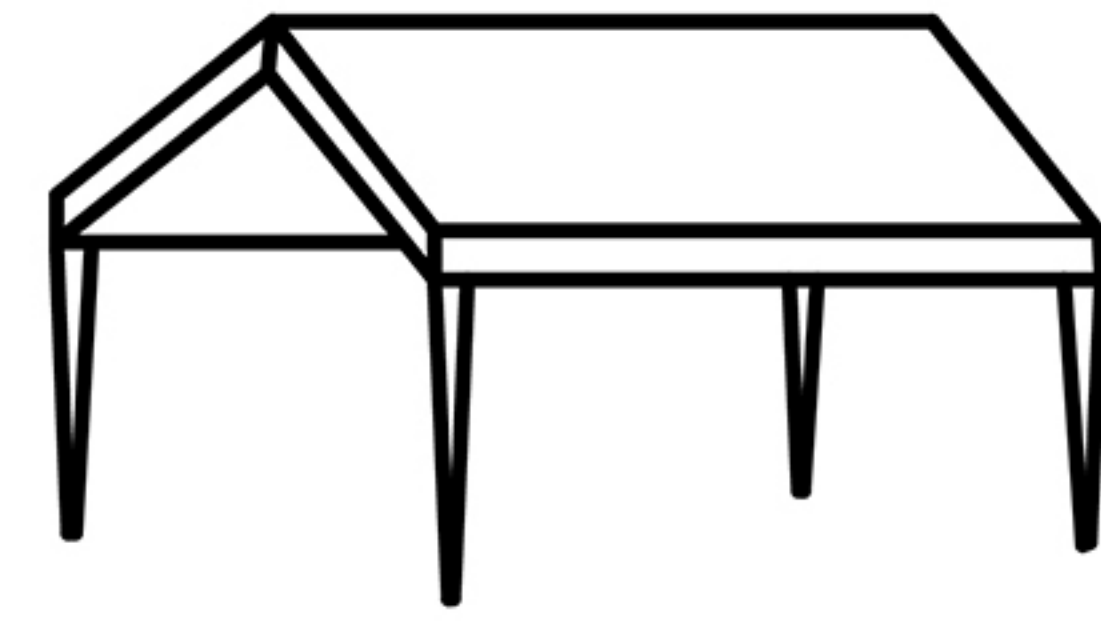

E 1pcs

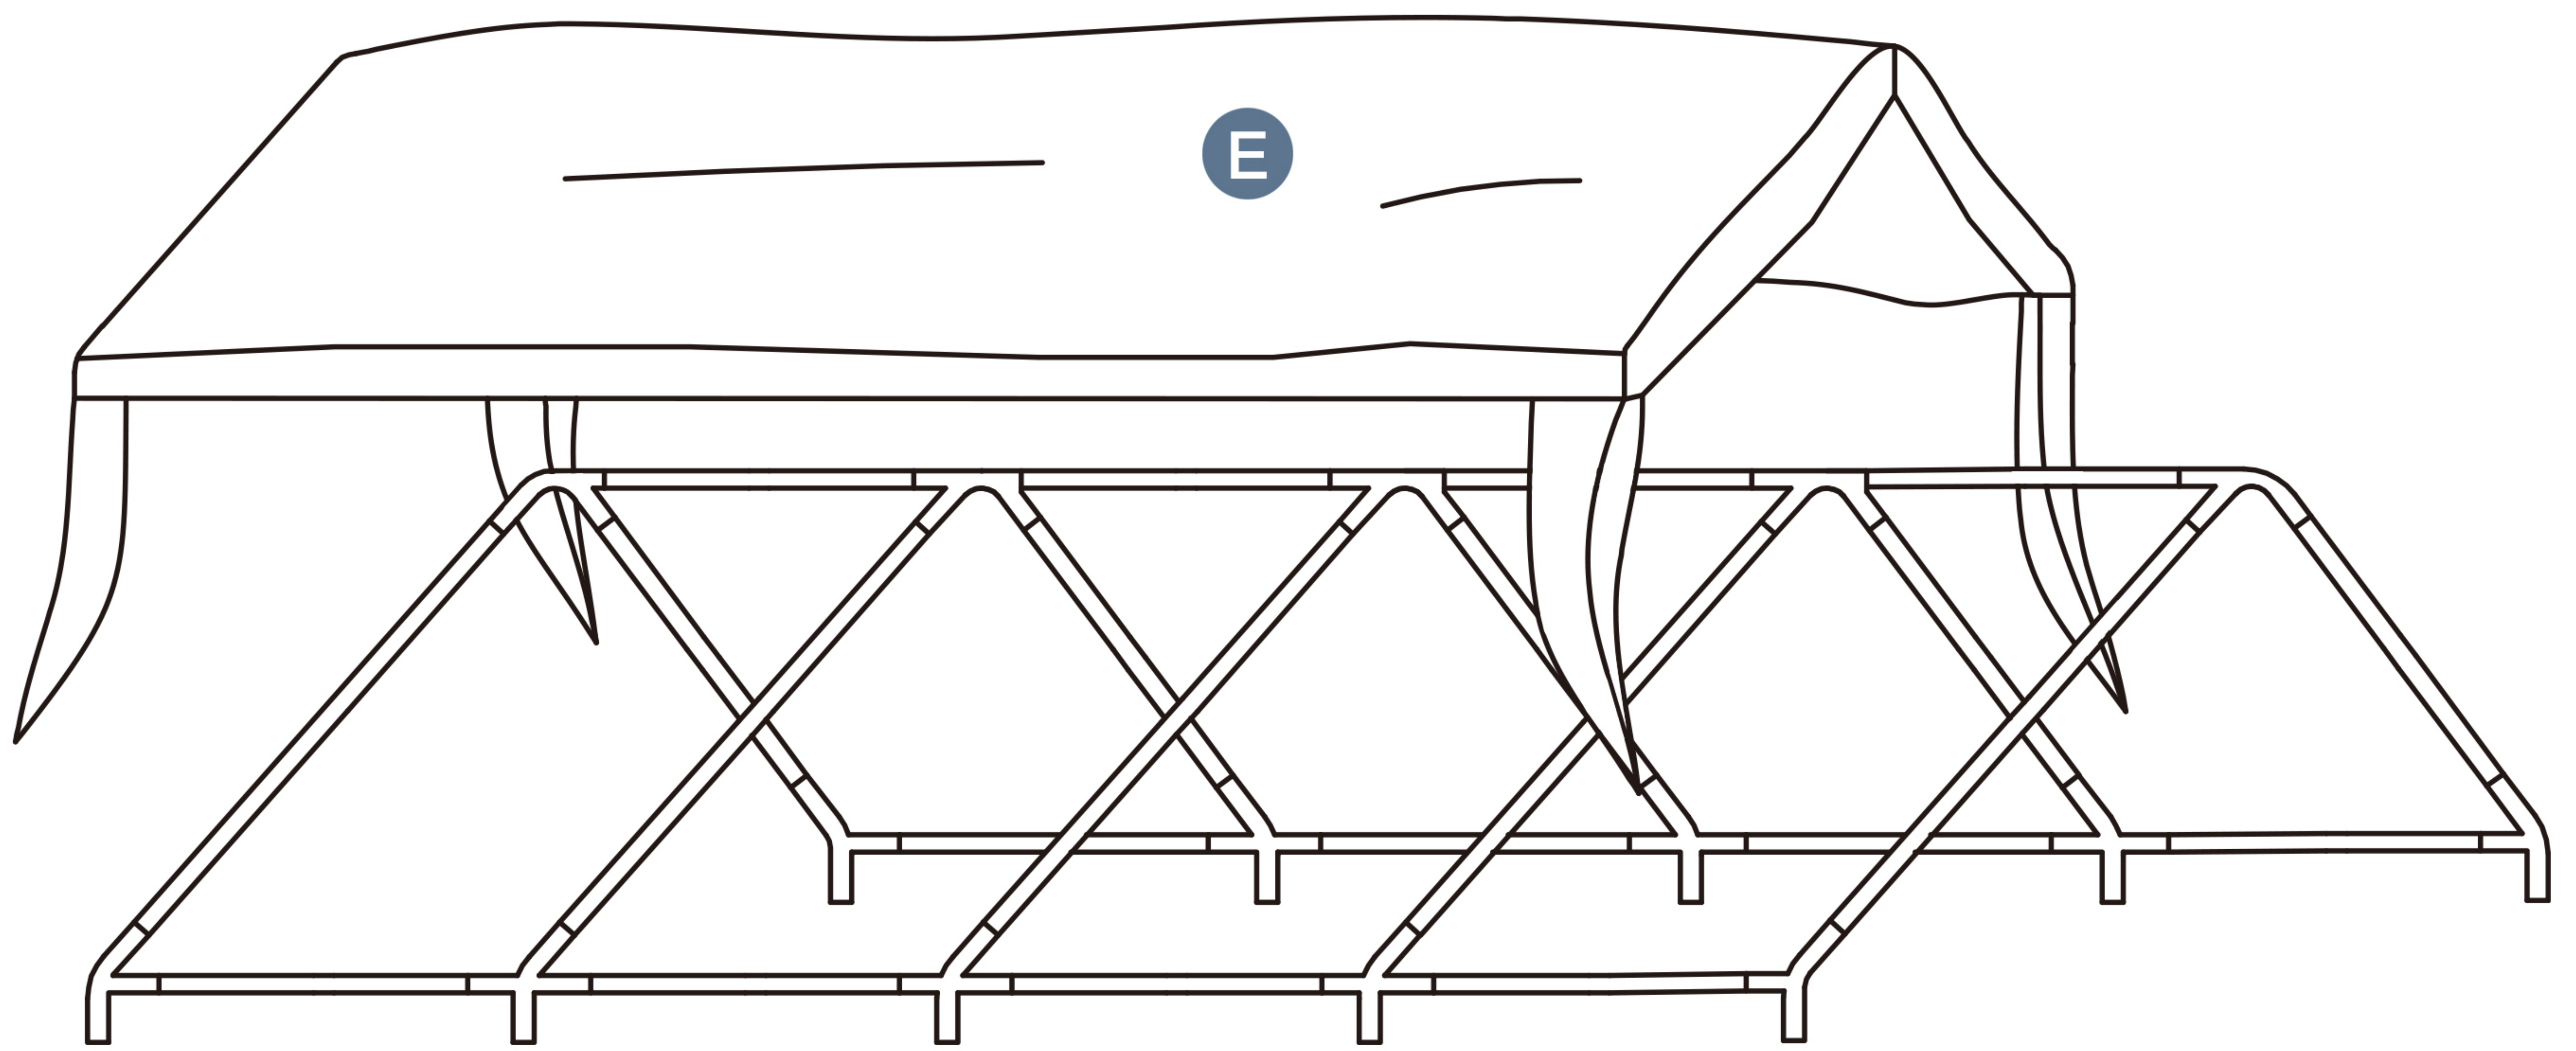


STEP 3

Parts required




3 5pcs

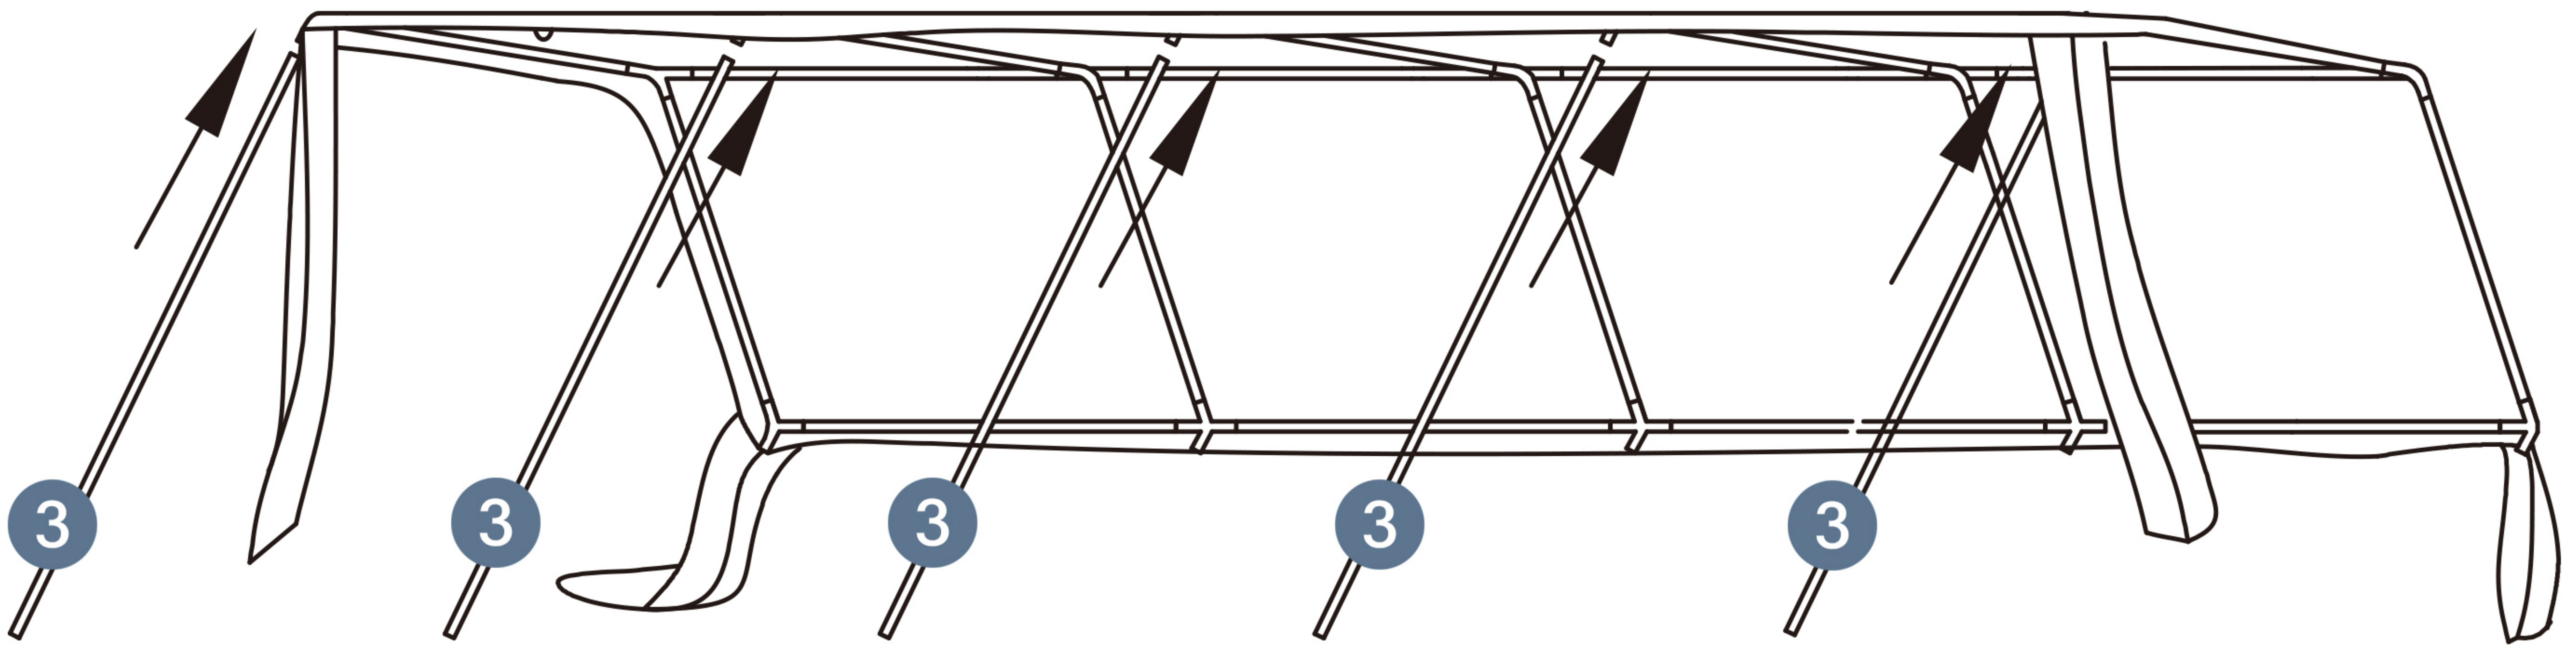


STEP4

Parts required

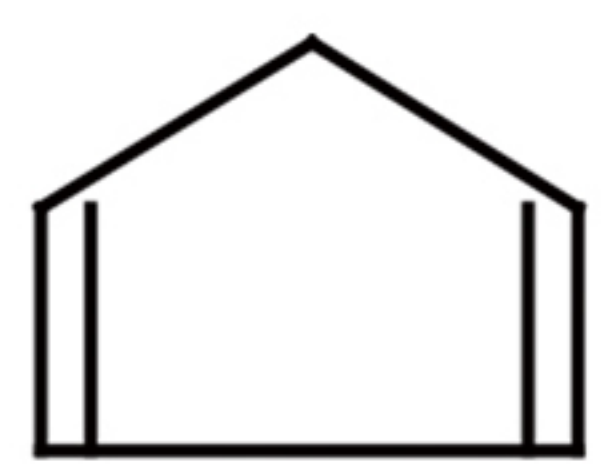

F1 2pcs

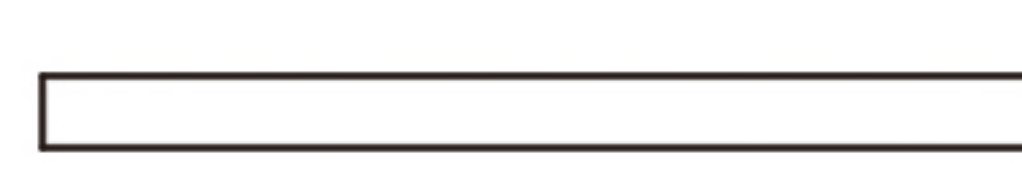



3 5pcs




I 16pcs

1 → 2

The installation method of I can refer to P1-2

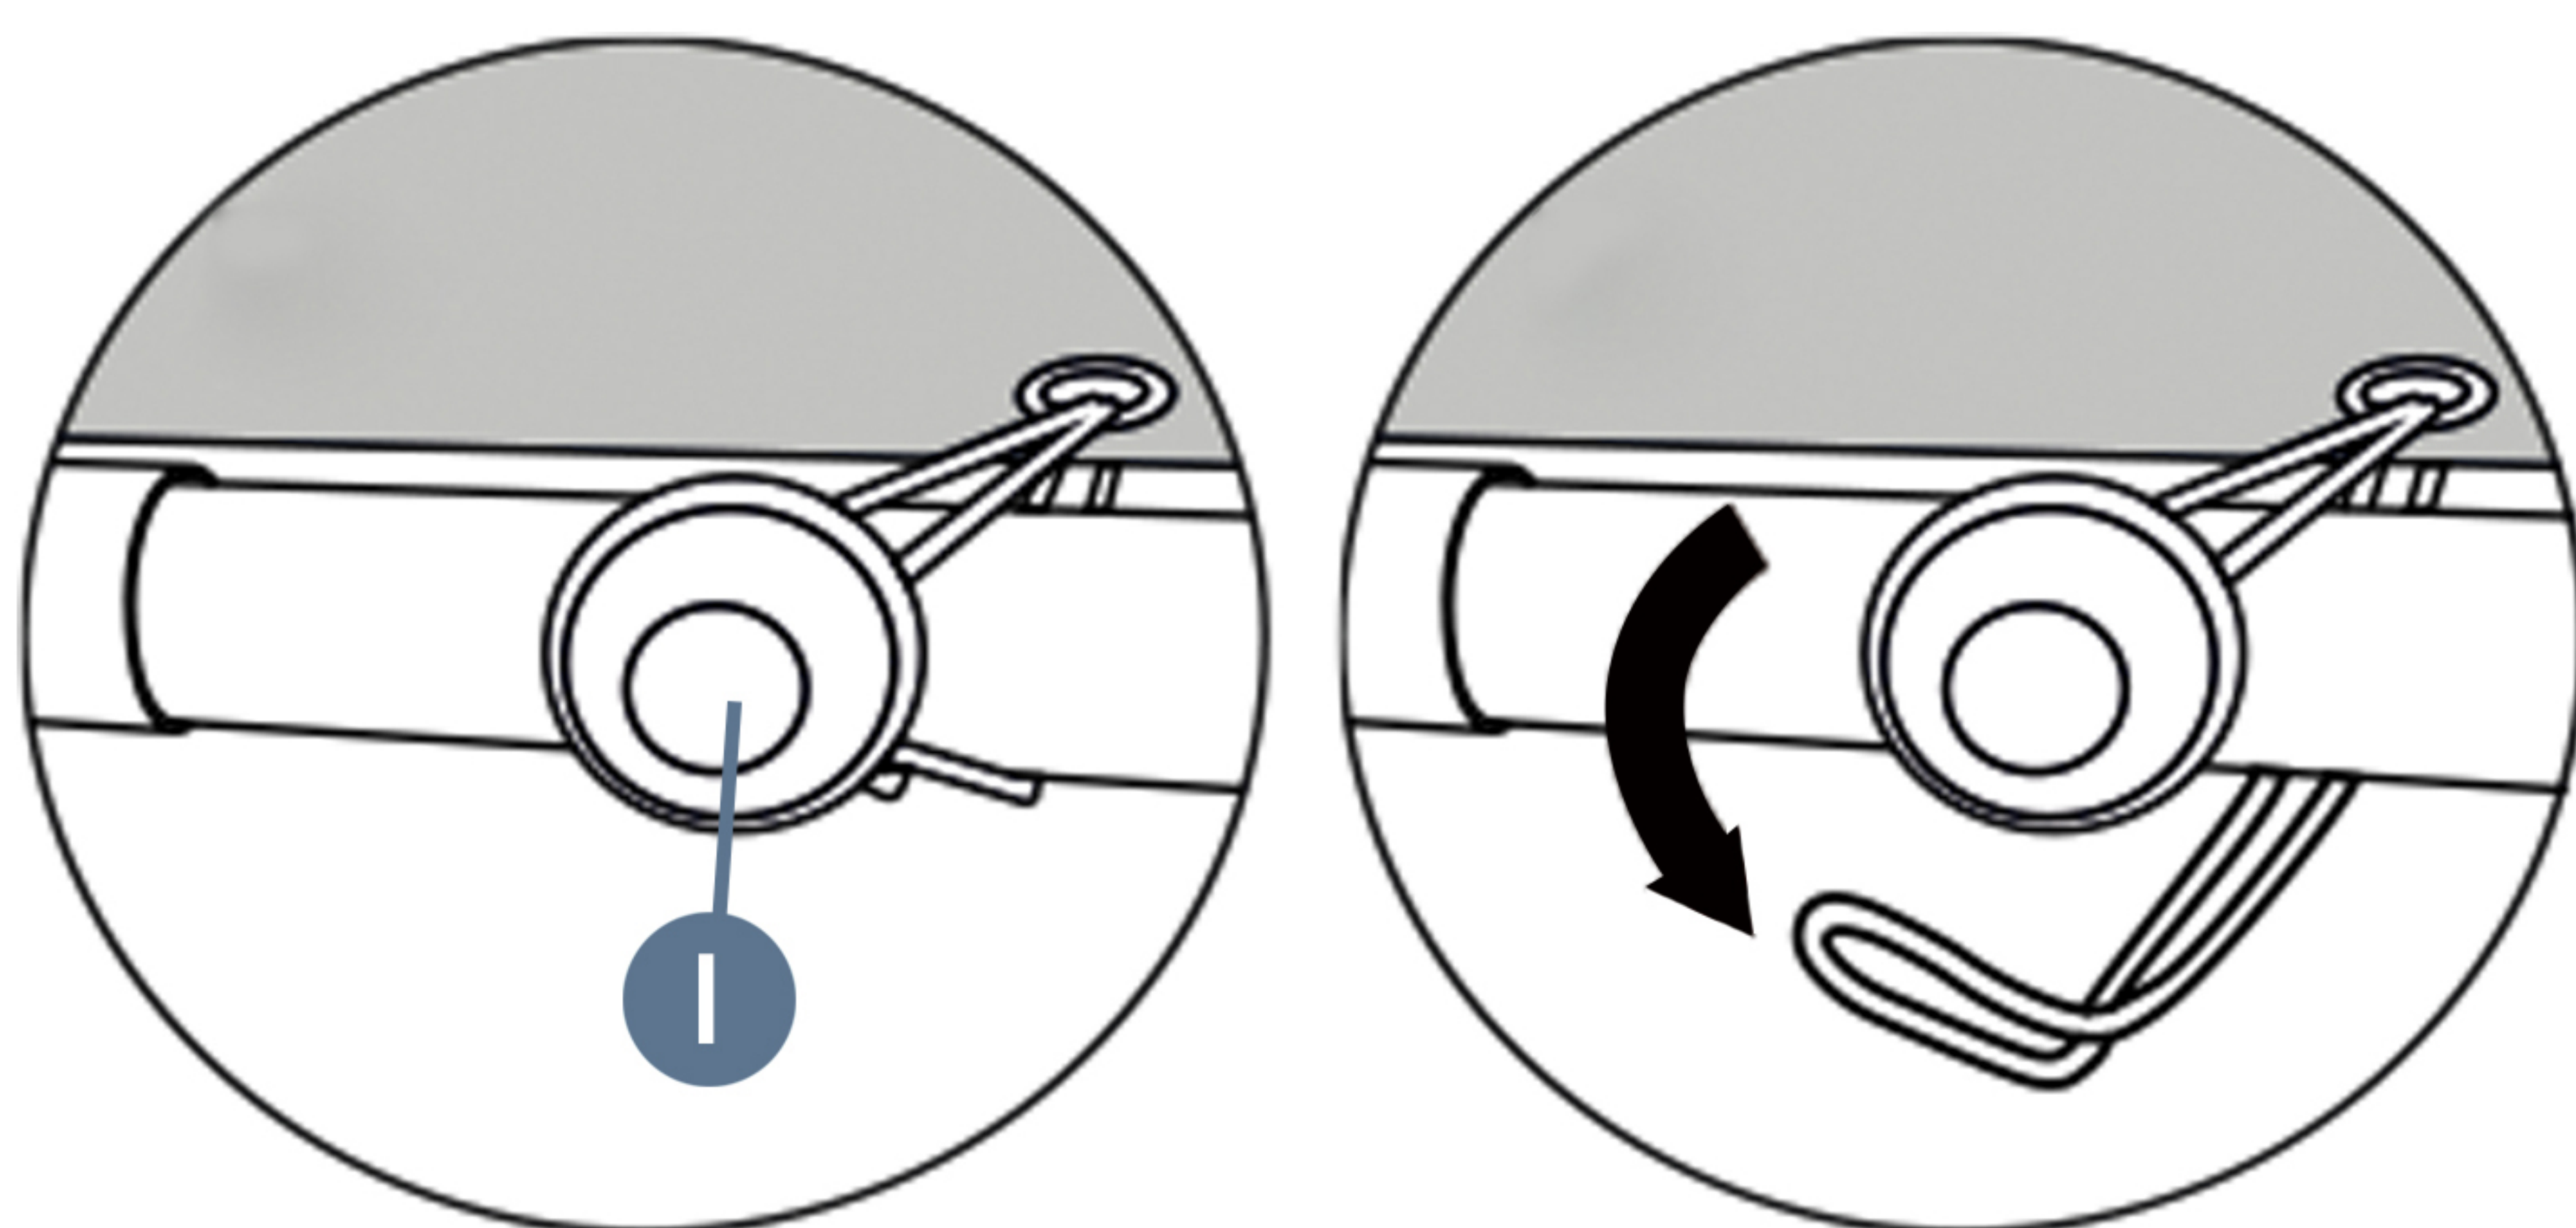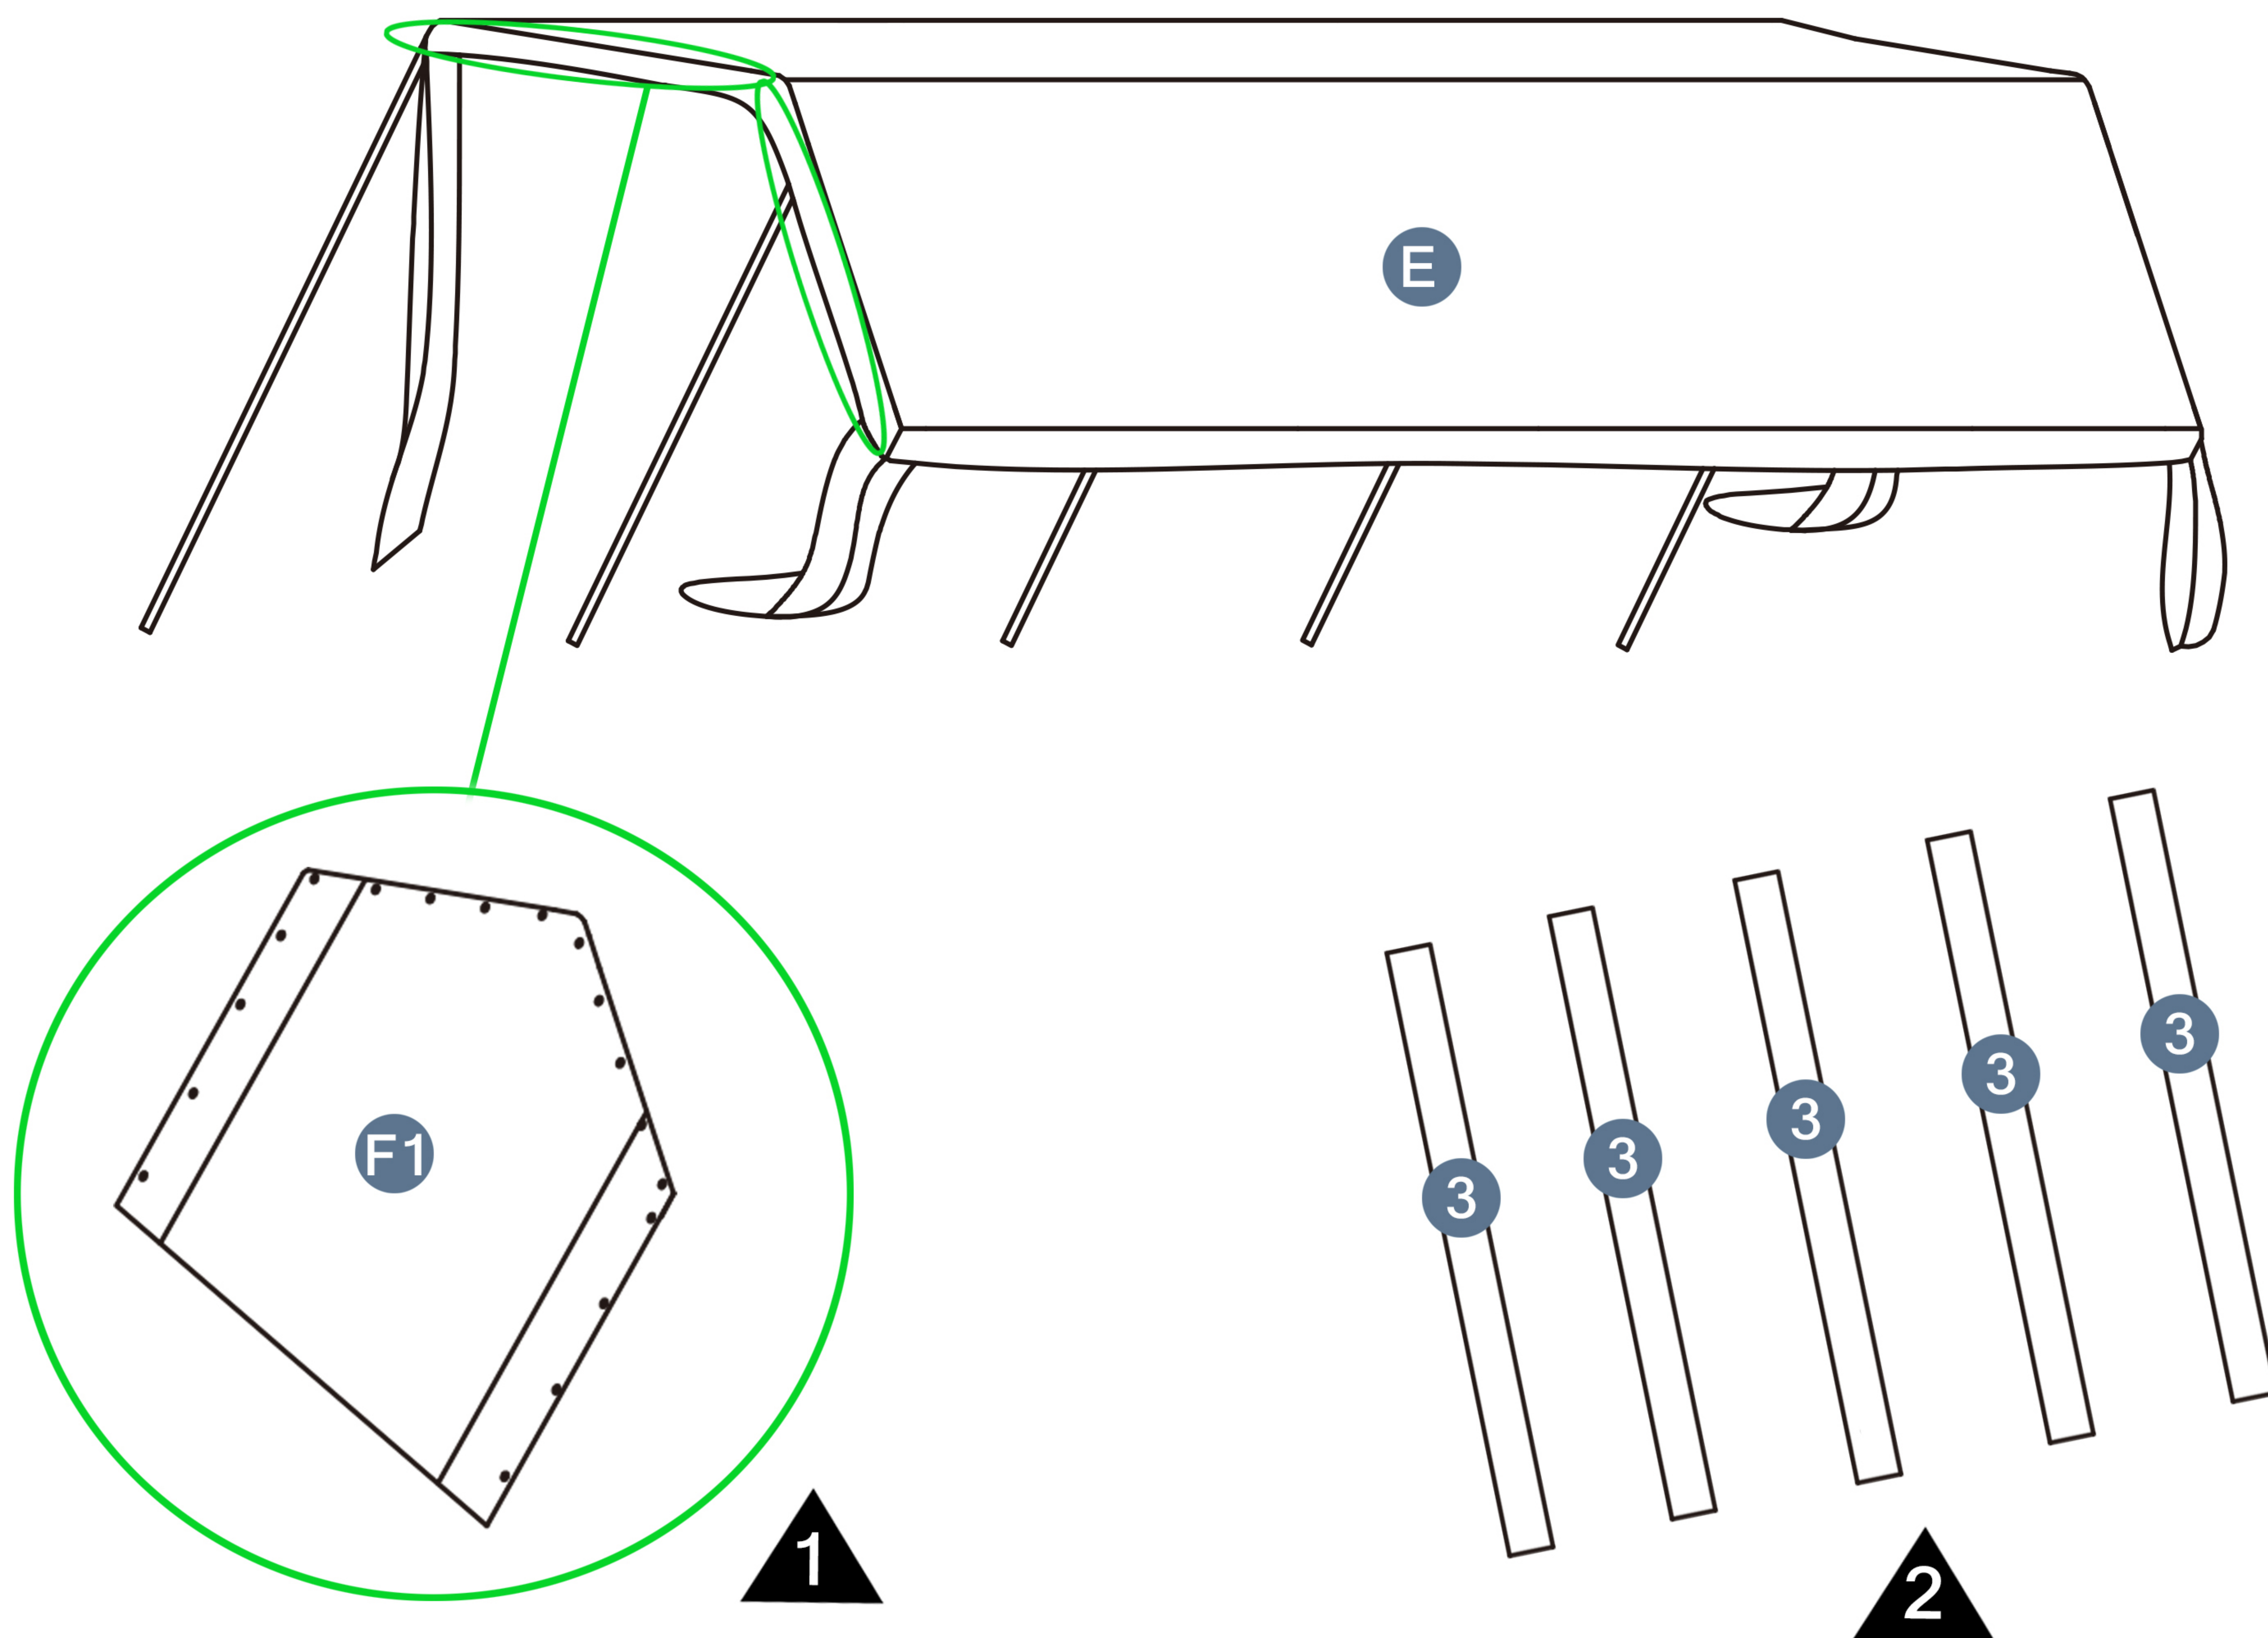


P1-2

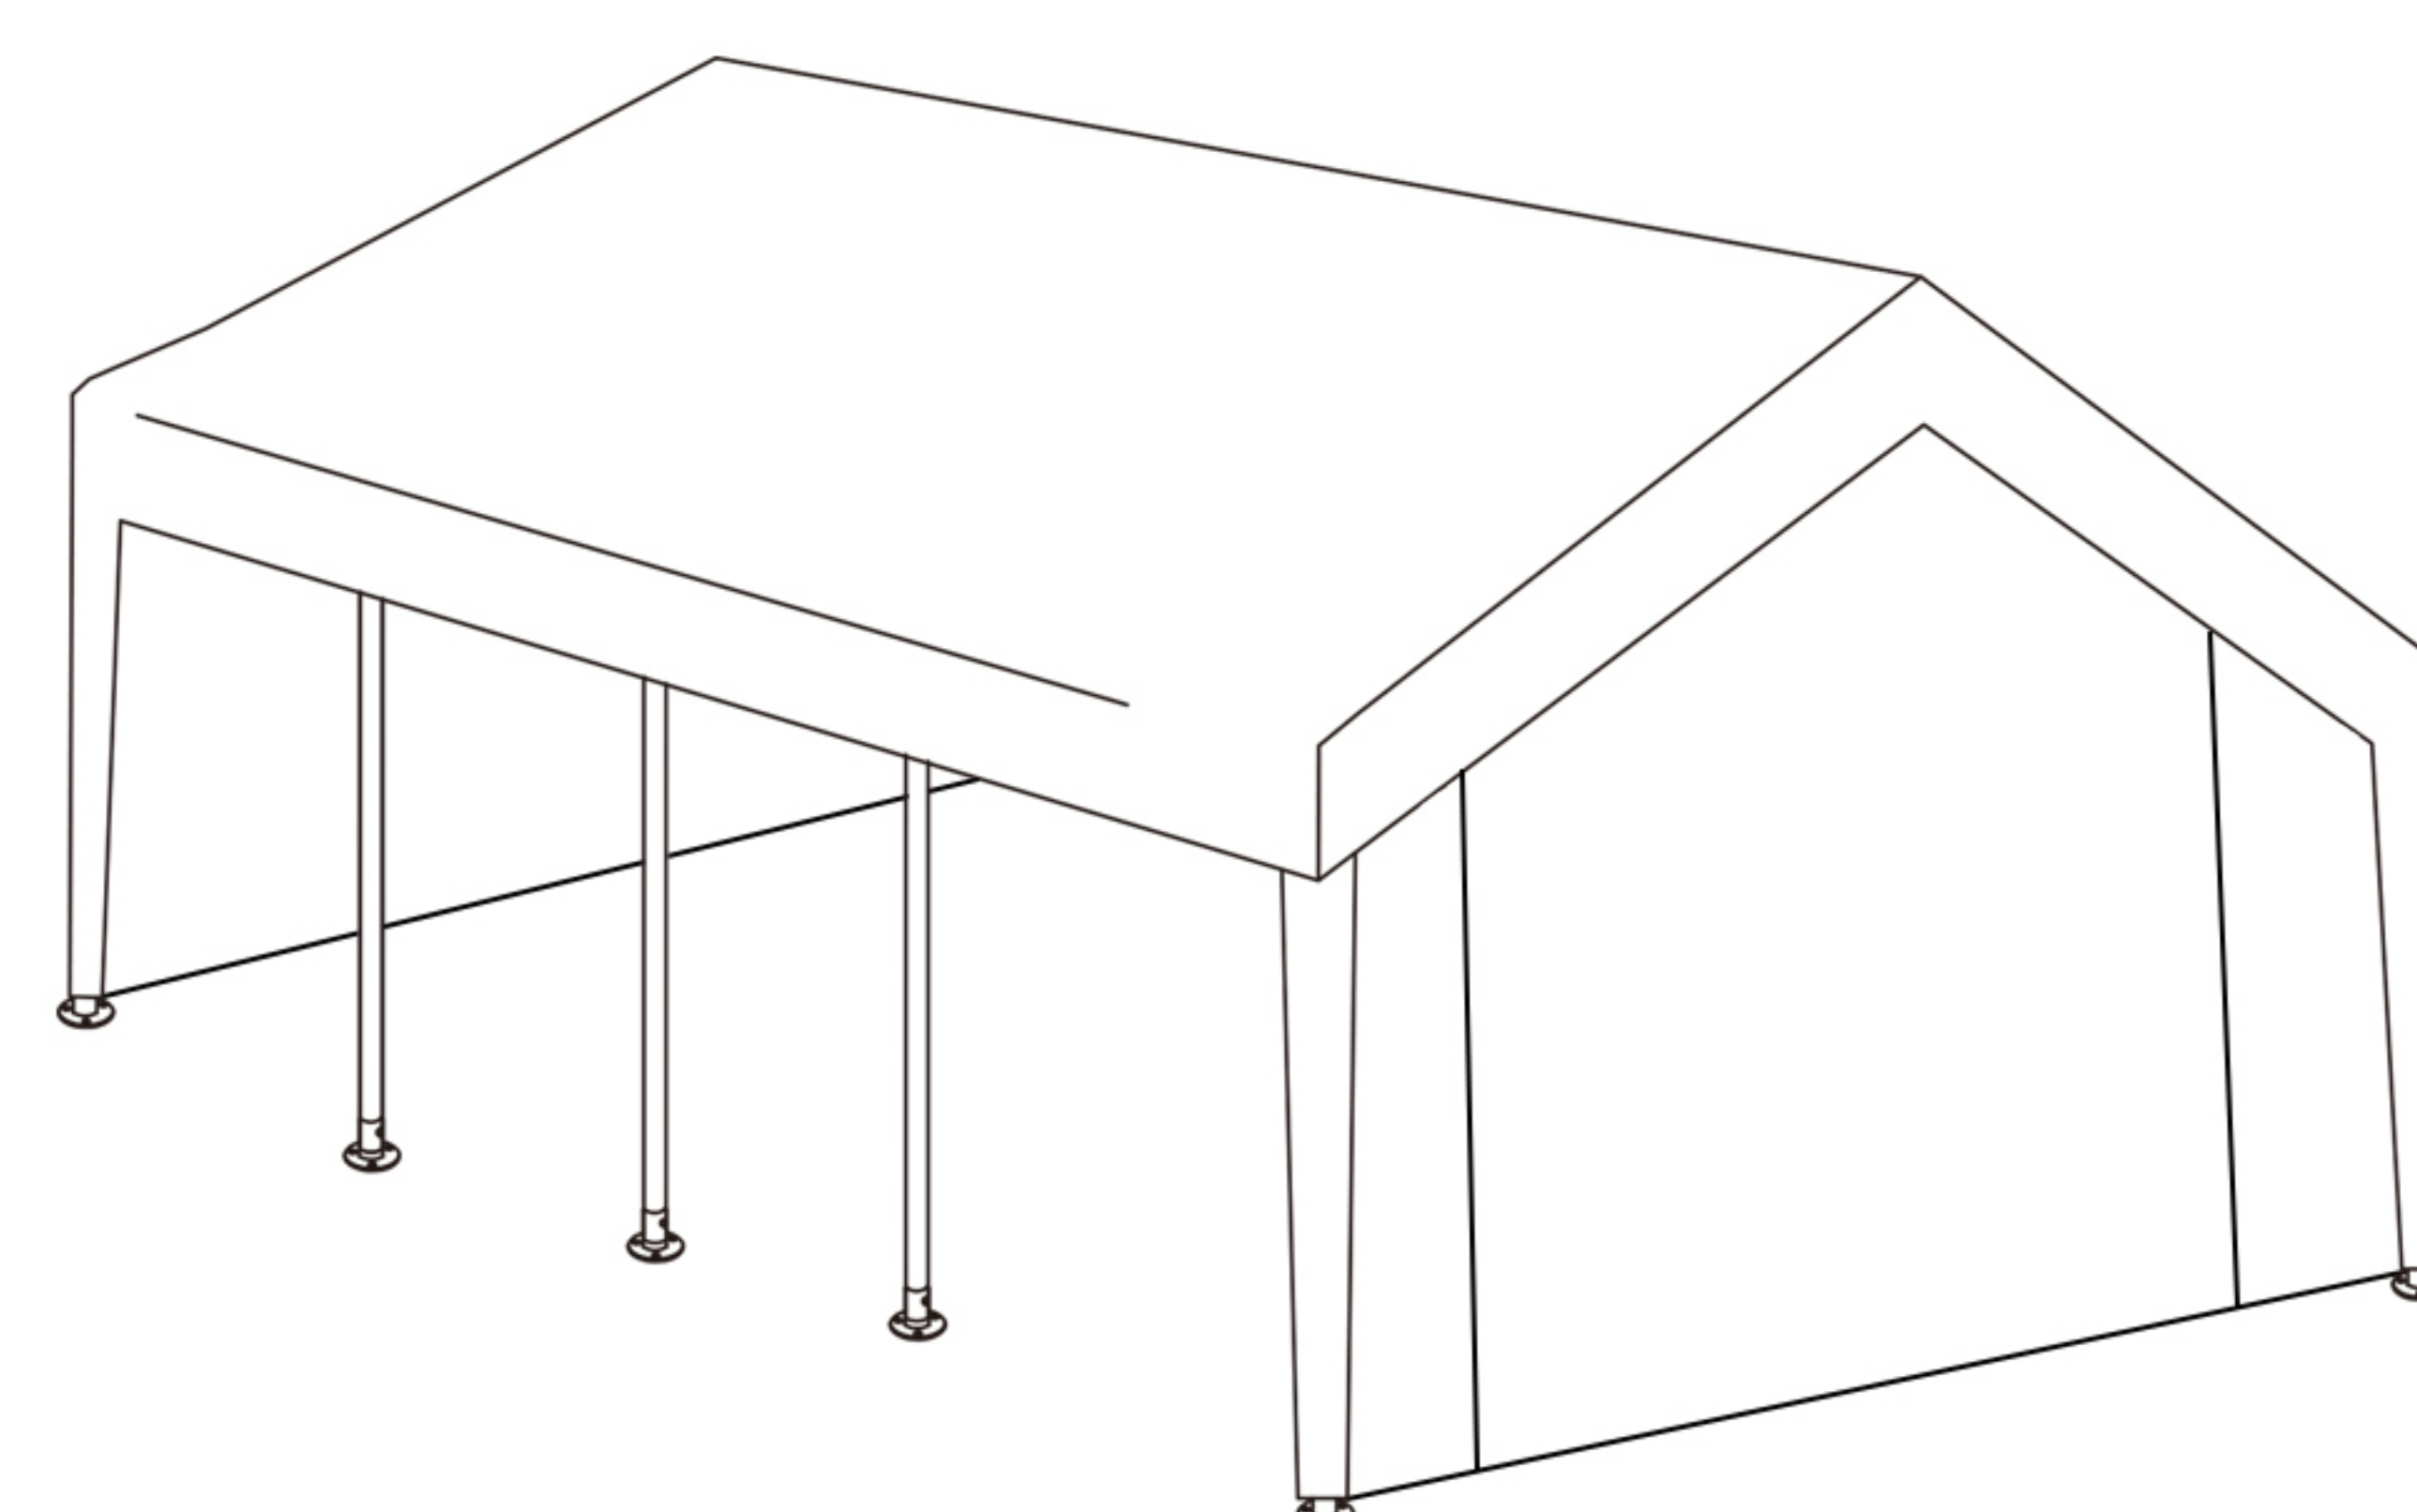

What it looks like after it is set up

STEP 5





Parts required

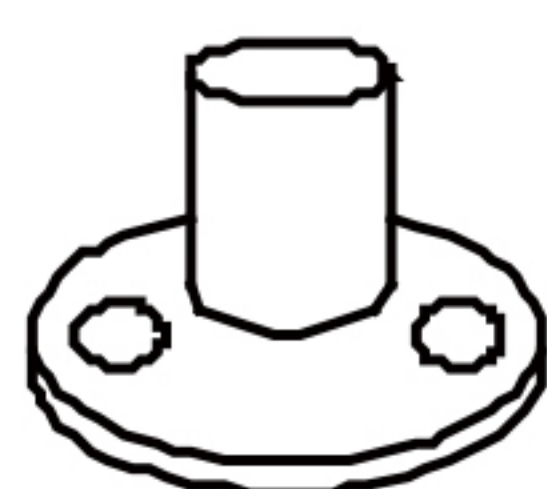

C 10pcs




G 10pcs

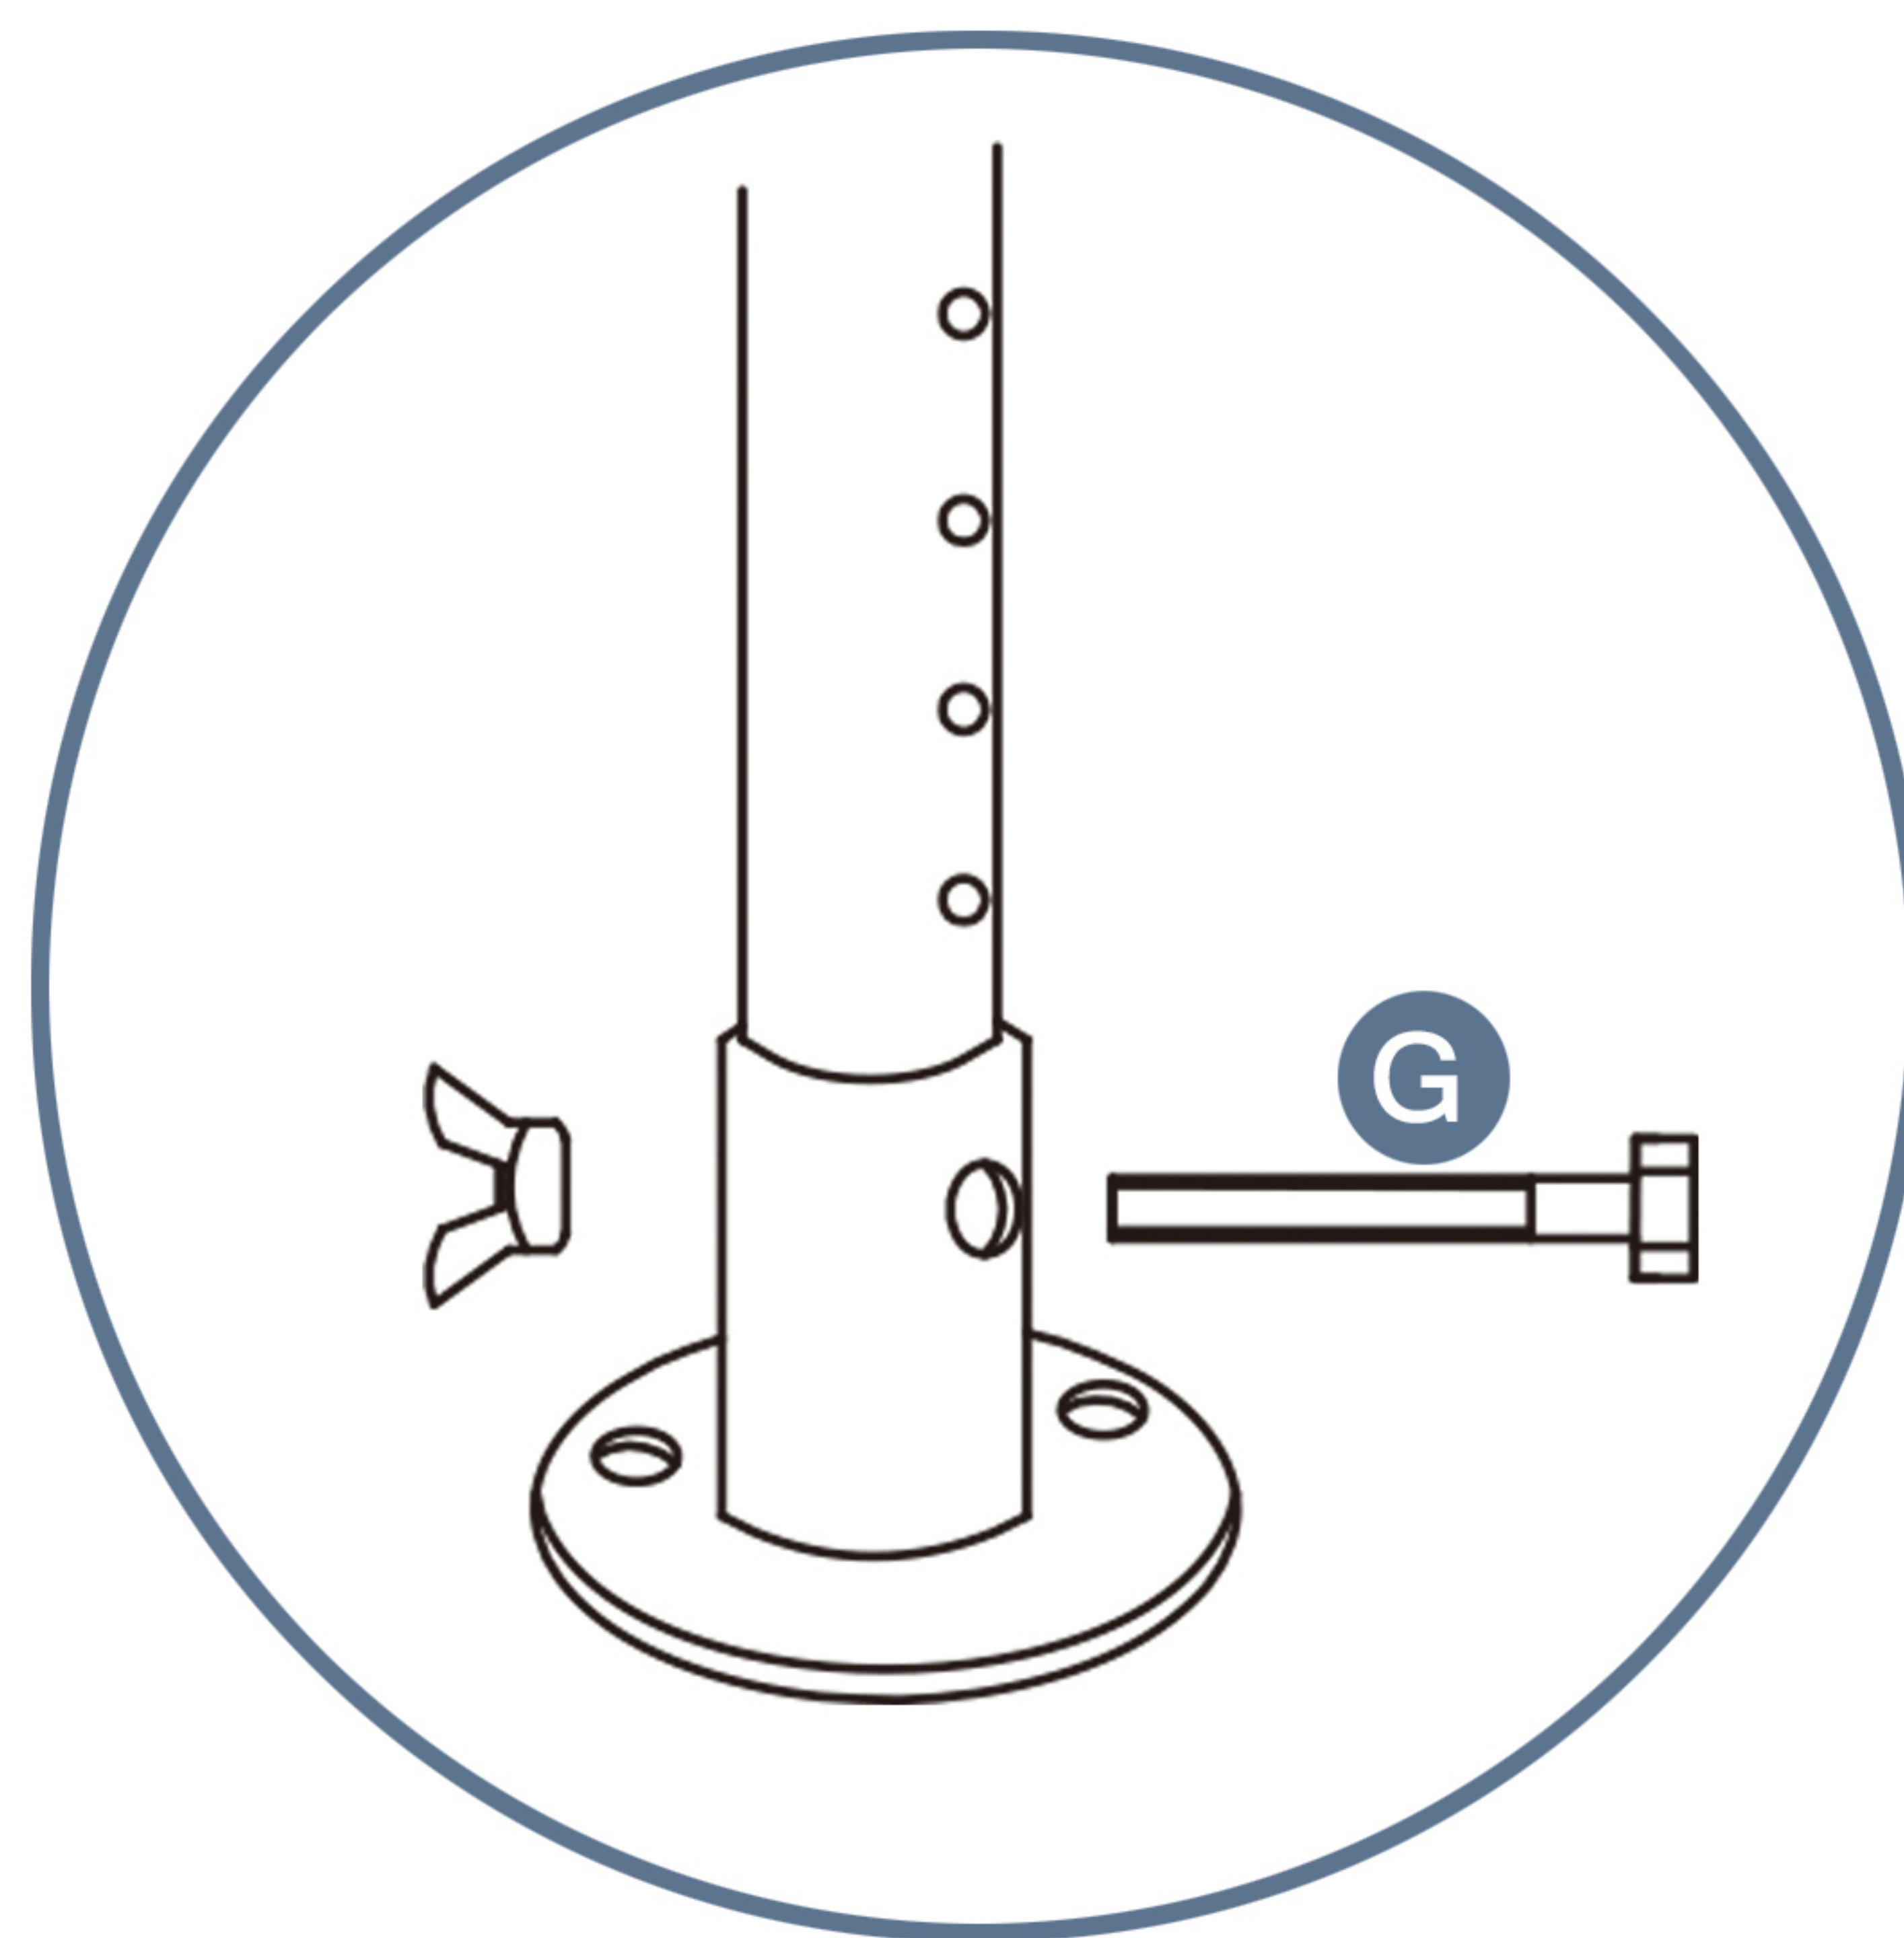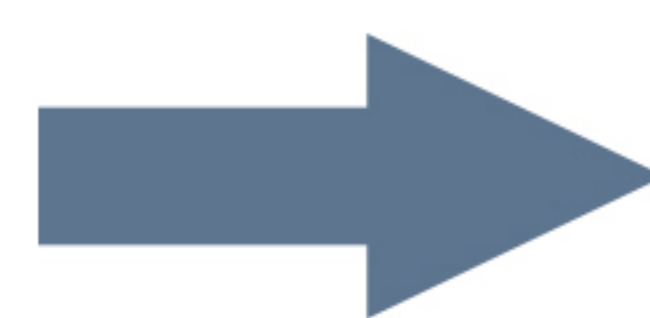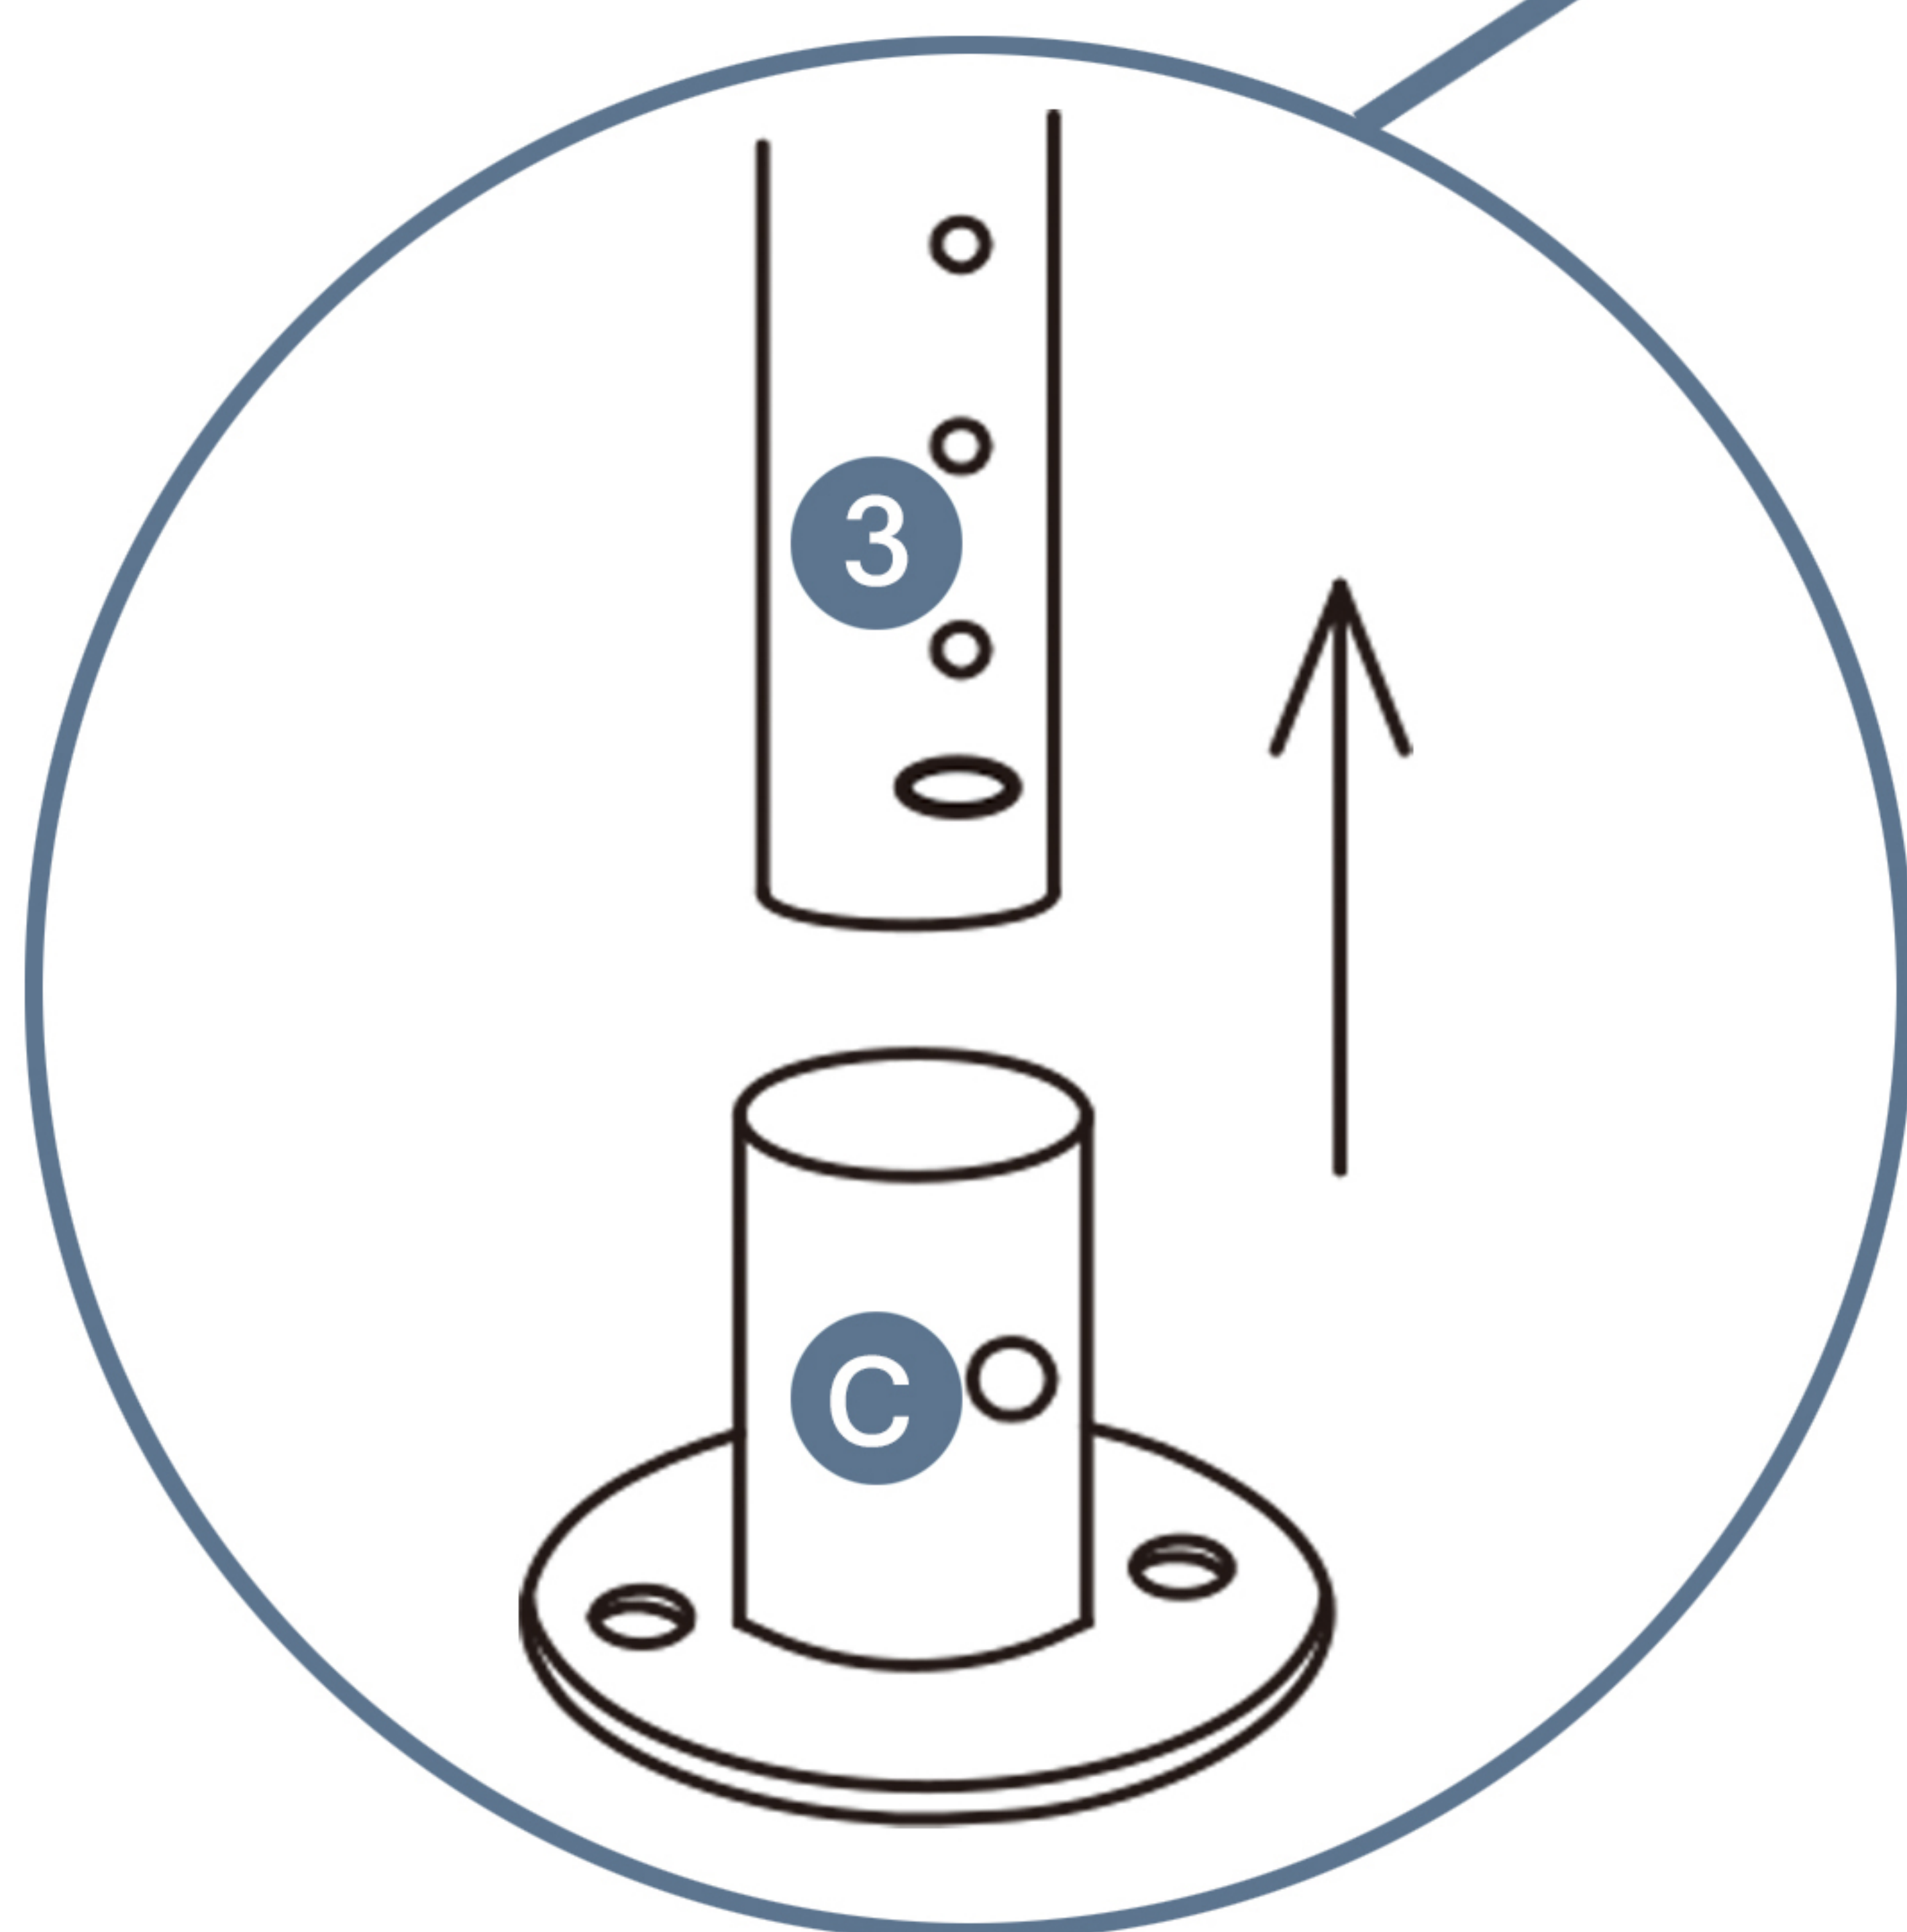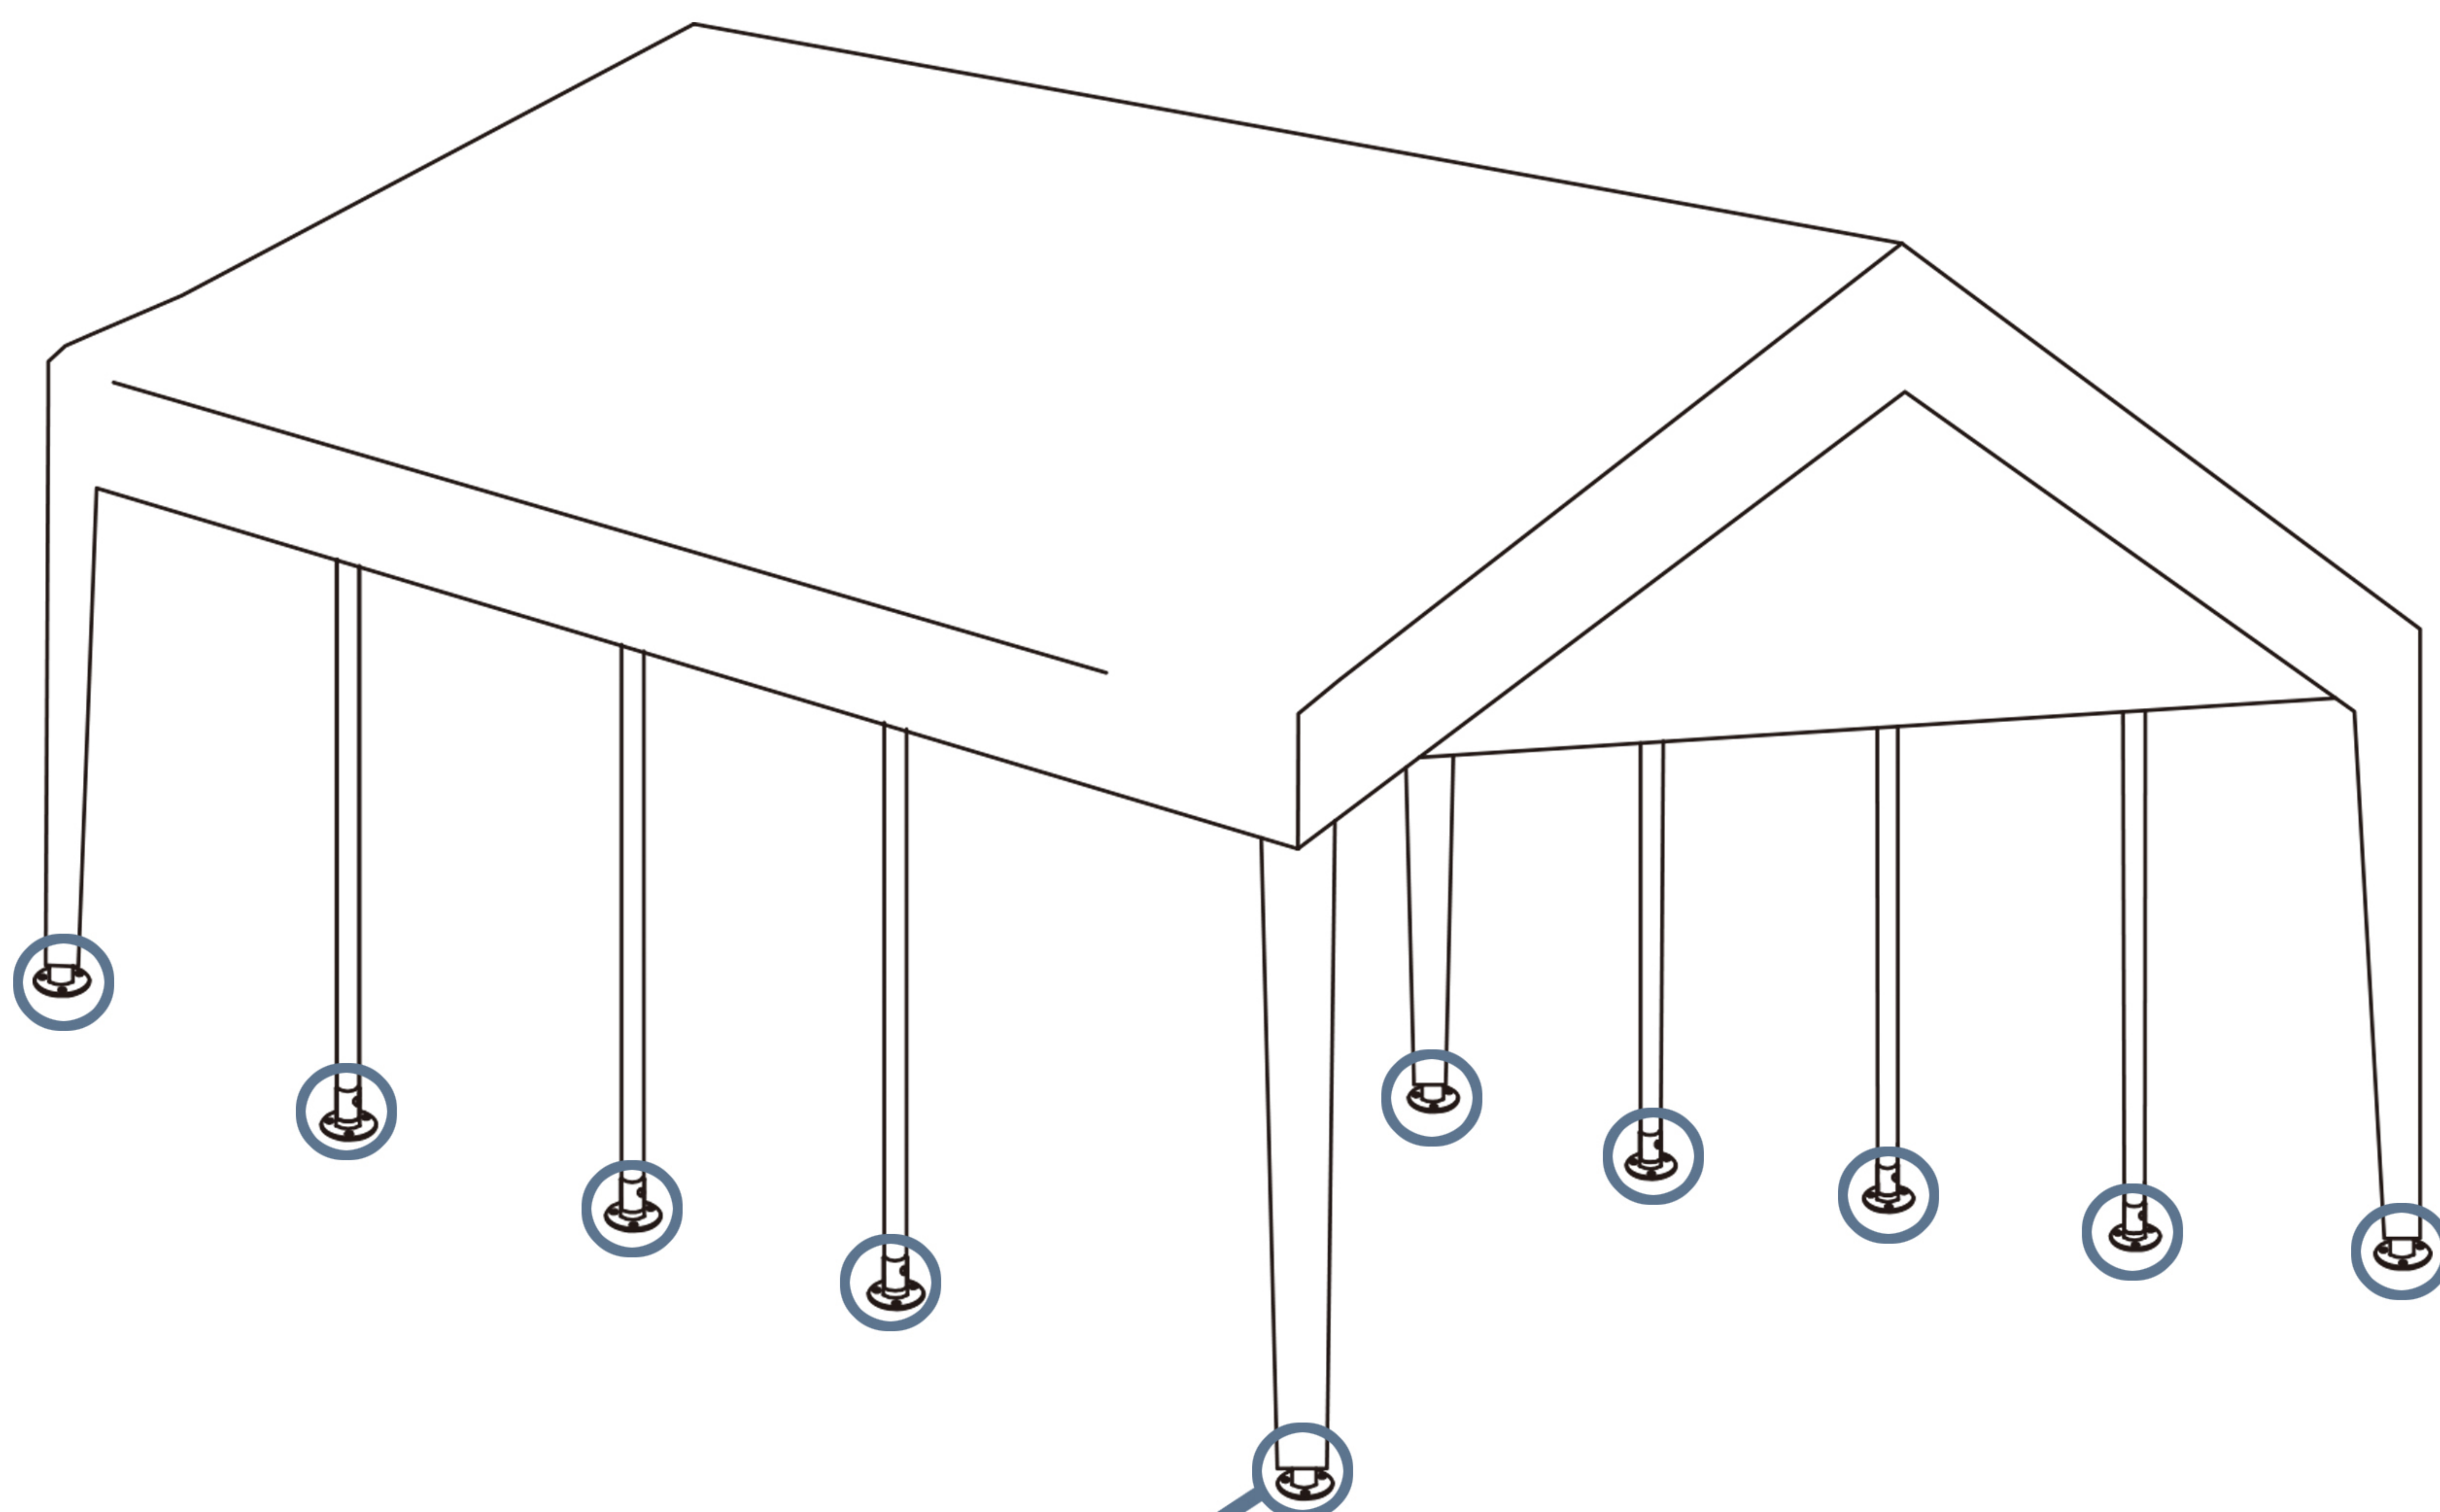

STEP6

Parts required

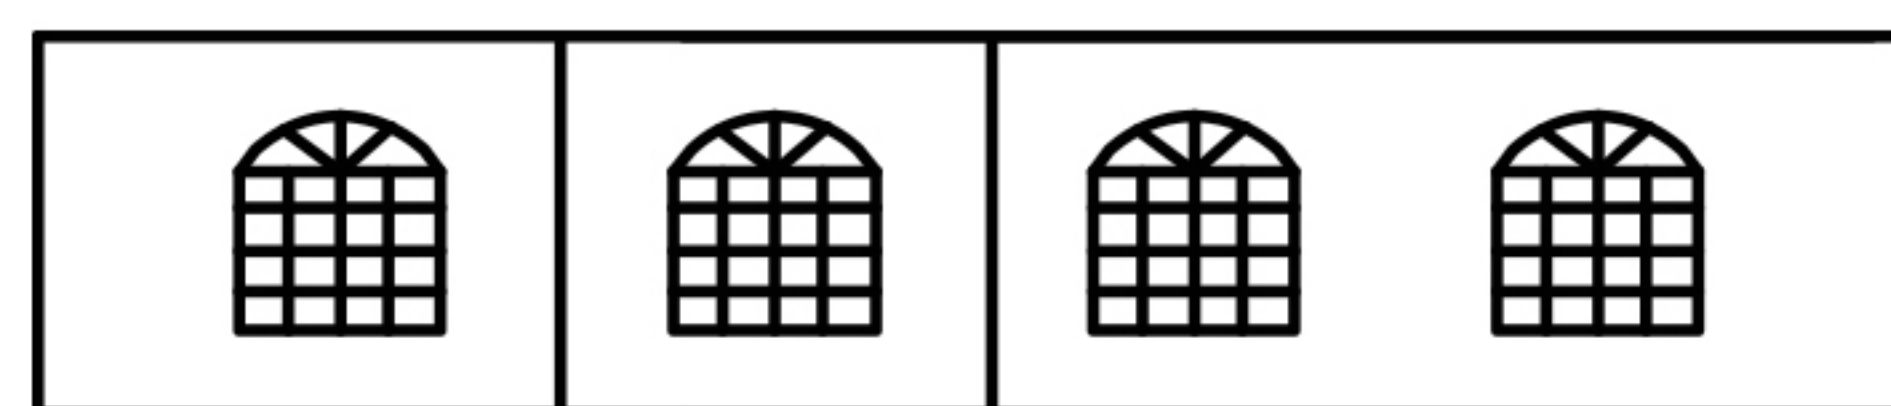


F 2pcs



I 48pcs




The installation method of I can refer to P1-3

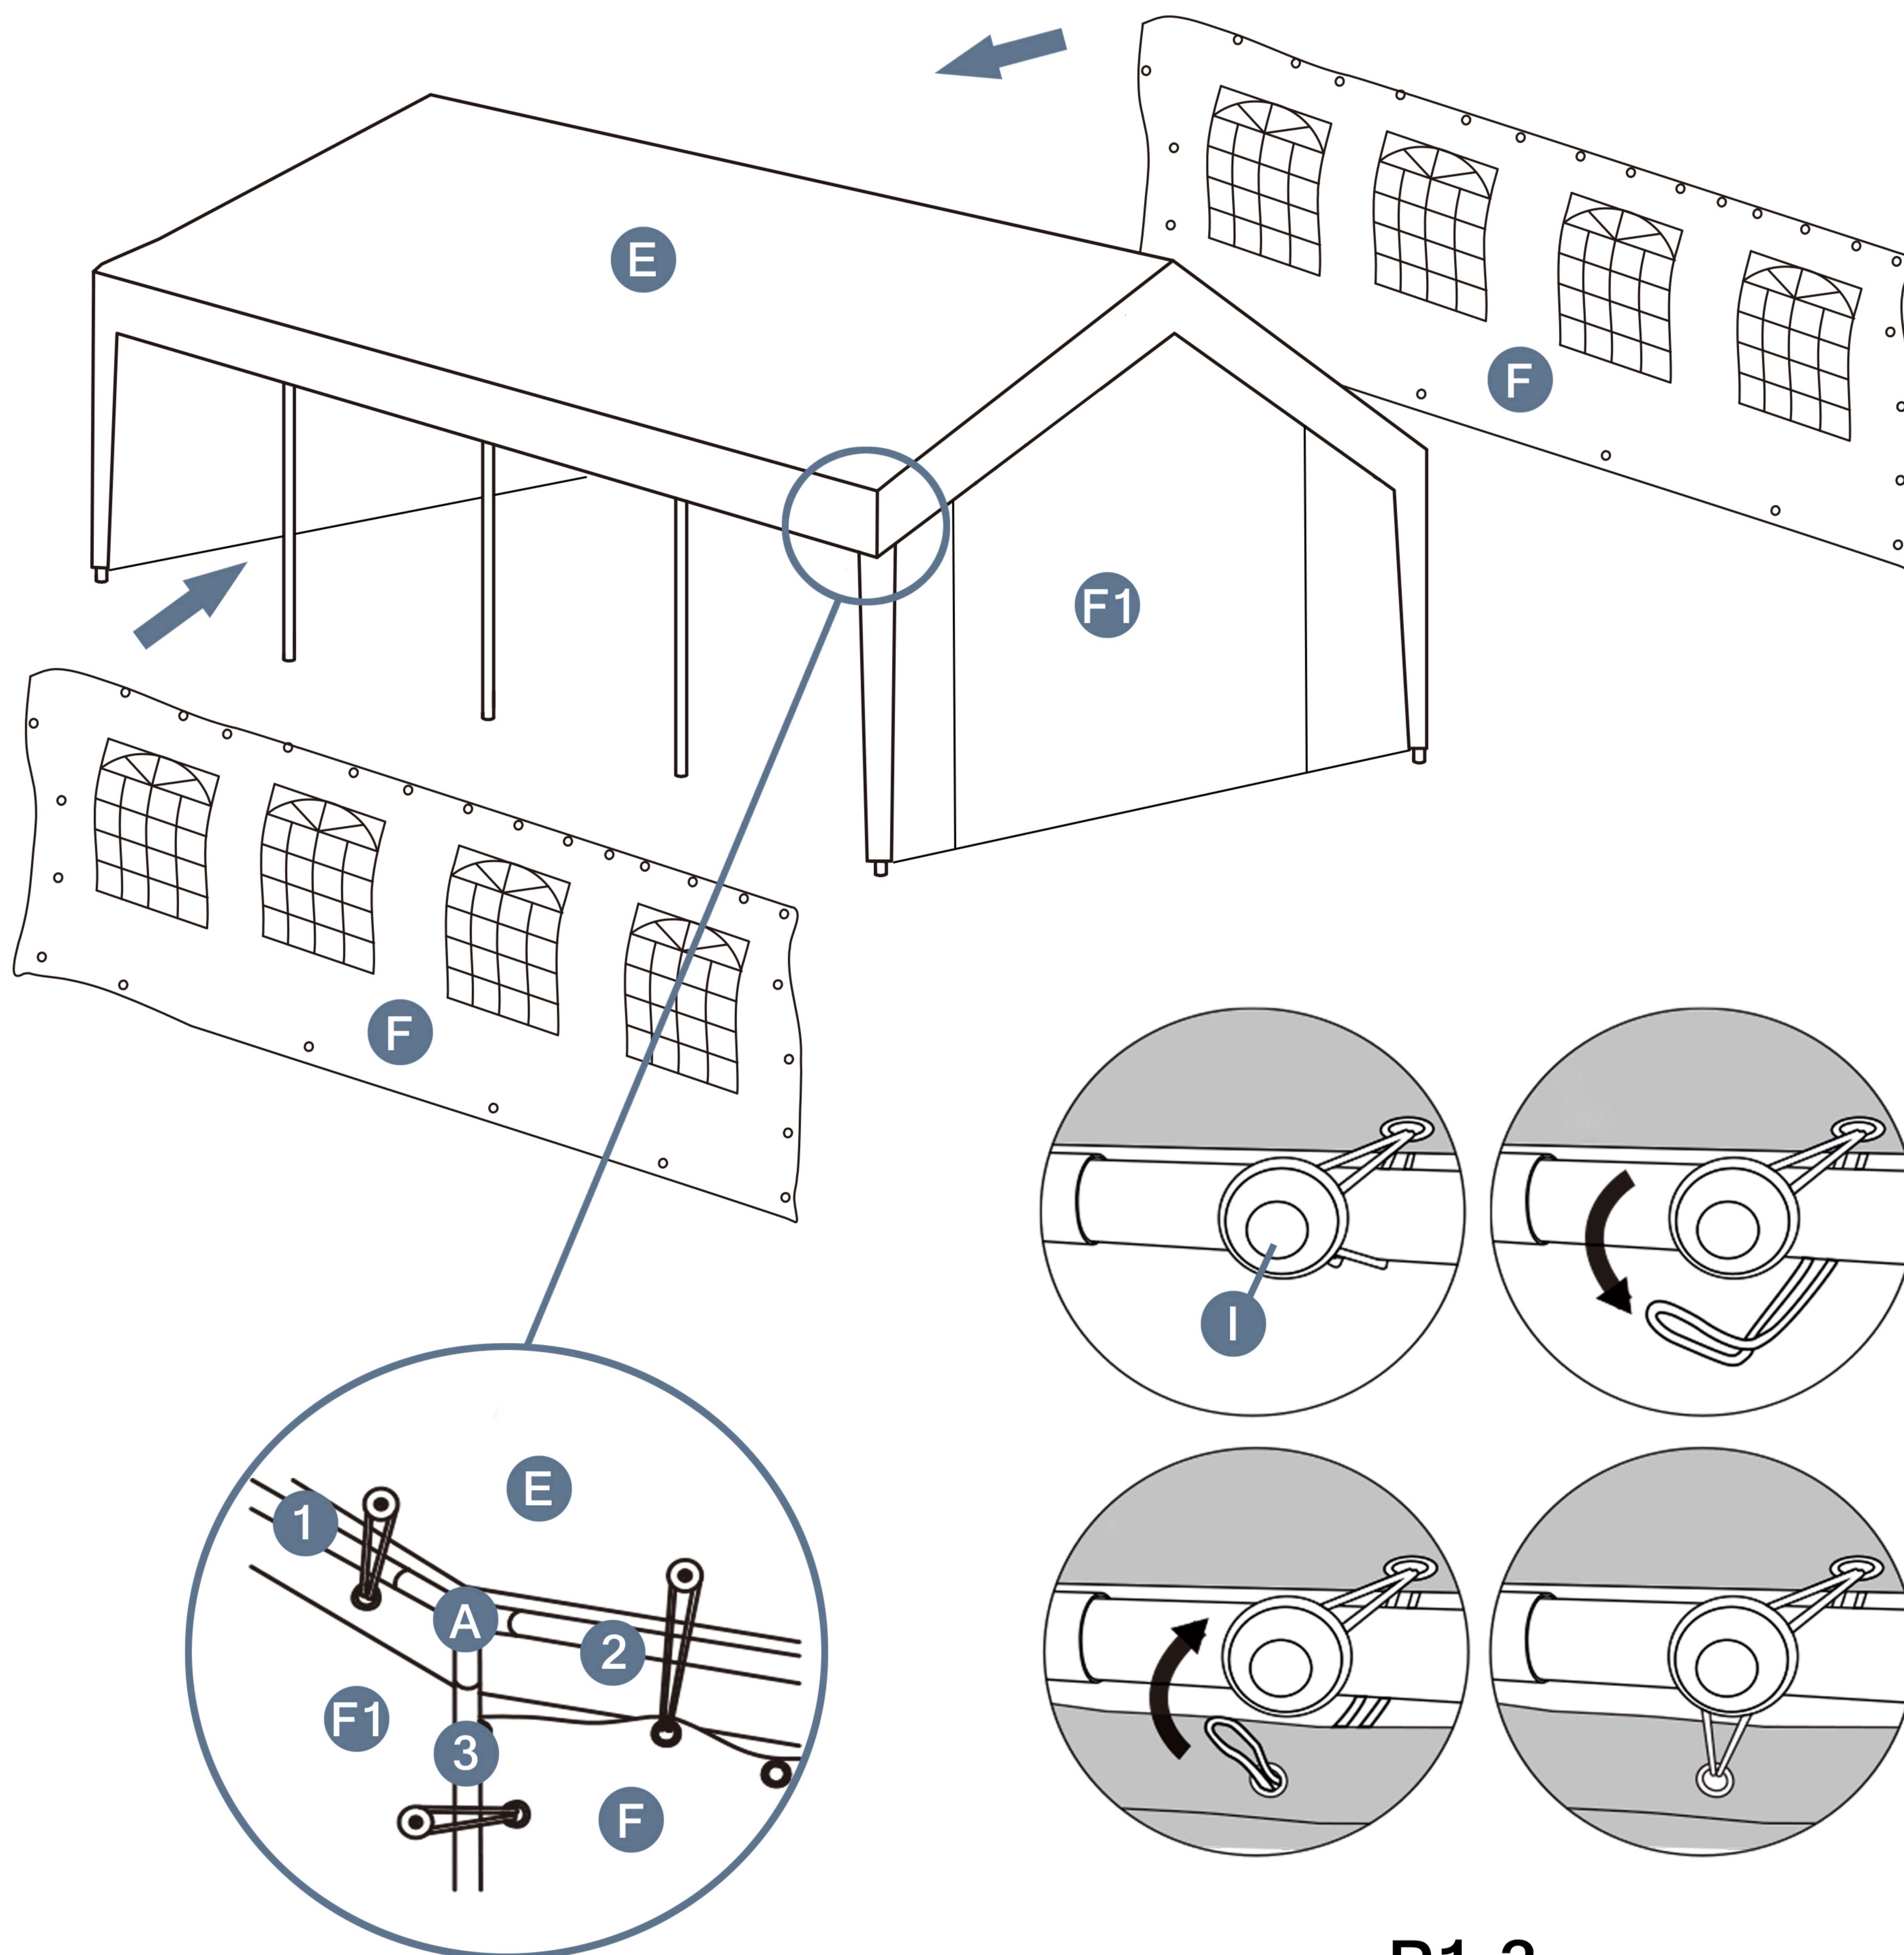


P1-3

STEP 7






Parts required

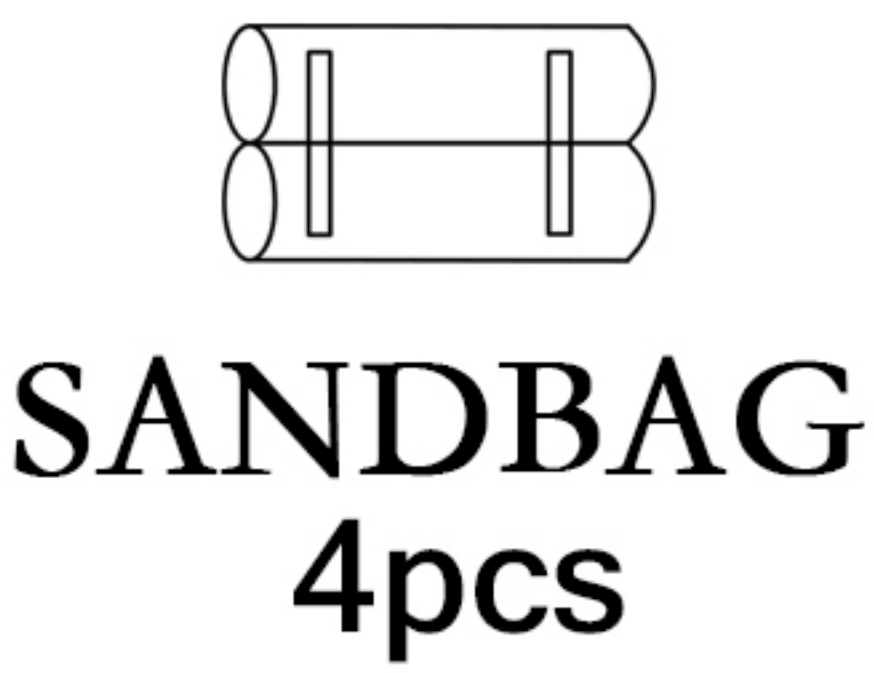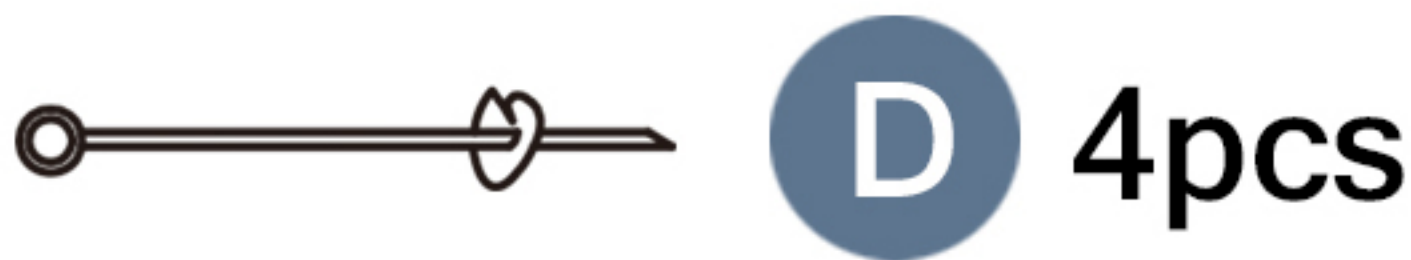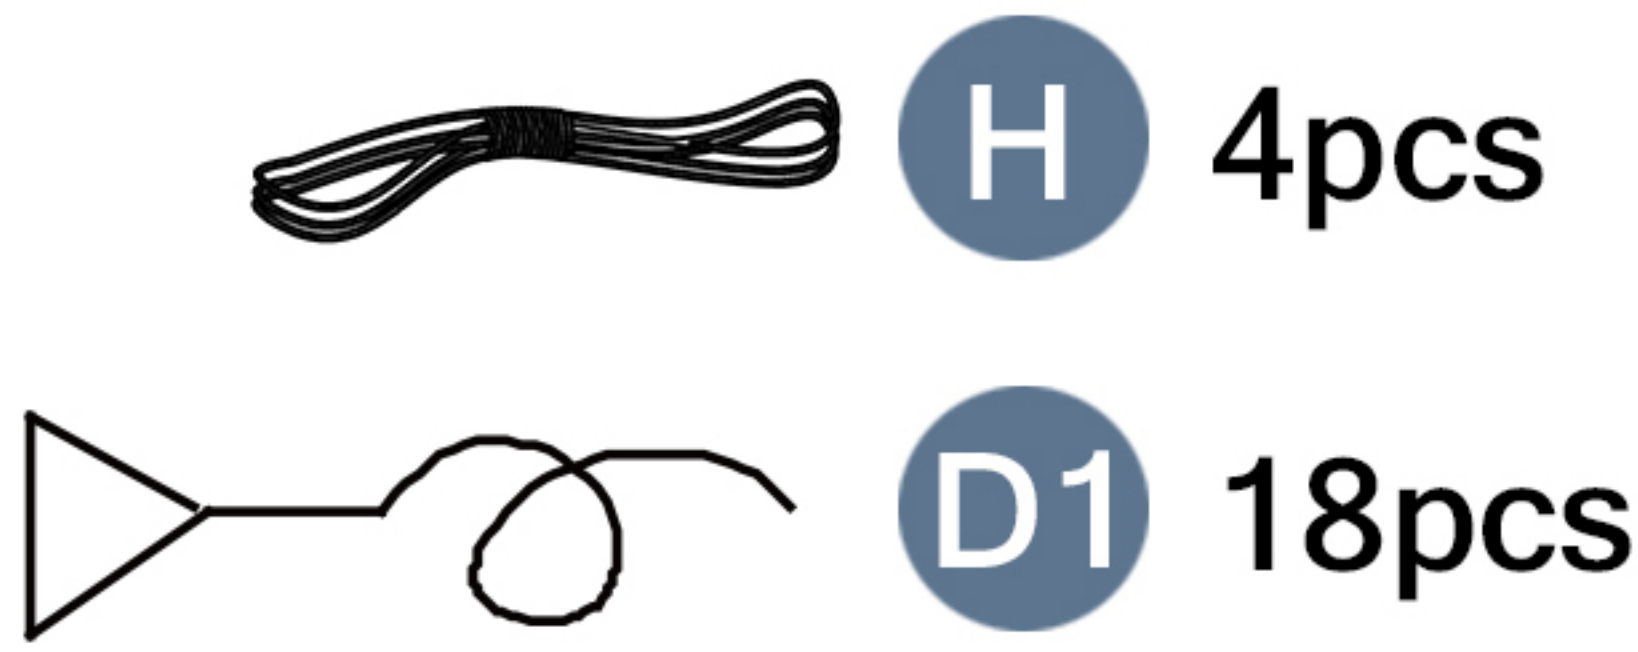

1 → 2

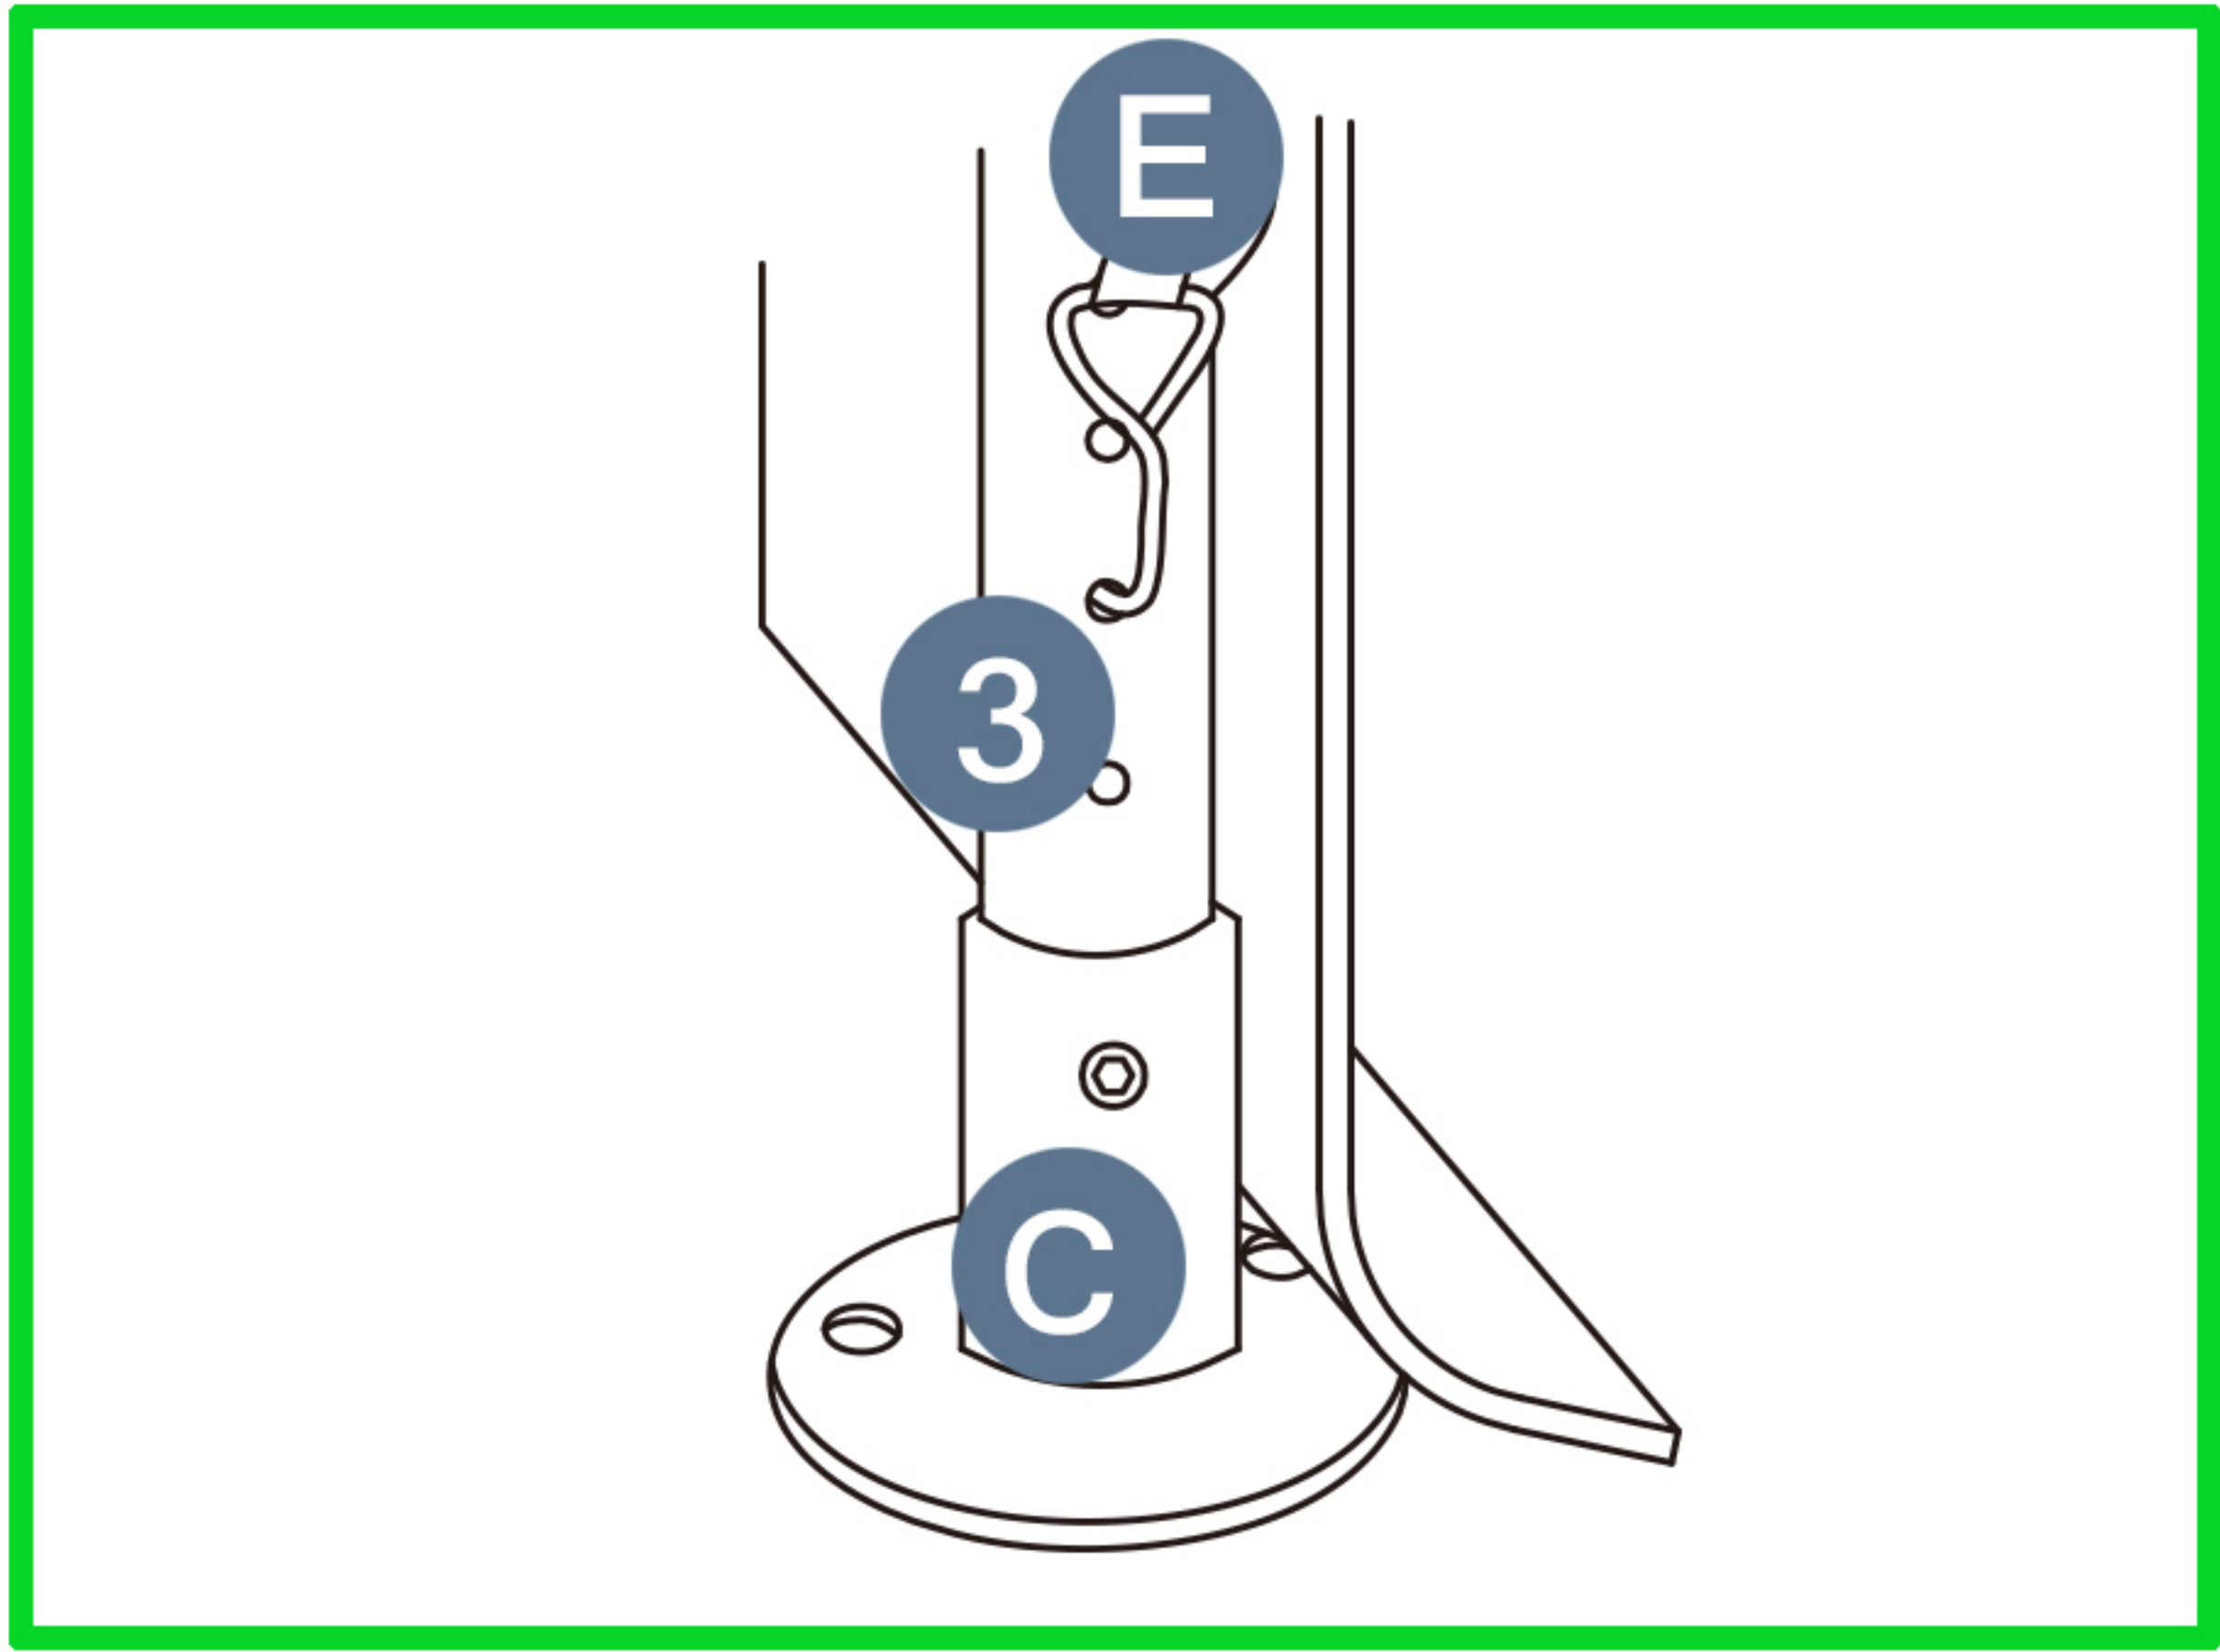

1

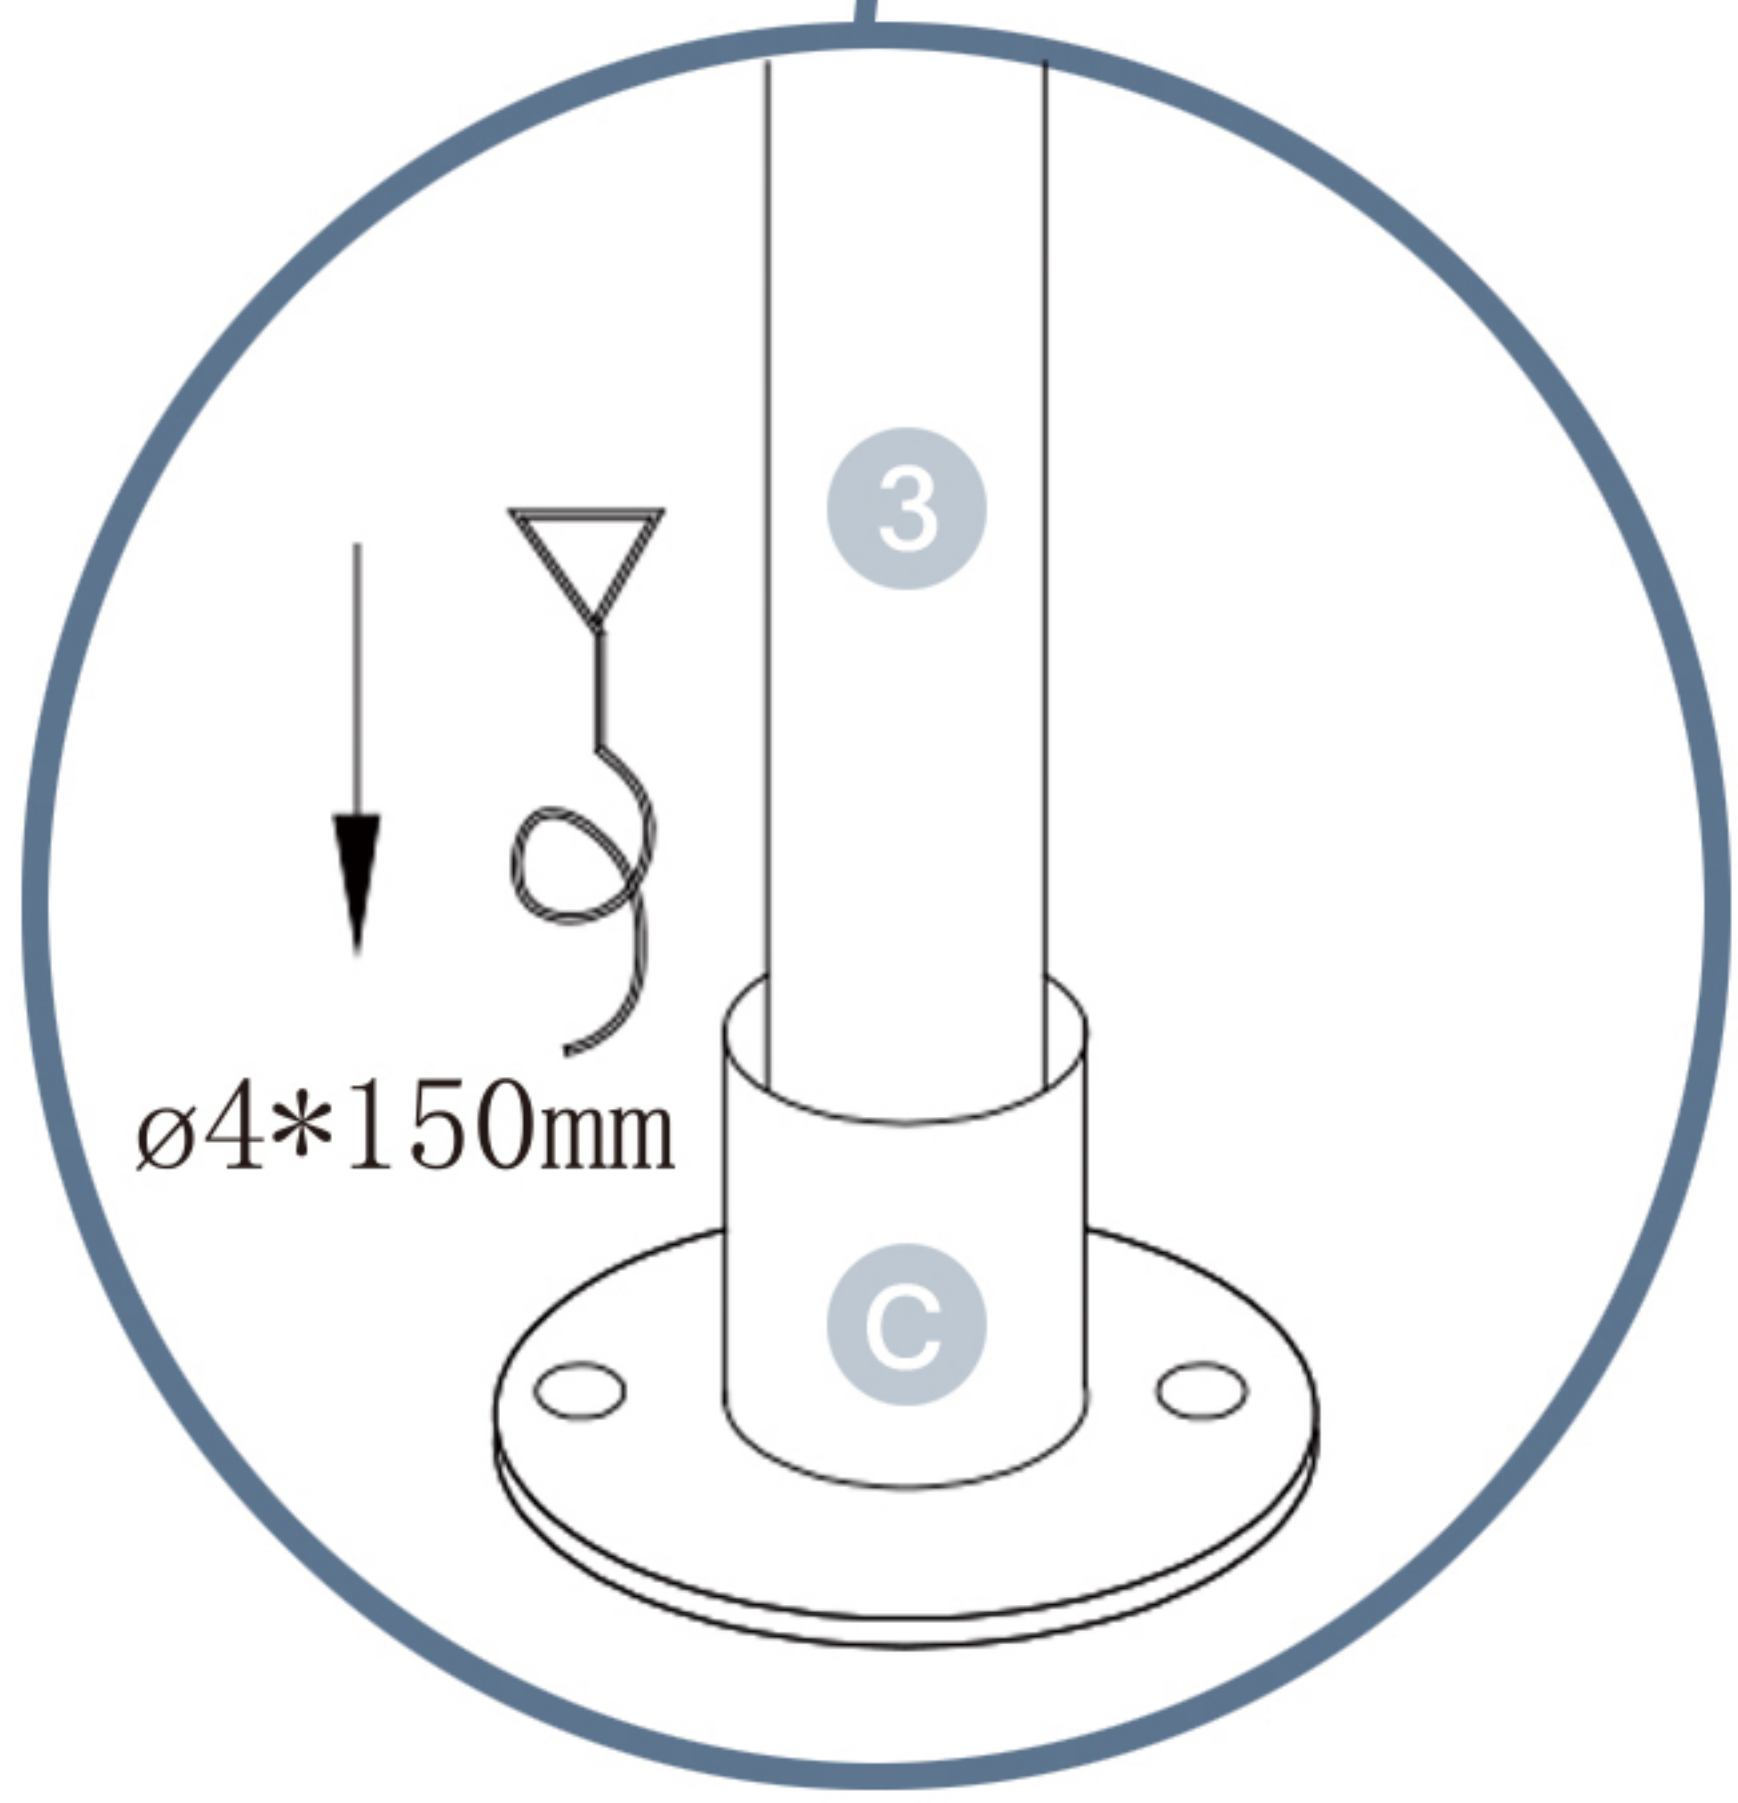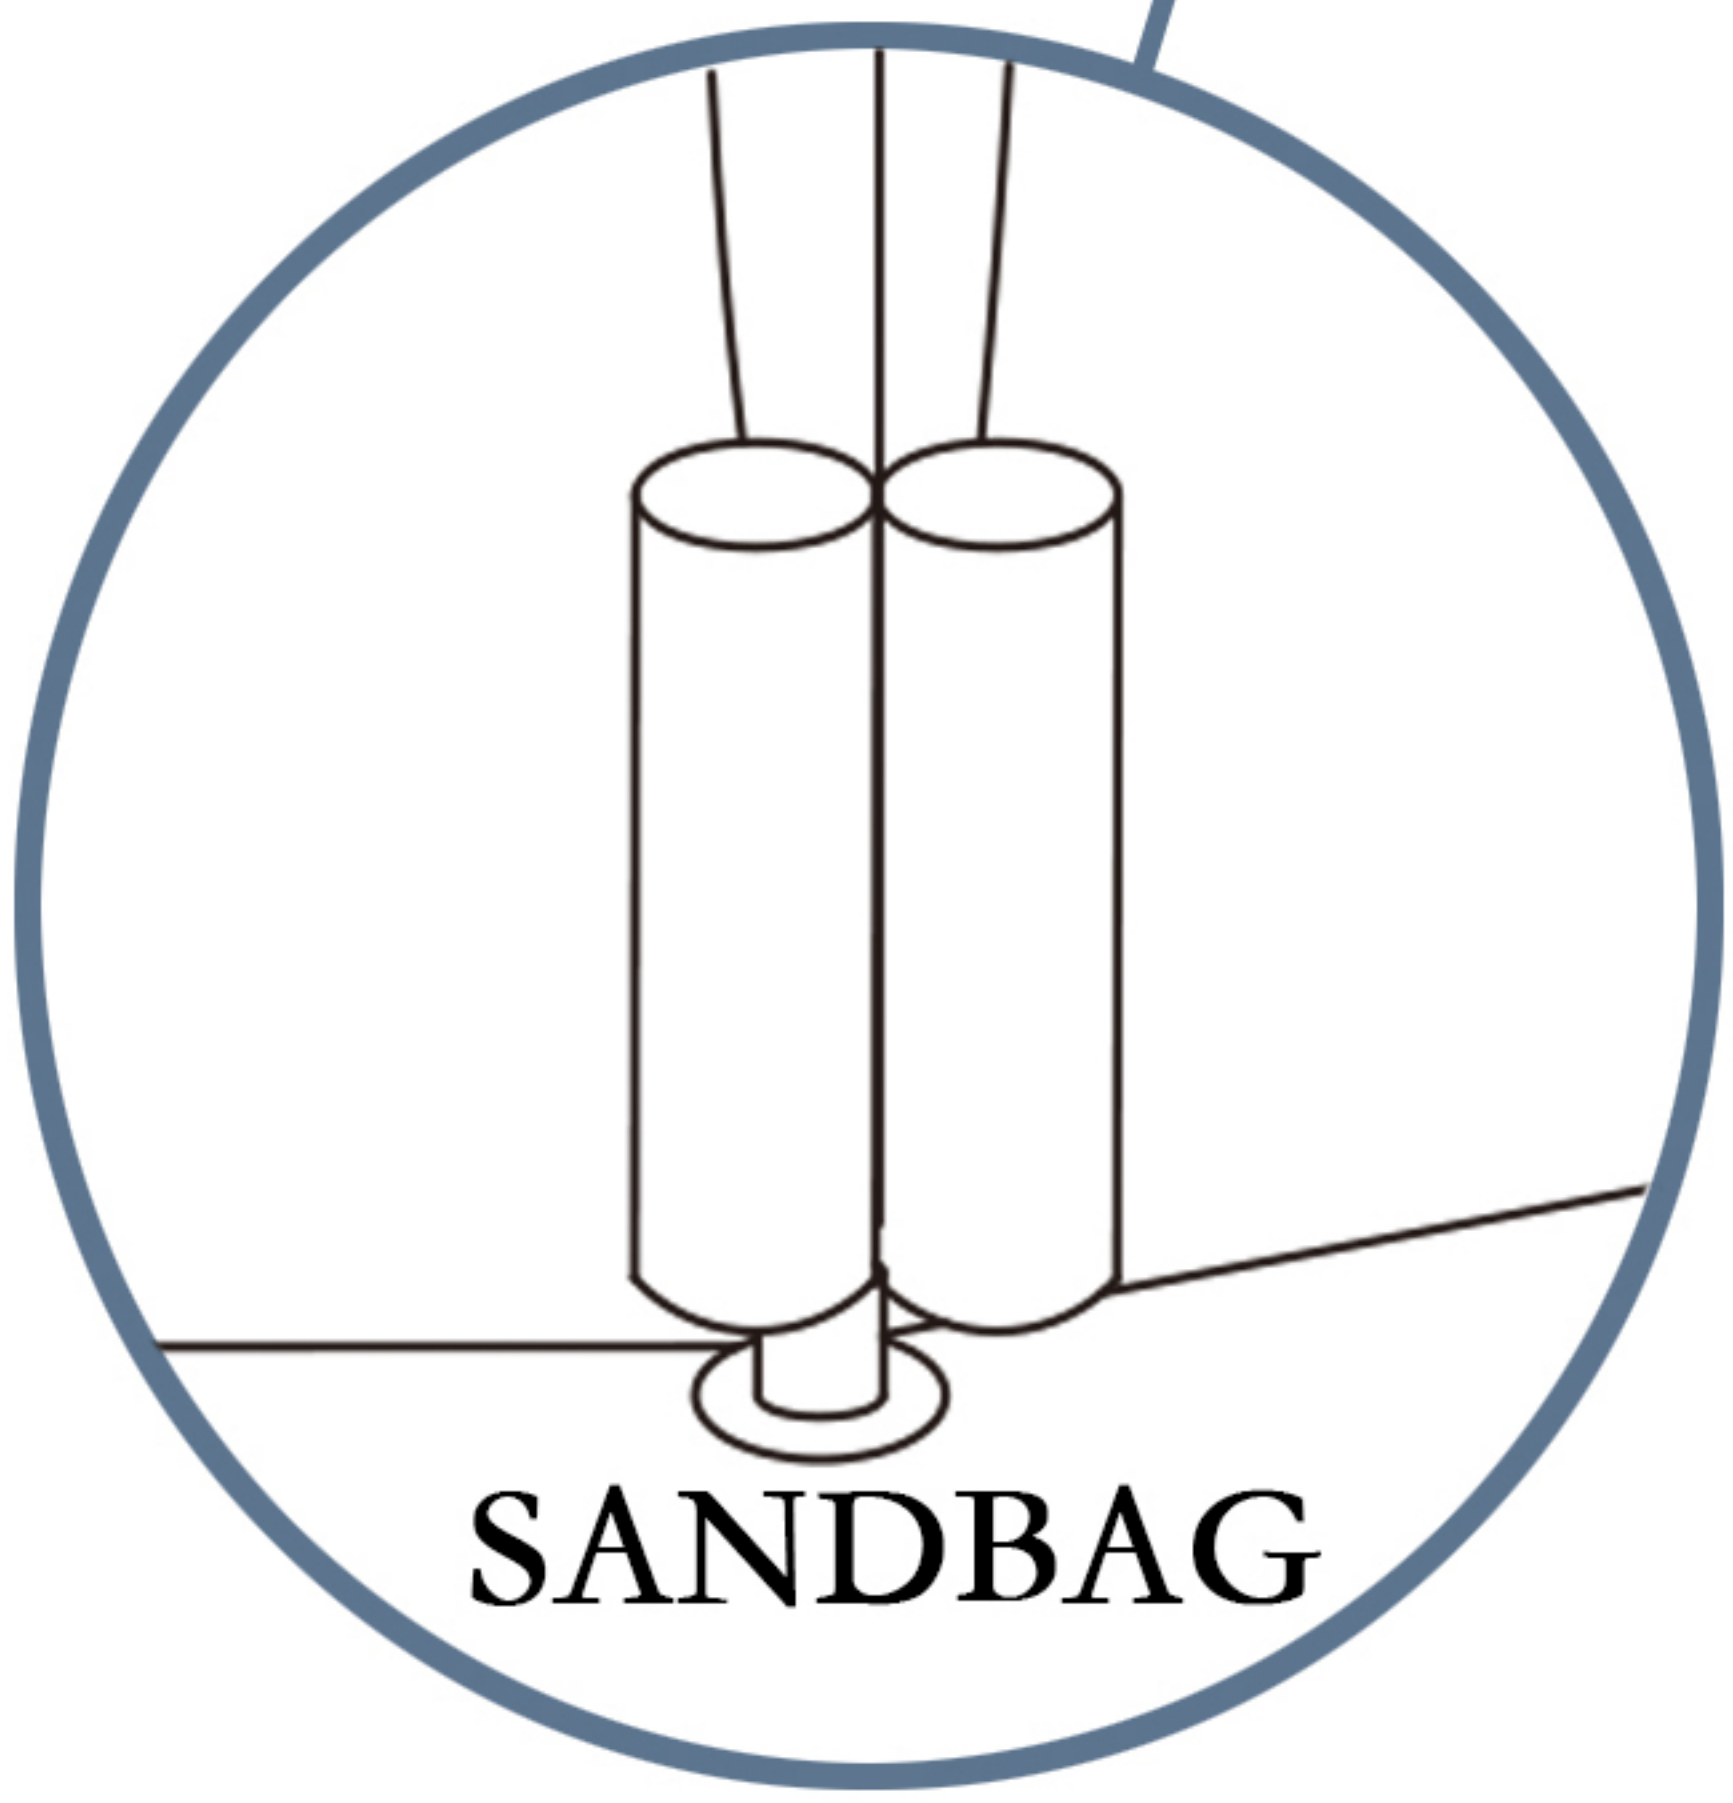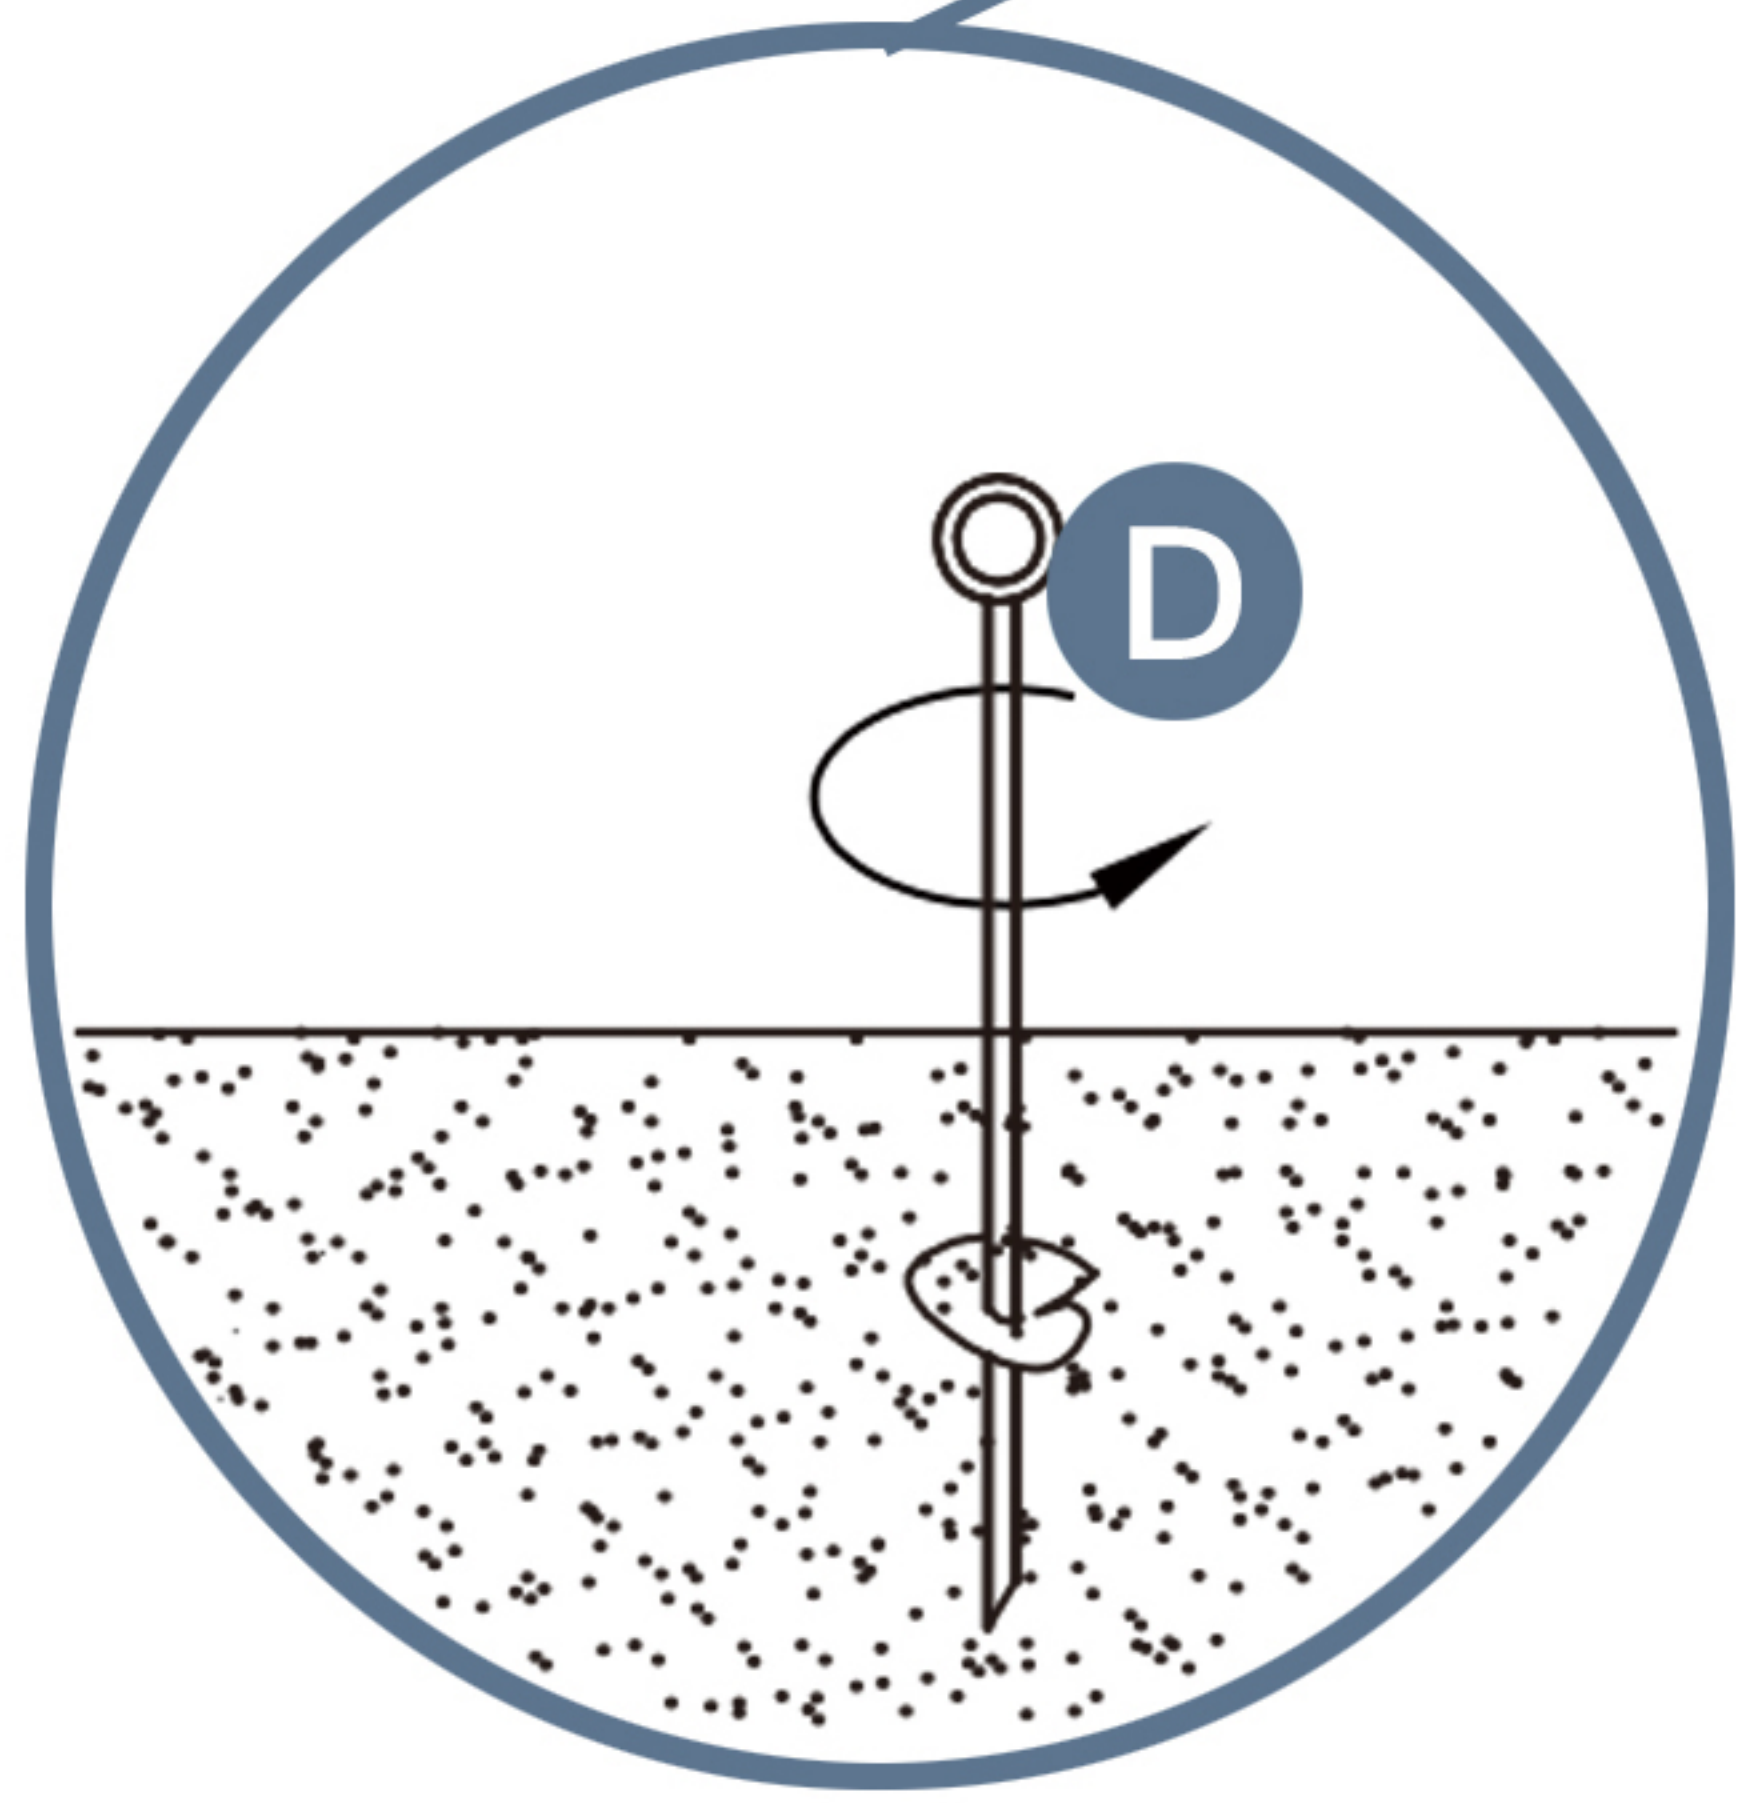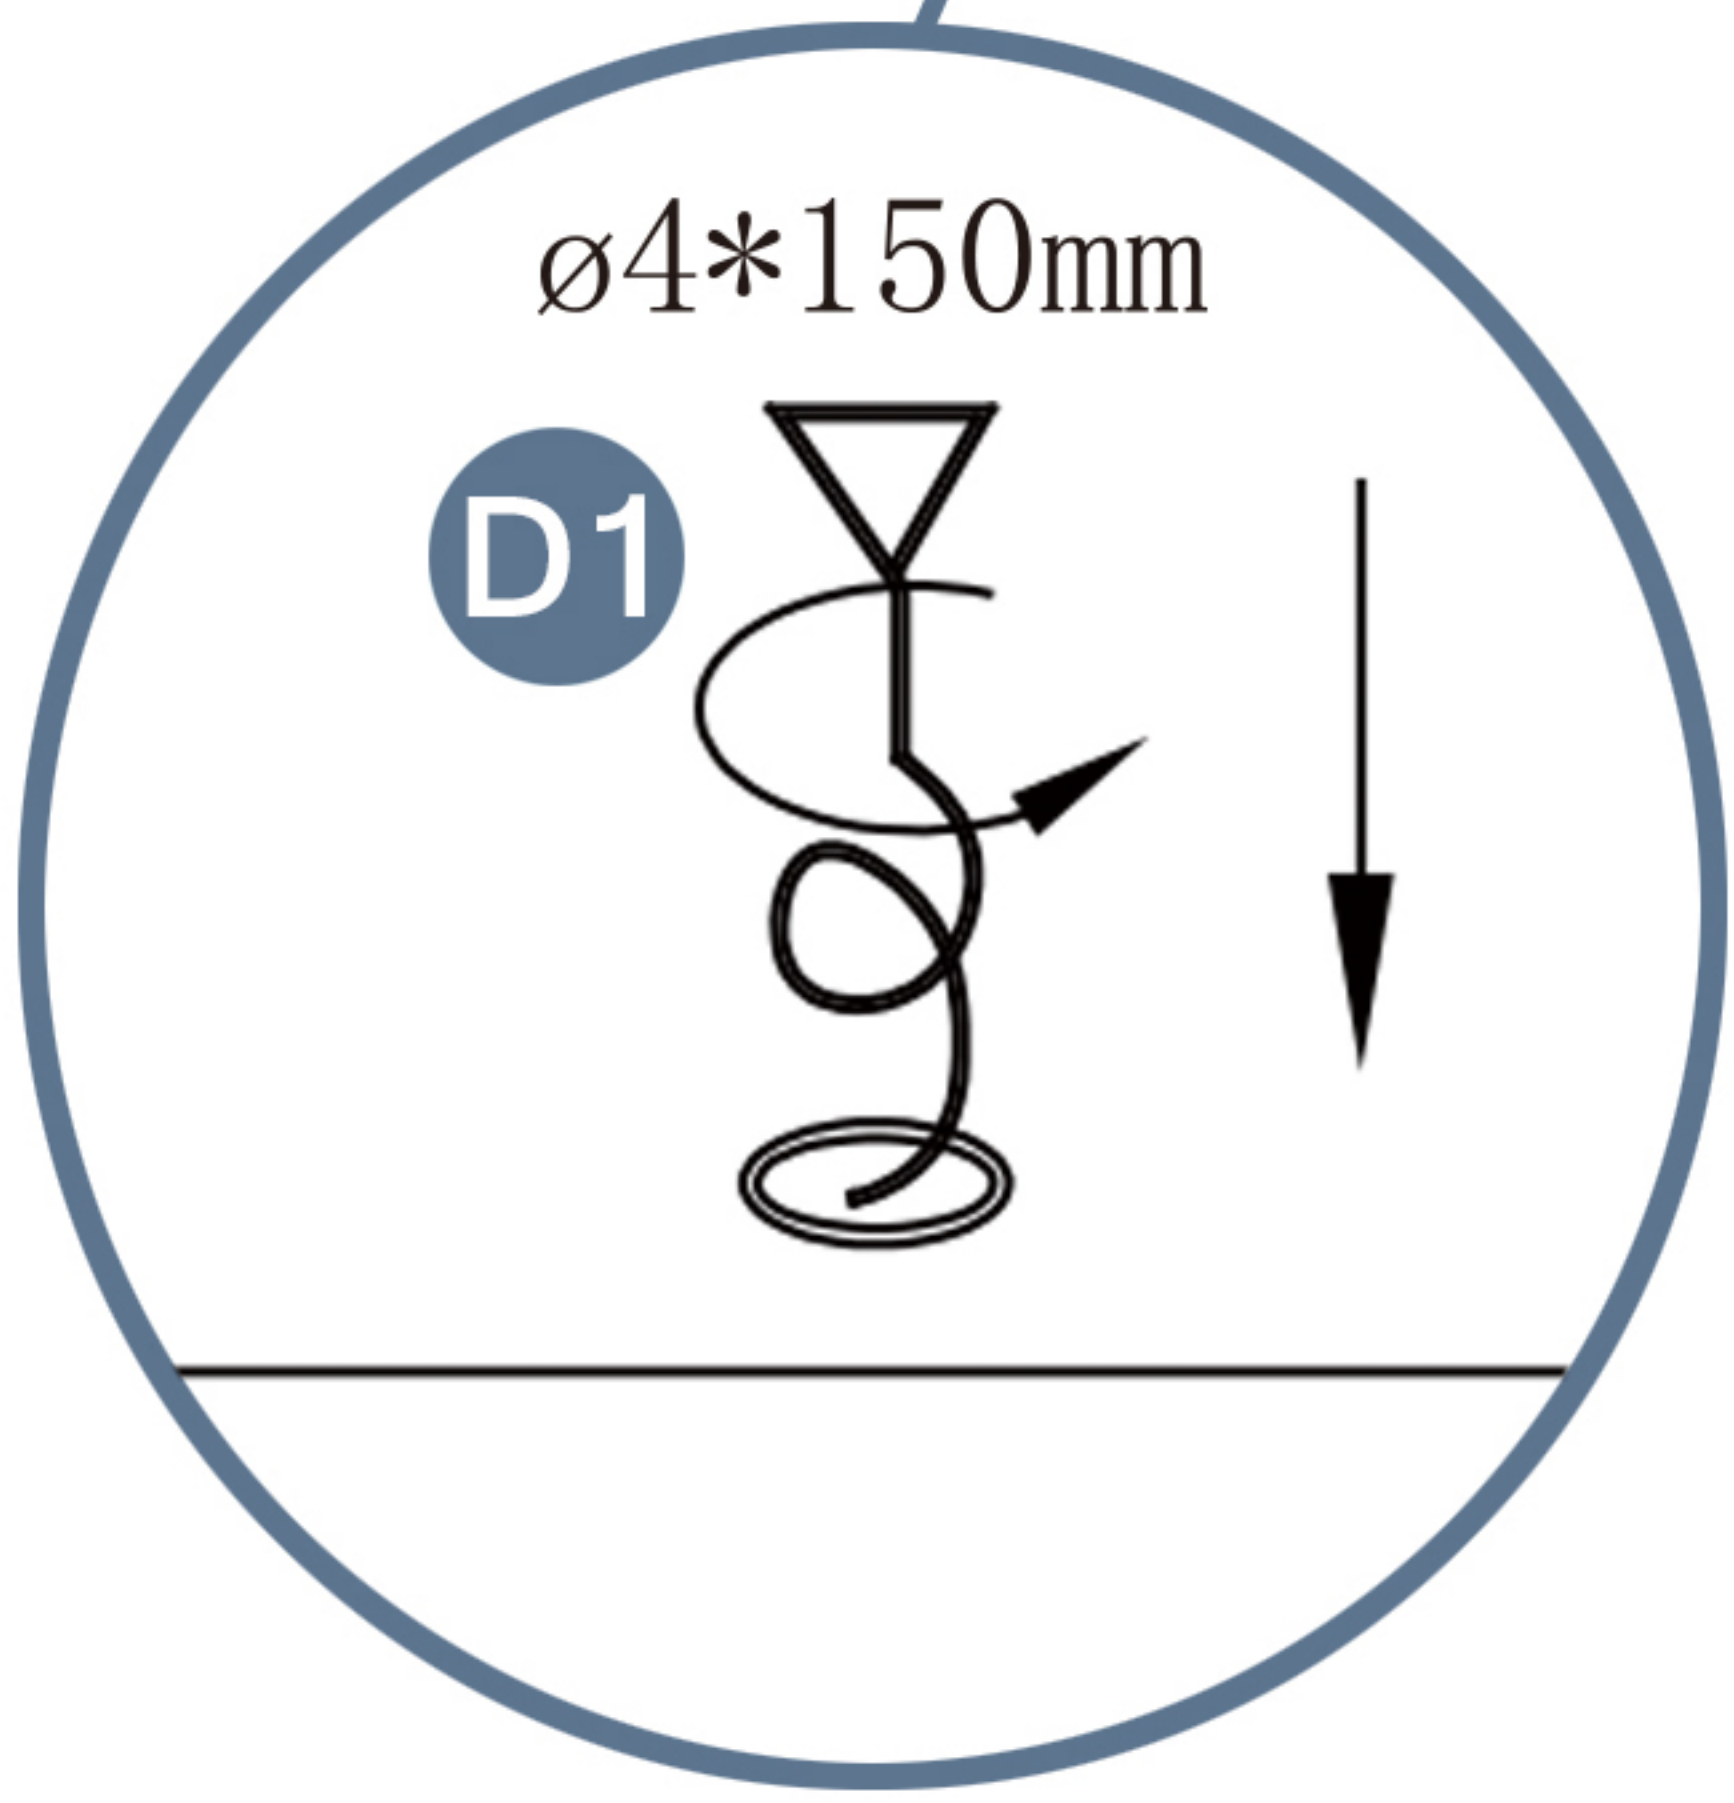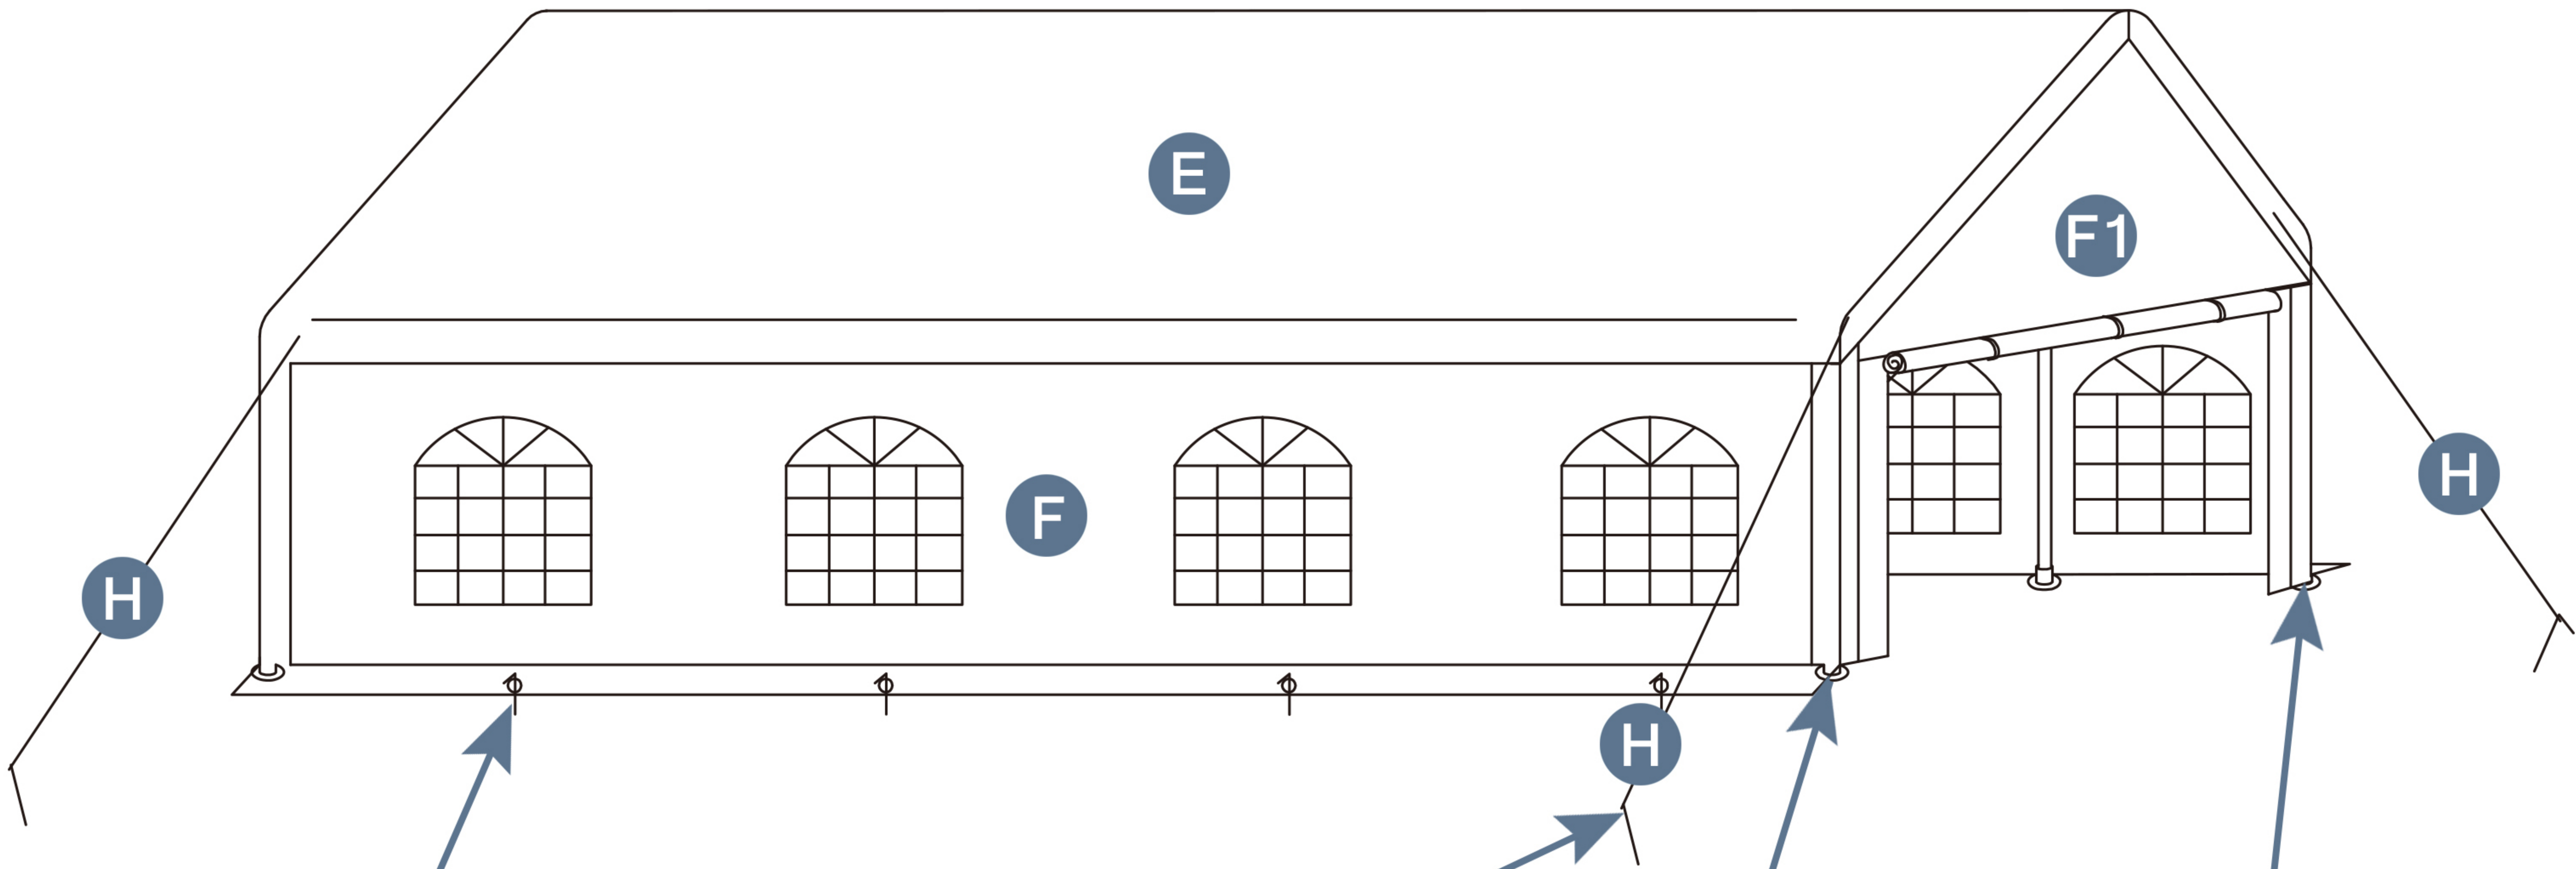

2