


## ASSEMBLY INSTRUCTION

Thank you for purchasing  
Please read the instructions carefully to ensure safe operation of the product

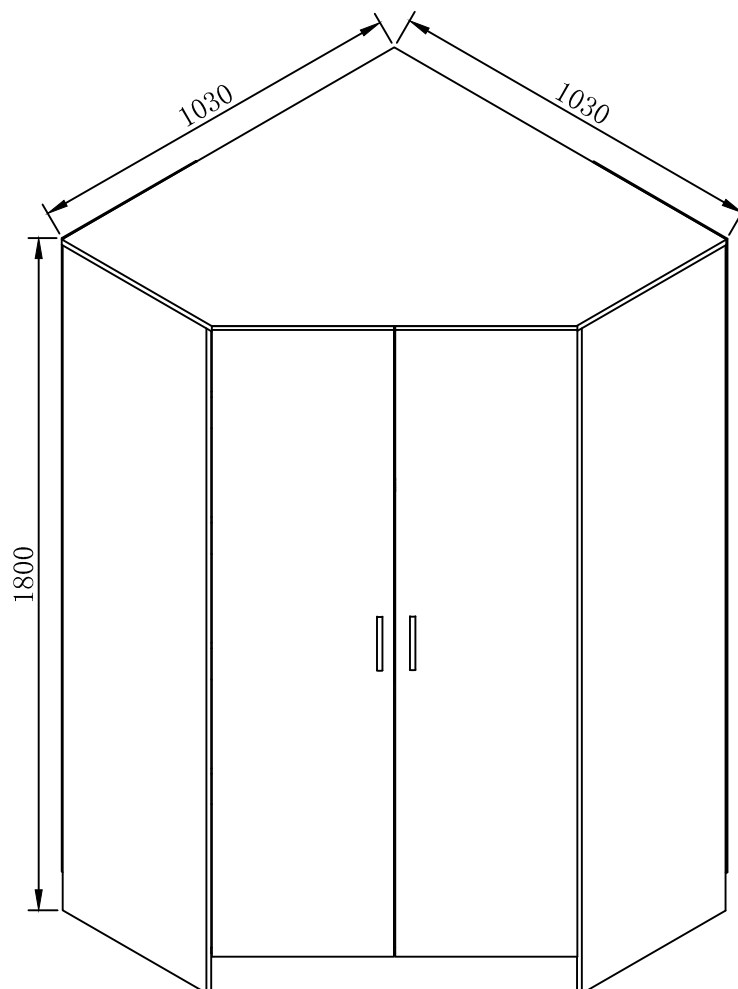


Size:(W)1030 x (D)1030 x (H)1800mm

**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction .

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION** : there are small components used in the construction of this unit . these loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards

### Tools Required (NOT PROVIDED)

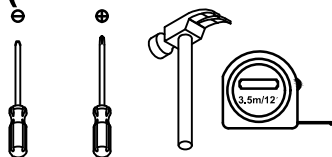

### Person Required



### Approximate Assembly Time



1 Hour

# **IMPORTANT-READ CAREFULLY RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE .**

## **2 MAN ASSEMBLY REQUIRED**

The product must be assembled in the corner it is going to live in.

Once the product is assembled and you are trying to lift it , the whole product must be lifted with equal force on each side-CANNOT BE DRAGGED ON THE FLOOR -otherwise, the weight will go on one side and will damage the panels hence why , we strongly recommend two people assembly .

We do advise you to hire a professional joiner if you are unsure about assembly . Please be advised warranty for this product does not cover for damages incurred during assembly .

## **INFORMATION**

- This product is intended for a maximum weight of 50kgs . do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use
- When you are ready to start , make sure that you have the right tools , plenty of space and a clean , dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly .
- This product should only be used on firm , level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools not included.

## **WARNINGS**


- Do NOT use power tools to construct this product.
- Do NOT tighten screws until fully assembled .
- Do NOT over tighten screws or bolts .
- Do NOT use this product if parts are missing , damaged or worn .
- Do NOT sit or stand on the product .
- We recommend the use of the wall strap provided for safety reasons . N.B. Wall fixings are not included - please source suitable fixings for your wall type . if in doubt please consult a qualified trade person. Warning: Always ensure the area to be drilled is free from hidden electrical wires , water and gas pipes.

## **CARE INFORMATION**

- Never use scourers , abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water . do not use solvent based cleaners or detergents as they can bleach or damage the product.



Please check the pack contents before assembling the product .  
if any components are missing, please contact your retailer.the  
fittings pack contains small items that should be kept away  
from small children.

CODE	PART NAME	QTY	CODE	PART NAME	QTY
1	1780 X 445 X 15MM LEFT HAND SIDE PANEL	1PC	9	1700 X 415 X 3MM BACK PANEL	2PCS
2	1780 X 445 X 15MM RIGHT HAND SIDE PANEL	1PC	10	962 X 90 X 15MM BOTTOM CROSS BAR	1PC
3	1030 X 1030 X 15MM TOP PANEL	1PC	11	387 X 300 X 15MM SHELF PANEL	8PCS
4	1013 X 1013 X 15MM BOTTOM PANEL	1PC	12	1012 X 90 X 15MM BOTTOM RIGHT CROSS BAR	1PC
5	1674 X 300 X 15MM LEFT MIDDLE SIDE PANEL	1PC	13	996 X 90 X 15MM BOTTOM LEFT CROSS BAR	1PC
6	1674 X 300 X 15MM RIGHT MIDDLE SIDE PANEL	1PC	14	842 X 90 X 15MM BOTTOM FRONT CROSS BAR	1PC
7	1674 X 596 X 15MM VERTICAL PANEL IN BACK LEFT SIDE	1PC	15	1682 X 399 X 15MM DOOR PANEL	2PCS
8	1674 X 613 X 15MM VERTICAL PANEL IN BACK RIGHT SIDE	1PC			

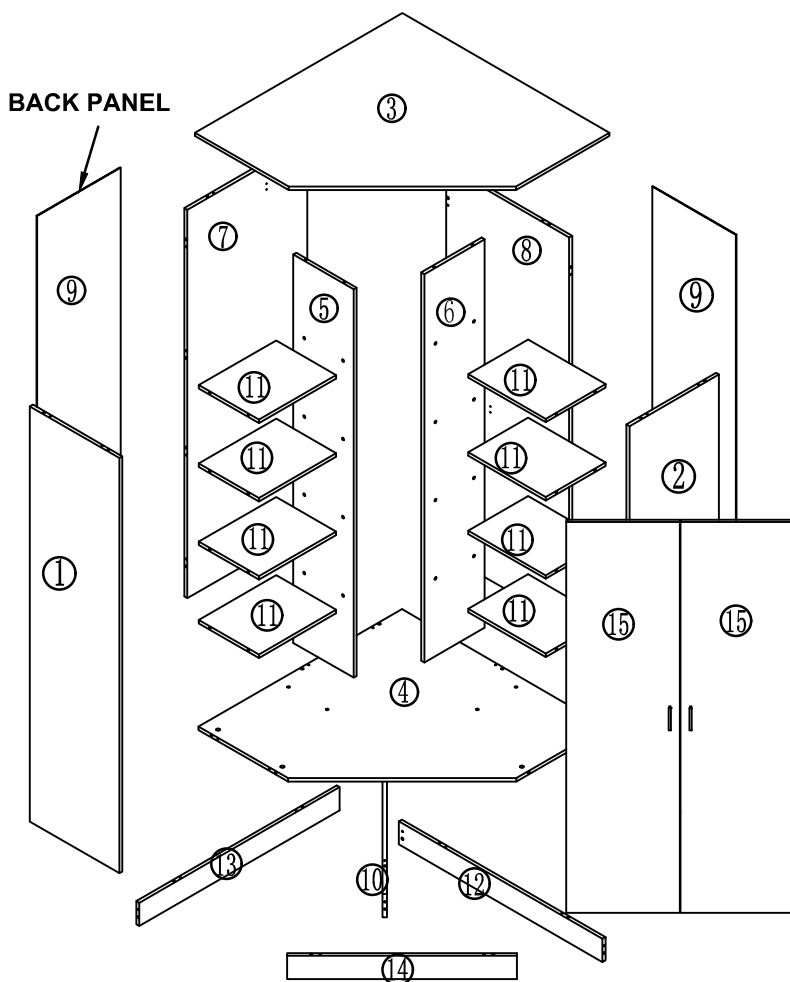






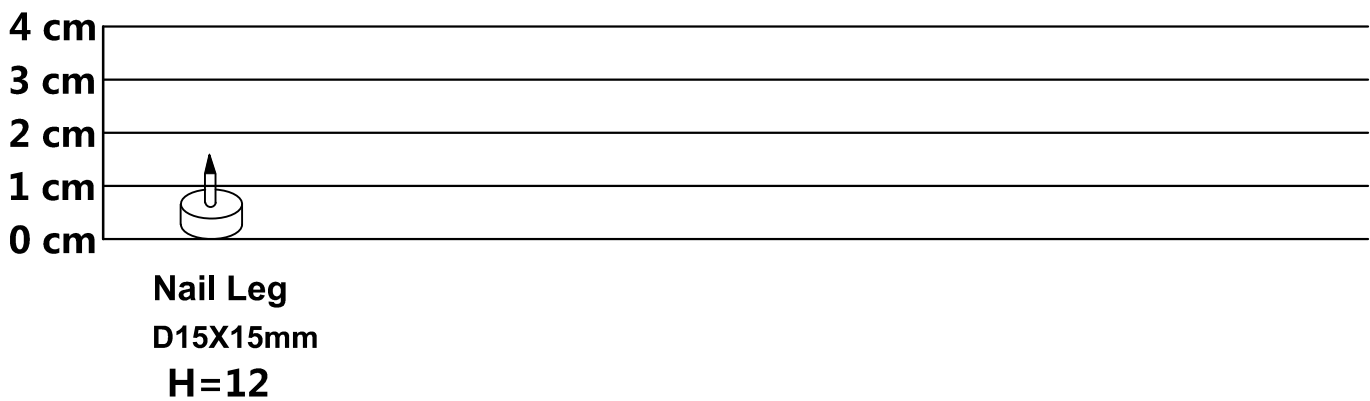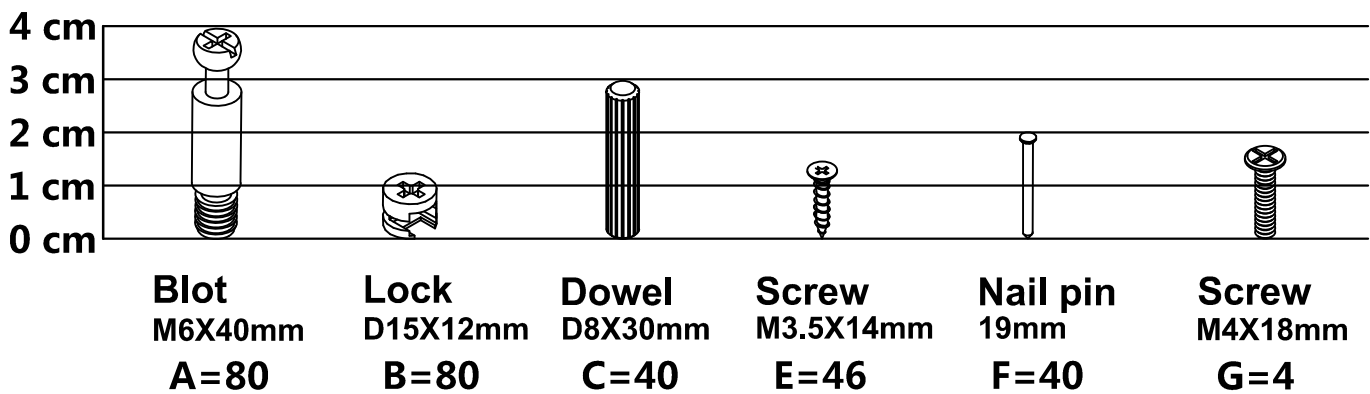

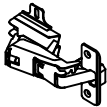

Panels#	Carton
3.4.10.12.13.14.Hinge, Hanging Rod	1 OF 3
1.2.9.15. FITTING KIT	2 OF 3
5.6.7.8.11.	3 OF 3





# Fixings (to scale)




# Fixings (not to scale)



<div>Hinge</div>  <div>D=6</div>	<div>Hanging Rail</div>  <div>L591mm</div>	<div>Hanging Rail Support</div>  <div>I=4</div>	<div>Handle</div>  <div>L128mm</div>	<div>Stopper</div>  <div>L=1</div>	<div>OPTIONAL REQUIREMENT Bracket/Strap</div>  <div>M=2</div>
<div>OPTIONAL REQUIREMENT Spanner</div>  <div>M4</div> <div>N=1</div>	<div>OPTIONAL REQUIREMENT CONNECTING SCREWS</div>  <div>M6X20mm</div> <div>O=4</div>	<div></div>  <div>P=5</div>			

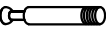
STEP 1

A		4 PCS
C		20 PCS
E		4 PCS
I		2 PCS

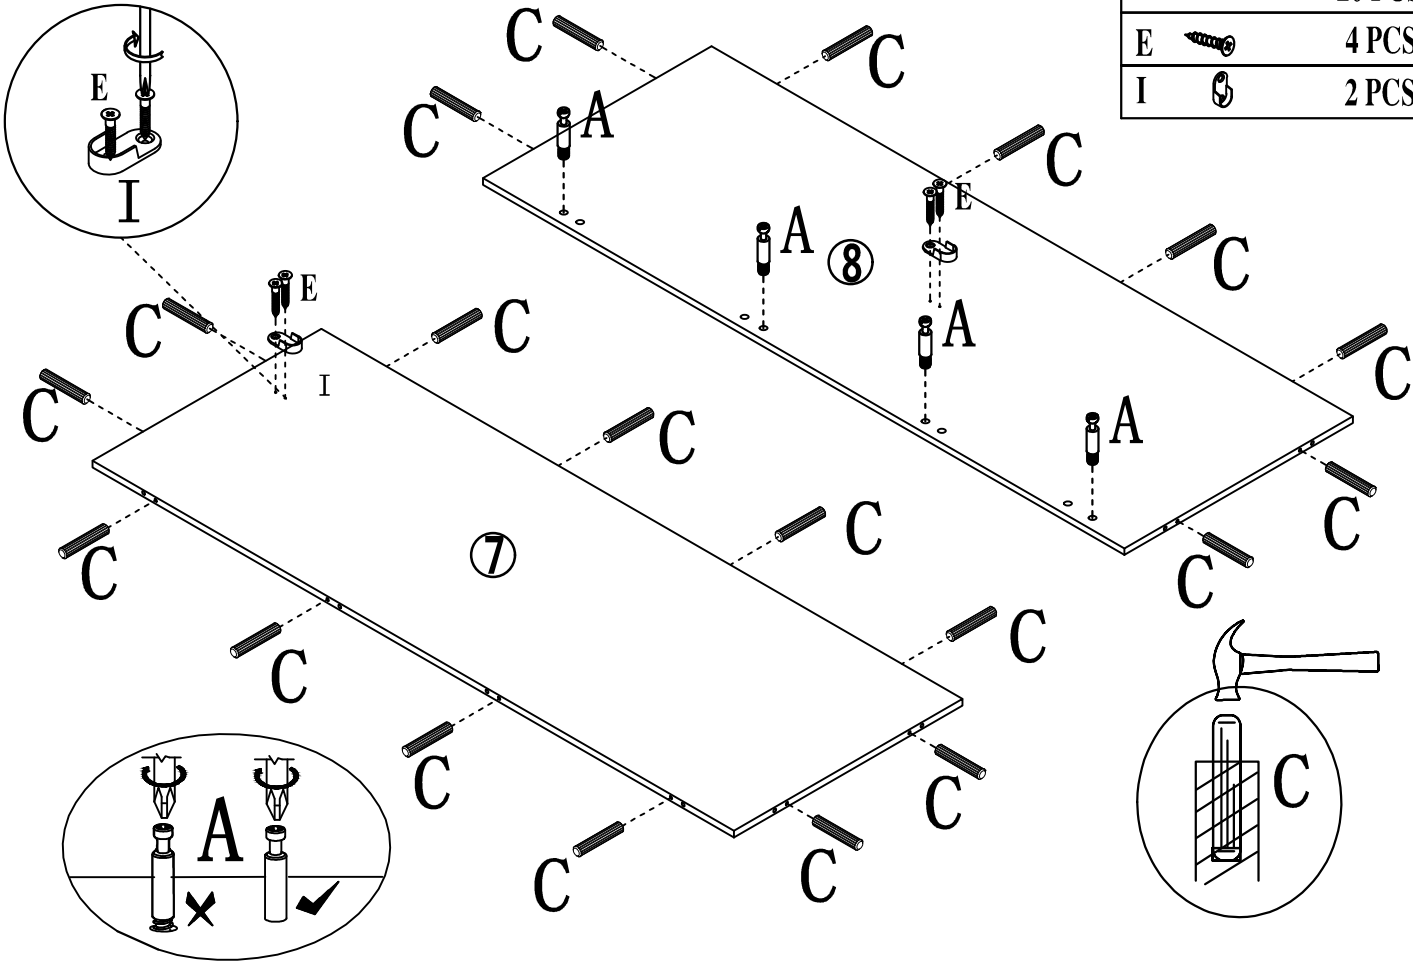


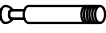


STEP 2

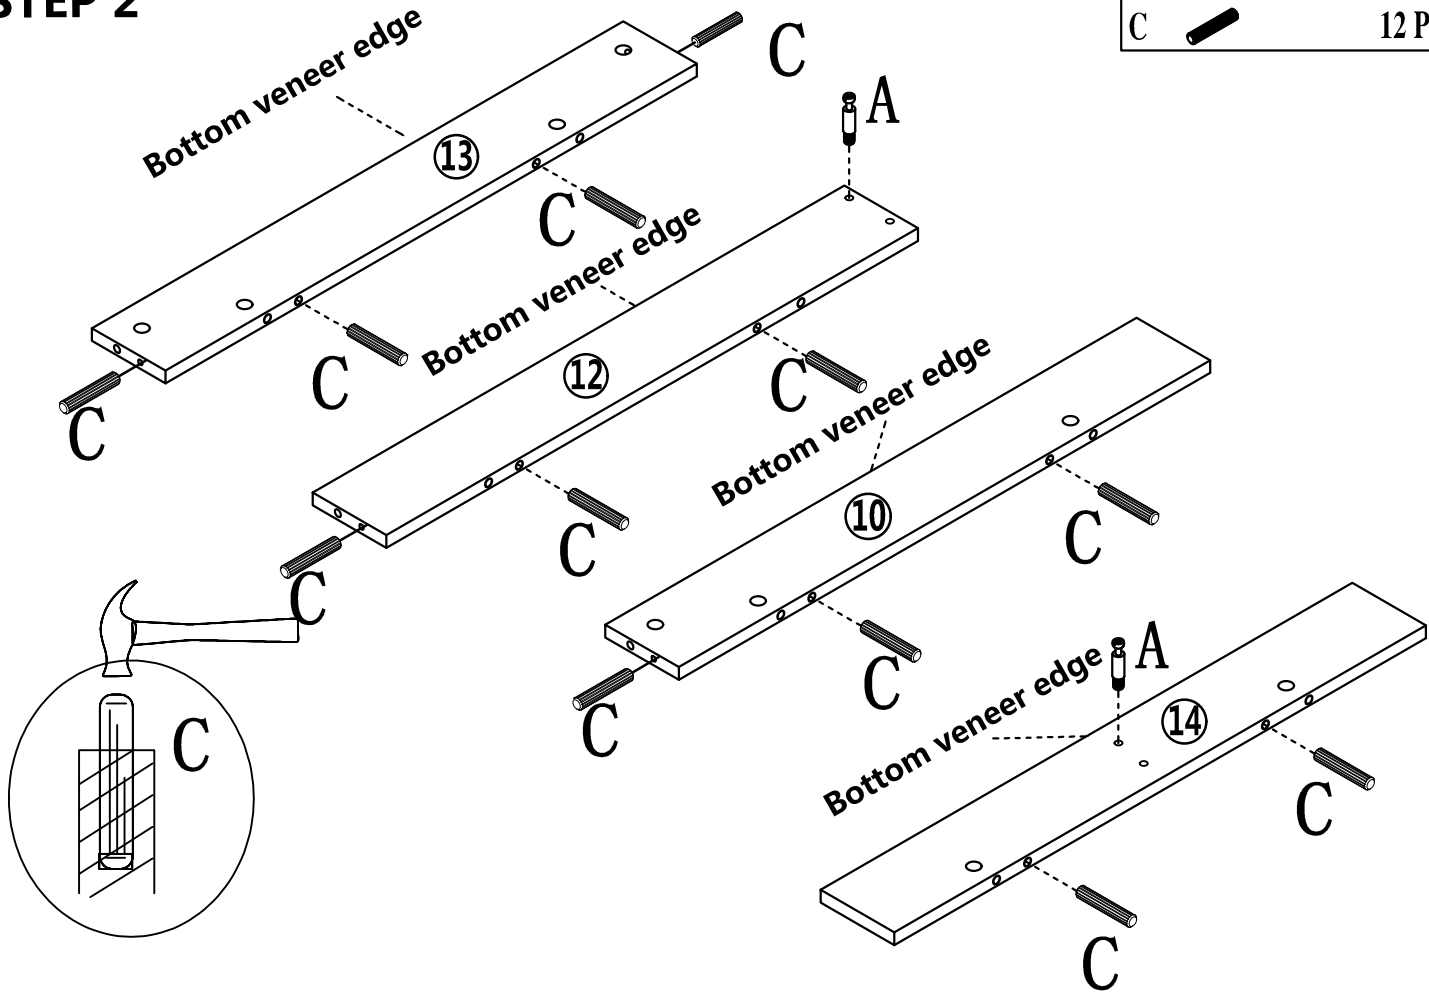A		2 PCS
C		12 PCS




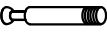


STEP 3

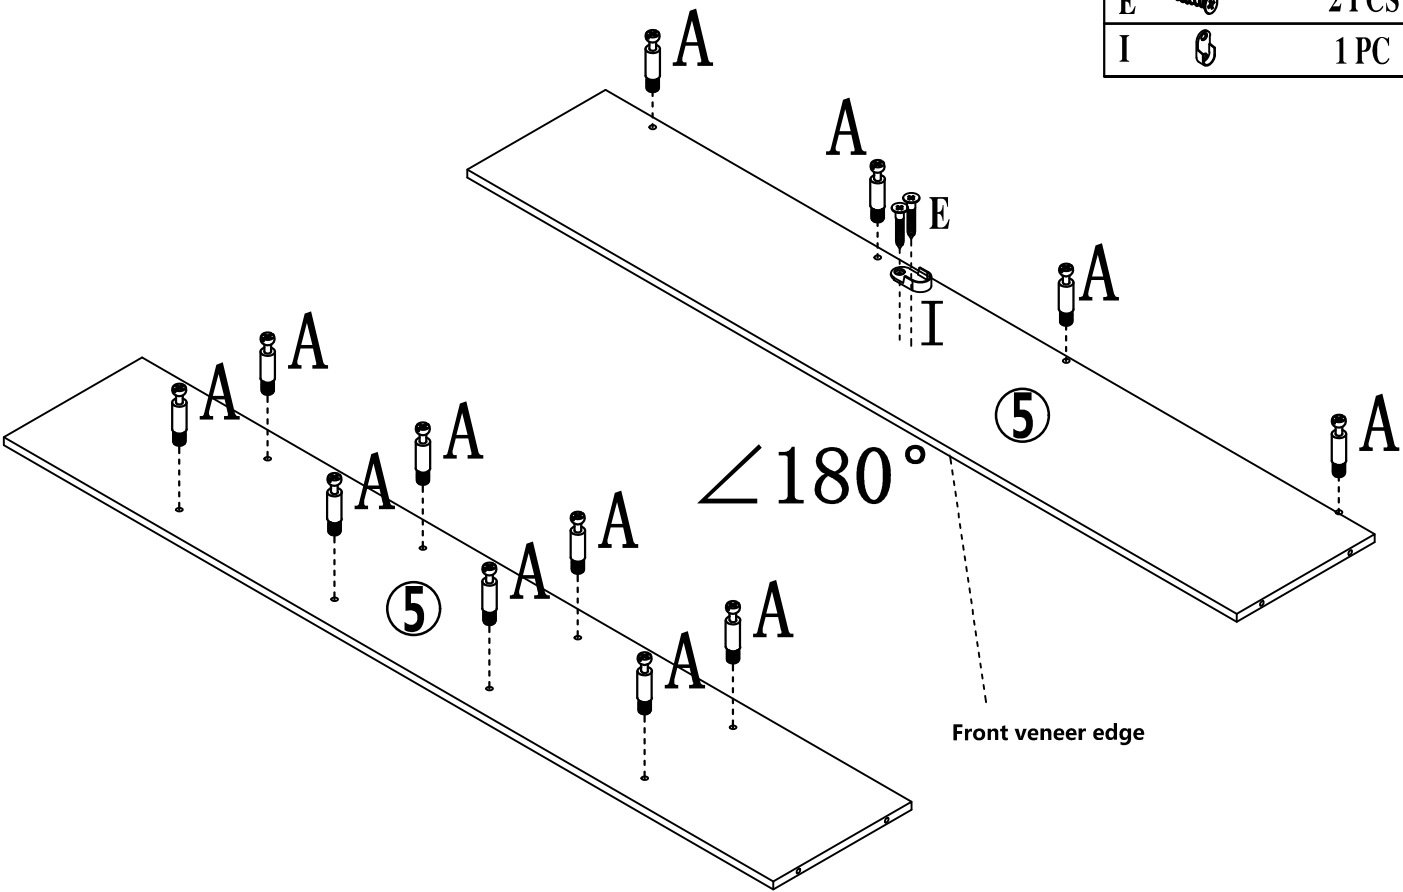A		12 PCS
E		2 PCS
I		1 PC

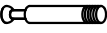



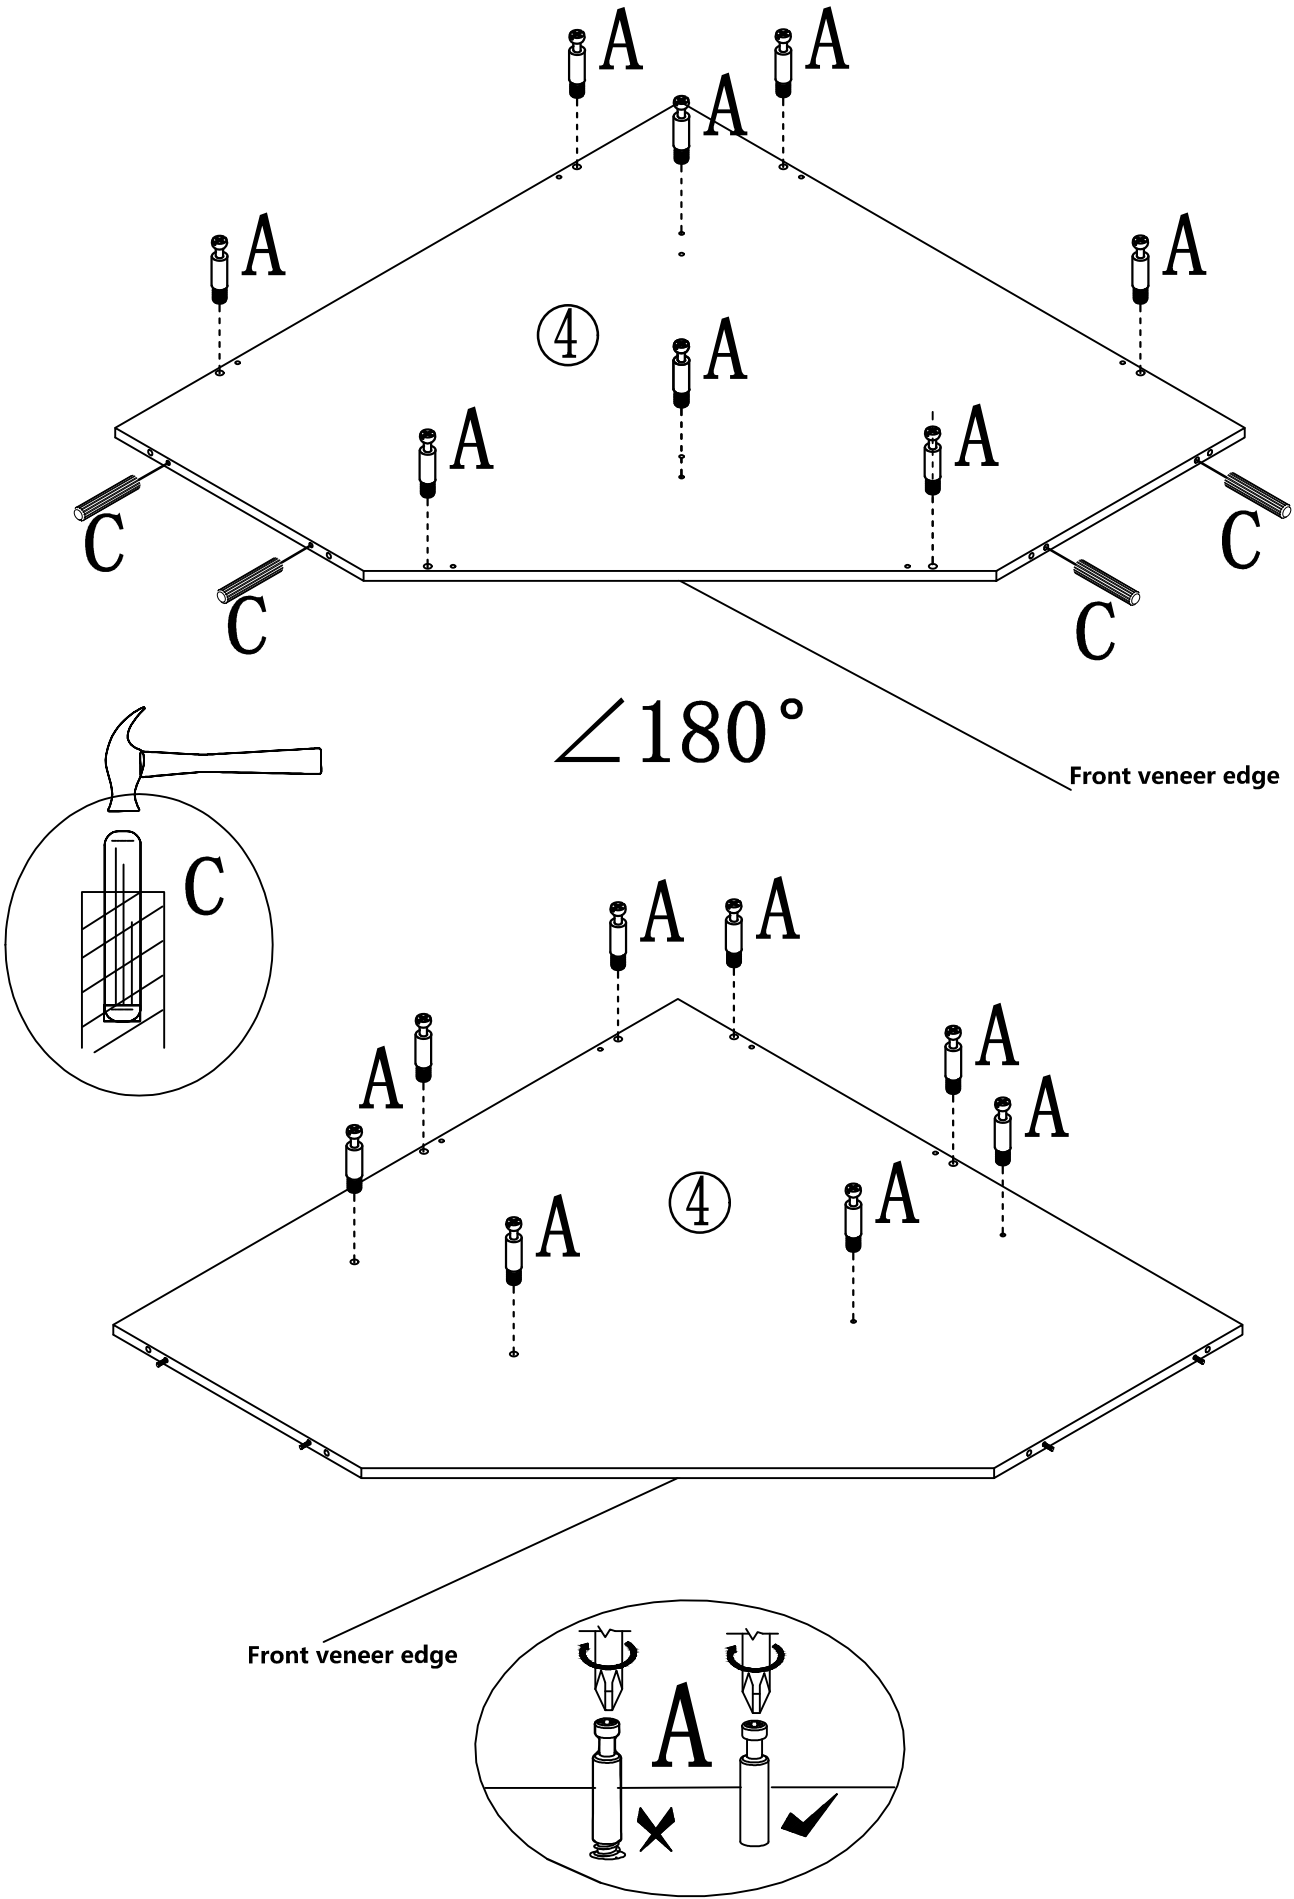
STEP 4

A		12 PCS
E		2 PCS
I		1 PC

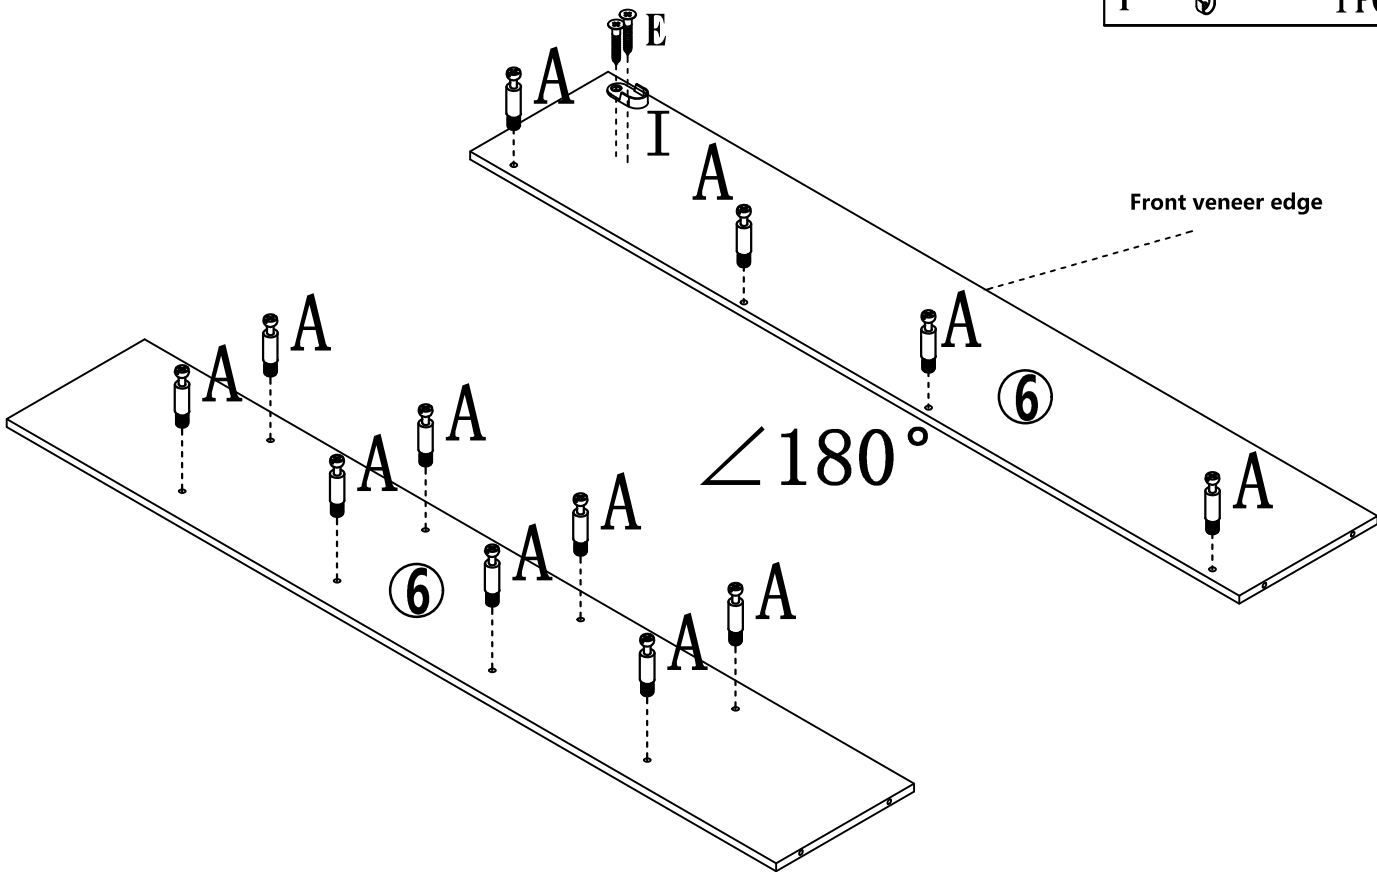



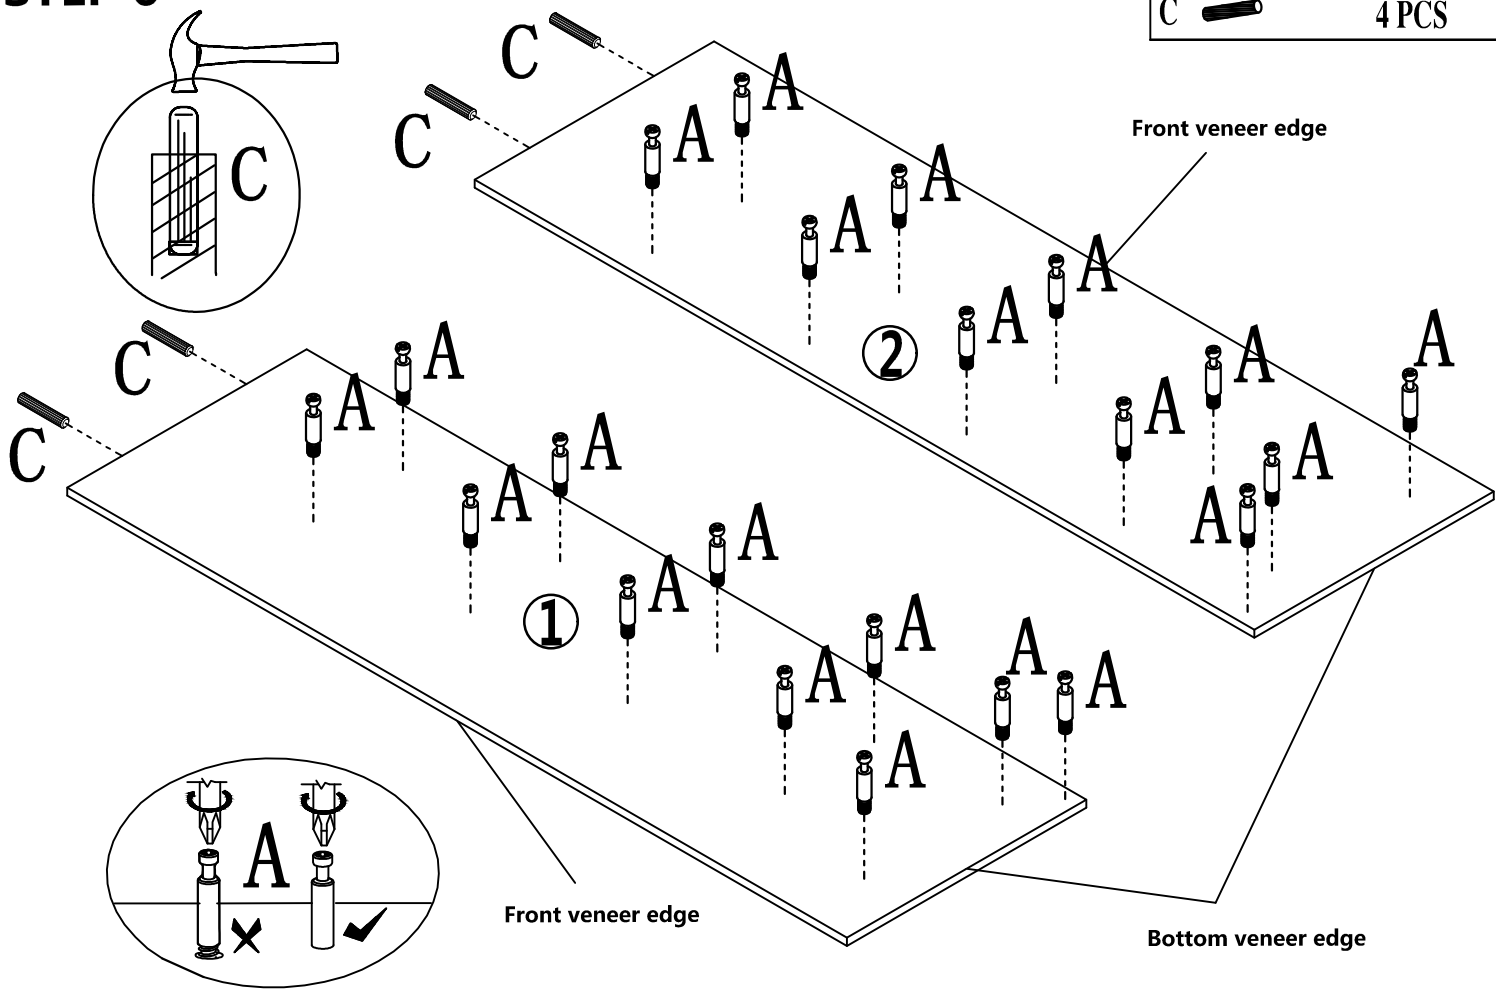
STEP 5

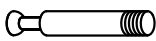A		16 PCS
C		4 PCS




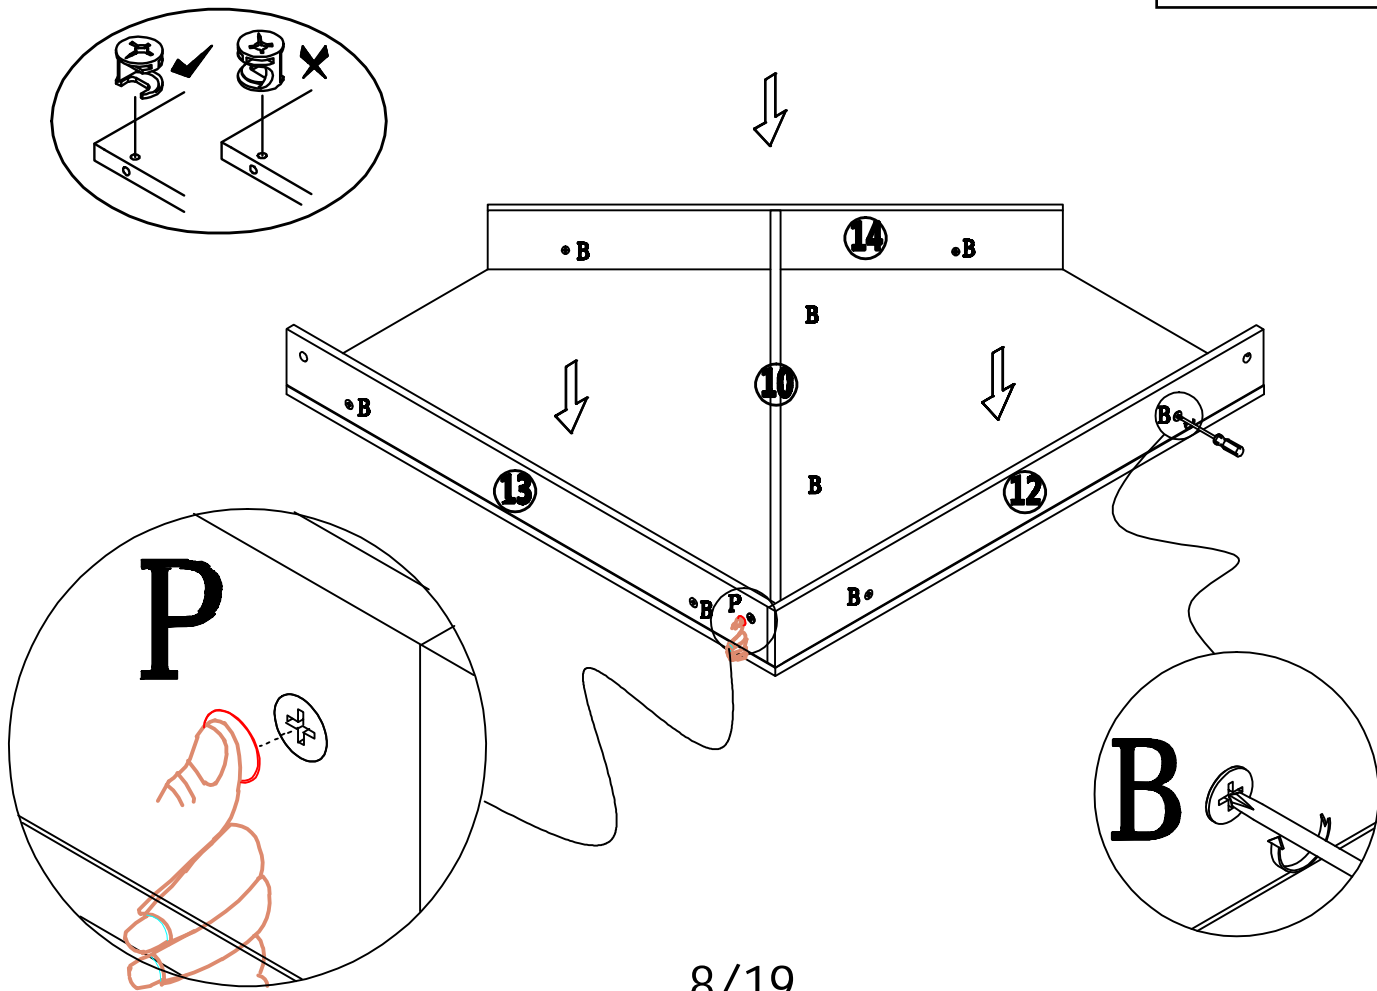
STEP 6

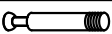A		22 PCS
C		4 PCS




STEP 7




B		10 PCS
P		5 PCS








## STEP 8

B  4 PCS

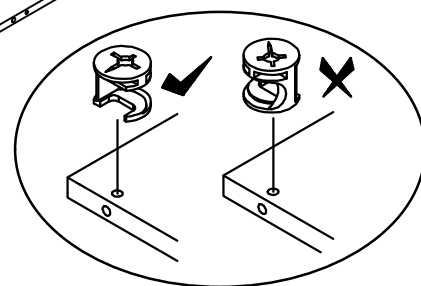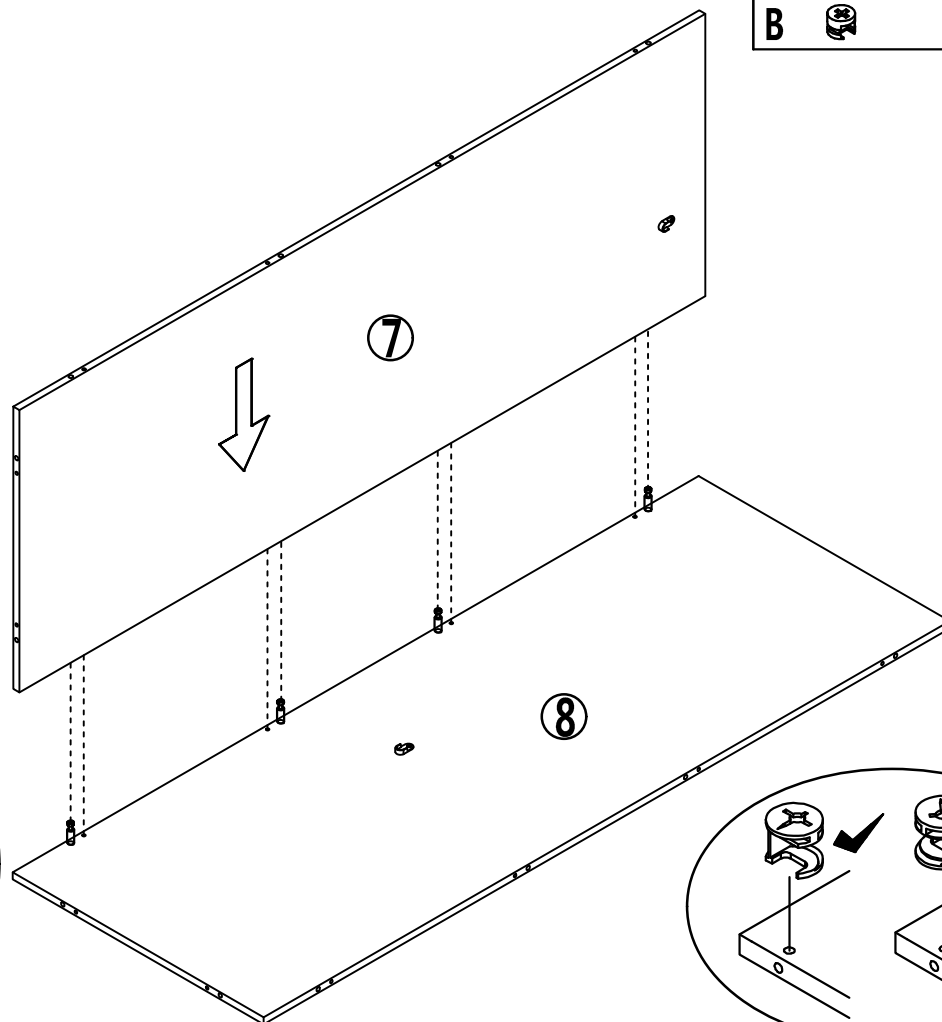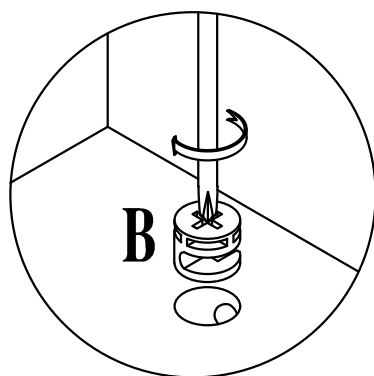

## STEP 9

B  8 PCS

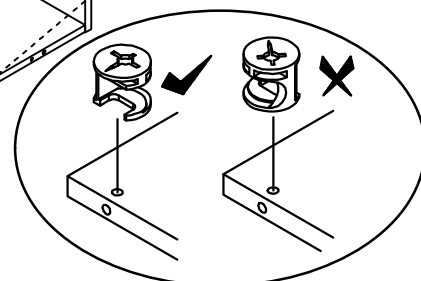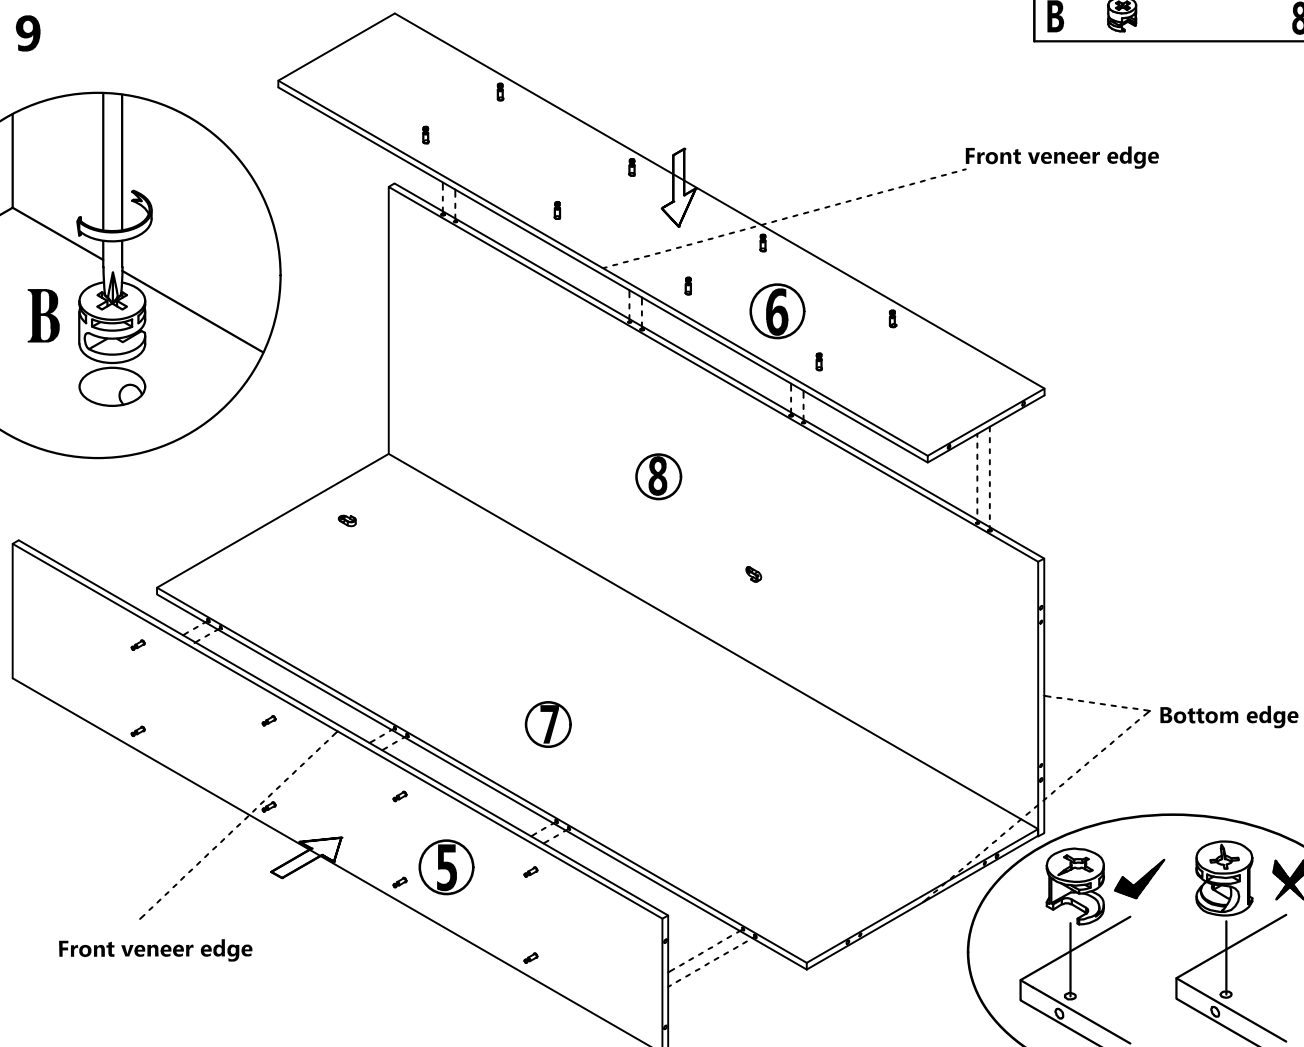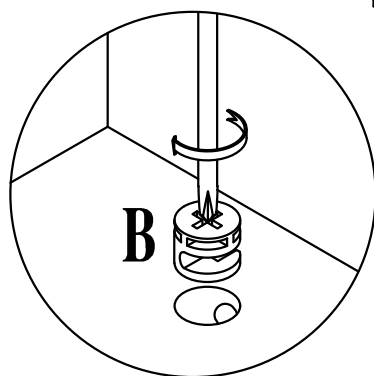


# STEP 10

B



8 PCS

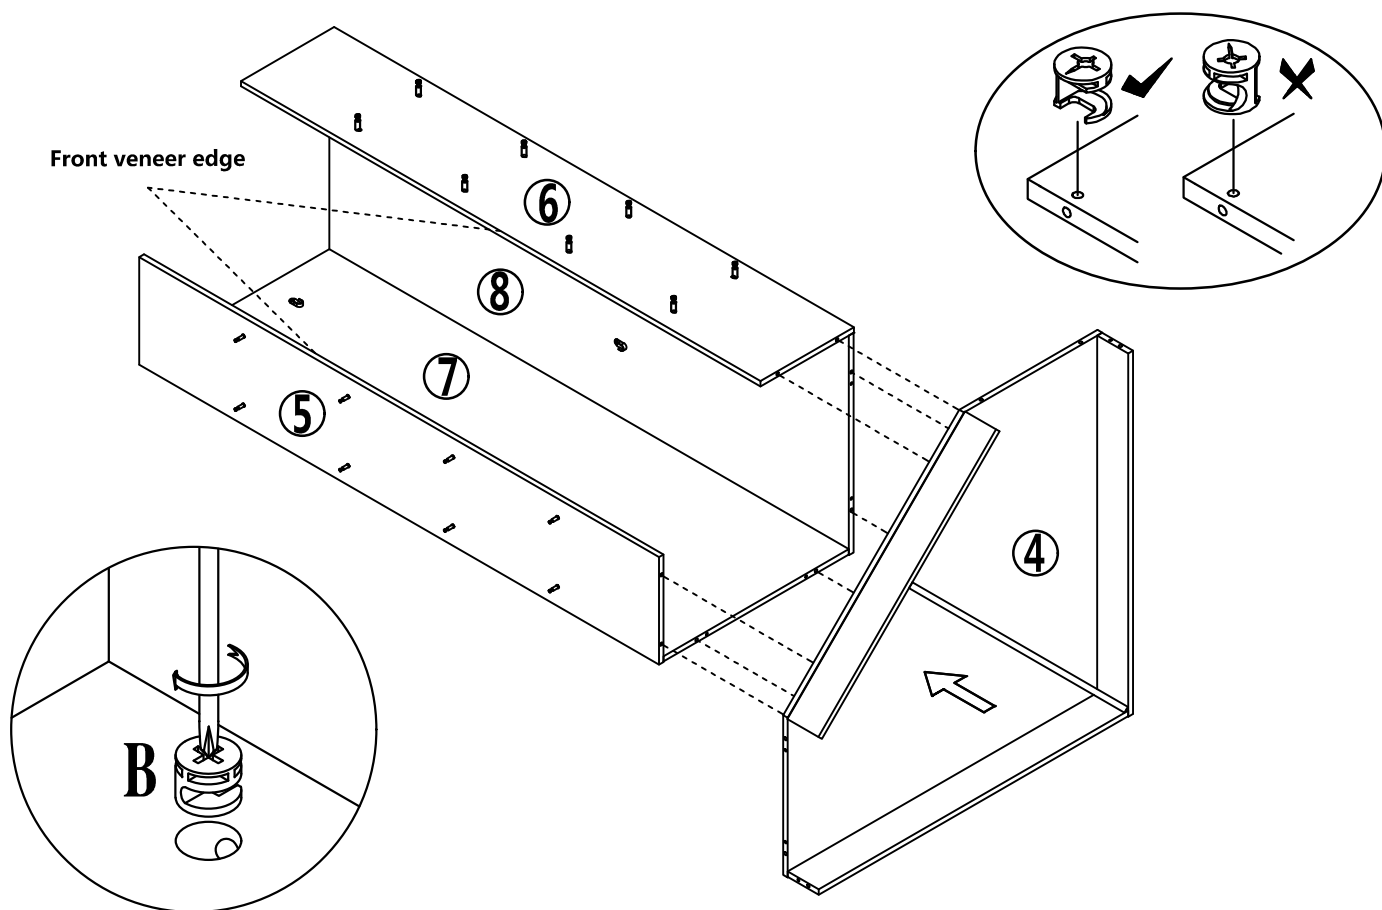


# STEP 11

B




16 PCS

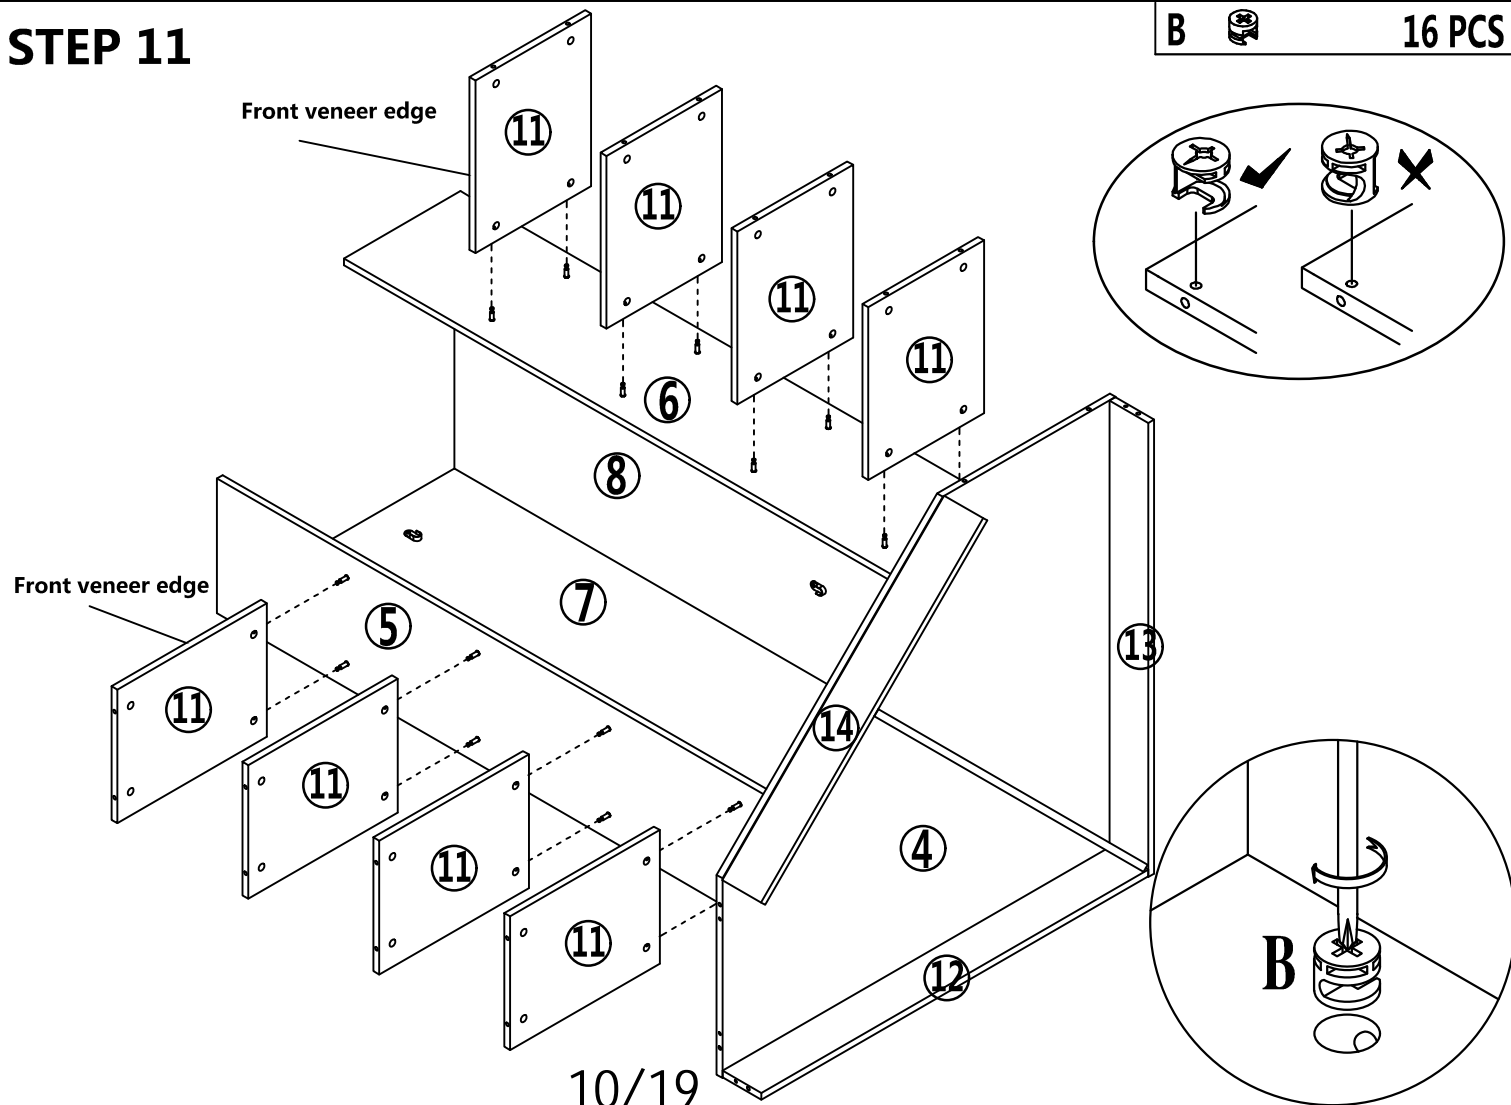





# STEP 12

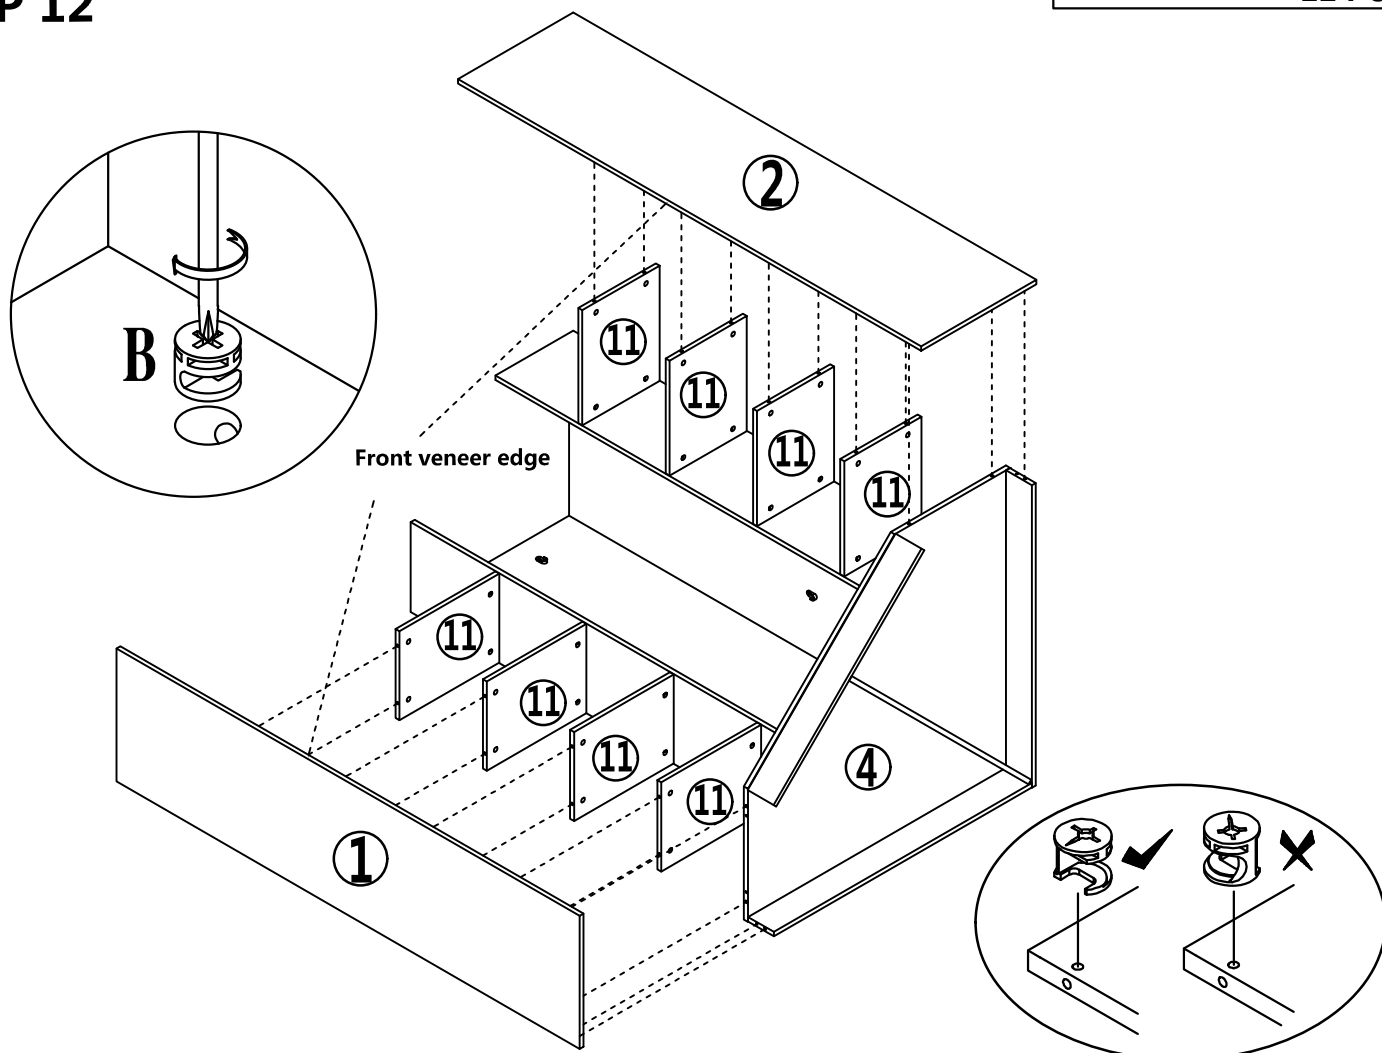B  22 PCS



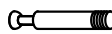


# STEP 13

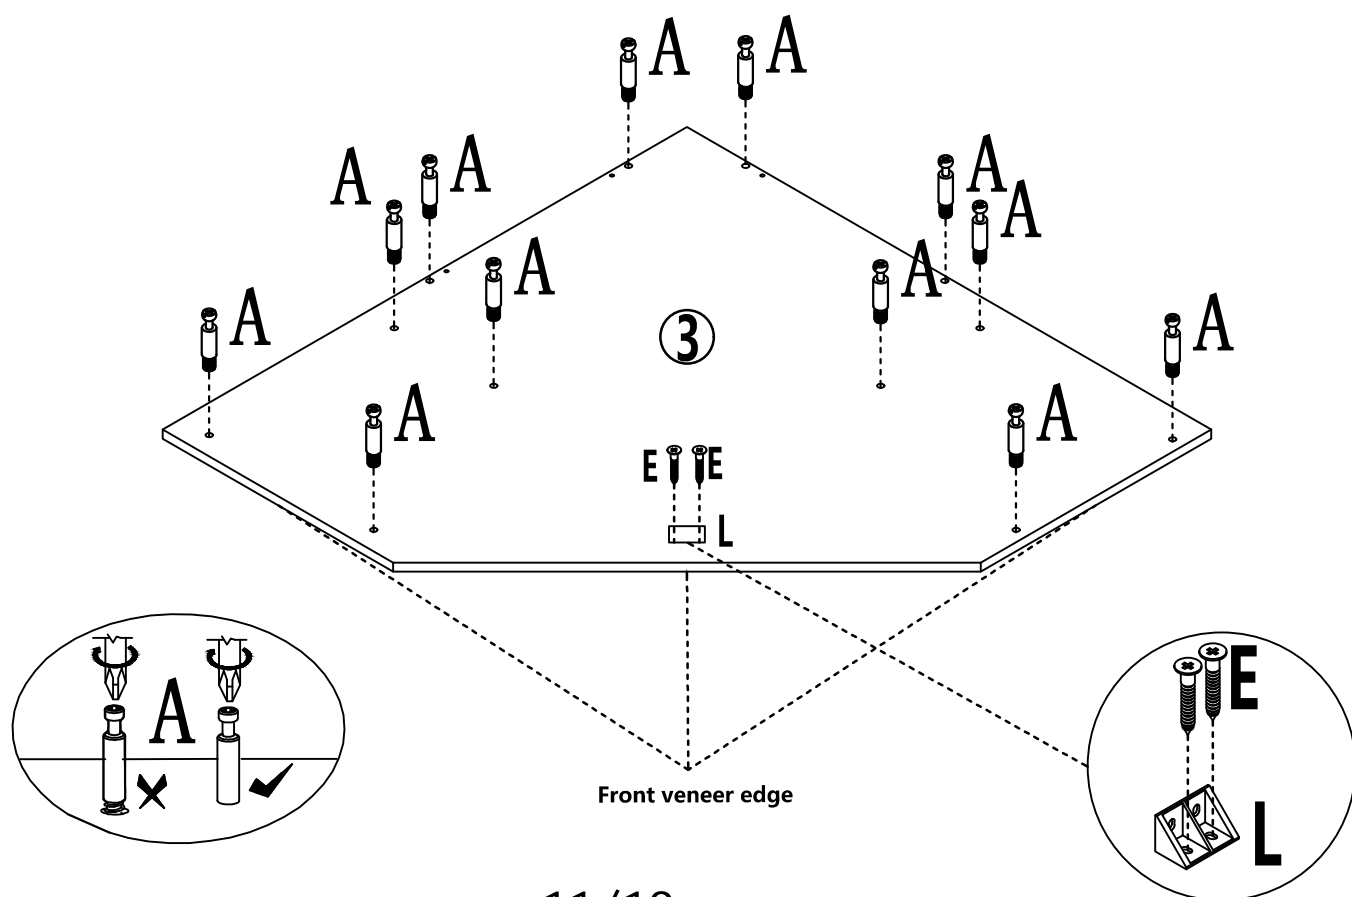A		12 PCS
E		2 PCS
L		1 PCS




# STEP 14

B		12 PCS
K		12 PCS

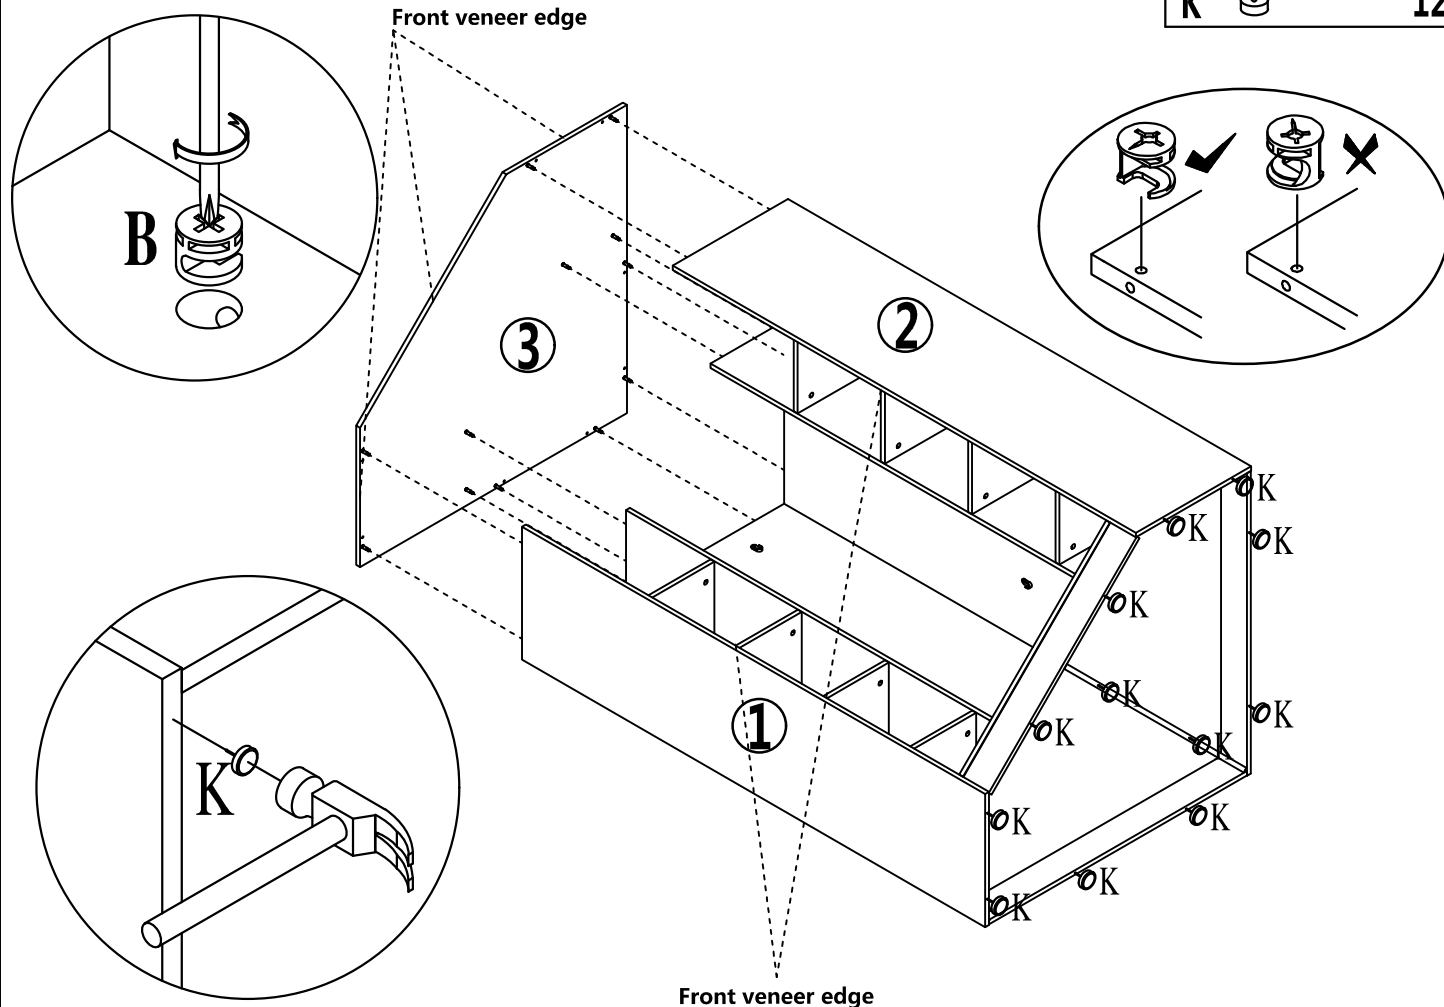







# STEP 15

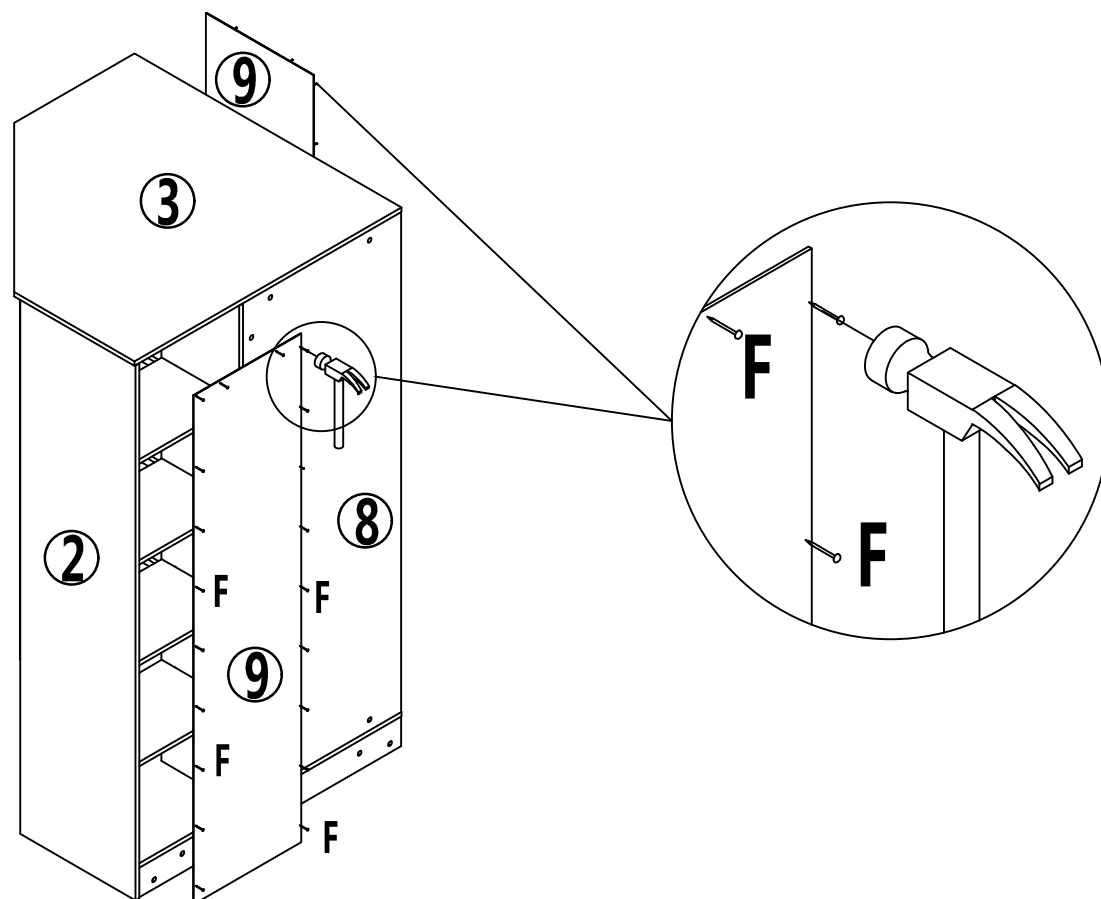F		40 PCS
---	---	--------






# STEP 16

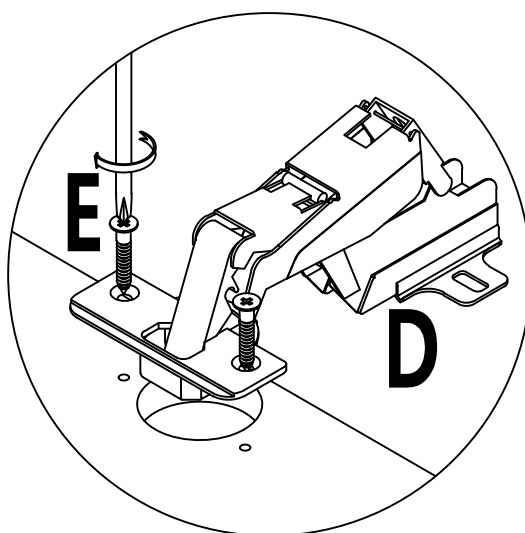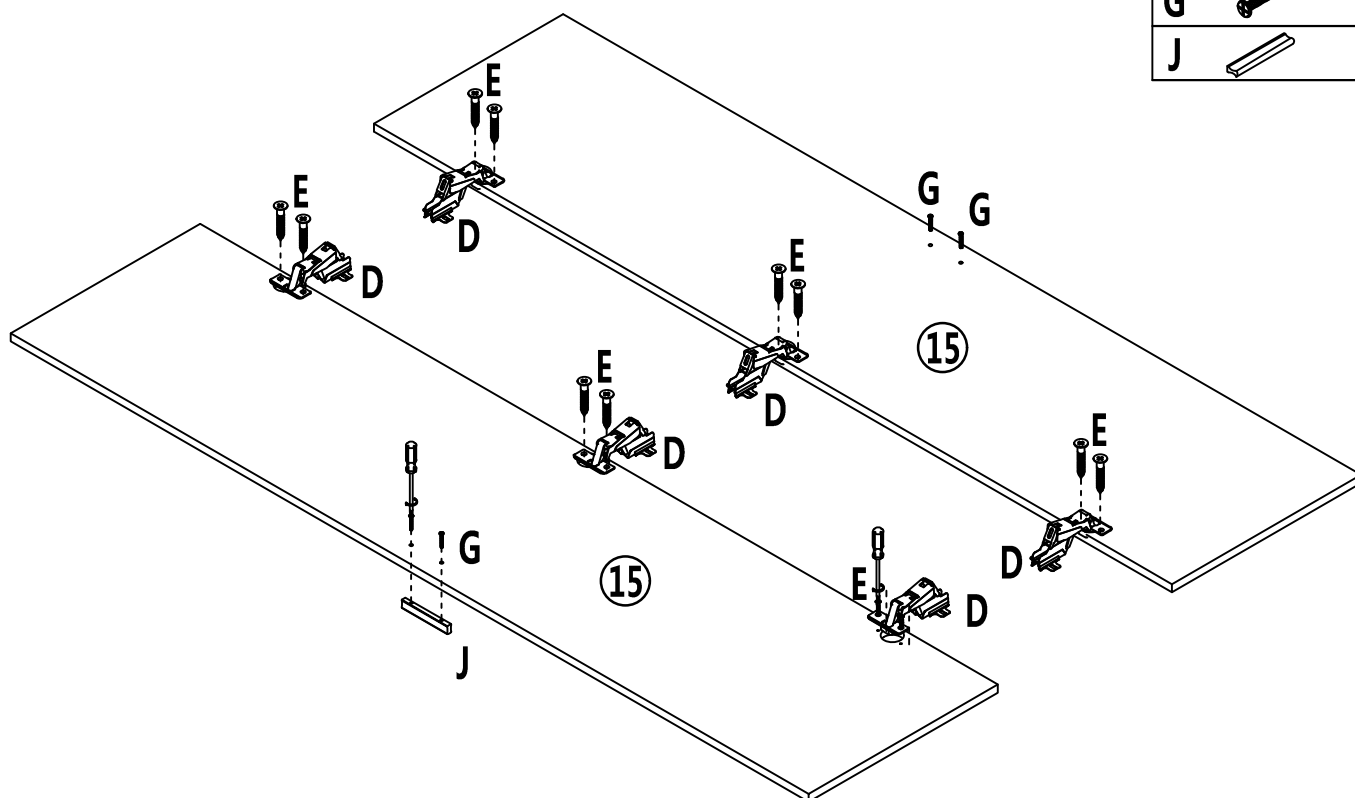D		6 PCS
E		12 PCS
G		4 PCS
J		2 PCS





# STEP 17

E		24 PCS
H		2 PCS


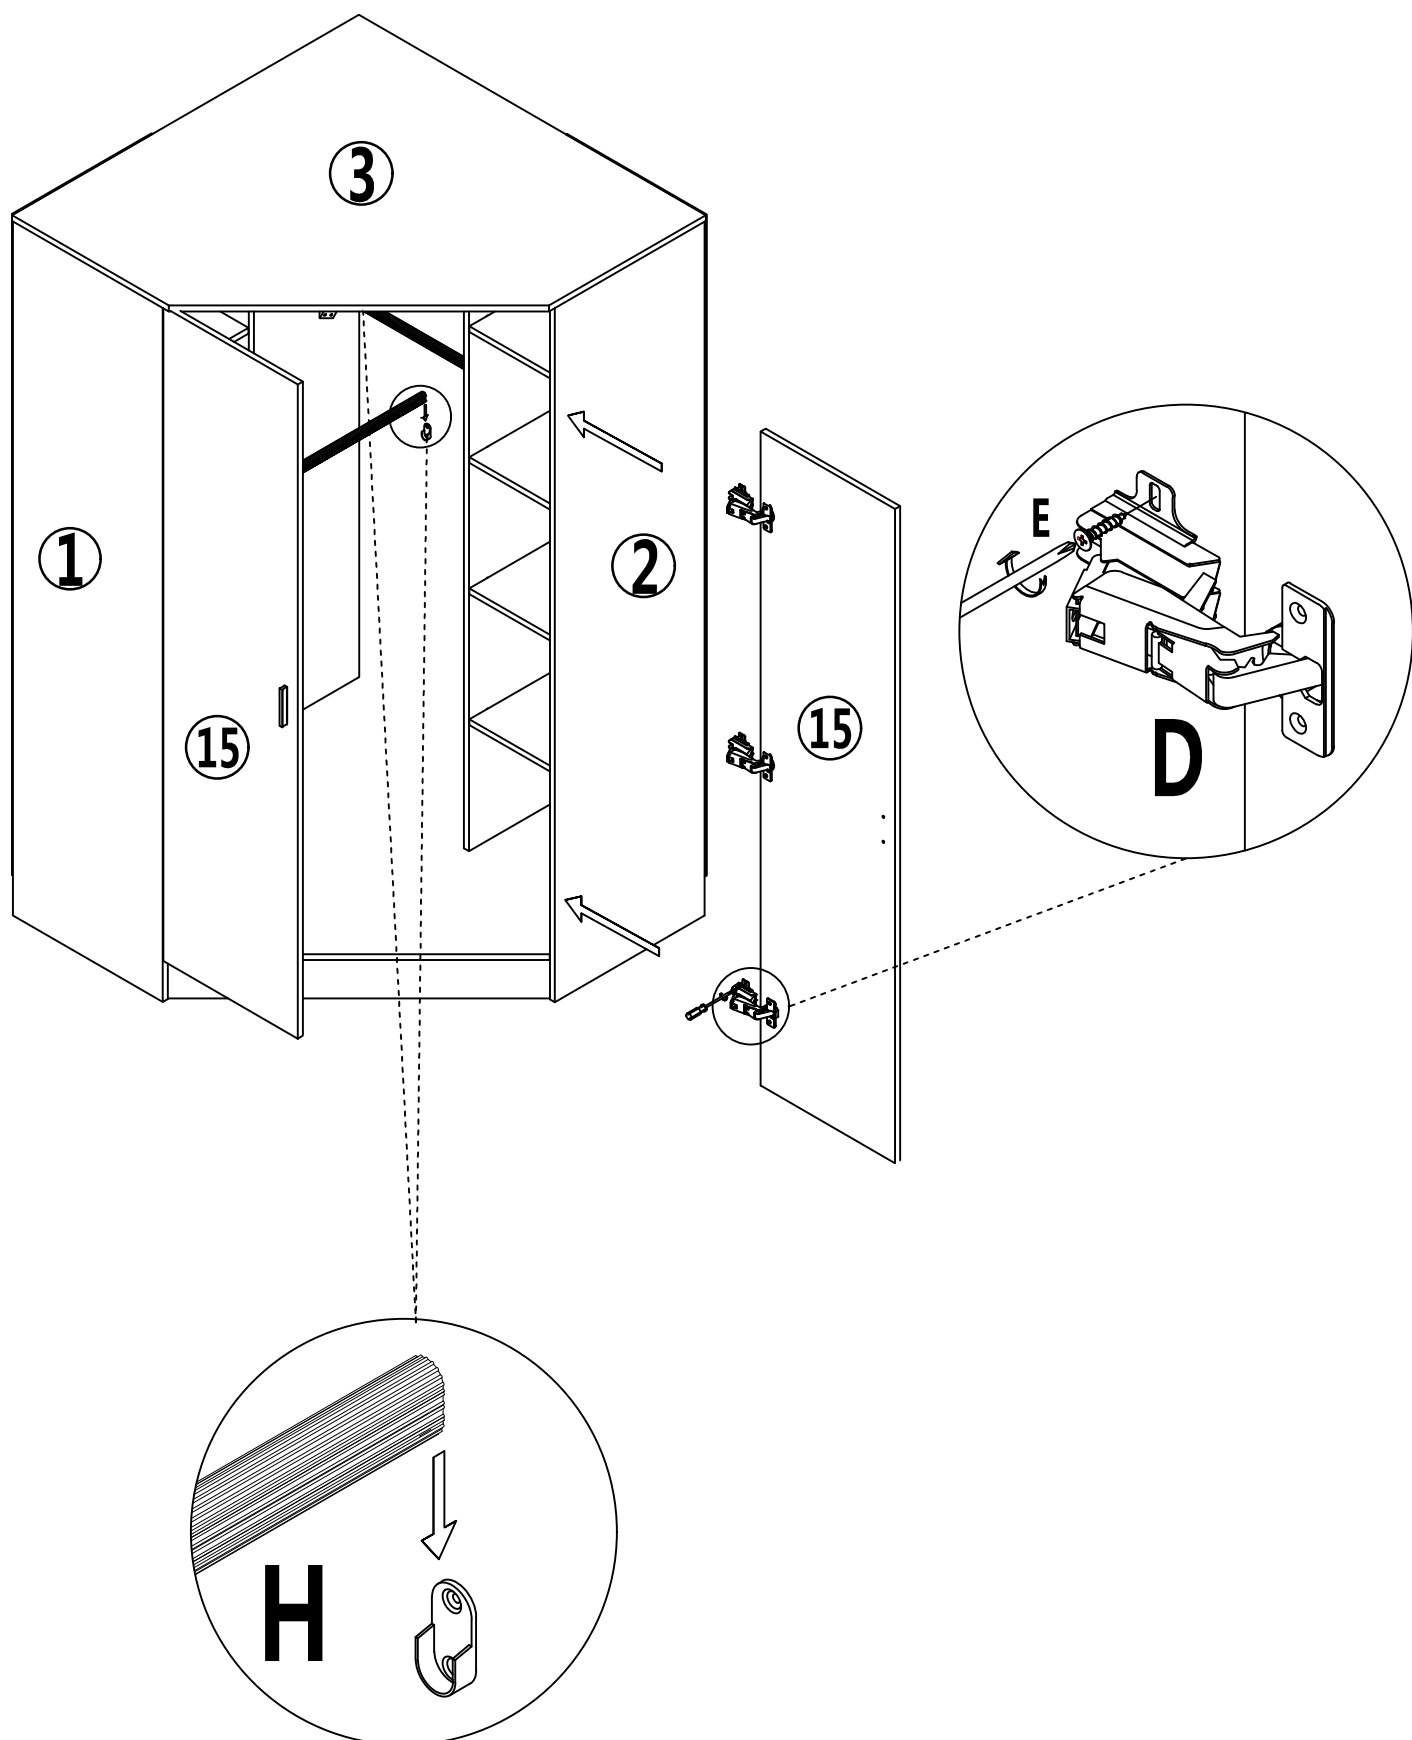






**Customer Attention:**  
To Align Doors & Control Gap In Between Doors.  
Product doors may need adjusting during & after  
assembly or once wardrobe contains clothing.  
This can be done by adjusting appropriate screws.  
See below illustration.

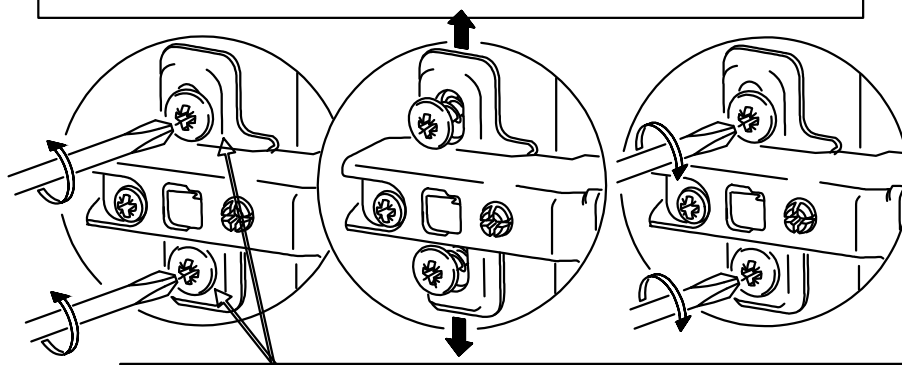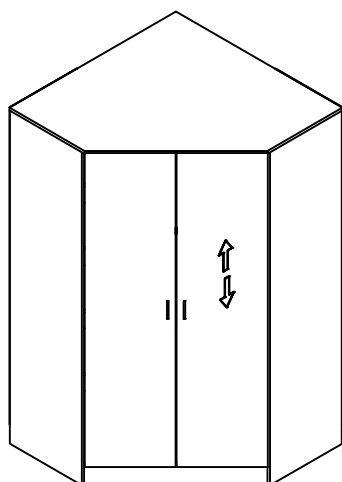


**Vertical Door Adjustment:**  
Loosening both screws on all hinges and lift the door  
to desired height. This allows an even space at the  
top and bottom between door and wardrobe frame.

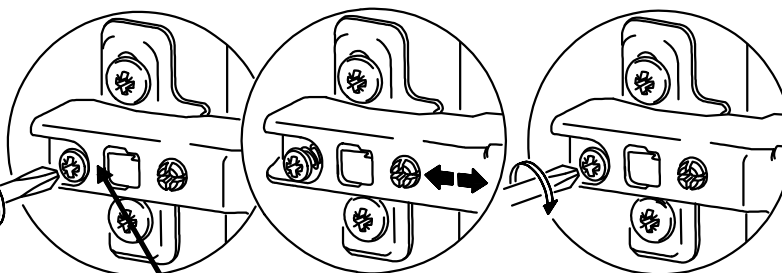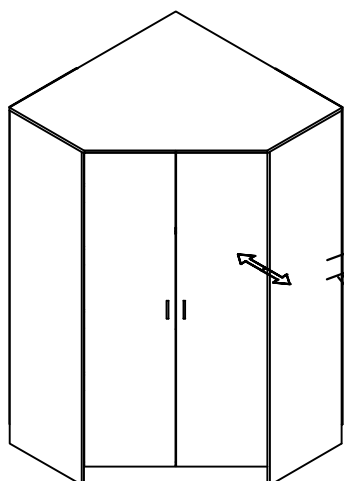

**Lateral Door Adjustment:**  
If door is hinge bound, (rubbing on frame as you  
close or open door) loosening screw shown and  
move the door in appropriate direction. (In or out)

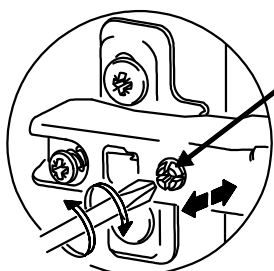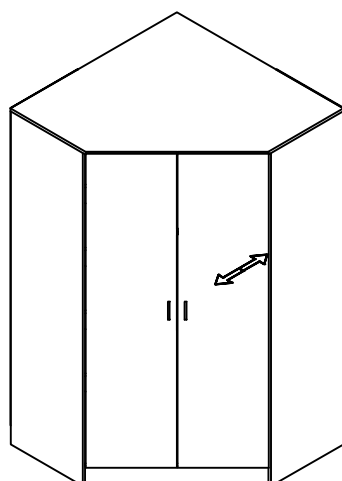

**Horizontal Door Adjustment:**  
Rotate Screw clock wise or anti  
clockwise. This will produce an even gap  
between doors and frame.

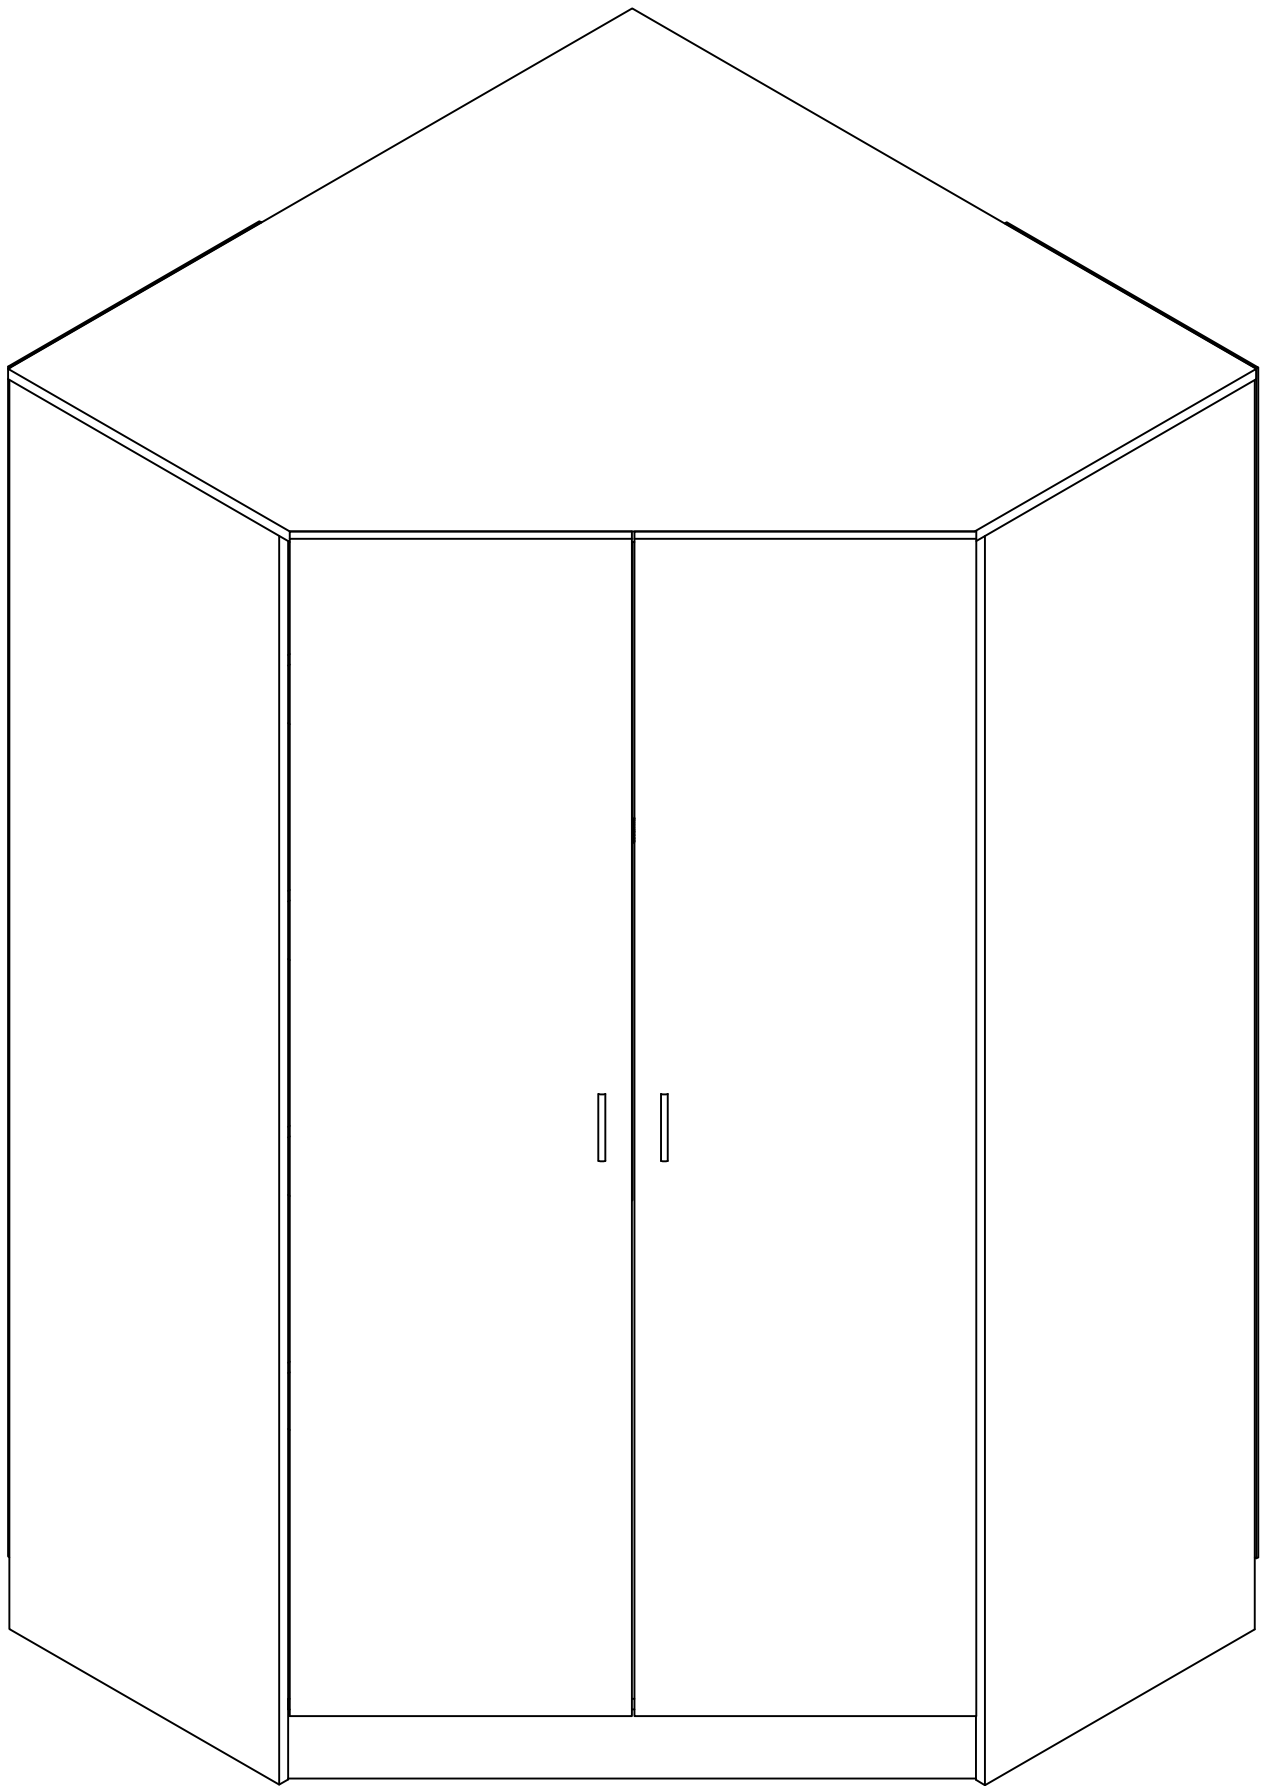


**OK**





# STEP 18

**OPTIONAL:**  
For Health and Safety  
reasons we advise you to use  
Safety Strap supplied.

Bracket/Strap

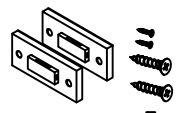

M=2

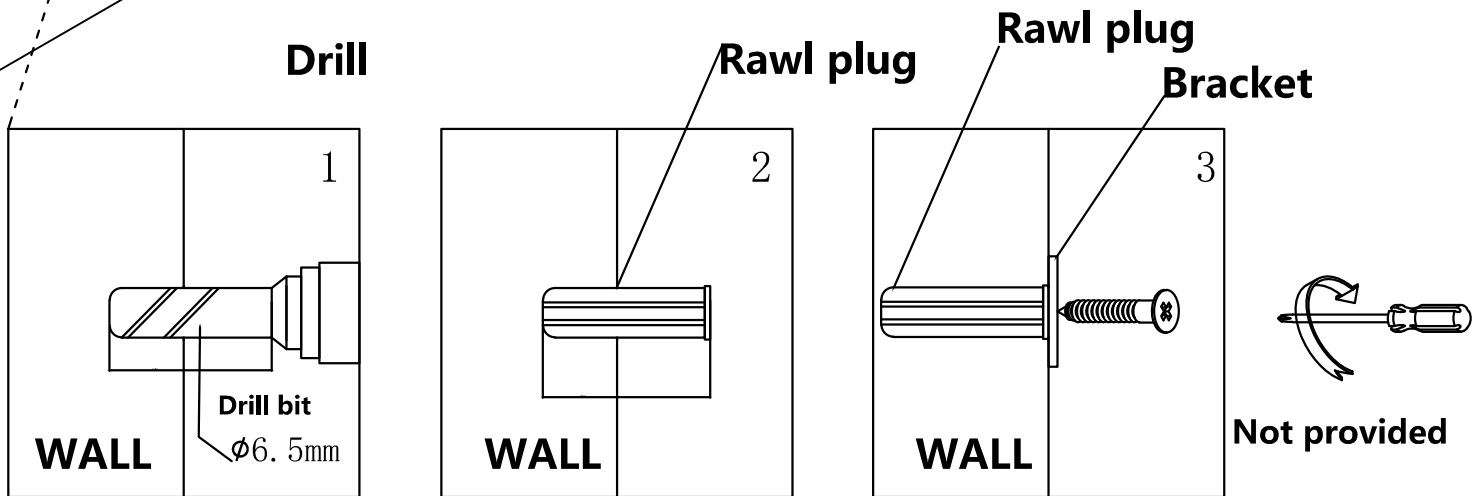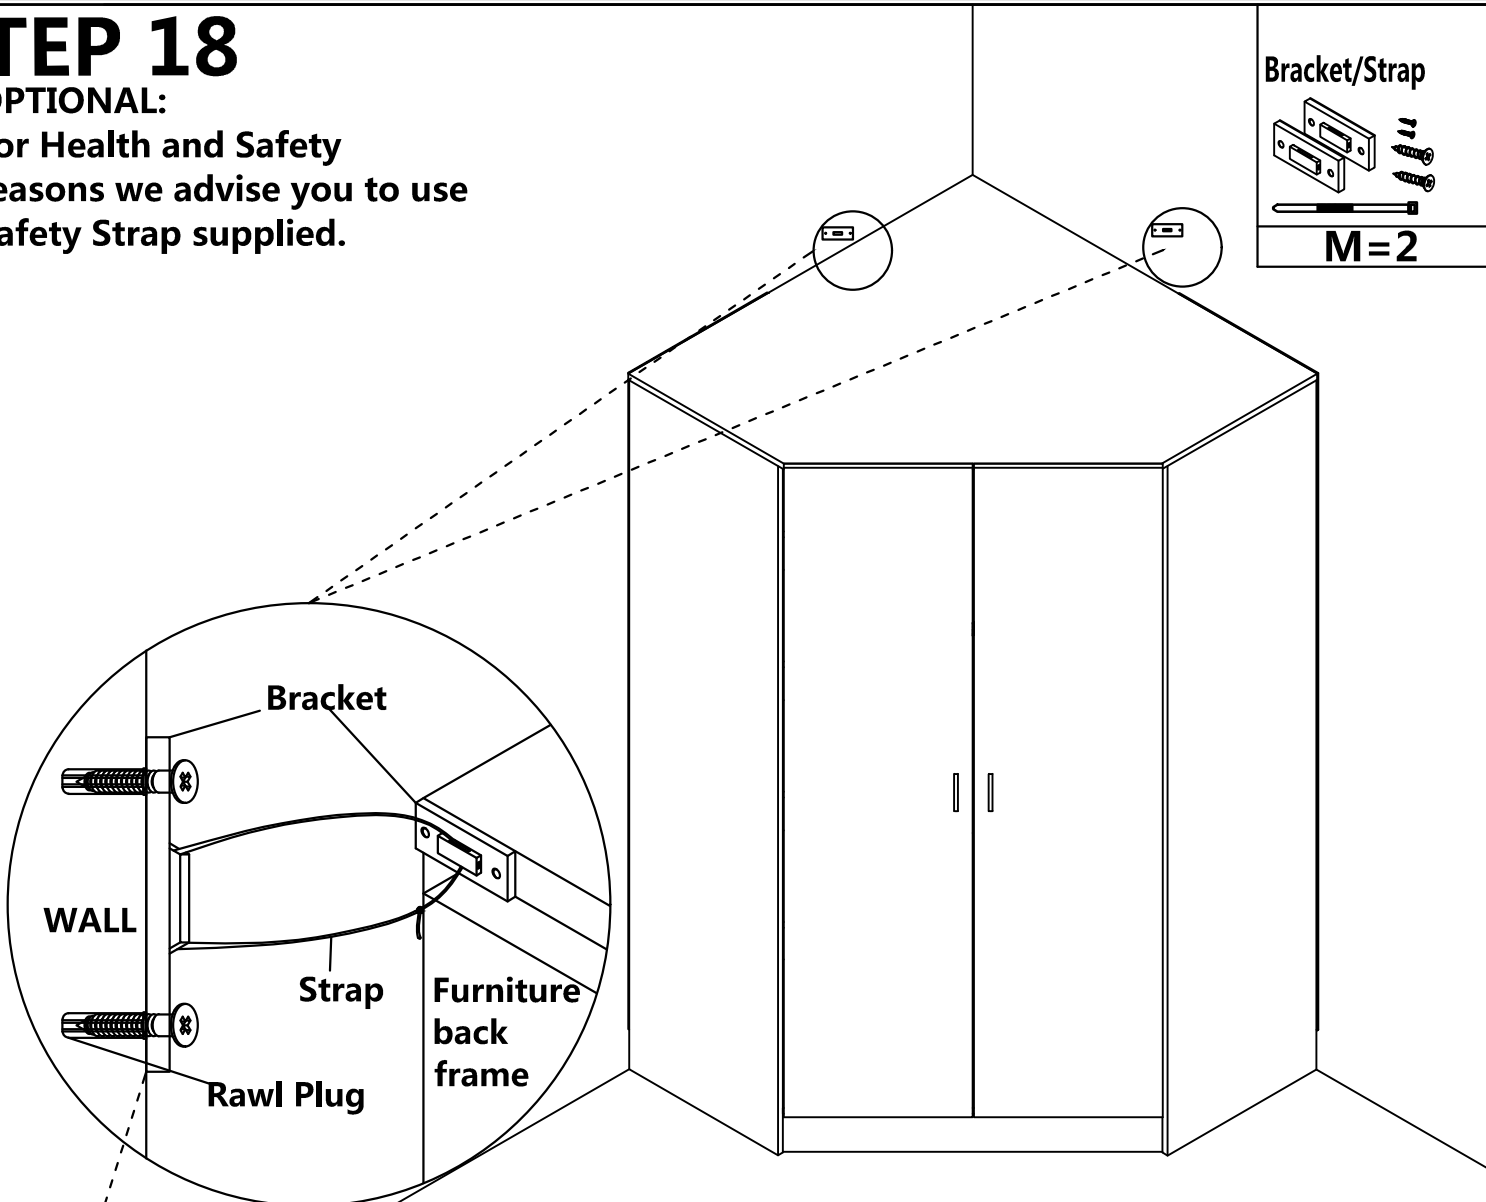


(for installation of bracket onto concrete wall)

A Philip screwdriver is required to install the  
bracket to the wall and furniture back frame.  
For concrete wall-a Drill is required.


Note:Screwdriver,Drill&drill bit are not provided. 17/19

Your **CORNER WARDROBE** is now completely assembled

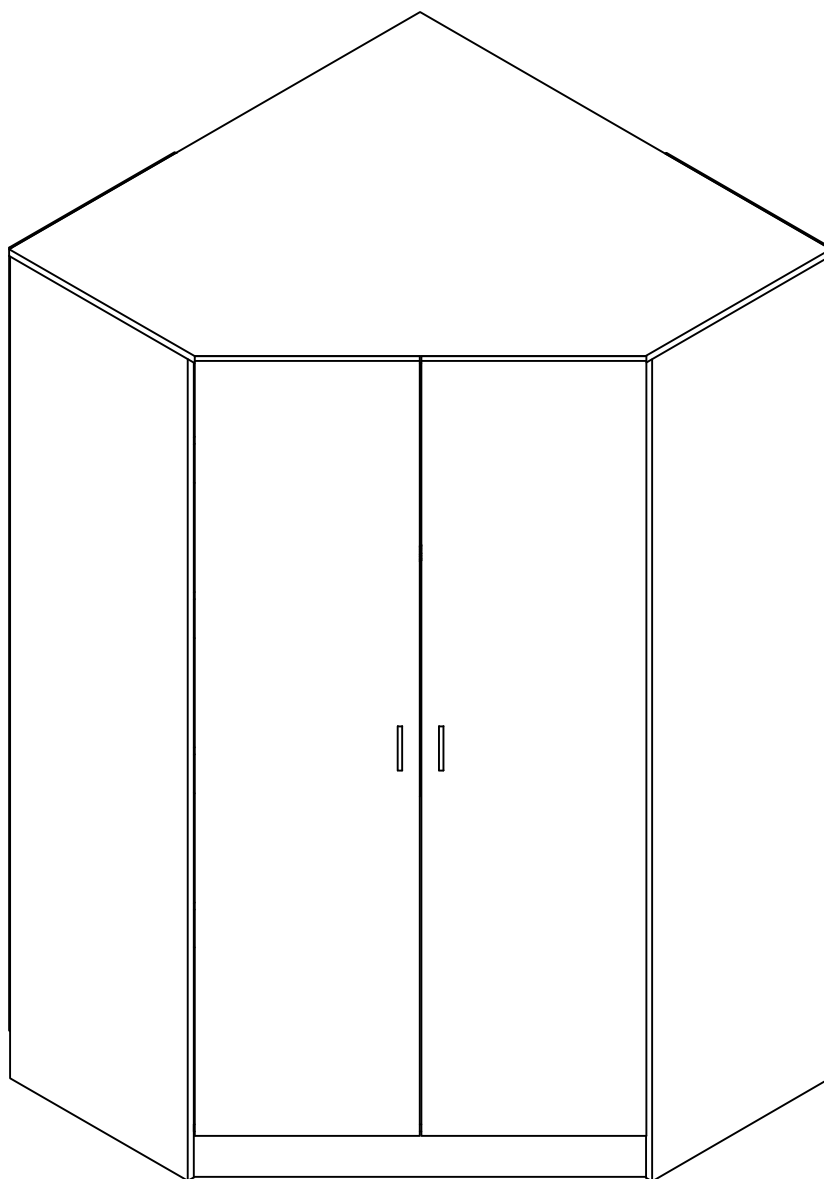

Periodically check to ensure that the components are in their proper position , free from damage Also , make sure the connectors are tight and secure.

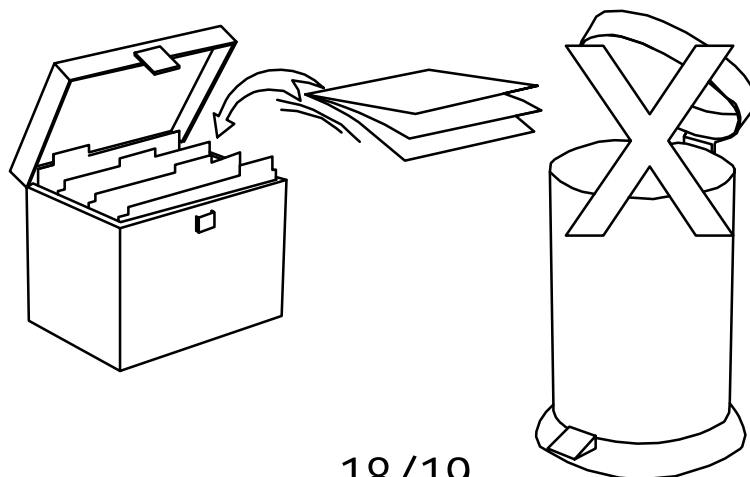


**Keep instructions for future reference**



Optional step - available to match REFLECT range wardrobes only


O		4 PCS
N		1 PC

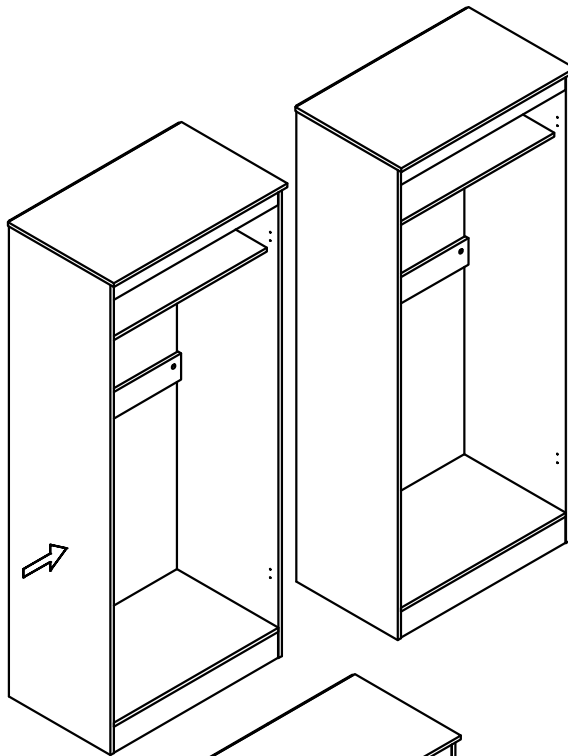

← To Secure multiple pieces of the wardrobes together:


**Step 1:**  
Position the wardrobes together in the location where they will remain

It will be easier to connect the wardrobes with the doors removed

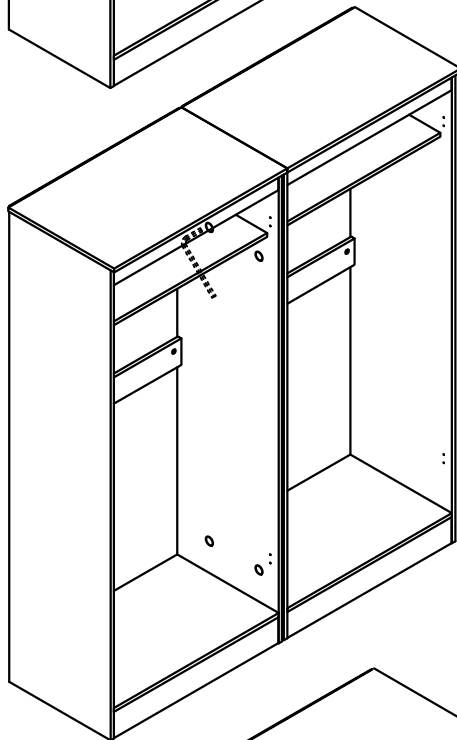

**Step 2:**  
Drill through both side panels as indicated

The holes should be level for the best results.

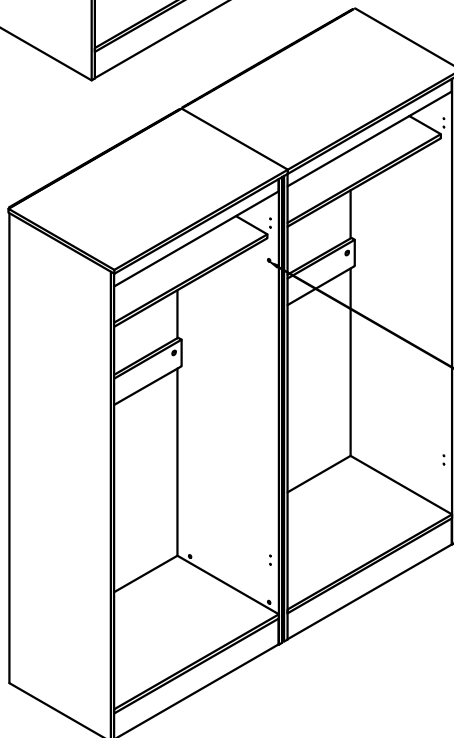

**Step 3:**  
Position the receiving sleeve of the bolt on the right wardrobe.  
Then screw the into the receiver .