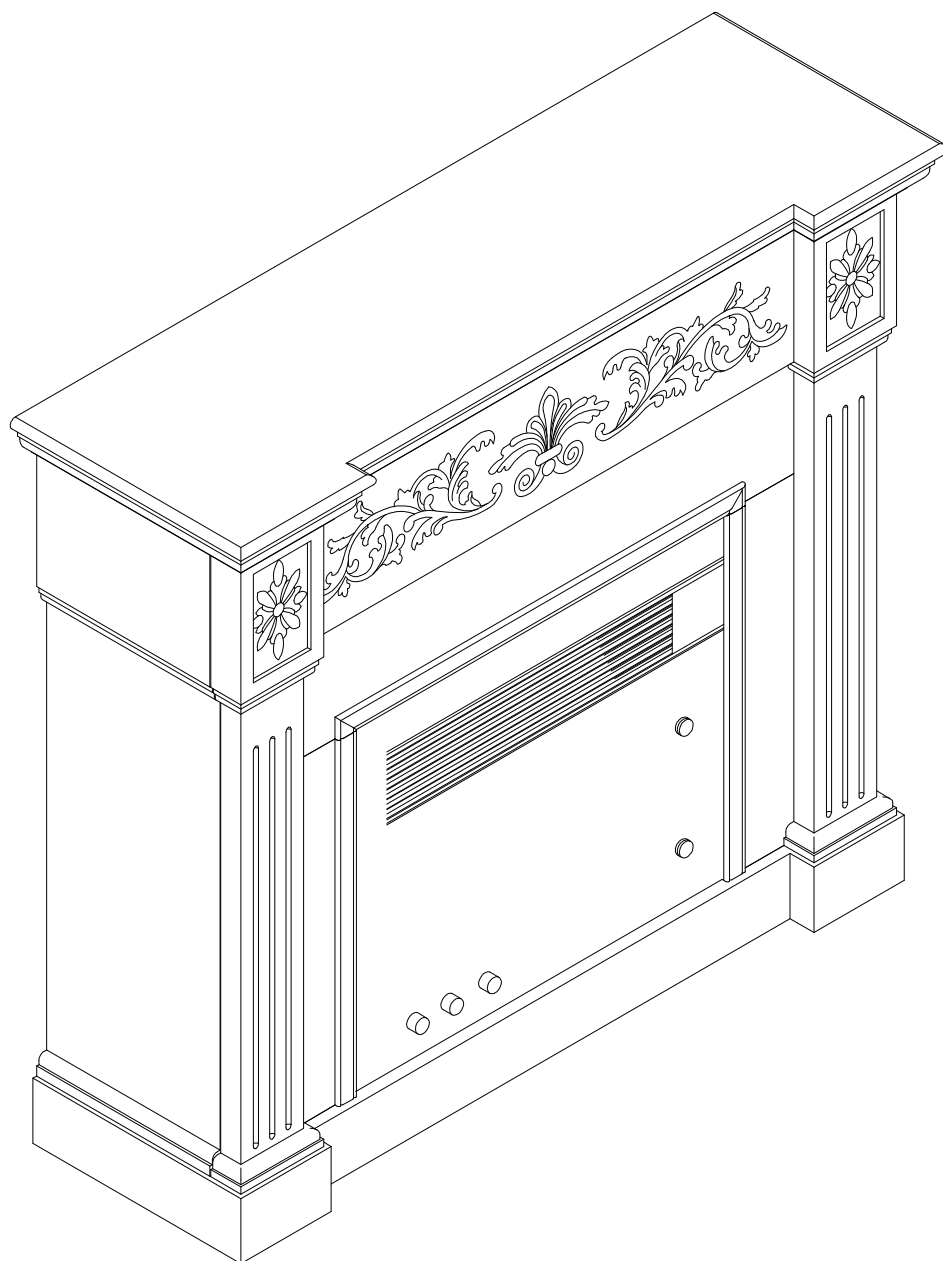


CARVED FIREPLACE

ESPRESSO

IVORY

ASSEMBLY INSTRUCTION

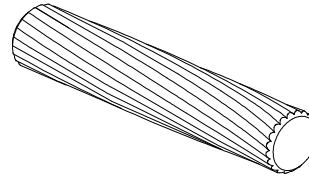


CARVED FIREPLACE Parts List

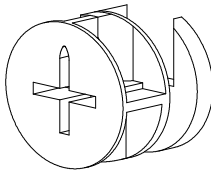
Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.
Before beginning assembly, separate each type of screw. Carefully study the
screw diagrams below. You may receive extra hardware with your unit.

AQuantity
of 12

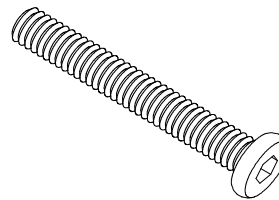
CAM BOLT

BQuantity
Of 20


WOOD DOWEL

CQuantity
of 12


CAM LOCK

DQuantity
of 6

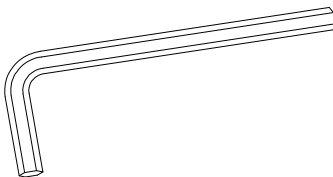
SOCKET HEXAGON BOLT

EQuantity
of 6

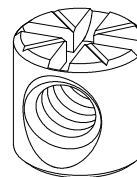
SPRING WASHER

FQuantity
of 6

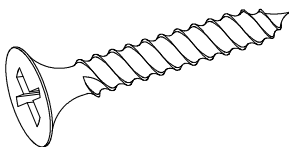
FLAT WASHER

GQuantity
of 1

ALLEN WRENCH

HQuantity
of 6

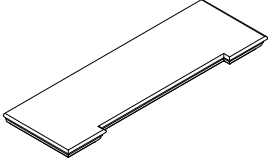




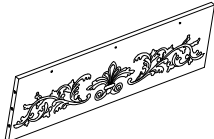
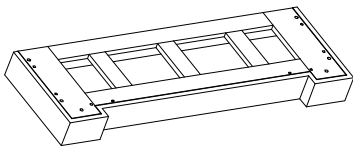
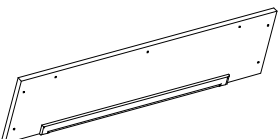



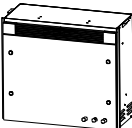
CROSS SOCKET NUT

IQuantity
of 26

WOOD SCREW (2 EXTRAS INCLUDED)

CARVED FIREPLACE Parts List


Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.
Before beginning assembly, separate each type of screw. Carefully study the
screw diagrams below. You may receive extra
hardware with your unit.

(1)  TOP PANEL	(2)  LEFT SIDE PANEL
(3)  RIGHT SIDE PANEL	(4)  LEFT FRONT PANEL
(5)  RIGHT FRONT PANEL	(6)  UPPER FRONT PANEL
(7)  BASE	(8)  MIDDLE FRONT PANEL
(9)  MIDDLE LEFT FRONT PANEL	(10)  MIDDLE RIGHT FRONT PANEL
(11)  INSERT FIXED BAR	(12)  INSERT (sold in a separate carton)

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth.
Periodically apply furniture wax to renew
the finish . Avoid rubbing or scratching the
surface with rough or abrasive objects.
For replacement parts or questions, please

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



CARVED FIREPLACE Assembly Instructions

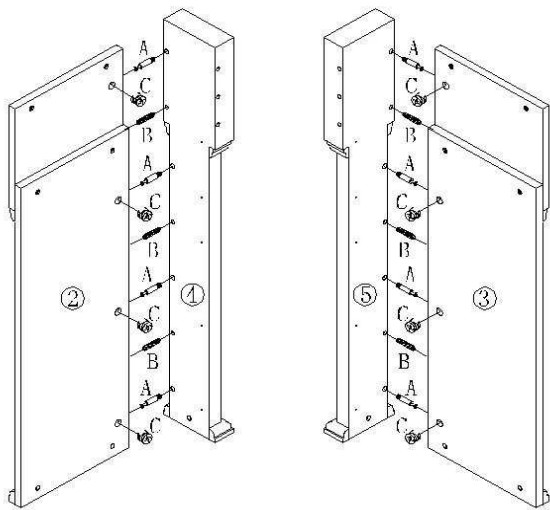


Figure 1

INSERT (A) CAM BOLT & (B) WOOD DOWEL TO THE RELATED HOLES, THEN USE (C) CAM LOCK TO CONNECT (2) LEFT SIDE PANEL & (4) LEFT FRONT PANEL TOGETHER, USE (C) CAM LOCK TO CONNECT (3) RIGHT SIDE PANEL & (5) RIGHT FRONT PANEL TOGETHER

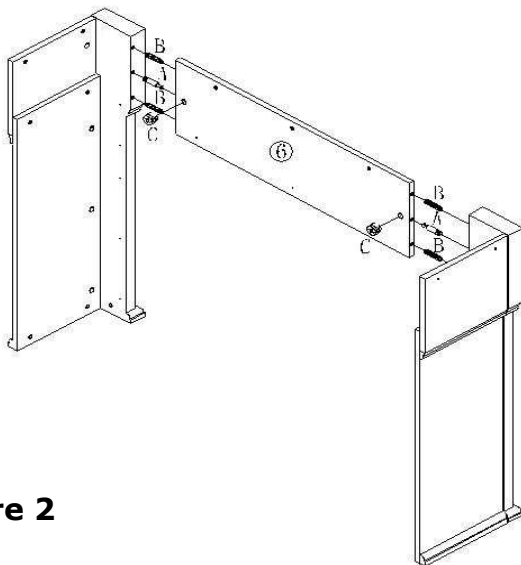


Figure 2

AFTER ASSEMBLED FIGURE 1, INSERT (A) CAM BOLT & (B) WOOD DOWEL TO THE RELATED HOLES, THEN USE (C) CAM LOCK TO CONNECT (6) UPPER FRONT PANEL .

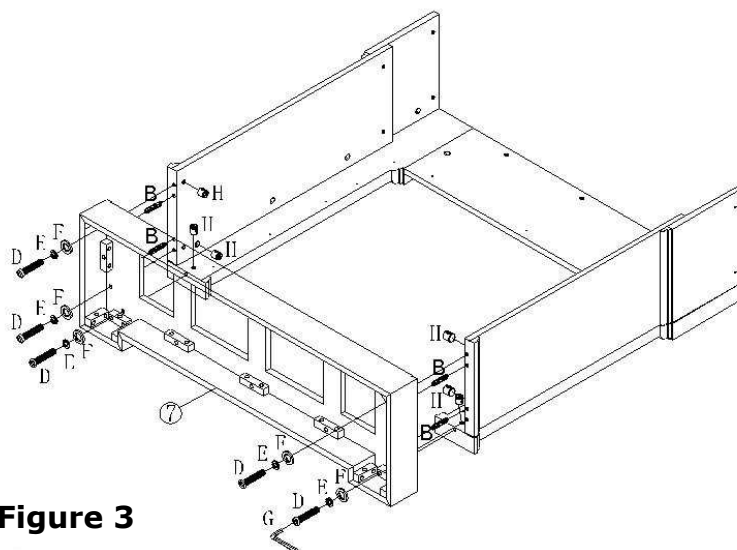


Figure 3

AFTER ASSEMBLED FIGURE 2, INSERT (H) CROSS SOCKET NUT & (B) WOOD DOWEL TO THE RELATED HOLES, THEN USE (D) SOCKET HEXAGON BOLT & (E) SPRING WASHER & (F) FLAT WASHER & (G) SOCKET HEAD WRENCH TO CONNECT (7) BASE .

CARVED FIREPLACE Assembly Instructions

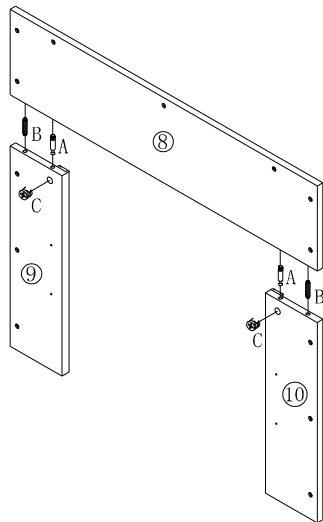


Figure 4

INSERT (A) CAM BOLT & (B) WOOD DOWEL TO THE RELATED HOLES, THEN USE (C) CAM LOCK TO CONNECT (8) MIDDLE FRONT PANEL & (9) MIDDLE LEFT FRONT PANEL & (10) MIDDLE RIGHT FRONT PANEL TOGETHER.

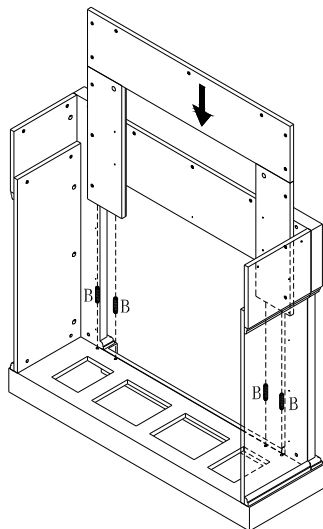


Figure 5

AFTER ASSEMBLED FIGURE 4, INSERT (B) WOOD DOWEL TO THE RELATED HOLES, THEN INSERT THE ASSEMBLED FIGURE 4 INTO THE ASSEMBLED FIGURE 3.

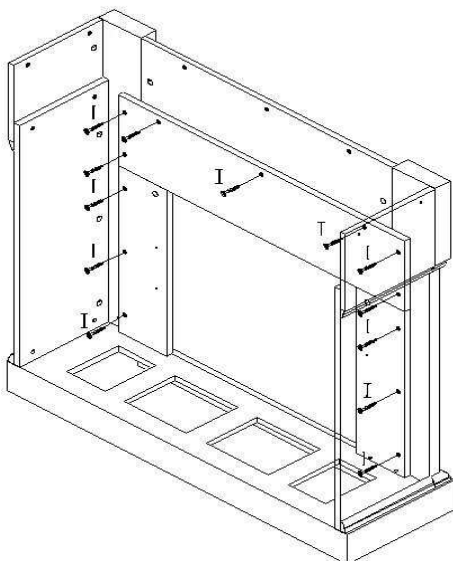


Figure 6

AFTER FINISHED FIGURE 5, INSERT (I) WOOD SCREW INTO THE RELATED HOLES TO LOCK THE PANEL TIGHTLY.

CARVED FIREPLACE Assembly Instructions

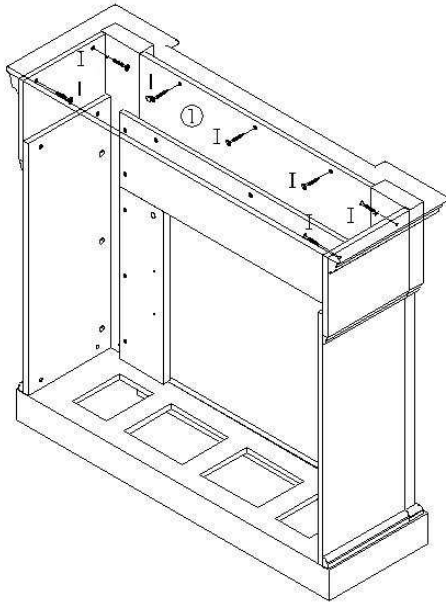


Figure 7

AFTER FINISHED FIGURE 6, THEN INSERT (I) WOOD SCREW INTO THE RELATED HOLES TO CONNECT WITH TOP PANEL, USE SCREWDRIVER TO LOCK IT TIGHTLY.

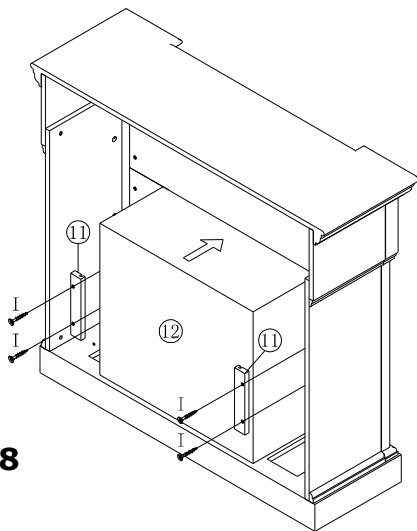


Figure 8

PUSH (12) INSERT TO THE RELATED PLACE OF MAIN BODY , THEN INSERT (I) WOOD SCREW THROUGH (11) INSERT FIXED BAR TO LOCK TIGHTLY .

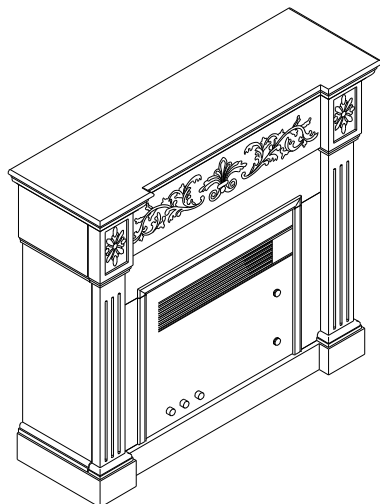


Figure 9

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
<hr/>			
<hr/>			
<hr/>			