

Installation & Assembly

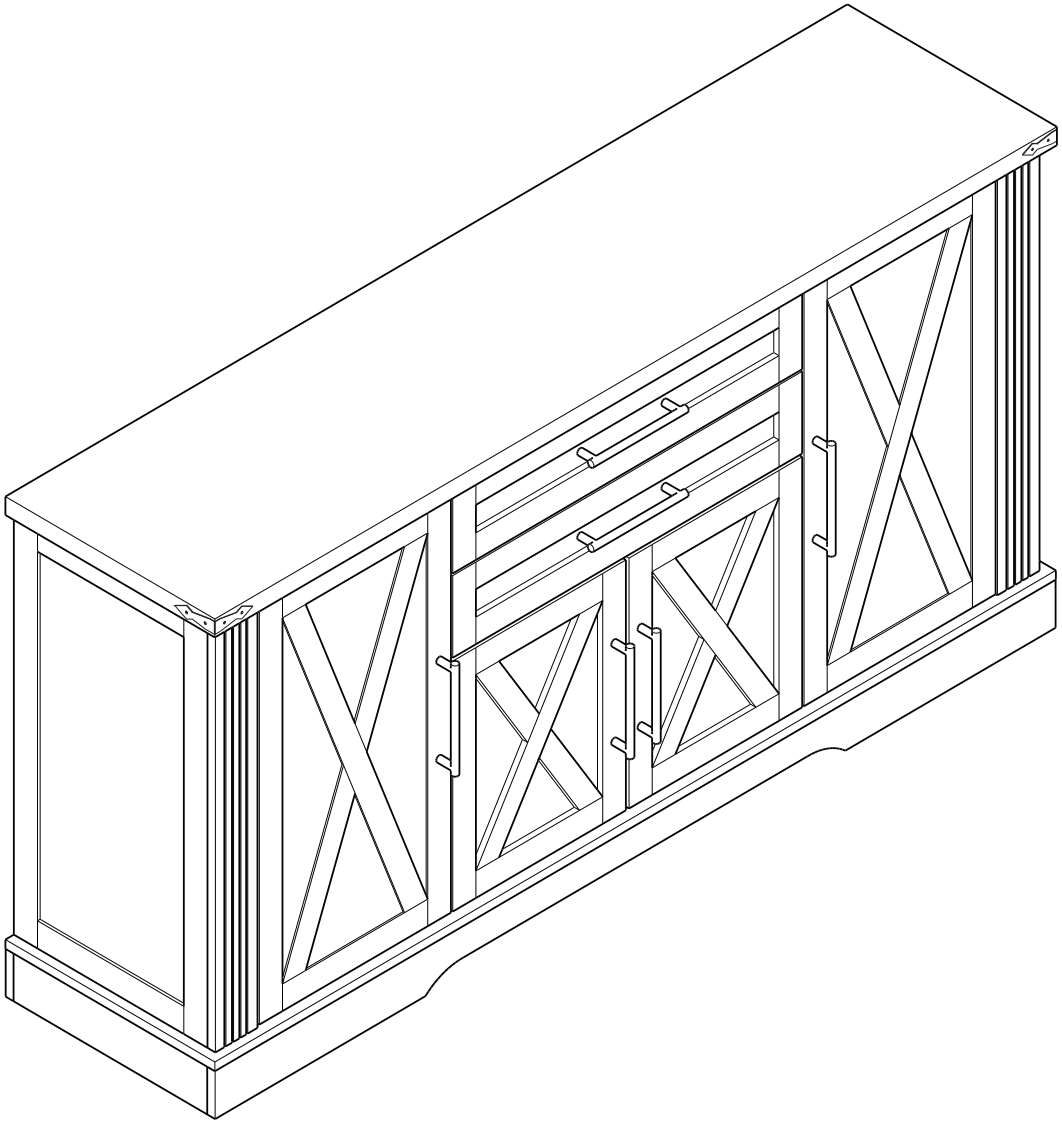

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

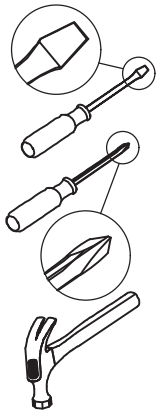

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.



- Never push, pull, or drag your furniture.


Board Identification

Not actual size

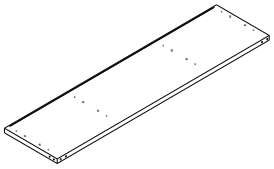


①

Qty:1

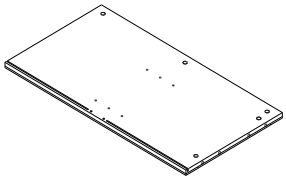


②

Qty:1

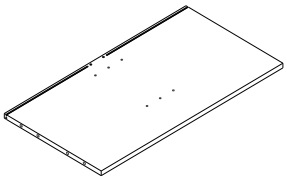


③

Qty:1

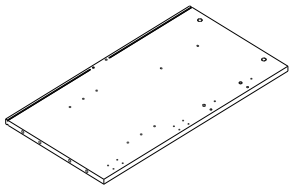


④

Qty:1

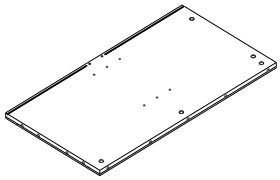


⑤

Qty:1

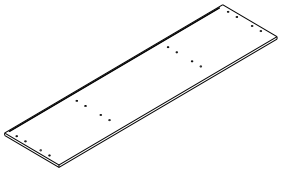


⑥

Qty:1

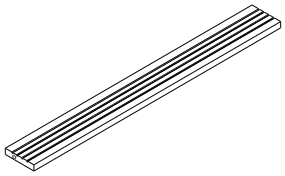


⑦

Qty:1

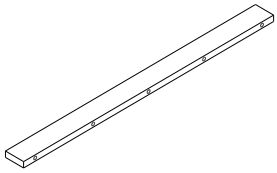


⑧

Qty:1

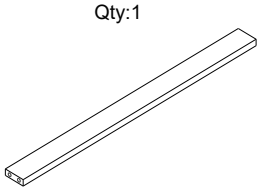


⑨

Qty:1

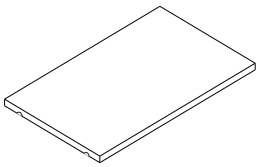


⑩

Qty:2

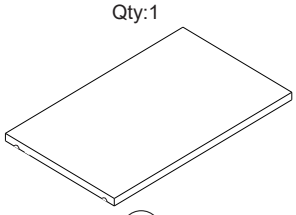


⑪

Qty:1

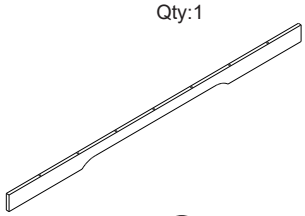


⑫

Qty:1

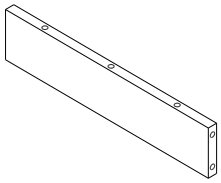


⑬

Qty:2

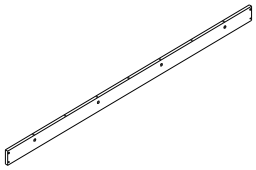


⑭

Qty:1

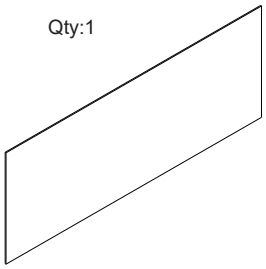


⑮

Qty:1

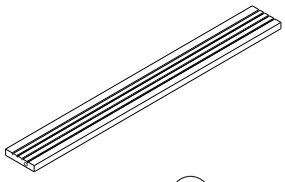


⑯

Qty:1

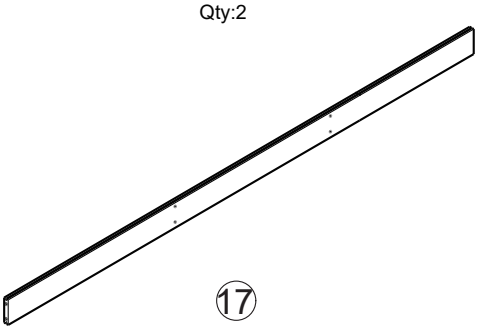

⑰

Qty:1



⑱

Qty:1



⑲

Qty:2




⑳

Qty:2


Board Identification

Not actual size

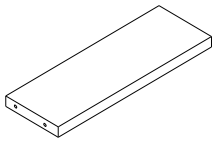


21

Qty:6

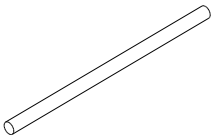


22

Qty:6




23

Qty:1




24

Qty:1

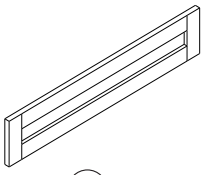


25

Qty:2

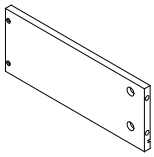


26

Qty:2

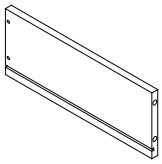


27

Qty:2

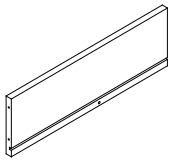


28

Qty:2

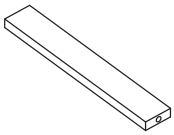


29

Qty:2

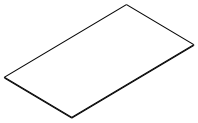


30

Qty:2

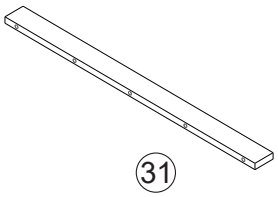


31

Qty:1

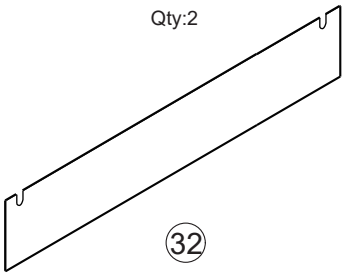

32


Qty:1



33

Qty:1

Board Identification

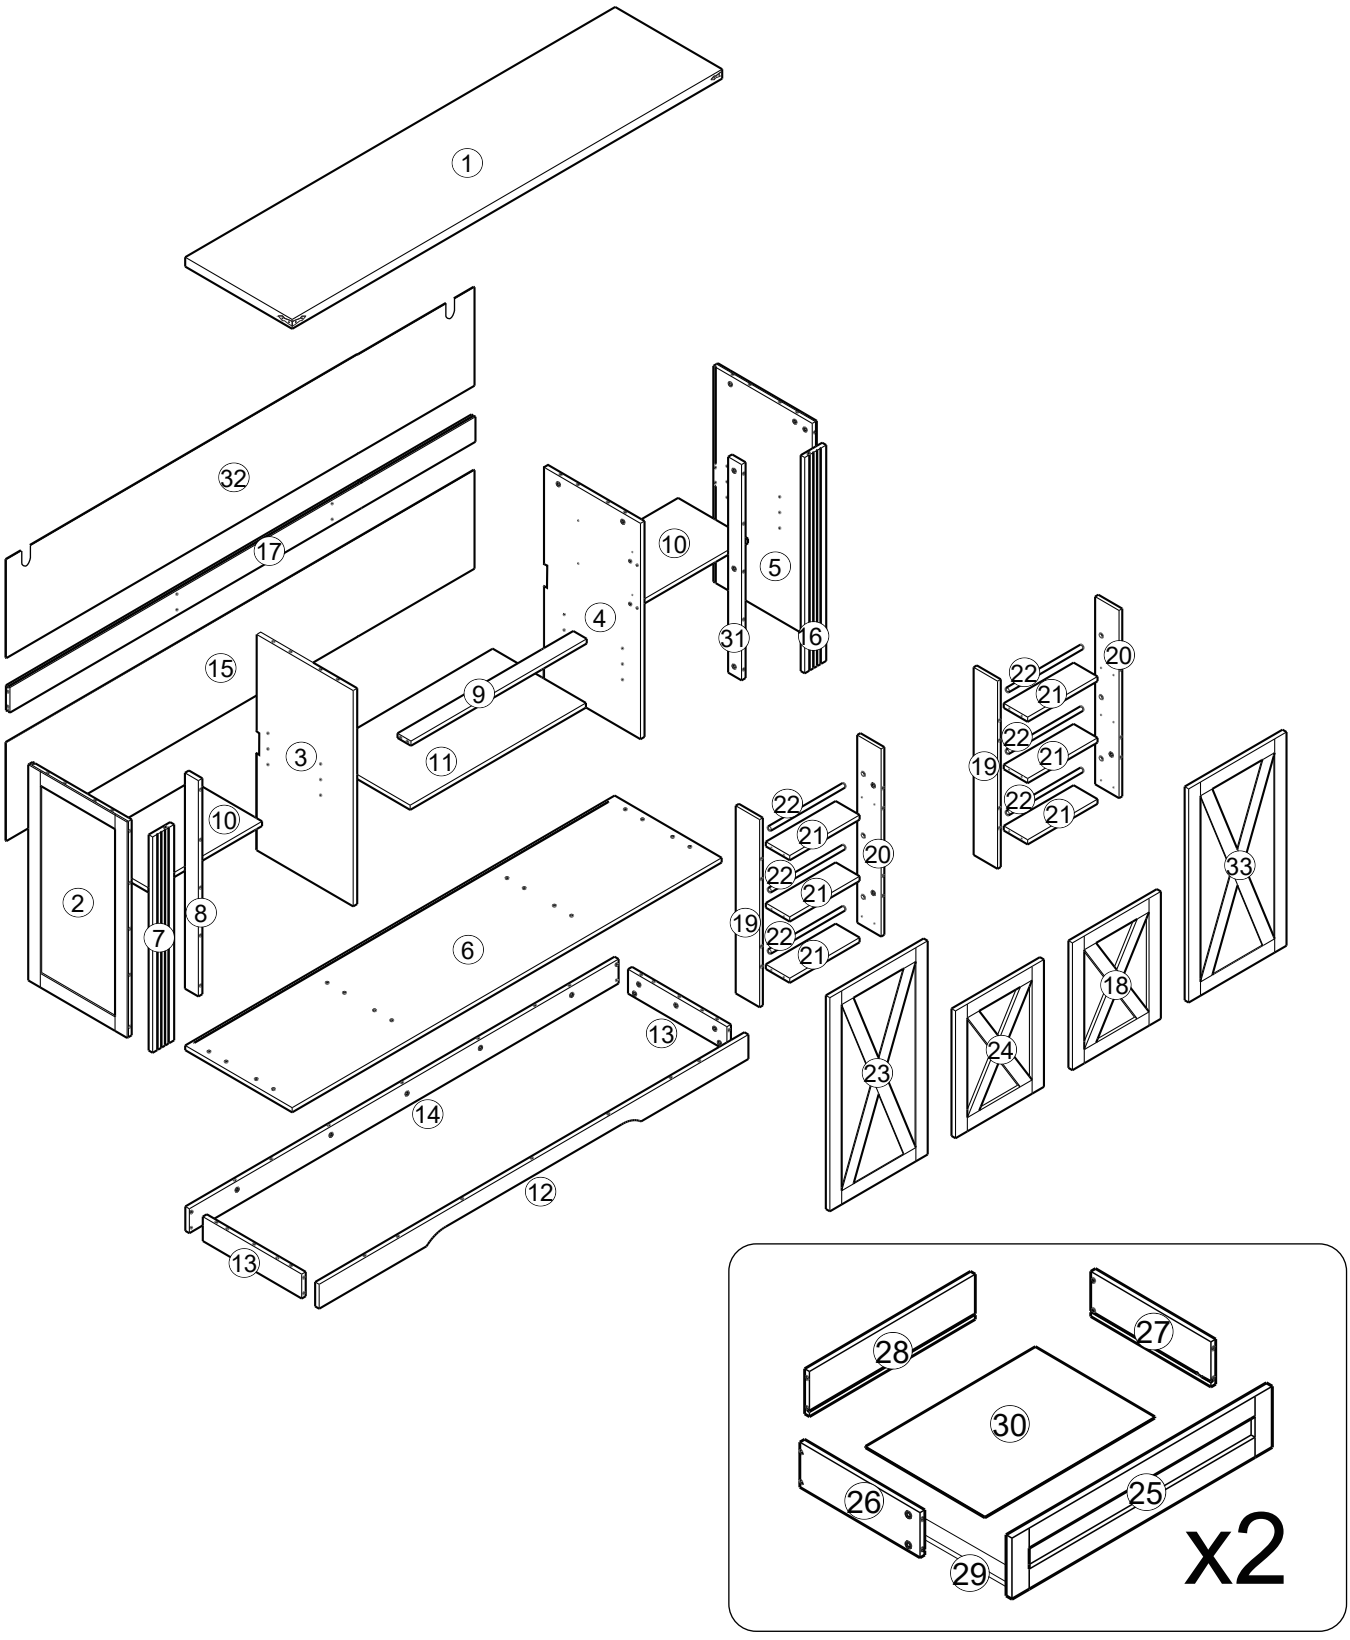


Part List



A	x80



B	x80




Ø6x30mm

C	x54



Ø3.5x10mm

D	x24



Ø4x35mm

E	x24



Ø3.5x12mm

F	x48




G	x4




Ø4x22mm

H	x8



I	x6



J	x12




Ø3x16mm

K	x8



L	x2




M	x4



Ø4x18mm

N	x4



O	x4




CL	x4

DL	x4


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

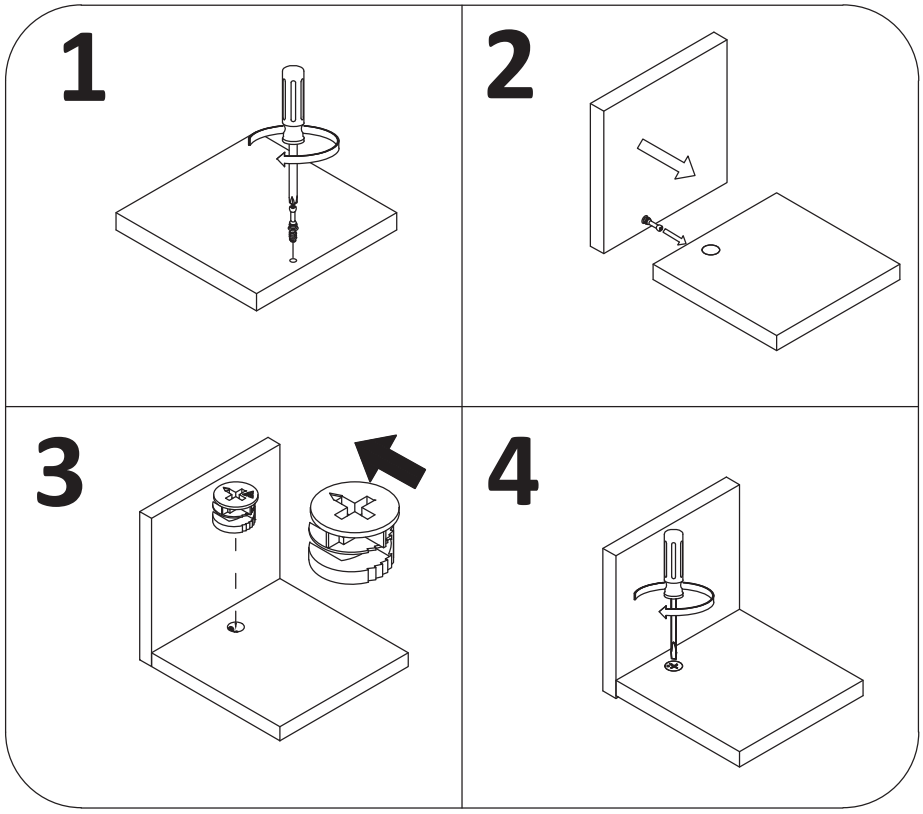



STEP 1









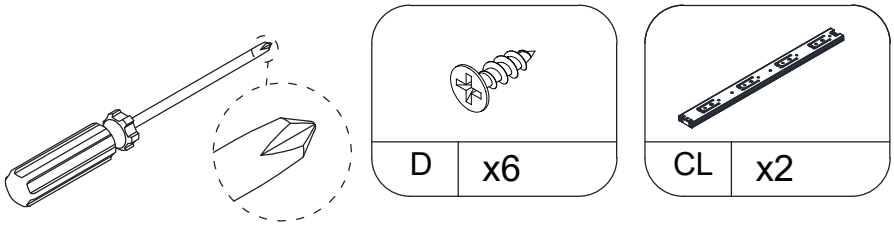


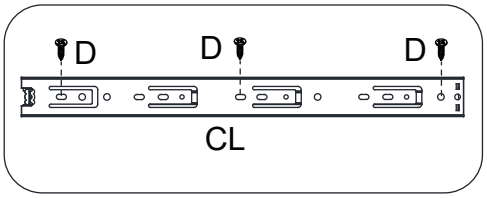


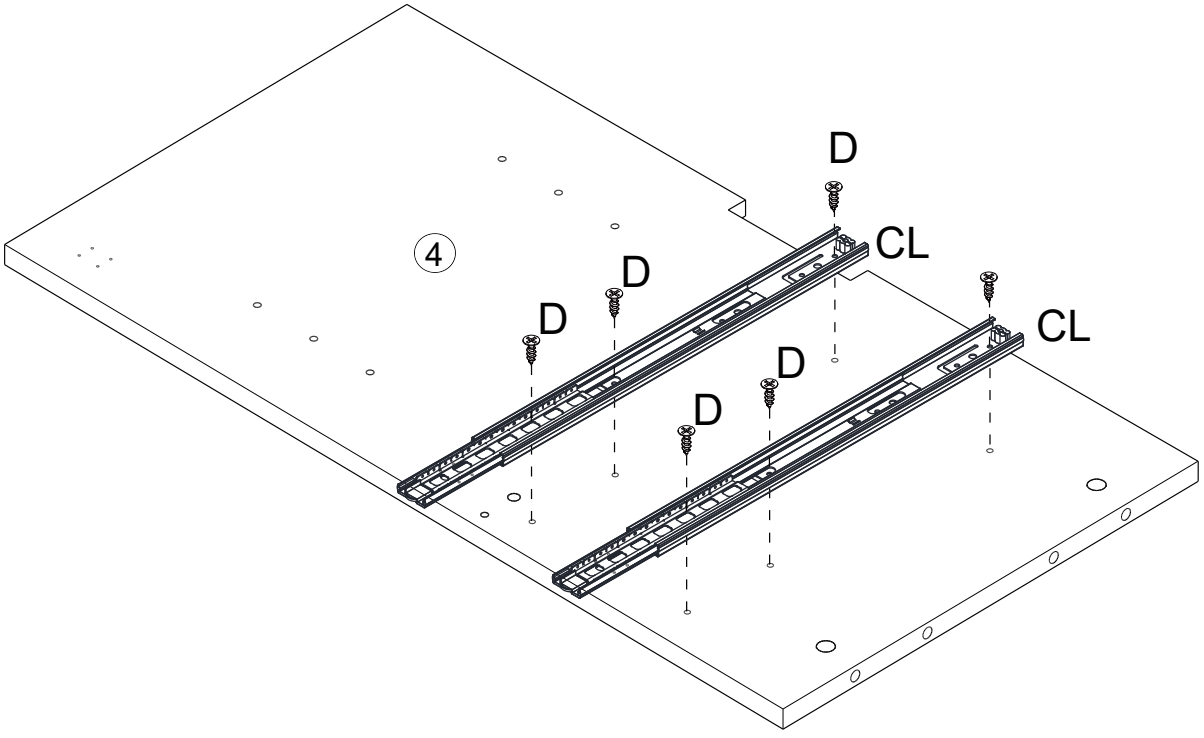


STEP 2

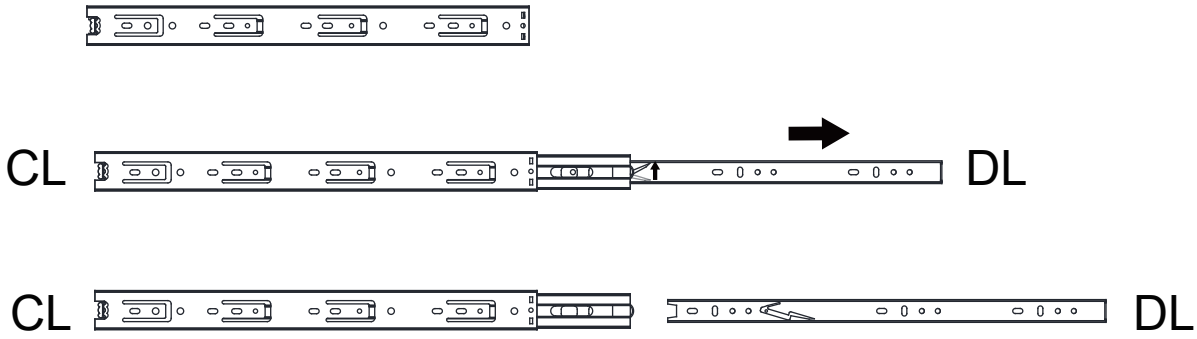


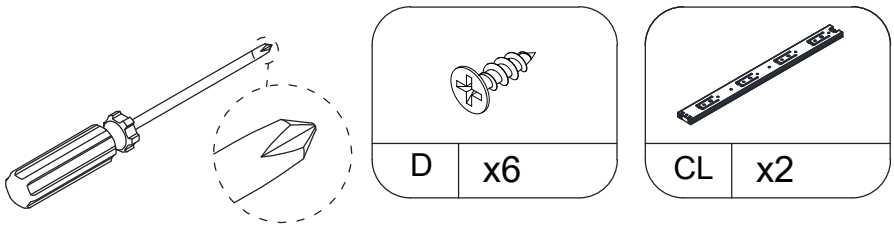


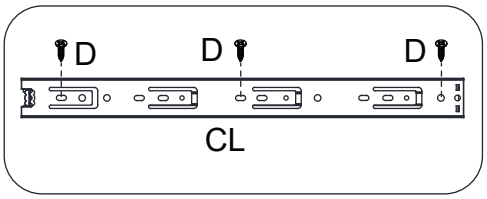


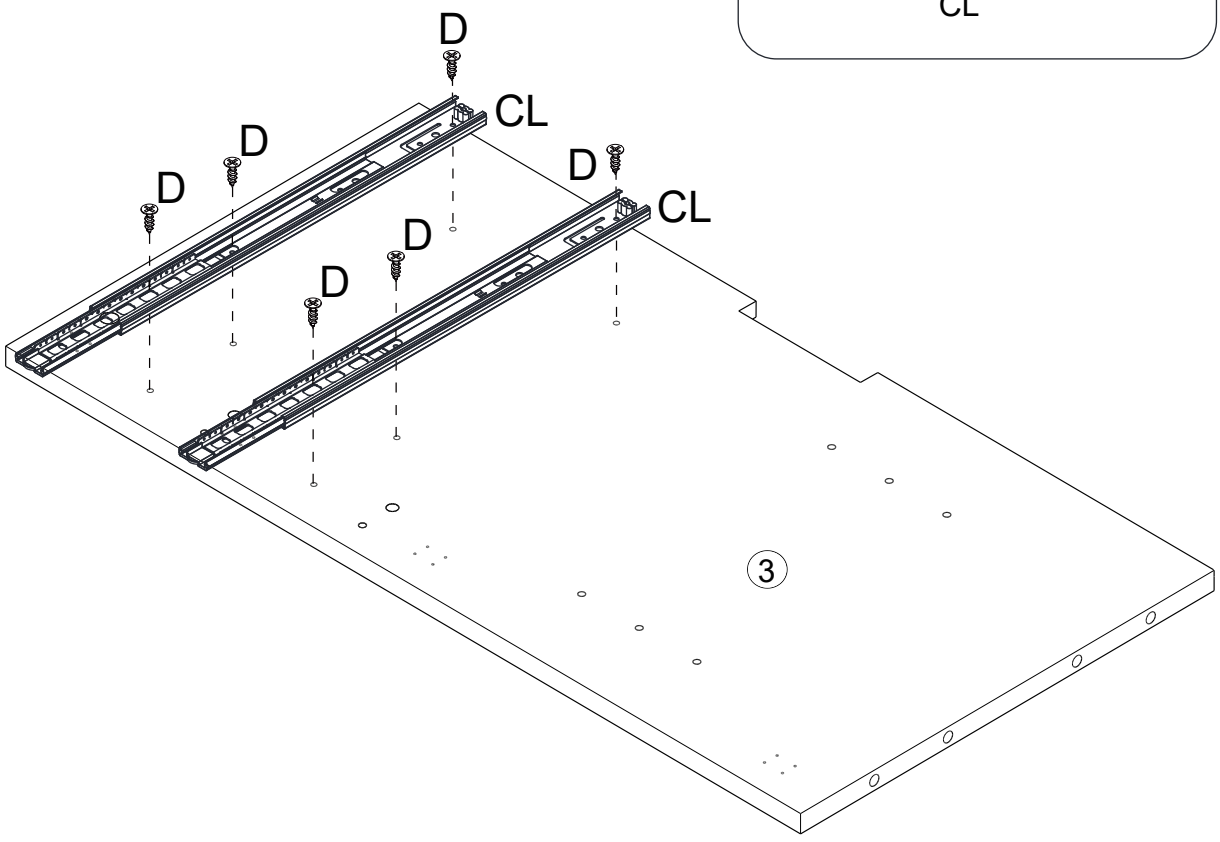


STEP 3

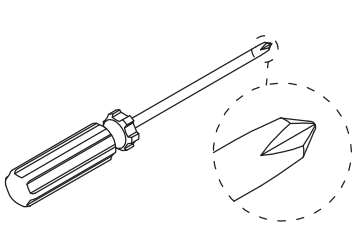


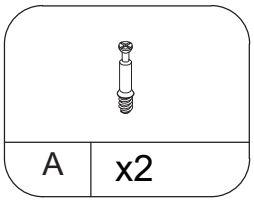


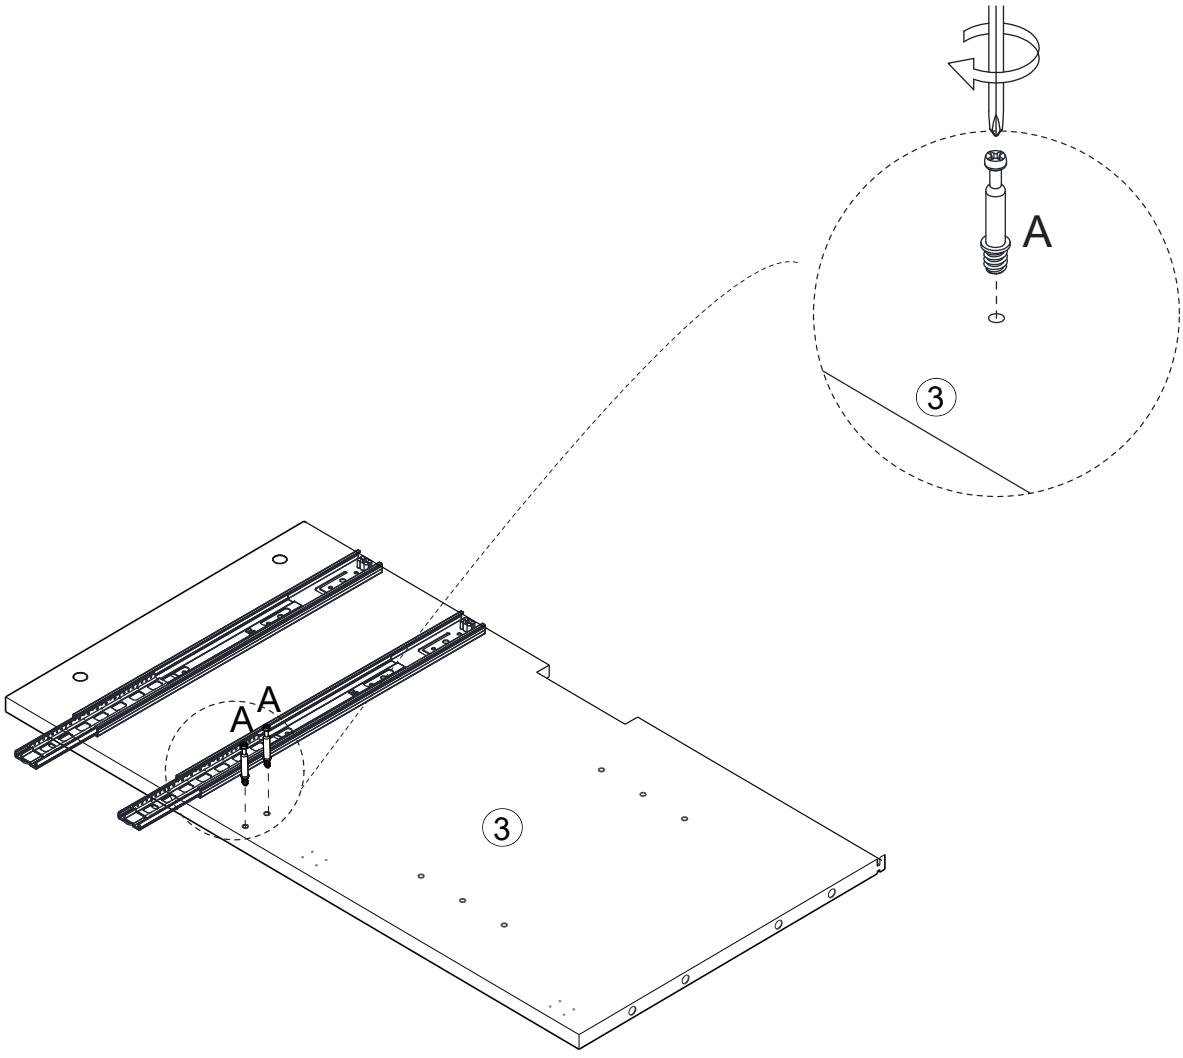


STEP 4

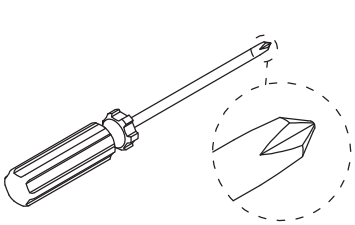


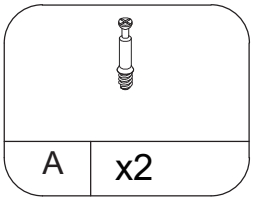

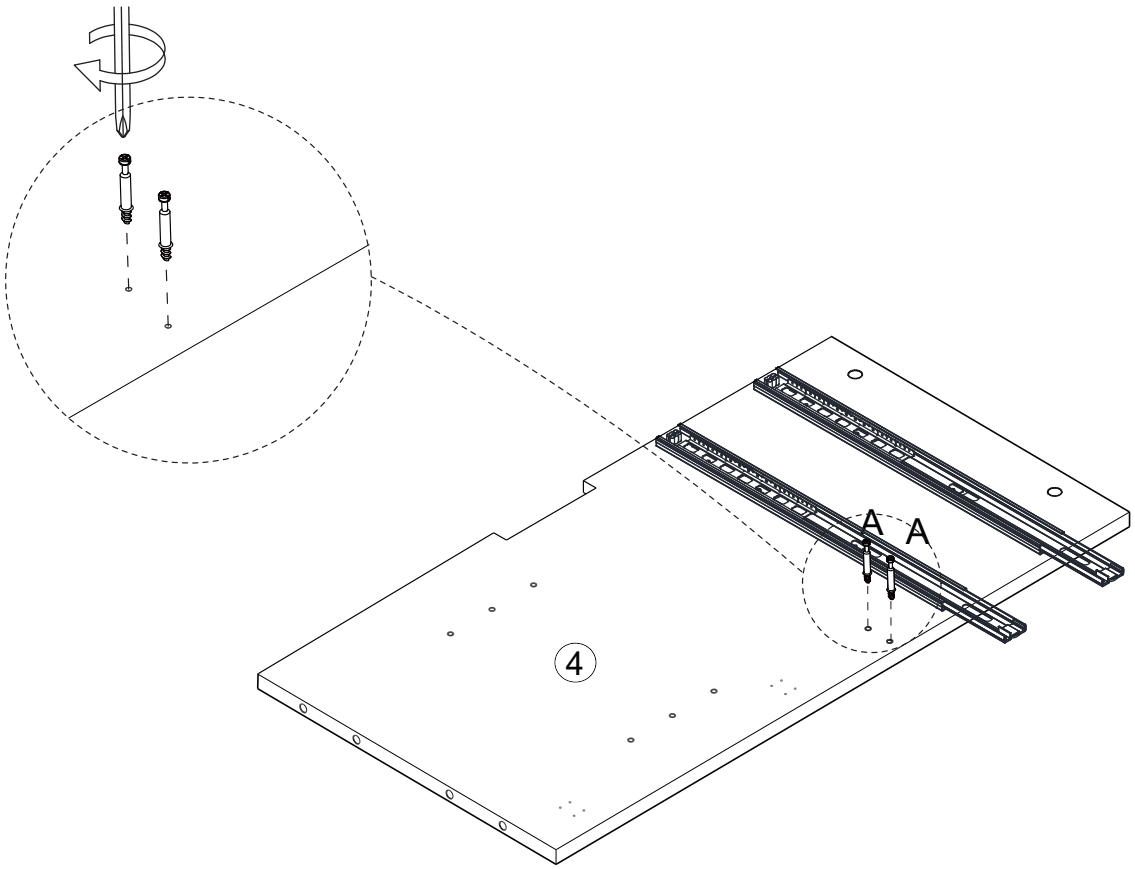



STEP 5

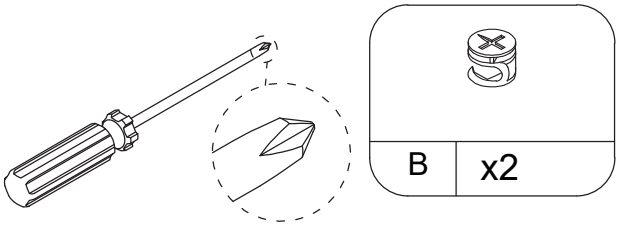

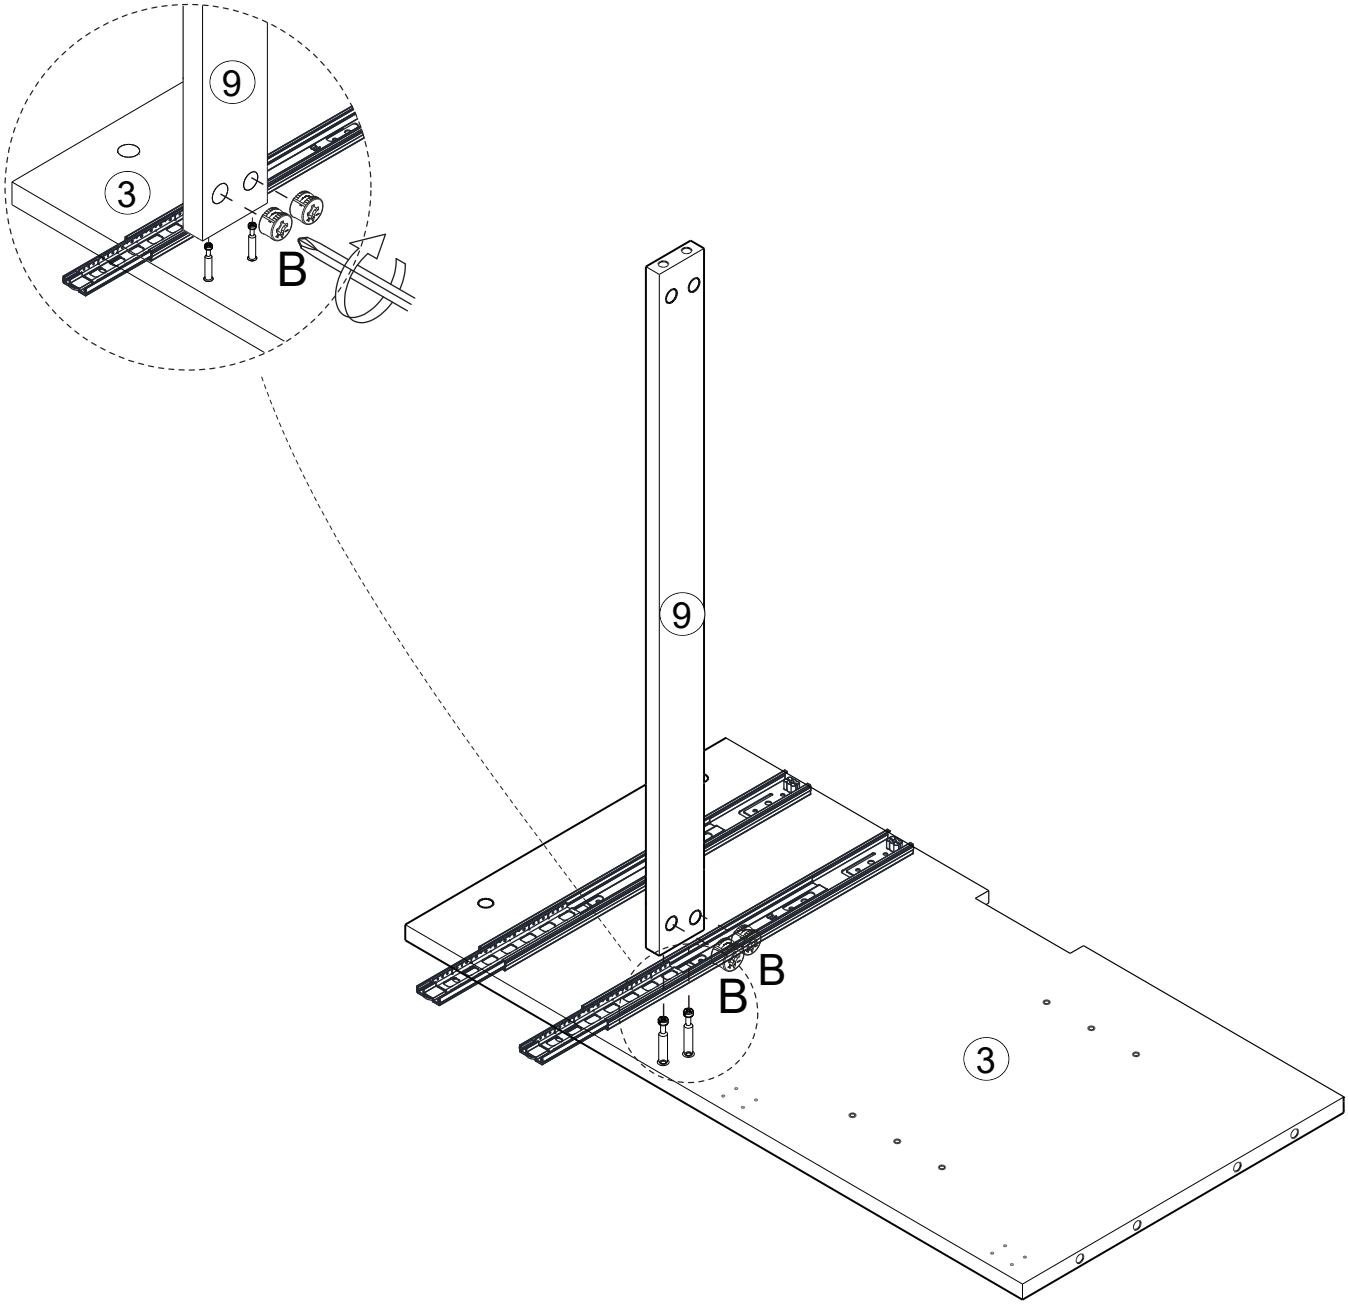



STEP 6

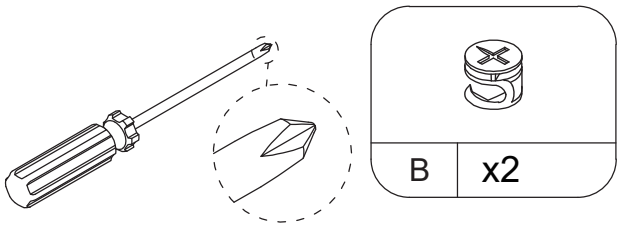

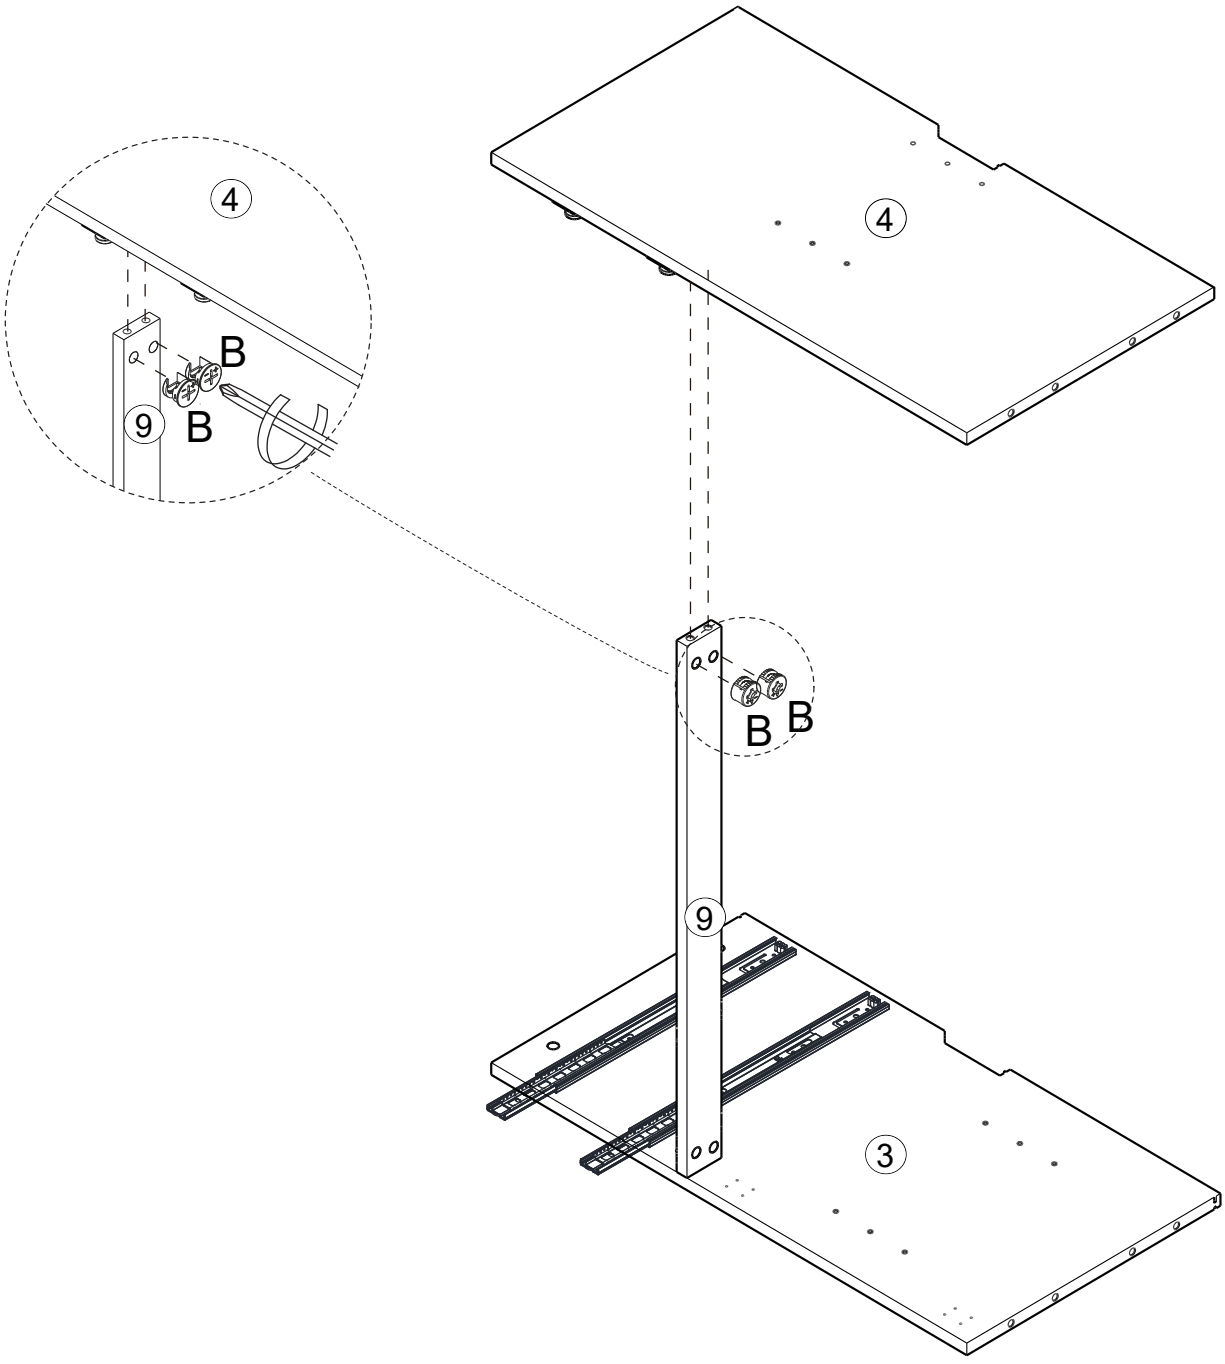



STEP 7

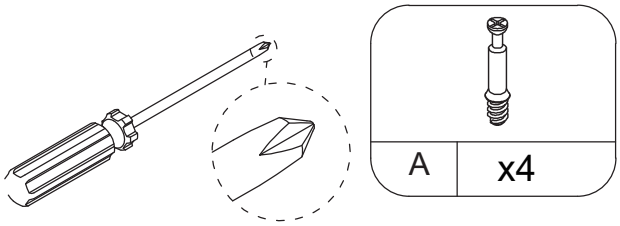

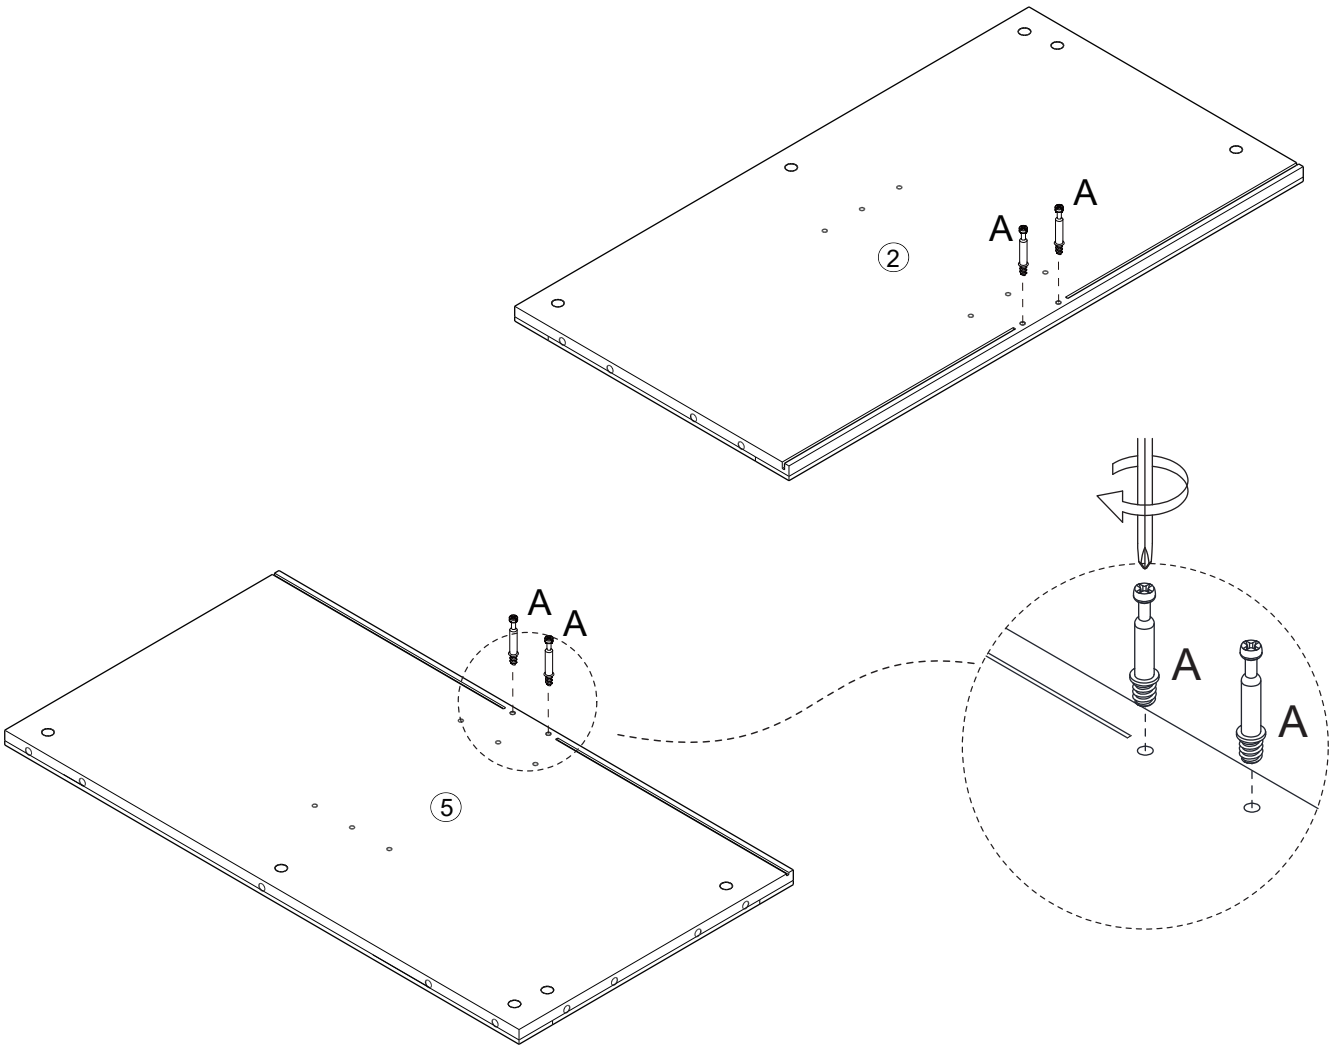



STEP 8

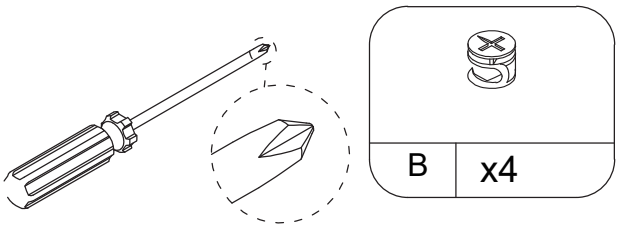


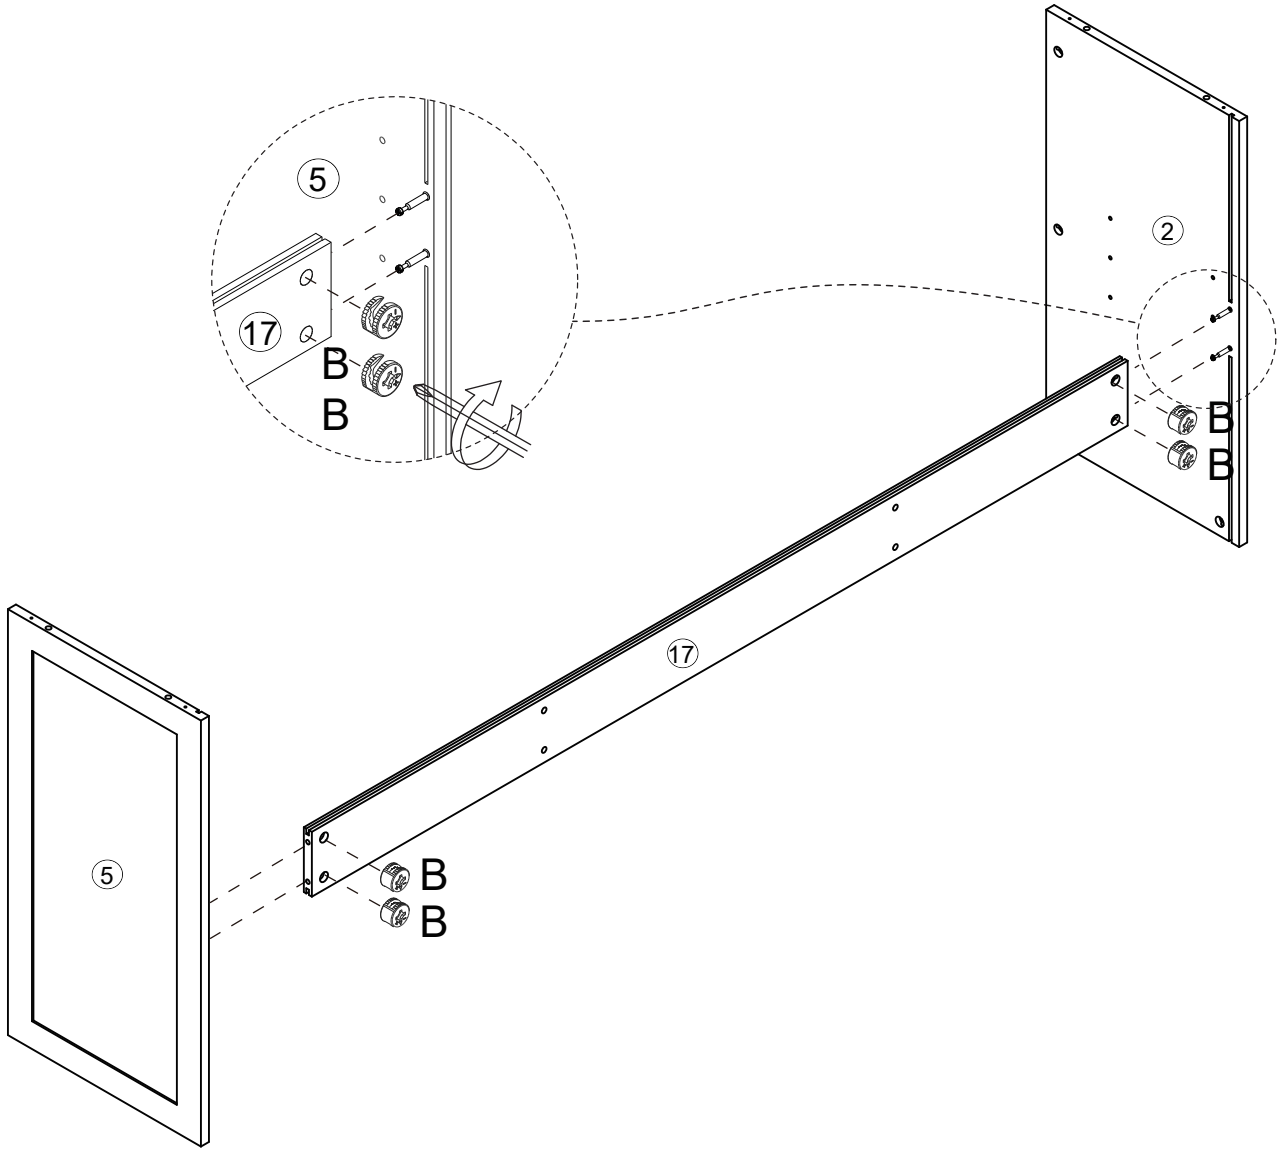


STEP 9

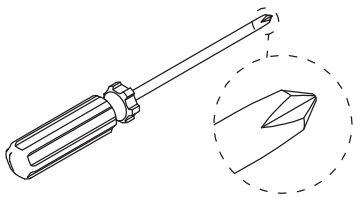

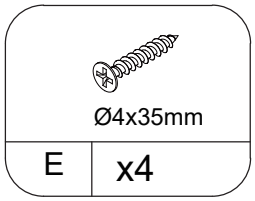


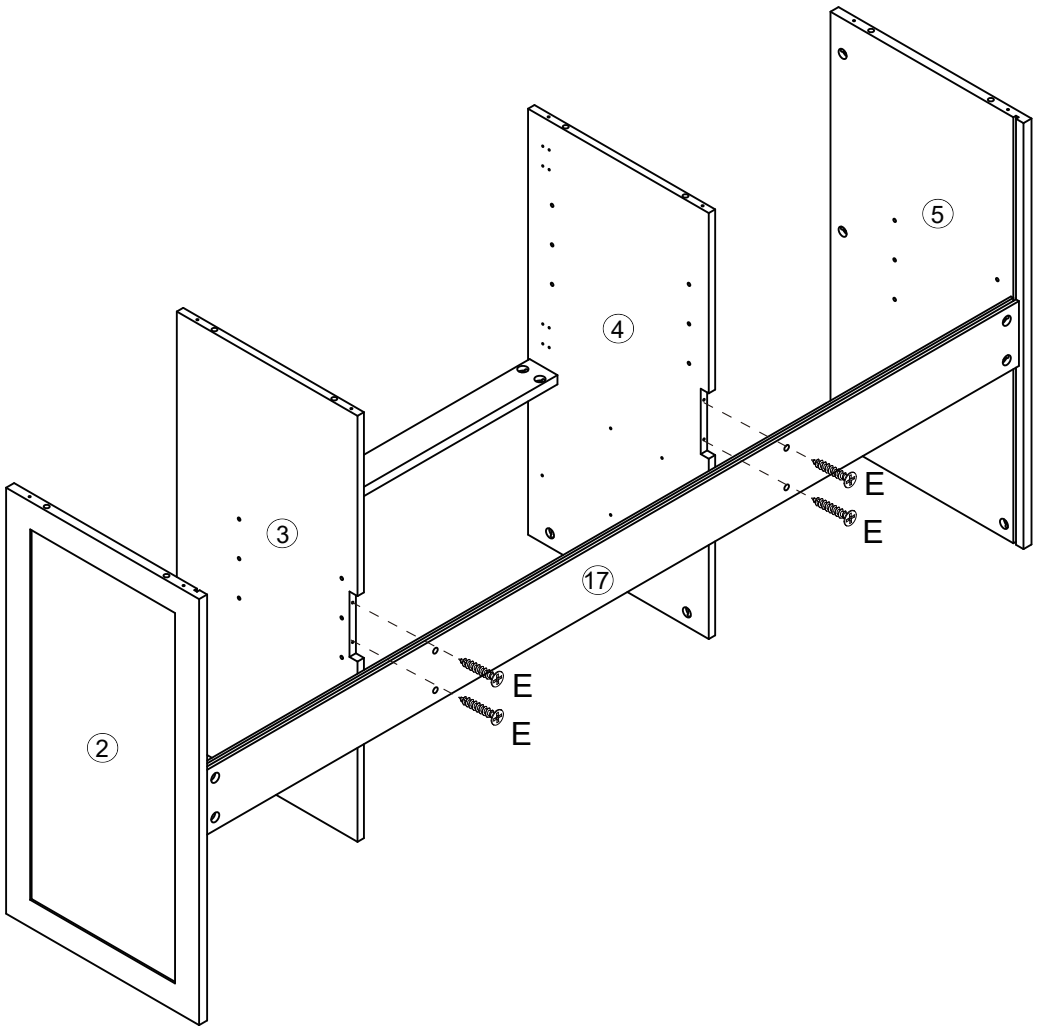



STEP 10

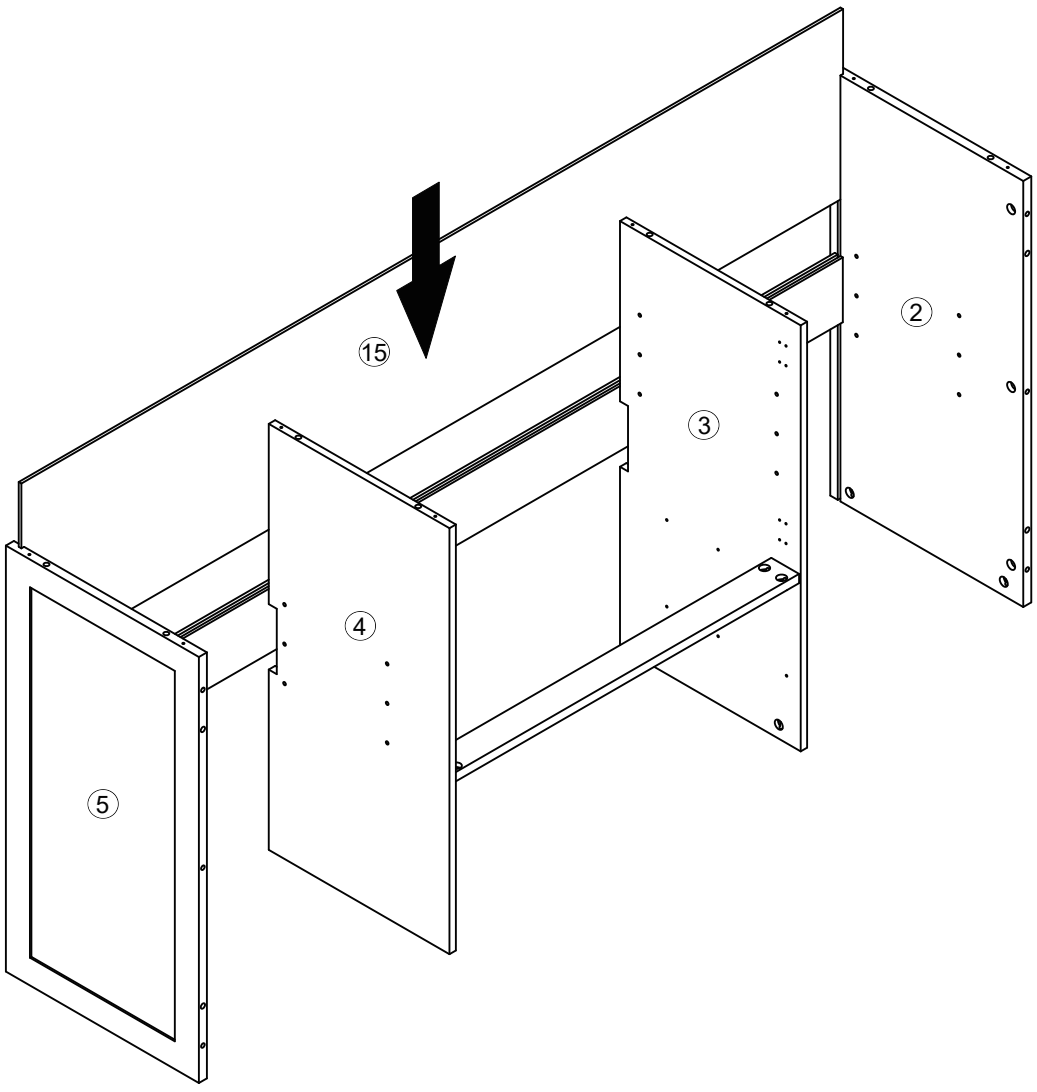


STEP 11

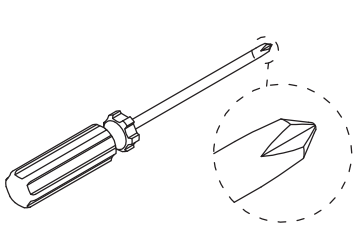


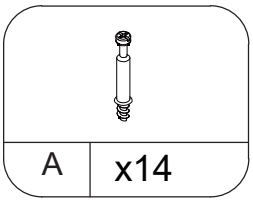


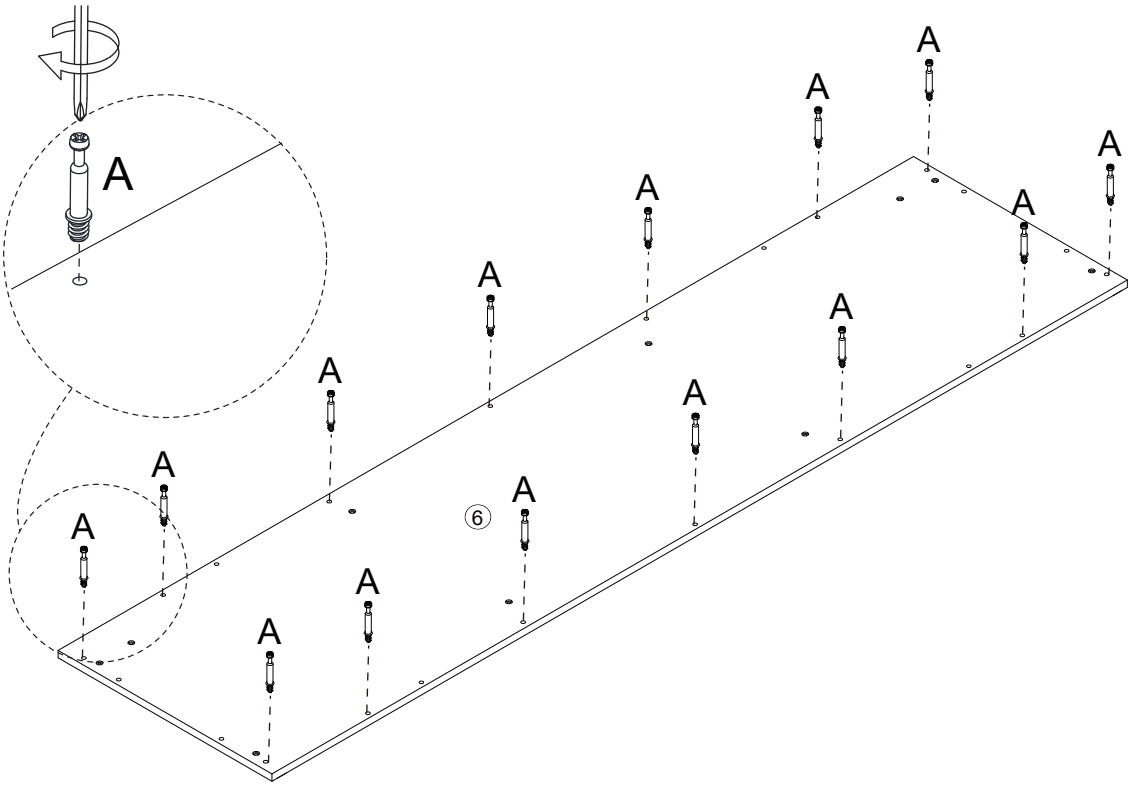


STEP 12

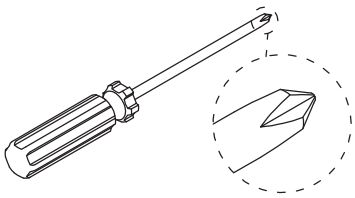


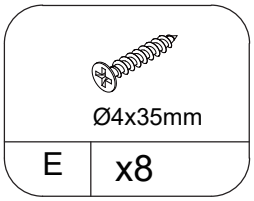


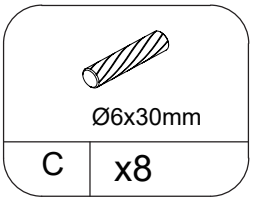


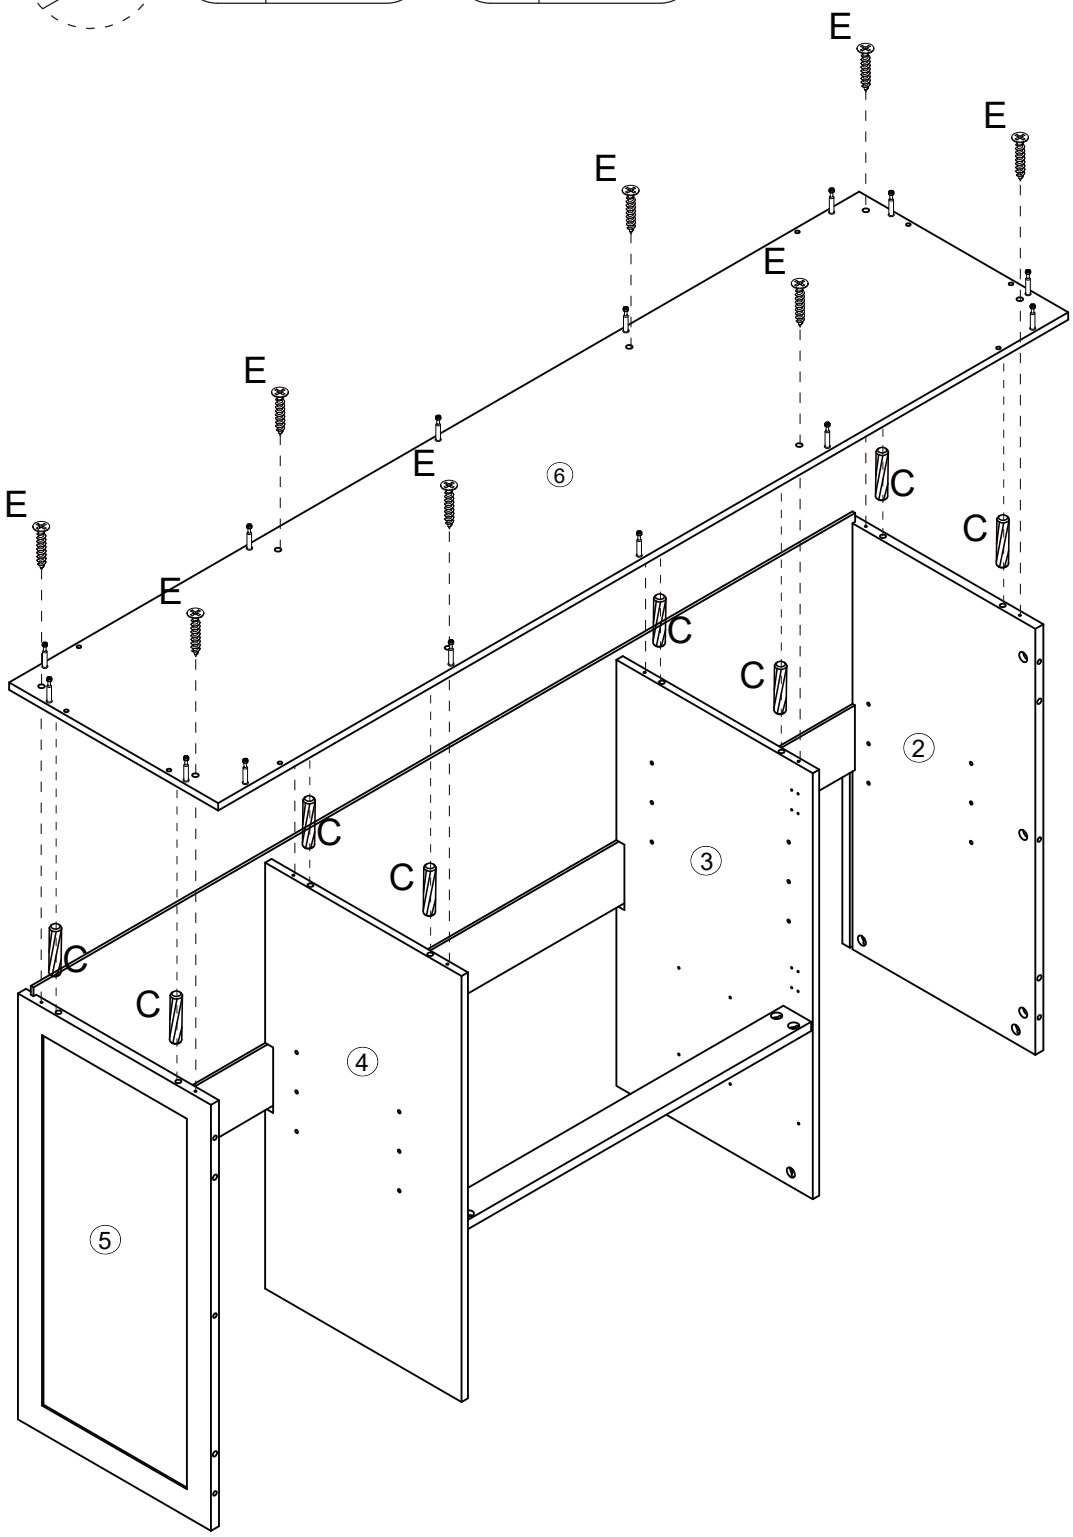


STEP 13

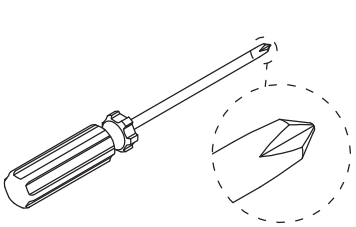


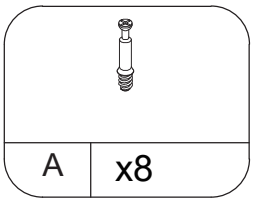

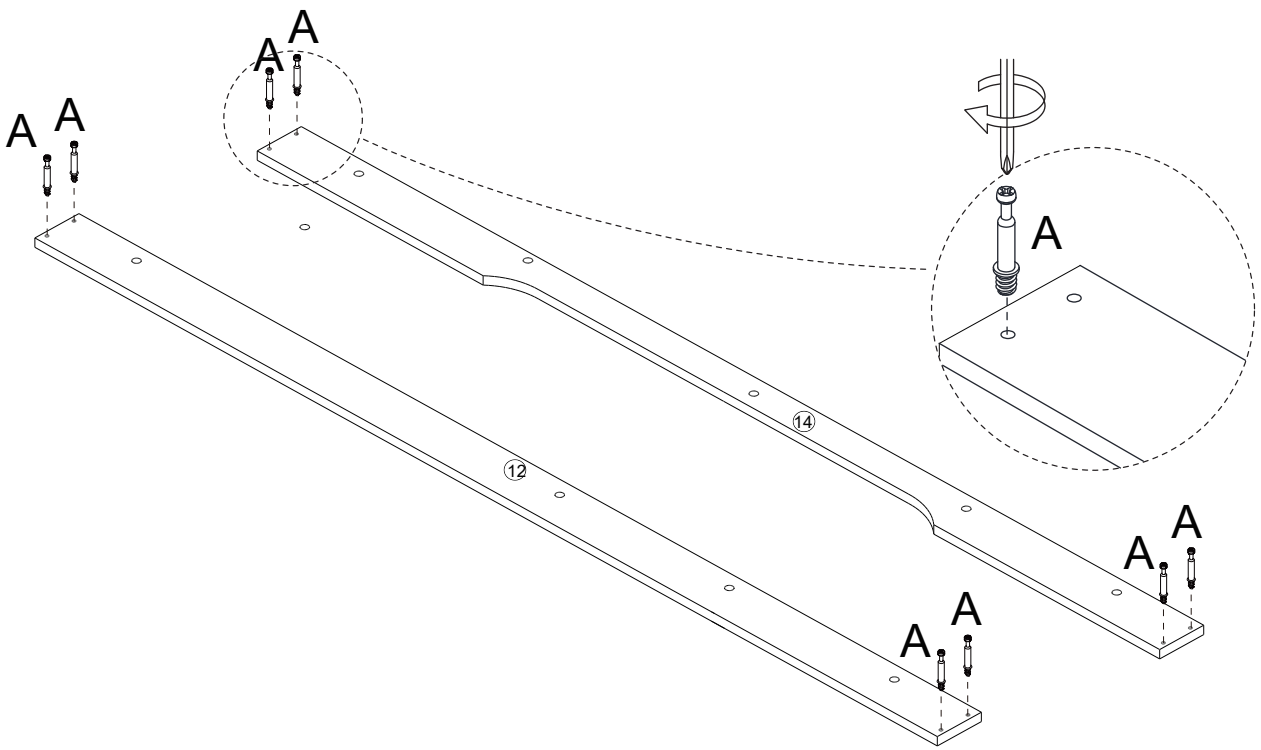


STEP 14

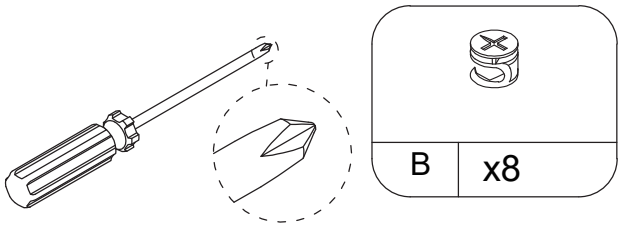

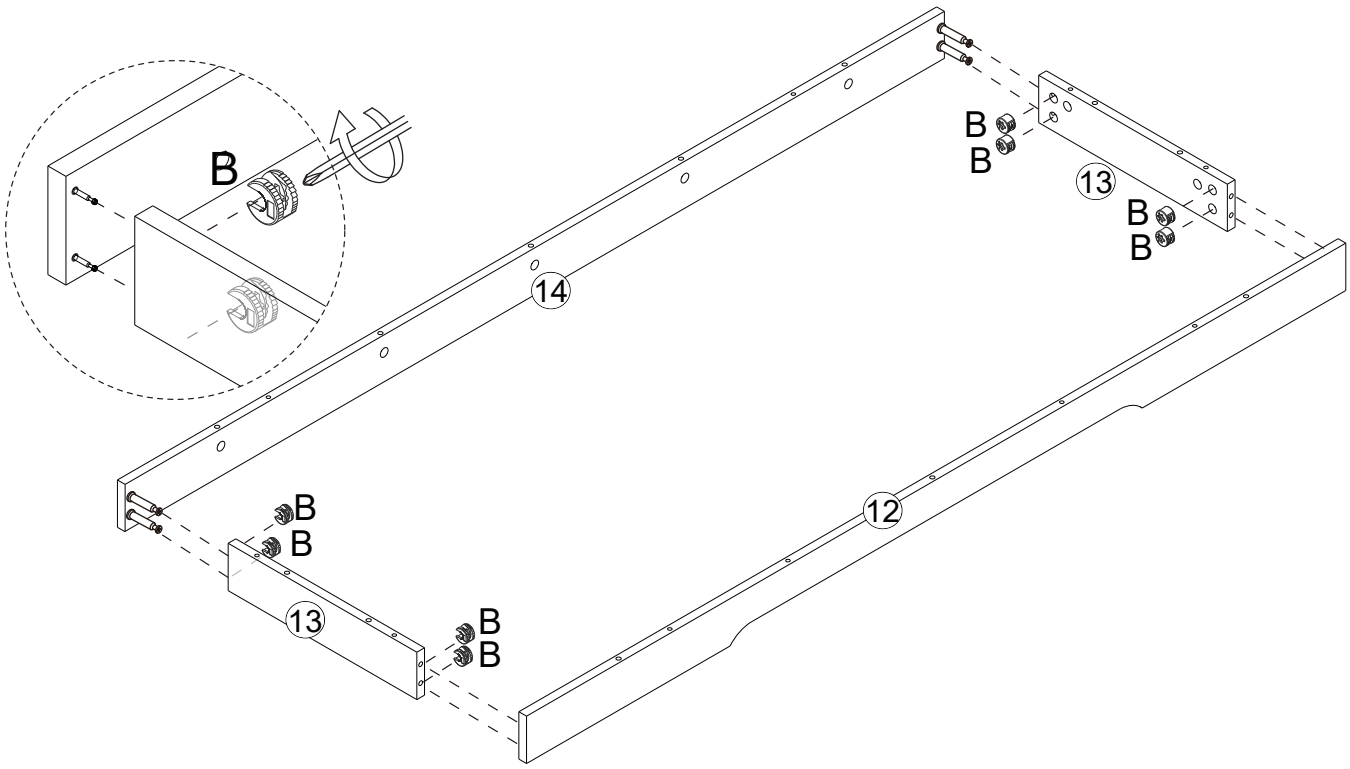

STEP 15

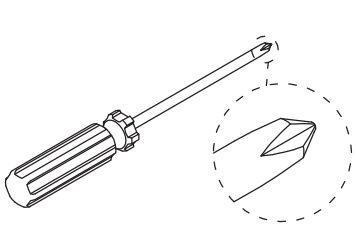


B	x14


C	x8

Ø6x30mm


O	x4

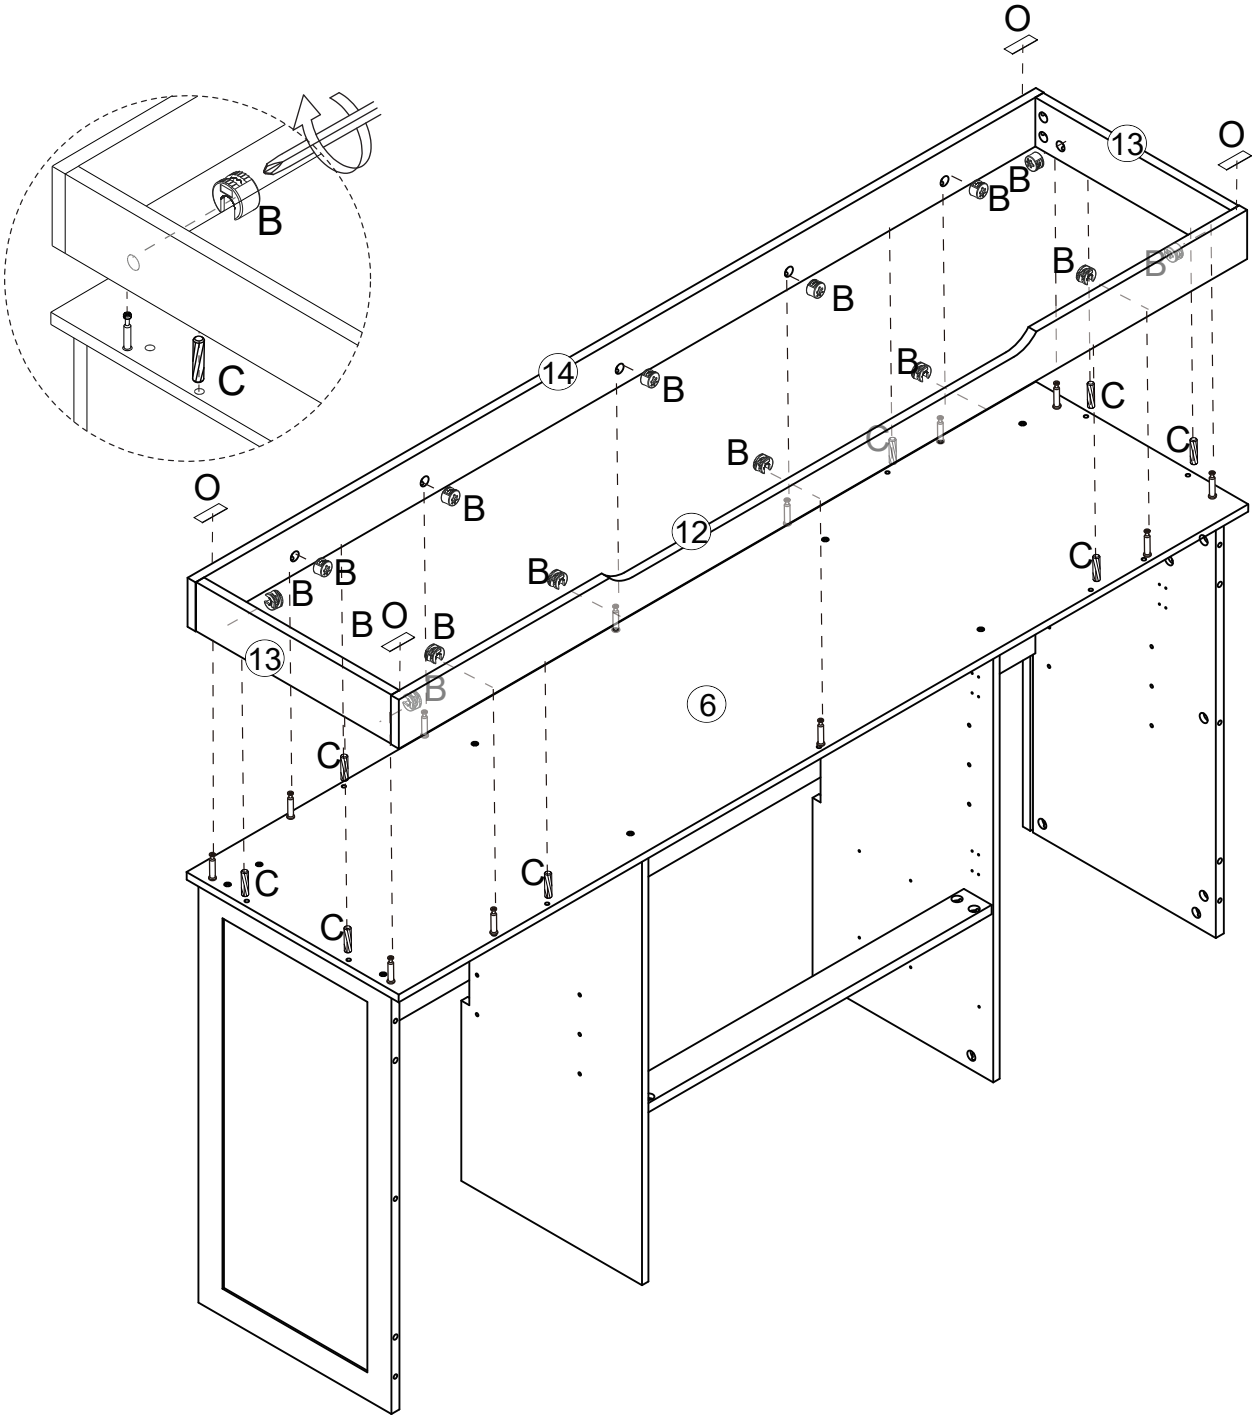


STEP 16

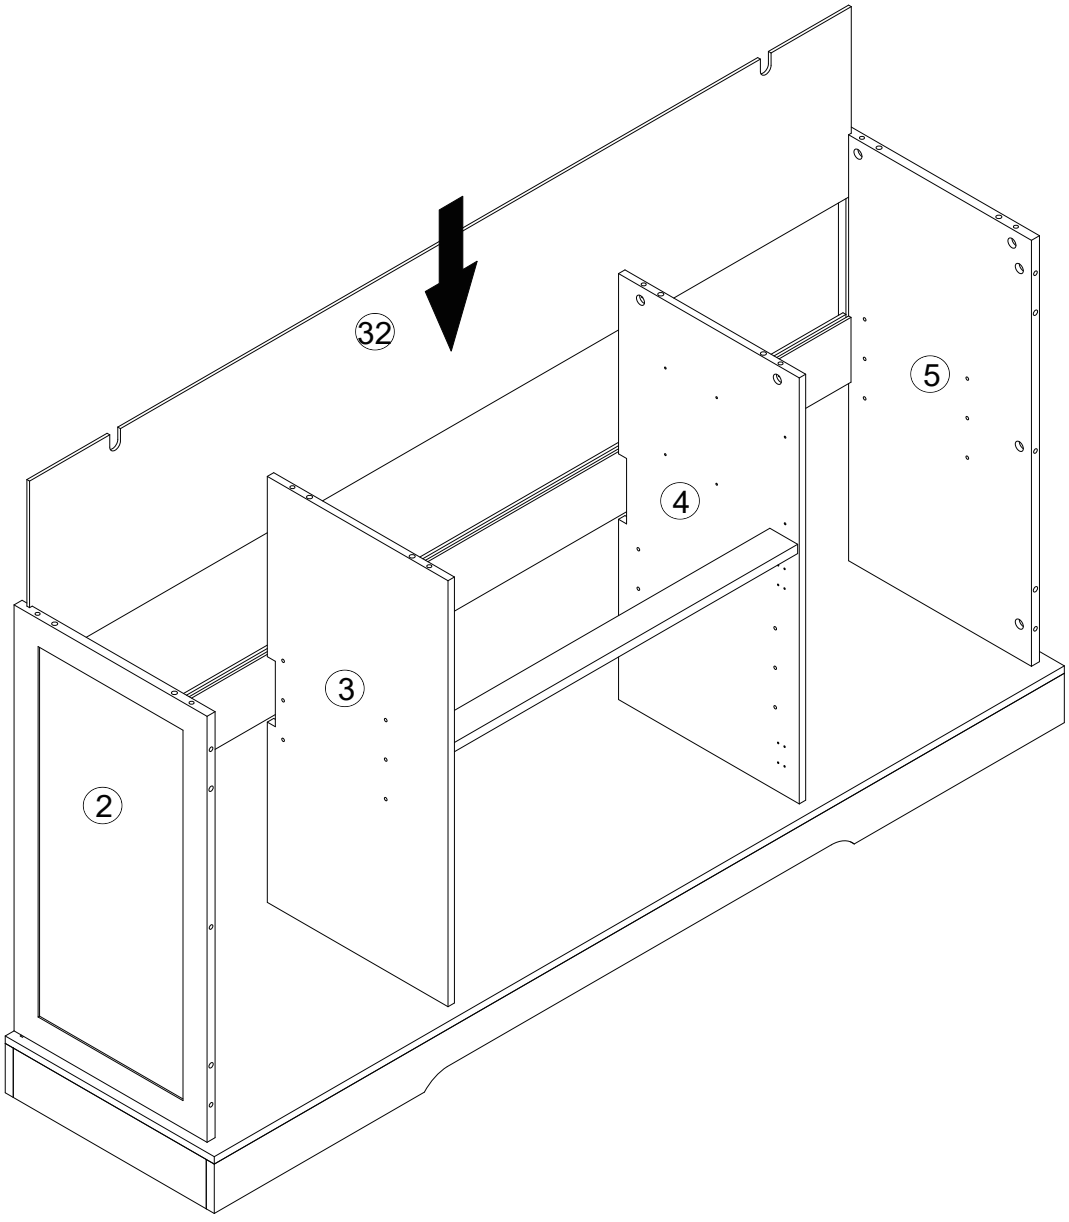



STEP 17

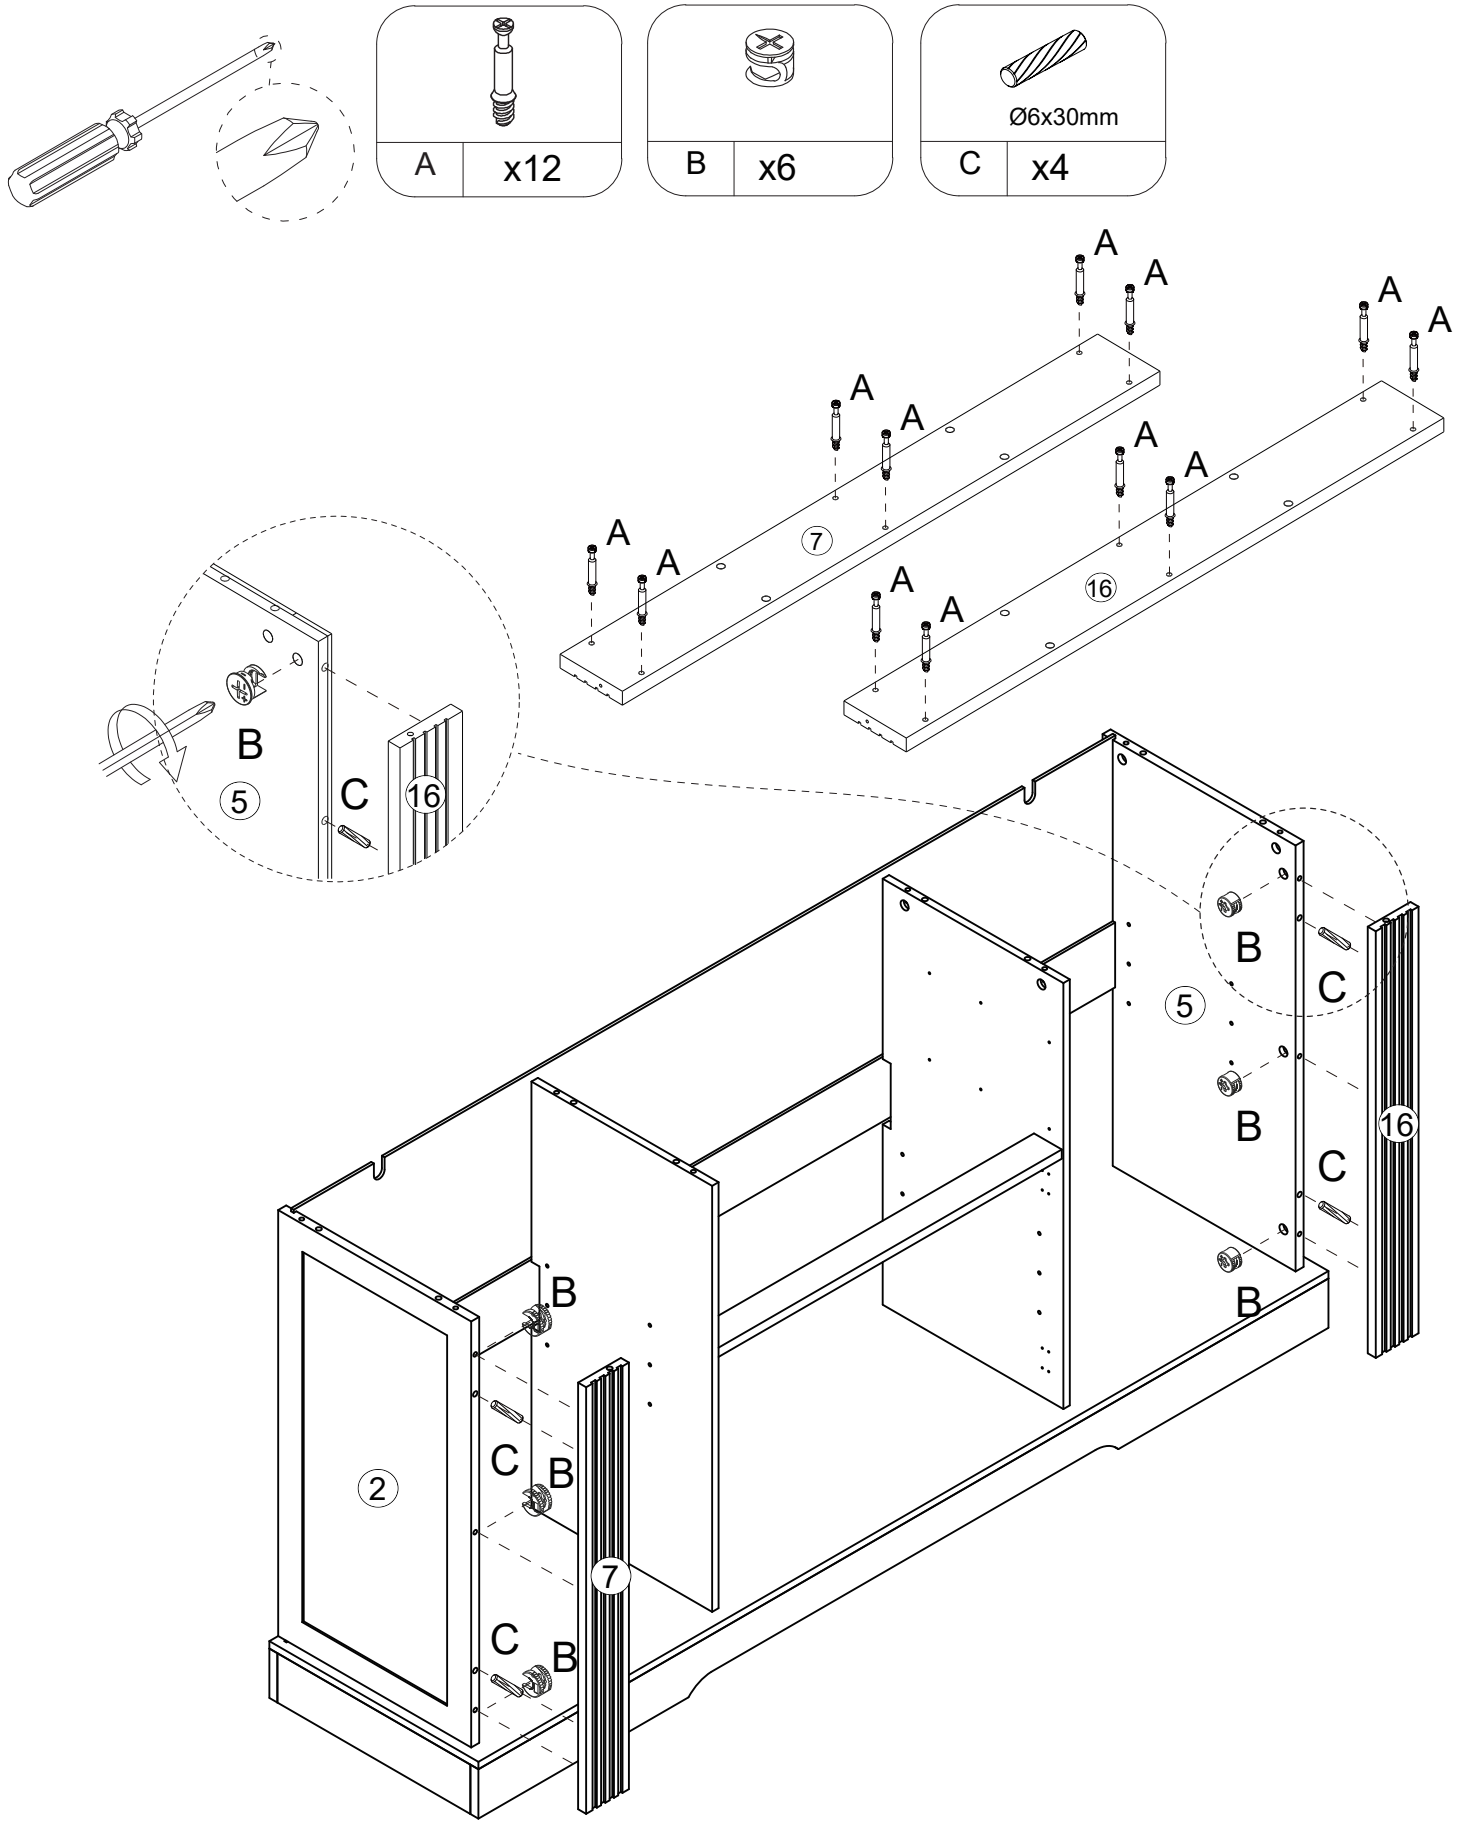


STEP 18

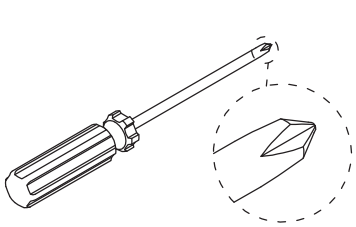


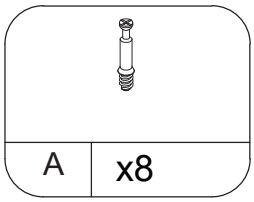

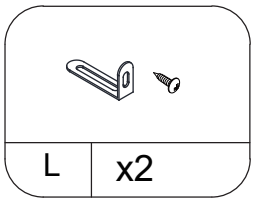

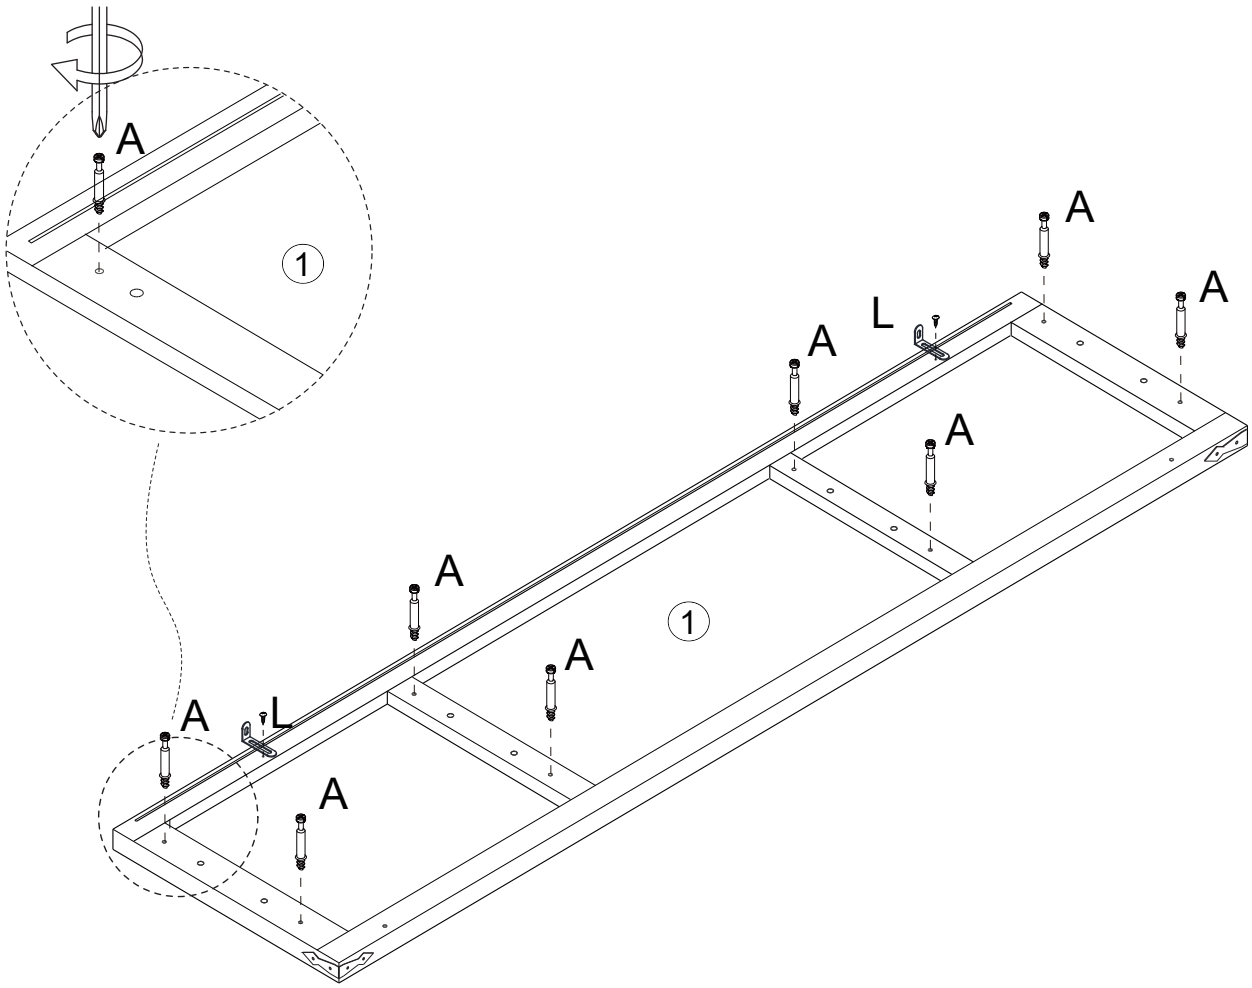


STEP 19

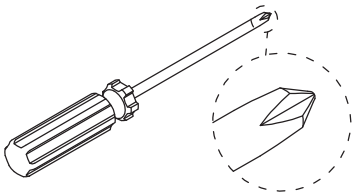


B	x8





Ø6x30mm	
C	x10

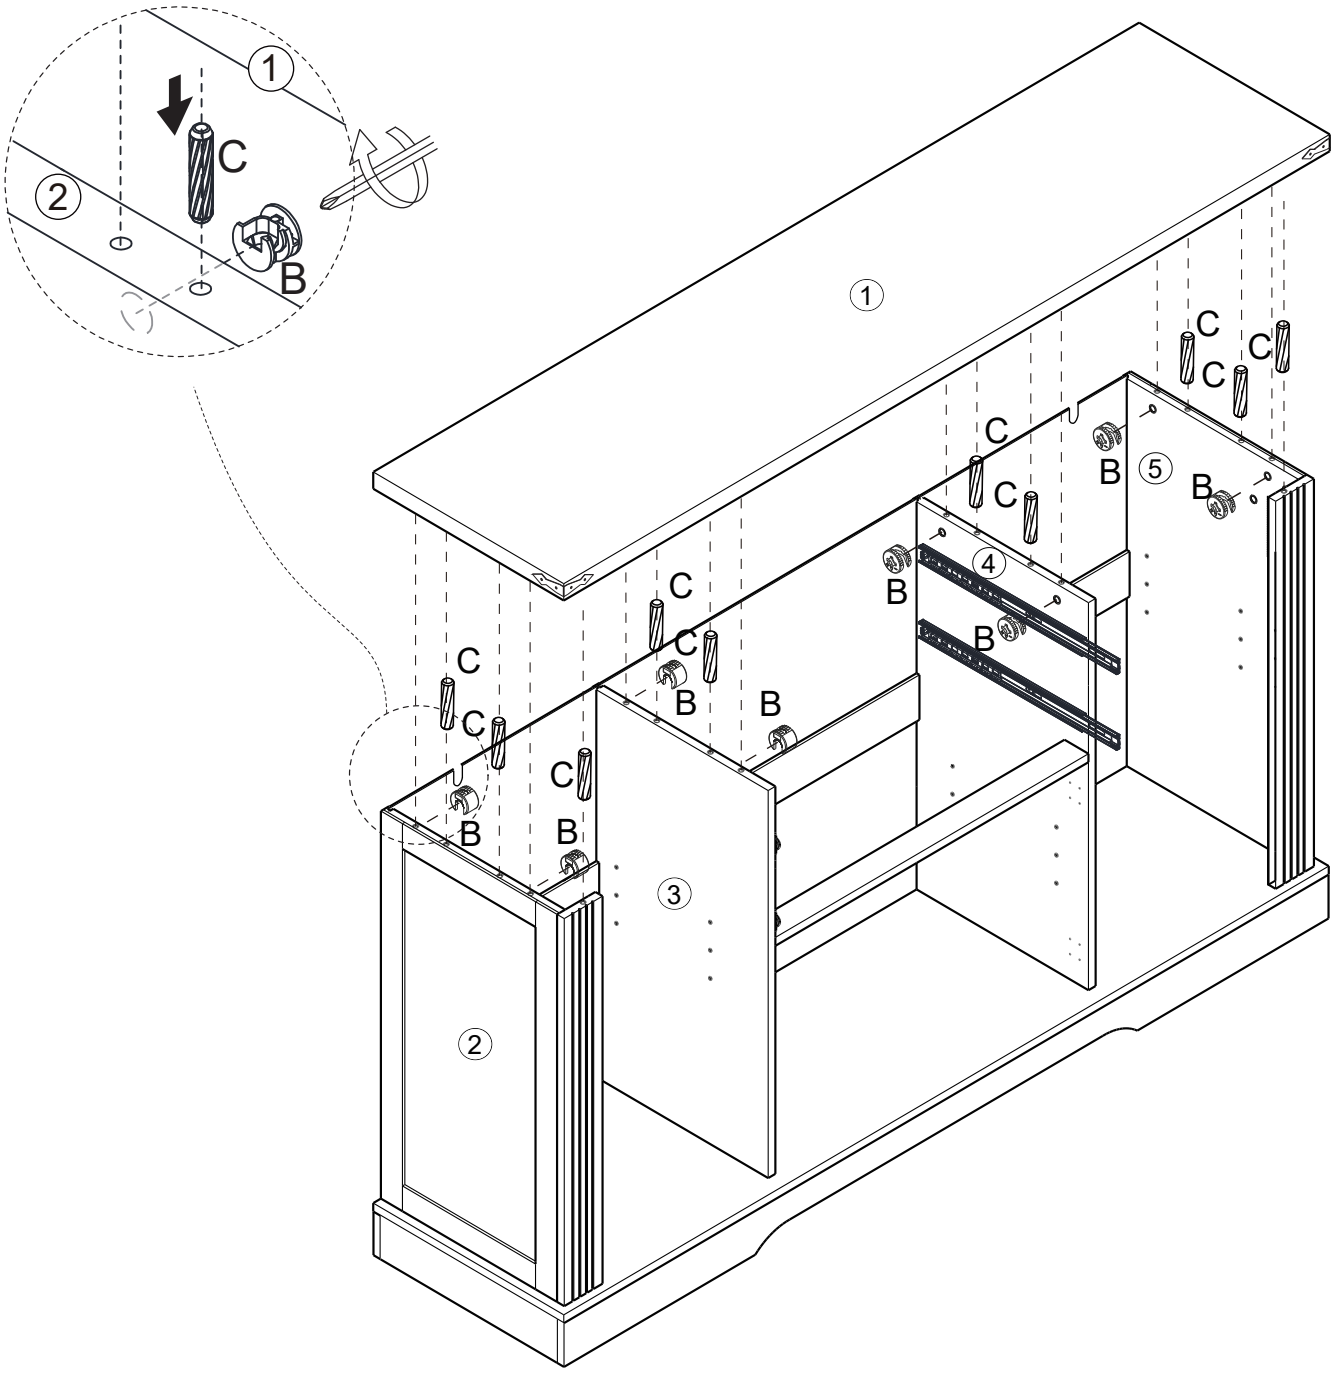


STEP 20

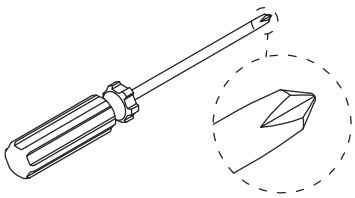


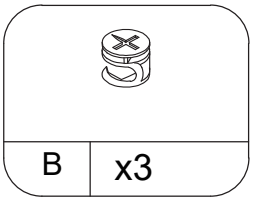


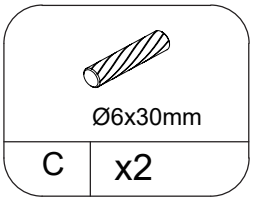


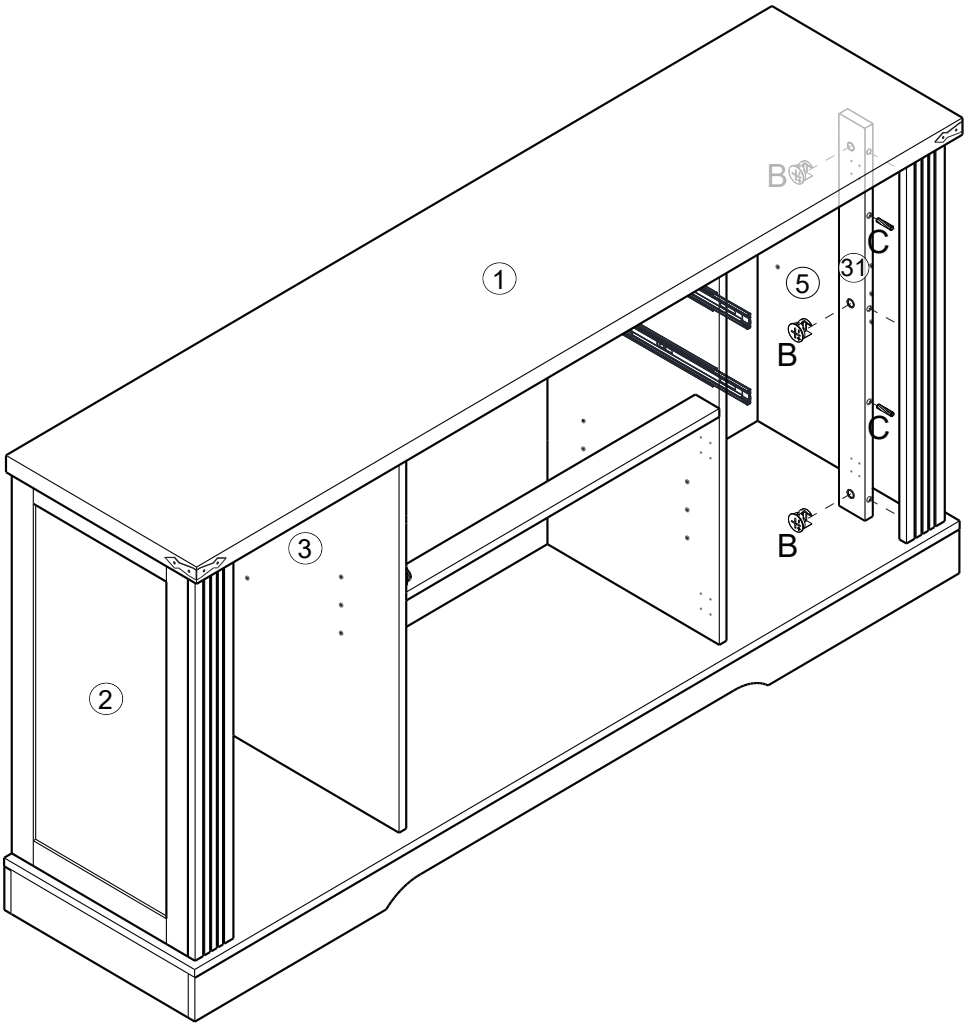


STEP 21

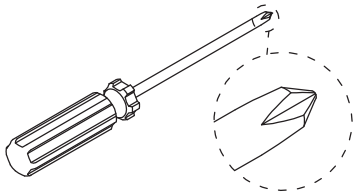


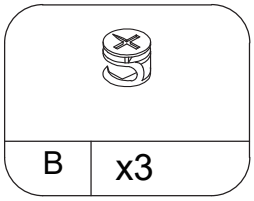


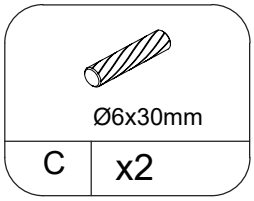


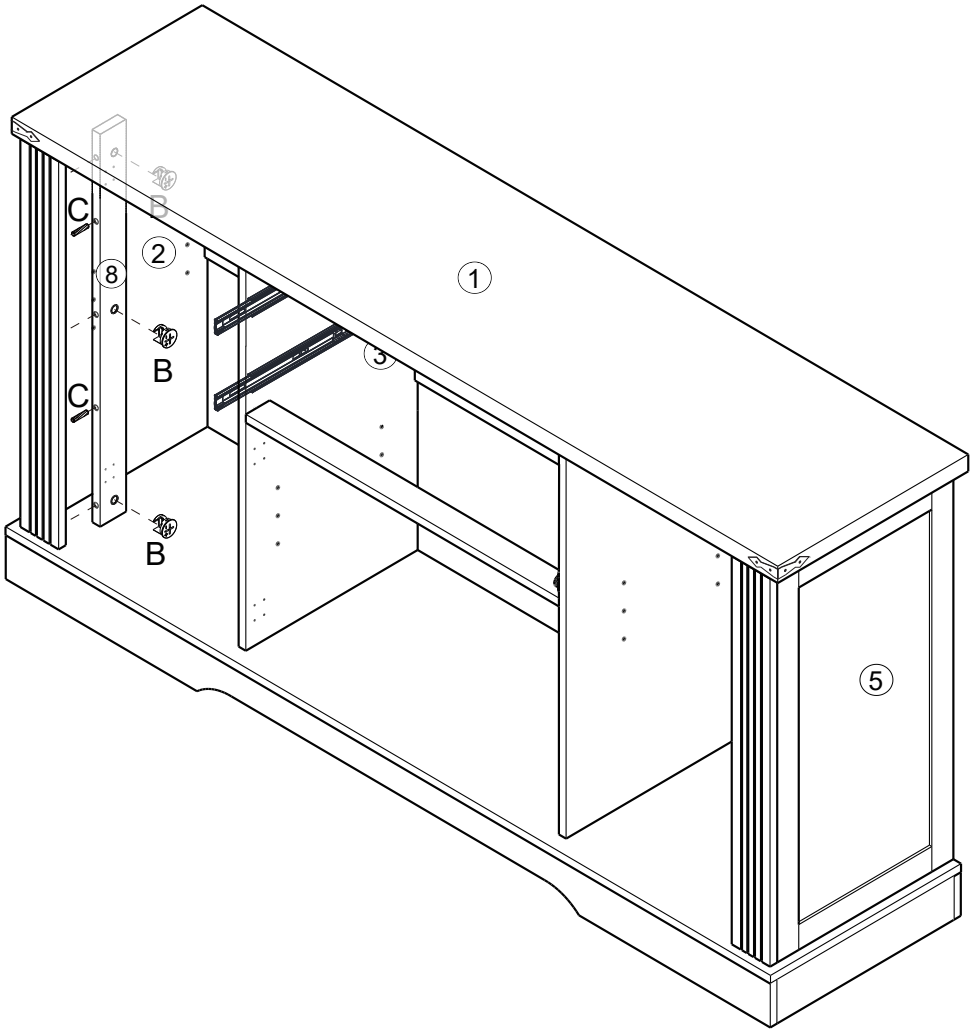


STEP 22

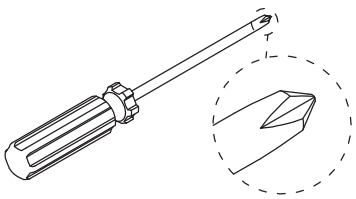


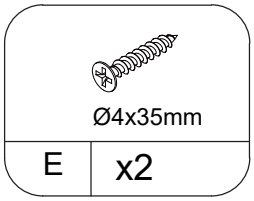


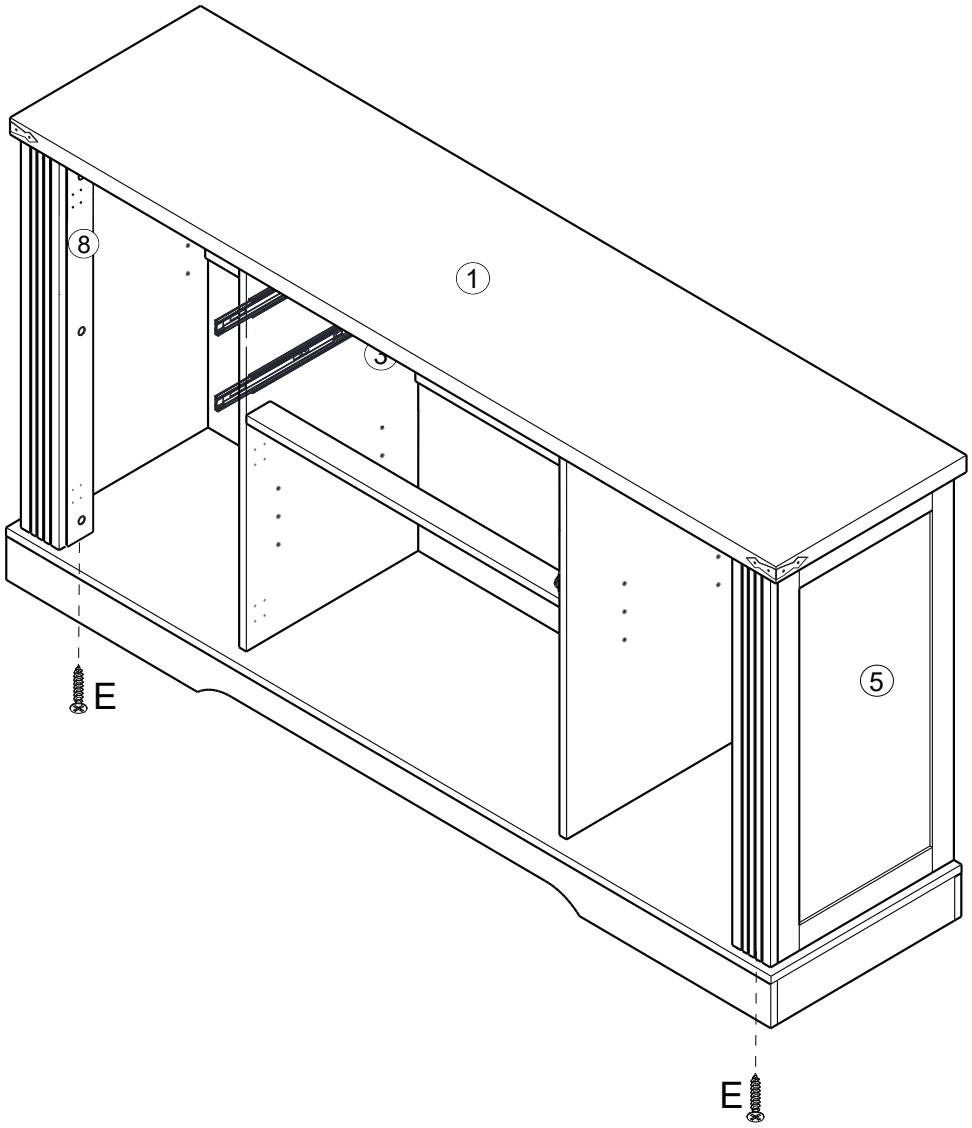


STEP 23

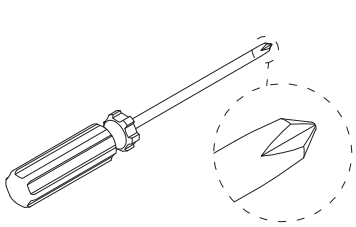

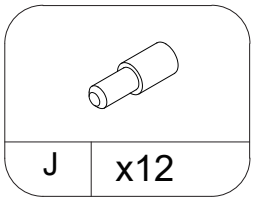


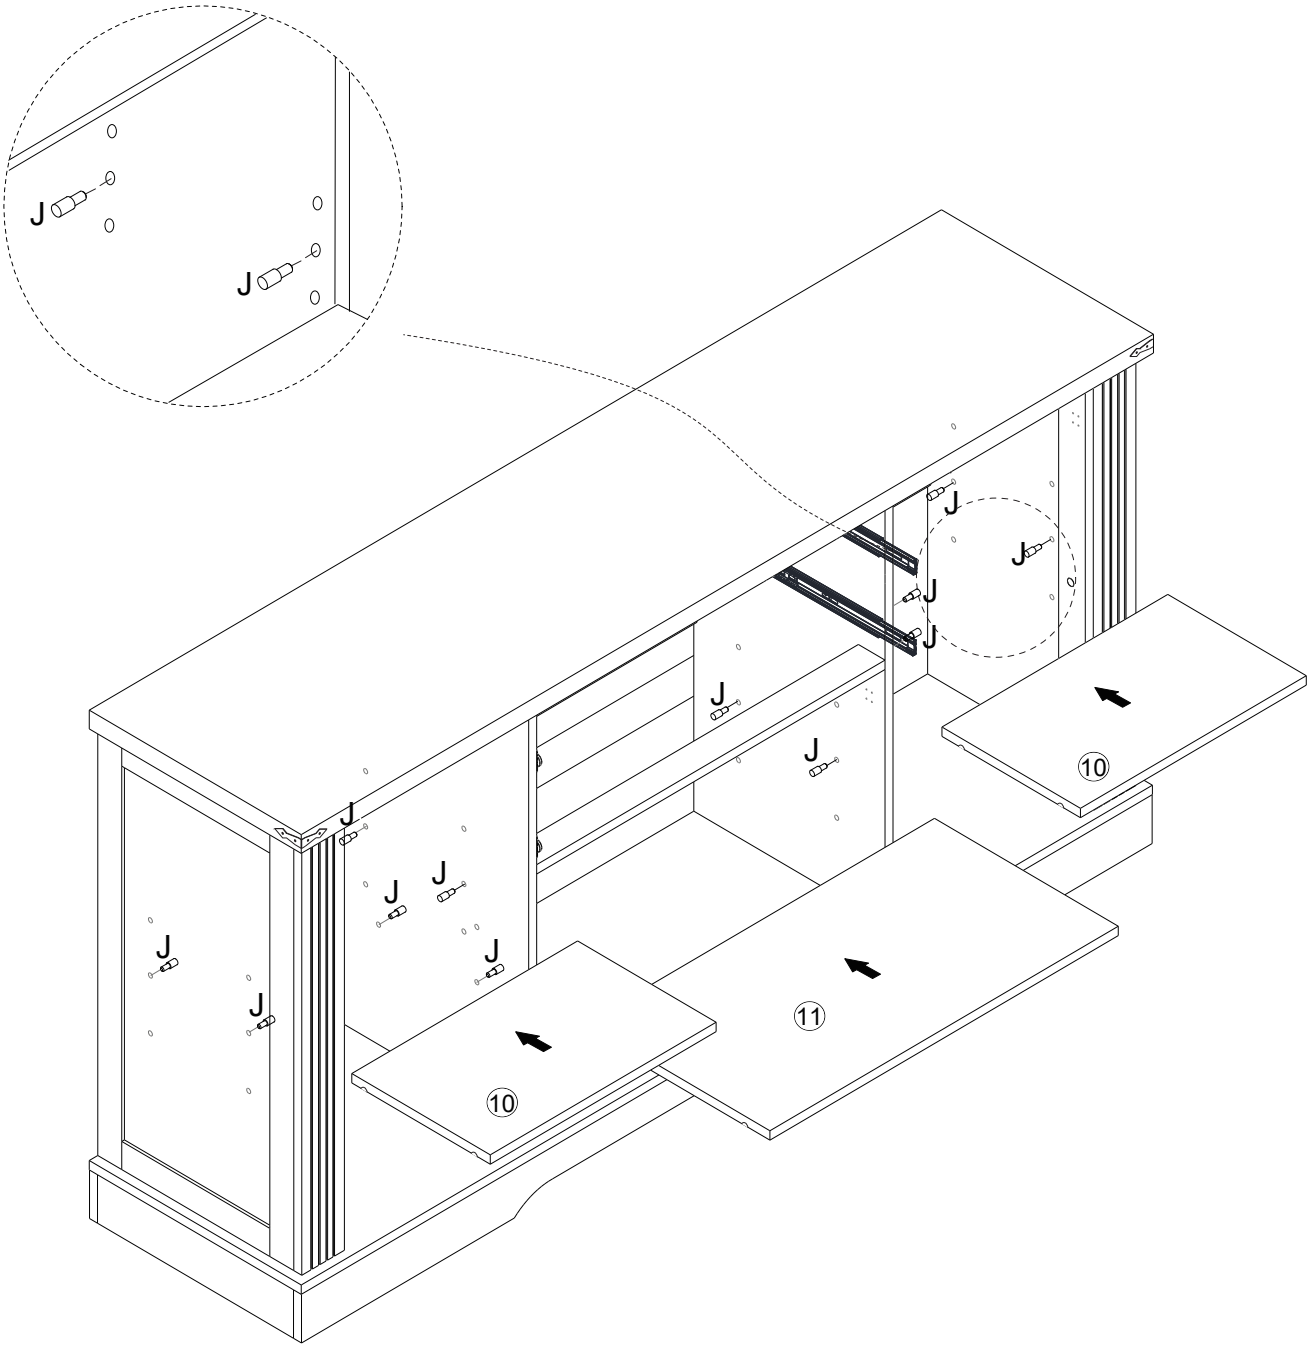

STEP 24

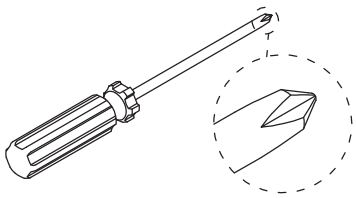


M	x4



F	x8

Ø3.5x12mm





I	x2




H	x4

Ø4x22mm

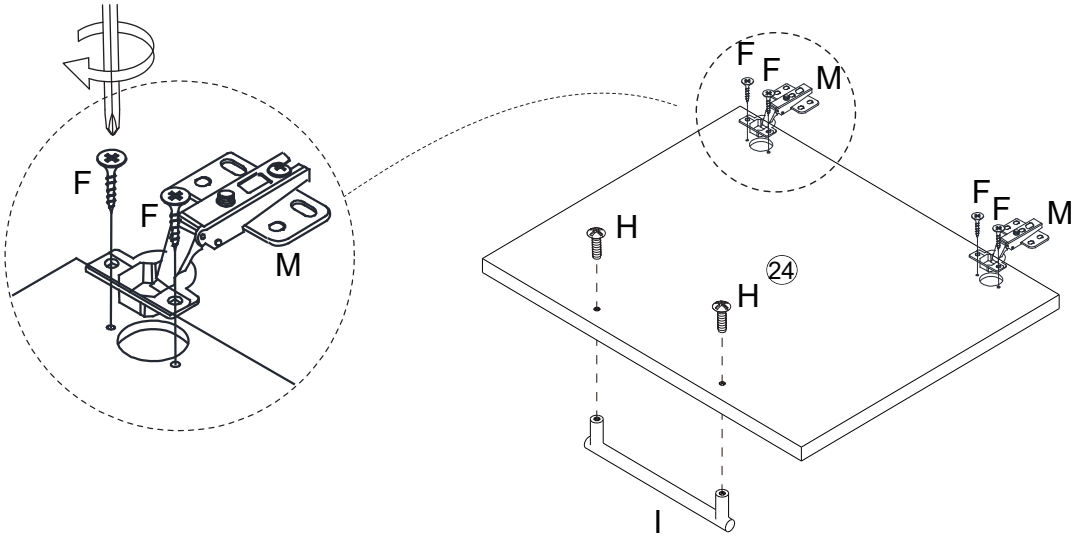


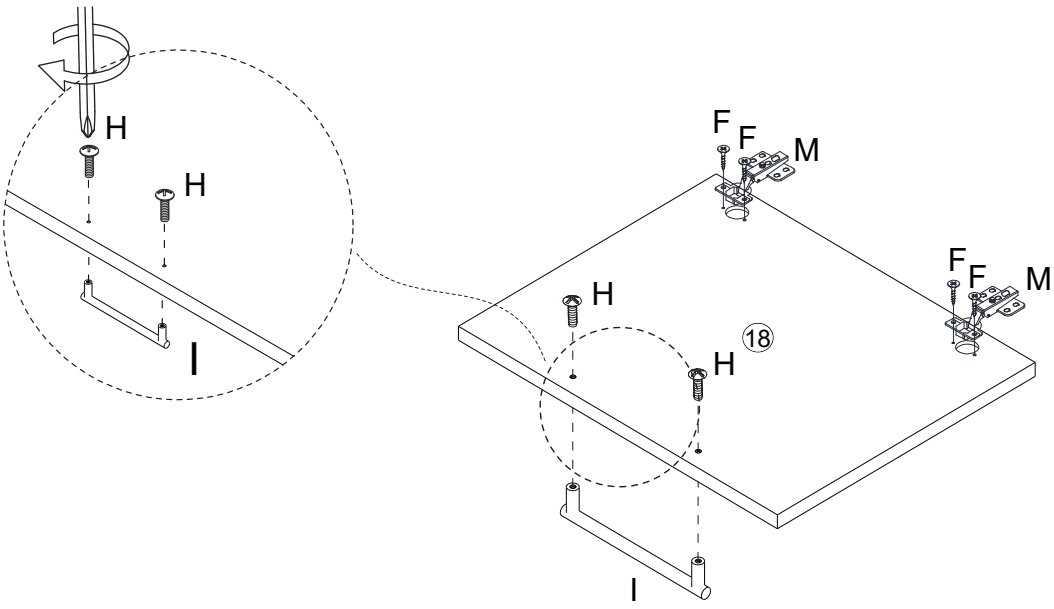


STEP 25

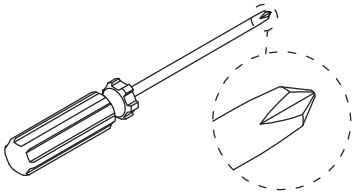



Ø3.5x12mm	
F	x16

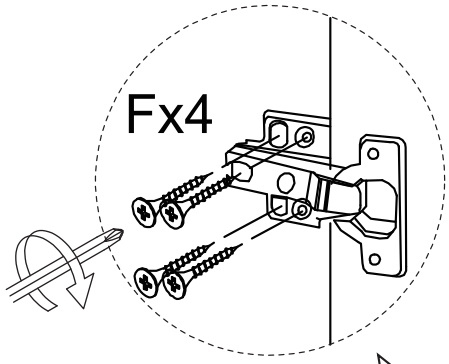

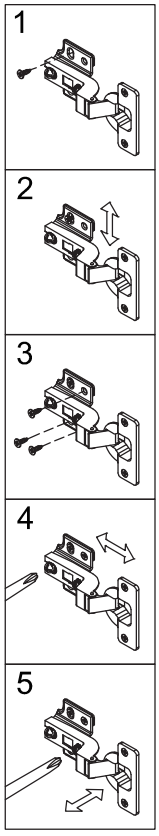


STEP 26

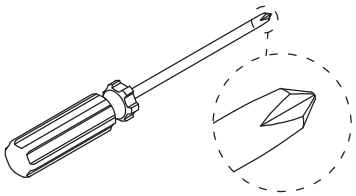


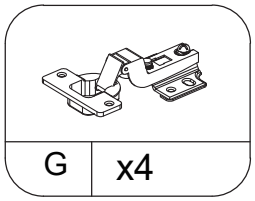


G	x4

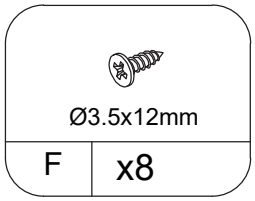


F	x8

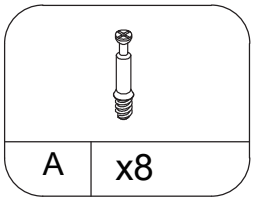


A	x8

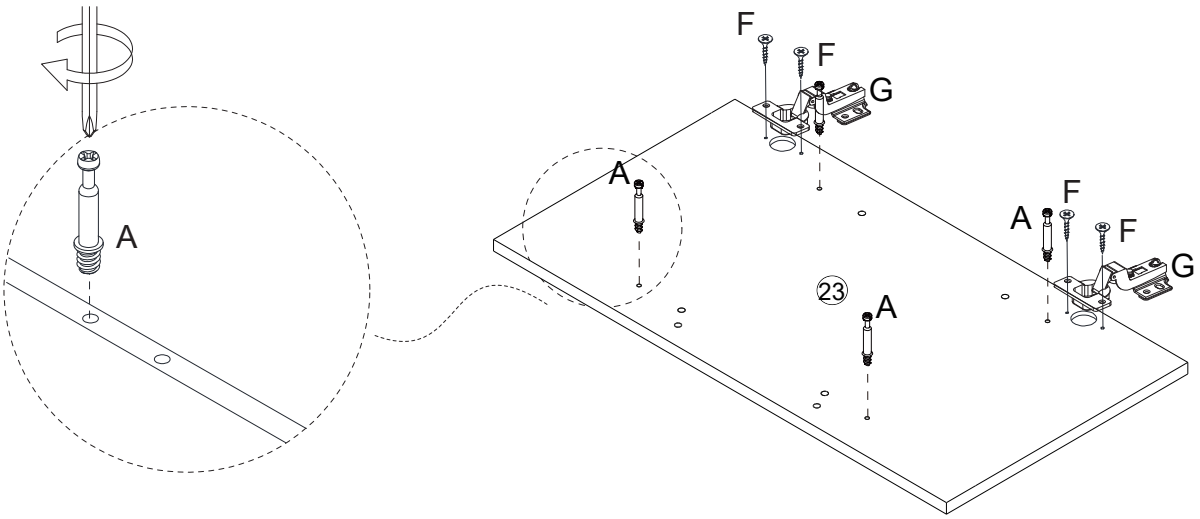


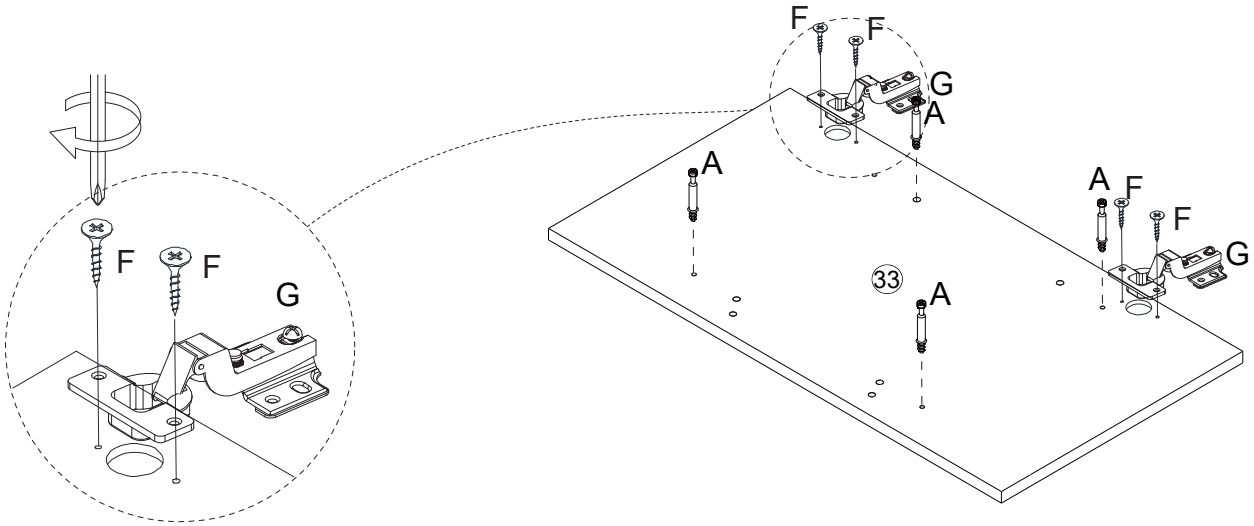


STEP 27

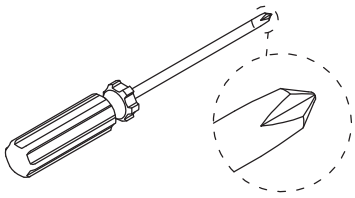



Ø3.5x12mm		Ø4x22mm	
F	x16	I	x2	H	x4

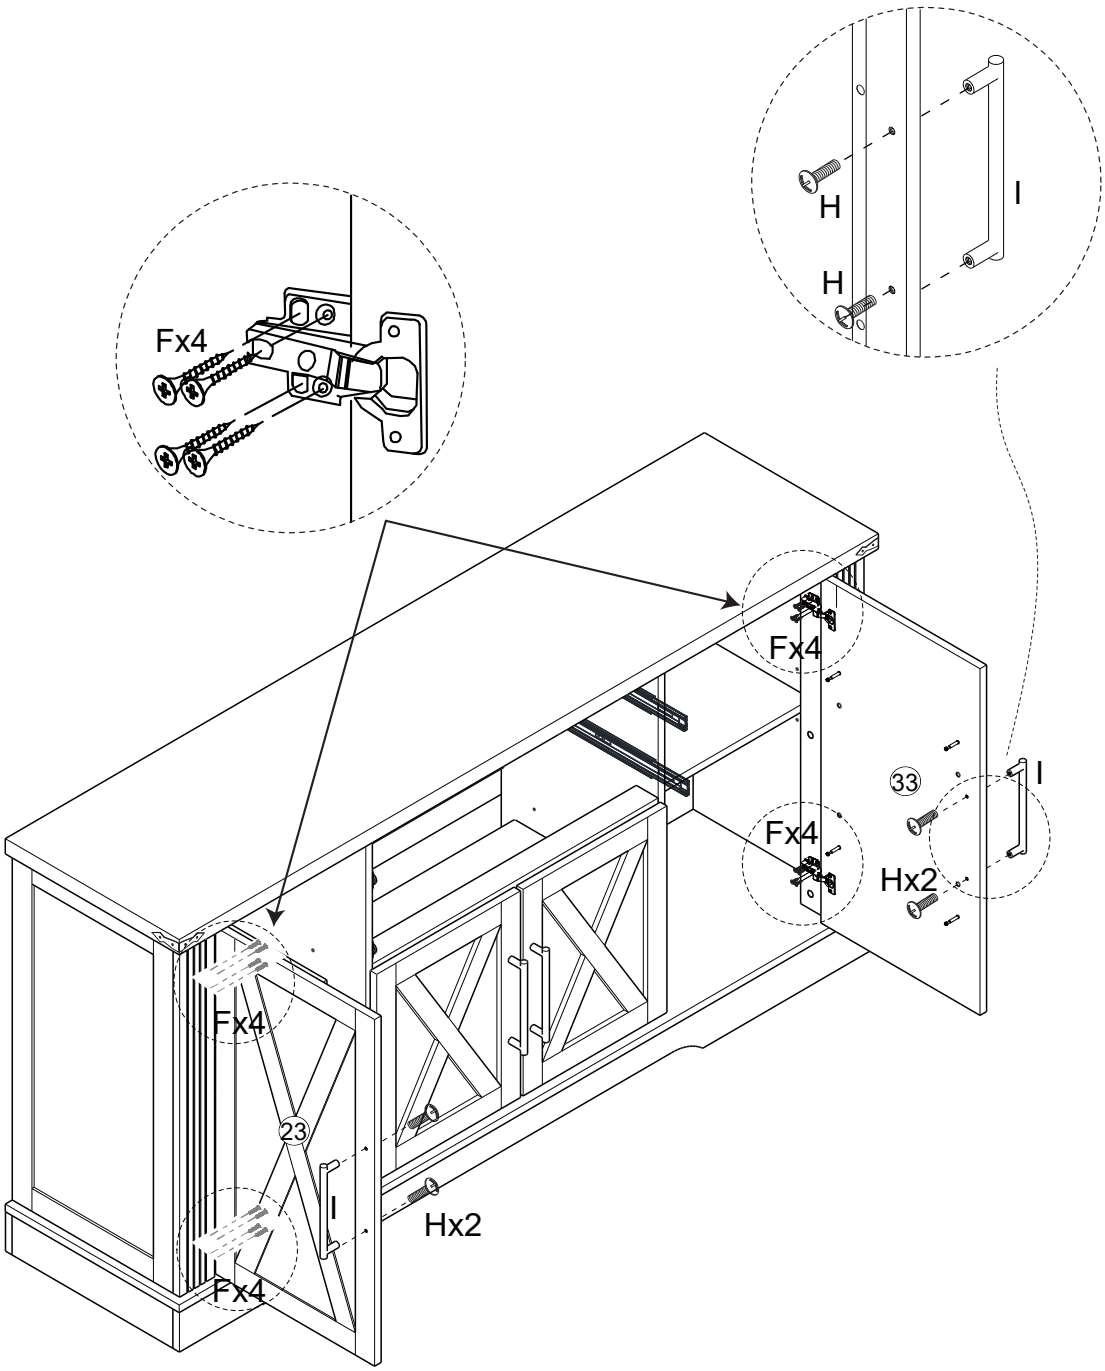


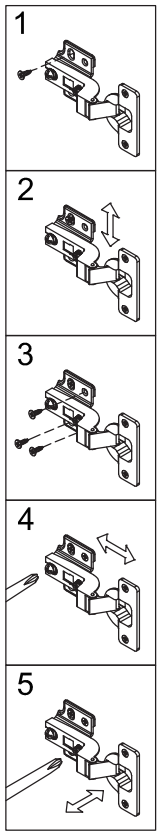


STEP 28

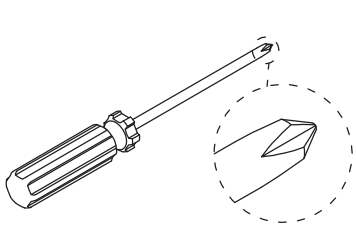

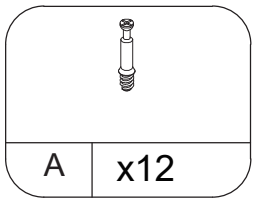


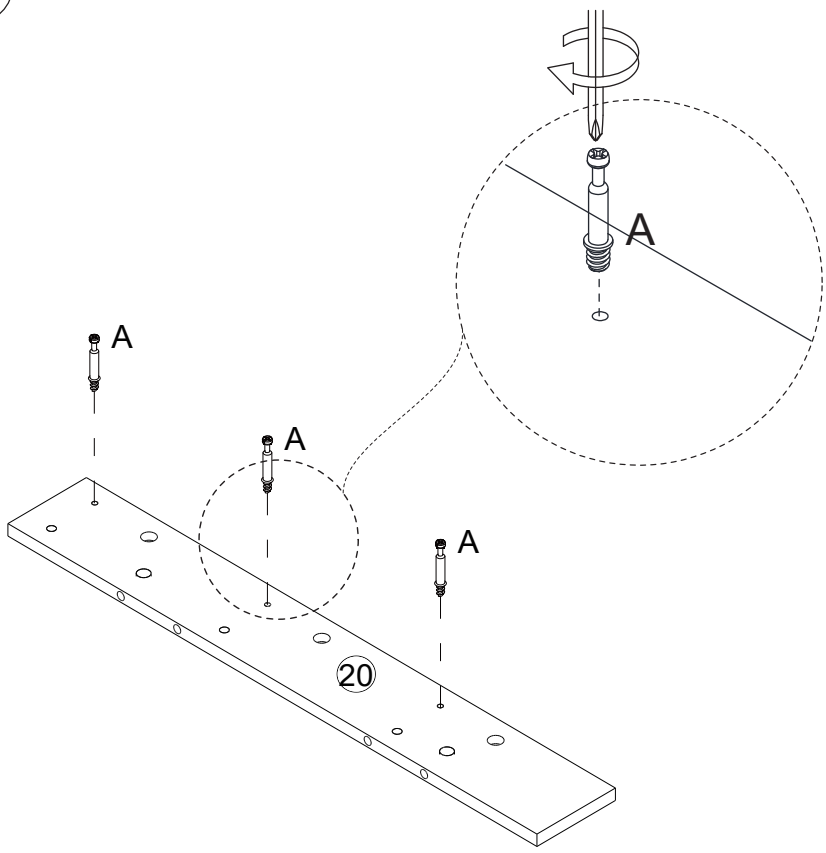


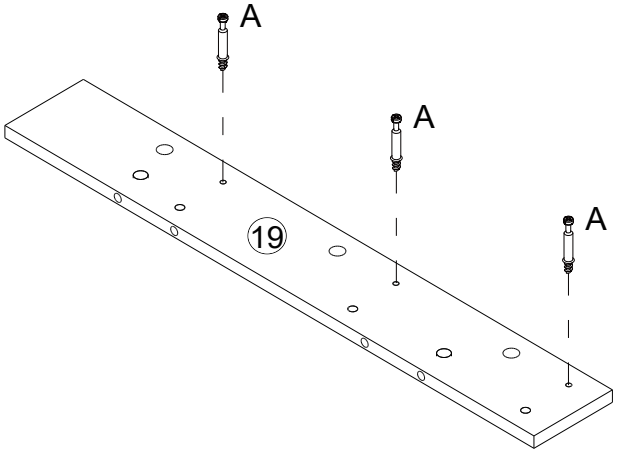



x2

STEP 29

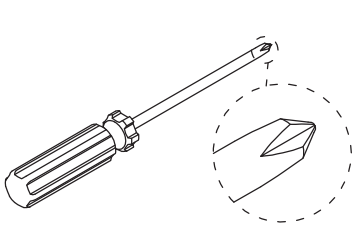


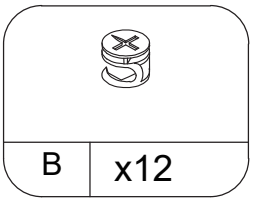

B
x12

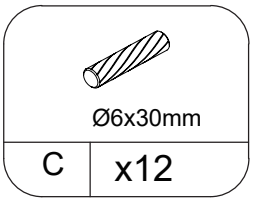
Ø6x30mm
C
x12

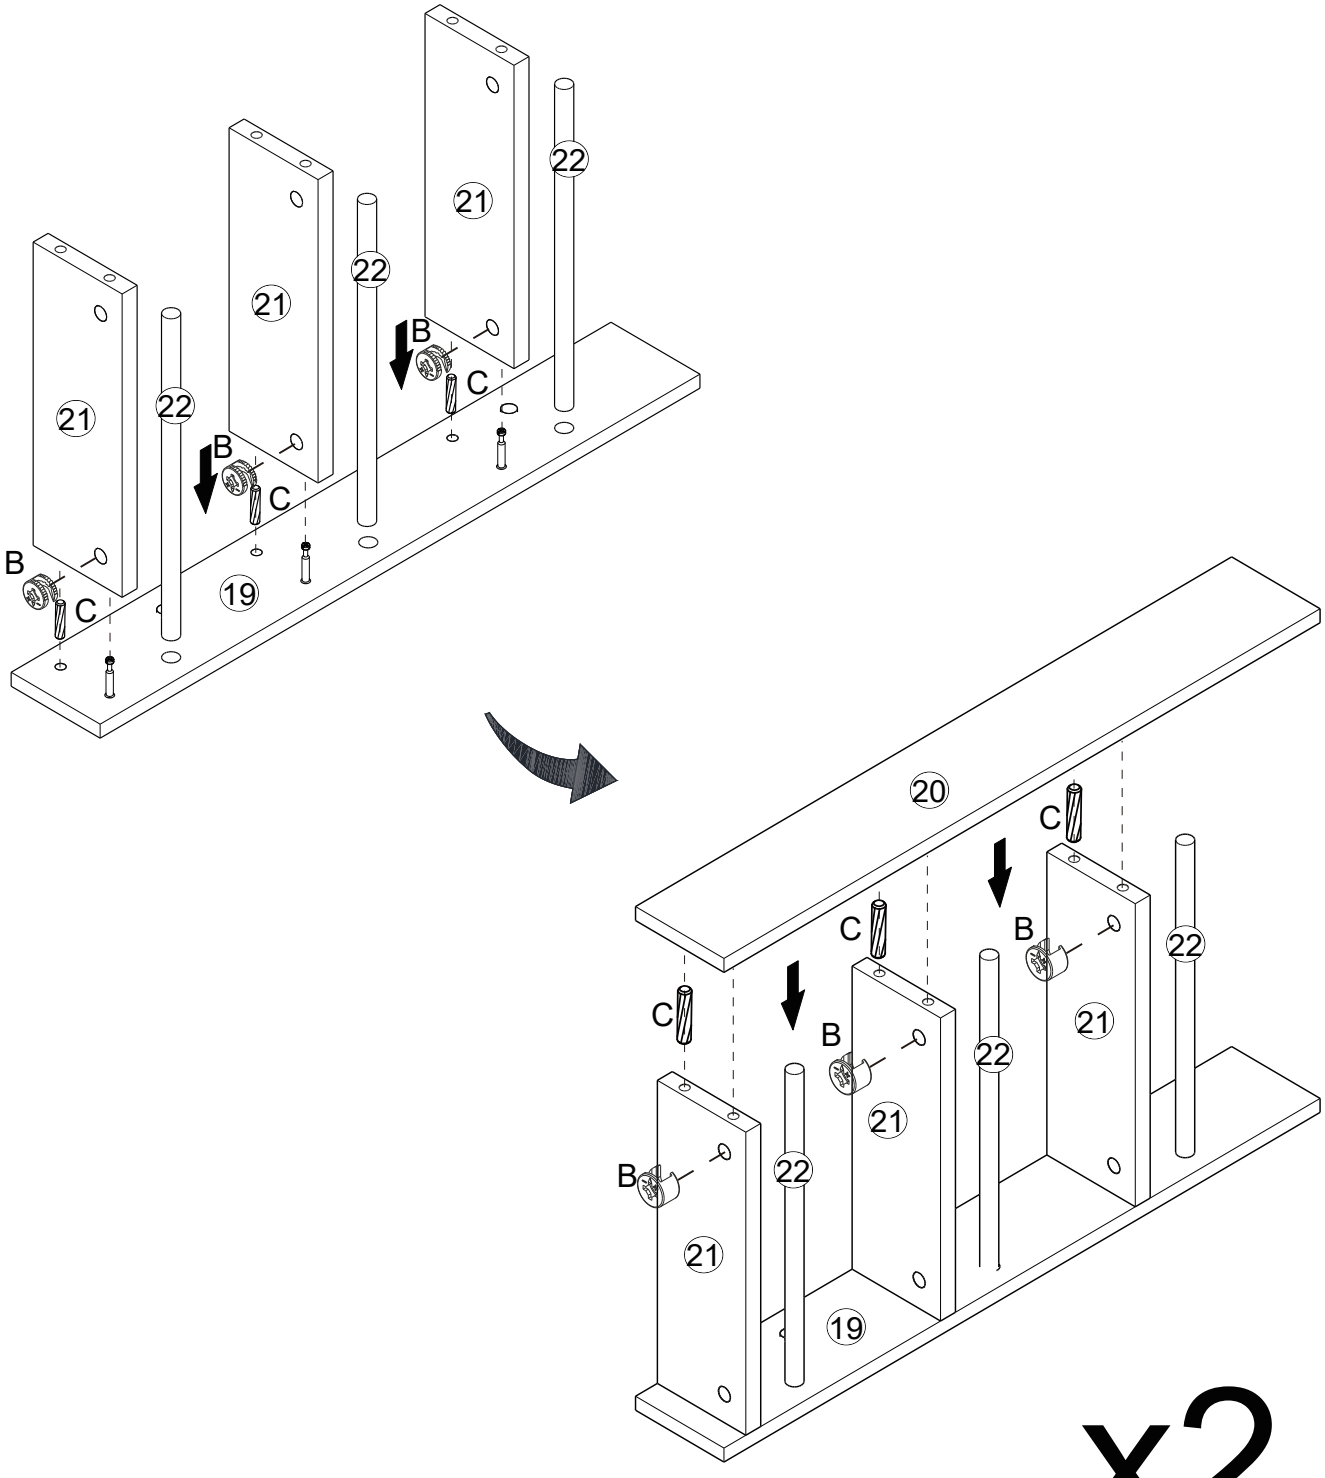

21
22
21
22
21
22
B
C
B
C
B
C
19
20
C
C
B
B
C
B
22
21
22
21
22
21
19
x2


STEP 30

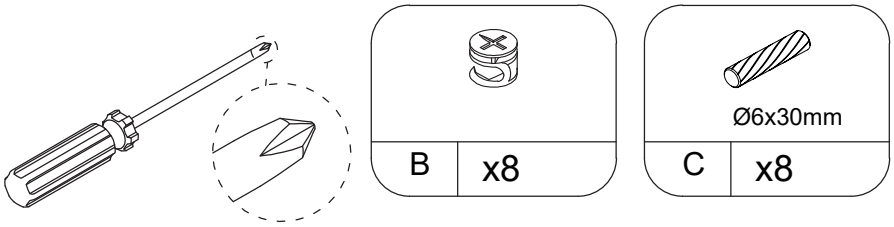


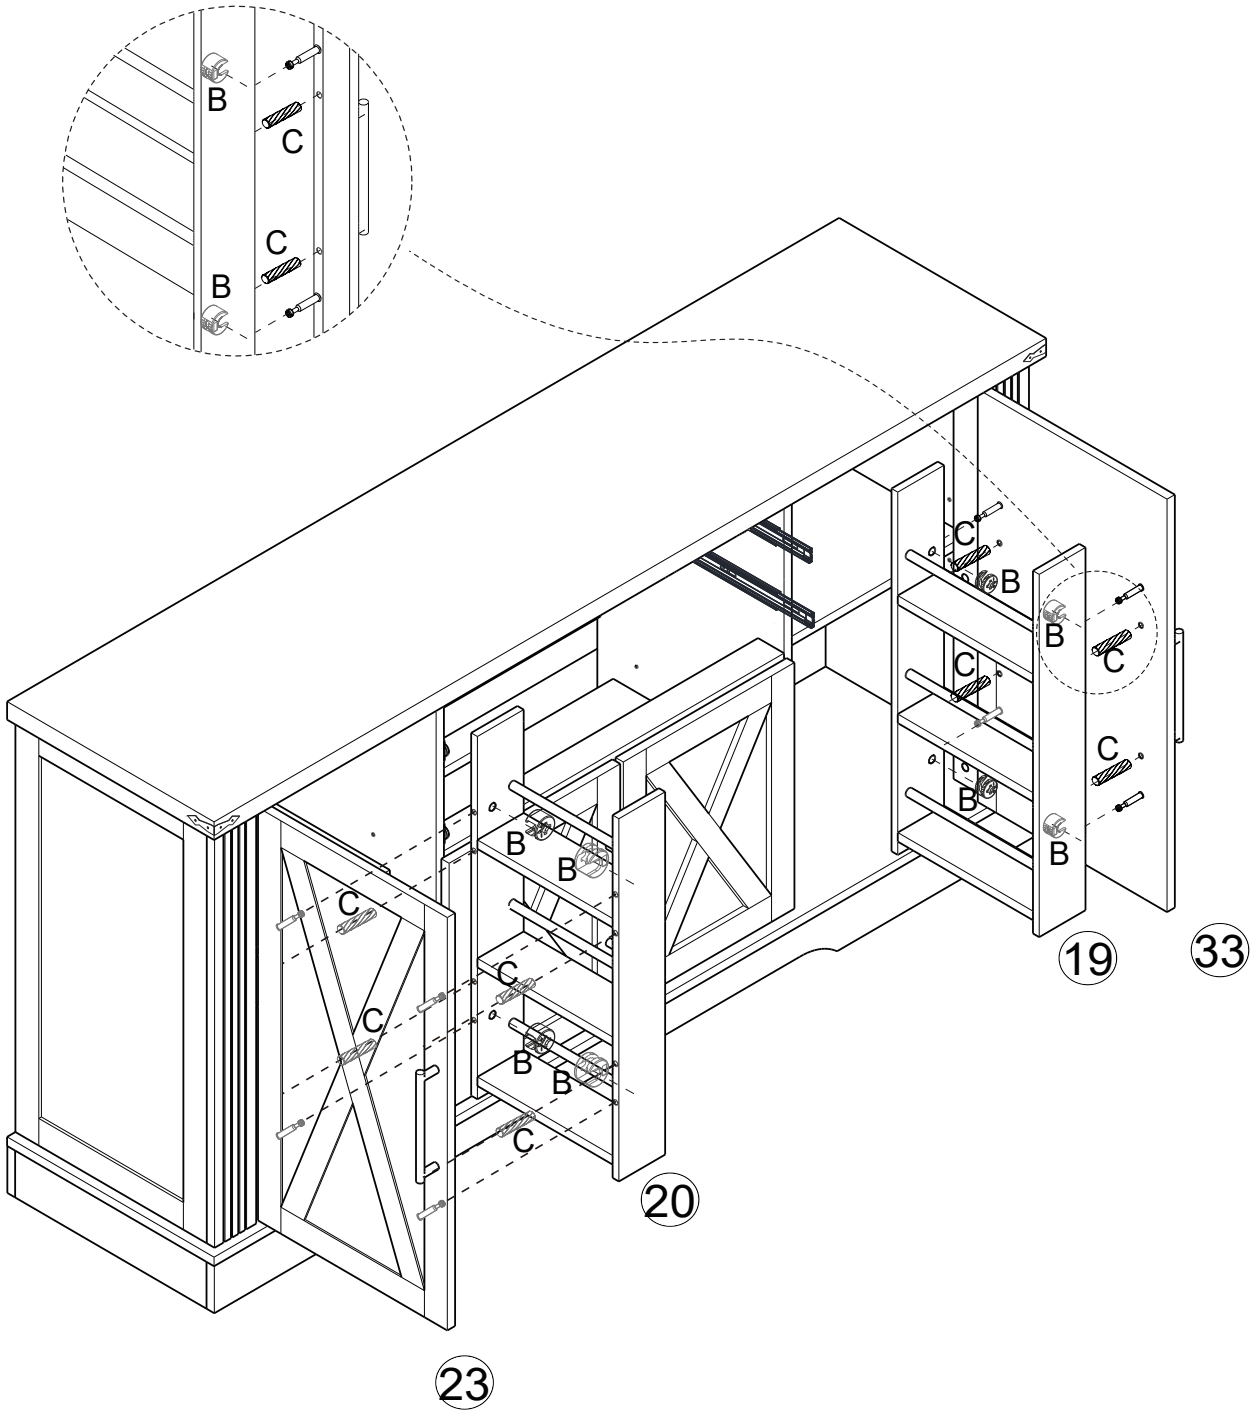



STEP 31

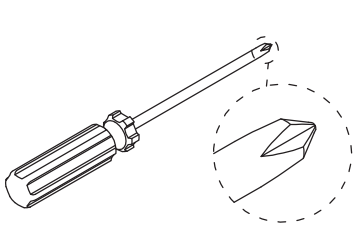

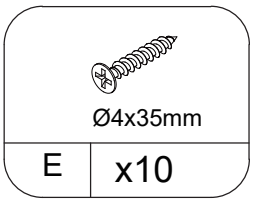

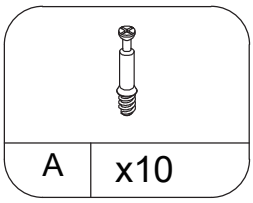


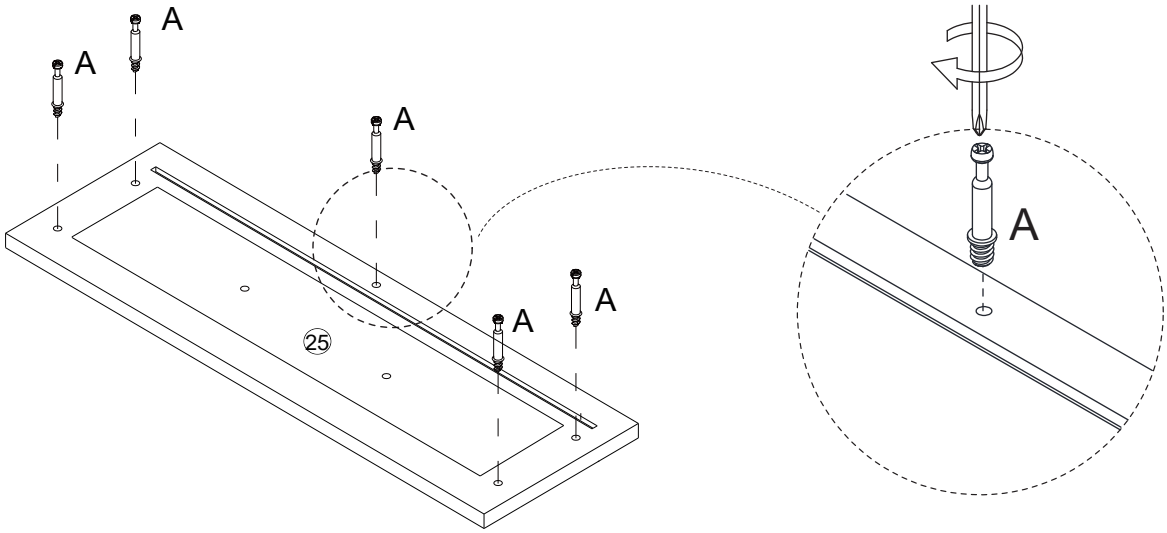


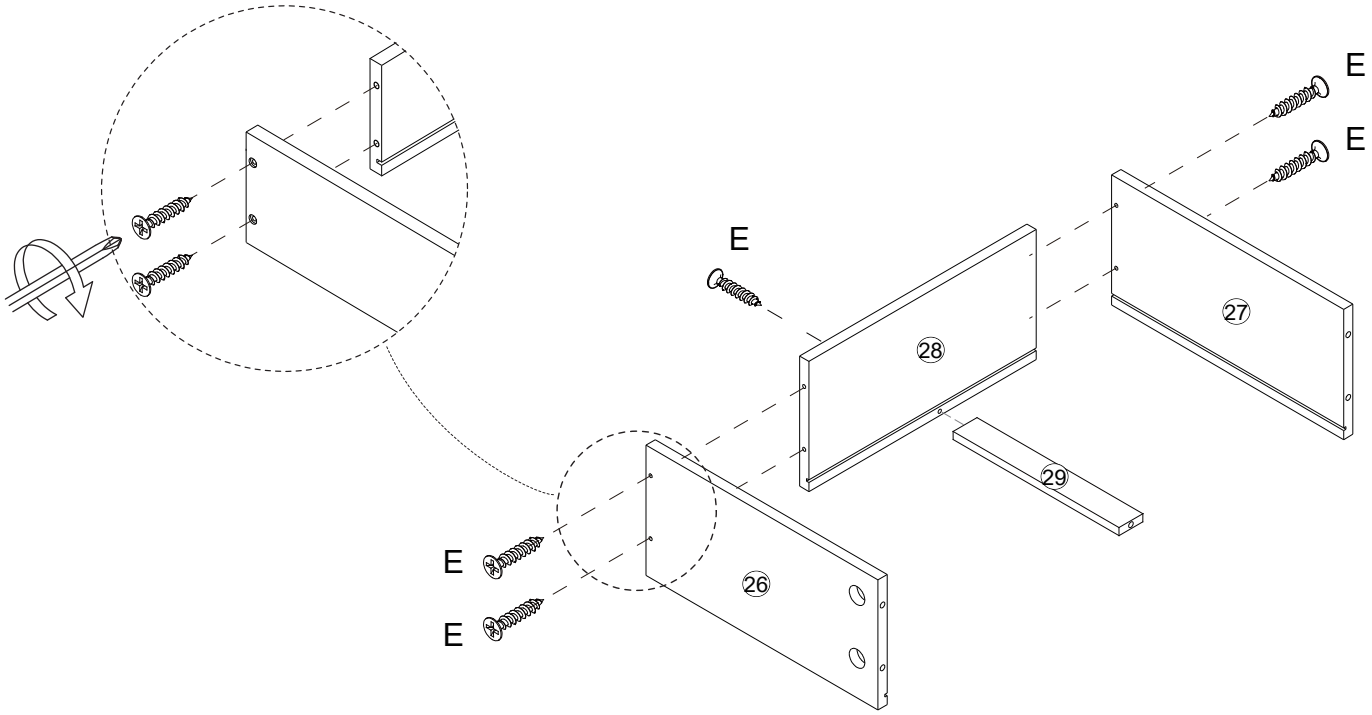

x2


STEP 32

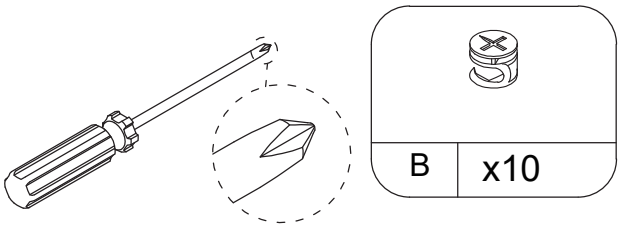


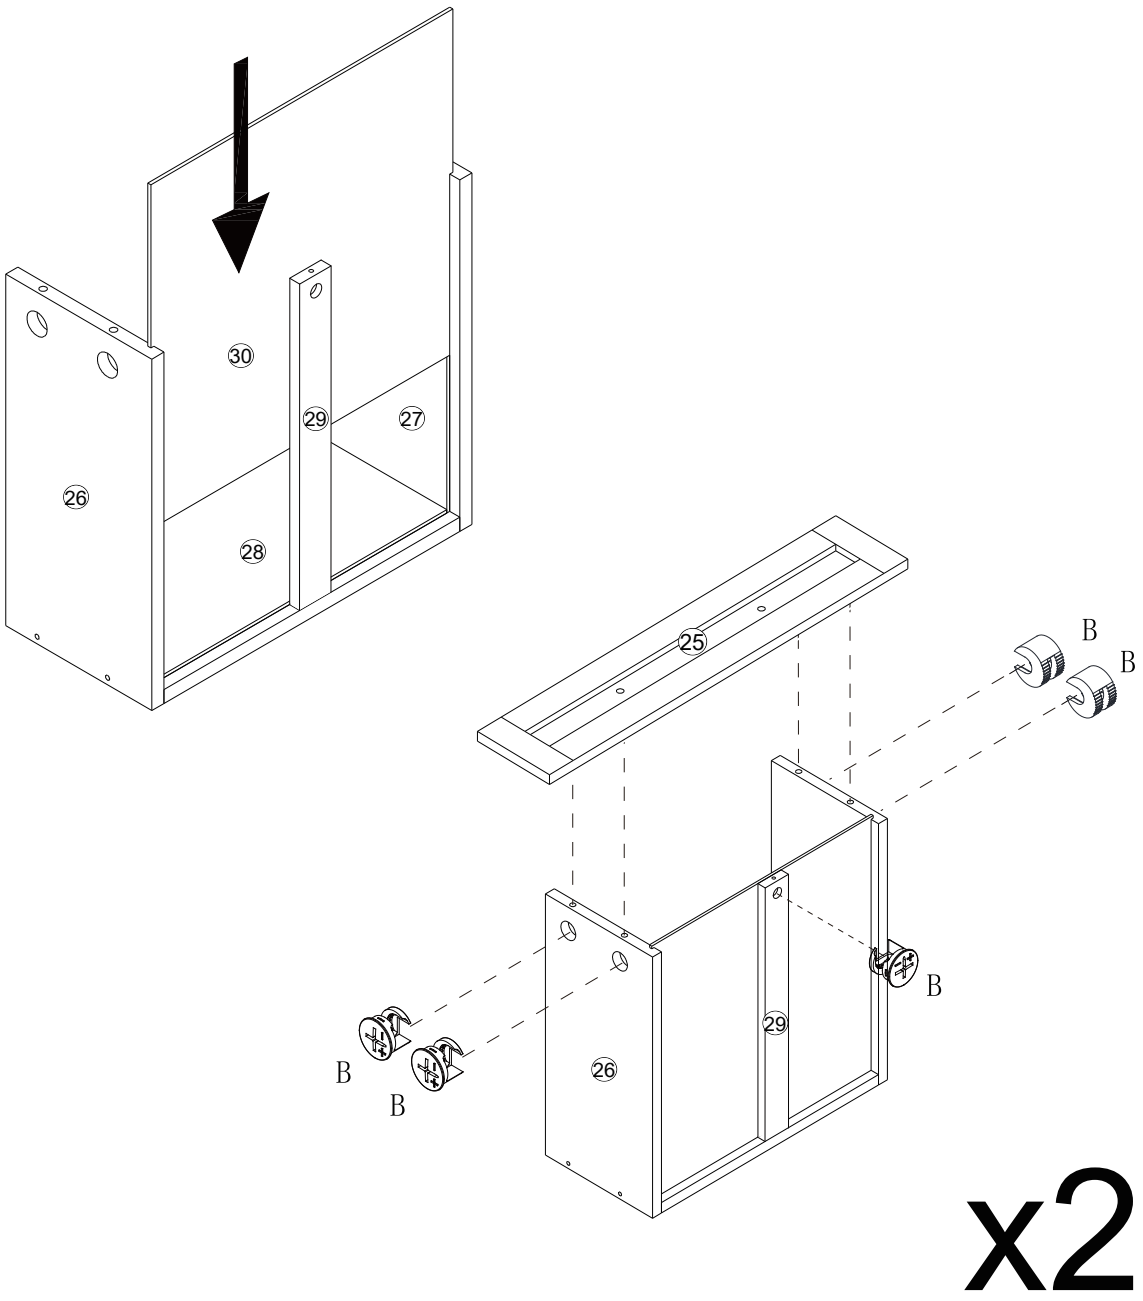


x2

STEP 33

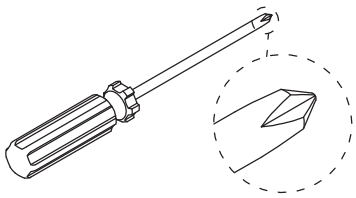





DL x4




D x12

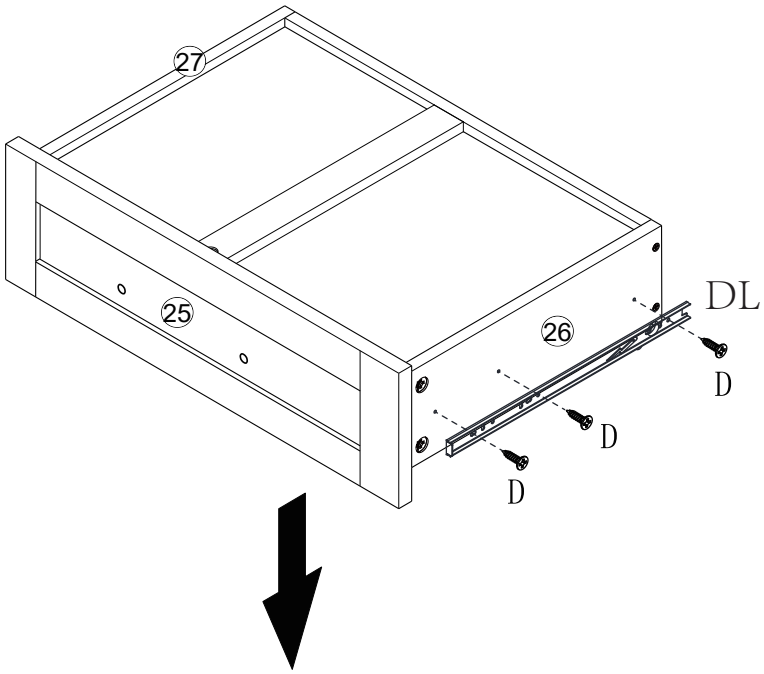

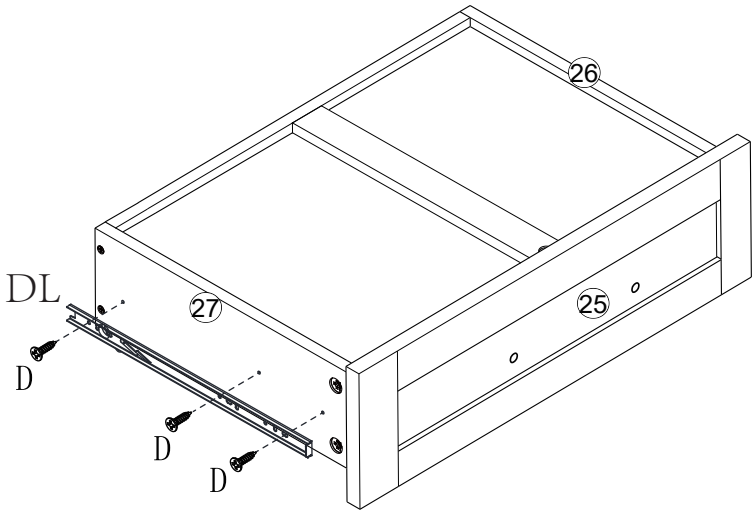



x2

REMARK:

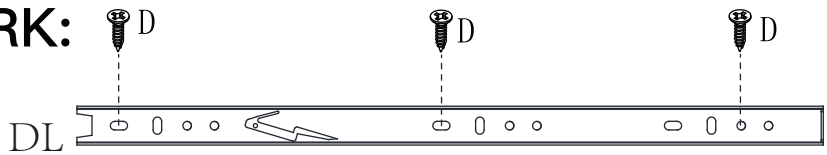


STEP 34

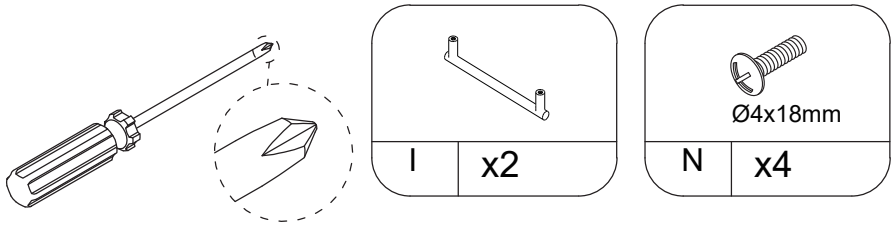


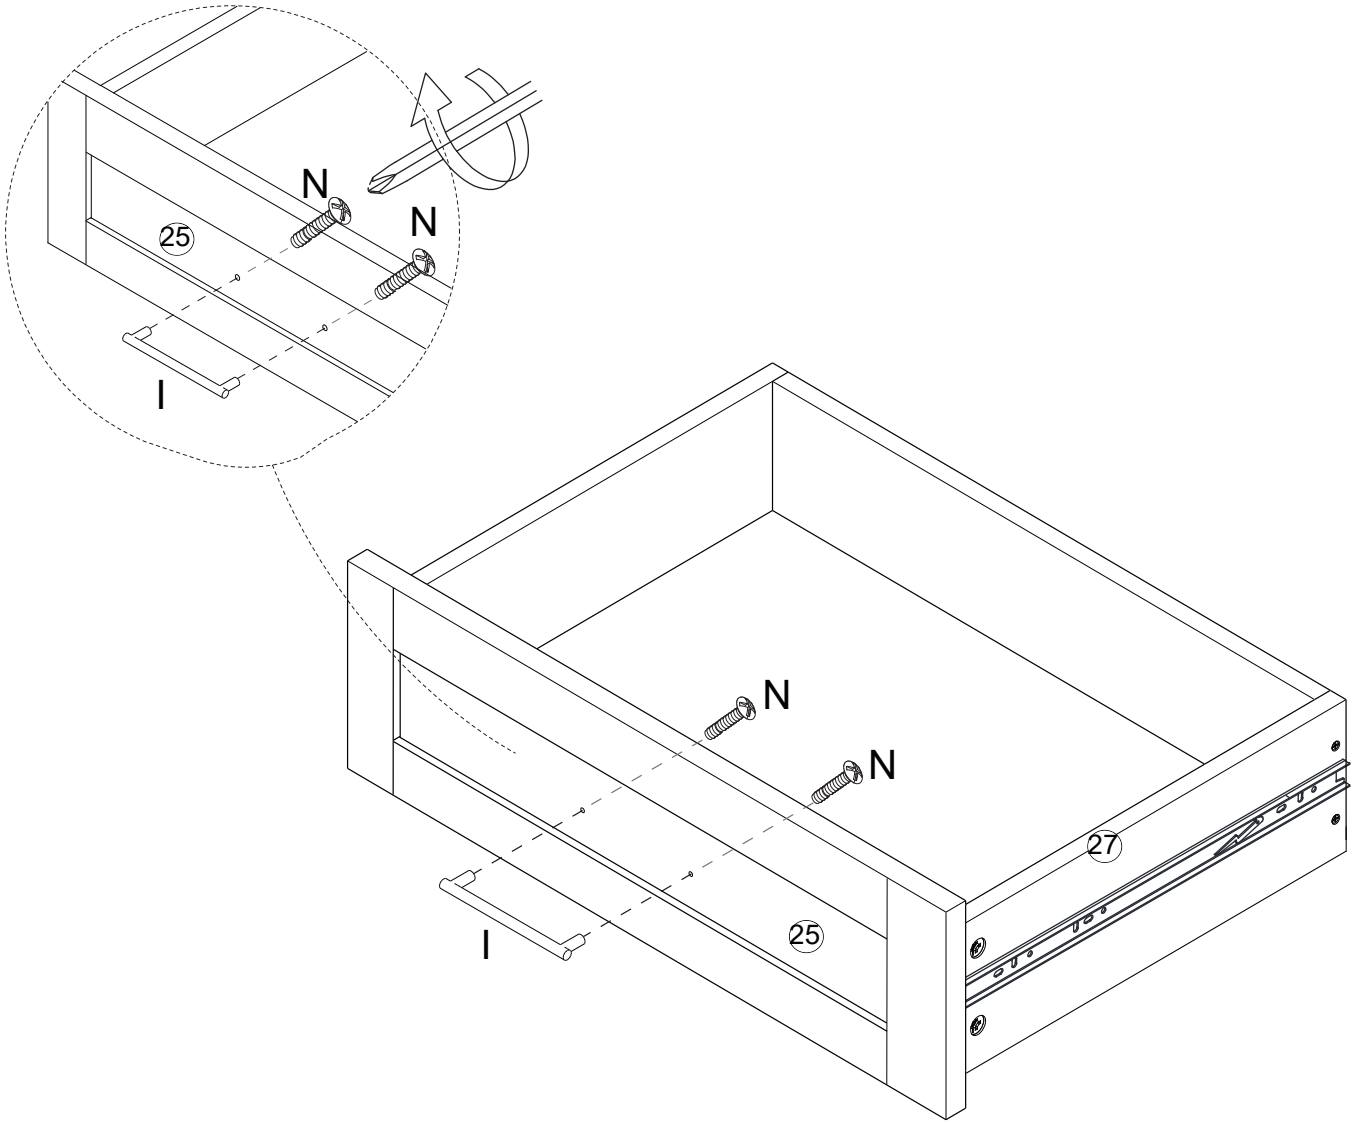



x2


STEP 35

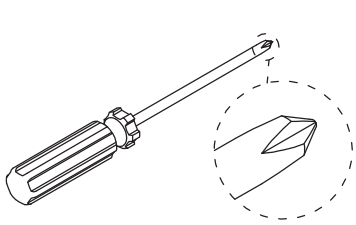

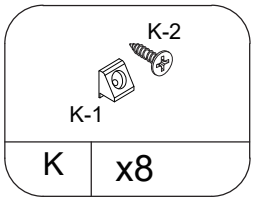


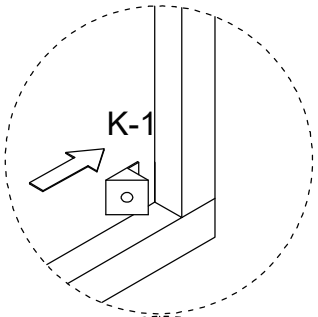


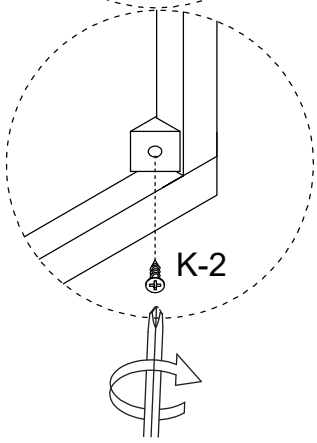


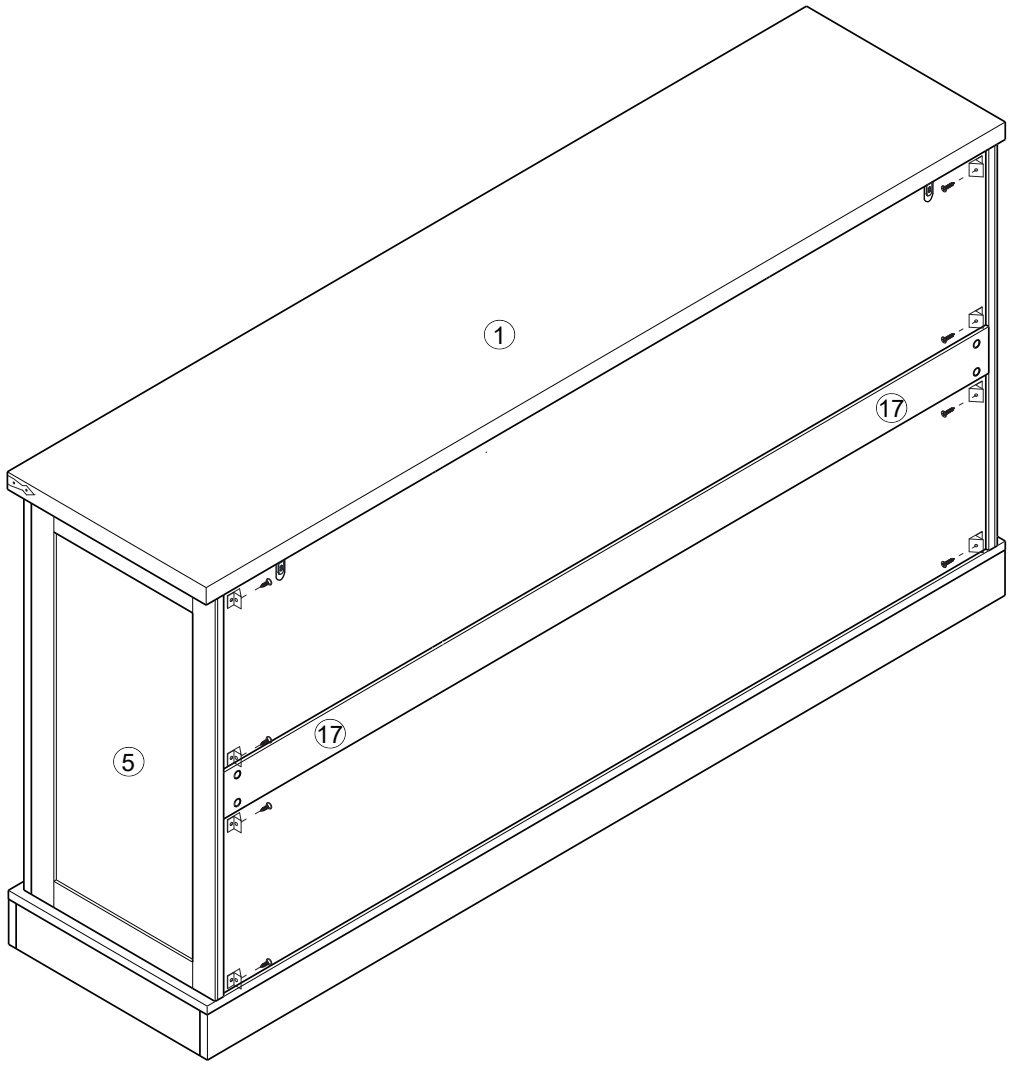

STEP 36

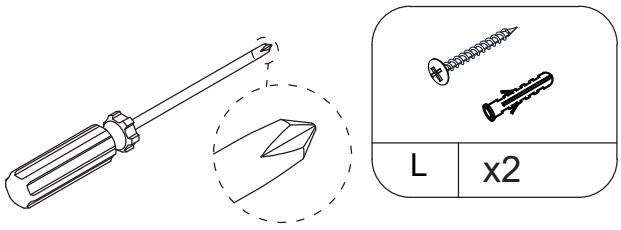

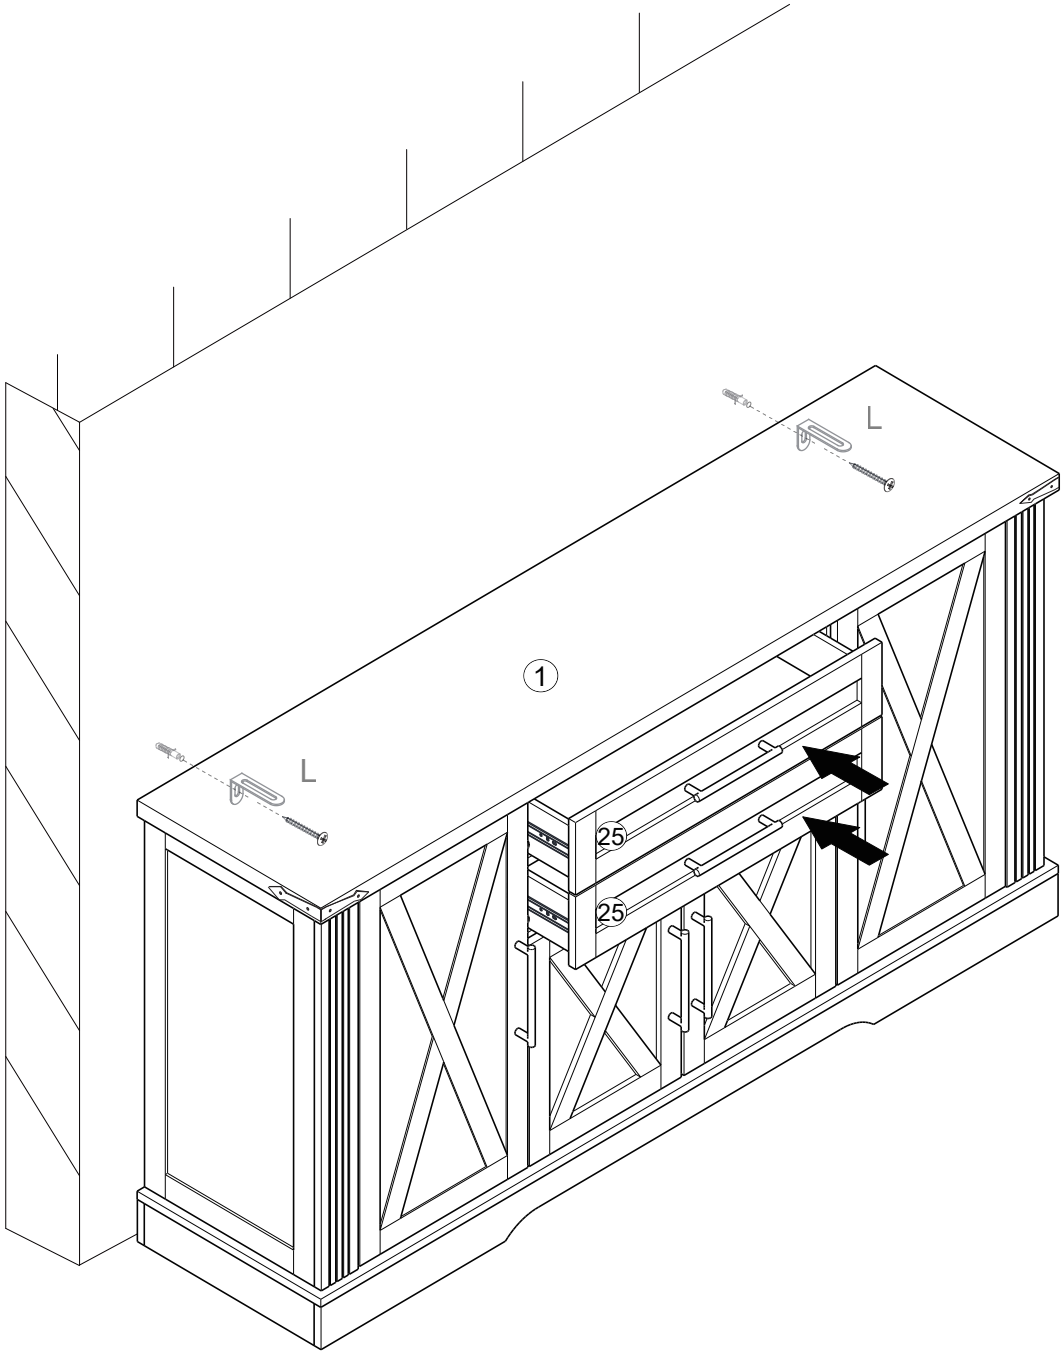

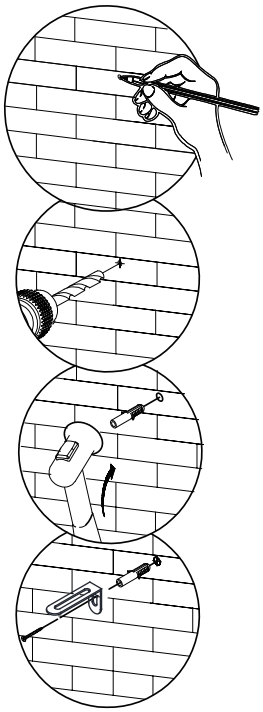

STEP 37

