

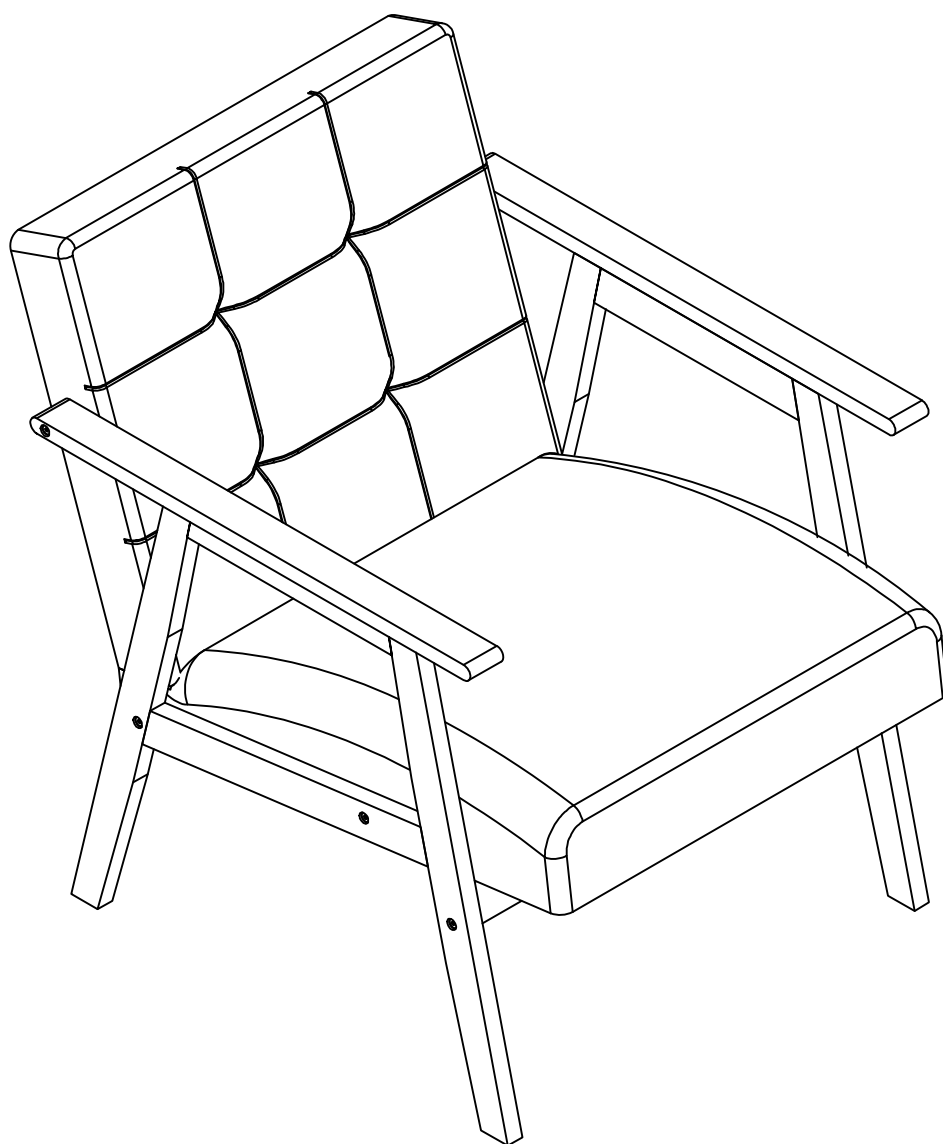
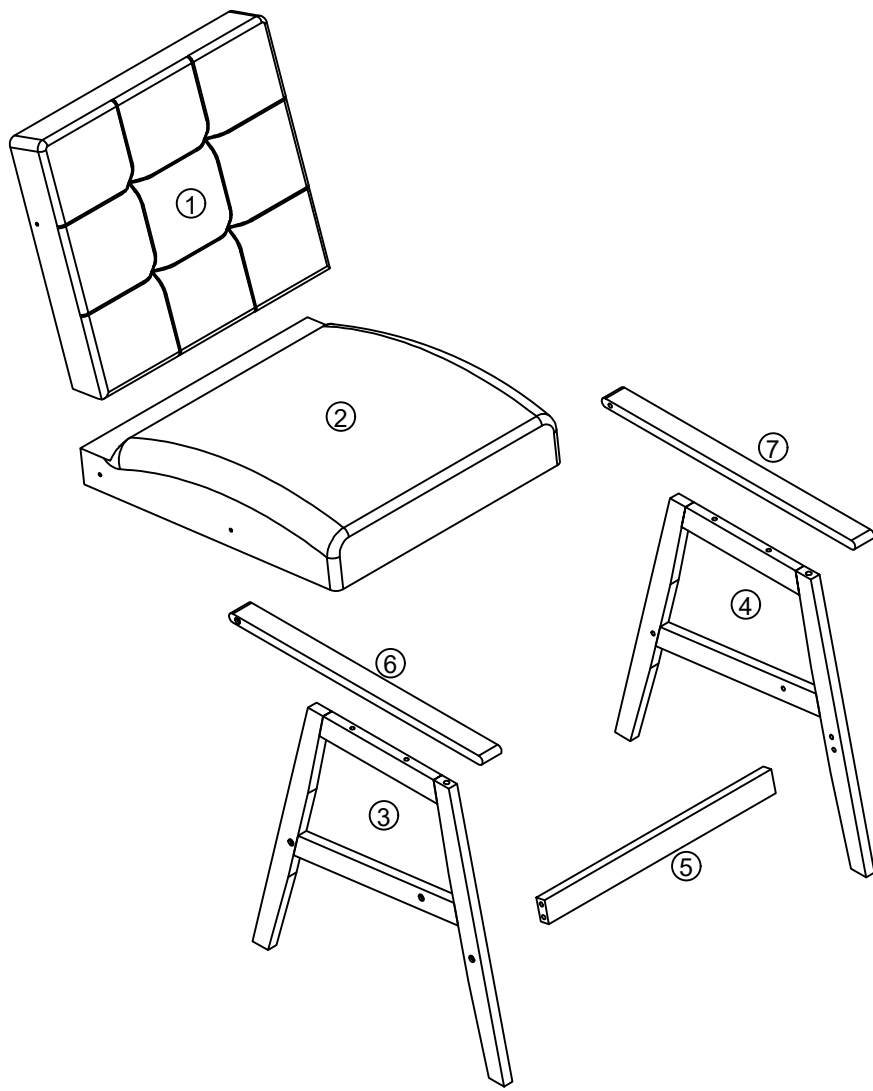
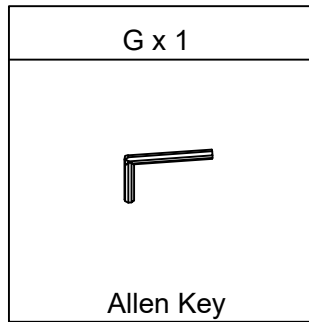
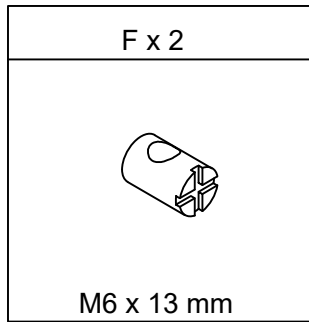
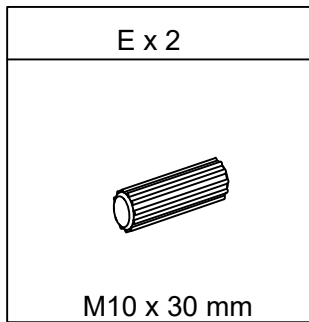
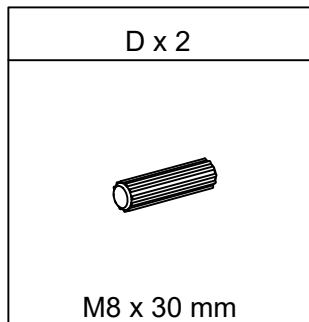
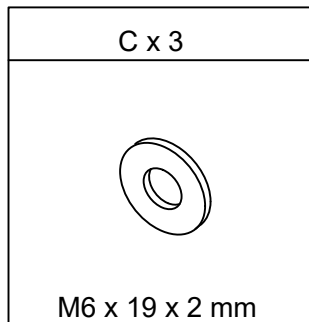


ASSEMBLY INSTRUCTION

MODEL : ACCENT CHAIR

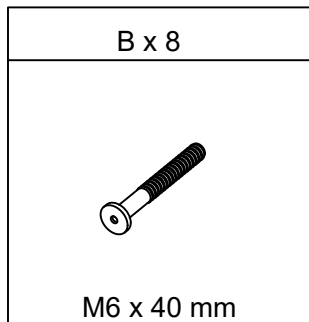

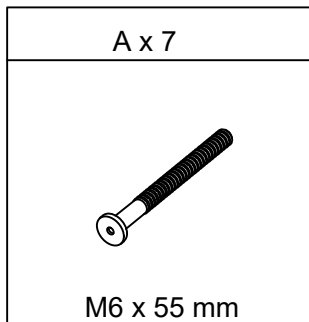


1

D x 2pcs



M8*30mm

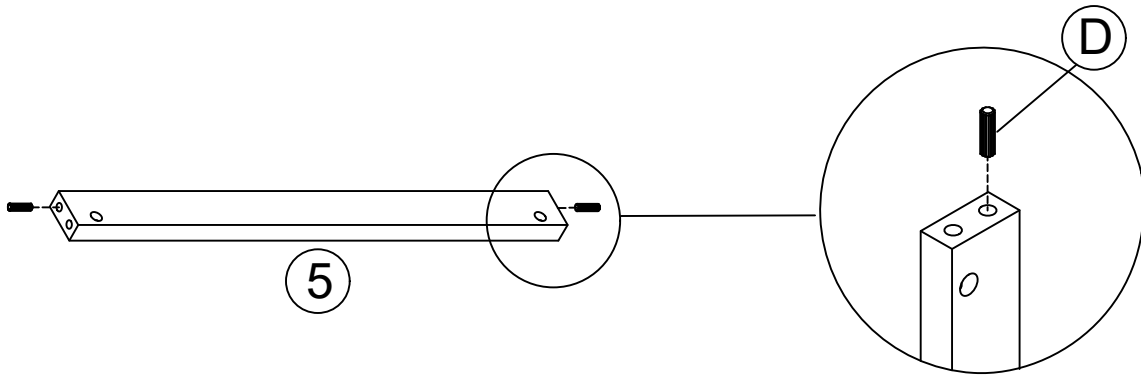

2

B x 4pcs



M6*40mm

E x 2pcs




M10*30mm

G



M4 Allen Key


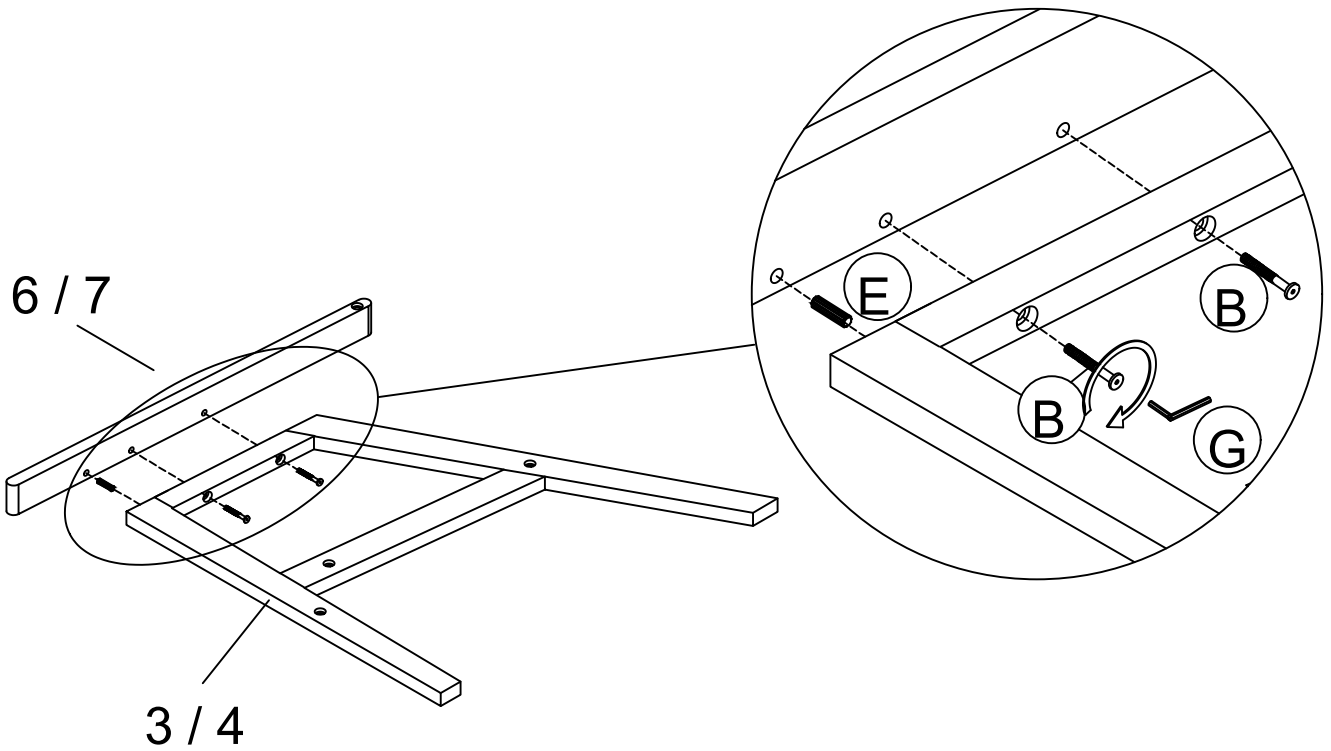


3

A x 3pcs
M6*55mm


C x 3pcs
M6*19*2mm

G
M4 Allen Key

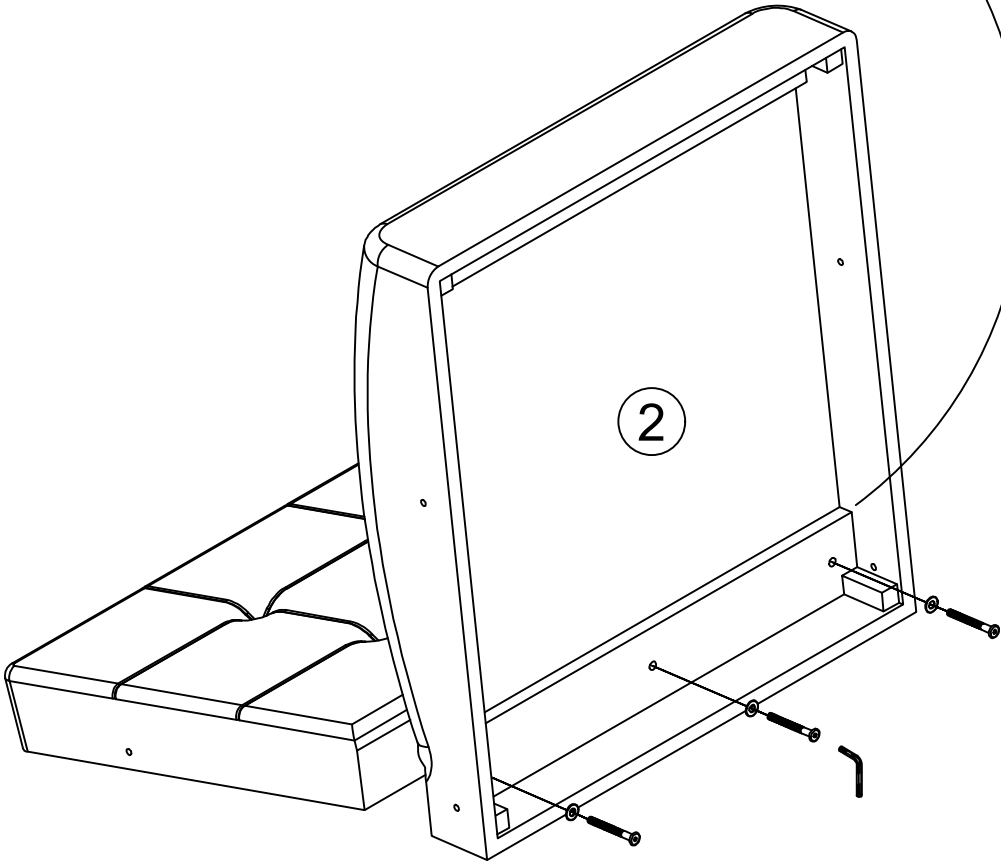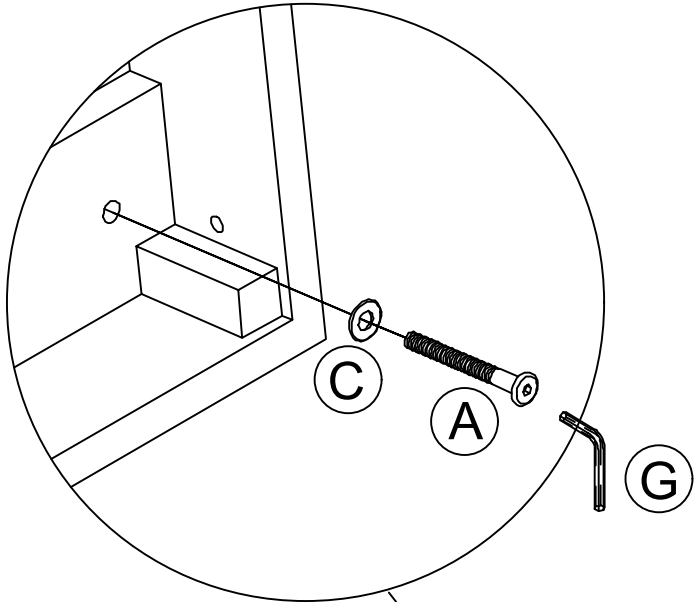



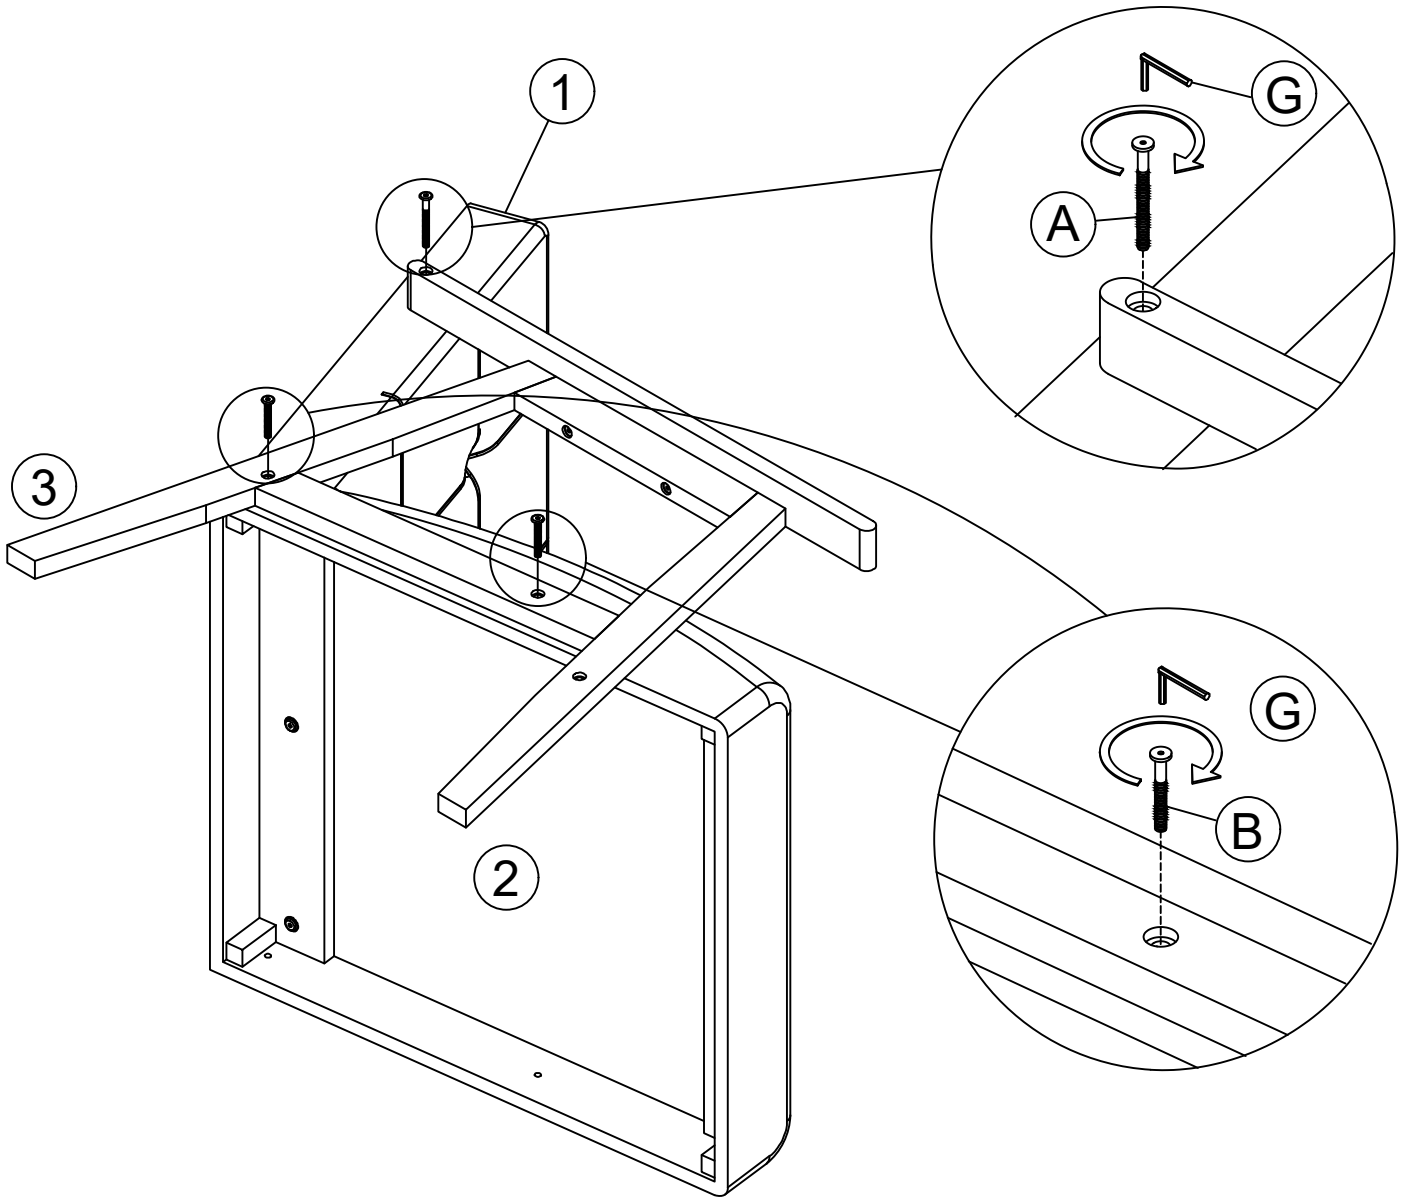





4


A x 1pcs  M6*55mm	B x 2pcs  M6*40mm		G  M4 Allen Key
--	--	--	--



5

A x 3pcs  M6*55mm	B x 2pcs  M6*40mm	F x 2pcs  M6*13mm		G  M4 Allen Key
--	--	--	--	--

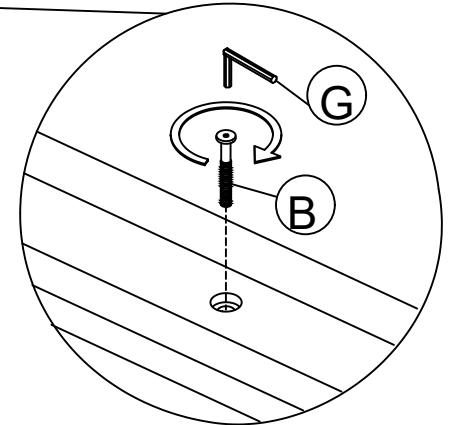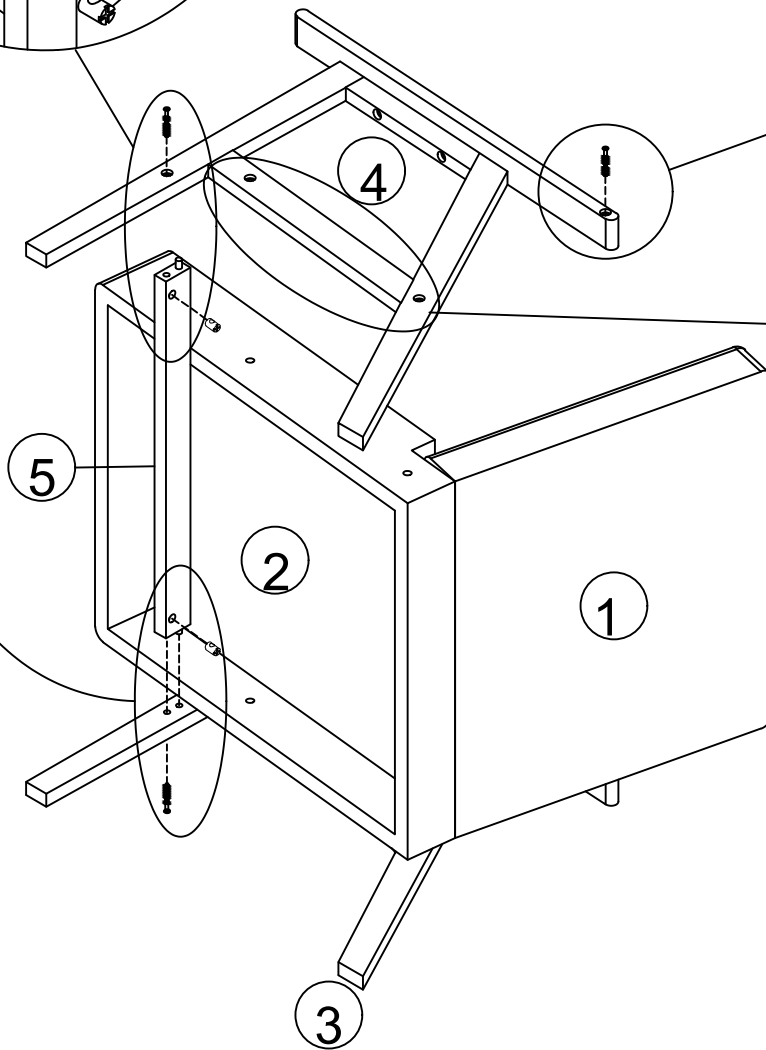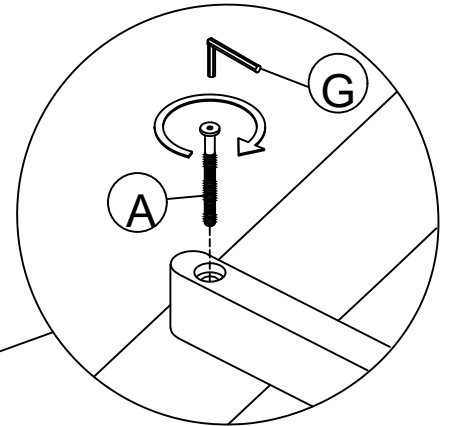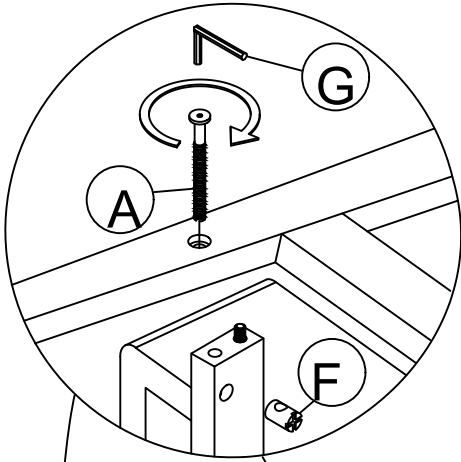

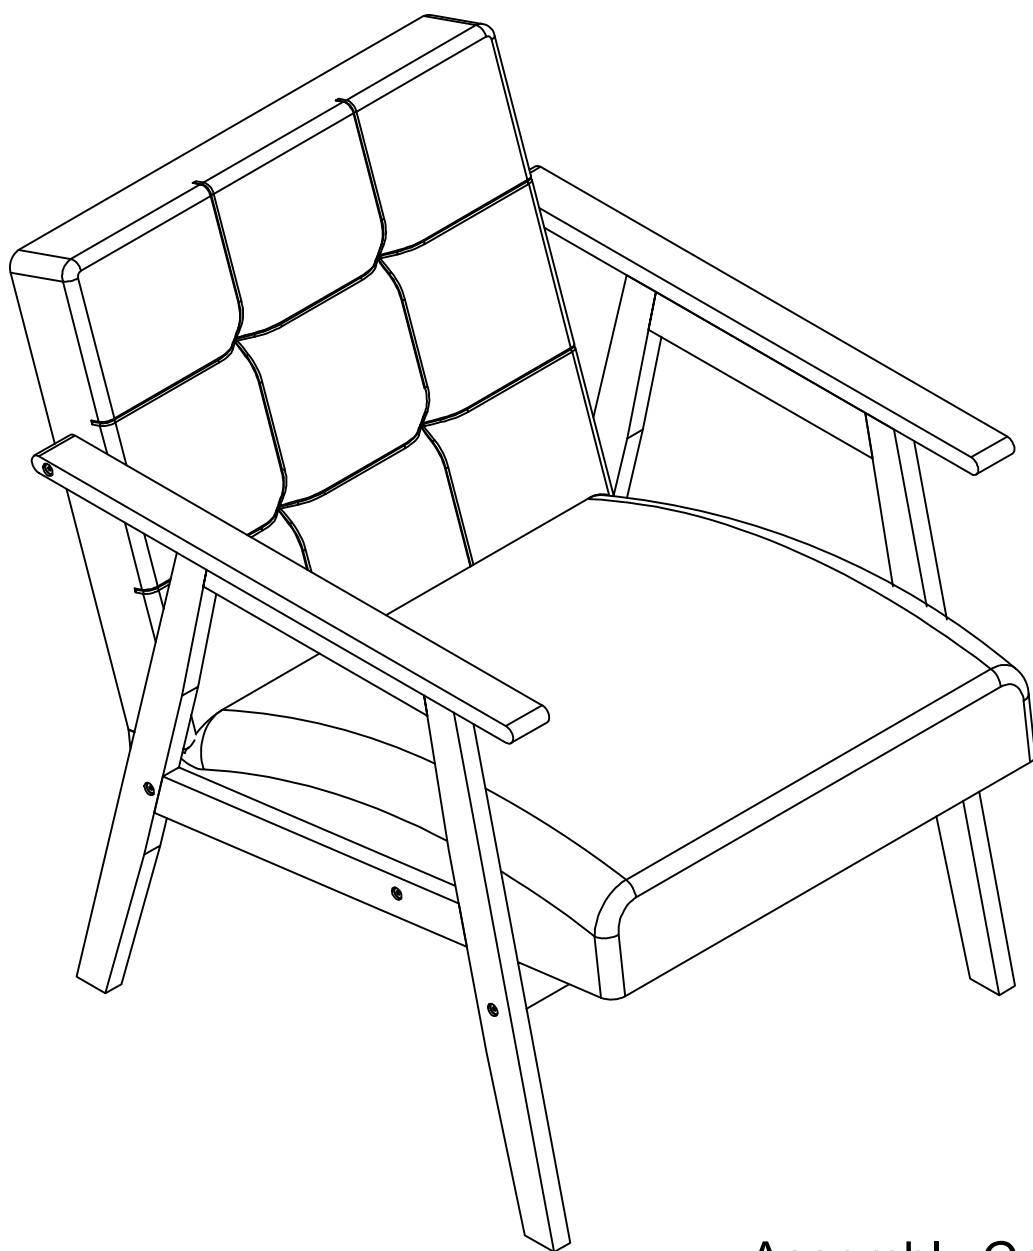

Assembly Complete