


# ASSEMBLY INSTRUCTIONS

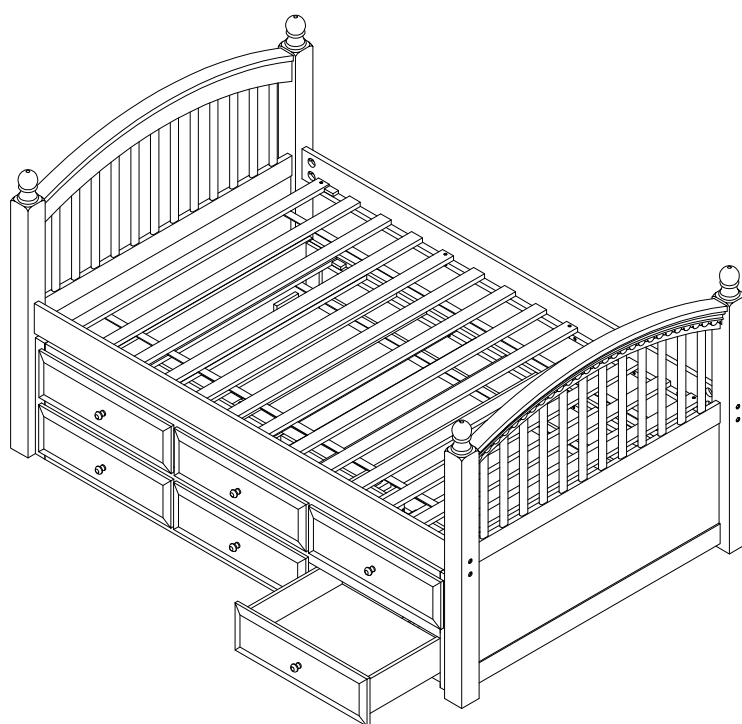

*Twin Daybed*

# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

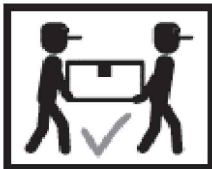

**ASSEMBLY TIME**

**30 MINUTES**

## PARTS IDENTIFICATION

### B1 (BOX 1)

**P BED END**




**2PCS**

**Q FINIAL**



**4PCS**

**M ROLL SLAT  
(13PCS)**



**2 SETS**

### B2 (BOX 2)

**N FRONT BED RAIL**



**1PC**


**O BACK BED RAIL**



**1PC**


### B3 (BOX 3)

**A DRAWER FRONT**



**3 PCS**

**B DRAWER BACK  
PANEL**



**3 PCS**

**C DRAWER LEFT  
PANEL**




**3 PCS**

**D DRAWER RIGHT  
PANEL**




**3 PCS**

**E DRAWER BOTTOM  
PANEL**



**3 PCS**

**F FEMALE DRAWER  
GLIDE**




**3 PCS**

**G MALE DRAWER  
GLIDE**




**3 PCS**

**H TRUNDLE FRONT  
PANEL**



**1PC**

**I TRUNDLE BACK  
PANEL**



**1PC**

**J DRAWER SUPPORT  
RAIL**



**1PC**

## NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

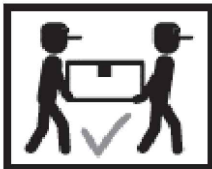

**ASSEMBLY TIME**

**30 MINUTES**

## PARTS IDENTIFICATION


### (BOX 3)

**K TRUNDLE  
LEFT PANEL**



**1PC**

**L TRUNDLE  
RIGHT PANEL**



**1PC**

**X KNOB WITH SCREW**



**6SETS**

## HARDWARE IDENTIFICATION

### (BOX3) - HARDWARE PACK

**1 ALLEN WRENCH  
(4MM - BLK)**



**1PC**

**2 LONG BOLT  
(1/4 x 100mm - BLK)**



**8PCS**

**3 SHORT BOLT  
(1/4 x 35mm - BLK)**



**12PCS**

**4 HALF ROUND NUT  
(1/4MM - BLK)**




**12PCS**

**5 FLAT HEAD SREW  
(4 x 30mm - BLK)**



**88PCS**

**6 MEDIUM BOLT  
(1/4 x 50mm - BLK)**



**4PCS**

**7 WOOD DOWEL  
(10 x 40mm)**




**4PCS**

## NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS

## STEP 1

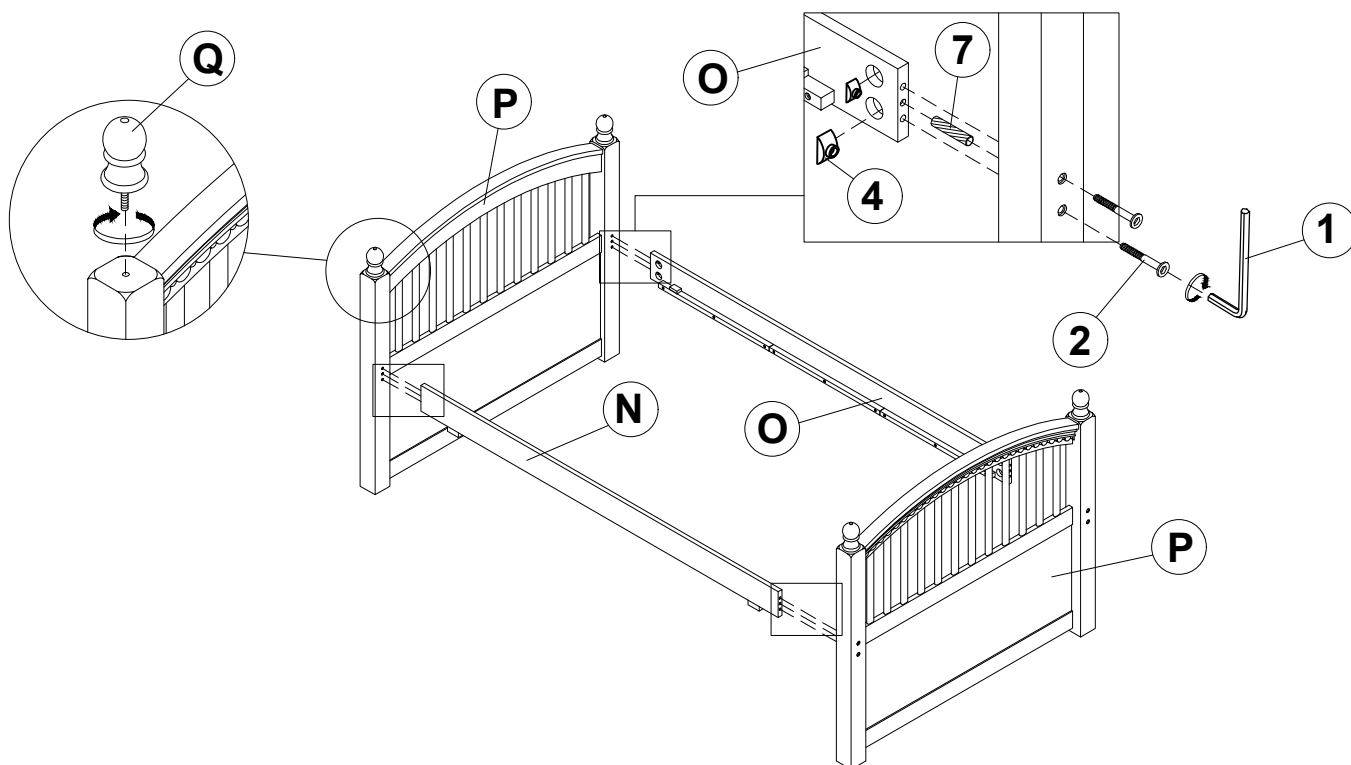


## STEP 2

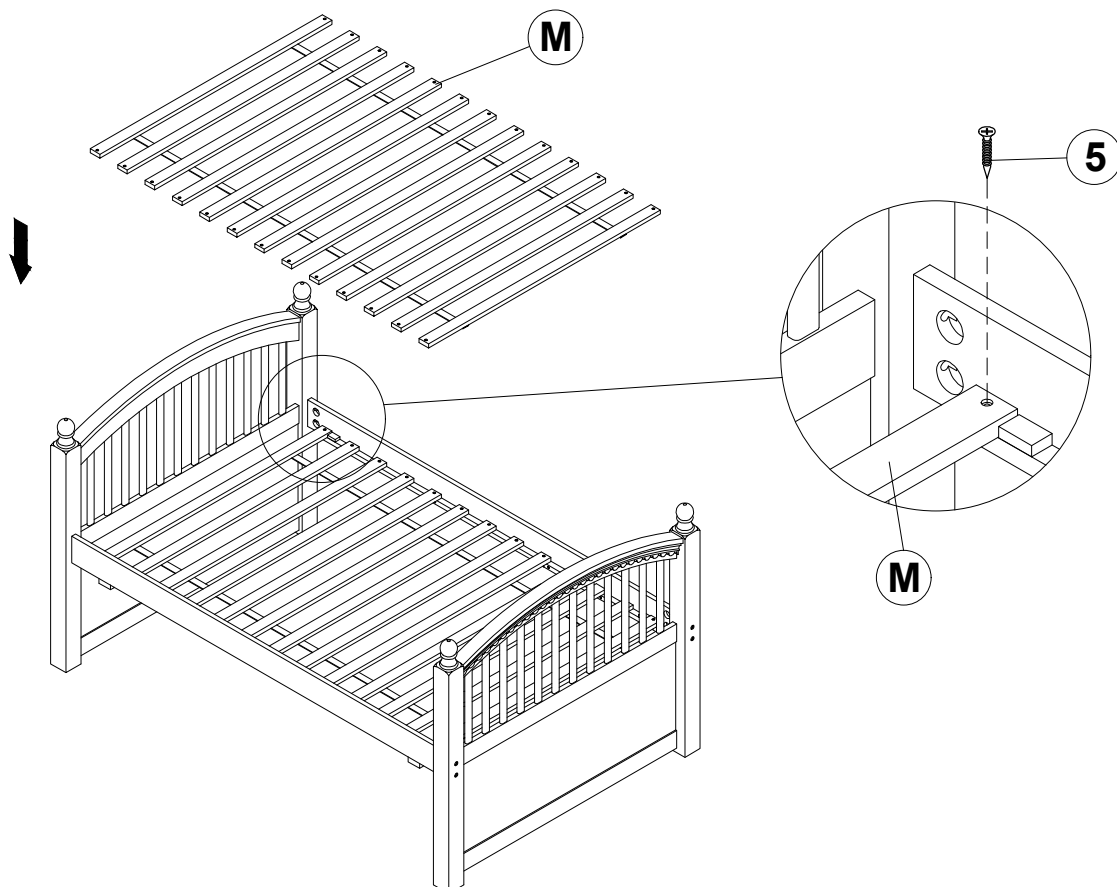


ASSEMBLY INSTRUCTIONS

STEP 3

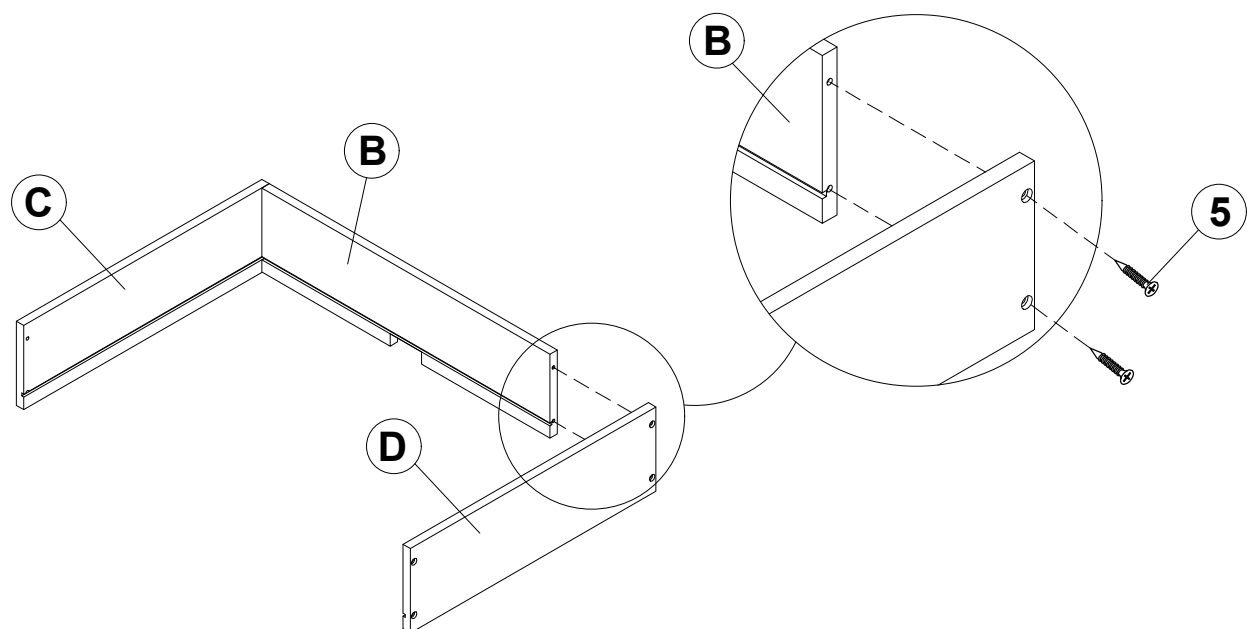


STEP 4

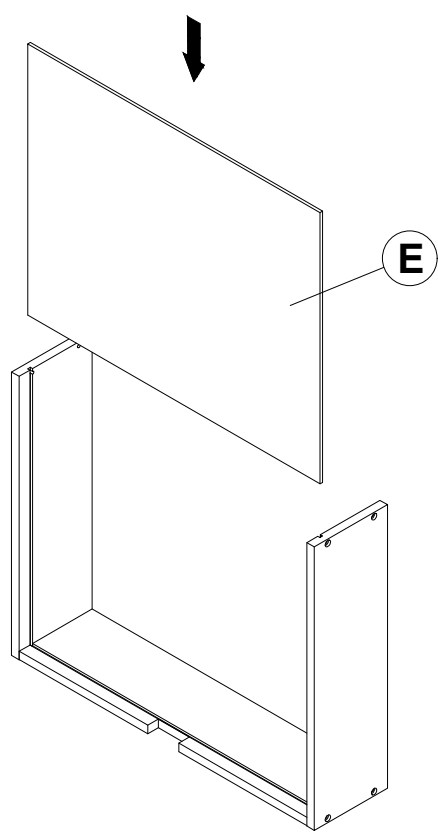


# ASSEMBLY INSTRUCTIONS


## STEP 5

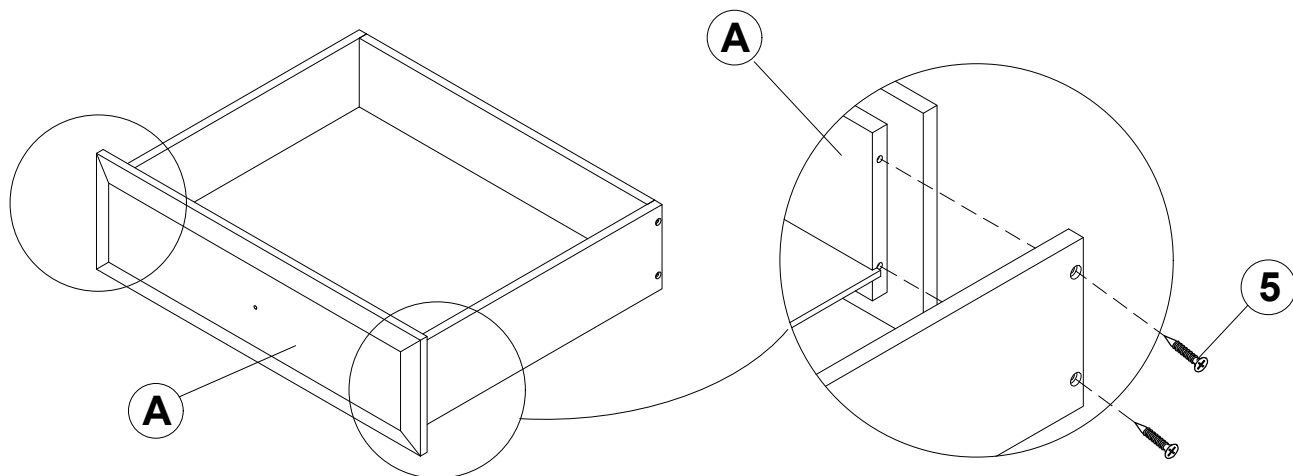

## STEP 6

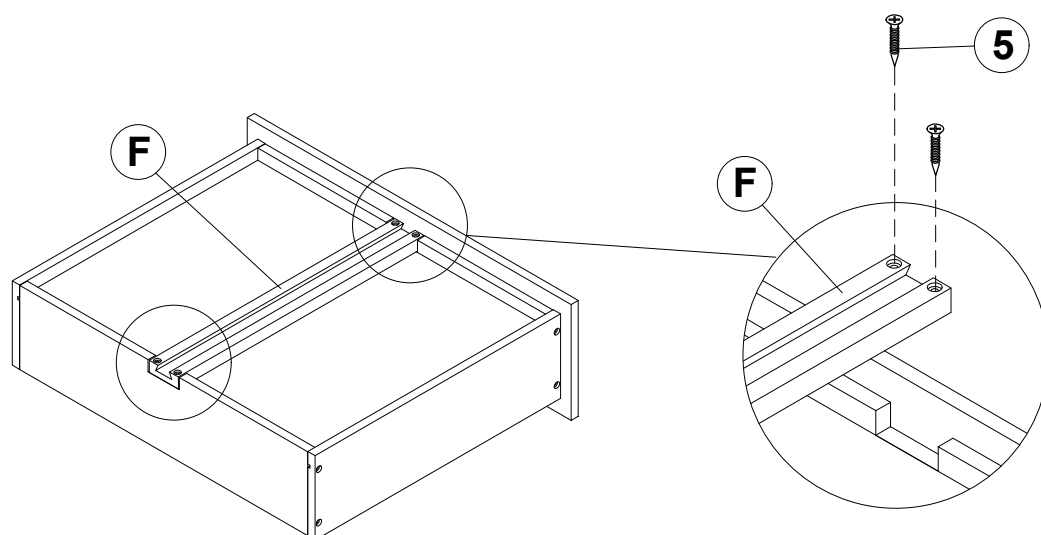


## STEP 7

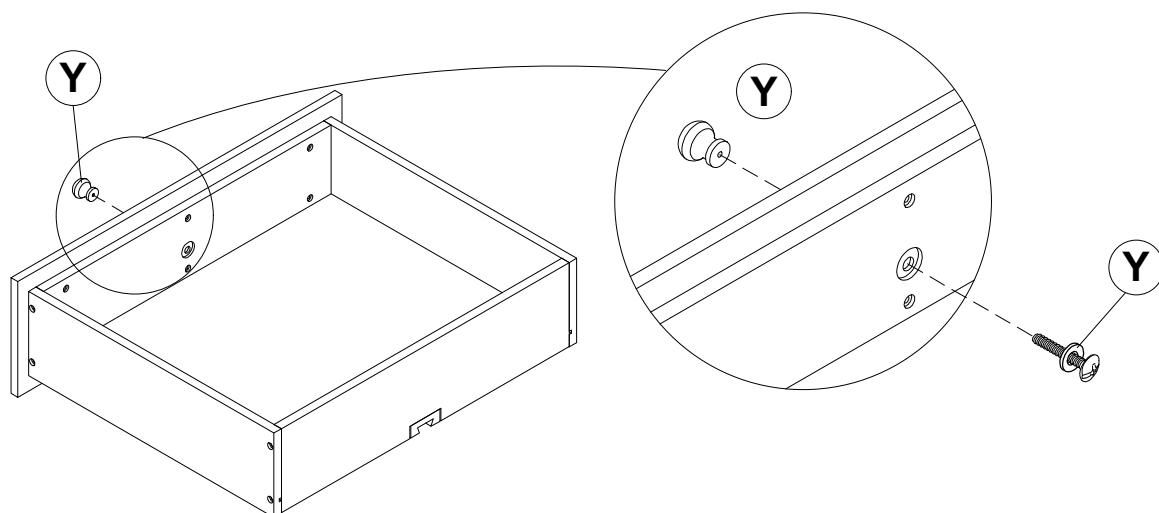


ASSEMBLY INSTRUCTIONS


STEP 8

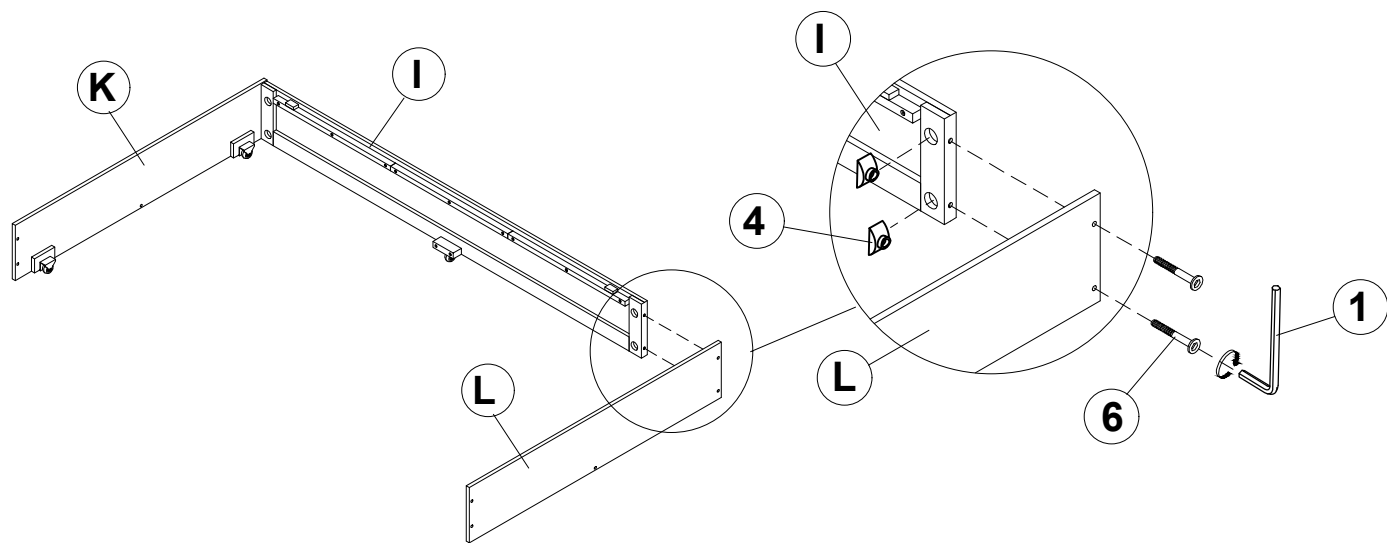

STEP 9

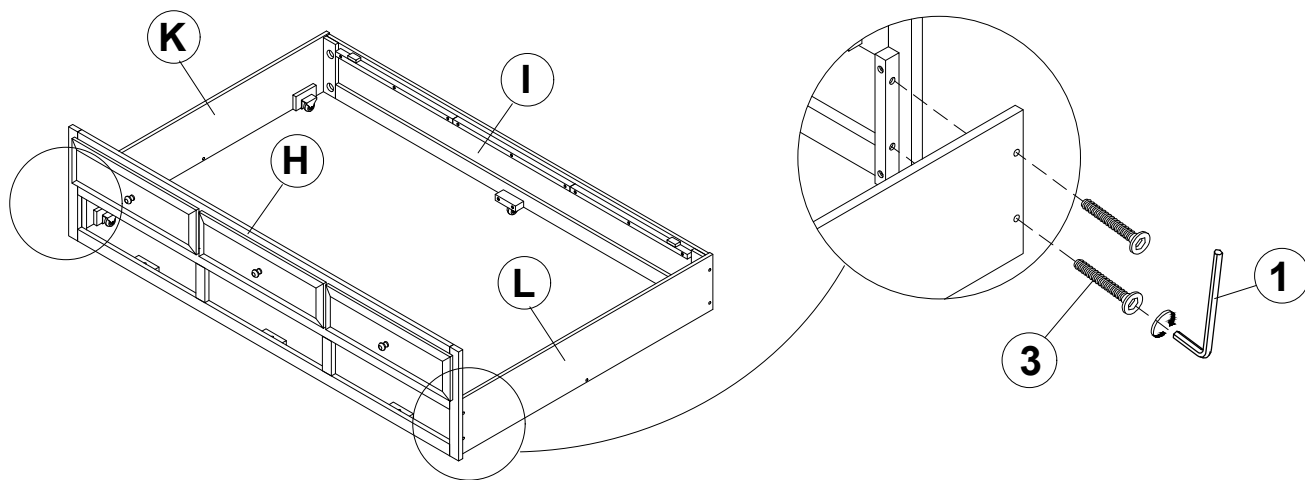


STEP 10

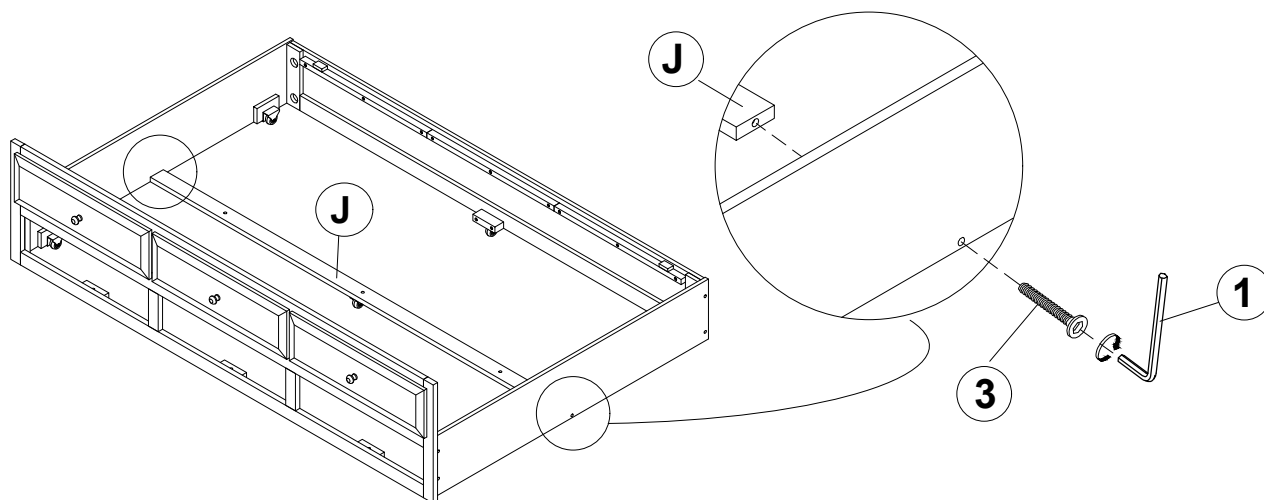


ASSEMBLY INSTRUCTIONS

STEP 11

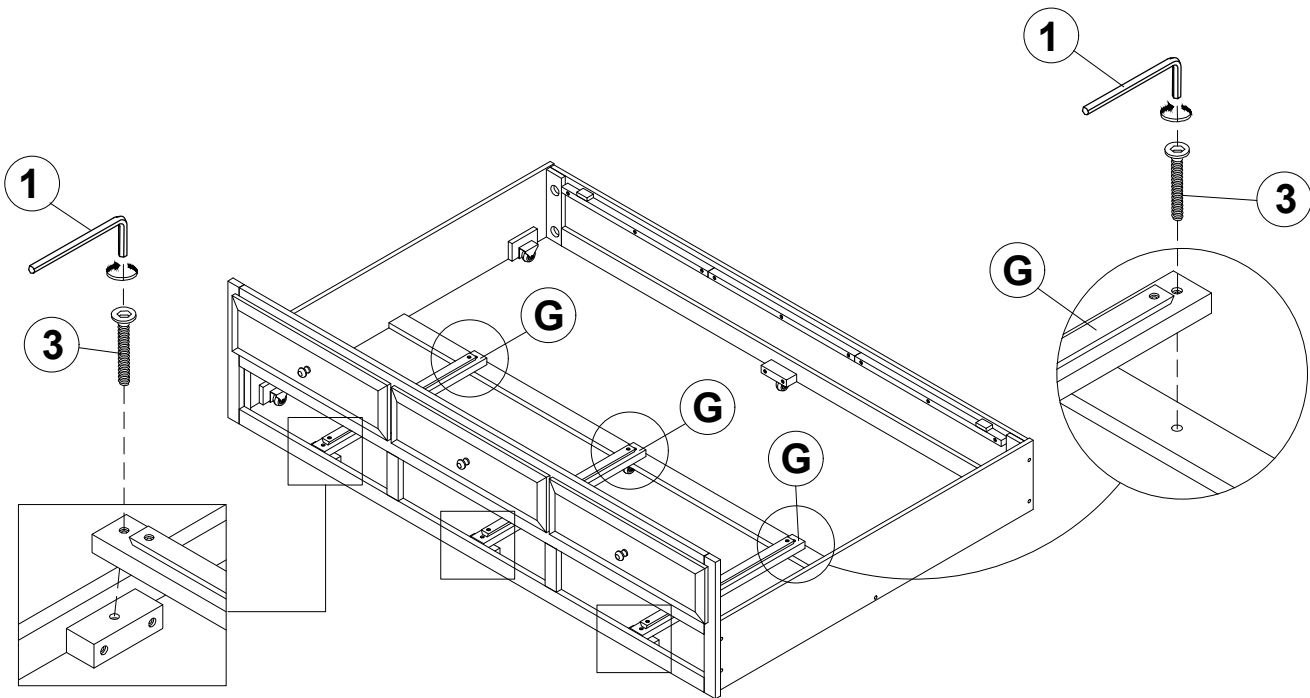


STEP 12

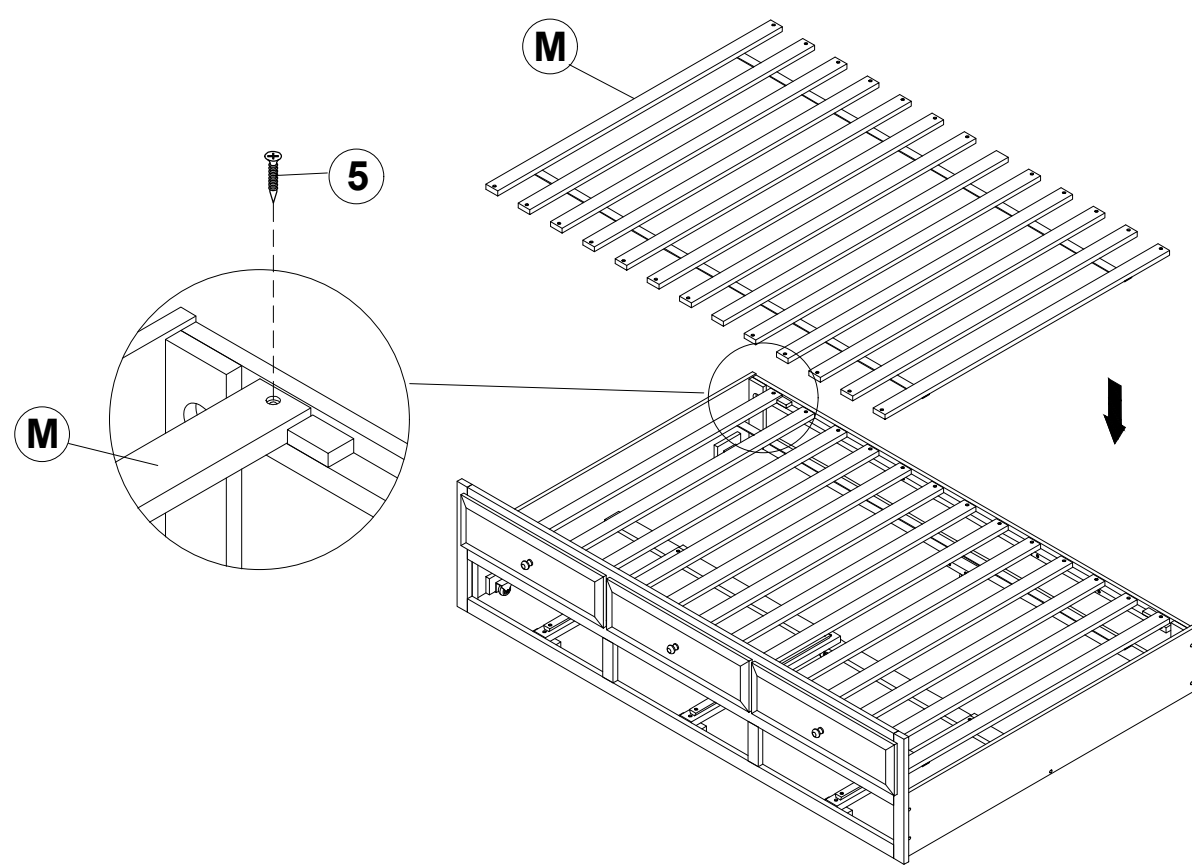




# ASSEMBLY INSTRUCTIONS


## STEP 13

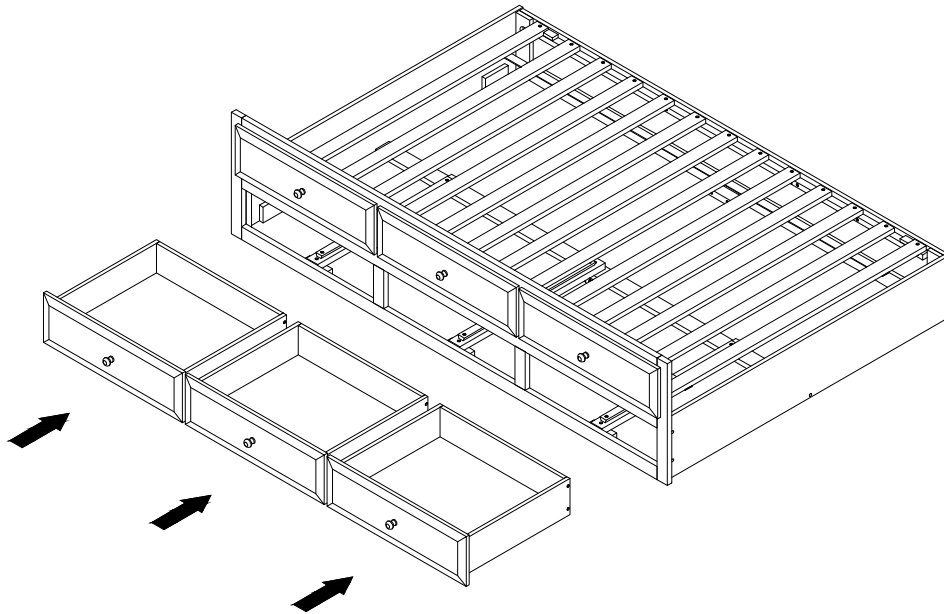

## STEP 14 COMPLETE

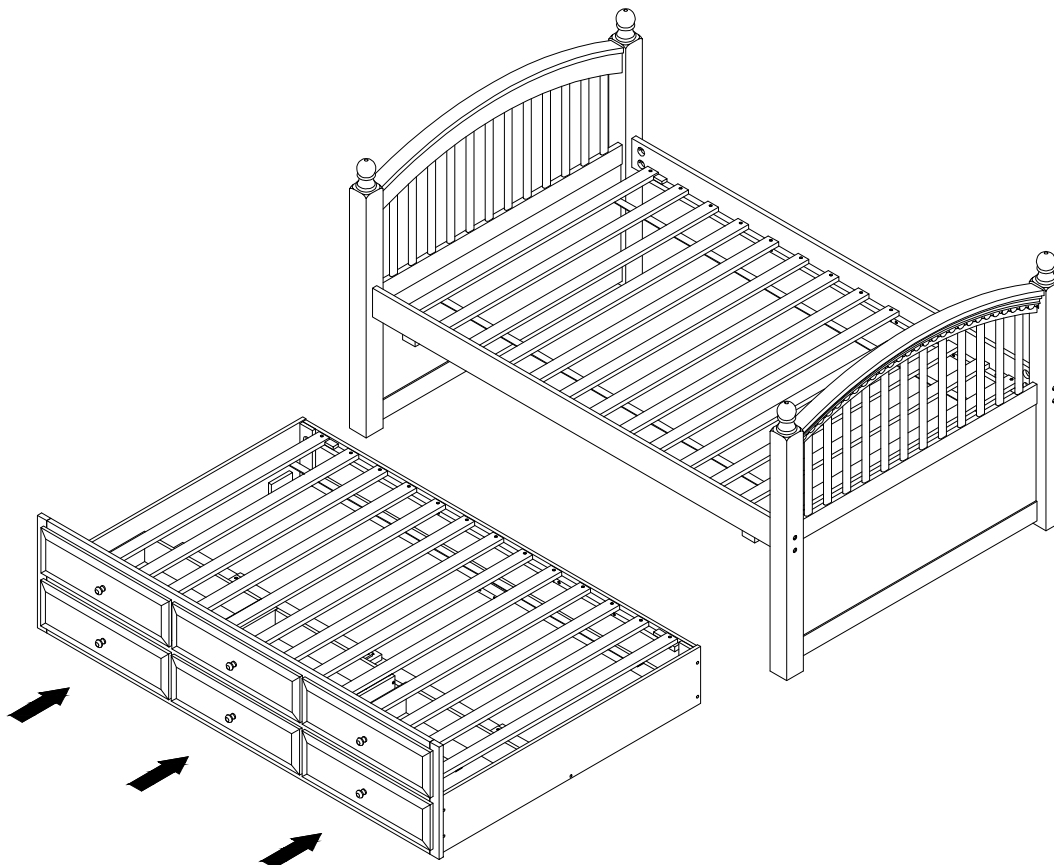

**Inner Size: 76.75"W X 39.50"D**  
**Trundle Inner Size: 75.50"W X 39.50"D**

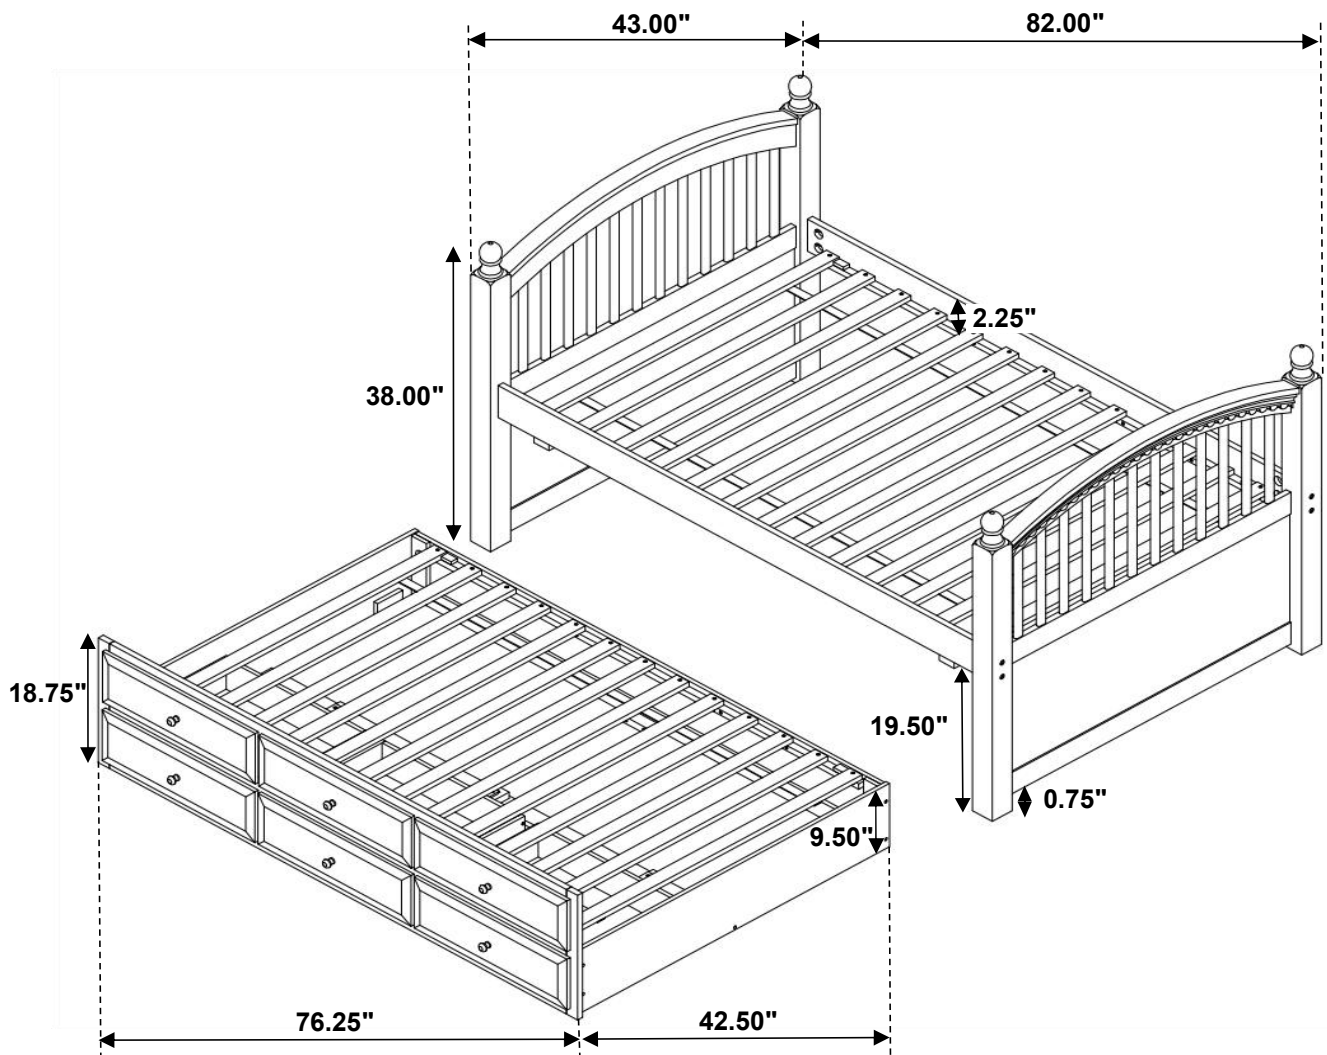

**Note: Dimension tolerance  $\pm 5\%$**