



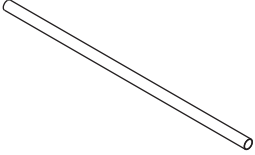



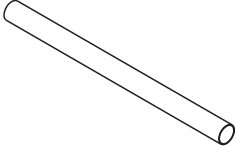
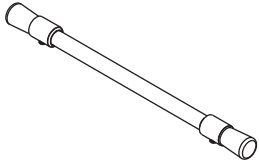


ASSEMBLY INSTRUCTIONS

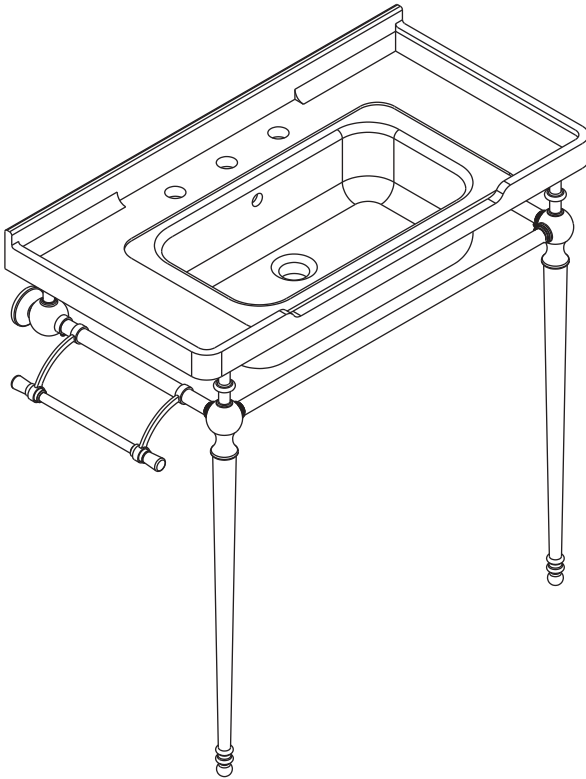

Bathroom Vanity


1		x2	7		x2
2		x2	8		x1
3		x2	9		x2
4		x2			
5		x2			
6		x1			

Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2

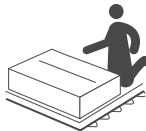


Put a carpet on the floor before unpacking

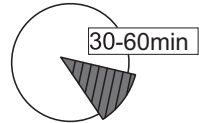

Estimate installation time:
30 minutes


Item no.	Reference Image	Qty
A		x1
B		x4
C	 Ø4x50mm	x4
D		x1

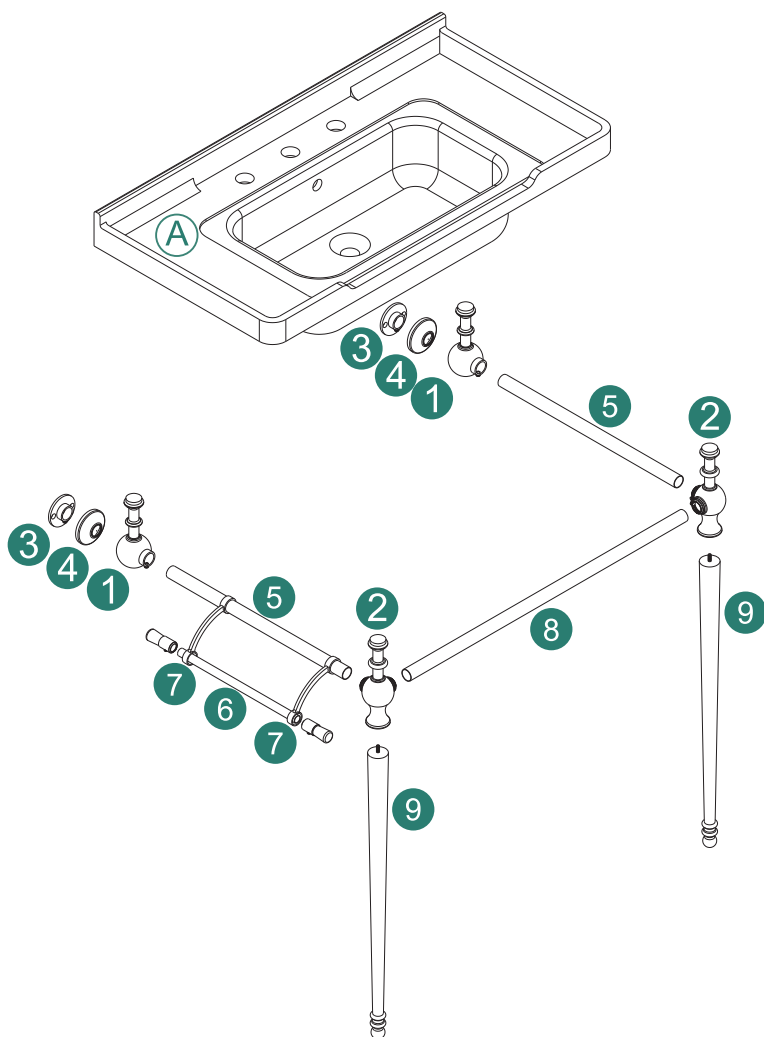


WARNING: To prevent tipping over, this product must be used with the included wall mounting device.

WARNING: Evaluate the suitability of the wall to ensure that the fixtures can withstand the forces that occur.


1



B 4pcs




Bring your own tools

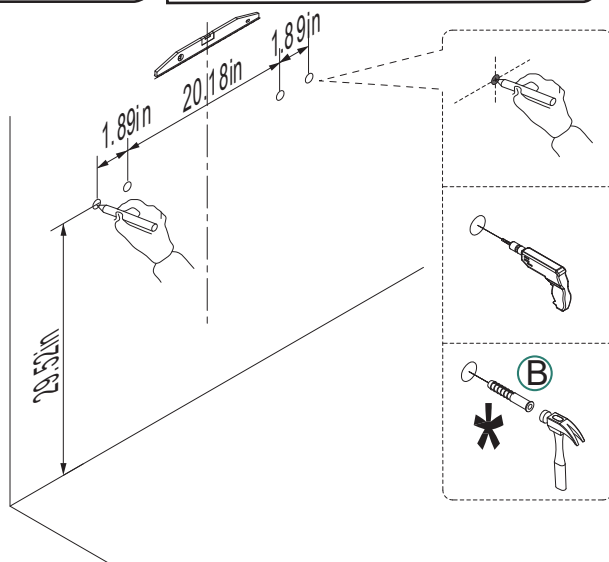

2




3 2pc



C 4pcs



Bring your own tools

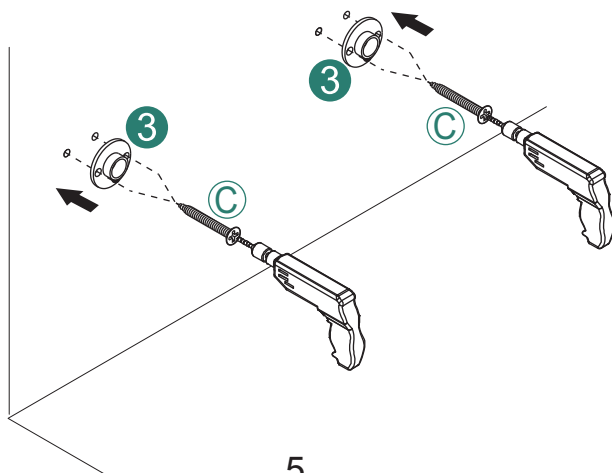

3



1 2pc



2 2pc



4 2pc




5 2pc



6 1pc




7 2pc




8 1pc



9 2pc

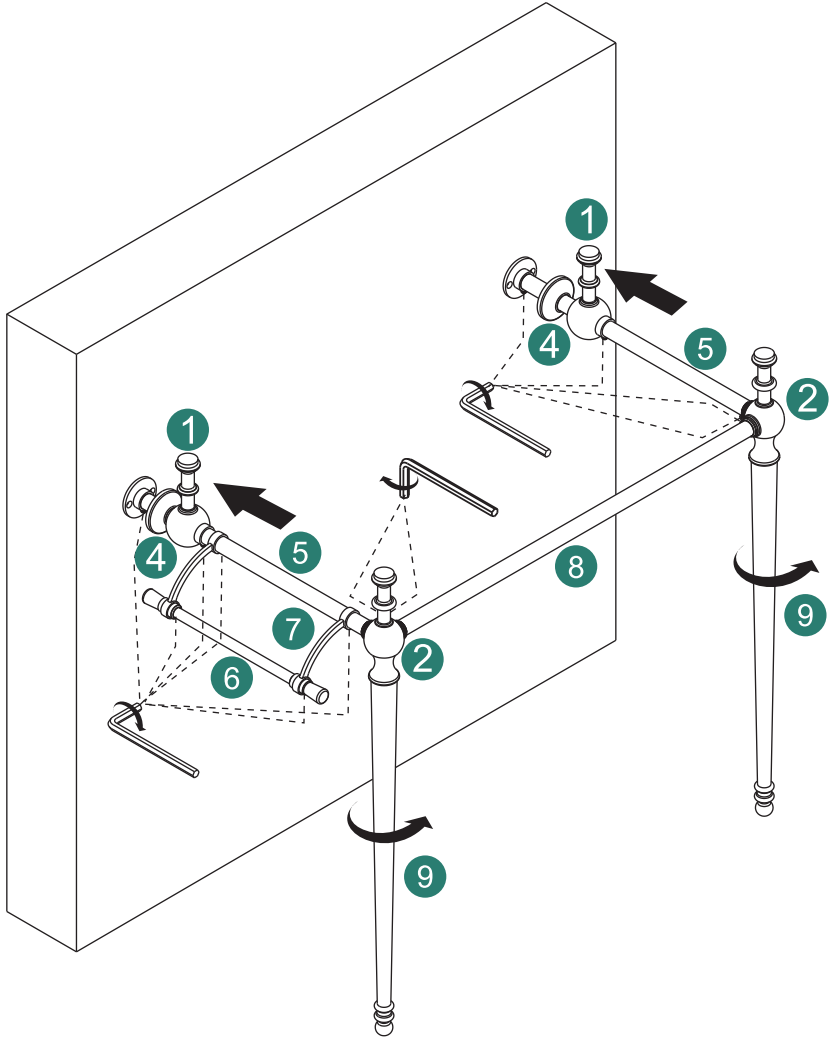


4

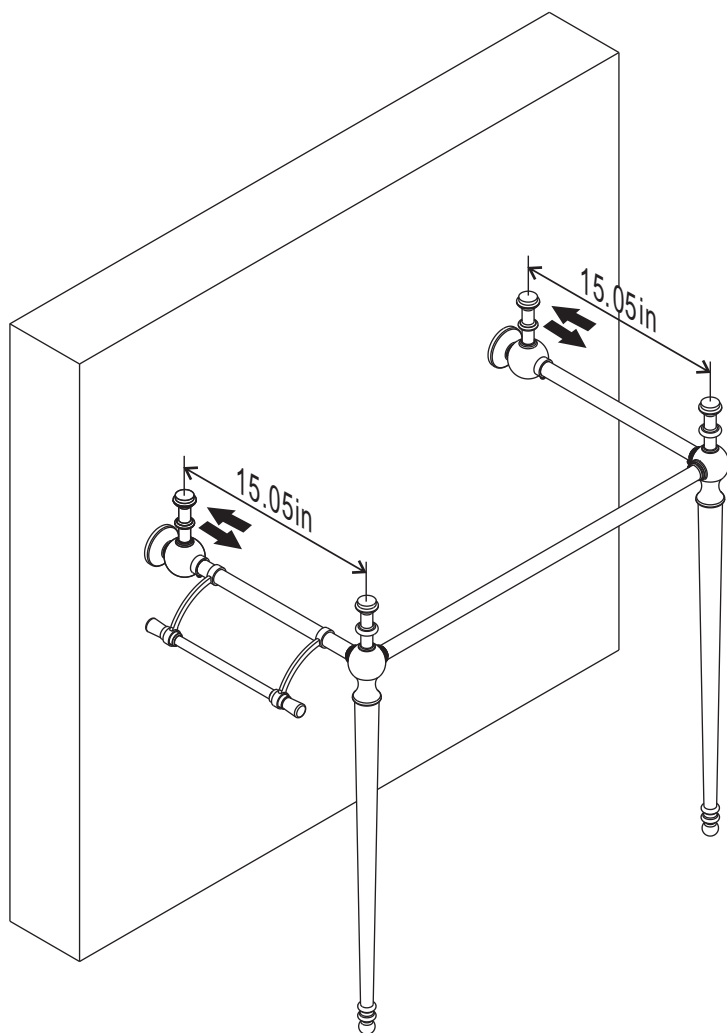

Installation completed

5



A 1pcs

