

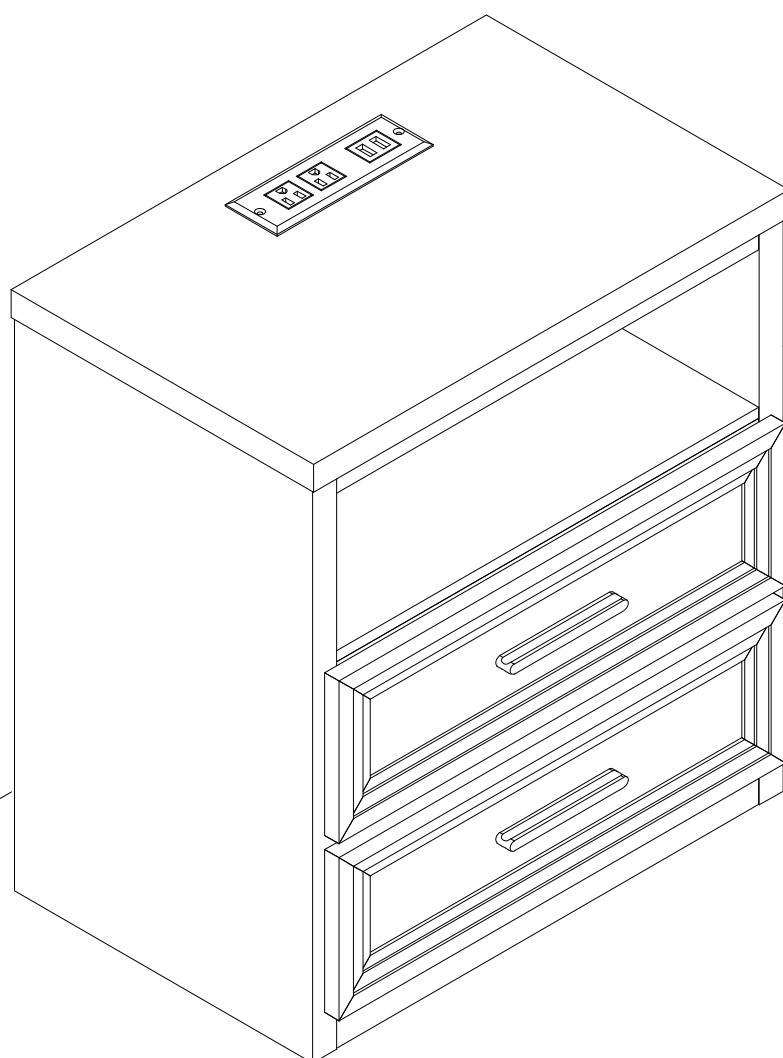











Assembly Instructions

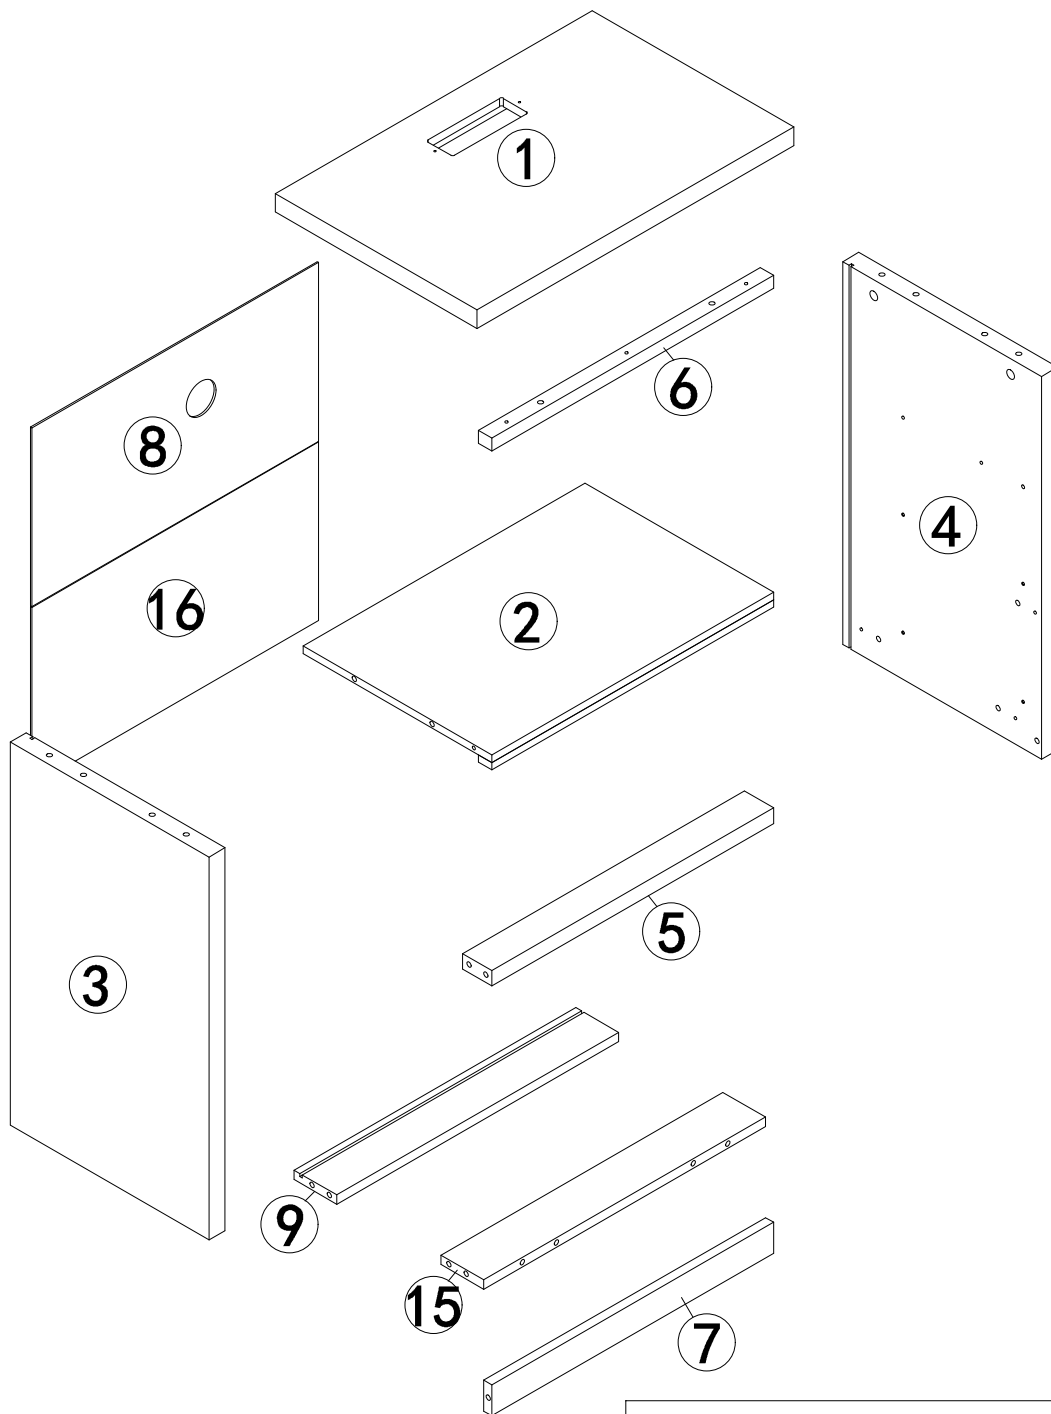

PART LIST



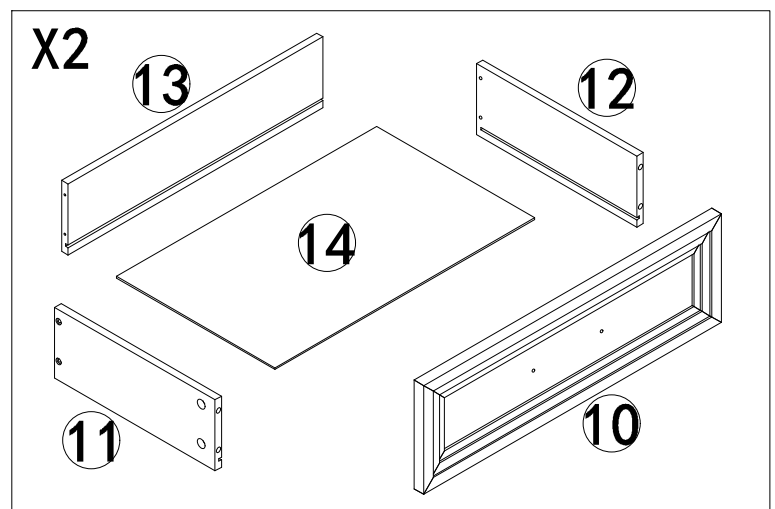


HARDWARE LIST

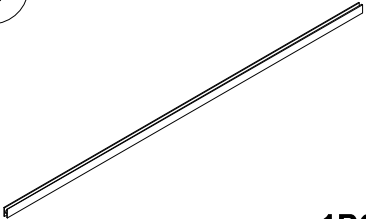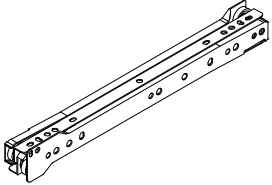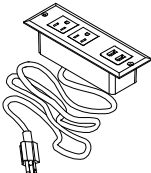
A  Ø6x33mm (24+2)PCS	B  Ø15x9.5mm (24+2)PCS	C  Ø8x30mm (16+1)PCS
D  1PC	E  Ø4x30mm (11+1)PCS	F  (8+1)PCS
G  Ø3x15mm (8+1)PCS	H  2PCS	I  Ø4x10mm 4PCS
J  2SET	K  Ø3x12mm (14+1)PCS	L  Ø4x12mm (8+1)PCS
M  Ø6X30mm 2PCS	N  1PC	 1PC




J X 2SET

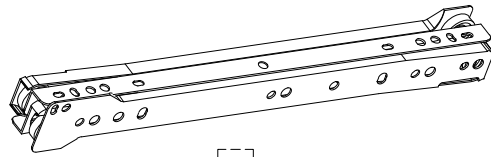


CL



CR




DL



DR




K



3mm

L



4mm



C




8mm

M




6mm



STEP 1

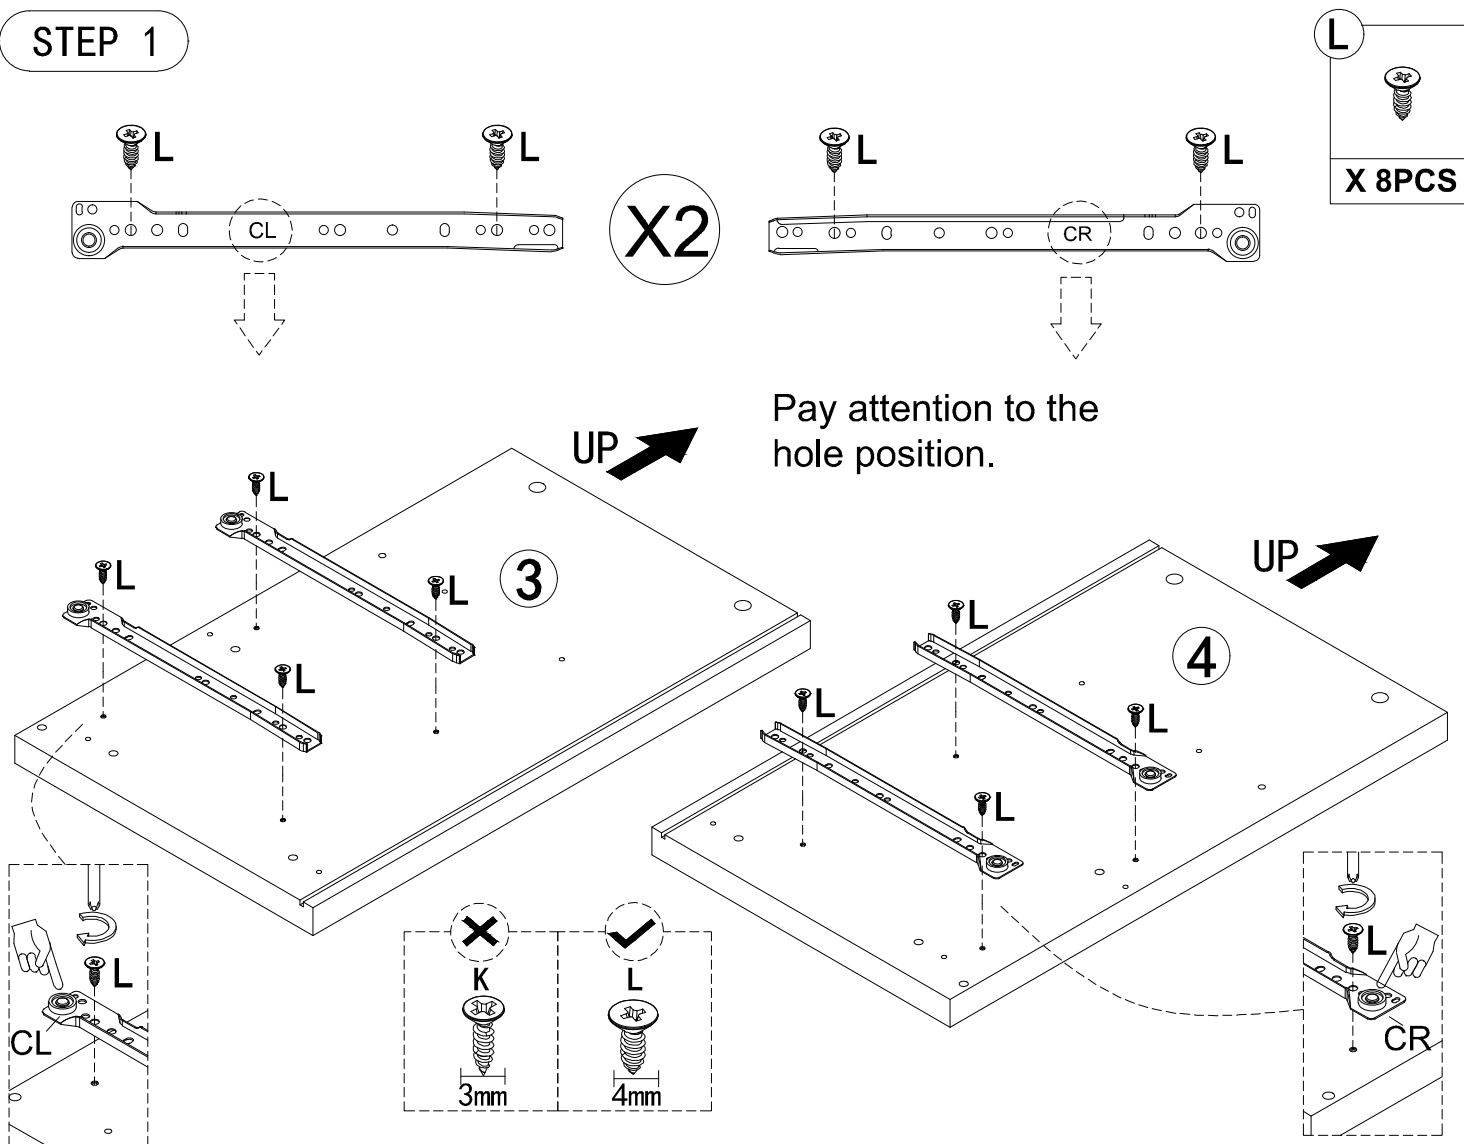





STEP 2

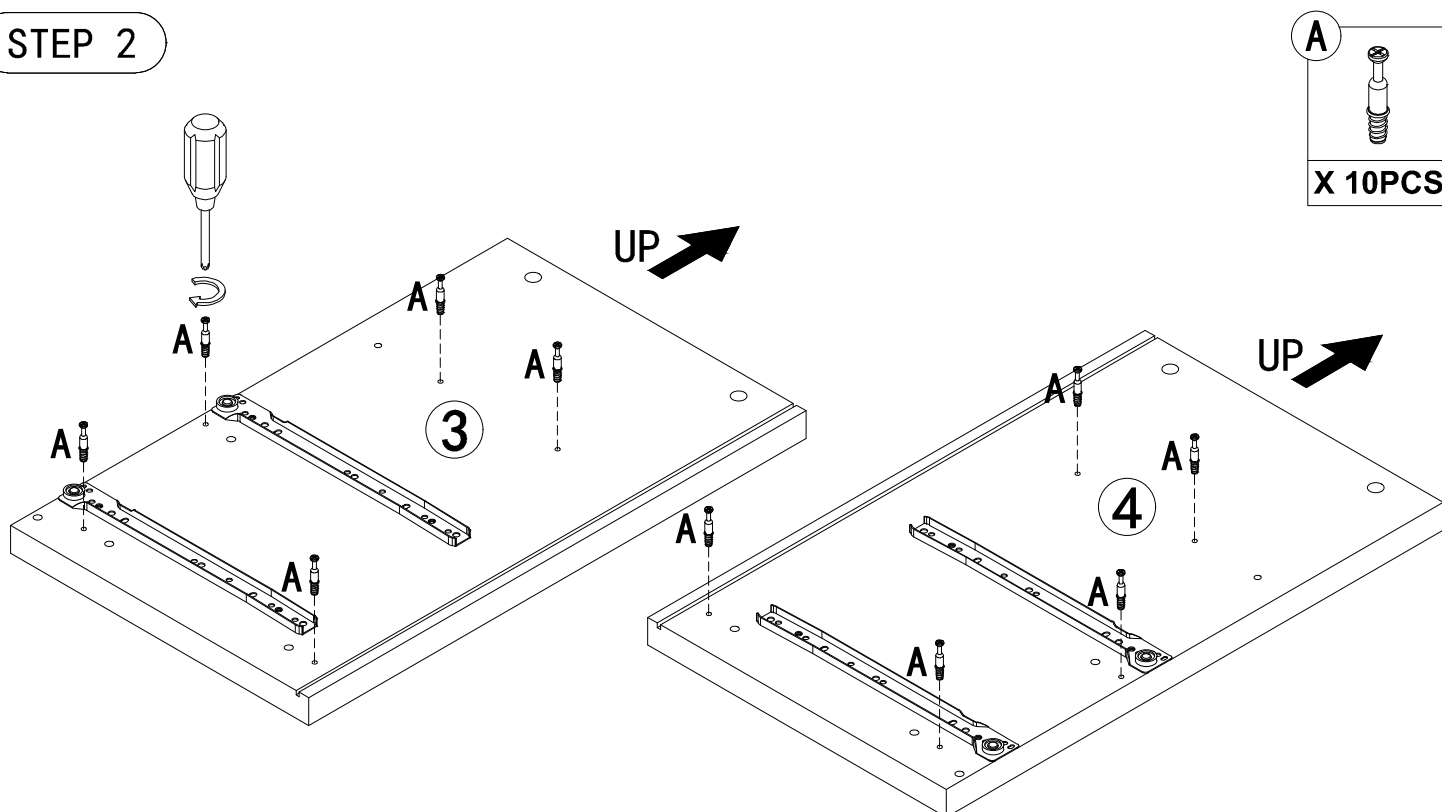

STEP 3

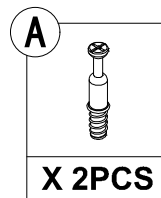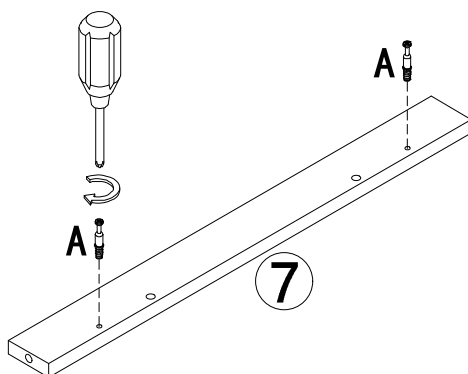

STEP 4

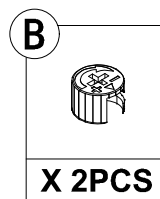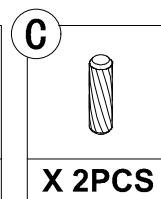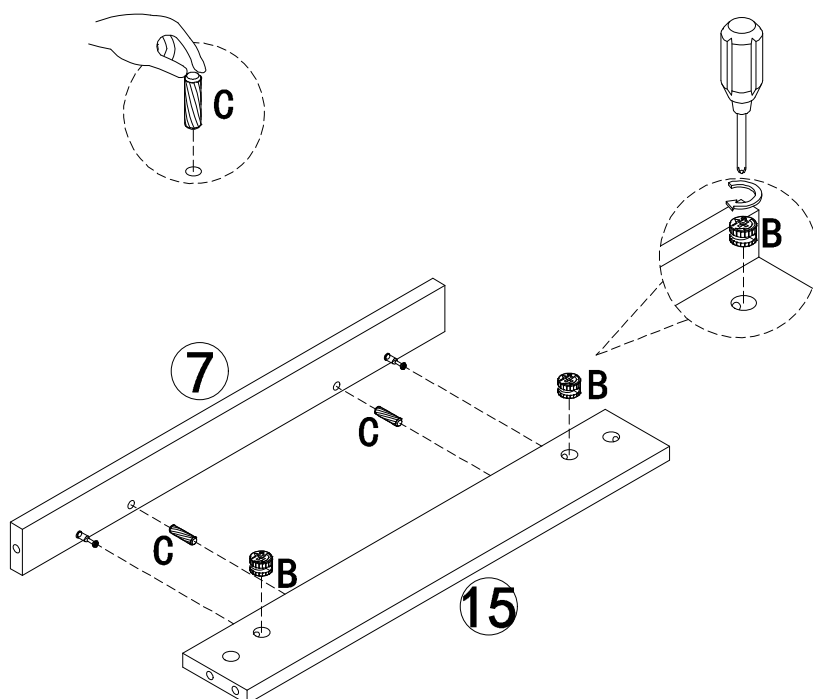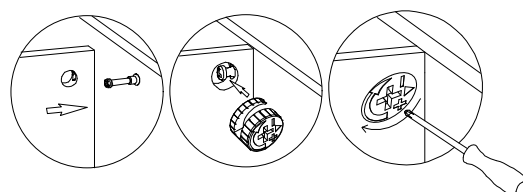

STEP 5

B



X 5PCS

C





X 4PCS

M



X 1PC

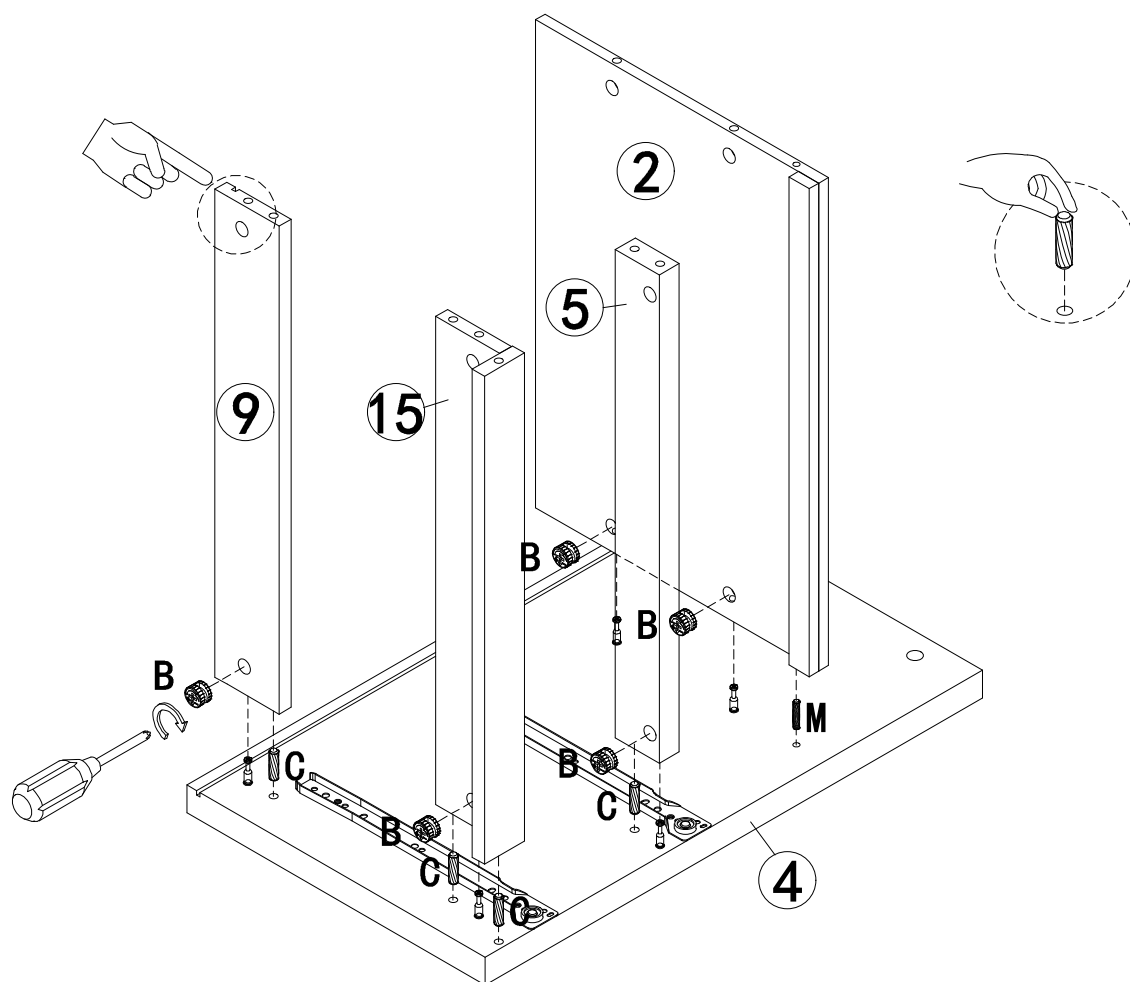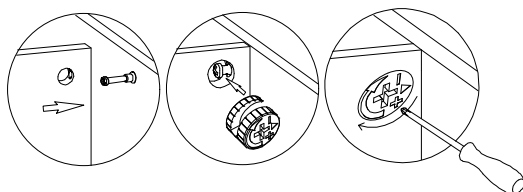

STEP 6

B



X 5PCS

C




X 4PCS




M




X 1PC

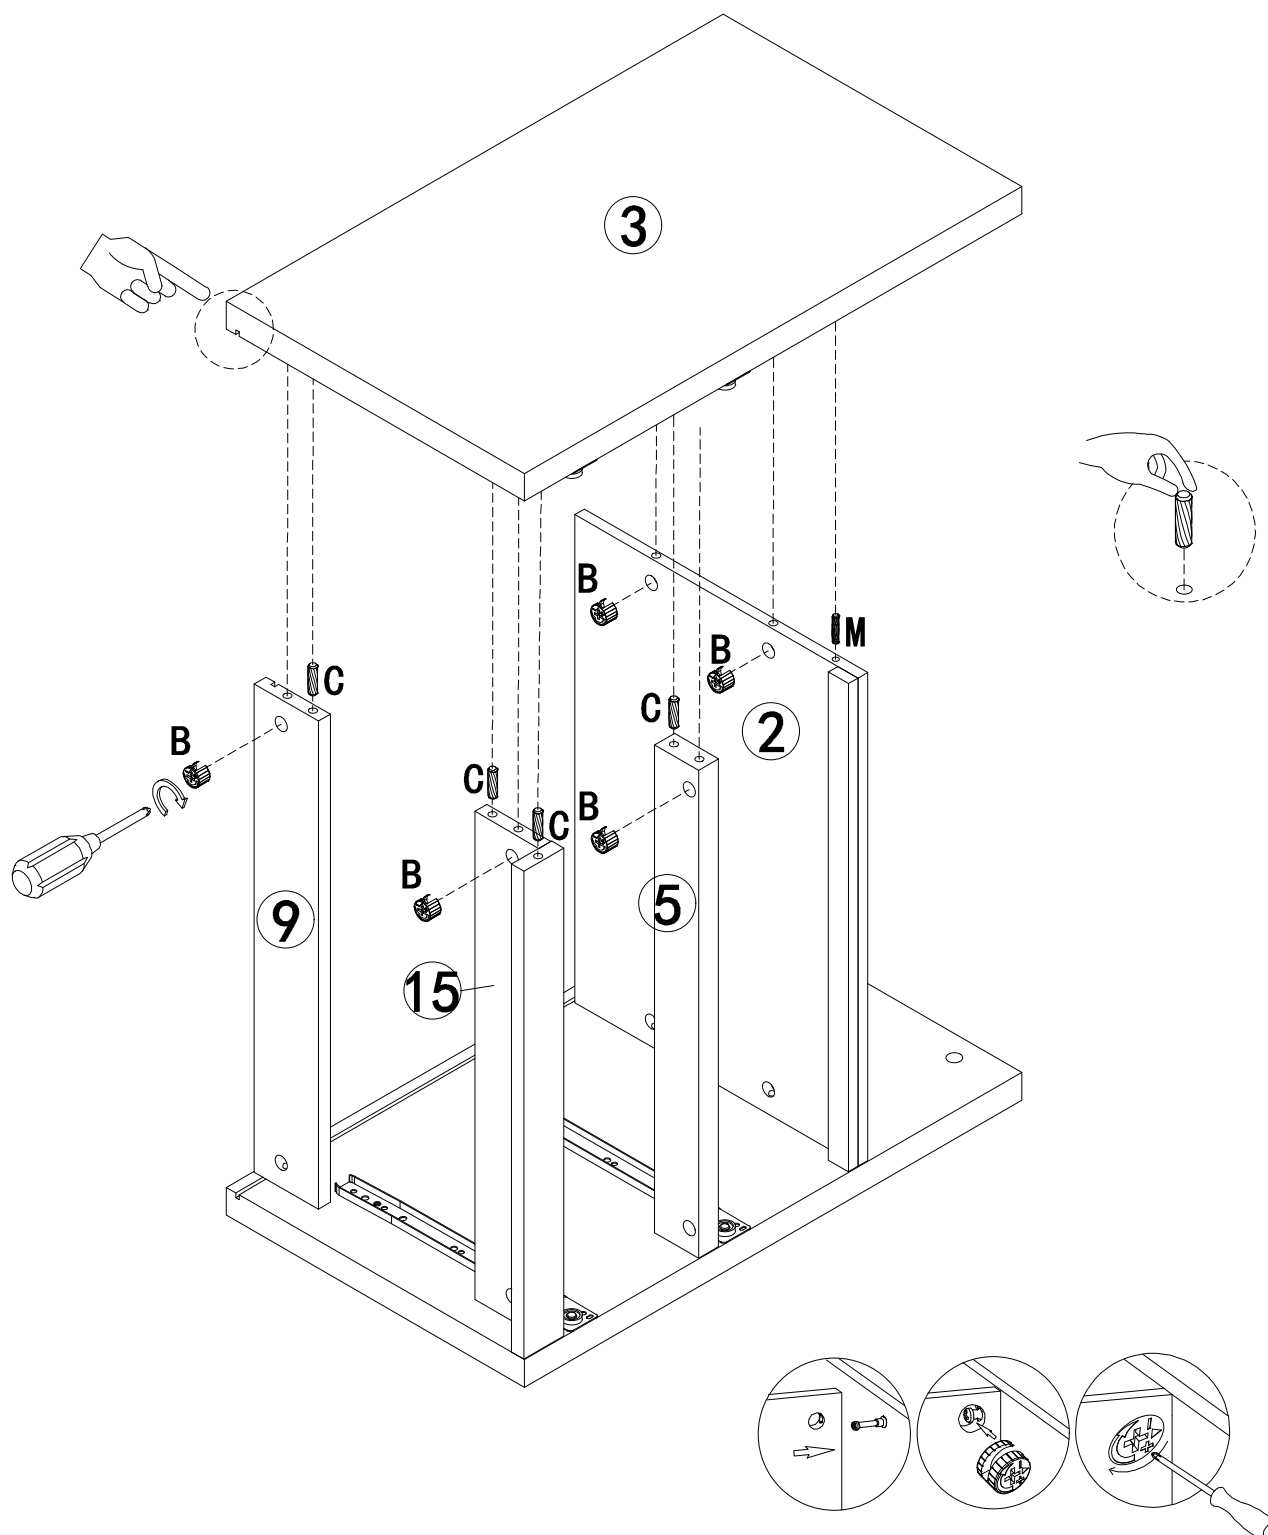

STEP 7

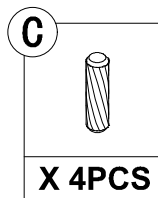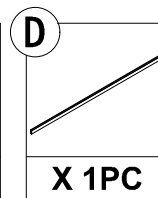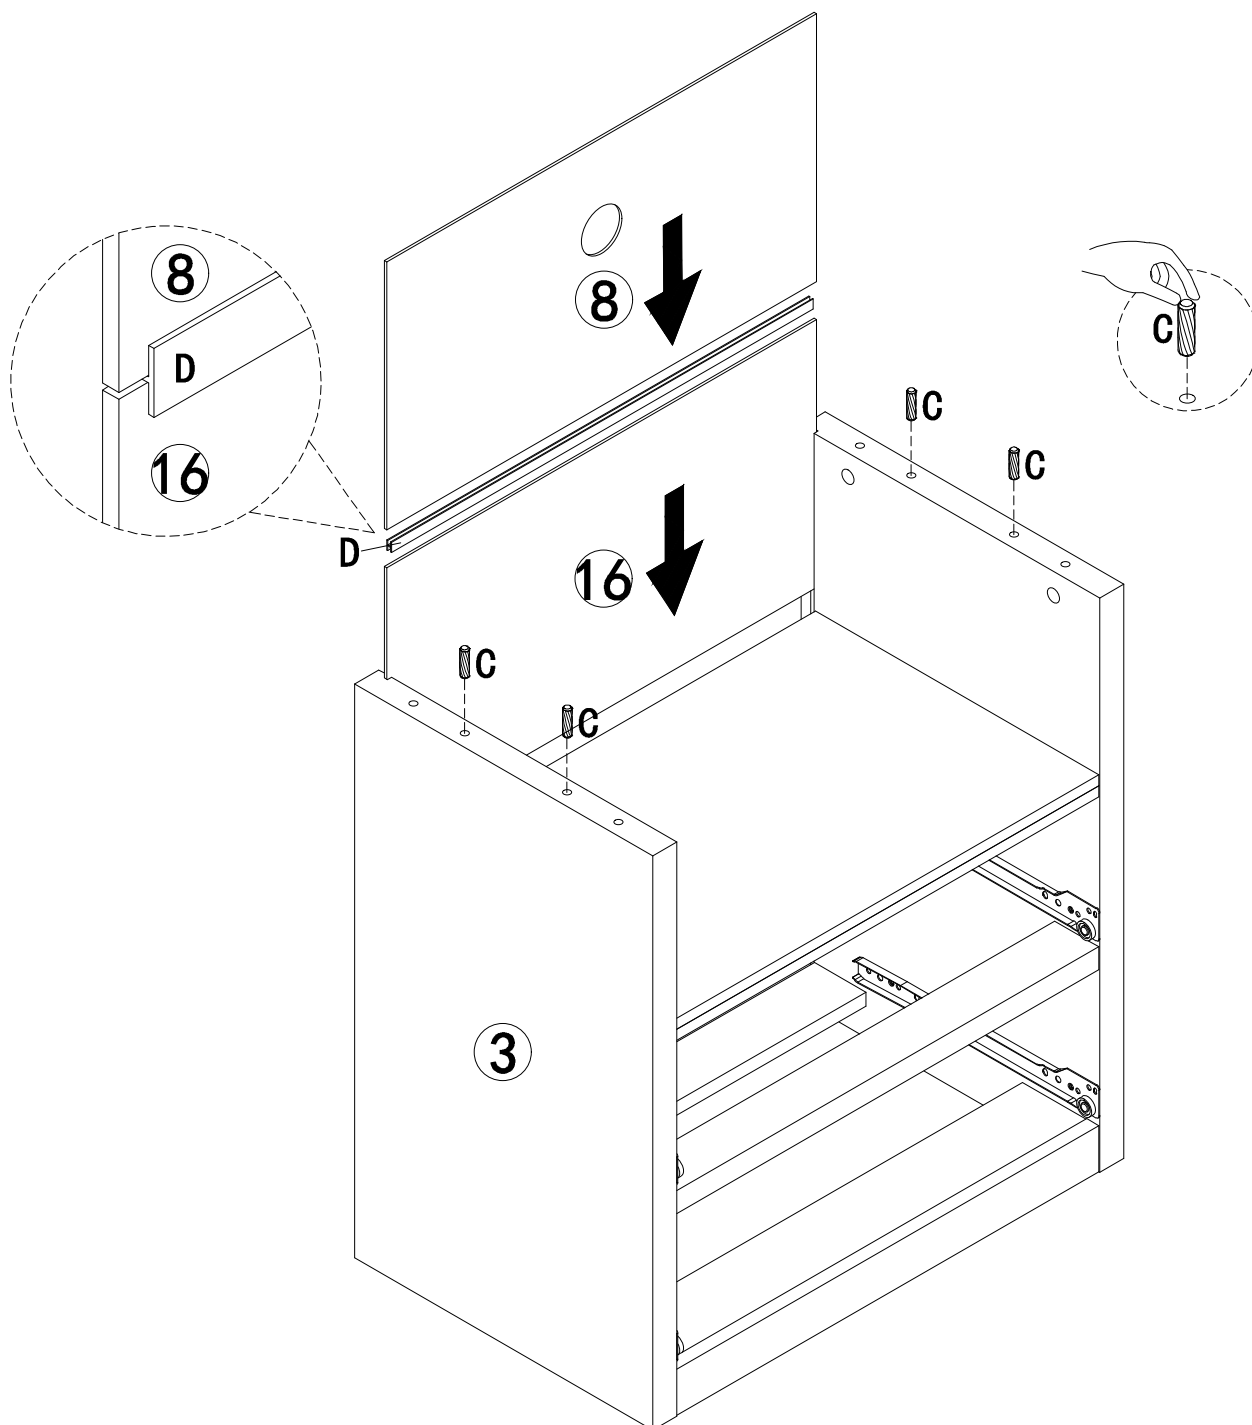

STEP 8


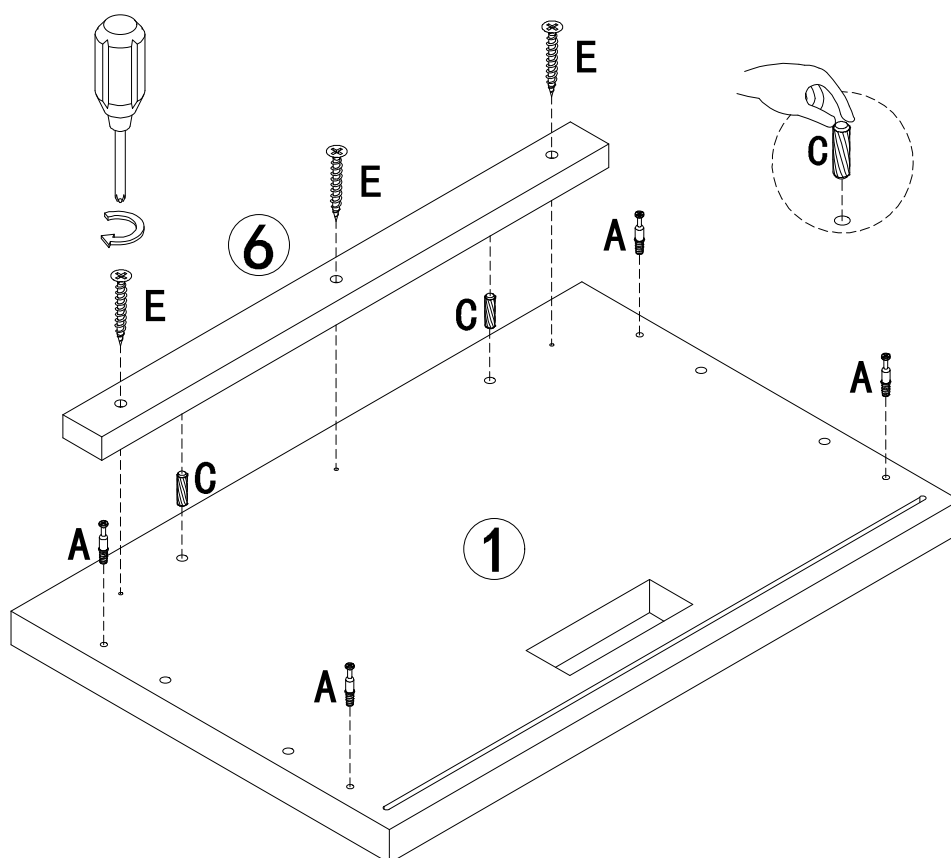
A**X 4PCS****C****X 2PCS****E****X 3PCS**

STEP 9

B




X 4PCS

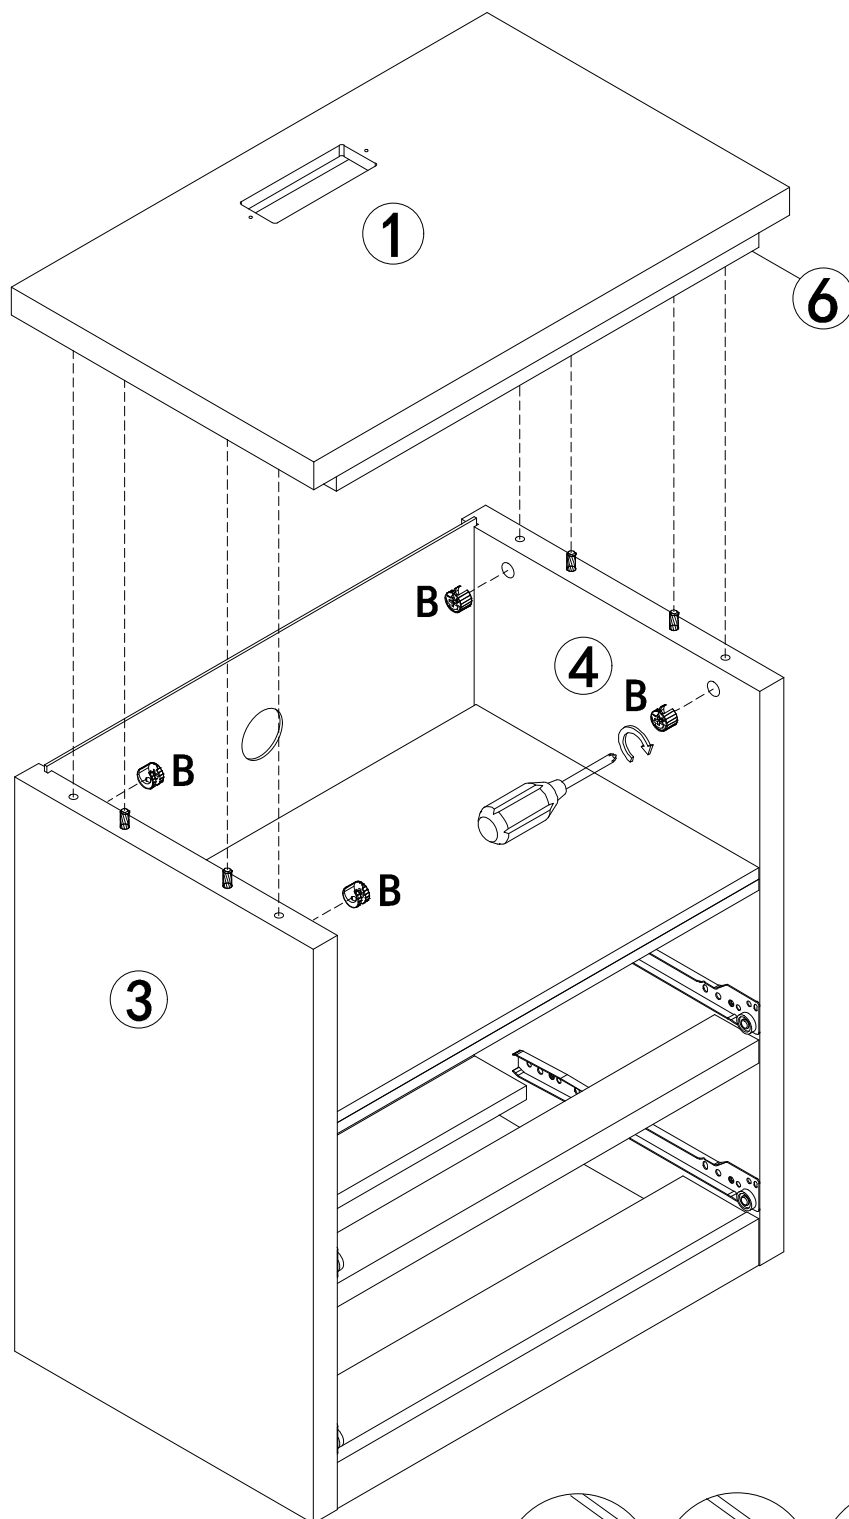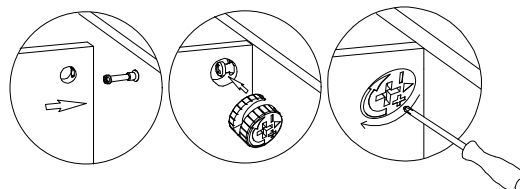



STEP 10

G	H	N	K
			
X 8PCS	X 8PCS	X 1PC	X 2PCS

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.


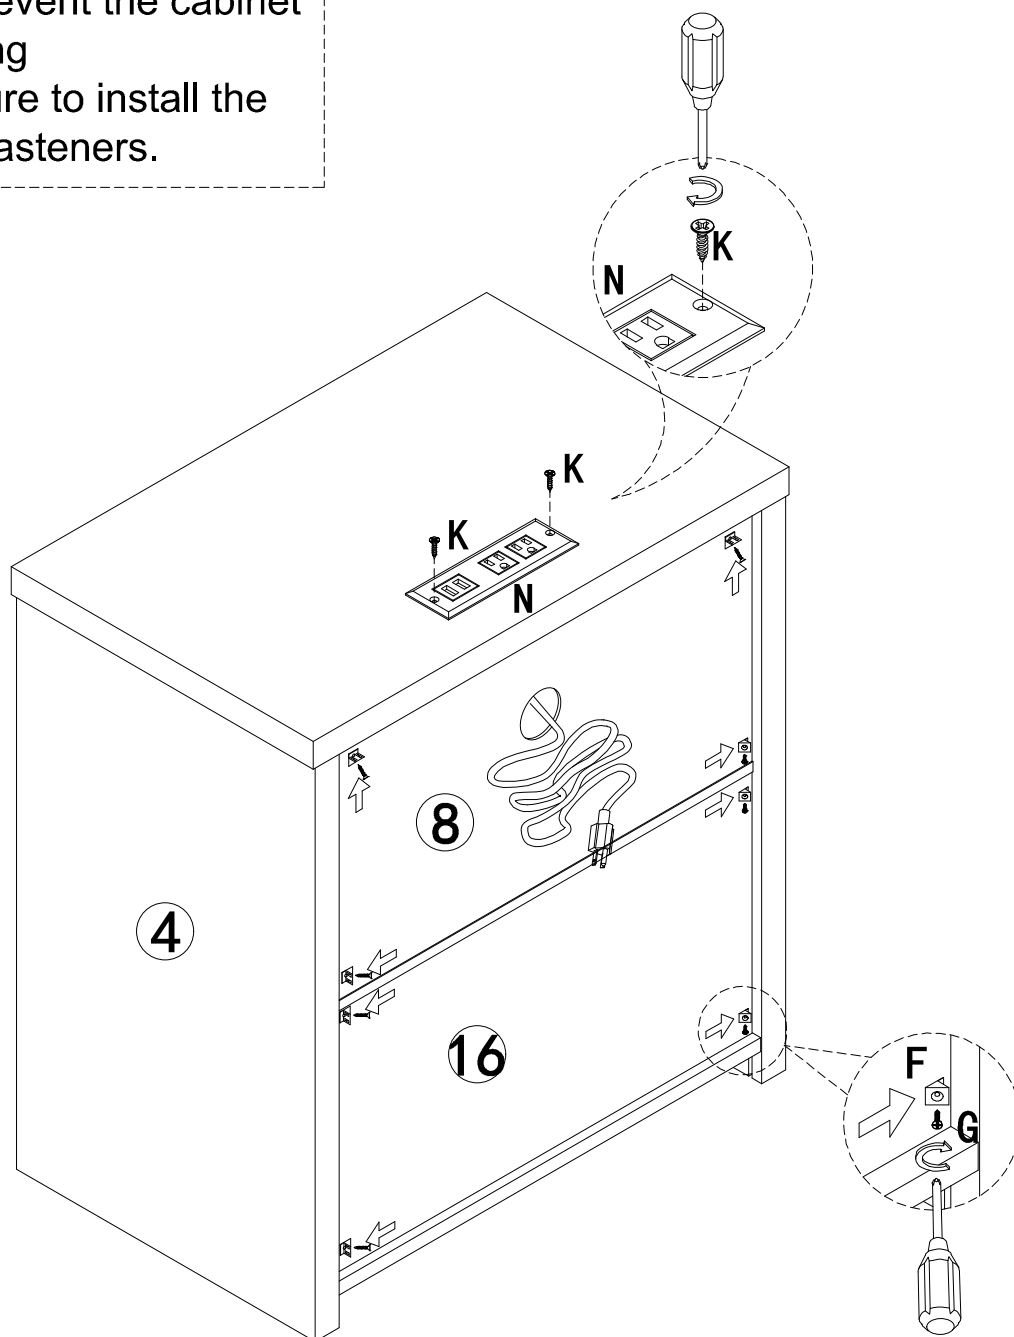


STEP 11

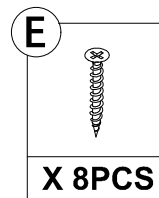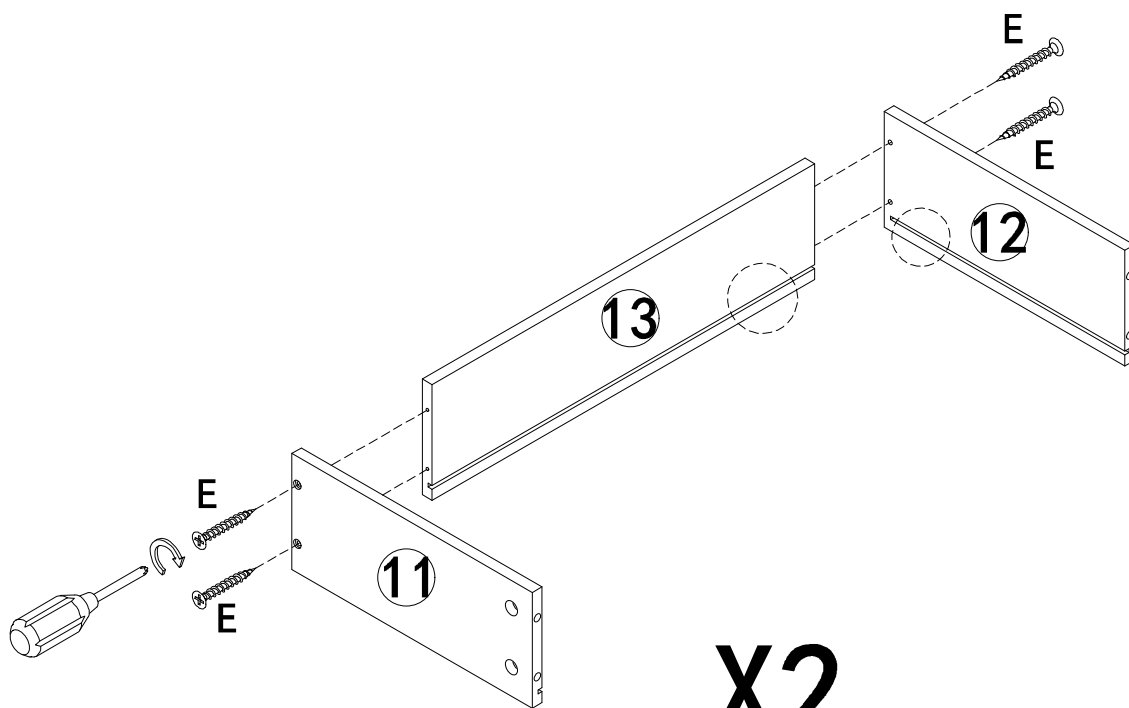


X2




STEP 12

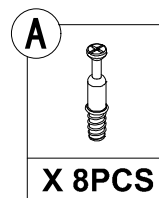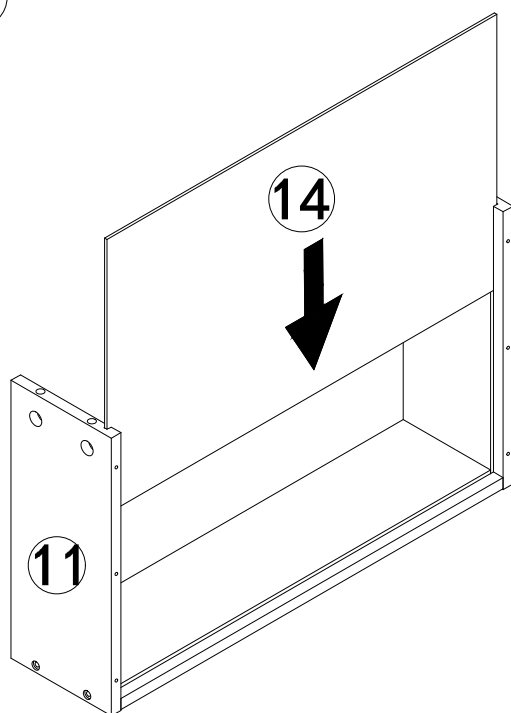




X2

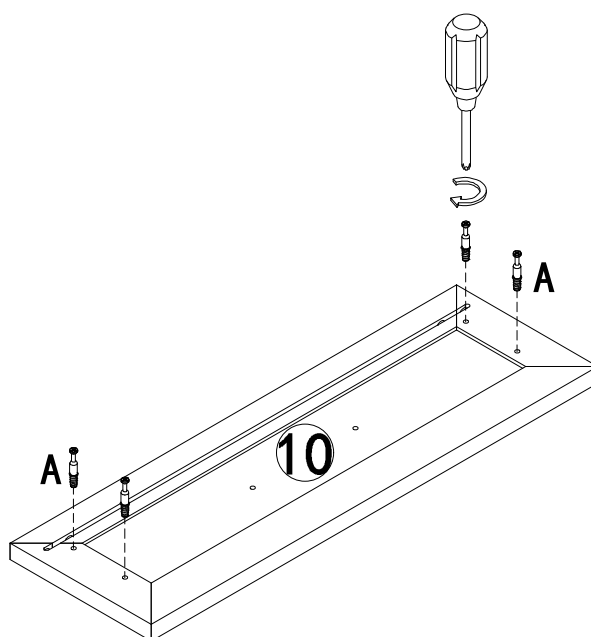

STEP 13

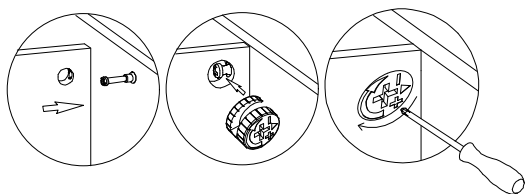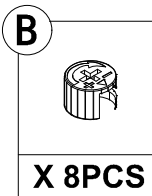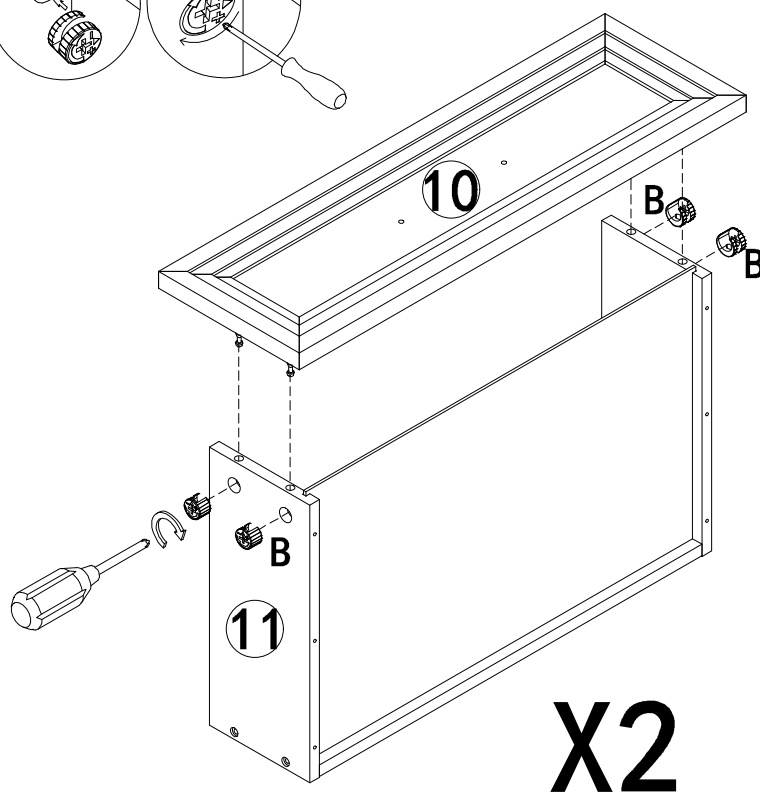


STEP 14

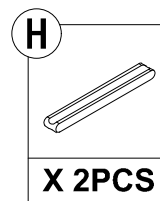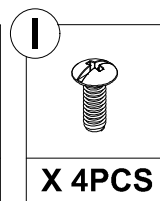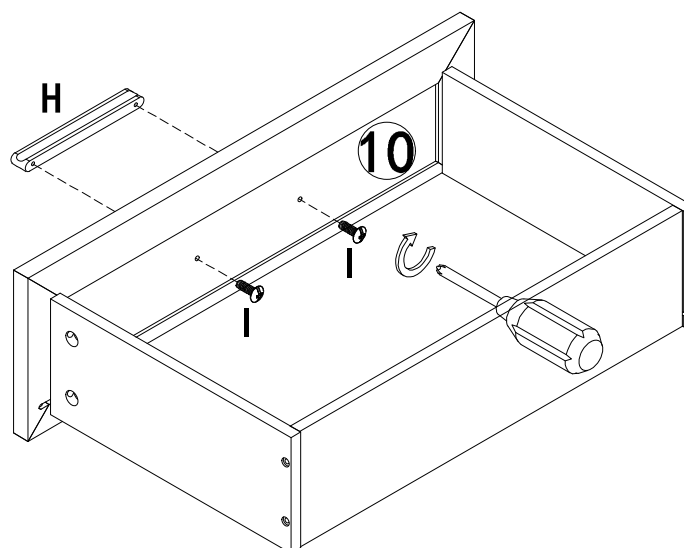

X2

STEP 15

Pay attention to the hole position.

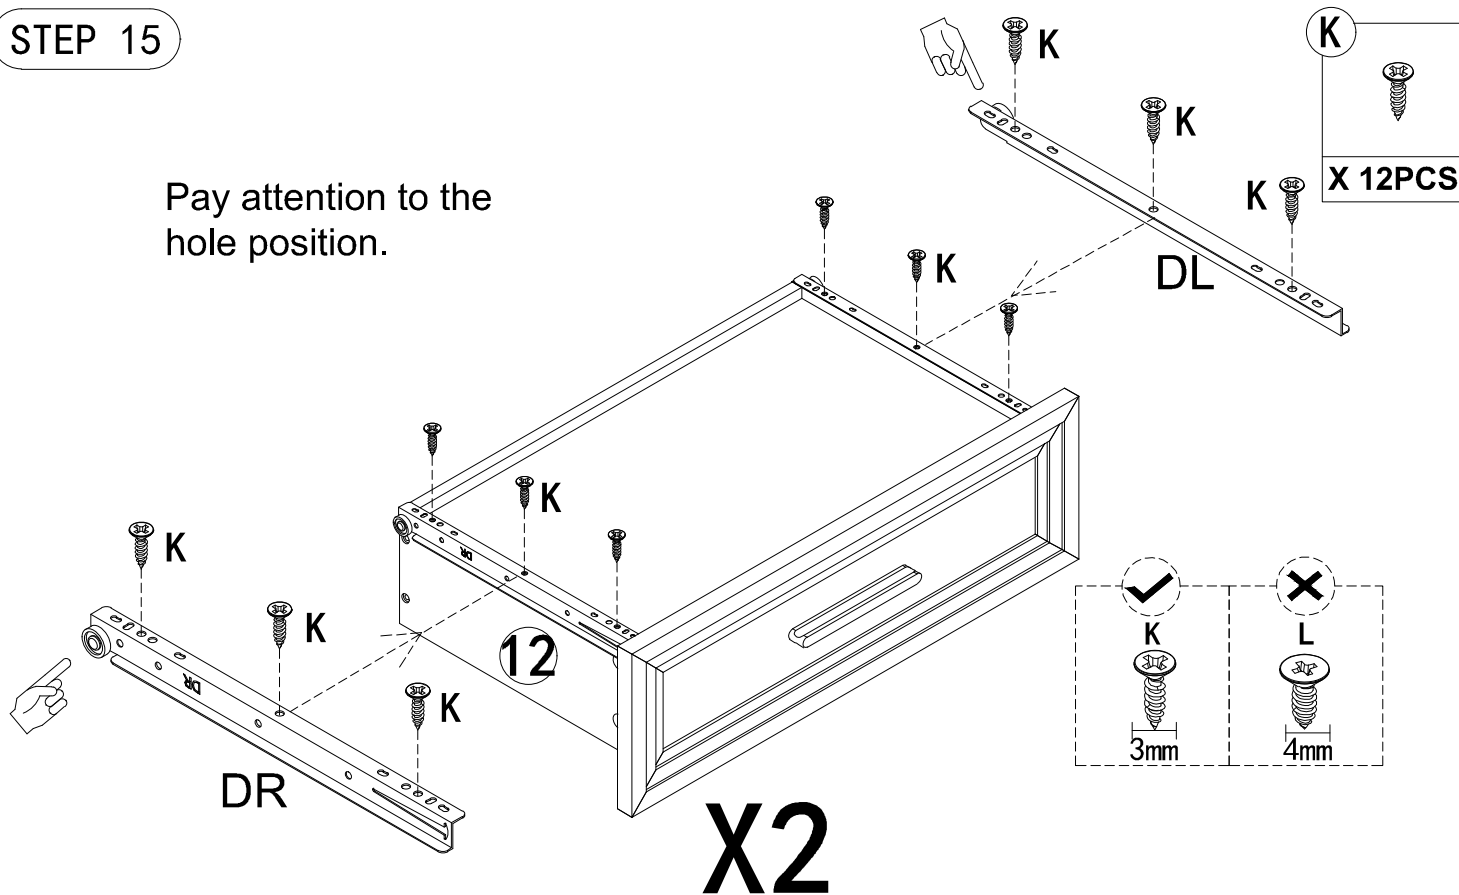

STEP 16

