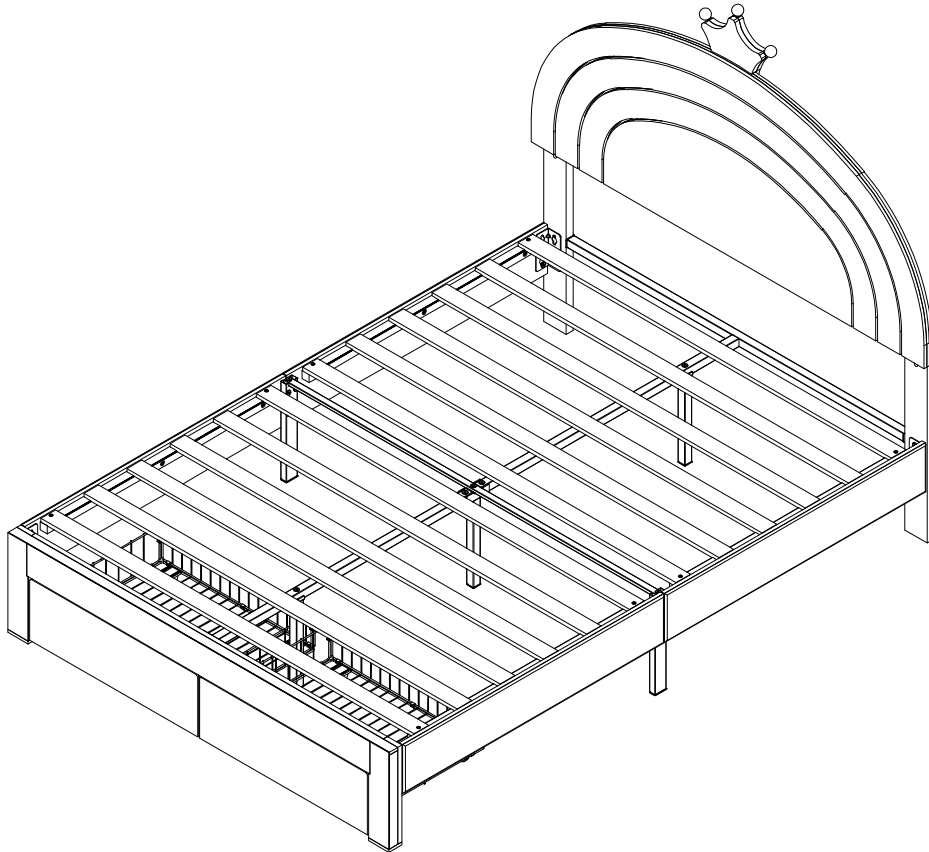



Upholstered bed N652P324088/N652P324089



TIPS


















1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.

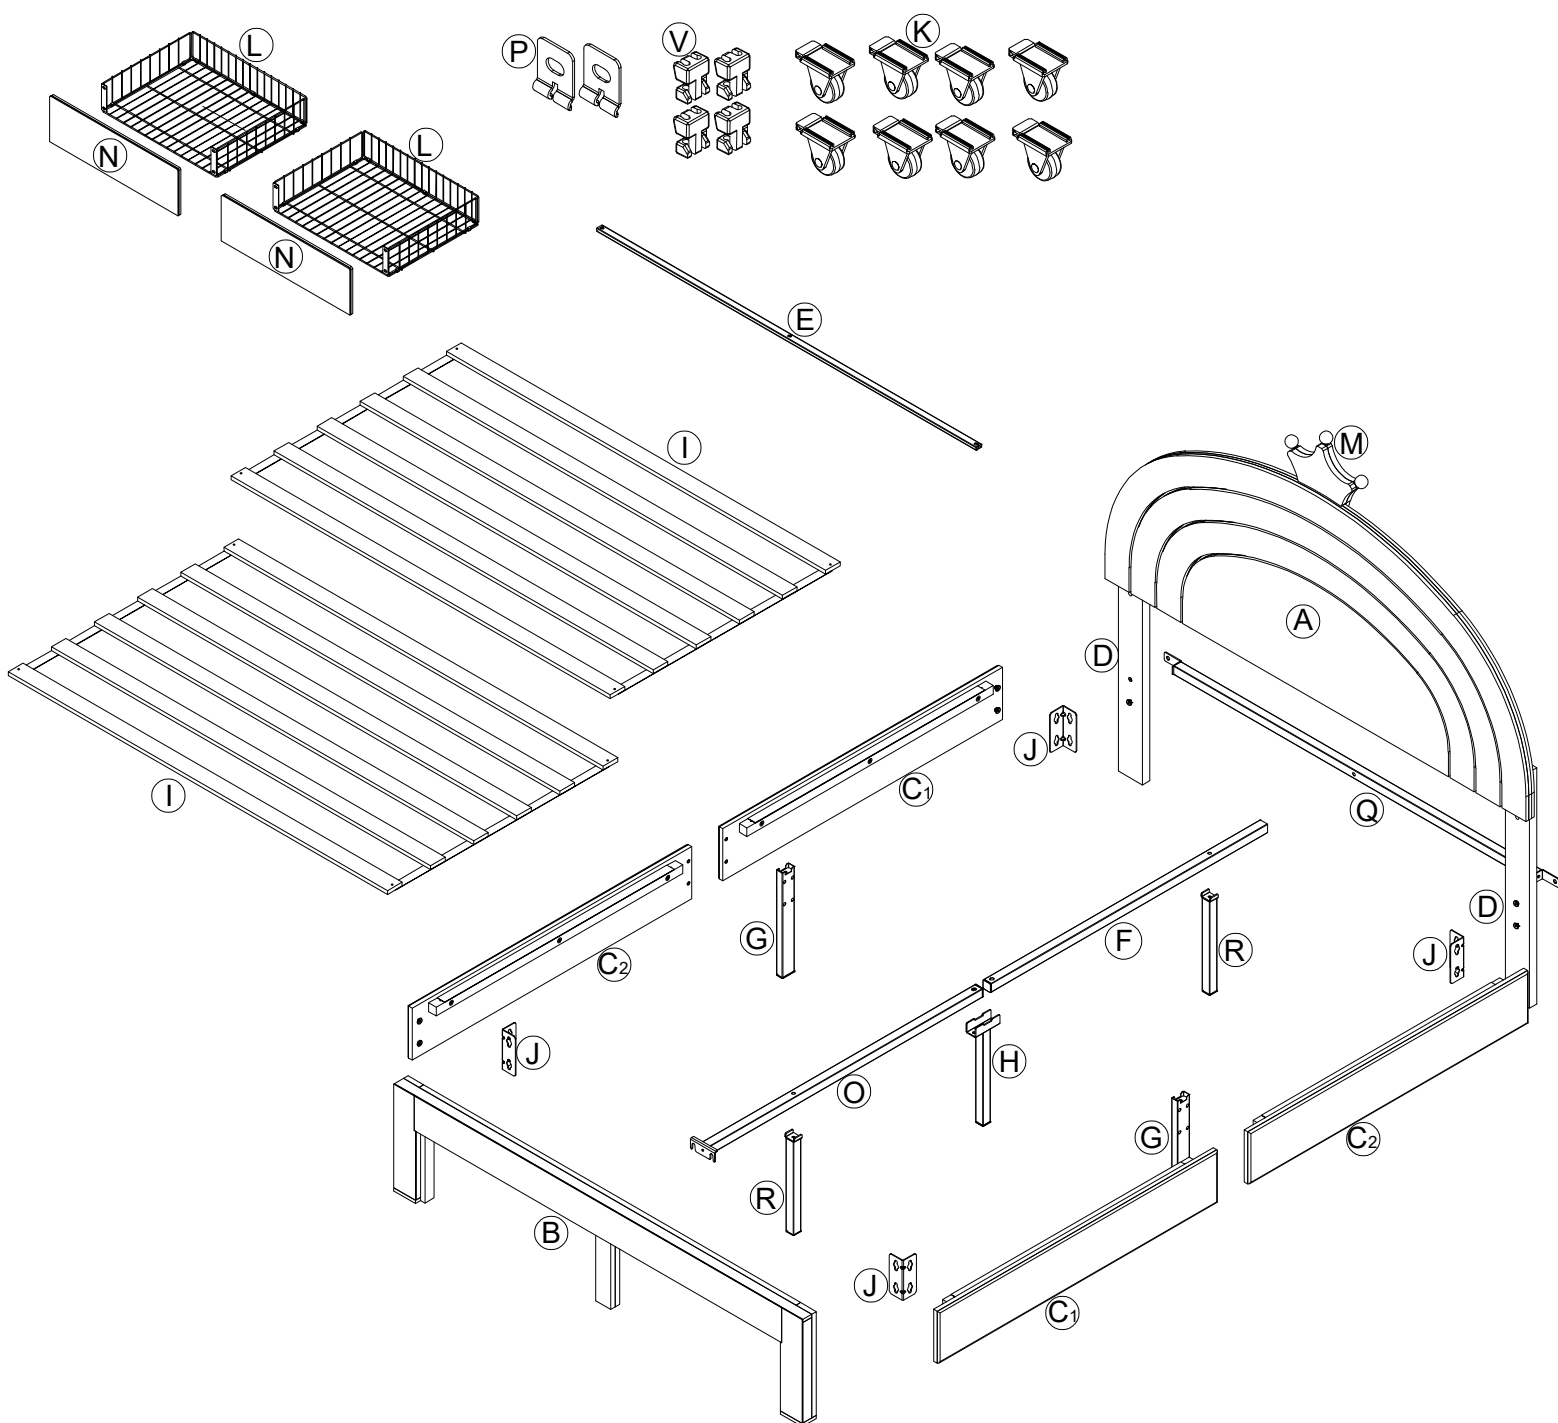2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.









- 1.This product is not suitable for mattress recessed type.
- 2.This product is suitable for placing mattresses on the top.

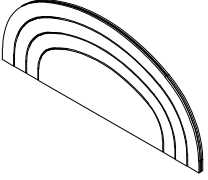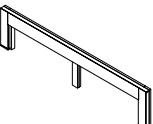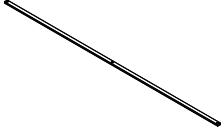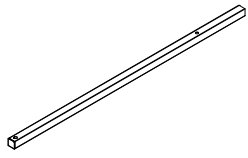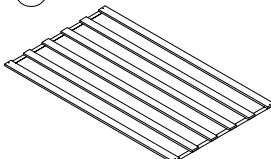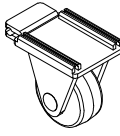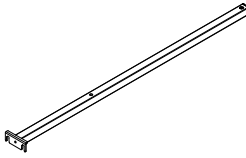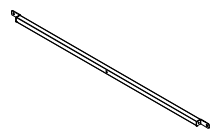Part List
N652P324088
1/2



 1PC	 1PC	 2PCS	 1PC	 1PC
 2PCS	 1PC	 2PCS	 4PCS	 8PCS
 1PC	 1PC	 2PCS	 1PC	 2PCS
 4PCS				
 M8*40 10PCS	 M8*35 12PCS	 M5*35 8PCS	 4*80 1PC	 4*80 1PC
 M6*10 10PCS	 M8*12 2PCS			

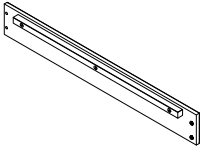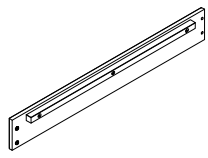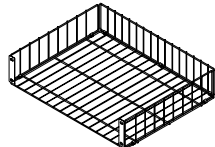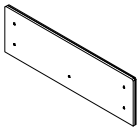Part List
N652P324089
2/2

 2PCS	 2PCS	 2PCS	 2PCS	
---	---	---	---	--

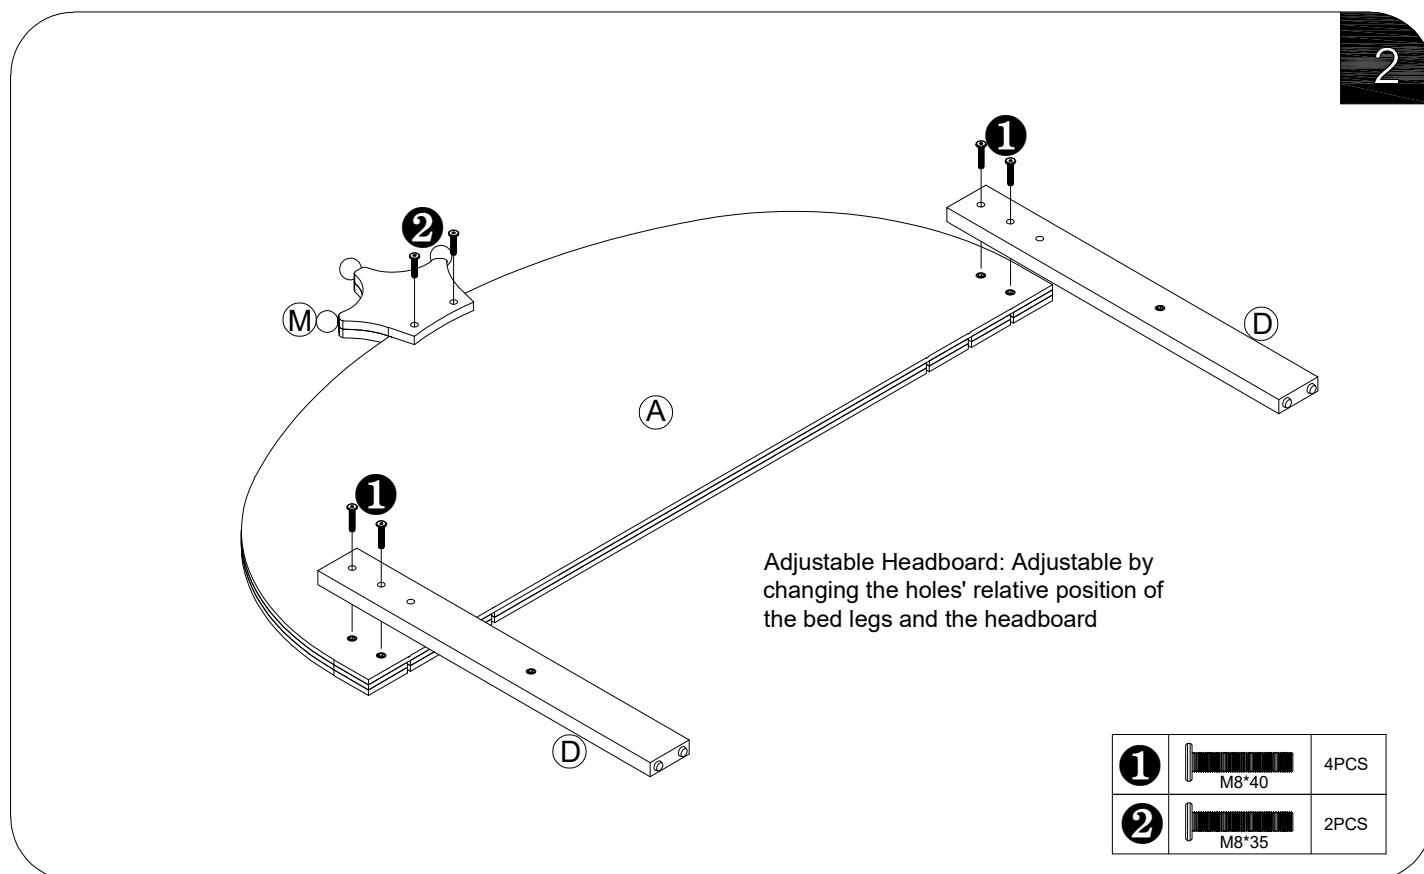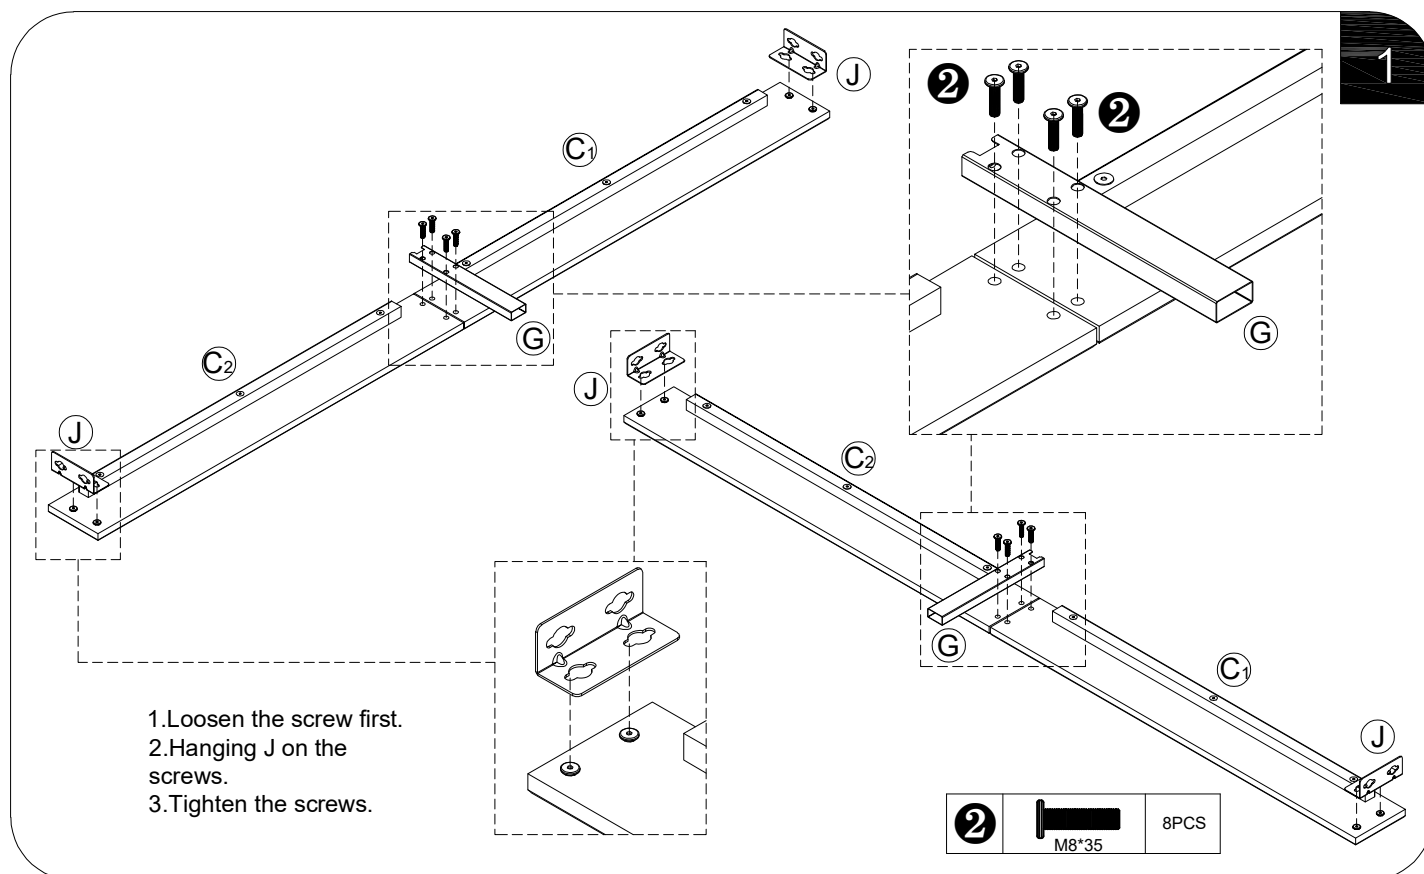


3

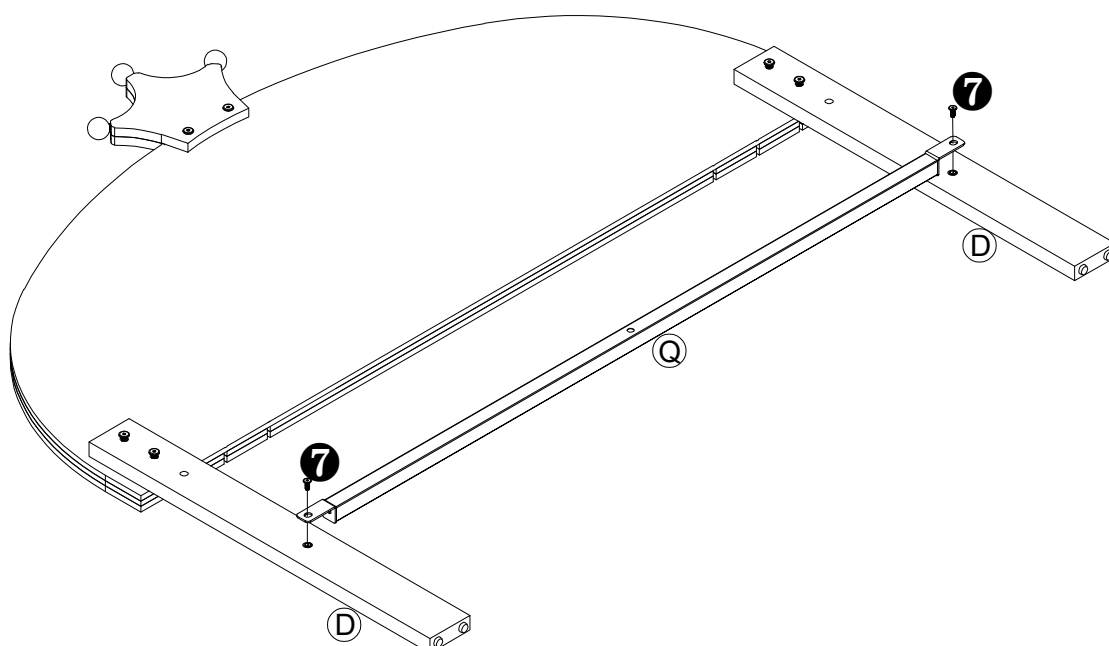



4

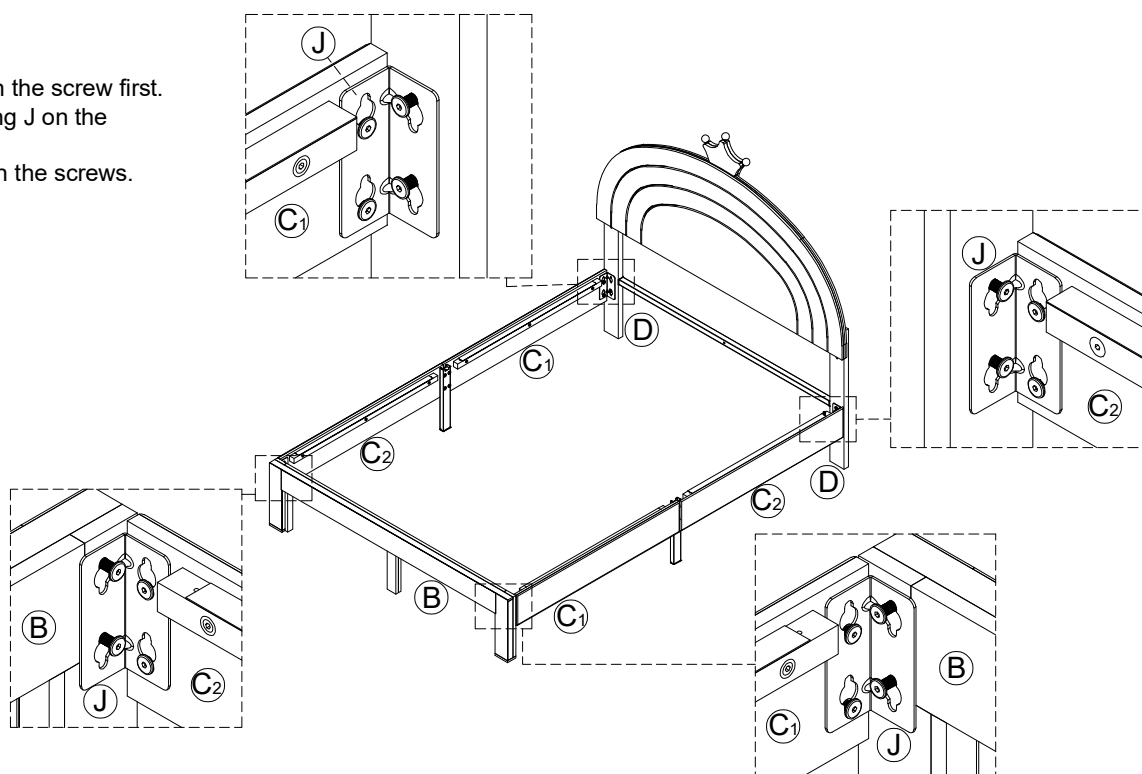1. Loosen the screw first.
2. Hanging J on the screws.
3. Tighten the screws.




5

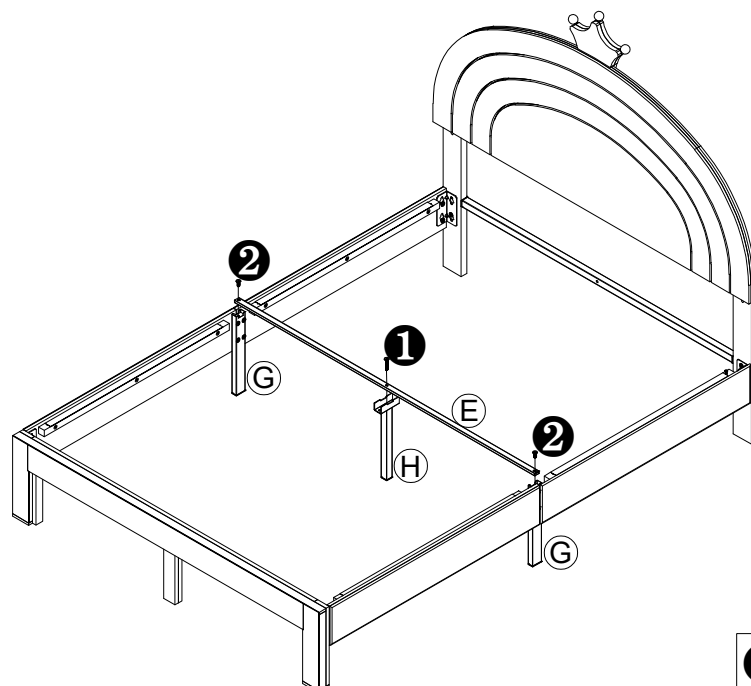

1	 M8*40	1PC
2	 M8*35	2PCS


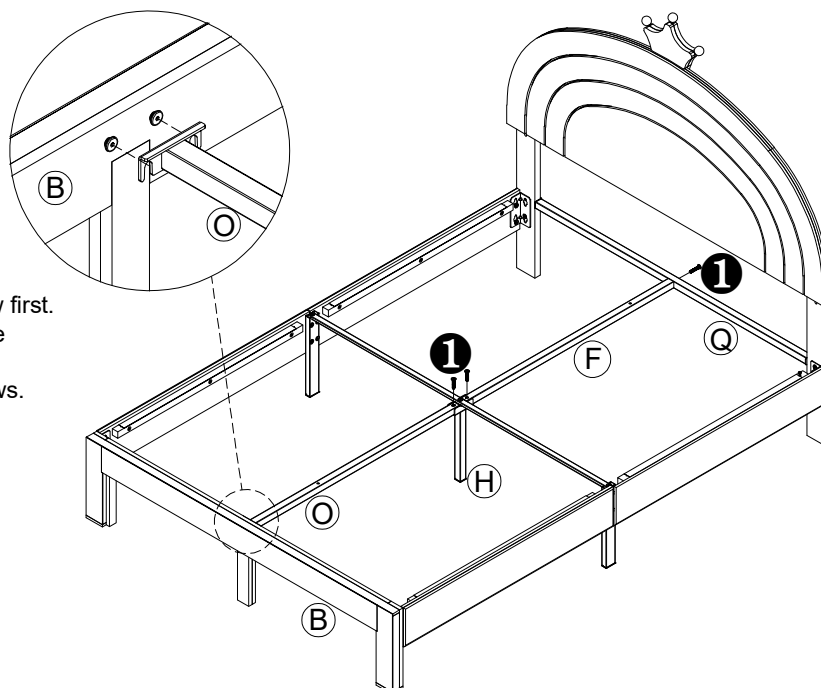
6





1. Loosen the screw first.
2. Hanging O on the screws.
3. Tighten the screws.

1	 M8*40	3PCS
----------	--	------

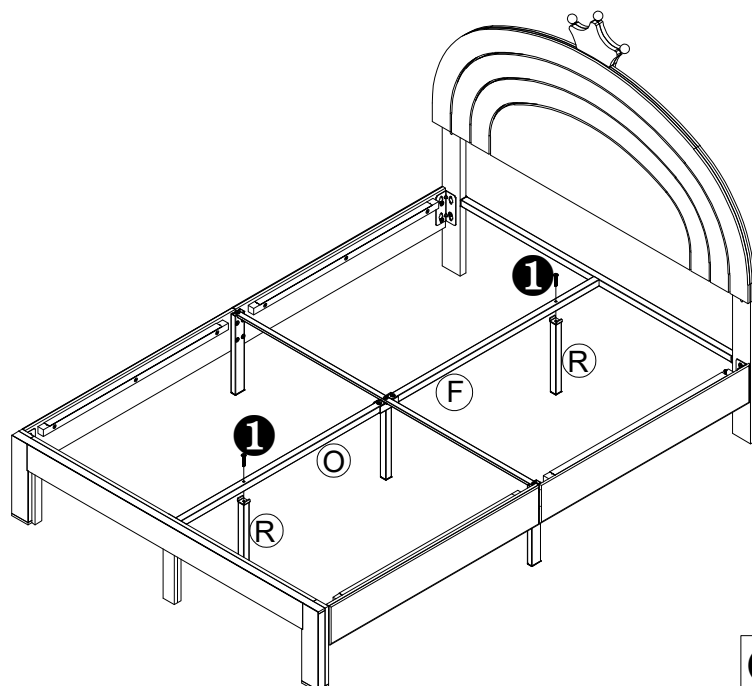
7




8

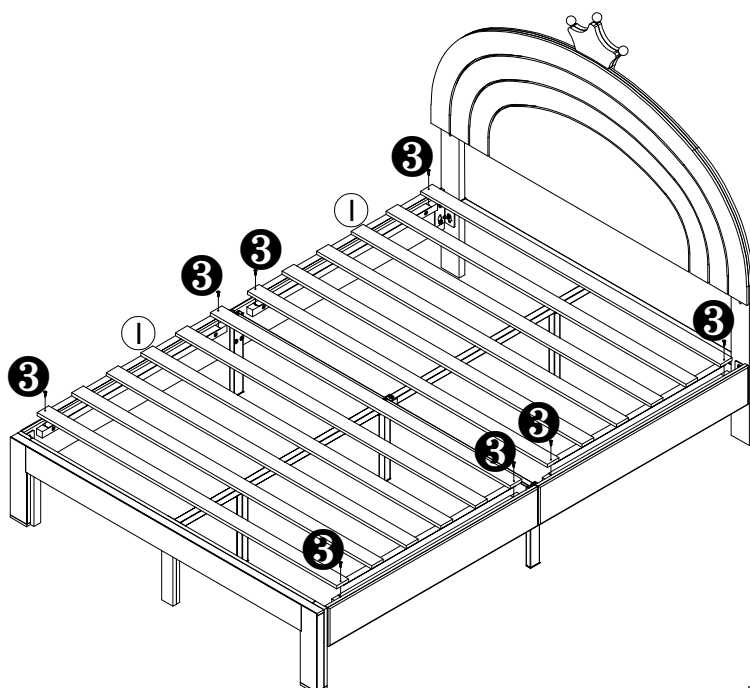


9

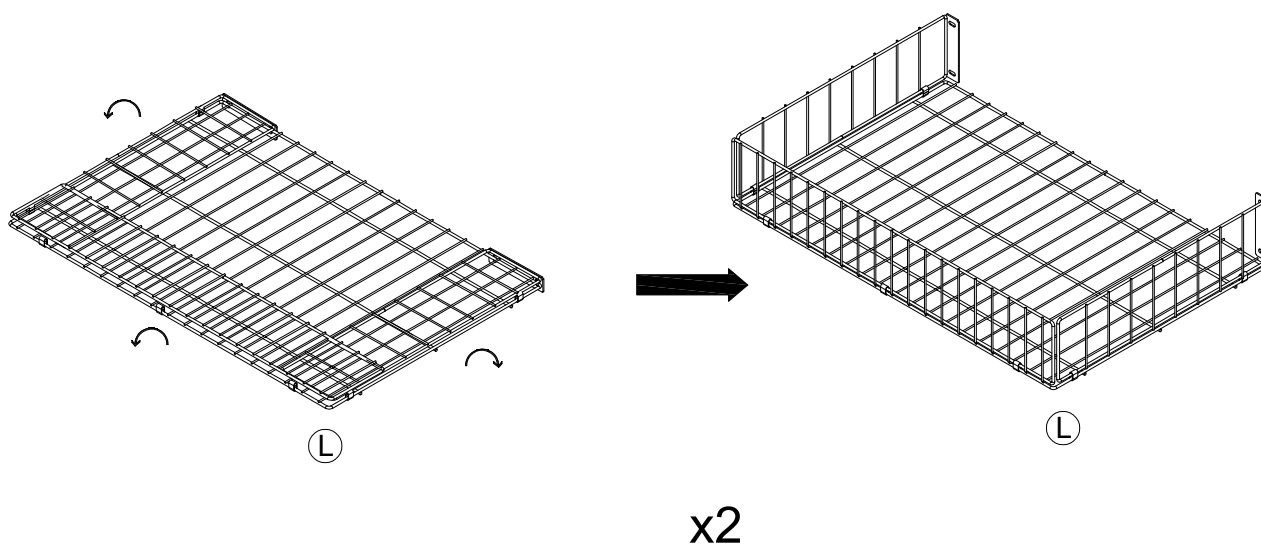


10

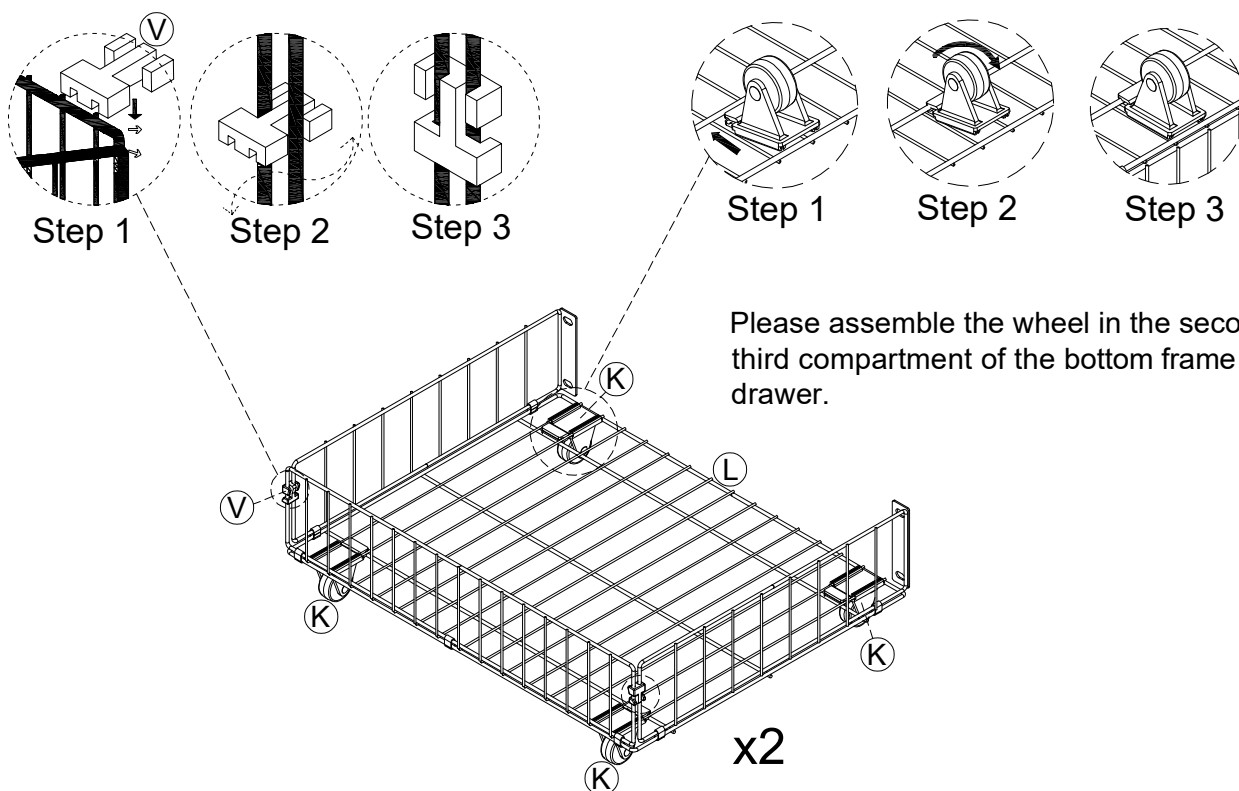

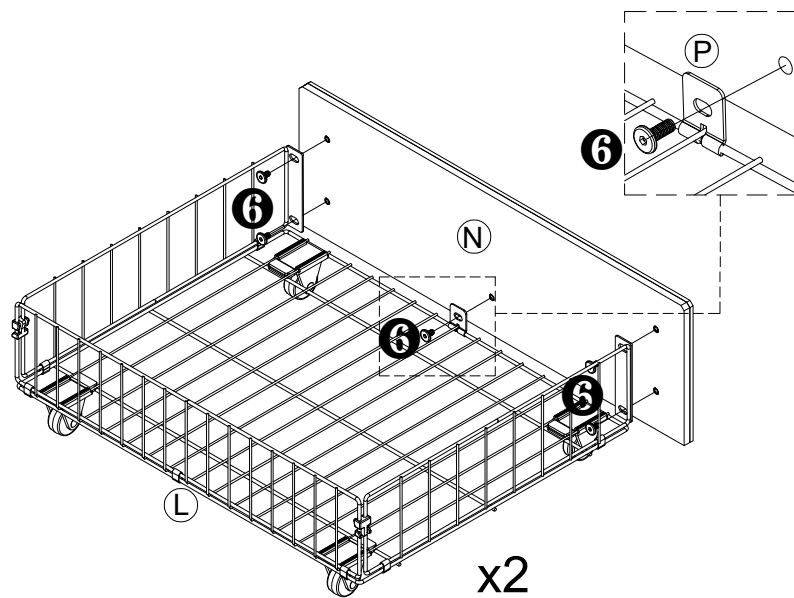

6		10PCS
	M6*10	

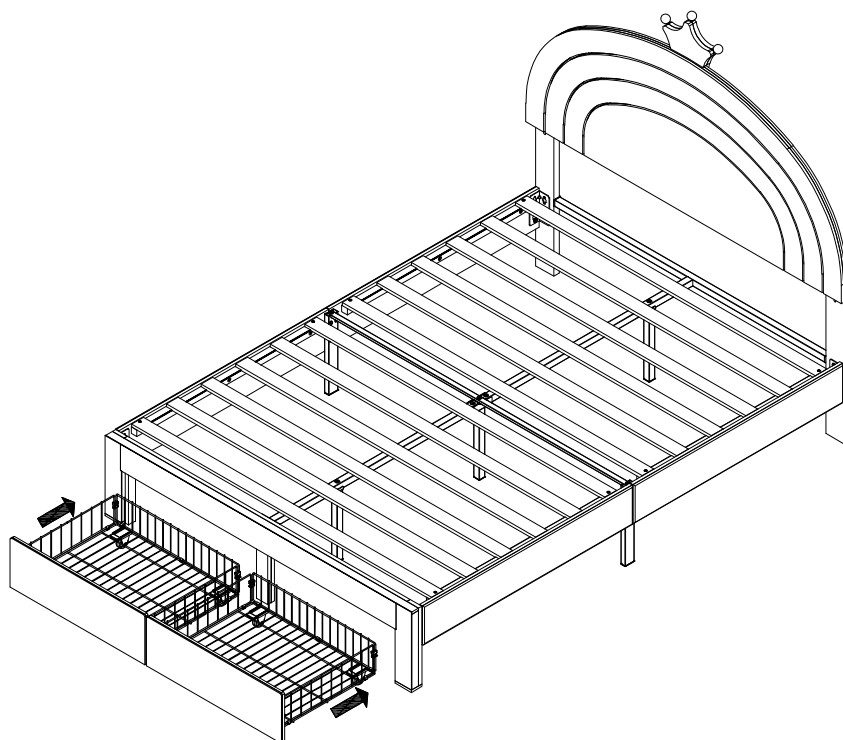

Finish

