



Product manual

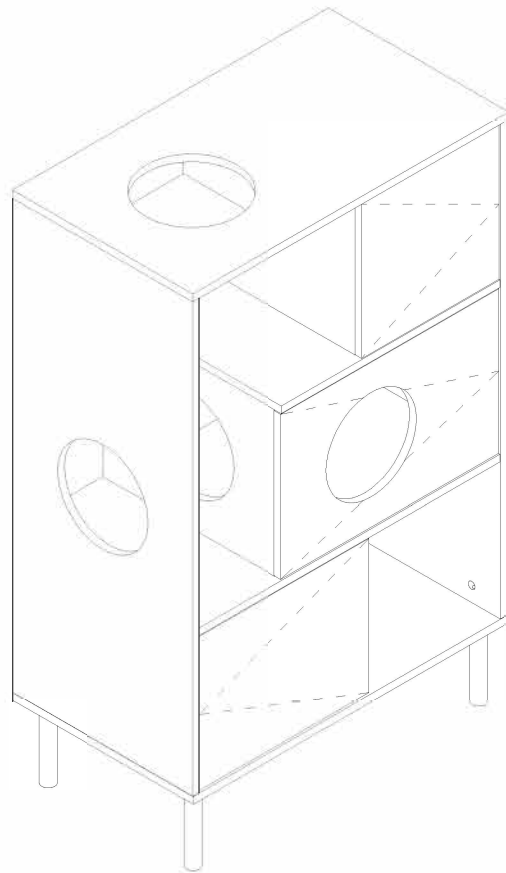

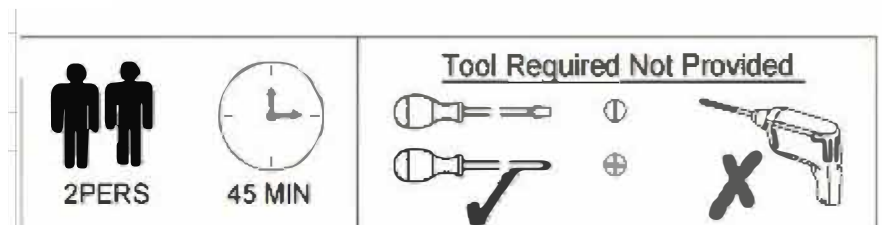

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.


Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.

Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.












Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.


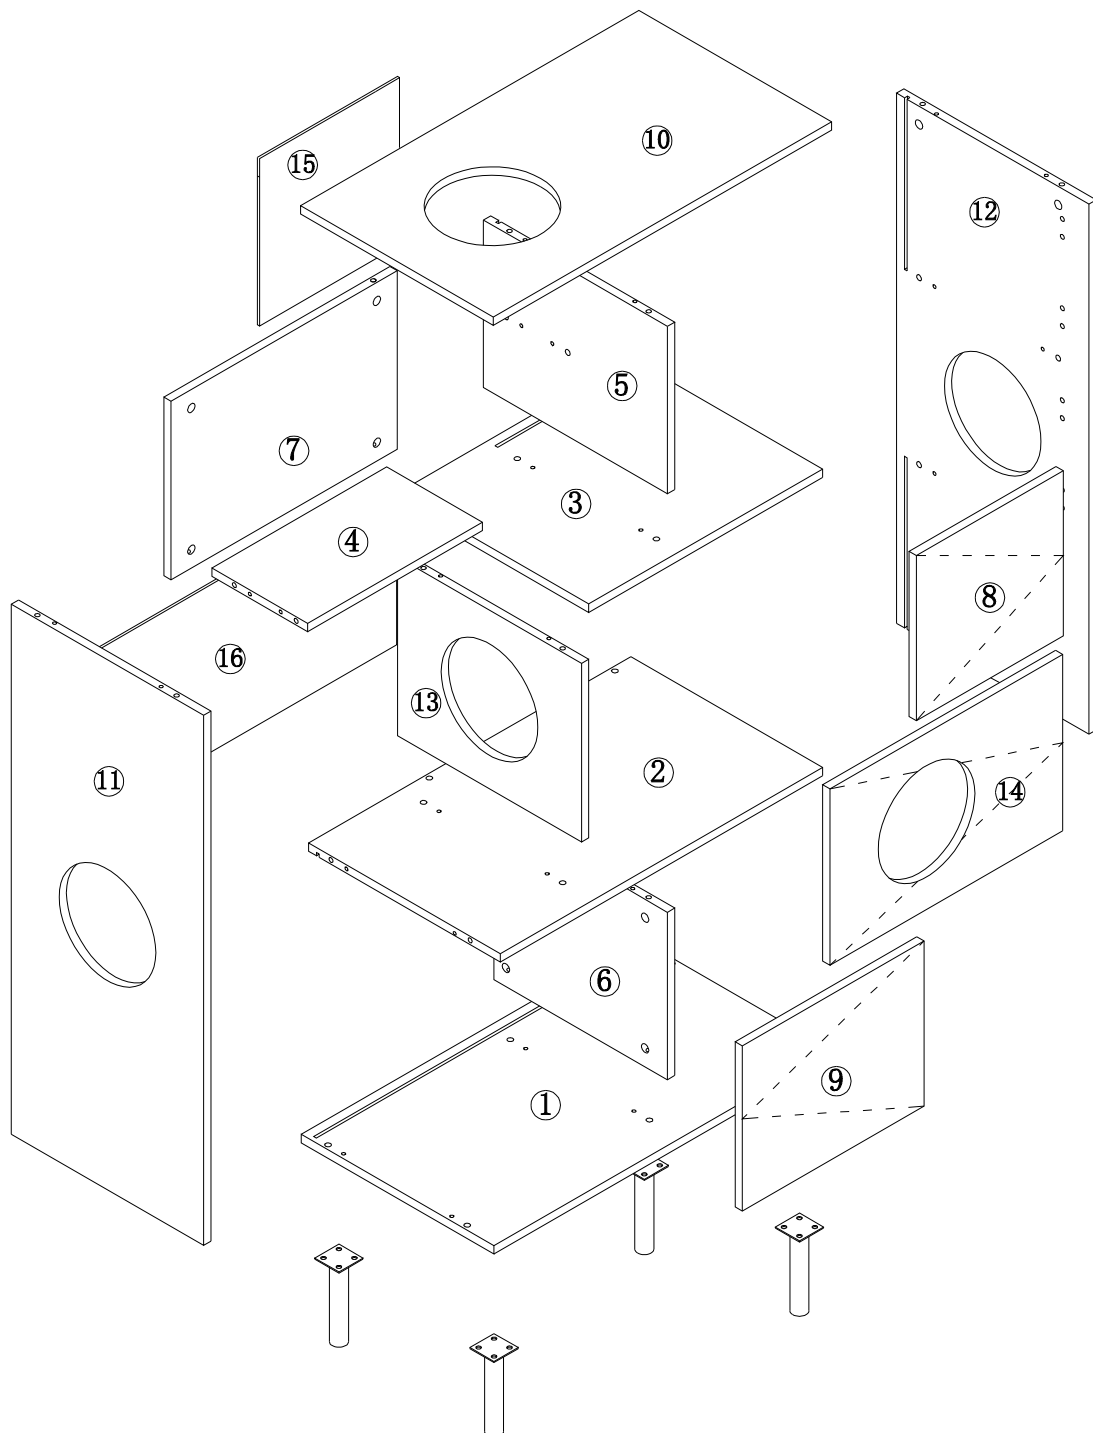


Parts List



			
① x1pc	② x1pc	③ x1pc	④ x1pc
			
⑤ x1pc	⑥ x1pc	⑦ x1pc	⑧ x1pc
			
⑨ x1pc	⑩ x1pc	⑪ x1pc	⑫ x1pc
			
⑬ x1pc	⑭ x1pc	⑮ x1pc	⑯ x1pc

Hardware List

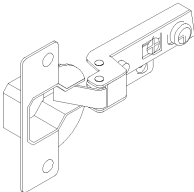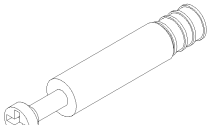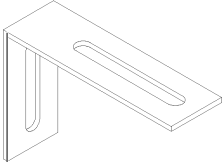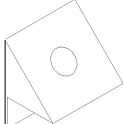
				
M3. 5*14mm	M4*30mm		M6*40mm	Ø15*12mm
Ⓐ x46pcs	Ⓑ x2pcs	Ⓒ x6pcs	Ⓓ x34pcs	Ⓔ x34pcs
				
Ø6*30mm	H150mm	30mm		M6*10mm
Ⓕ x30pcs	Ⓖ x4pcs	Ⓗ x2pcs	Ⓘ x2pcs	Ⓙ x16pcs
				
M4				
Ⓚ x1pc	Ⓛ x8pcs	Ⓜ x34pcs	Ⓝ x1pc	

	
M3. 5*14mm	M4*30mm
Ⓐ x46pcs	Ⓑ x2pcs

NOTE-1: Please note that the shapes of screws A and B are similar. Please install according to the instructions and distinguish them!

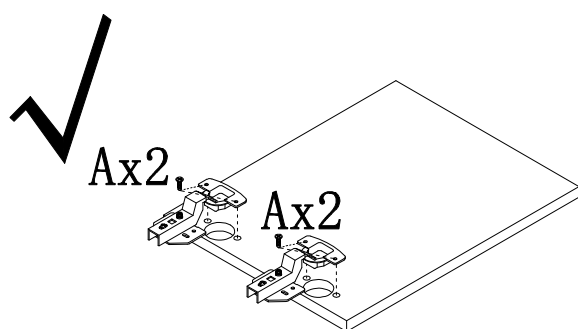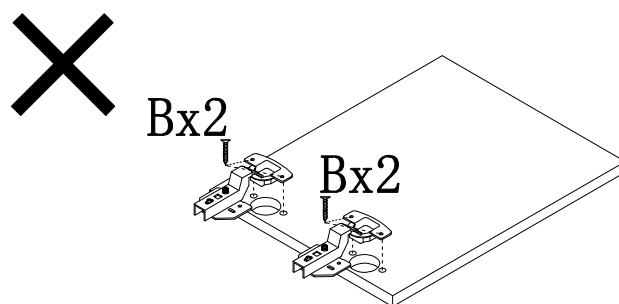


NOTE-2: Please note that this product contains multiple screws. When connecting the door panel and the side panel, be sure to use the shortest screw, type A. Using the wrong screw may cause damage to the plate parts.

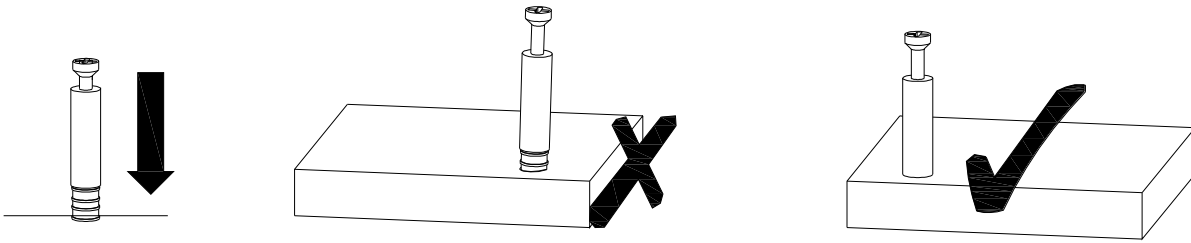

NOTE-3:

QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten

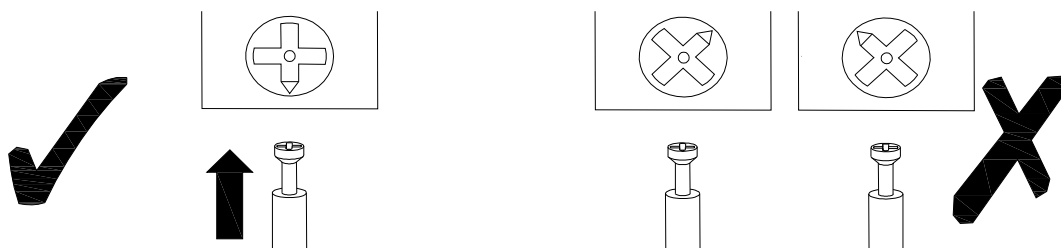


NOTE-4:


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


NOTE-5:



Quickfit head should be in the centre of the cam lock when the two panels are joined.
Camlock should be inserted before quickfit.

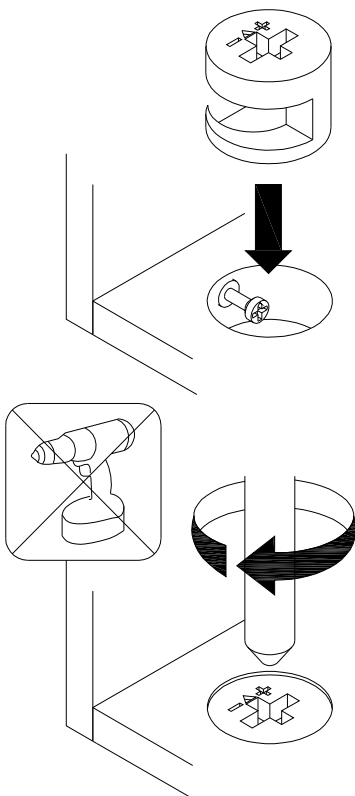


Step 1

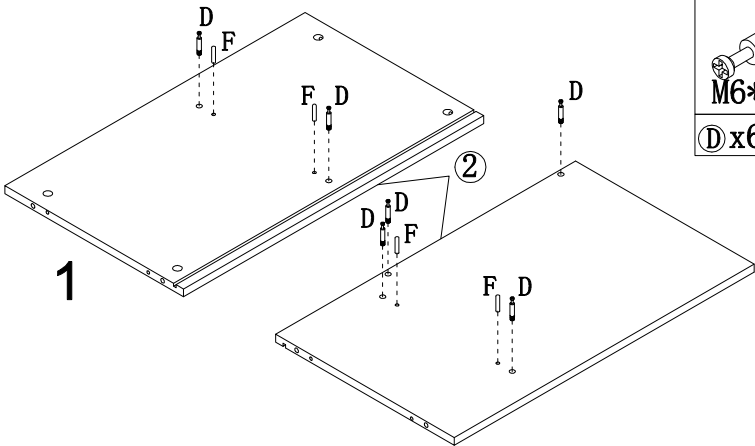


 M6*40mm D x6pcs	 ø15*12mm E x2pcs
	 ø6*30mm F x4pcs

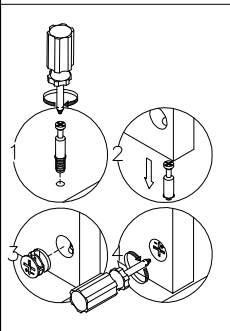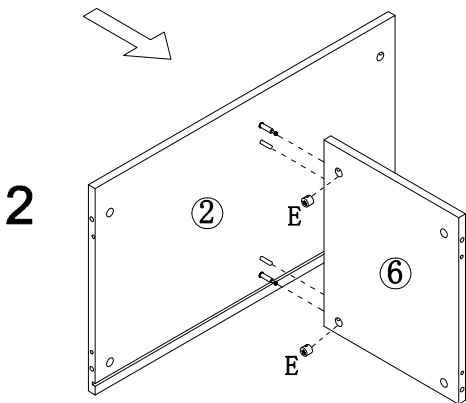


Step 2

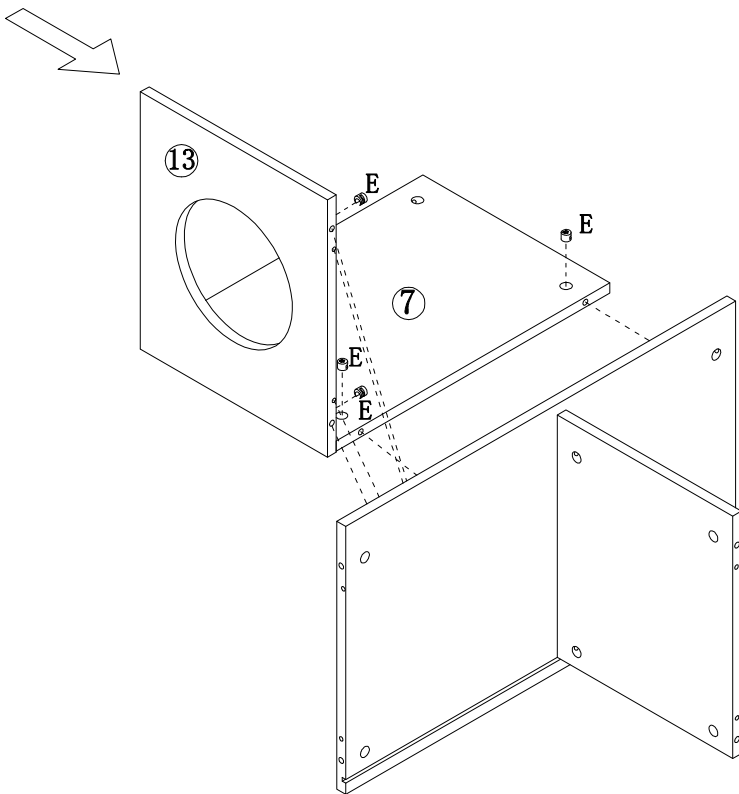



 ø15*12mm E x4pcs
--

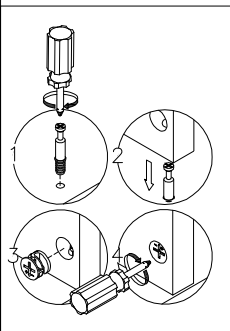


Step 3

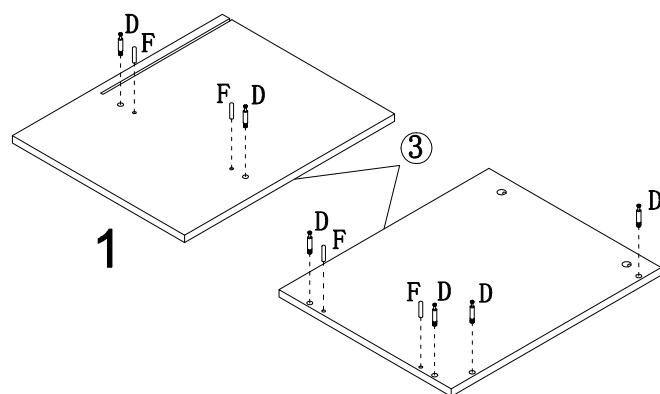



 M6*40mm D x6pcs	 Ø15*12mm E x4pcs
	 Ø6*30mm F x4pcs

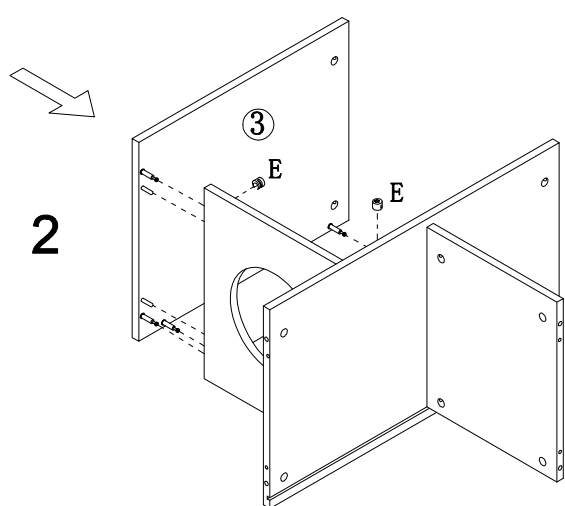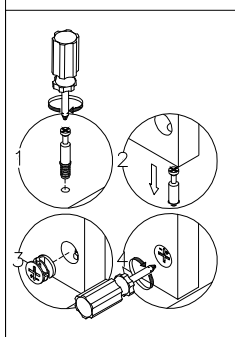


Step 4

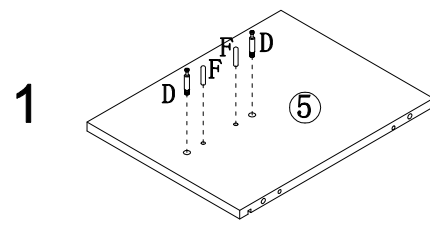


 M6*40mm D x2pcs	 Ø15*12mm E x4pcs
	 Ø6*30mm F x2pcs

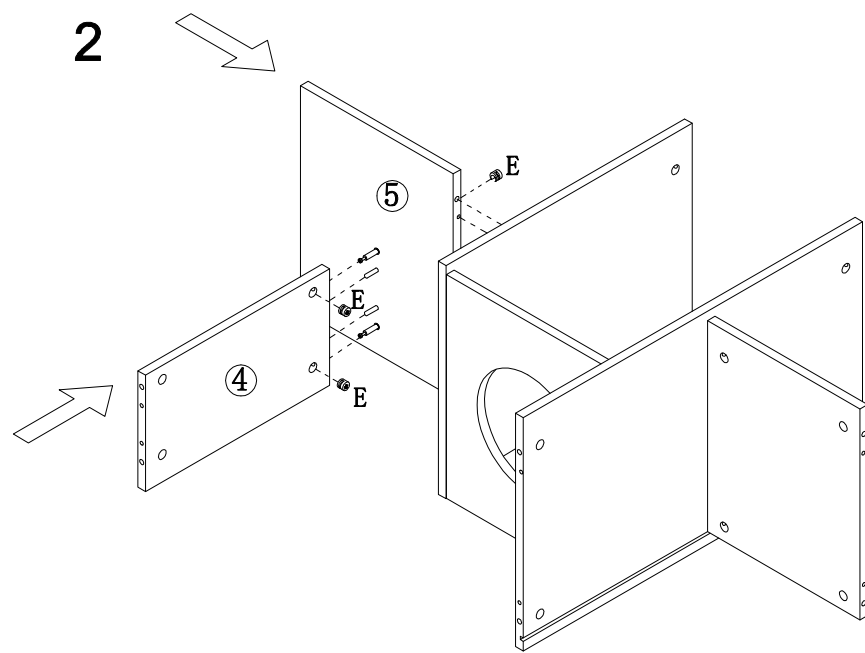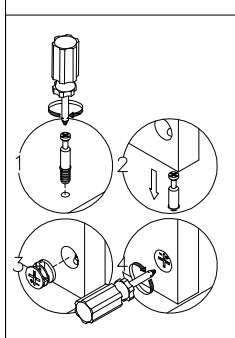



Step 5

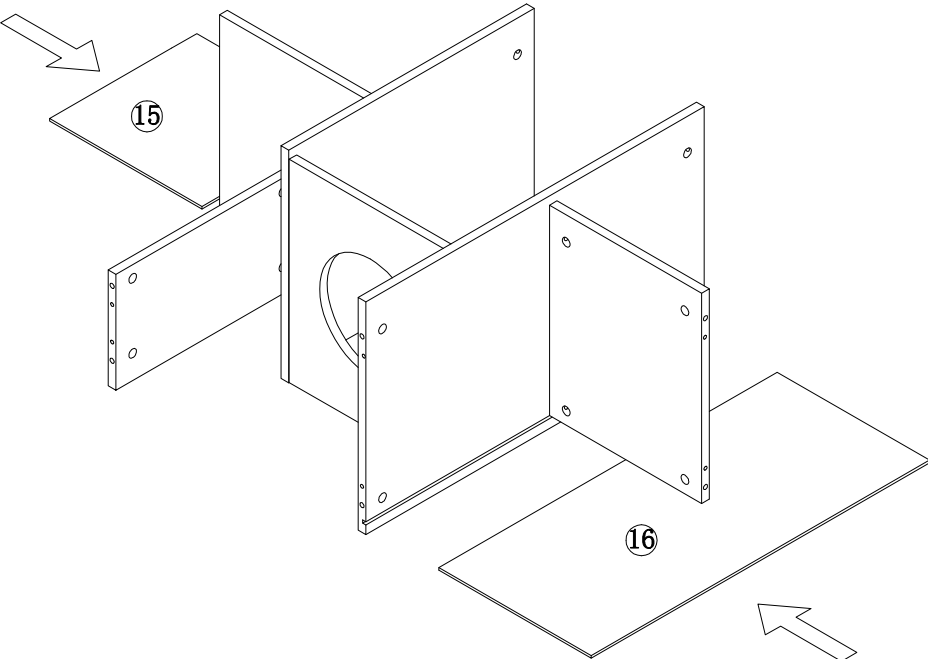


Step 6

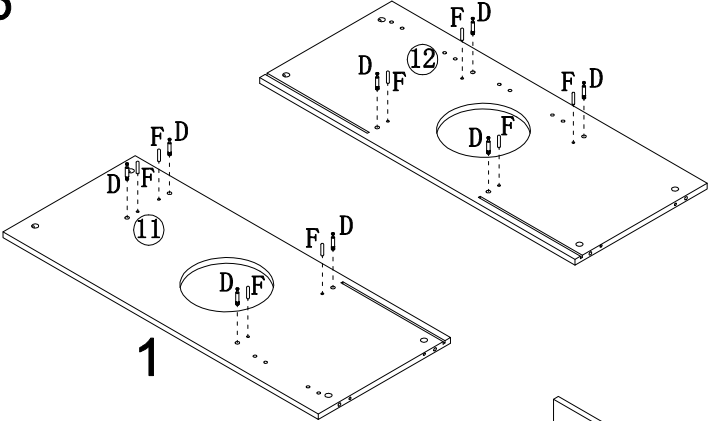


1


 M6*40mm D x8pcs	 Ø15*12mm E x8pcs
 Ø6*30mm F x8pcs	

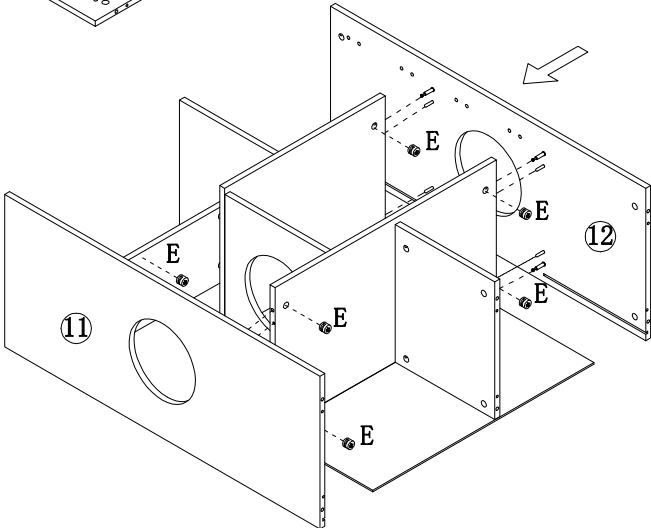


2

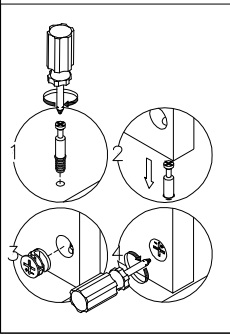


Step 7

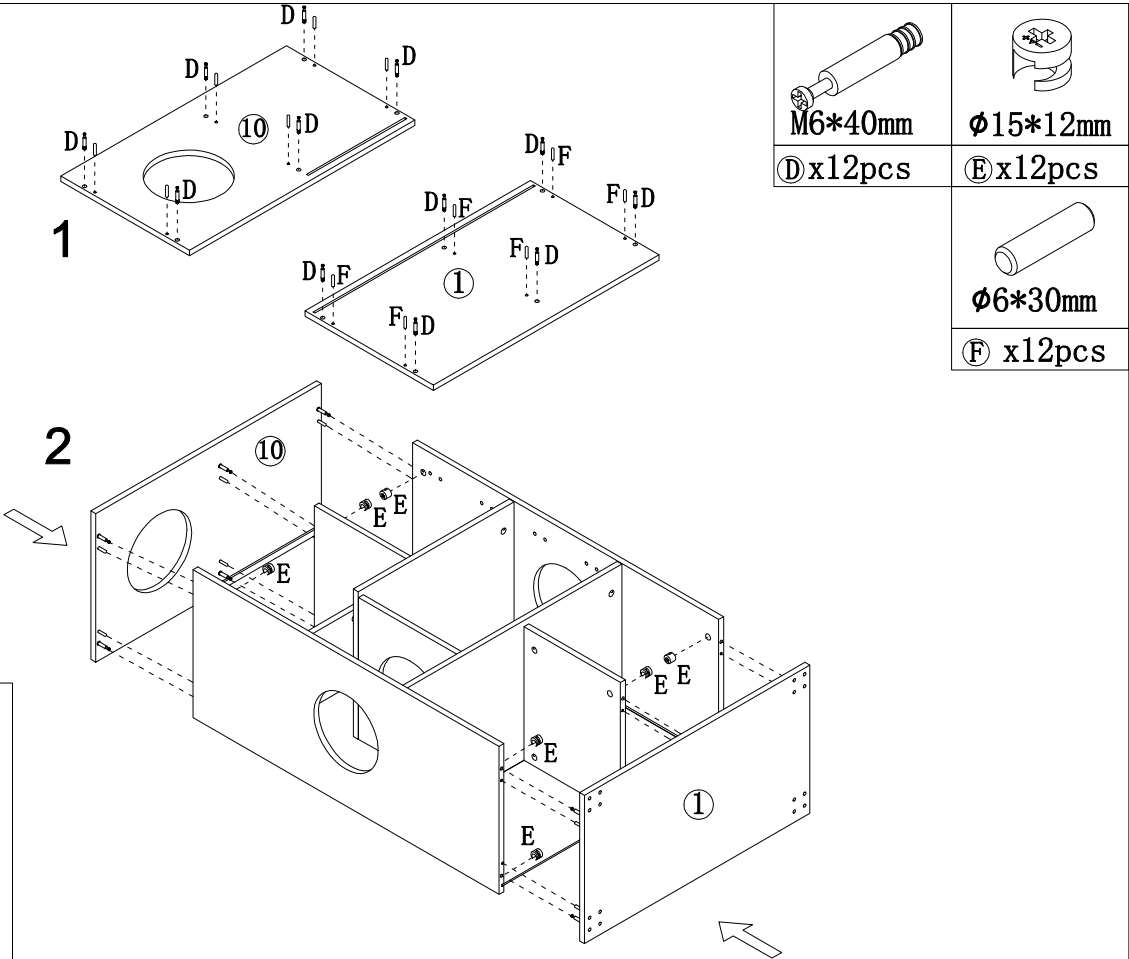


Step 8

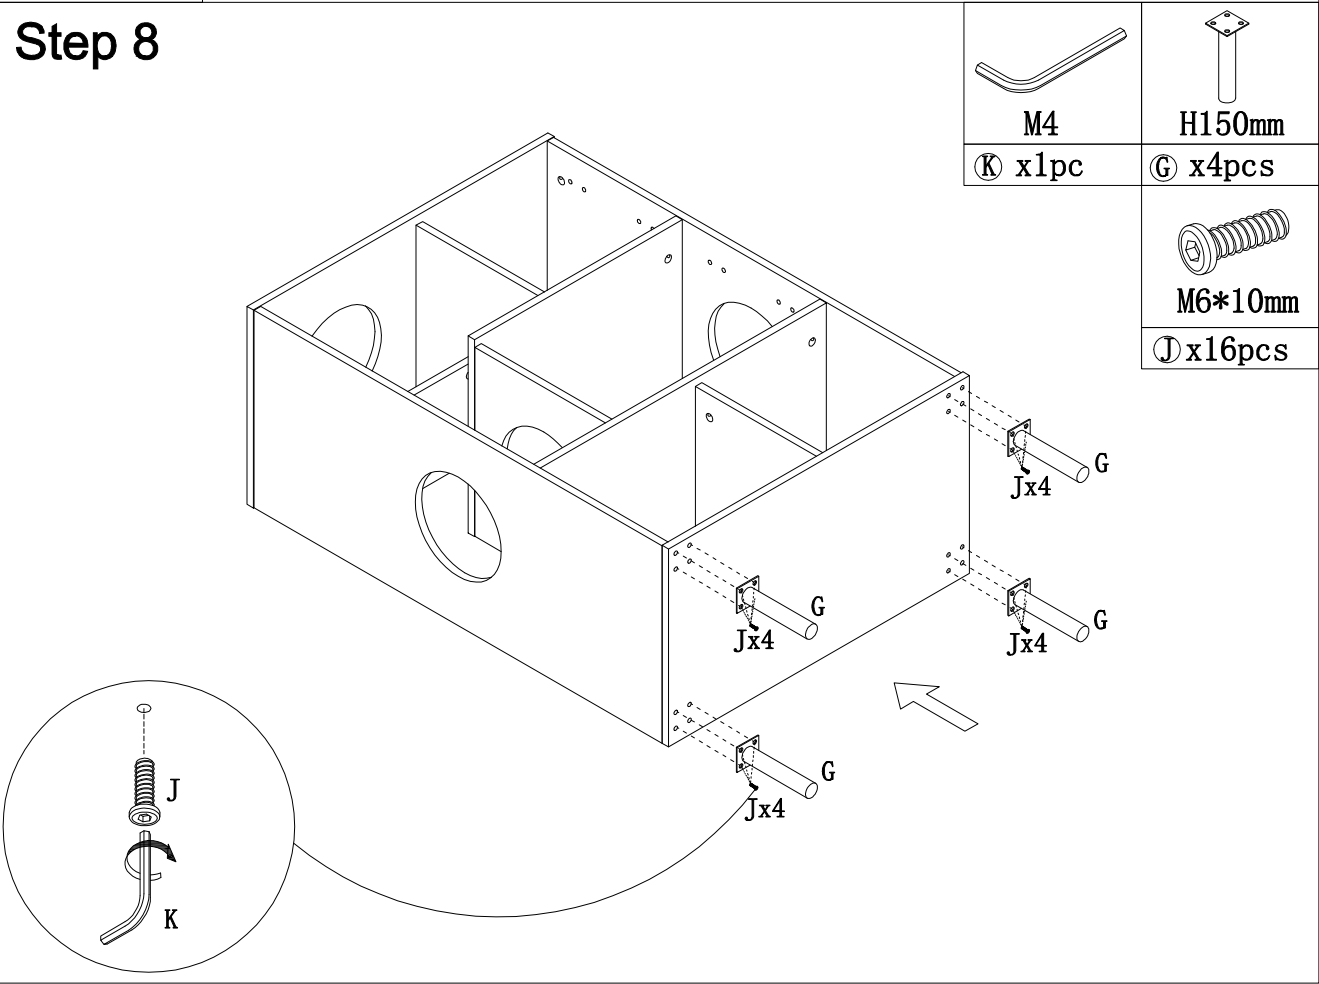


Step 9

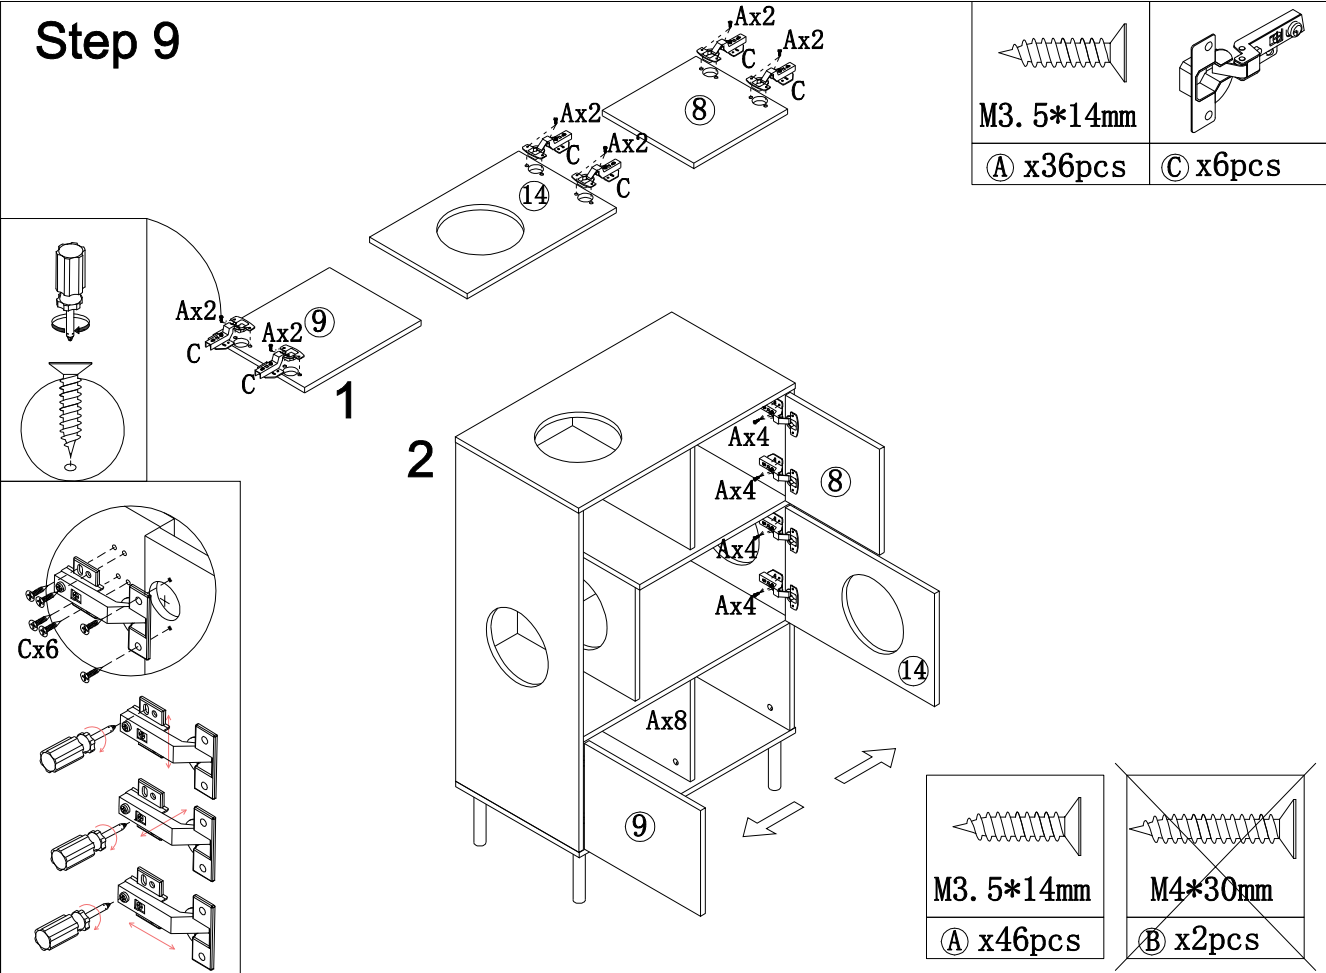


Step 10

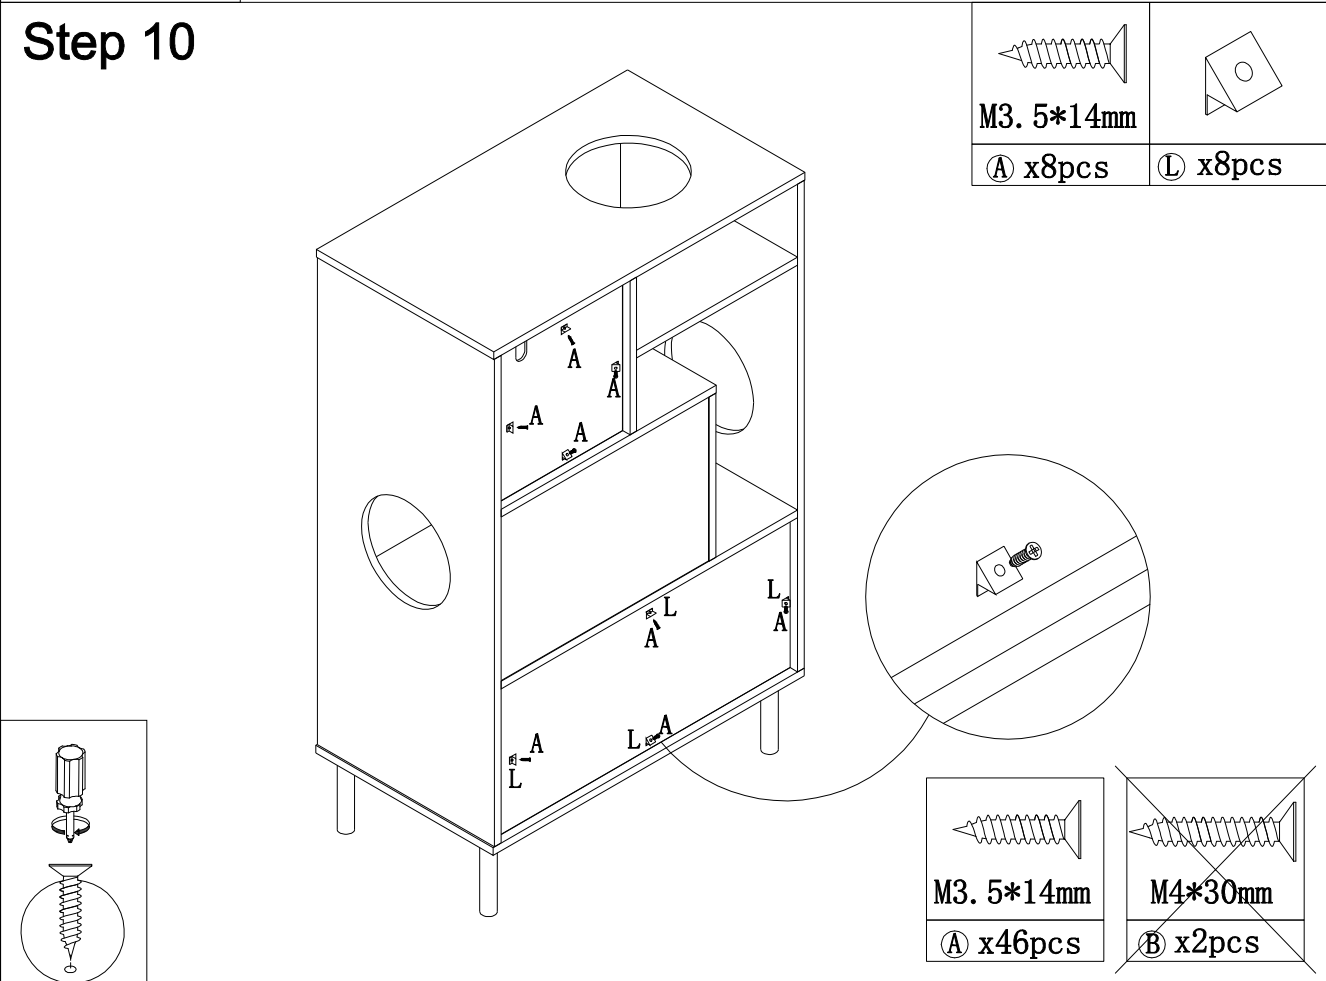

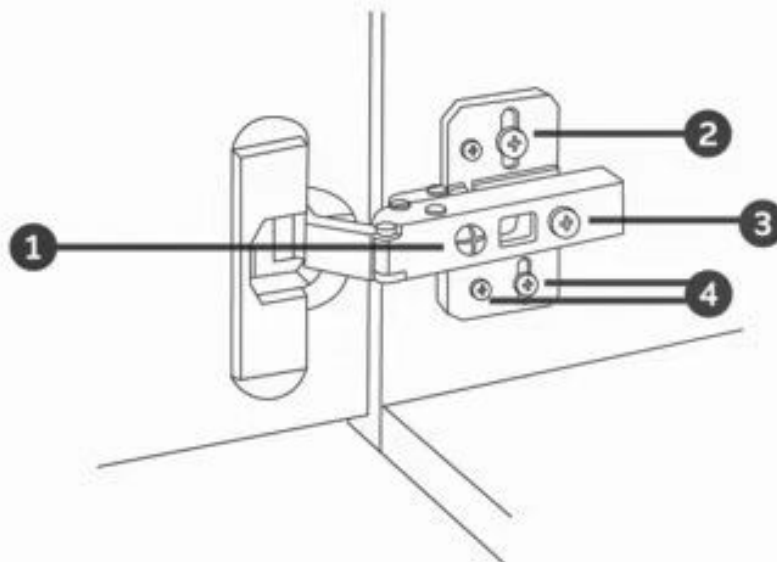


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
 the side of the cabinet
anticlockwise to move the door closer to the
 side of the cabinet

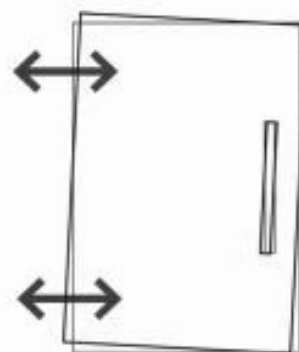

② ④ Height adjustment

While supporting the weight of the door, turn the
 screws
clockwise to move the door up
anticlockwise to move the door down


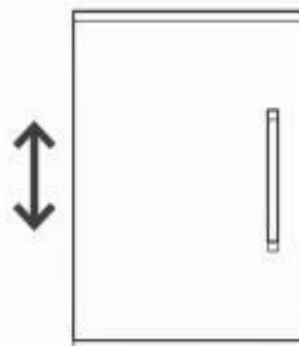




③ Forward and back adjustment


If the gap between the back of the door and the
 cabinet is too small, and the door may not close
 fully. Turn the screw
clockwise to decrease the gap between the
 door and the cabinet
anticlockwise to increase the gap between the
 door and the cabinet





Step 11


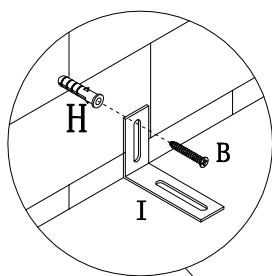
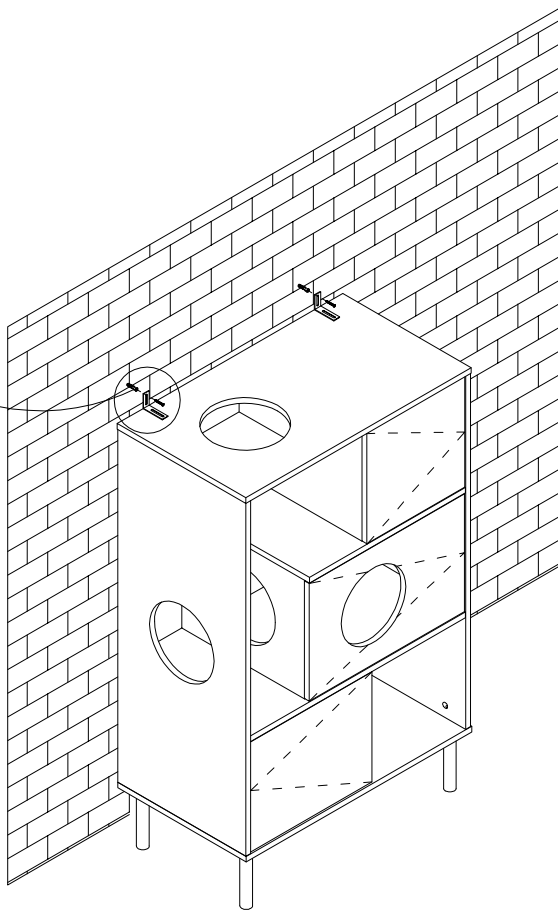





	
30mm	
Ⓜ x2pcs	Ⓜ x2pcs
	
	M4*30mm
	Ⓜ x2pcs

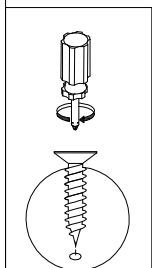

	
M3. 5*14mm	M4*30mm
Ⓜ x46pcs	Ⓜ x2pcs

Step 12

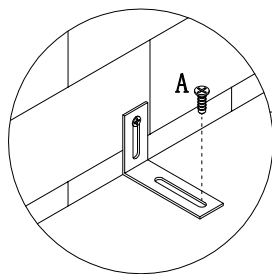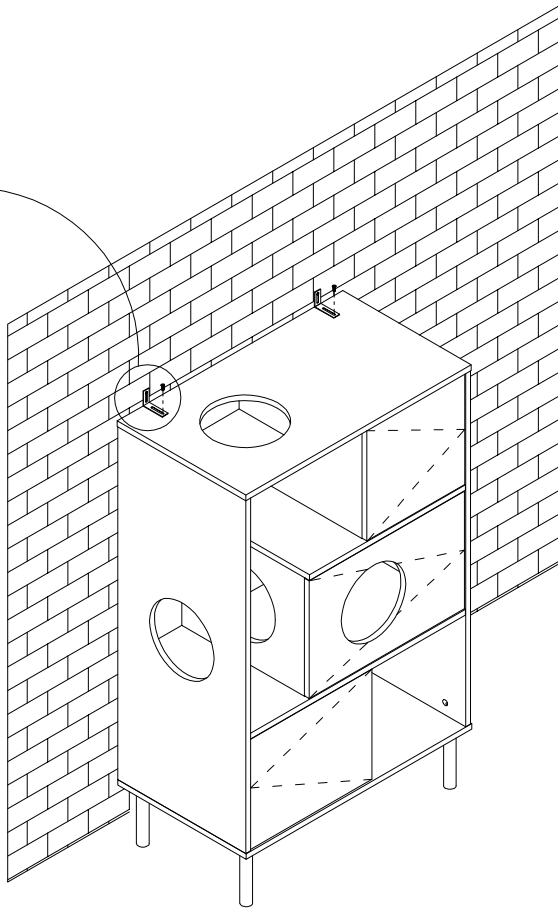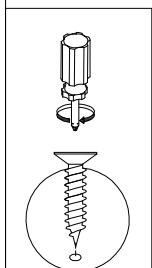



	
	M3. 5*14mm
	Ⓜ x2pcs
	
M3. 5*14mm	M4*30mm
Ⓜ x46pcs	Ⓜ x2pcs

Attention: For safety and stability, we suggest securing the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

Step 13



Ⓜ x34pcs

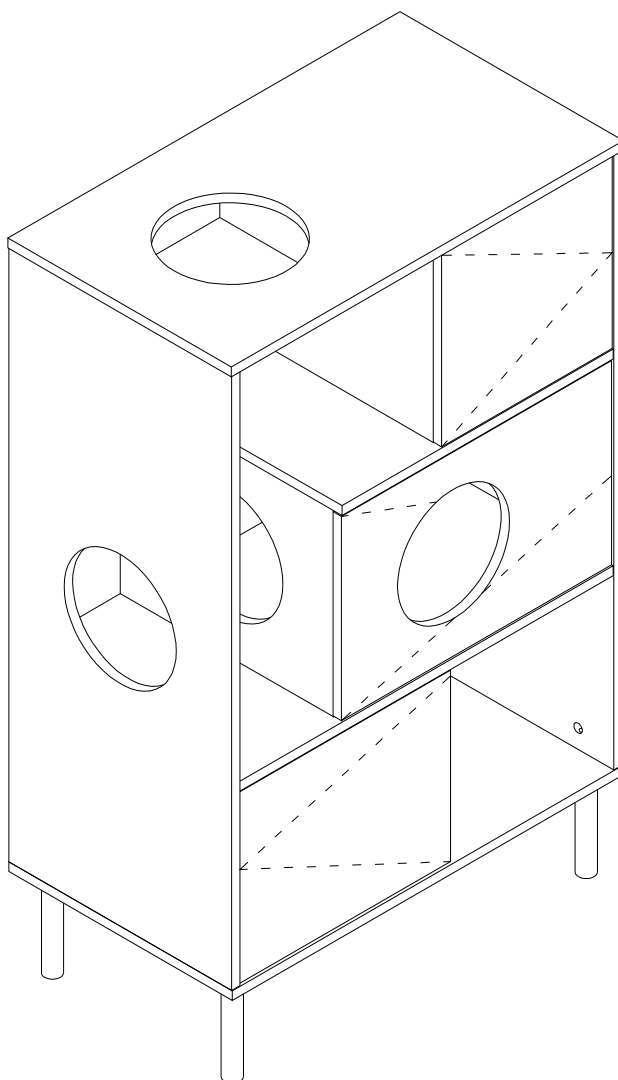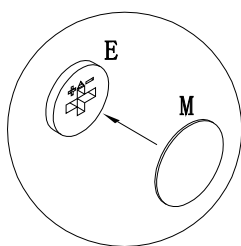

After installing the product, stick the number M on the perforated position