




ASSEMBLY INSTRUCTION

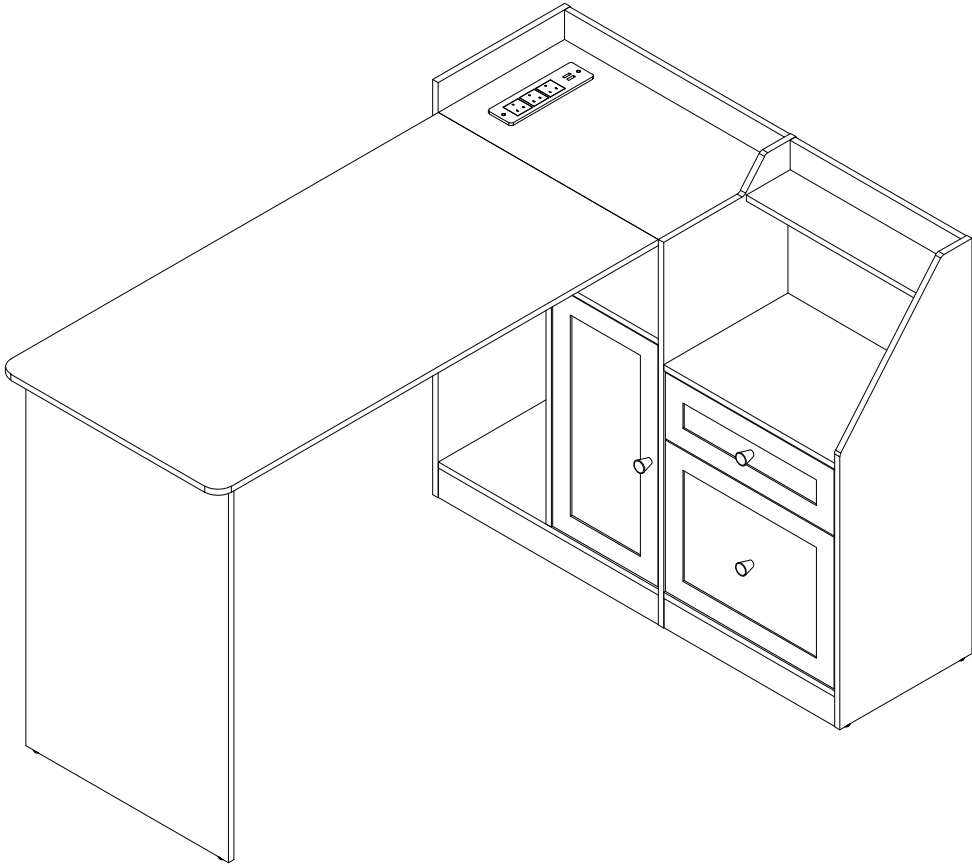

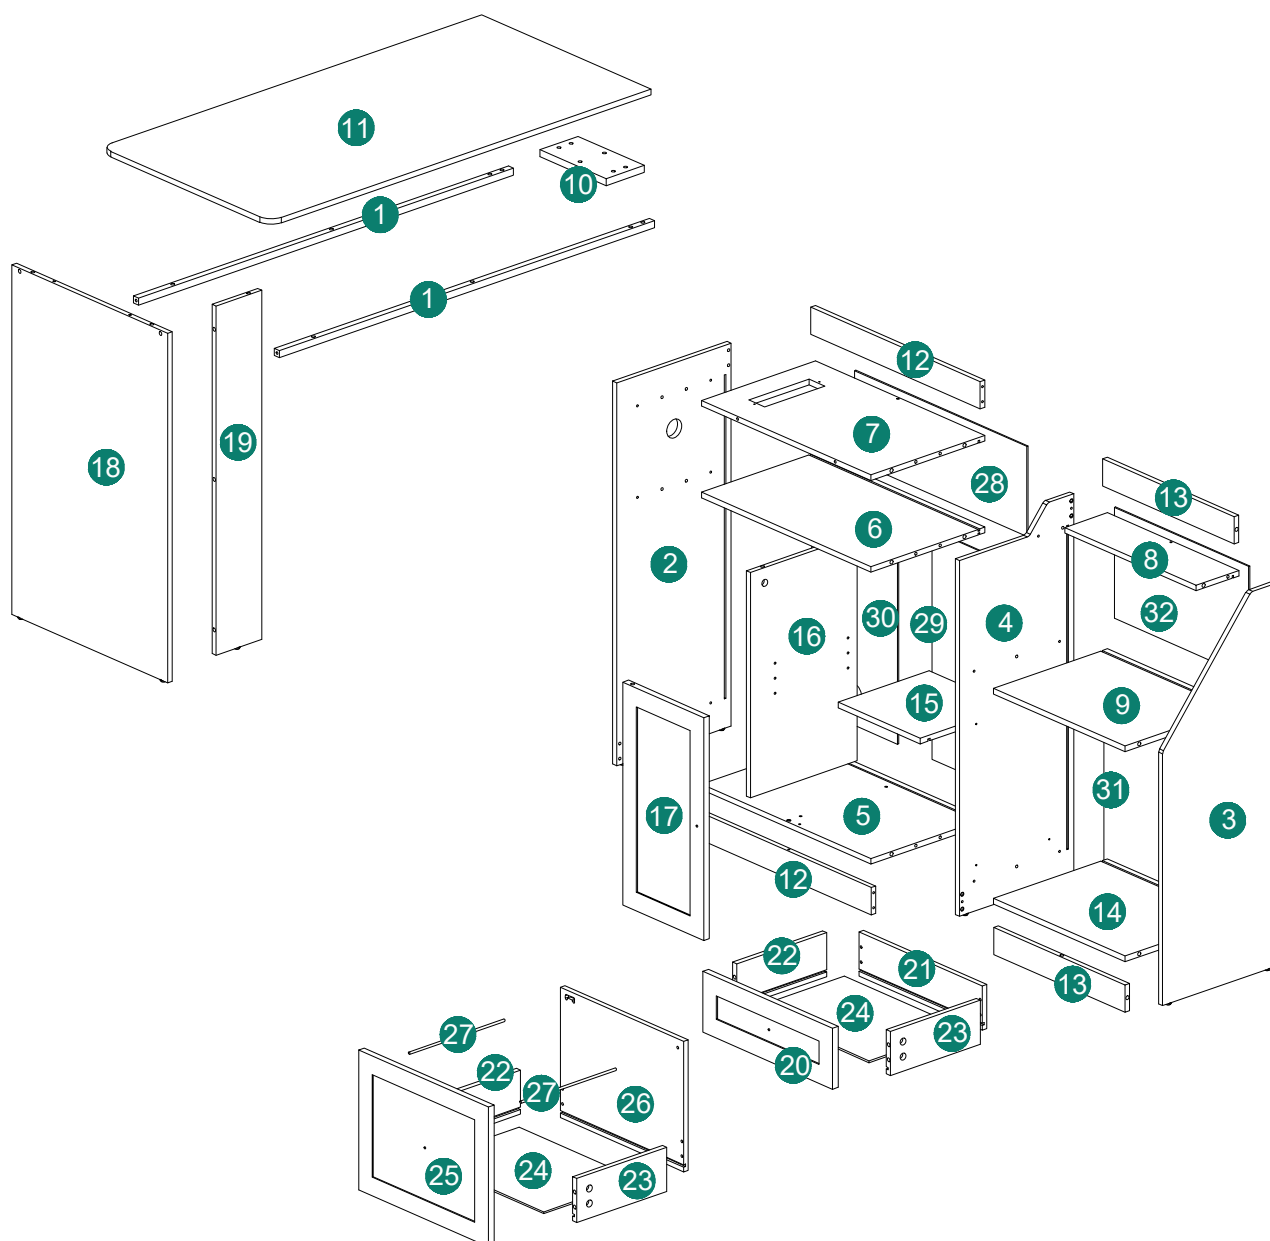


1

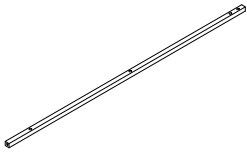

2PCS

2




1PCS

3




1PCS

4




1PCS

5

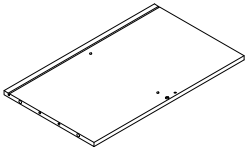


1PCS

6

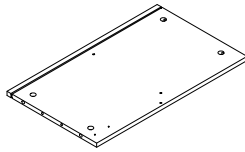


1PCS

7

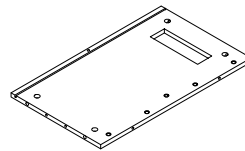


1PCS

8

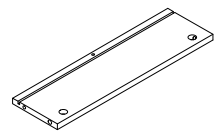


1PCS

9

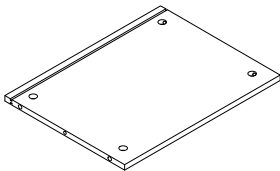


1PCS

10

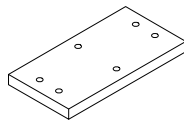


1PCS

11

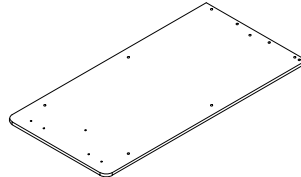


1PCS

12

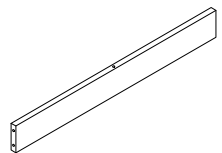


2PCS

13

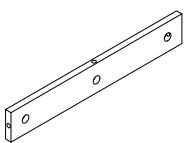


2PCS

14

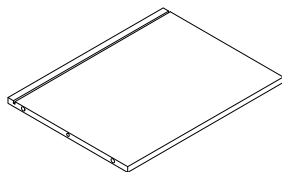


1PCS

15

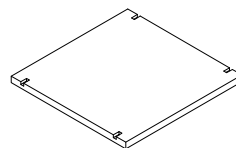


1PCS

16

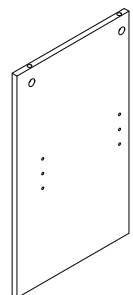


1PCS

17




1PCS

18

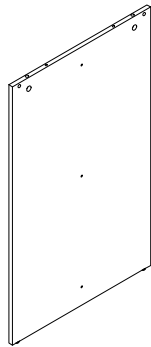


1PCS

19




1PCS

20

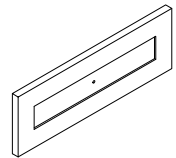


1PCS

21

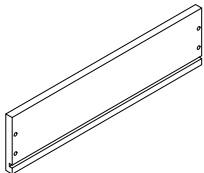


1PCS

22

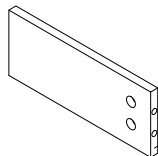


2PCS

23

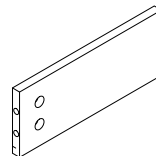


2PCS

24

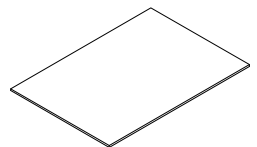


2PCS

25

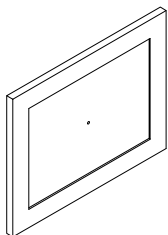


1PCS

26

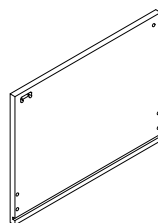

1PCS


27

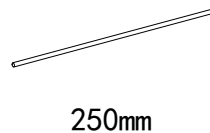

250mm

2PCS

28

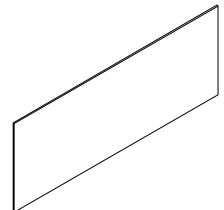

1PCS

29




1PCS

30




1PCS

31























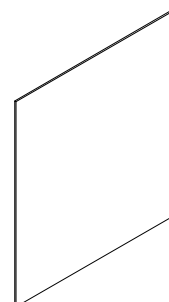


1PCS


32

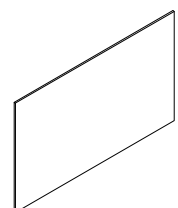


1PCS

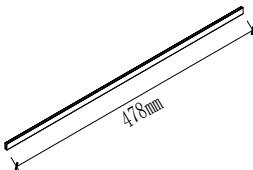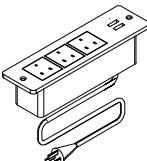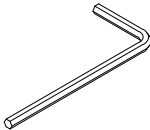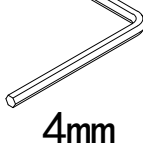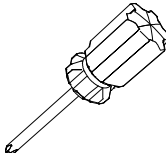A  M6*40 44+3PCS	B  φ15*9.3mm 44+3PCS	C  φ6*30mm 22+2PCS	D  M5*38 20+2PCS
E  M3*12 20+2PCS	F  M3*14 20+2PCS	G  1+1PCS	H  φ5*20mm 5+1PCS
I  18+1PCS	J J1 J2 M4*18 3PCS	K K1 K2 1PCS	L  478mm 1PCS
M  M6*22 14+1PCS	N  M6*30 2+1PCS	O     M6*10 1PCS	P  2M 1PCS
Q  33+3PCS	CL CR DL DR L : 250mm 2PCS		 3mm  4mm 

1



⑦1pcs





⑫1pcs




③4pcs



①1pcs

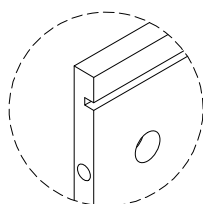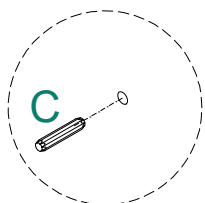

The groove is located at the bottom.

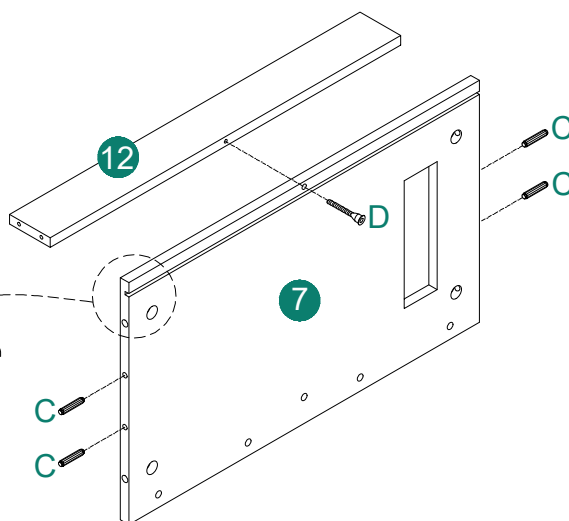

2






②1pcs





④1pcs







①12pcs

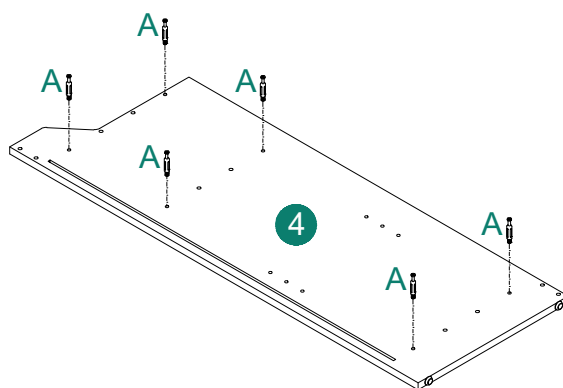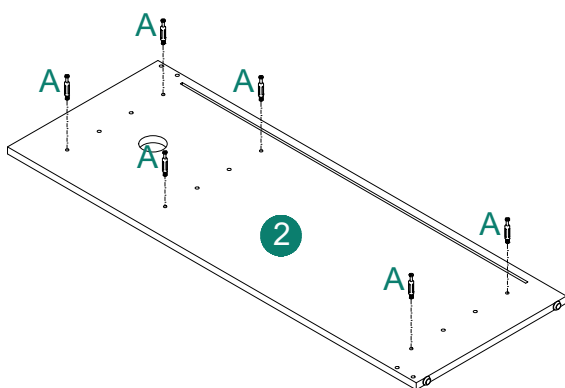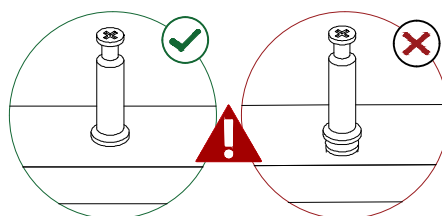

3

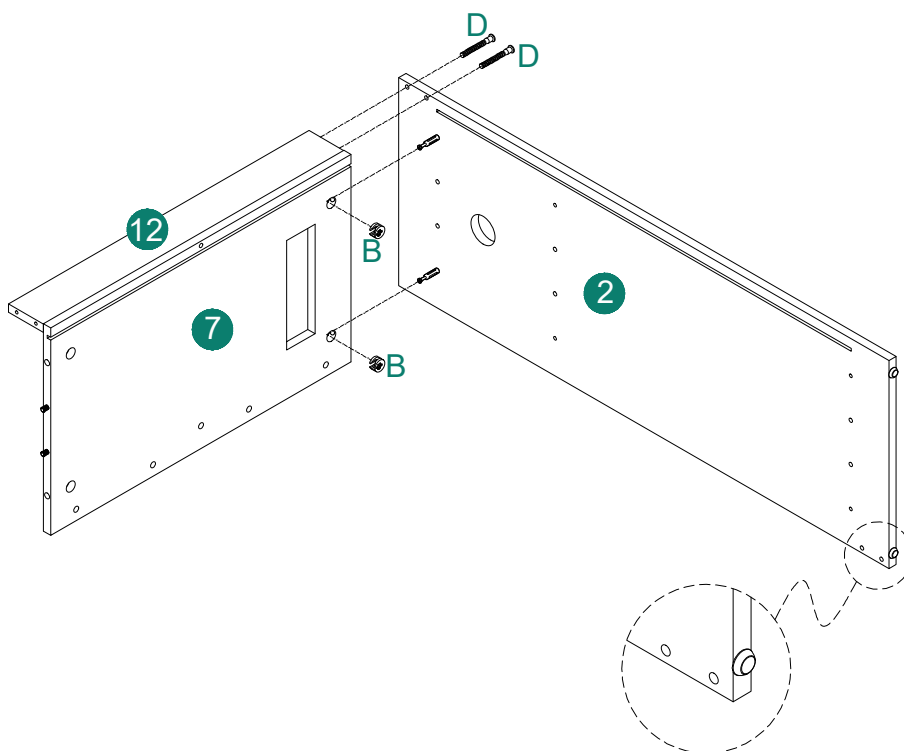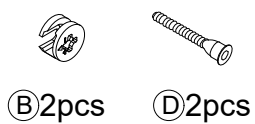


4

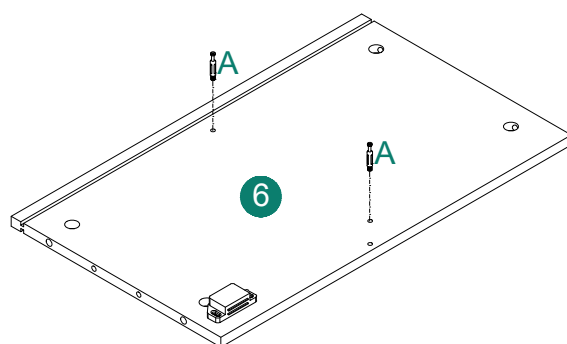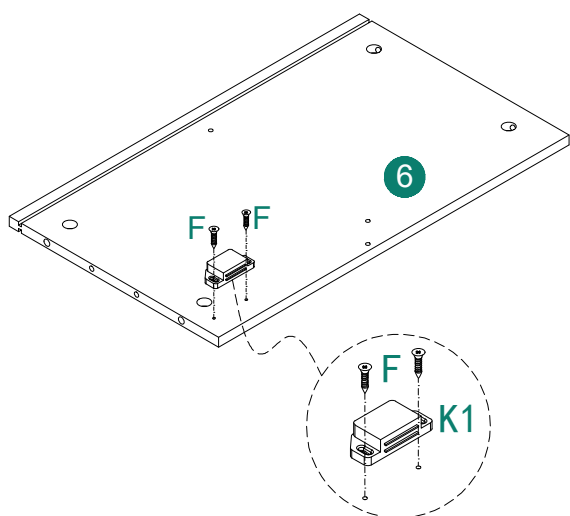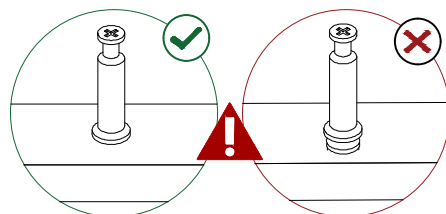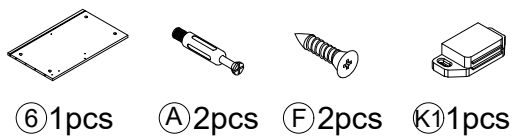


Please note that the magnet is facing outwards

5




⑤1pcs




⑫1pcs




①D1pcs

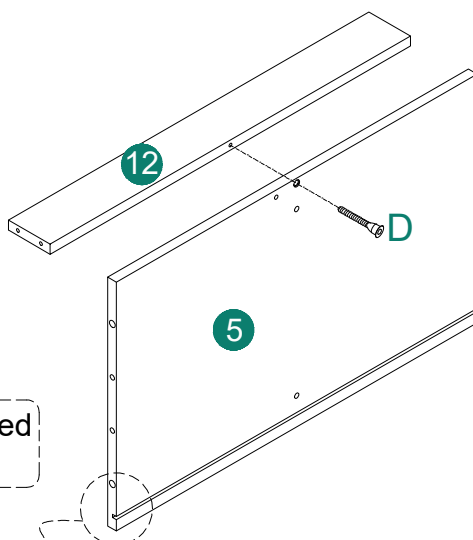

The groove is located at the bottom.

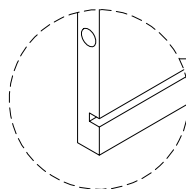


6



⑯1pcs





①D2pcs

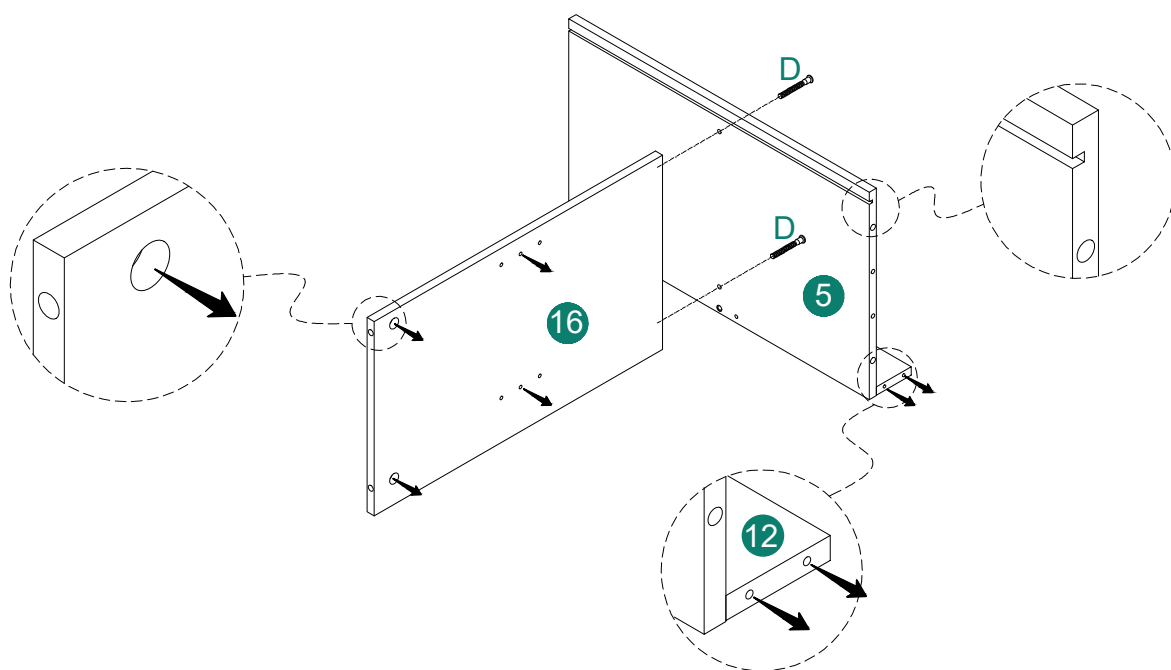

7



Ⓑ 2pcs

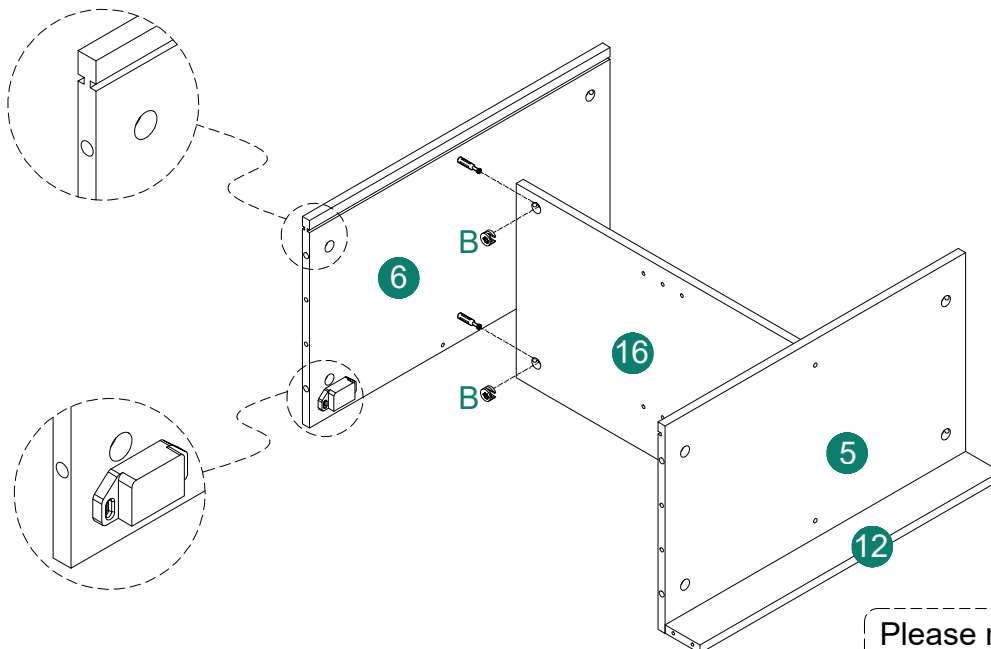
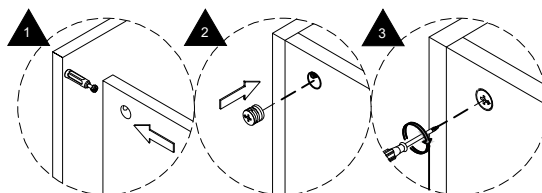


Please note that
#12 is below.

8



Ⓒ 8pcs

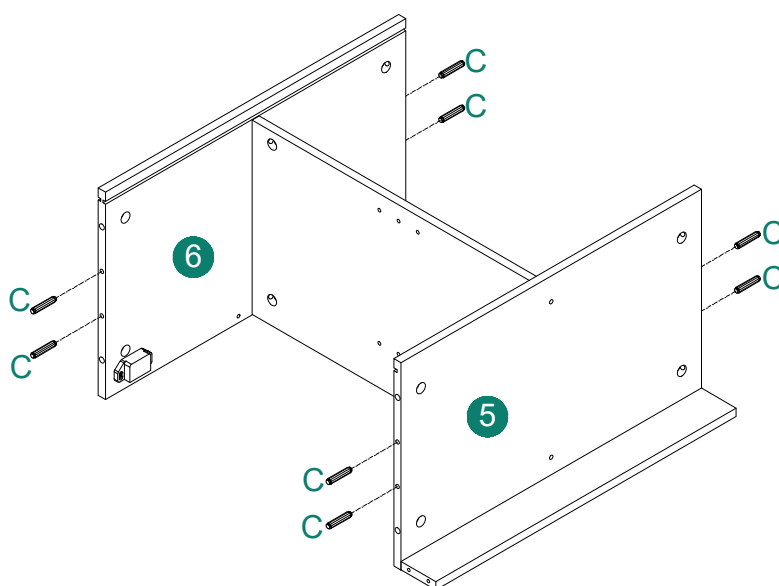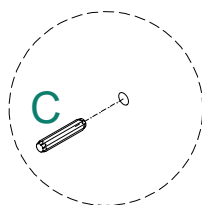



9



Ⓑ4pcs



Ⓓ2pcs

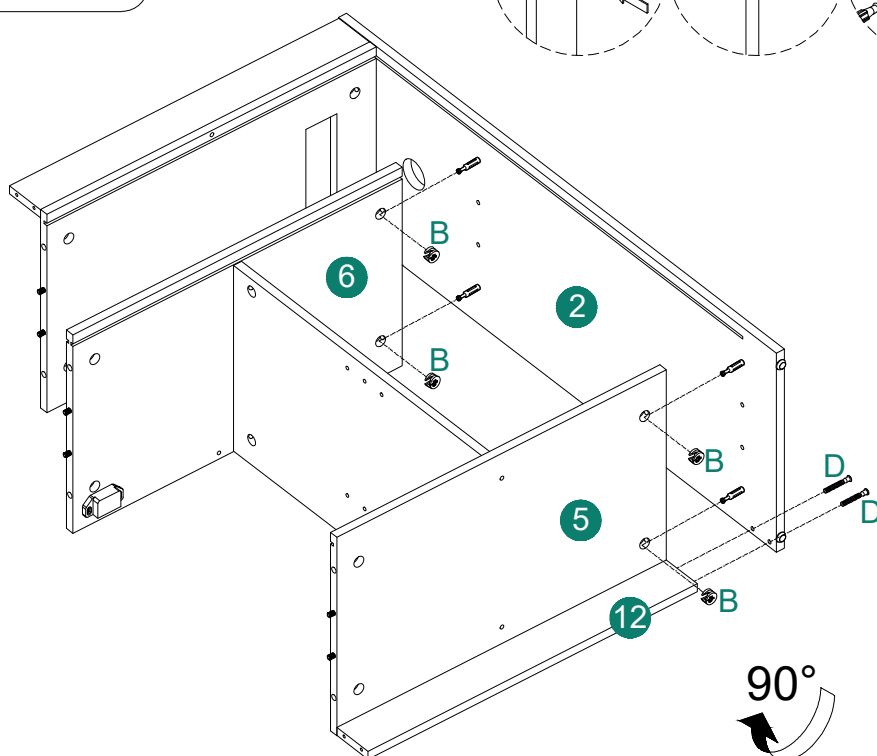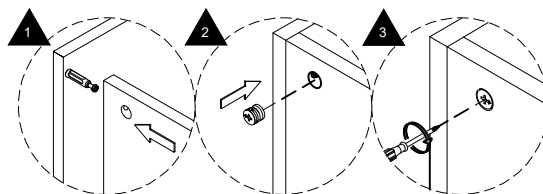


10



Ⓒ281pcs



Ⓒ301pcs

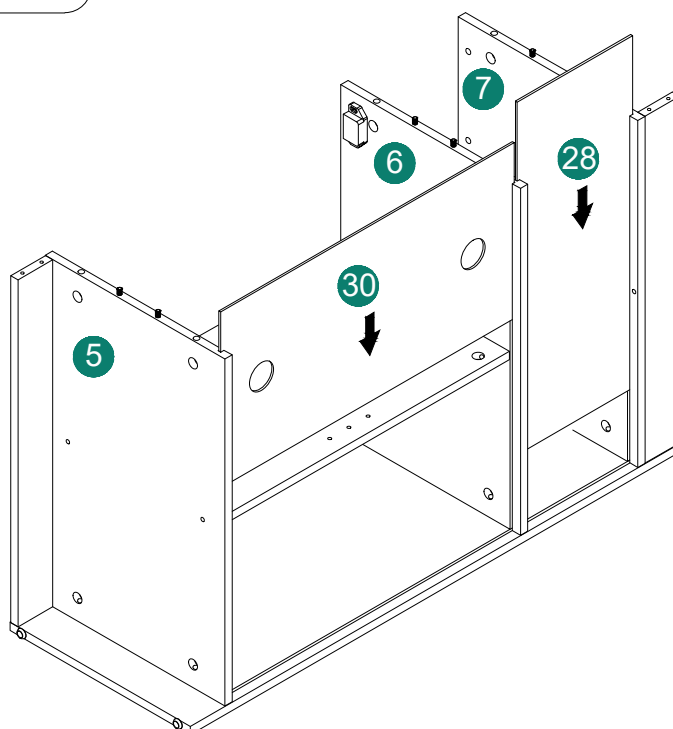


11




29 1pcs L 1pcs



Please note: First put #L, then put #29.

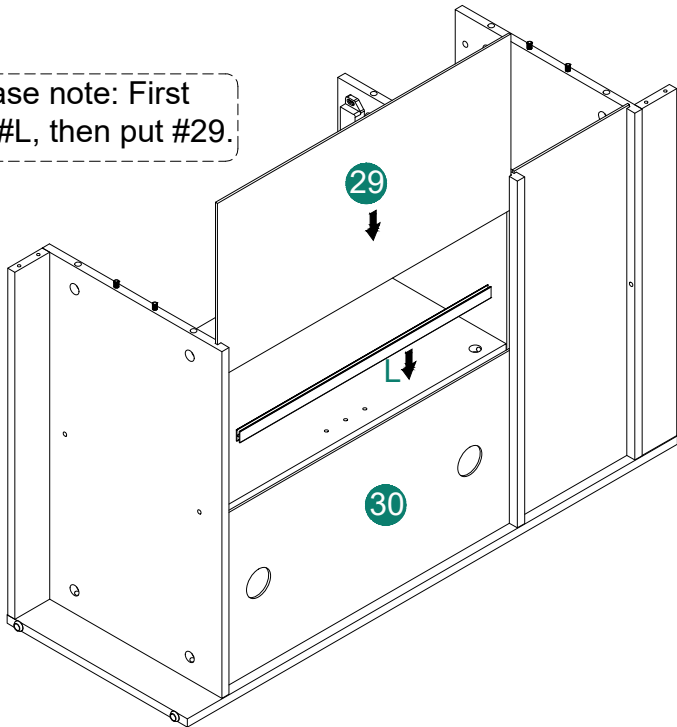

12





B 6pcs D 4pcs

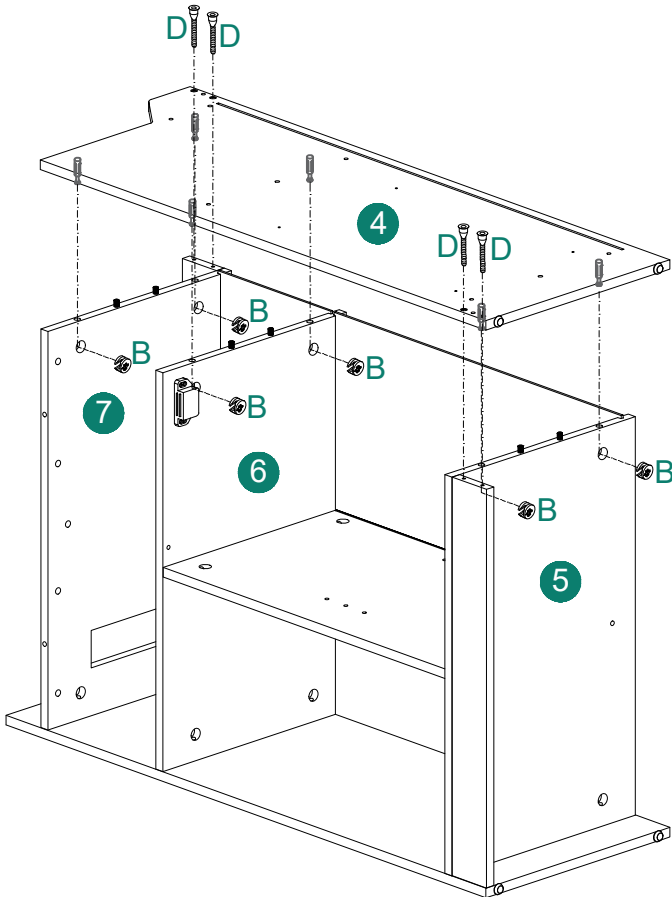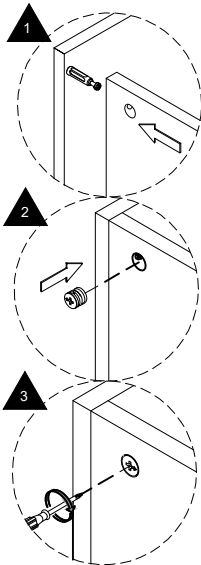

13




Ⓔ 4pcs



ⒸⓁ 2pcs



ⒸⓁ

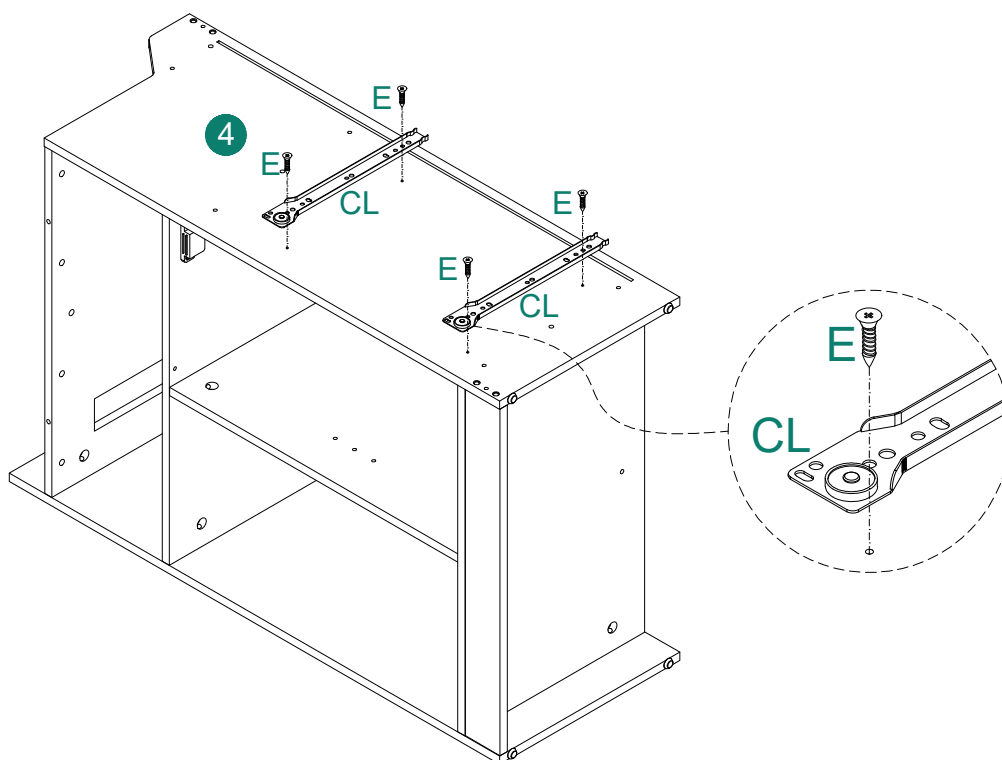




14






Ⓐ 7pcs

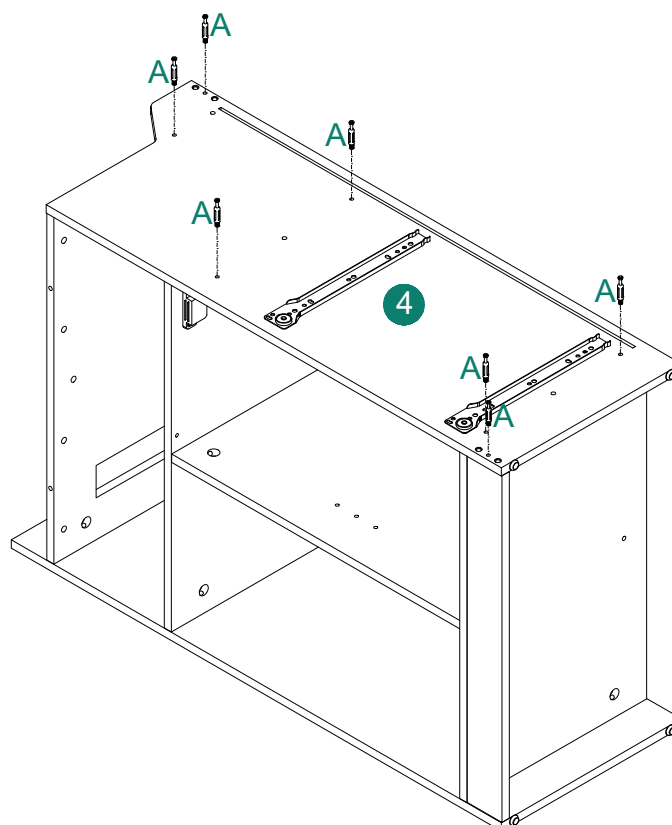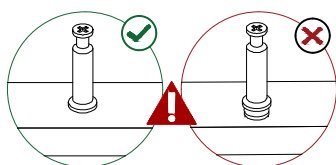


15

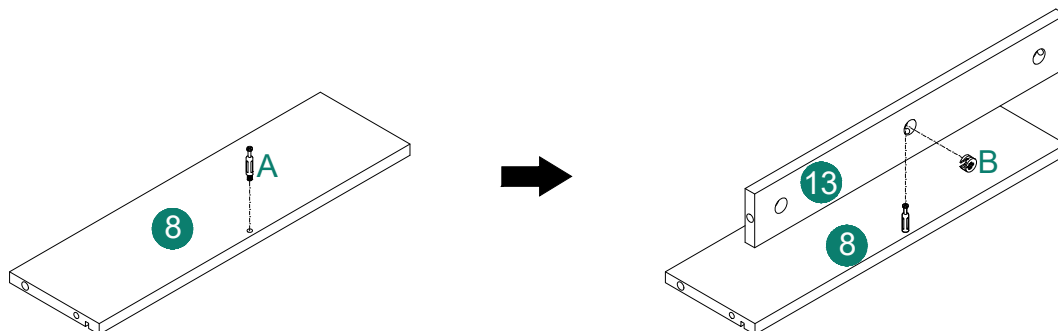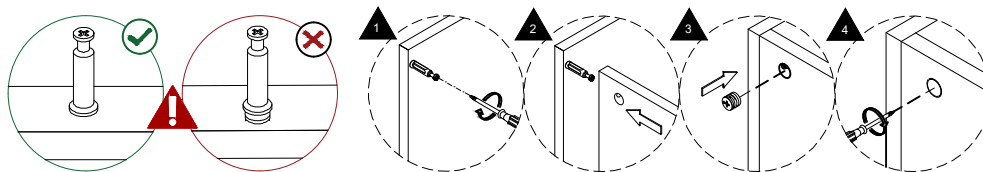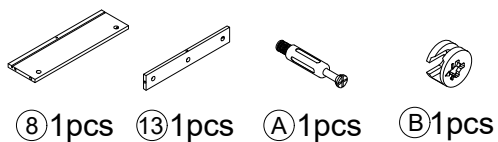

16

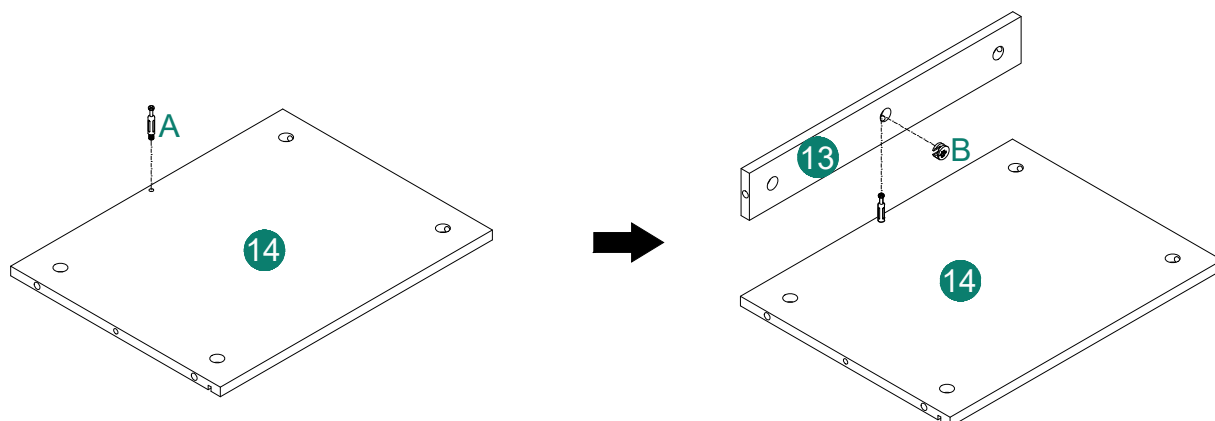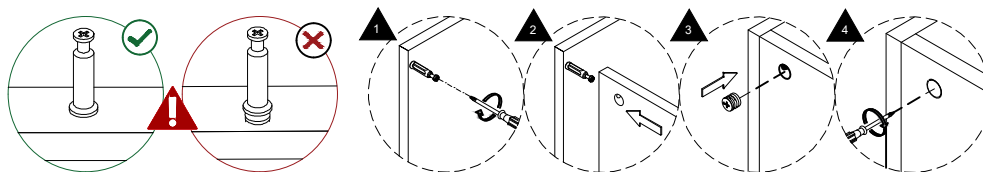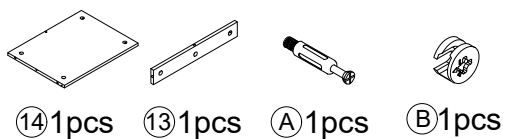

17








⑨ 1pcs



⑧ 7pcs



③ 3pcs

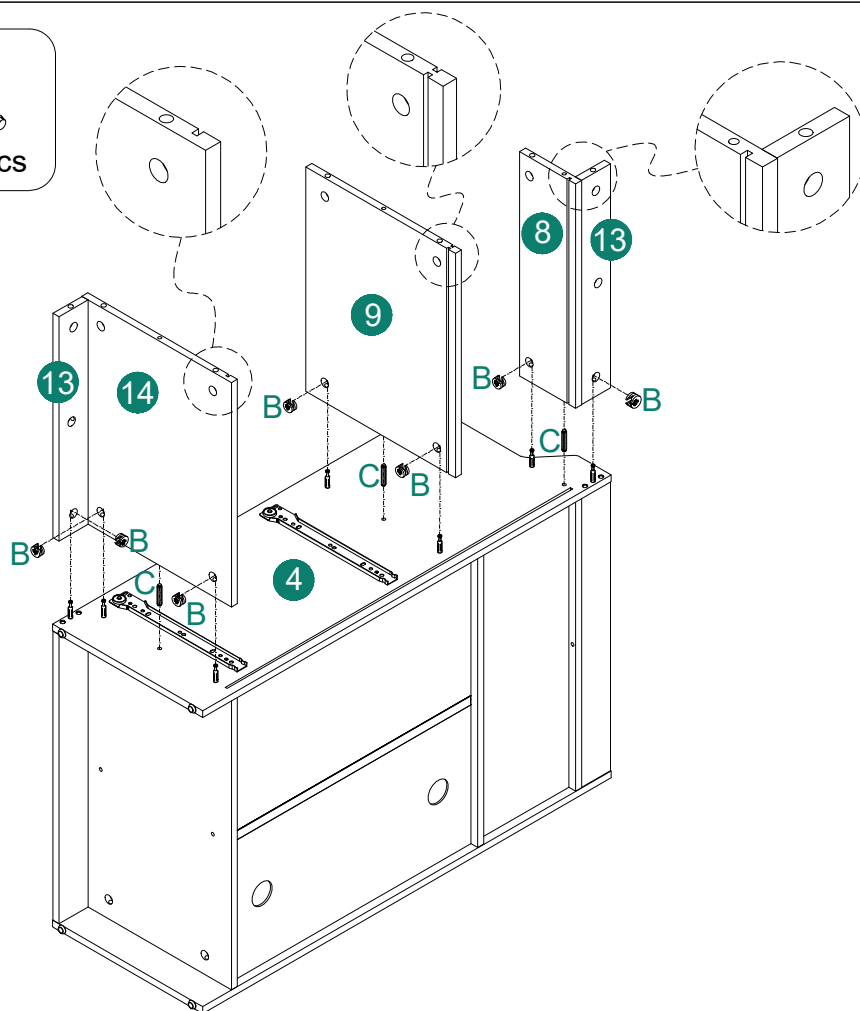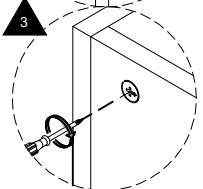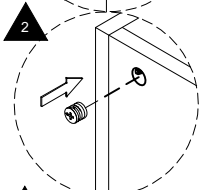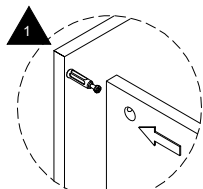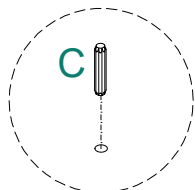


18






③ 1pcs




③ 1pcs

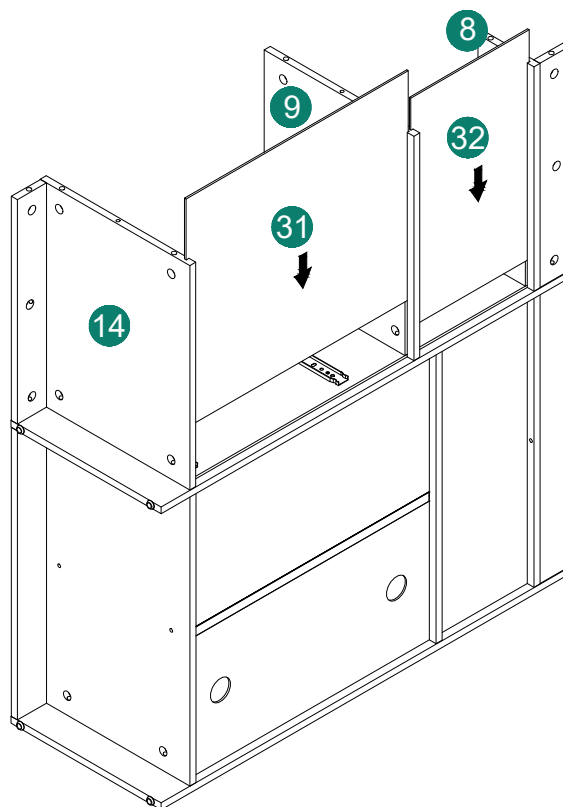




19

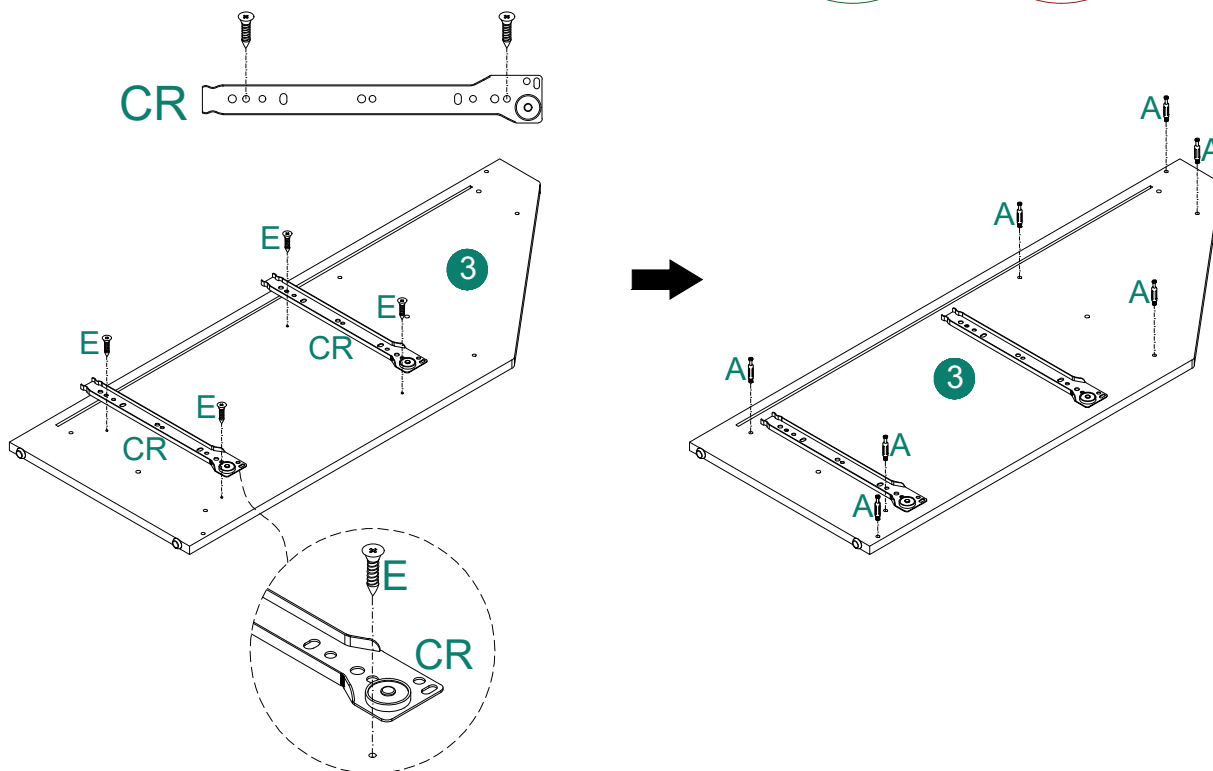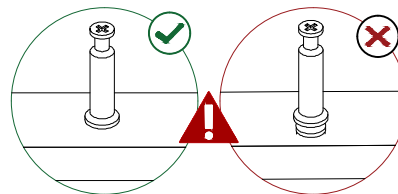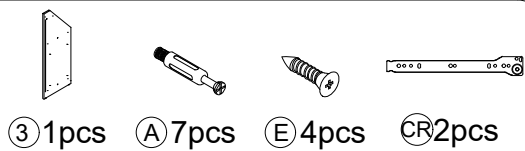

20

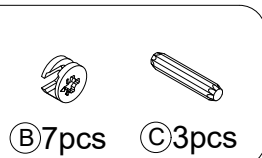



Two people are needed to install it

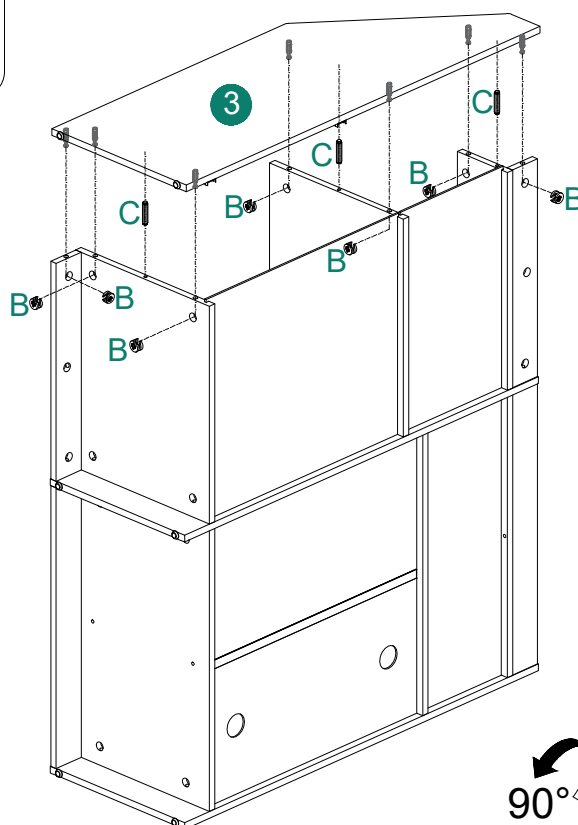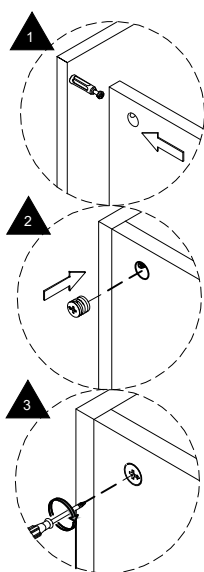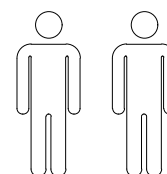

90°


21

Q19pcs

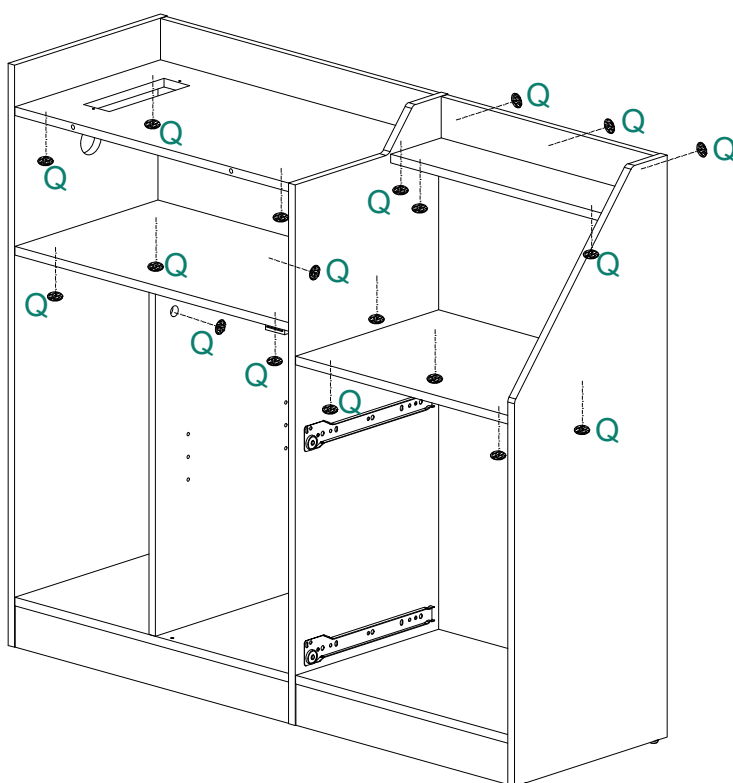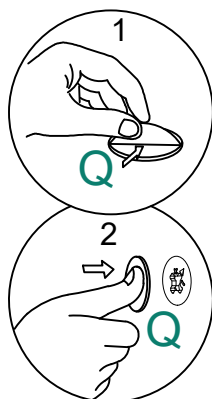


22

E2pcs P1pcs

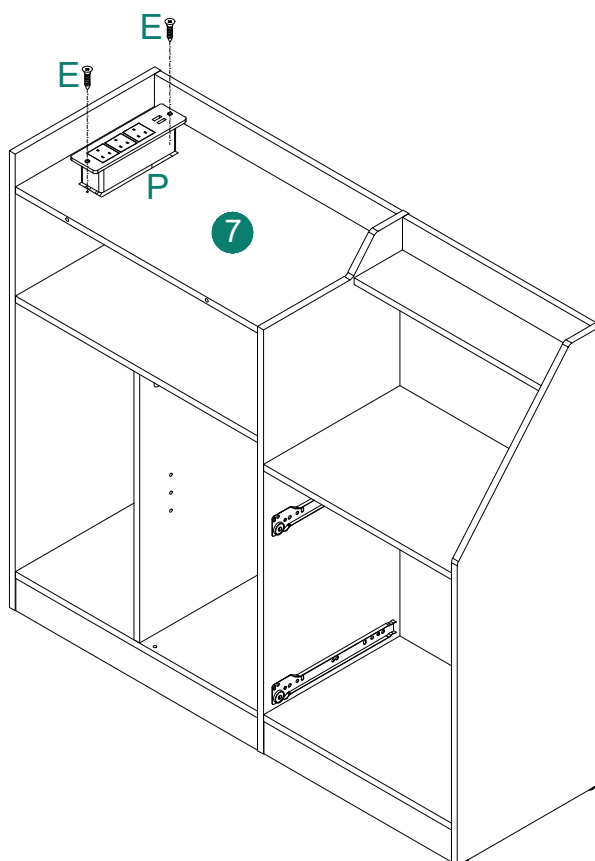



23



⑮1pcs



④4pcs

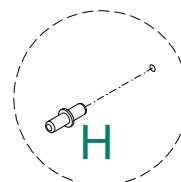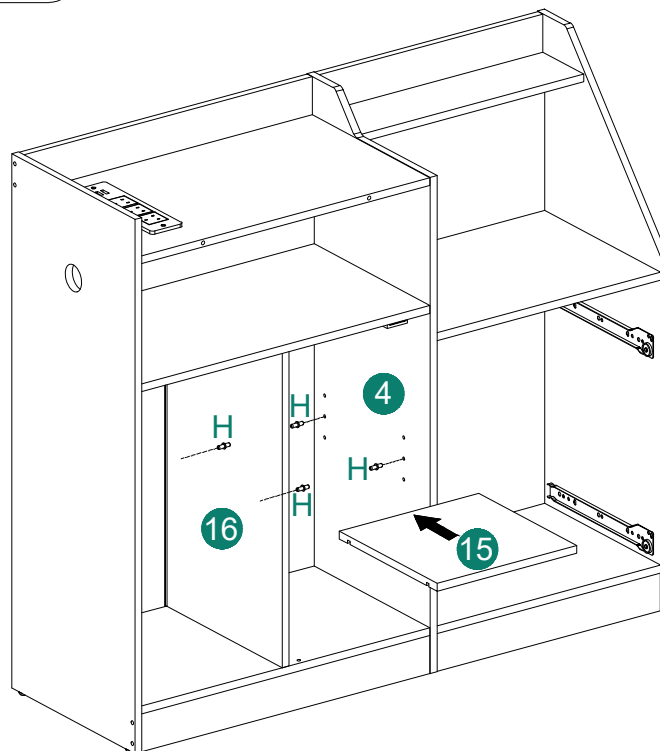

24



⑰1pcs



②2pcs



②1pcs



①1pcs









②1pcs



①1pcs




①1pcs

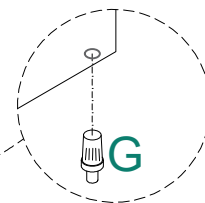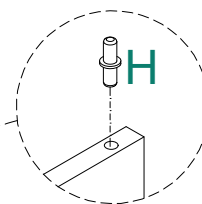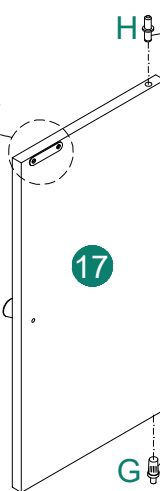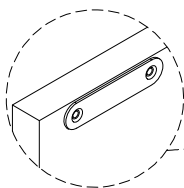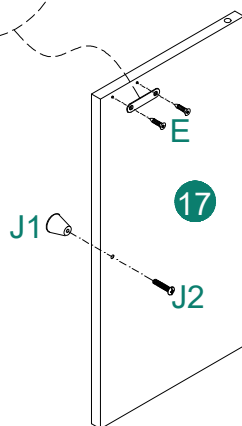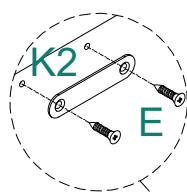

Please note that
#G is elastic




25









Please note that during installation, you need to insert #H into the hole first.

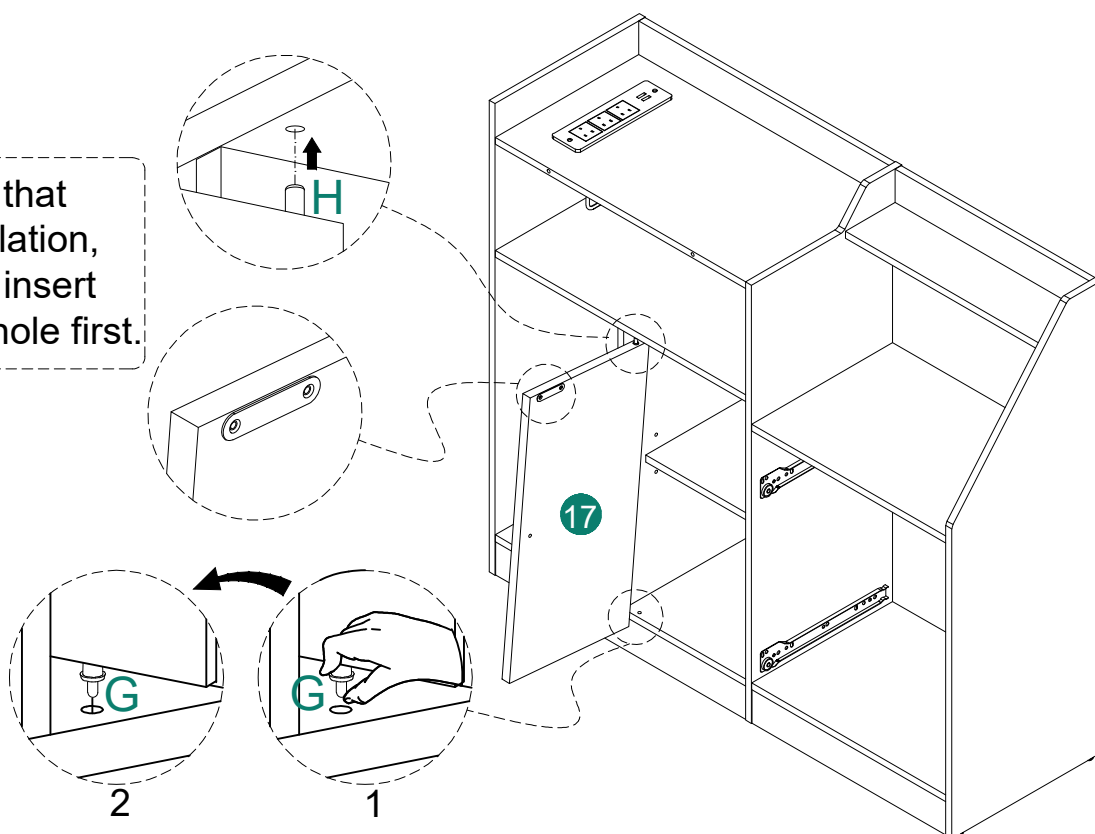

Please note that #G is elastic

26

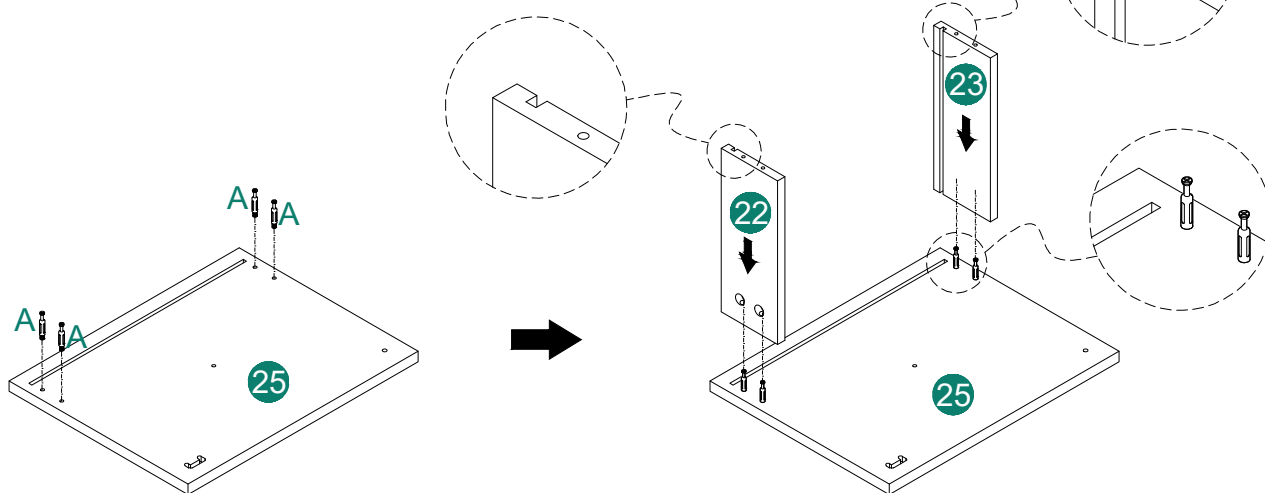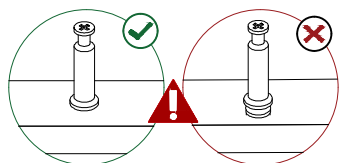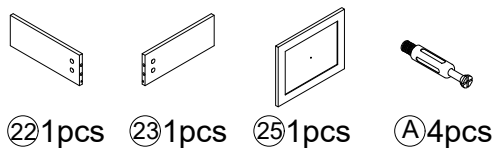

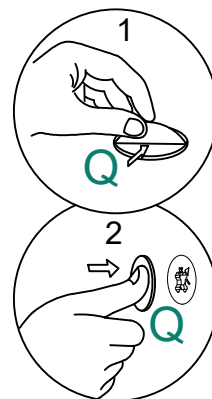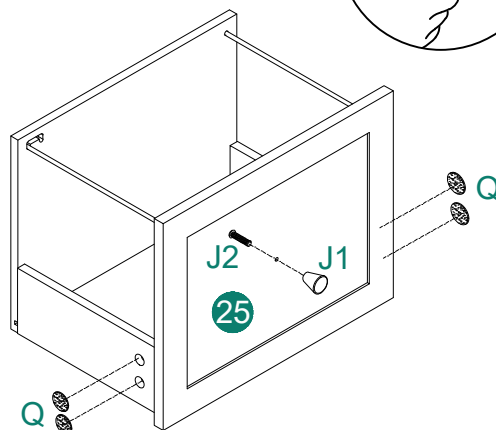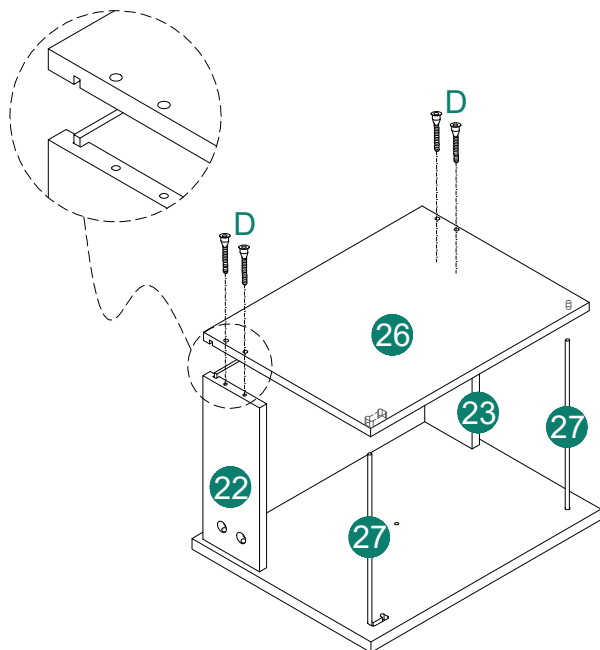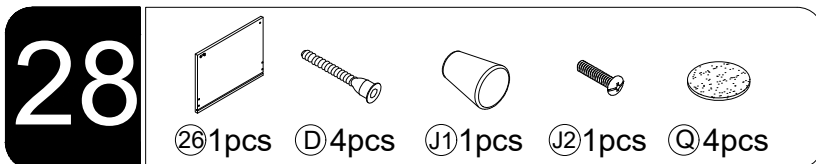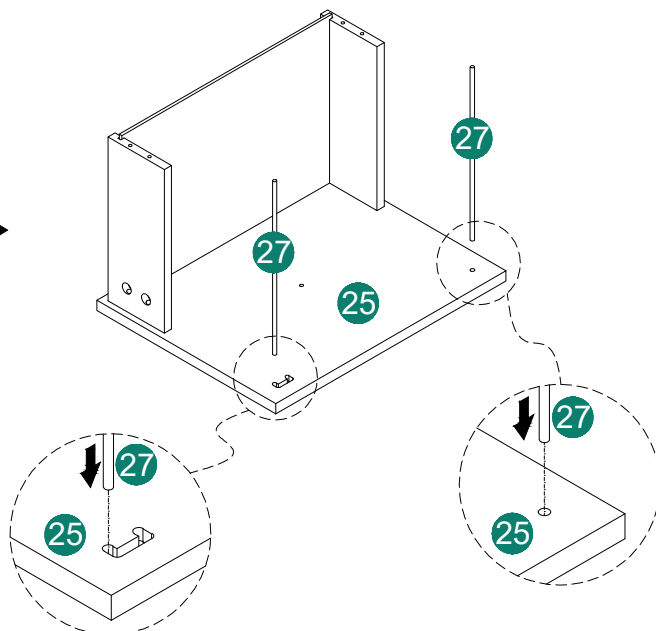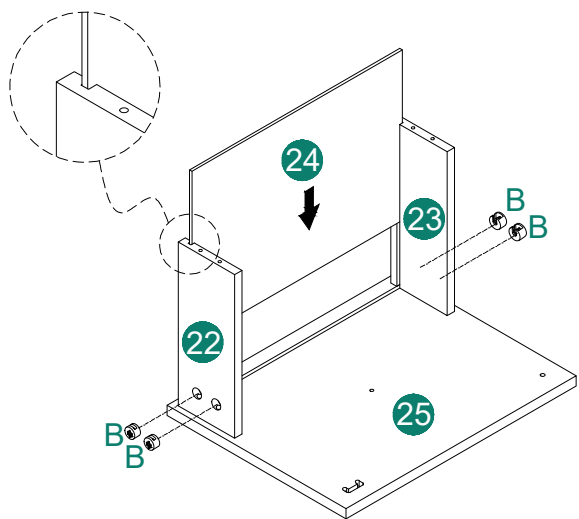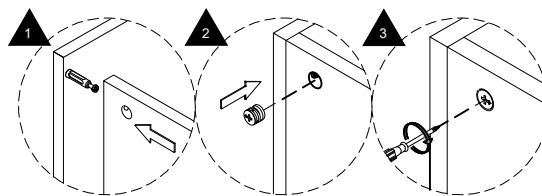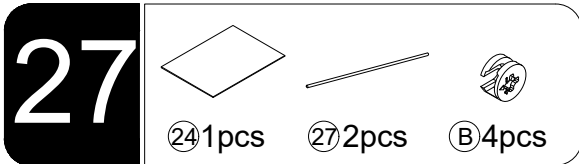

29




E 4pcs




DL 1pcs




DR 1pcs

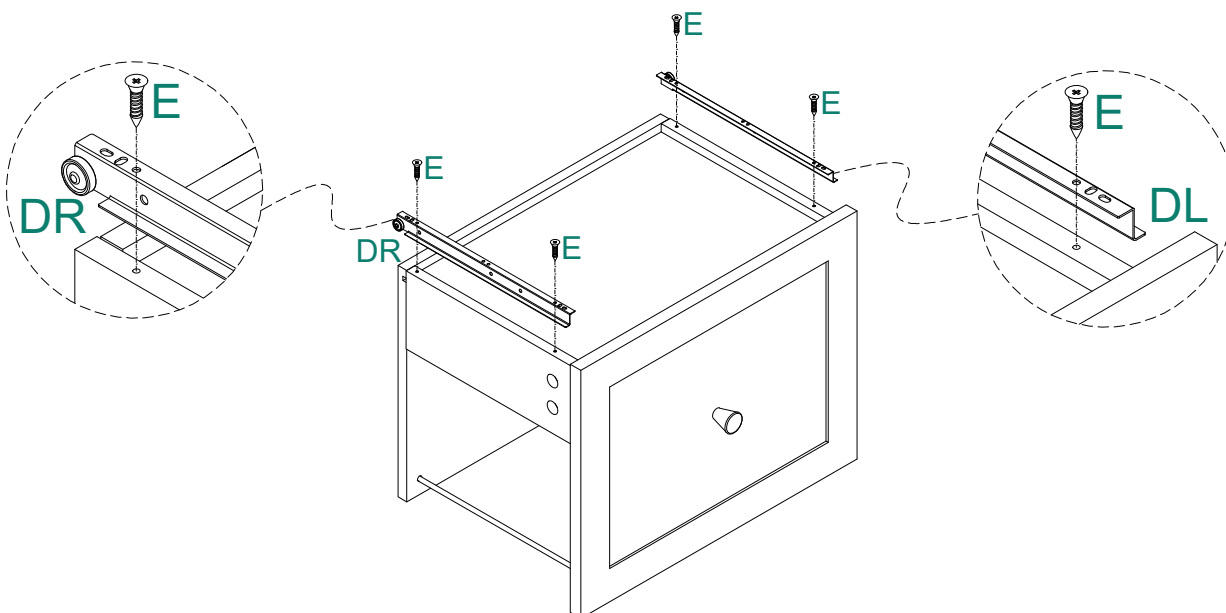




30

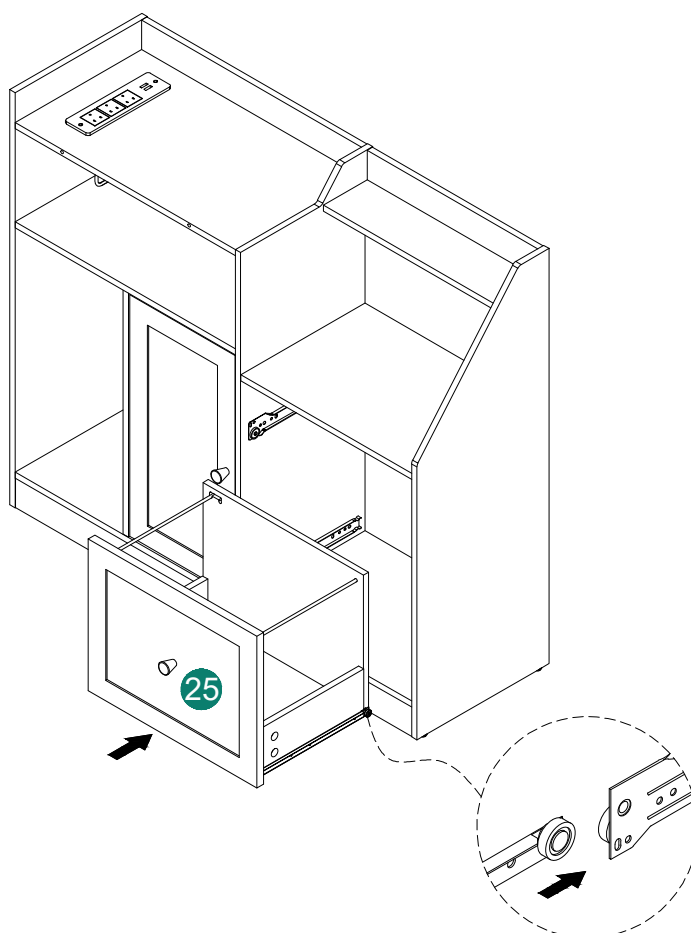


31






②01pcs ②21pcs ②31pcs ①A4pcs

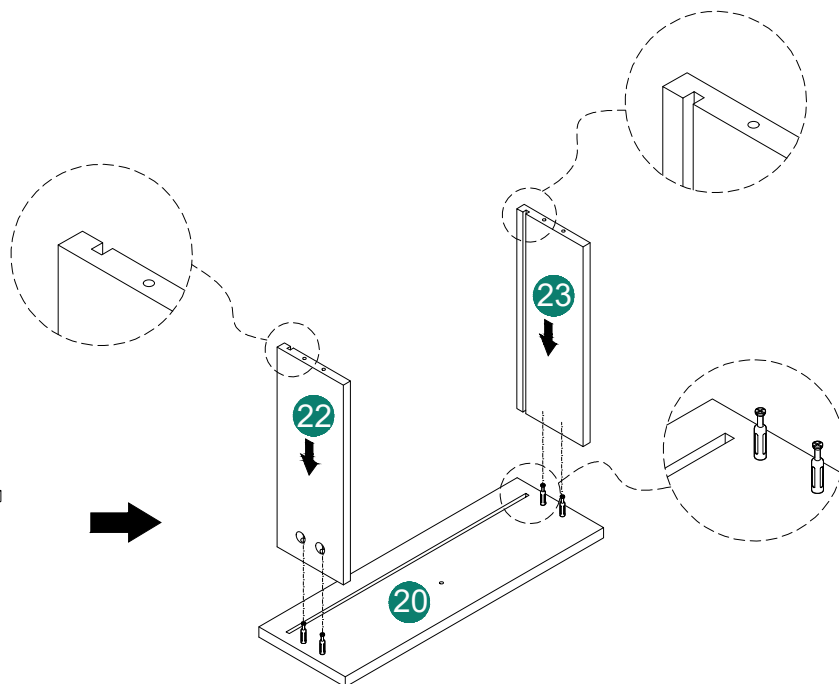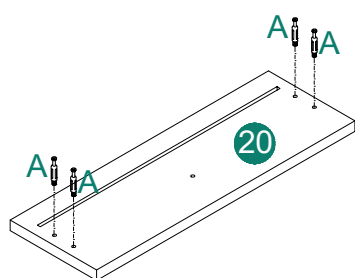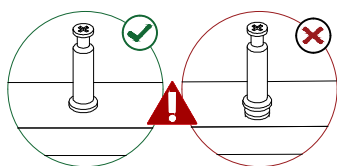

32



②11pcs ②41pcs ③B4pcs ④D4pcs

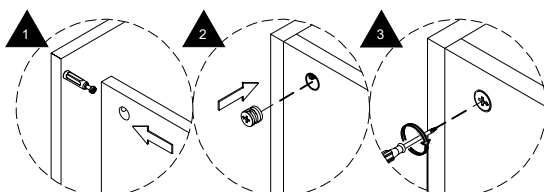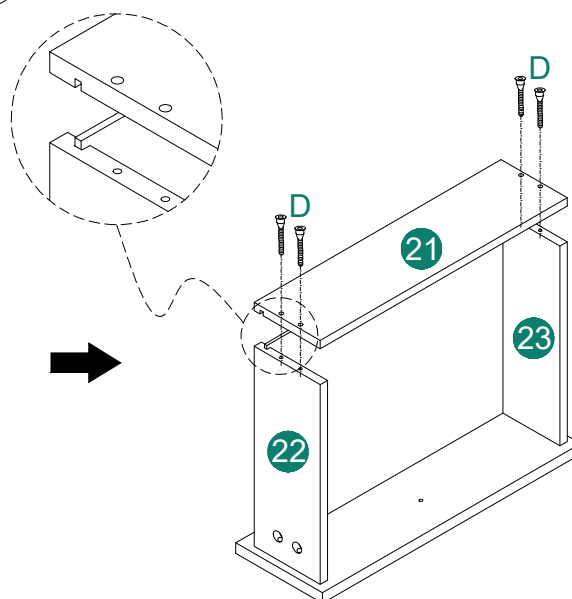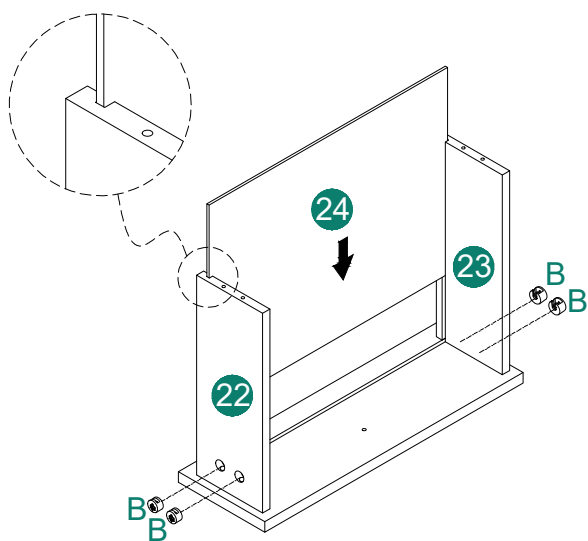

33





J1 1pcs



J2 1pcs



Q 4pcs

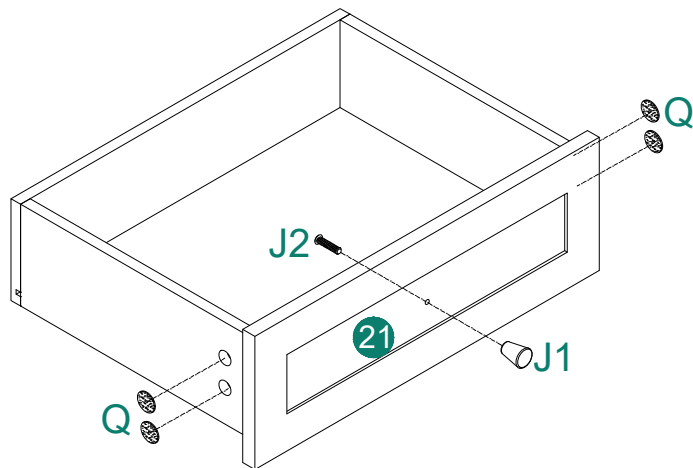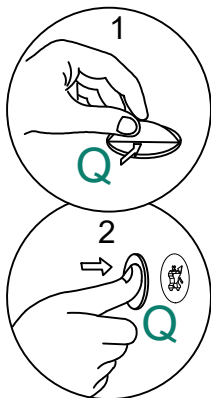

34







E 4pcs




DL 1pcs




DR 1pcs

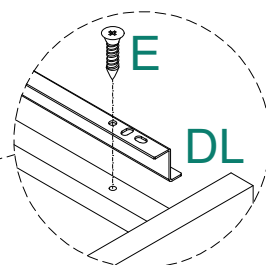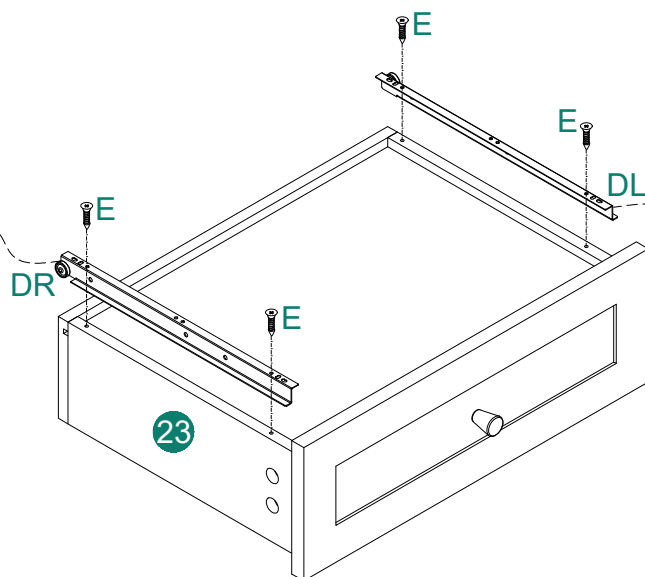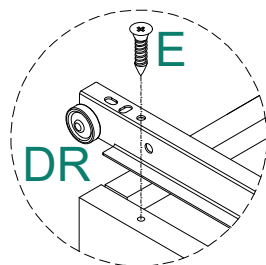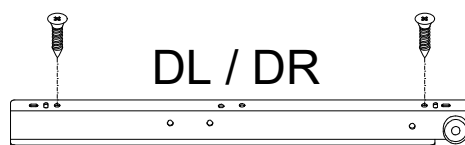

35

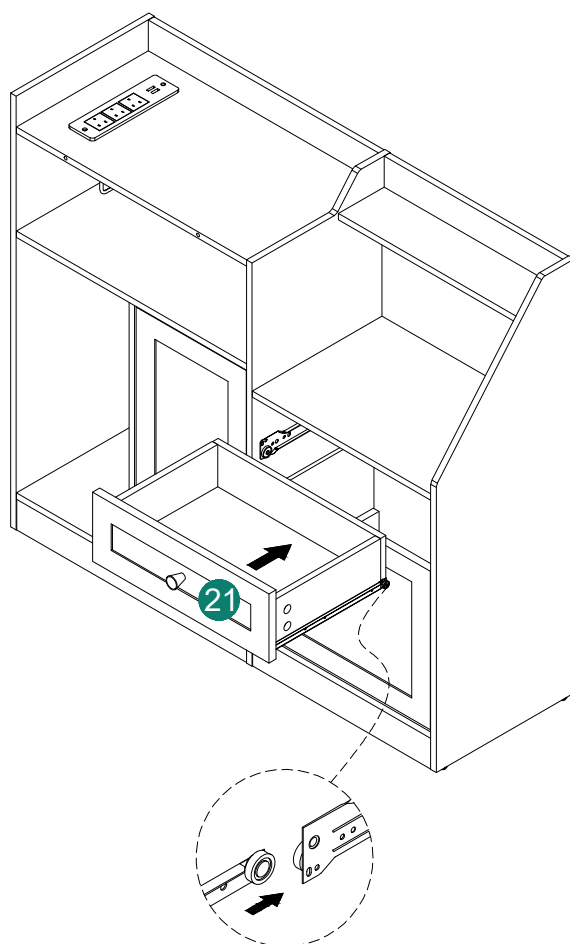


36




⑪ 1pcs





Ⓐ 3pcs

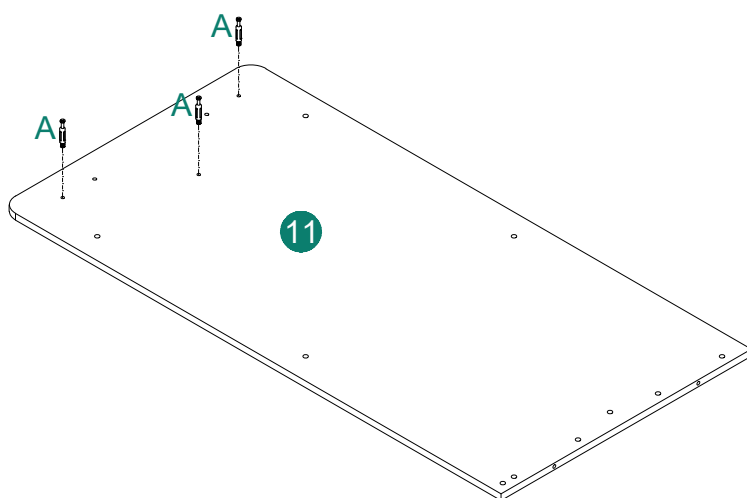



37

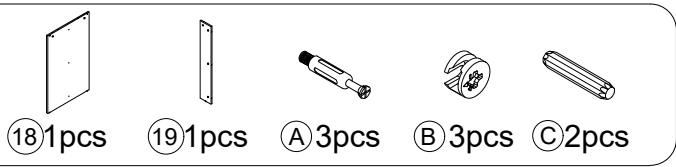




Please note the orientation of the holes for #18 and #19.

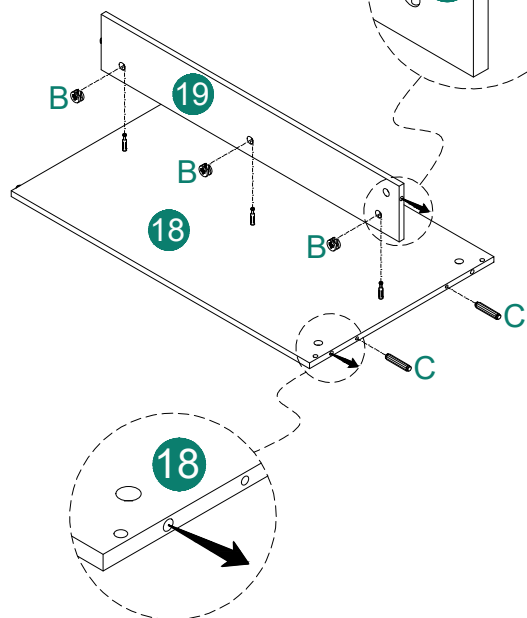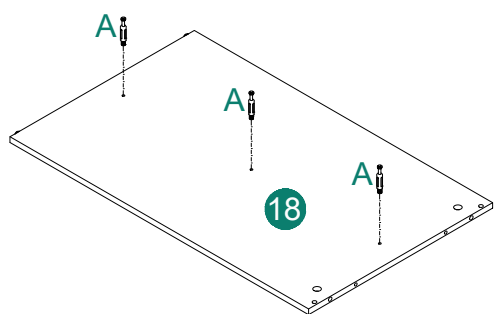



38

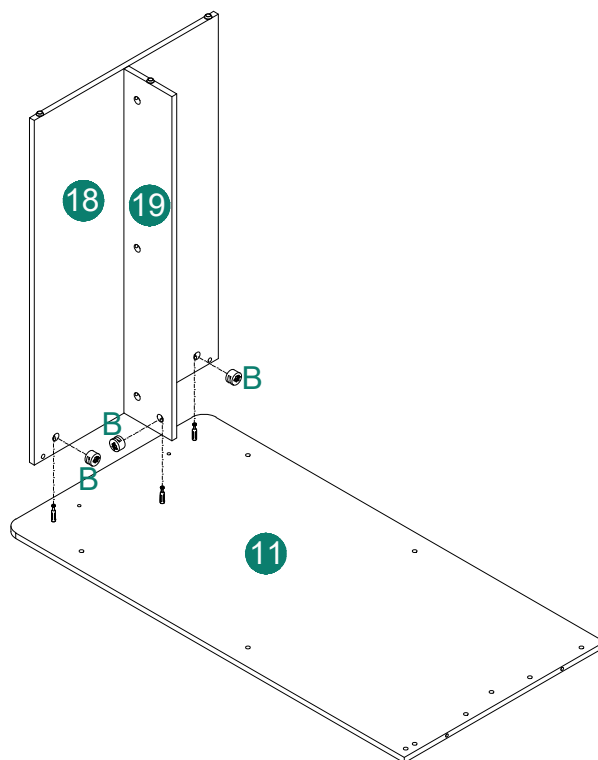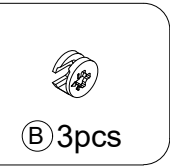


39

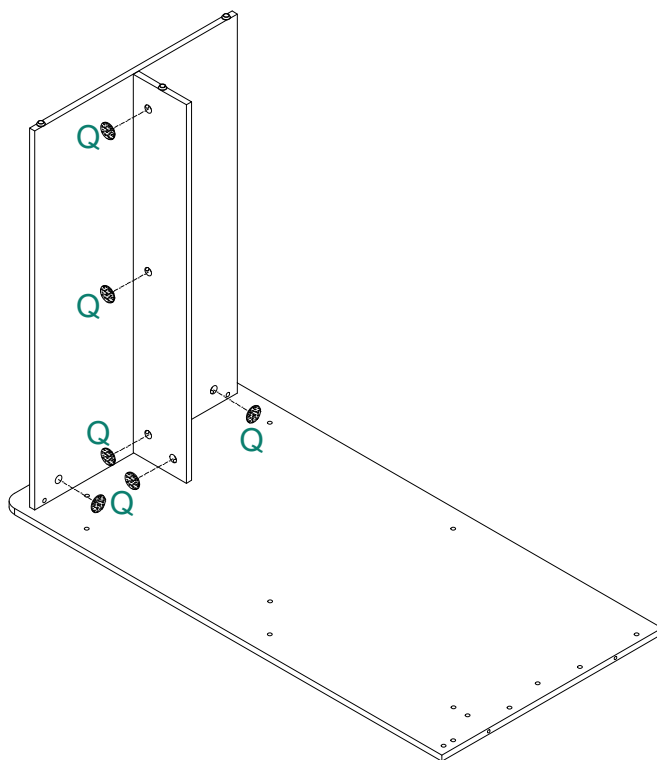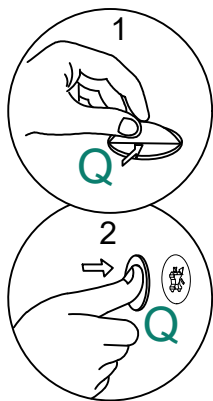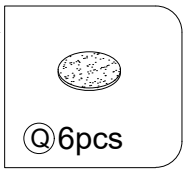



40

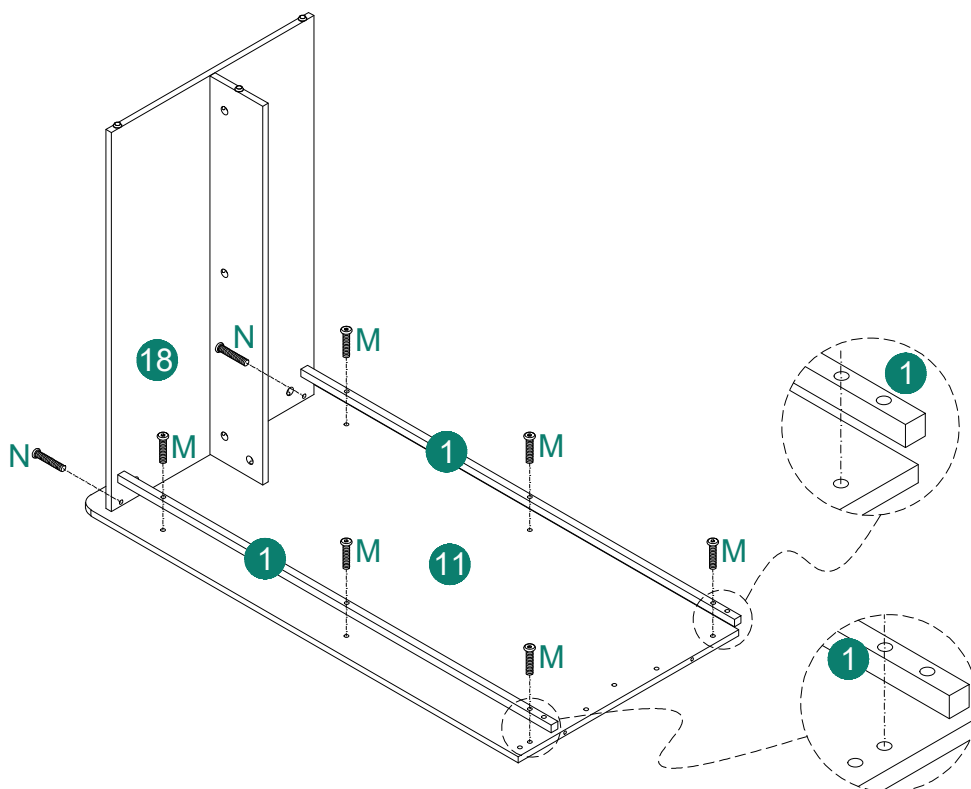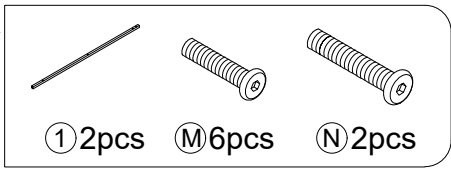


41

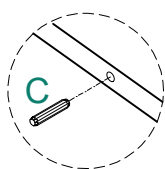



Two people are needed to install it

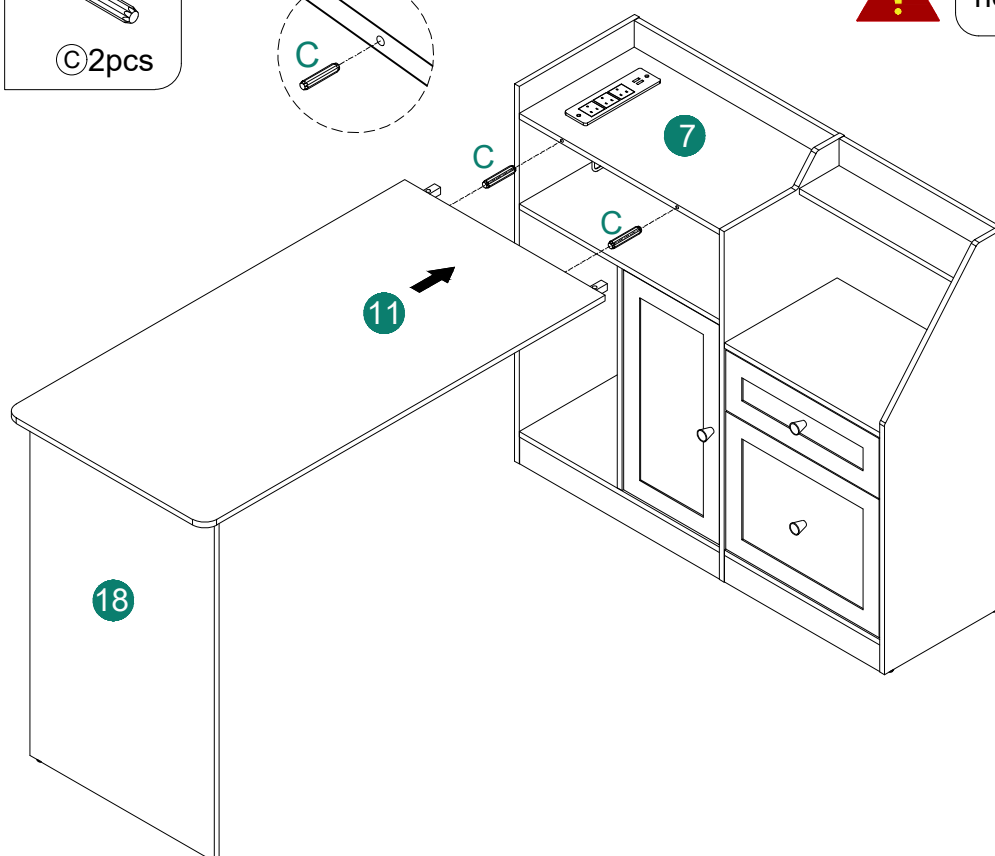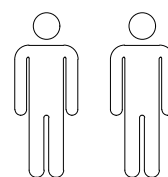


42

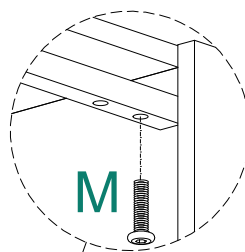

Two people are needed to install it

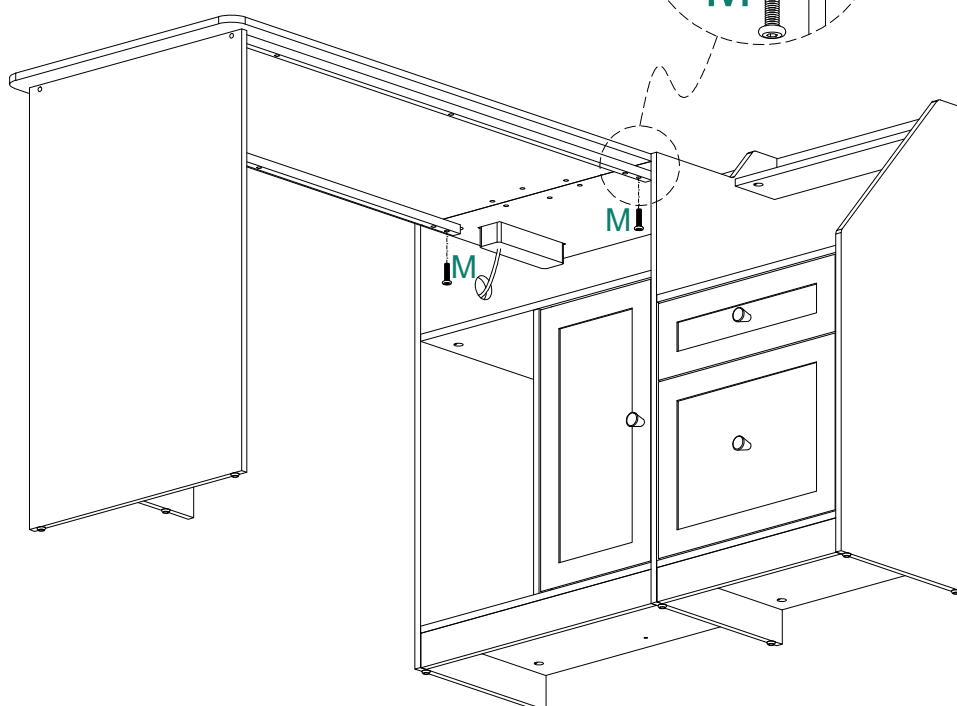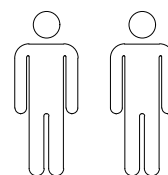



43



10 1pcs



M 6pcs

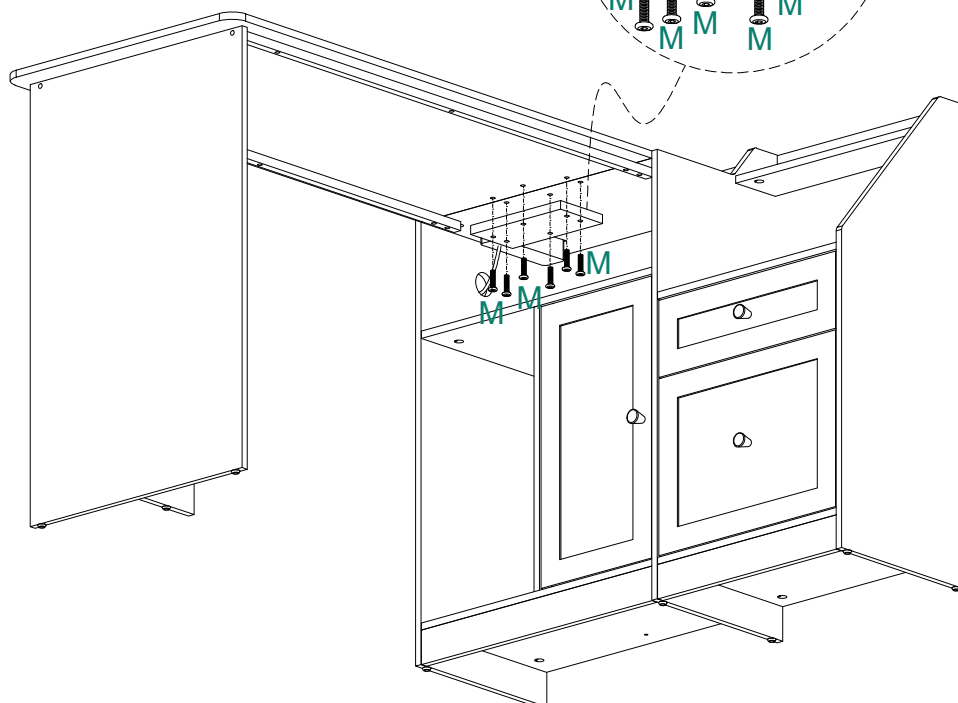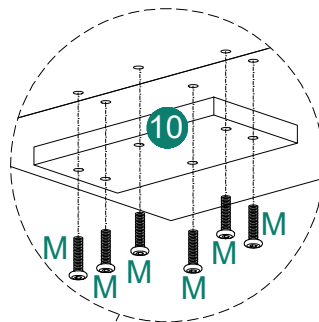



44





F 18pcs






I 18pcs

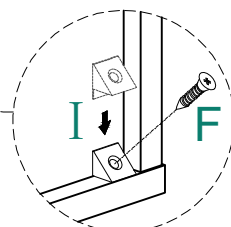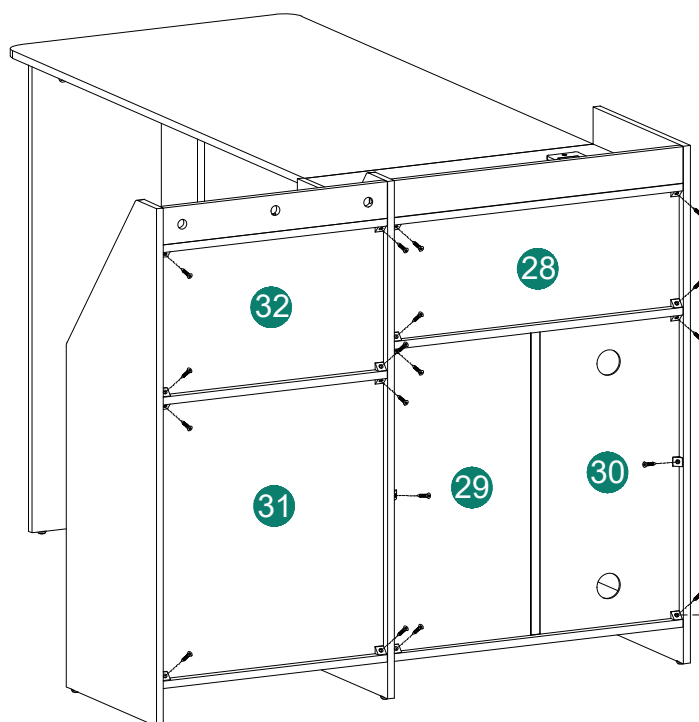

45

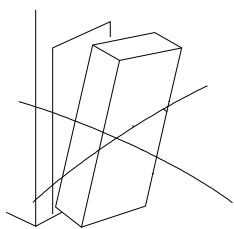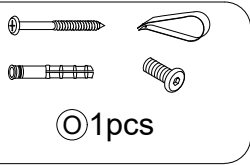

wall

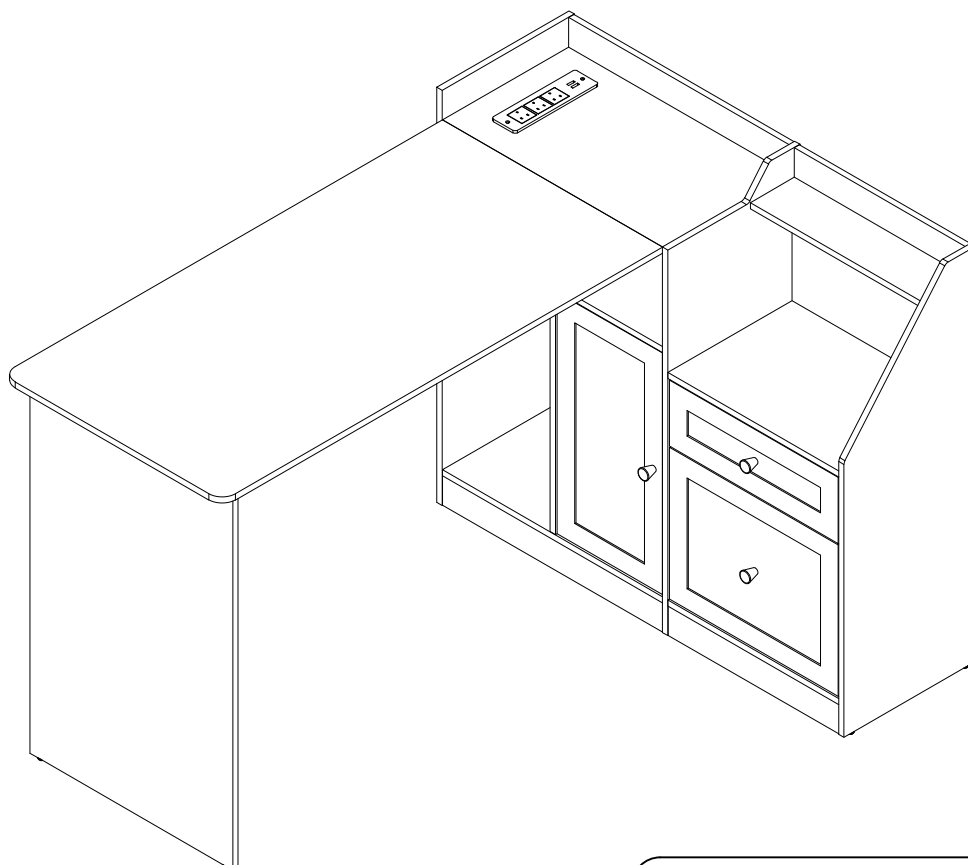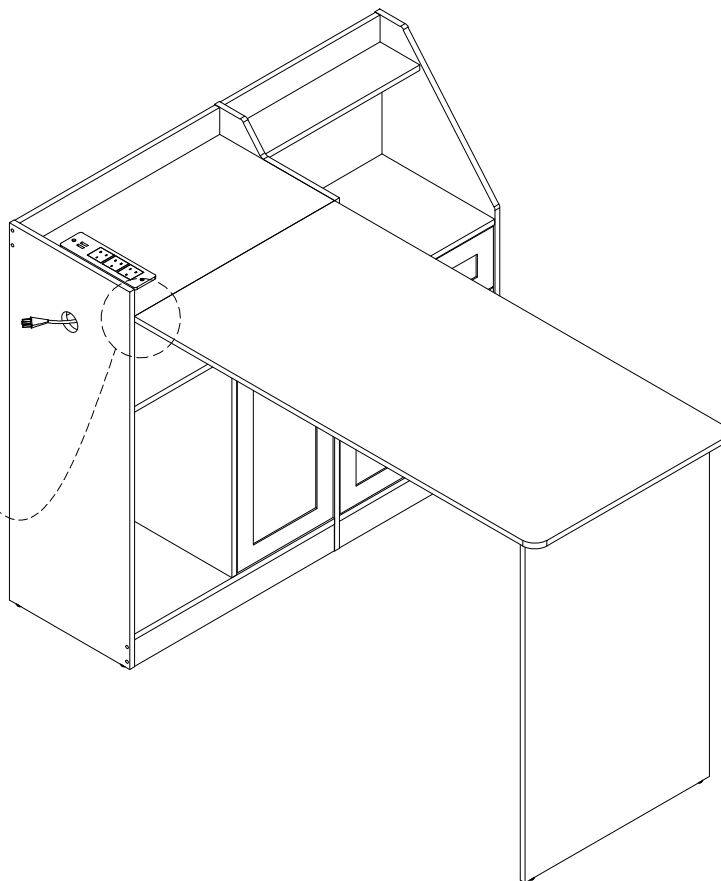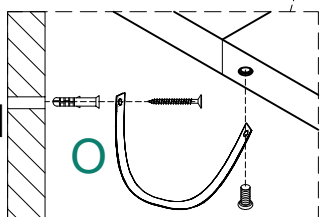

Installation Completed